

morphy richards®



Register online for your 2 year guarantee. See back of this instruction book for details.
(UK and Ireland customers only)
www.morphyrichards.co.uk



Jet Steam 'Elite' & Jet Stream Range ironing system



Please read and keep these instructions

Getting the best from your new ironing system....

Safety first

Caution must be used when handling this appliance as it does get very hot. Always switch off the unit and allow to cool before cleaning or storing.

Water tank (certain models are illuminated)

The water tank can be re-filled at any time during ironing. Certain Morphy Richards steam generators have an illuminated water tank. The changing colours enhance the mood for ironing by creating a colourful atmosphere to help you glide through your washing basket.

Performance

To extend the performance and life of your steam generator, ensure that you replace the anti-scale cartridge according to the on-board indicator.



To improve the life of your new product and to ensure the cleanliness of your clothes, we strongly recommend the use of distilled or demineralised water.



RN42288 MUK Rev 7

If you have a problem or complaint, please call our dedicated UK based helpline before returning your product to the retailer from where it was purchased.



UK Helpline: 0844 871 0953
Replacement Parts: 0844 873 0719
Ireland Helpline: 1800 409 119



For details of other Morphy Richards products, plus replacement parts and accessories, please see our website:

www.morphyrichards.com

IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the use of common sense and strict following of safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition, we offer the following safety advice.

Location

- Do not use outdoors.
- The steam generator must be used and rested on a stable surface.
- When placing the iron unit on the base unit or on its heel, ensure that the surface on which the heel or base unit is placed is stable.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use, or play with, this appliance.
- Close supervision is necessary when any appliance is used near children.
- Children should be supervised to ensure that they do not play with this appliance.

Personal Safety

- **WARNING: Burns can occur from touching hot metal parts, hot water or steam. Use caution when using your steam generator. If your iron is placed for a few moments on the iron rest plate, this plate may reach very high temperatures. In this instance, do not touch the iron soleplate or the iron rest plate until the iron and the iron rest have cooled down.**

- **WARNING: To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquid.**

- Do not use the vertical steam feature on clothes that are being worn.
- Do not leave the steam generator unattended whilst plugged in or on an ironing board. Never allow the mains lead to overhang the work surface.
- The mains socket should always be switched off before plugging or unplugging from the socket. Never yank the cord to disconnect from the socket, instead, grasp the plug and pull to disconnect.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Other safety considerations


- Use the steam generator only for its intended use.
- Never hold the generator base set under the tap.
- Always disconnect the tank from the base unit when filling with water and emptying.
- Always disconnect the steam generator from the electrical supply when cleaning or when not in use.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person(s) in order to avoid a hazard.
- Do not operate the steam generator with a damaged cord or if the iron has been dropped or if there are visible signs of damage or if it is leaking. To avoid the risk of electric shock, do not disassemble the iron or steam generator, but telephone Morphy Richards for advice. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- If the need arises to change the mains cable on your steam generator or the iron, please return to Morphy Richards service department at the address on the back page.

Special instructions



- If your steam generator does not work, check the following points:

Has the iron temperature control been set to the required temperature? Is the plug in its socket? Is the plug itself or the socket faulty? (Check by plugging in another appliance).

COMPONENTS OF YOUR STEAM GENERATOR

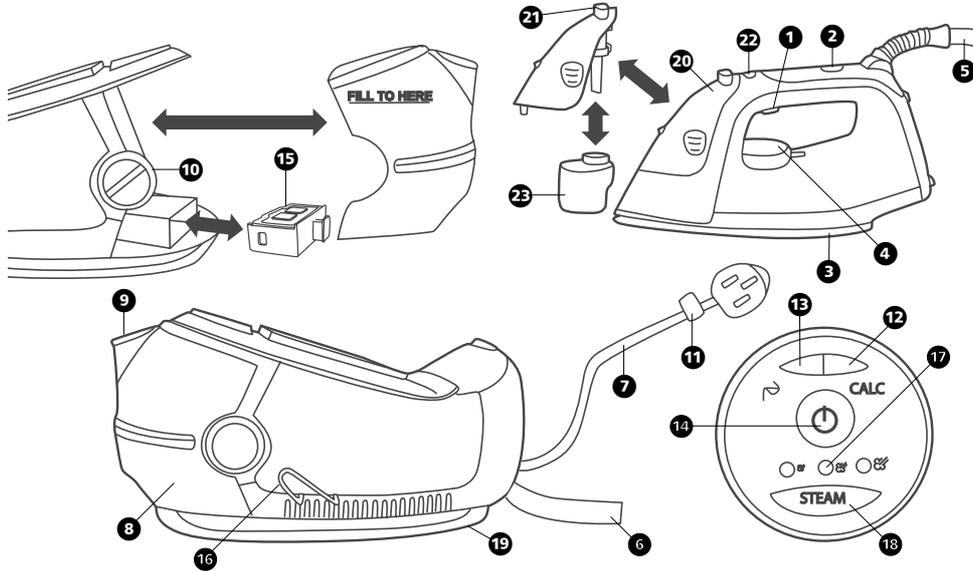

	42286	42287	42288	42296	42297	42298	42299	42301	42302	42303
Iron unit										
1 Steam trigger	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
2 Temperature indicator light	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
3 Soleplate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
4 Temperature control knob	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
5 Supply cord from base unit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Base unit										
6 Supply cord	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
7 Mains cable	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
8 Water tank	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
8 Illuminated water tank								✓	✓	✓
9 Water tank filler	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
10 Tank release knob	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
11 Mains cable clip (storage)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
12 Replace anti-scale cartridge indicator	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
13 'Fill' water tank indicator	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
14 On/off button plus steam ready indicator	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
14 On/off button plus steam ready and auto-shut off indicator			✓		✓	✓	✓	✓	✓	✓
15 Anti-scale cartridge (behind water tank)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
16 Supply cord storage clip			✓		✓	✓	✓	✓	✓	✓
17 Steam level indicator lights (variable)			✓		✓	✓	✓	✓	✓	✓
18 Steam level selection button (variable)			✓		✓	✓	✓	✓	✓	✓
19 Mains cable storage			✓		✓	✓	✓	✓	✓	✓
Water spray unit										
20 Spray unit		✓	✓		✓	✓	✓	✓	✓	✓
21 Spray button		✓	✓		✓	✓	✓	✓	✓	✓
22 Spray cover release button		✓	✓		✓	✓	✓	✓	✓	✓
23 Spray bottle (internal)		✓	✓		✓	✓	✓	✓	✓	✓

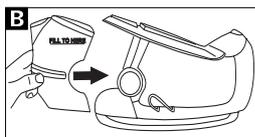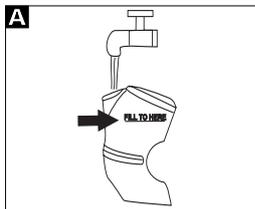

LOCATION

Locate the steam generator horizontally on the rest plate of your ironing board (if large enough) or on a heat resistant stand at the same height as your ironing board or below it. Always ensure the generator is on a firm surface when ironing.

WARNING: Do not use the product on a surface which could be damaged by heat or steam such as a worktop or a polished wood surface.

If in doubt, contact Morphy Richards.

BEFORE USE

Remove any protective sticker from the soleplate and the base unit, if any.

Unwind and straighten the power cord **7** and supply cord **6**.

Slide out the water tank **8** and fill (see filling instructions).

When ironing with the iron temperature set at 2-dot setting, the steam output should be set at the lower end of the steam range (on certain models only).

Textiles and clothes are supposed to carry ironing instructions. If they don't, you should follow the fabric guide on page 3, but be sure to test the temperature by ironing the hem of the garment or similar area first.

If you turn the control dial down from a hot setting to a cooler setting, wait until the iron temperature has stabilised before you continue ironing.

FILLING

- 1 Place the steam generator on a stable ironing board or table, with the iron resting on its stand.
- 2 Release the detachable water tank by operating the tank release knob **10**.
- 3 Slide the tank outward.
- 4 Fill the tank to the 'fill to here' line with clean tap water **A**.

IN HARD WATER AREAS, THE USE OF DISTILLED OR DEMINERALISED WATER IS RECOMMENDED.

Never use battery topping up fluid or water containing any substances like starch or sugar, or defrosted water from a refrigerator.

- 5 Re-position the water tank on the base unit and push securely into place. Please make sure the tank is secure **B**.
- 6 Always pour out any remaining water after use.

Re-filling 'in use'

- 1 The low water indicator light **15** will flash and a beep sound will be heard. This is a warning to stop ironing and fill the tank. Ironing can continue for a short period, then the generator will shut down until the tank is refilled.
- 2 Refilling can be done whilst the appliance is in operation. It is not necessary to wait for the appliance to cool down.
- 3 Unlock the tank using the tank release knob **10**. Slide out the water tank and fill (see filling instructions).
- 4 Alternatively, you can re-fill the tank in 'situ' through the filler **9**.

Steam ironing

- 1 Connect the appliance to a suitable mains outlet. Press the power 'ON' button **14** which will glow red.

ALL MODELS

After a few minutes, the light changes to green - indicating the boiler is ready to generate steam.

Check the iron temperature indicator light **2** has switched off, indicating the iron is ready to use.

MODELS WITH VARIABLE STEAM

This model automatically selects the middle steam setting as the default setting.


To select a different steam setting, press the steam button **18** to select the desired steam level.

- 2 Turn the temperature dial **4** on the iron in a clockwise direction, select dot-1, dot-2 or dot-3 according to the recommendation of the garment label.
- 3 The iron's temperature indicator light **2** goes off when the required temperature is reached.
- 4 Depress the steam button **1** for 1 minute to clear the system of air (first time use only). This will be accompanied by a clicking noise which is quite normal.
- 5 Begin first time ironing with an old towel. Note: If you press the steam button before the steam generator reaches its required temperature, a warning double beep will sound.
- 6 The appliance is ready to use.

- 7 Press the steam button ① for steam ironing.
- 8 Depress the power switch ⑭ to turn off the base unit when ironing is complete.
- 4 The temperature indicator light ② glows on the iron, indicating that it is switched on.
- 5 When the required temperature is reached, the temperature indicator light on the iron goes off. The iron is ready to use.

MODELS WITH SPRAY FEATURE

Certain models are fitted with a spray feature. Stubborn creases and excessively dry clothing can be softened by dampening the material with water. This procedure means ironing can be achieved without applying excessive pressure.

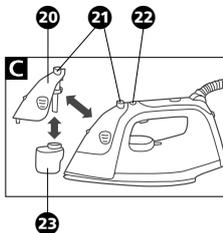

Filling C

To fill the tank with water, press the release button ⑫ and lift away the spray unit ⑩.


Pull the tank ⑬ away from the spray unit in a downward direction, taking care not to damage the tank, and fill water to the 'Full' mark.

Re-assembly C

Attach the tank to the spray unit, taking care to align the parts correctly.

Locate the spray unit to the front of the iron and press it home until the unit locks into place.

Press the pump ⑪ a few times to purge the air from the system, when a fine mist of water is created, the unit is ready for use.

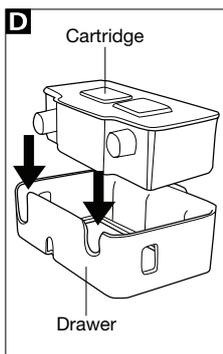

Dry ironing

- 1 Connect the appliance to a suitable mains outlet.
- 2 Press the steam switch ⑬ 2 times until all three steam level indicator lights go off (steam off mode).
- 3 Turn the temperature dial ④ on the iron in a clockwise direction, select dot-1, dot-2, or dot-3 according to the recommendation of the garment label.

It is always a good idea to begin with 'cool' fabrics and work up to higher settings.

An iron heats up quicker than it cools down so you'll save time and electricity.

Auto-shut off

(Certain models only)

An auto-shut off system will activate if the steam is not used for over 15 minutes. The mains indicator light ⑭ will flash between green and red indicating the unit is in 'sleep mode'.

When this occurs, press the steam select button ⑮ or the power switch ⑭ 'ON' once. The appliance will switch on immediately and you need to check, and select, the required setting.

ANTI-SCALE SYSTEM

The anti-scale cartridge is designed to reduce the build-up of limescale which occurs during steam ironing. This will prolong the working life of your iron. However, please note that the anti-scale cartridge will not completely stop the natural process of limescale build-up.

When the cartridge needs replacing, the indicator light ⑯ will flash.

NOTE: The unit will not switch off, but you need to replace the cartridge as soon as possible.

Replacing anti-scale medium D

- 1 When the indicator light ⑯ flashes, you need to replace the anti-scale cartridge ⑰.
- 2 The steam generator needs to be connected to the mains supply.

- 3 Remove the tank from the base unit.
- 4 Remove the anti-scale cartridge which is situated behind the tank, and replace the cartridge, making sure the replacement unit is pushed firmly in position.
- 5 Re-position the tank.
- 6 If the cartridge is not fitted correctly, the unit will not function. The 'calc' light  will flash, accompanied by a beep sound.

Re-fit the cartridge and the unit will operate as intended.

Note: A cartridge should filter 40 litres of hard water.

Replacement anti-scale refills

To obtain replacement anti-scale refills, telephone our spares number on: **0844 873 0719**.

- If a new re-fill is not available, you may continue operating the appliance, but scale will build up in the system. Replace the anti-scale refill as soon as possible. Part Number 01030.

FEATURES OF YOUR STEAM GENERATOR

Steam function

During the steaming process, small amounts of water may be ejected from the soleplate. This is normal and can be avoided by using the steam for short amounts of time and only when the iron is at the correct temperature (the indicator light on the iron goes out when ready).

Sudden jolts of the boiler unit can also cause water droplets on the soleplate; therefore, do not move the base unit during ironing. We recommend for the first time ironing that you iron over an old towel.

Vertical steam

Hold the iron in a vertical position between 1cm and 2cm away from the item . Press the steam trigger , this will create vertical steam.

This feature is especially useful for removing creases from hanging clothes, curtains, wall hangings.

MAINTENANCE

To clean a stainless steel soleplate

To keep the soleplate of your iron clean and free of limescale, we recommend that you use one of the gentle chrome, silver or stainless steel cleaners that are generally available. Always follow the manufacturer's instructions. To clean off melted man-made fibres, set the iron at 3-dot position and pass it over a clean piece of cotton which will draw the deposit off the surface.

To clean a coated soleplate

In the unlikely event of any man-made fibre fusing to the soleplate, set the iron at the 3-dot position and pass it over a clean piece of cotton, this will draw the deposit off the surface.

Do not use scouring powder or solution, as this could cause damage to the coating.

To clean the exterior

Allow the steam generator to cool and wipe over with a damp cloth and mild detergent, then wipe with a dry cloth.

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

UK Helpline
0844 871 0953


Replacement Parts
0844 873 0719

Ireland Helpline
1800 409 119

WEBSITE

You may also contact us through our website, or visit the site to browse and purchase appliances, spare parts and accessories from the extensive Morphy Richards range.

www.morphyrichards.com

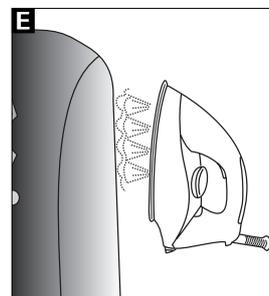

REGISTERING YOUR TWO YEAR GUARANTEE

Your standard one year guarantee is extended for an additional 12 months when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us online at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually.

Please note that the 2 year guarantee is only available in the UK and Ireland. Please refer to the one year guarantee for more information.

YOUR ONE YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore, reserves the right to change the specification of its models at any time.

If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied. For example, crumb trays should have been emptied regularly.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.

3 Repairs have been attempted by persons other than our service staff (or authorised dealer).

4 The appliance has been used for hire purposes or non domestic use.

5 The appliance is second hand.

6 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.

8 Batteries and damage from leakage are not covered by the guarantee.

- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

morphy richards®

**The After Sales Division
Morphy Richards Ltd**
Mexborough, South Yorkshire,
England, S64 8AJ

Helplines (office hours)
UK 0844 871 0953
Spare Parts 0844 873 0719
Republic of Ireland 1800 409 119

RN42288 MUK Rev 7 11/09

For details of other Morphy Richards products, plus replacement parts and accessories, please see our website:

www.morphyrichards.com