

 
Adjusting the Screen Automatically (Self Focus)

The “Self Focus” feature automatically sets the optimum picture quality when blurring, overlapping colors or incorrect focus occurs. These conditions may be caused by moving your TV.

1


Press the **MENU** button.

Press the **▲** or **▼** button to select “Picture”, then press the **ENTER** button.

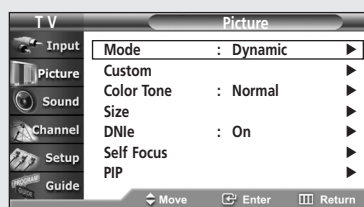

2

 
Press the **▲** or **▼** button to select “Self Focus”, then press the **ENTER** button.

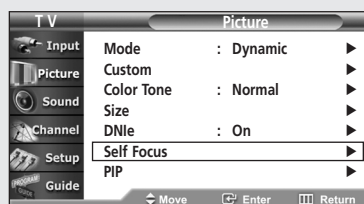

3

“Self Focus” is elected.

 Press the **ENTER** button again. The self focus process begins with the message “Self Focus” and a horizontal bar is displayed. When it is finished, the menu will disappear and the optimum picture quality can be enjoyed.

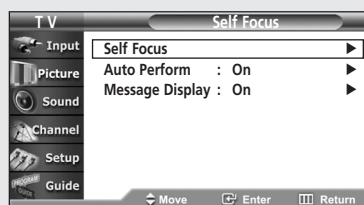

◀ During the process, minor distortions of the picture may occur. At this time, the colors may diffuse and a searching pattern will appear on the edges of the screen. This is a normal part of the adjustment.

- Changing channels and any other signal changes will pause the self focus until a stable signal has returned. It resumes after the signal has been stabilized. This feature will not work without a signal
- Ambient light that is too bright may affect the self focus. If this occurs, darken the environment and try again.

Adjusting the Screen Automatically (Self Focus)

 
Deactivating the Automatic Execution of the Self Focus

Once set, the “Self Focus” feature starts on default. It will automatically begin 10 minutes after switching on the power and the appearance of the screen image. To set the optimum picture quality, the “Self Focus” will automatically begin again after another 30 minutes, as the screen image is then fully stabilized.

1

Press the **MENU** button.


Press the **▲** or **▼** button to select “Picture”, then press the **ENTER** button.

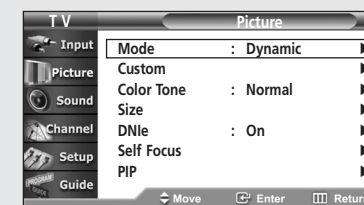

2

Press the **▲** or **▼** button to select “Self Focus”, then press the **ENTER** button.

 Press the **▲** or **▼** button to select “Auto Perform”, then press the **ENTER** button.

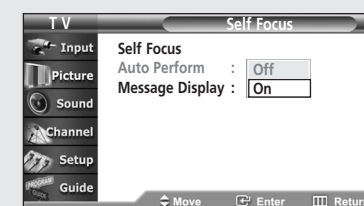

To turn off the automatic execution of the self focus feature, select “Off” by pressing the **▲** or **▼** button, then press the **ENTER** button.

Removing the “Self Focus” Message from the Display

3

Press the **▲** or **▼** button to select “Message Display”, then press the **ENTER** button. To remove the message “Self Focus” and horizontal bar on the screen during the self focus process, select “Off” by pressing the **▲** or **▼** button, then press the **ENTER** button.

