
 


# JVC

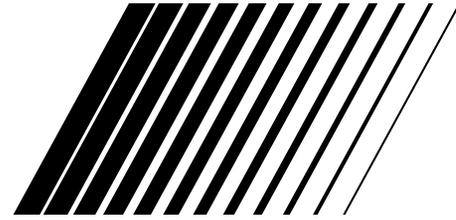

## DVD VIDEO PLAYER

# XV-S60BK/XV-S62SL/ XV-S65GD



## INSTRUCTIONS

Introduction	2
Preliminary knowledge	5
Getting started	14
Basic operations	21
Advanced operations	25
MP3 disc playback	41
Initial settings	44
Additional information	51


**For Customer Use:**

Enter below the Model No. and Serial No. which are located on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No \_\_\_\_\_

LET0184-001B  
[J]

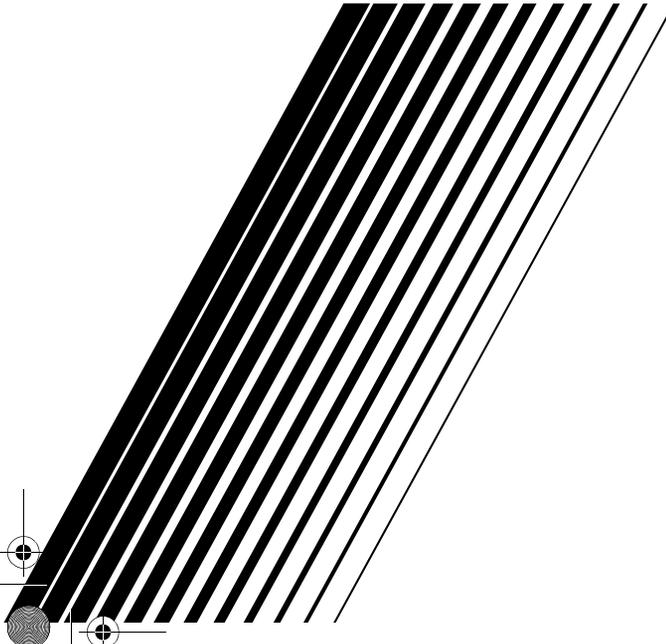

## Warnings, Cautions and Others

### Mises en garde, précautions et indications diverses



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

#### For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

#### For Canada/pour le Canada

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT

**ATTENTION:** POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND

#### For Canada / Pour le Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FORM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS," ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

CET APPAREIL NUMERIQUE RESPECTE LES LIMITES DE BRUITS RADIOELECTRIQUES APPLICABLES AUX APPAREILS NUMERIQUE DE CLASSE B PRESCRITES DANS LA NORME SUR LE MATERIEL BROUILLEUR: "APPAREILS NUMERIQUE", NMB-003 EDICTEE PAR LE MINISTRE DES COMMUNICATIONS.

#### CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

#### ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

#### Caution — STANDBY/ON switch!

Disconnect the mains plug to shut the power off completely. The STANDBY/ON  switch in any position does not disconnect the mains line. The power can be remote controlled.

#### Attention — Commutateur STANDBY/ON /!

Déconnecter la fiche de secteur pour couper complètement le courant. Le commutateur STANDBY/ON  ne coupe jamais complètement la ligne de secteur, quelle que soit sa position. Le courant peut être télécommandé.

#### IMPORTANT FOR LASER PRODUCTS

#### IMPORTANT POUR LES PRODUITS LASER

1. CLASS 1 LASER PRODUCT
  2. **DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
  3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.
1. PRODUIT LASER CLASSE 1
  2. **ATTENTION:** Radiation laser visible quand l'appareil est ouvert ou que le verrouillage est en panne ou désactivé. Eviter une exposition directe au rayon.
  3. **ATTENTION:** Ne pas ouvrir le couvercle du dessus. Il n'y a aucune pièce utilisable à l'intérieur. Laisser à un personnel qualifié le soin de réparer votre appareil.

#### CAUTION:

- Do not block the ventilation openings or holes.  
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not use this apparatus in a bathroom or places with water.  
Also do not place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups, etc.) on top of this apparatus.

#### ATTENTION

- Ne bloquez pas les orifices ou les trous de ventilation.  
(Si les orifices ou les trous de ventilation sont bloqués par un journal un tissu, etc., la chaleur peut ne pas être évacuée correctement de l'appareil.)
- Ne placez aucune source de flamme nue, telle qu'une bougie, sur l'appareil.
- Lors de la mise au rebut des piles, veuillez prendre en considération les problèmes de l'environnement et suivre strictement les règles et les lois locales sur la mise au rebut des piles.
- N'utilisez pas cet appareil dans une salle de bain ou un autre endroit avec de l'eau.  
Ne placez aucun récipient contenant de l'eau (tel que des cosmétiques ou des médicaments, un vase de fleurs, un pot de fleurs, une tasse, etc.) sur cet appareil.

# Table of Contents

<b>Introduction</b> .....	Page 2	
<b>Features</b> .....	2	
<b>Supplied accessories</b> .....	2	
<b>About this instruction manual</b> .....	3	
<b>Notes on handling</b> .....	4	
<b>Preliminary knowledge</b> .....	Page 5	
<b>Names of parts and controls</b> .....	5	
Front panel.....	5	
Remote control unit.....	6	
Display window.....	8	
Rear panel.....	8	
<b>Operational Principles</b> .....	9	
On-screen displays.....	9	
To prevent the monitor from burning out		
[SCREEN SAVER].....	11	
On-screen guide icons.....	12	
How to use numeric buttons.....	12	
<b>About discs</b> .....	13	
Playable disc types.....	13	
Disc structure.....	13	
<b>Getting started</b> .....	Page 14	
<b>Connections</b> .....	14	
Before making any connections.....	14	
To connect to a conventional TV.....	14	
To connect to a TV with the component video input		
jacks.....	15	
To connect to an audio amplifier or receiver.....	16	
To connect to audio equipment with a digital input.....	17	
To connect the power cord.....	17	
<b>Using the remote control unit</b> .....	18	
To install batteries in the remote control unit.....	18	
To use the remote control unit for TV operation.....	19	
<b>Basic operations</b> .....	Page 21	
<b>Turning on/off the unit</b> .....	21	
<b>Inserting and removing discs</b> .....	21	
<b>Basic playback</b> .....	22	
To start playback.....	22	
To stop playback completely.....	22	
To stop playback temporarily.....	22	
To advance or reverse playback rapidly while		
monitoring.....	23	
To locate the beginning of the scene or song.....	23	
<b>Resuming playback</b> .....	24	
To memorize the interrupted position.....	24	
To resume playback.....	24	
<b>Advanced operations</b> .....	Page 25	
<b>Playing from a specific position on a disc</b> .....	25	
To locate a desired scene from the DVD menu.....	25	
To locate a desired scene from the menu of the Video CD		
with PBC.....	25	
To locate a desired selection using the numeric		
buttons.....	26	
To locate a desired selection using ◀◀ or ▶▶.....	26	
To locate a desired scene by specifying the chapter		
number [CHAP.SEARCH].....	27	
To locate a desired position in the current title or track		
[TIME SEARCH].....	27	
To locate a desired scene from the display [DIGEST].....	28	
<b>Special picture playback</b> .....	29	
To advance a still picture frame-by-frame.....	29	
To display continuous still pictures [STROBE].....	29	
To playback in slow-motion [SLOW].....	30	
To zoom in/out [ZOOM].....	30	
<b>Changing the playback order</b> .....	31	
To playback in the desired order [PROGRAM].....	31	
To playback in random order [RANDOM].....	32	
<b>Repeat playback</b> .....	32	
To repeat the current selection or all tracks [REPEAT].....	32	
To repeat a desired part [A-B REPEAT].....	34	
<b>Selecting a scene angle of DVD VIDEO</b> .....	35	
To select a scene angle from the normal screen		
[ANGLE].....	35	
To select a scene angle from the angle list display		
[ANGLE].....	36	
<b>Changing the language and sound</b> .....	36	
To select the subtitle language [SUBTITLE].....	36	
To change the audio language or sound [AUDIO].....	37	
<b>Miscellaneous functions</b> .....	38	
To adjust the picture character [VFP].....	38	
To simulate surround sound [3D PHONIC].....	39	
To check the disc time [TIME SELECT].....	40	
Changing the brightness of the display window.....	40	
<b>MP3 disc playback</b> .....	Page 41	
<b>About MP3 disc</b> .....	41	
<b>Operations</b> .....	41	
Basic operations.....	41	
Specifying the desired Group and Track.....	42	
Repeat playback.....	43	
<b>Initial settings</b> .....	Page 44	
<b>Selecting preferences</b> .....	44	
How to set preferences.....	44	
Language and display preference.....	44	
Audio and system preference.....	46	
<b>Limiting playback by children</b> .....	48	
To set Parental Lock for the first time		
[PARENTAL LOCK].....	48	
To change the settings [PARENTAL LOCK].....	49	
To temporarily release the Parental lock		
[PARENTAL LOCK].....	50	
<b>Additional information</b> .....	Page 51	
<b>AV COMPU LINK remote control system</b> .....	51	
Connection and setup.....	51	
Operation.....	52	
<b>Care and handling of discs</b> .....	53	
<b>Troubleshooting</b> .....	54	
<b>Specifications</b> .....	55	
<b>Table of languages and their abbreviations.. Appendix A</b>		
<b>Country code list for parental lock..... Appendix B</b>		

# Introduction

## Features

This unit is a compatible player for DVD VIDEO, Audio CD and Video CD discs.

## Picture functions

Introduction

### ■ Progressive Scan system

Supports the Progressive scan system, as well as the conventional (current) Interlace scan system.

\* To enjoy the progressive video picture, you must connect the unit to a television or monitor that supports the progressive video input.

### ■ Strobe function

The unit can display nine continuous still pictures on the TV screen.

### ■ Digest function

You can select the desired selection to be played from the opening scenes displayed on the TV screen.

### ■ Angle function\*

You can select a desired angle from multiple camera angles recorded on the DVD VIDEO disc.

### ■ Zoom function

You can view scenes close-up.

### ■ VFP function

You can adjust the picture character according to the type of programming, picture tone or personal preferences.

### ■ Parental lock\*

You can restrict the playback of DVD VIDEO discs with scenes which you do not want children to see, such as adult or violent films.

## Audio functions

### ■ High quality digital sound

You can enjoy high quality sound with Linear-PCM.

### ■ Surround function\*

The unit accommodates the Dolby Digital and, DTS surround systems.

(These surround signals are output only from the DIGITAL OUT jacks.)

### ■ 3D PHONIC function

You can enjoy Virtual surround sound with your 2-channel (stereo) system.

## Other functions

### ■ Multi-language subtitles and sound\*

You can select a subtitle or sound language from those recorded on the DVD VIDEO disc.

### ■ Operation from the on-screen display

User-friendly on-screen displays allow you to operate the unit easily.

Functions with (\*) mark only work on a DVD VIDEO disc that is compatible with each function.

## Supplied accessories


- Audio/video cable (x 1)




- Component video cable (x 1)




- Remote Control Unit (x 1)

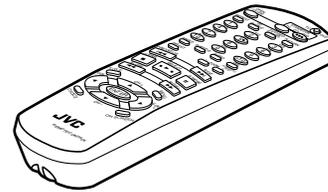


- R6P(SUM-3)/AA(15F) batteries (x 2)

 

- Instruction manual (x 1)

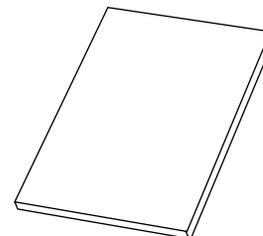

- AC power cord (x 1)

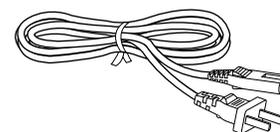


# About this instruction manual

- This instruction manual is written in the following manner.
- Regarding operations for MP3 discs, see "MP3 disc playback" on and after page 41. The other sections of this manual basically do not refer to MP3 disc playback.

## To playback in random order [RANDOM]



You can play tracks on an AUDIO CD or Video CD discs in random order by using the Random function.

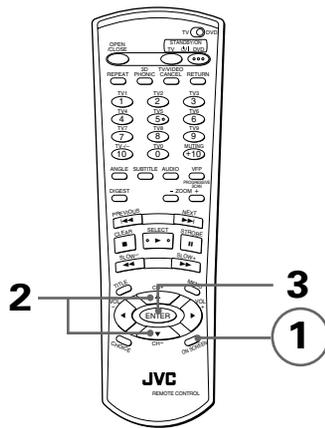

These symbols indicate the types of discs which the operation can be used for.

The number indicates the following procedural step(s) in which the button(s) is(are) used. You may also use the corresponding buttons on the front panel of the unit if available.

■ While stopped

### 1 Press ON SCREEN.



The on-screen display appears on the TV screen.

The number indicates the procedural step.

### 2 Use CURSOR ▲/▼ to move to [RANDOM].

(for Audio CD)

(for Video CD)

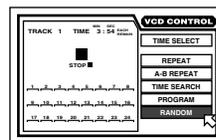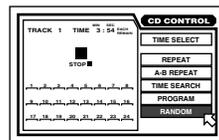

### 3 Press ENTER.

The color of [RANDOM] changes.  
The unit starts random playback.  
The "RANDOM" indicator appears in the display window on the front panel. After playing all tracks of the discs, random playback ends.

The names of buttons on the remote control unit (or on the front panel of the unit) are all given in uppercase letters.

Other convenient procedures, etc.



- The same track will not be played back more than once during random play.
- During Audio CD playback, pressing ENTER when the cursor points to [RANDOM] quits random mode and continues playback in the normal order.
- **To quit random playback in the middle**  
Press ■. The unit stops playback and quits the random playback mode.

## Notes on handling

### Important cautions

#### Installation of the unit

- Select a place which is level, dry and neither too hot nor too cold (between 5°C and 35°C, 41°F and 95°F).
- Leave sufficient distance between the unit and the TV.
- Do not use the player in a place subject to vibrations.

#### Power cord

- Do not handle the power cord with wet hands!
- A small amount of power (1.5 W) is always consumed while the power cord is connected to the wall outlet.
- When unplugging the player from the wall outlet, always pull the plug, not the power cord.

#### To prevent malfunction of the unit

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the unit.
- Do not use any non-standard shape disc available on the market, because it may damage the unit.
- Do not use a disc with tape, seals, or paste on it, because damage to the unit may result.

#### Note about copyright laws

- Please check the copyright laws in your country before recording from DVD VIDEO, Audio CD, Video CD and MP3 discs. Recording of copyrighted material may infringe copyright laws.

#### Note about the copyguard system

- The DVD VIDEO disc is protected by the copyguard system. When you connect the unit to your VCR directly, the copyguard system activates and the picture may not be played back correctly.

### Safety precautions

#### Avoid moisture, water and dust

Do not place the unit in moist or dusty places.

#### Avoid high temperatures

Do not expose the unit to direct sunlight or place it near a heating device.

#### When you are away

When away on travel or otherwise for an extended period of time, remove the plug from the wall outlet.

#### Do not insert foreign objects into the unit

Do not insert wires, hairpins, coins, etc. into the unit.

#### Do not block the vents

Blocking the vents may damage the unit.

#### Care of the cabinet

When cleaning the unit, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents and disinfectants. These may cause deformation or discoloring.

#### If water gets inside the unit

Turn off the power switch and remove the plug from the wall outlet, then call the store where you made your purchase. Using the unit in this state may cause a fire or electrical shock.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. "Dolby" and double-D symbol are trademarks of Dolby Laboratories.

Confidential Unpublished Works.

© 1992-1997 Dolby Laboratories, Inc. All rights reserved.

Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other world-wide patents issued and pending. "DTS"; "DTS Digital Surround"; are trademarks of Digital Theater Systems, Inc.


© 1996 Digital Theater Systems, Inc. All Rights Reserved.

# Preliminary knowledge

## Names of parts and controls

Refer to the corresponding pages indicated in ( ) for details.


### Front panel

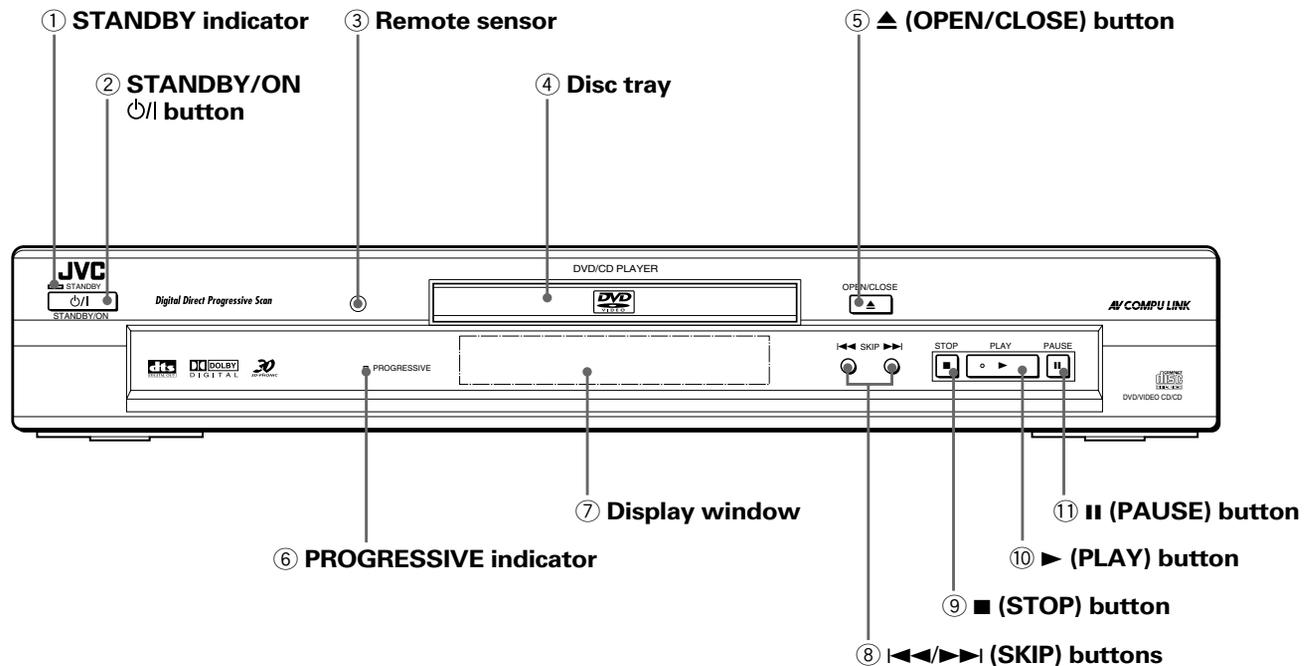

- |   |  |
|---|--|
| <p>① <b>STANDBY indicator (21)</b><br/>Lights in red when the power cord is connected and the unit is on standby. When the unit is turned on, the STANDBY indicator goes off.</p> <p>② <b>STANDBY/ON button (21)</b><br/>Turns the unit on or off (standby).</p> <p>③ <b>Remote sensor</b><br/>Receives signals from the remote control unit.</p> <p>④ <b>Disc tray (21)</b><br/>Used to load a disc.</p> <p>⑤ <b>(OPEN/CLOSE) button (21)</b><br/>Used to open and close the disc tray.</p> <p>⑥ <b>PROGRESSIVE indicator (15)</b><br/>Lights up when the Progressive scan mode is active. It lights in green during playback of a film-source DVD VIDEO disc when "PROGRESSIVE MODE" in "PREFERENCE 1" is set to "SMART", "FILM" or "AUTO." In other conditions when the Progressive scan mode is active, it lights in red.</p> | <p>⑦ <b>Display window (8)</b><br/>Indicates the current status of the unit.</p> <p>⑧ <b>(SKIP) buttons (23, 41)</b><br/>Used to skip a chapter, title or track. Also, used for the page selection of a menu screen (for Video CD). Holding down ◀◀ or ▶▶ during playback reverses or advances playback rapidly (except MP3 disc).</p> <p>⑨ <b>(STOP) button (22, 41)</b><br/>Stops playback.</p> <p>⑩ <b>(PLAY) button (22, 41)</b><br/>Starts playback. Also, used as a SELECT button for PBC of Video CDs.</p> <p>⑪ <b>(PAUSE) button (22, 41)</b><br/>Pauses playback. Also, used to display nine continuous still pictures (STROBE function).</p> |
|---|--|

## Remote control unit

Preliminary knowledge

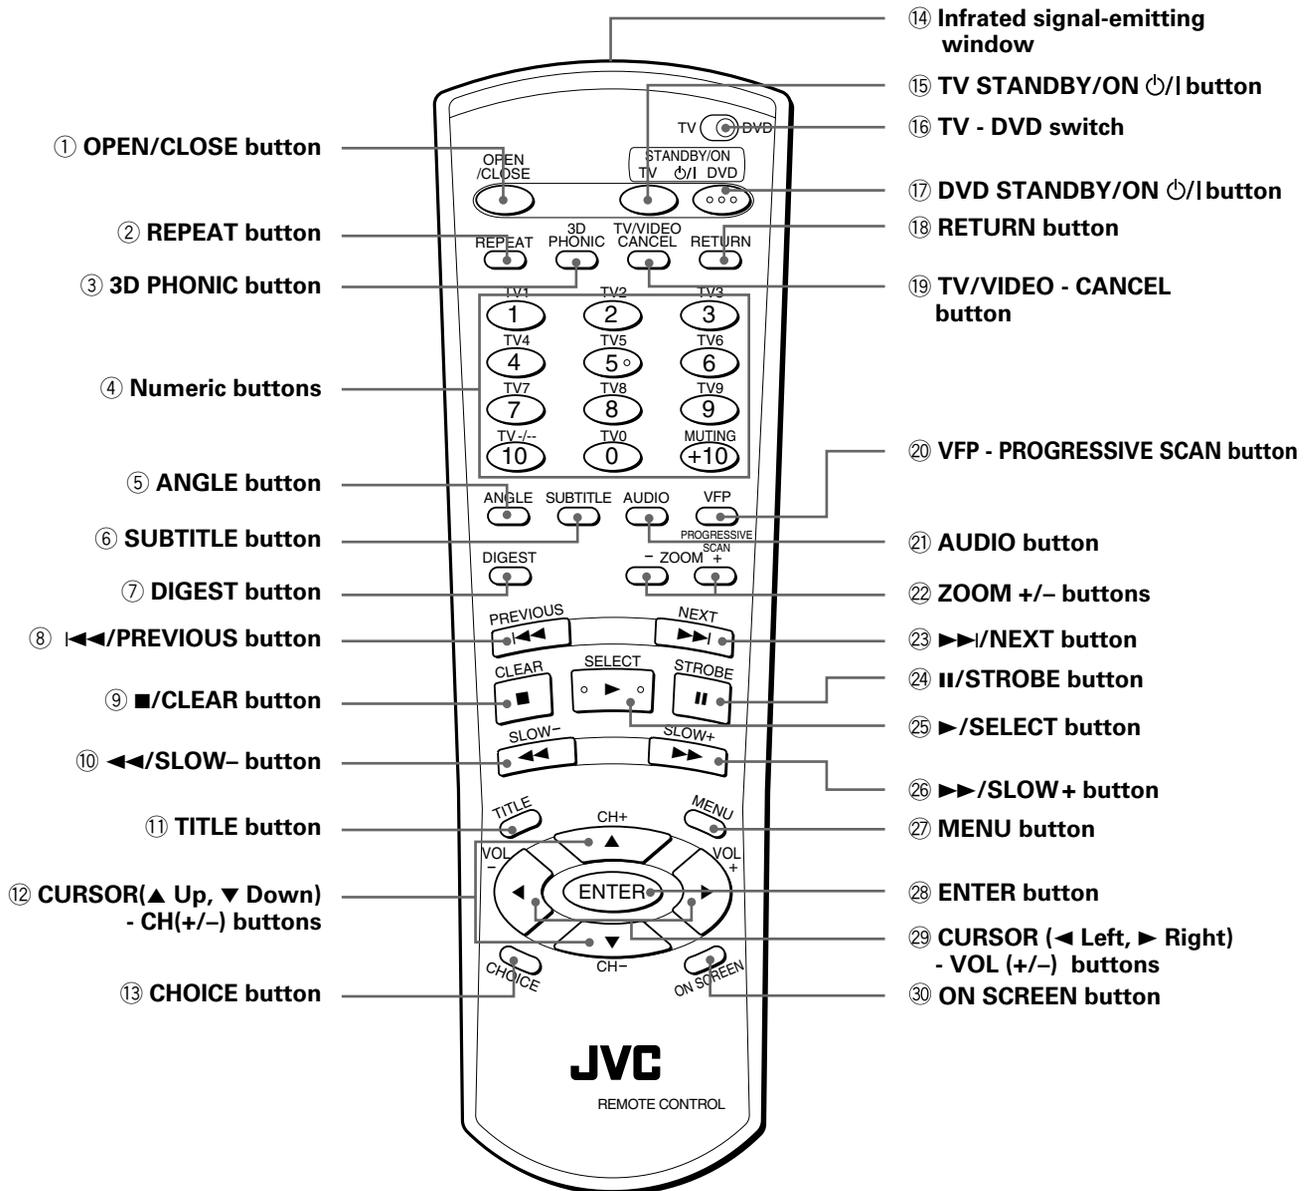


- |   |  |
|---|--|
| <p>① <b>OPEN/CLOSE button (21)</b><br/>Opens and closes the disc tray.</p> <p>② <b>REPEAT button (32, 43)</b><br/>Selects the repeat mode.</p> <p>③ <b>3D PHONIC button (39)</b><br/>Produces a simulated surround effect.</p> <p>④ <b>Numeric buttons (12, 19)</b><br/>When the TV - DVD switch is set to DVD, these buttons are used to specify a title, chapter, track or group number, as well as used to enter a time for the Time search function.<br/>When the TV - DVD switch is set to TV, these buttons are used to select a TV channel as well as mute the TV audio.</p> | <p>⑤ <b>ANGLE button (35, 36, 40)</b><br/>Changes camera angles during playback of a DVD VIDEO disc containing multiple camera angles. Also used to change the brightness of the display window.</p> <p>⑥ <b>SUBTITLE button (36)</b><br/>Used to display the subtitle selection display on the TV screen, as well as used to turn the subtitle on or off (for DVD VIDEO).</p> <p>⑦ <b>DIGEST button (28)</b><br/>Displays beginning scenes of each title, chapter or track on the TV screen (for DVD VIDEO/video CD).</p> |
|---|--|

- ⑧ **◀◀/PREVIOUS button (23, 26, 41)**  
Skips back a chapter, title or track. Also used for the page selection of a menu screen (for DVD VIDEO/Video CD).  
Holding down this button during playback reverses playback rapidly (except MP3 disc).
- ⑨ **■/CLEAR button (22, 24, 31, 41)**  
Stops playback. Also used to clear all the programmed selection for the program play.
- ⑩ **◀◀/SLOW- button (23, 30)**  
Pressing this button during playback reverses playback rapidly.  
Pressing this button while a DVD VIDEO disc is paused reverses playback slowly.
- ⑪ **TITLE button (25)**  
Displays the title menu of a DVD VIDEO disc on the TV screen.
- ⑫ **CURSOR (▲ Up, ▼ Down) - CH (+/-) buttons**  
When the TV - DVD switch is set to DVD, these buttons are used to select an item from a menu or on-screen display, or to change the setting of an on-screen display item.  
In this case, we call them "CURSOR ▲/▼" buttons in this manual.  
When the TV - DVD switch is set to TV, they are used to select a TV channel.
- ⑬ **CHOICE button (44)**  
Brings up the preference on-screen display on the TV screen.
- ⑭ **Infrared signal-emitting window**  
Point this window toward the remote sensor on the front panel when pressing buttons.
- ⑮ **TV STANDBY/ON ⏻/⏻ button (19)**  
Turns the TV on or off (standby).
- ⑯ **TV - DVD switch (12, 19, 25)**  
When setting this switch to "TV", the numeric, cursor and TV/VIDEO - CANCEL buttons are used to control your TV.  
When setting it to "DVD", these buttons are used to control the unit.
- ⑰ **DVD STANDBY/ON ⏻/⏻ button (21)**  
Turns the unit on or off (standby).
- ⑱ **RETURN button (26)**  
Returns to the previous menu (for DVD VIDEO/Video CD).
- ⑲ **TV/VIDEO - CANCEL button (19, 25)**  
Switches the TV input mode when the TV - DVD switch is set to TV.  
Cancels the last selection of the program when the TV - DVD switch is set to DVD.
- ⑳ **VFP - PROGRESSIVE SCAN button (15, 38)**  
Pressing this button brings up the VFP window in which you can select or adjust the picture character.  
Holding down this button for a few seconds switches the progressive scan mode on or off. See "How to make the Progressive scan mode active" on page 15 for details.
- ㉑ **AUDIO button (37)**  
Selects the audio (for DVD VIDEO/Video CD).
- ㉒ **ZOOM +/- buttons (30)**  
Zooms in or out the picture (for DVD VIDEO/Video CD).
- ㉓ **▶▶/NEXT button (23, 26, 41)**  
Skips forward a chapter, title or track. Also used for the page selection of a menu screen (for DVD VIDEO/Video CD).  
Holding down this button during playback advances playback rapidly (except MP3 disc).
- ㉔ **⏸/STROBE button (22, 29, 41)**  
Pauses playback. Also, used to display nine continuous still pictures (STROBE function).
- ㉕ **▶/SELECT button (22, 25, 41)**  
Starts playback. Also used as a SELECT button for PBC of Video CDs.
- ㉖ **▶▶/SLOW+ button (23, 30)**  
Pressing this button during playback advances playback rapidly.  
Pressing this button while a DVD VIDEO or Video CD disc is paused advances playback slowly.
- ㉗ **MENU button (25)**  
Displays a DVD menu on the TV screen.
- ㉘ **ENTER button**  
Executes the selected item in a menu or on-screen display.
- ㉙ **CURSOR (◀ Left, ▶ Right) - VOL (+/-) buttons**  
When the TV - DVD switch is set to DVD, these buttons are used to select an item from a menu or on-screen display, or to change the setting of an on-screen display item.  
In this case, we call them "CURSOR ◀/▶" buttons in this manual.  
When the TV - DVD switch is set to TV, they are used to change the TV audio volume.
- ㉚ **ON SCREEN button**  
Brings up an appropriate on-screen display for controlling advanced functions for the current disc on the TV screen.

Preliminary knowledge


## Display window

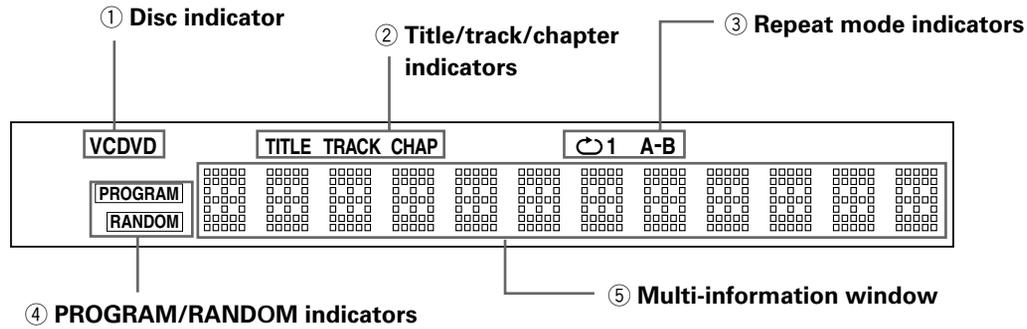

Preliminary knowledge

- ① **Disc indicator**  
Indicates the type of the disc set in the tray. When a DVD VIDEO disc is set, "DVD" lights up. When a Video CD disc is set, "VCD" lights up. When an Audio CD is set, "CD" lights up.
- ② **Title/track/chapter indicators**  
One or more appropriate indicators illuminate according to the disc inserted.
- ③ **Repeat mode indicators**  
The appropriate indicator illuminates according to the current repeat mode.
- ④ **PROGRAM/RANDOM indicators**  
The appropriate indicator illuminates while the unit is in the Program or Random playback mode.
- ⑤ **Multi-information window**  
Displays the current title/track/chapter number(s), time and status information.

## Rear panel

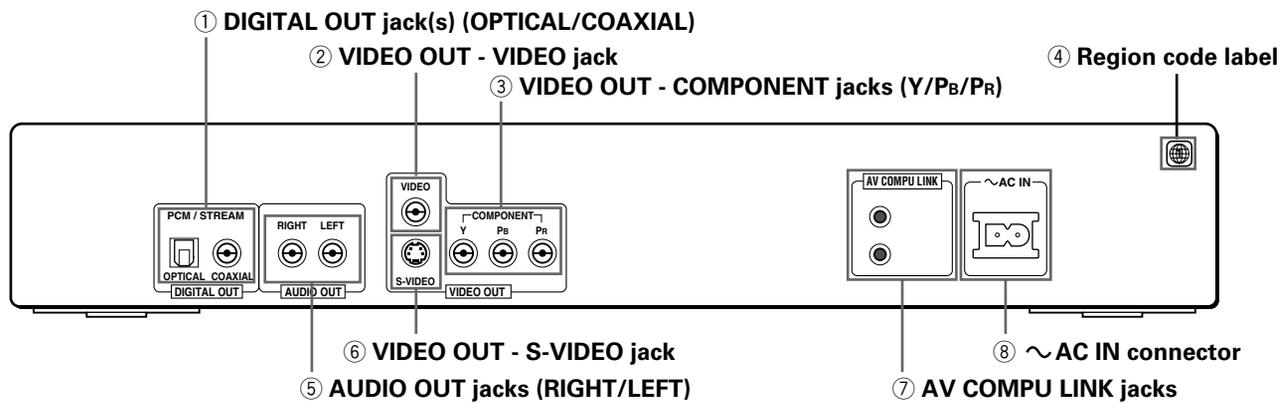

- ① **DIGITAL OUT jack(s) (OPTICAL/COAXIAL) (17)**  
Outputs digital audio signals. You must select the signal type correctly according to the external device connected to via the Preference display. Both the OPTICAL and COAXIAL connectors are provided.
- ② **VIDEO OUT - VIDEO jack (14)**  
Outputs a composite video signal.
- ③ **VIDEO OUT - COMPONENT jacks (Y/P<sub>B</sub>/P<sub>R</sub>) (15)**  
Output component video signals. These jacks can output the Progressive scan signals as well as the conventional Interlace scan signals. See "How to make the Progressive scan mode active" on page 15 for details.
- ④ **Region code label (13)**  
Indicates the region code of the unit.
- ⑤ **AUDIO OUT jacks (RIGHT/LEFT) (14, 15)**  
Outputs stereo analog audio signals.
- ⑥ **VIDEO OUT - S-VIDEO jack (14)**  
VIDEO OUT-Outputs an S-video signal.
- ⑦ **AV COMPU LINK jacks (51)**  
Connects with other JVC equipment supporting the AV Compulink function to facilitate integrated operations.
- ⑧ **~ AC IN connector (17)**  
Connects to the wall outlet using the supplied AC power cord.


# Operational Principles

## On-screen displays

You can set preferences and perform advanced playback functions via various on-screen displays, including the Opening, Preference, Parental lock and Control displays.

### Basic operations of on-screen displays

- You can move  using the CURSOR /// buttons to select items you want to work with.
- With an item like  you can change the setting by using the CURSOR / buttons when  is on the item.
- **REPEAT** - type item works when you place  on the item and press ENTER.
- In the message box, the operation to be performed is displayed according to the item pointed by .
- Numbers are entered using the numeric buttons.
- Some functions become effective by pressing ENTER after specifying necessary entries.

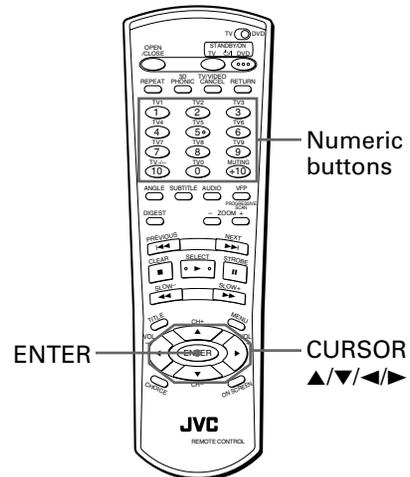

Preliminary knowledge

### Opening display

An opening display appears automatically (without pressing any button) in some conditions. The display shown on the right appears when the unit turns on with no disc inserted.



One of the displays shown on the right appears when a disc is set and stopped. For a disc that does not contain any picture (such as an Audio CD), the opening display does not disappear after starting playback.

(for DVD VIDEO)



(for Audio CD)



(for Video CD)



Preliminary knowledge

**PREFERENCE (1, 2) displays (see page 44)**


You can set preferences via these displays.

• **To bring up the PREFERENCE 1/PREFERENCE 2 display**


1 When a DVD VIDEO disc is set and stopped or no disc is inserted, press CHOICE.

2 To select the display, move  to the desired tab using the CURSOR   buttons.

(PREFERENCE 1)

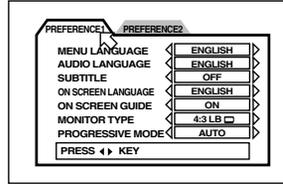

(PREFERENCE 2)

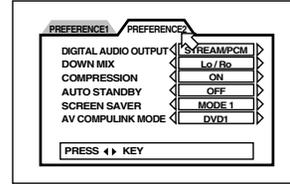


**PARENTAL LOCK display (see page 48)**

You can set the parental lock from this display.

• **To bring up the PARENTAL LOCK display**

When no disc is inserted or a DVD VIDEO disc is stopped, press ENTER while holding down .

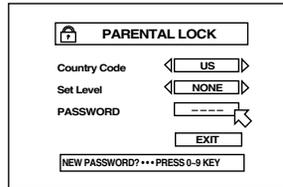



**DVD VIDEO CONTROL display**

You can select and set various functions for DVD VIDEO playback from this display.

This display is available only during DVD VIDEO playback.

• **To bring up the DVD VIDEO CONTROL display**

During DVD VIDEO playback, press ON SCREEN.

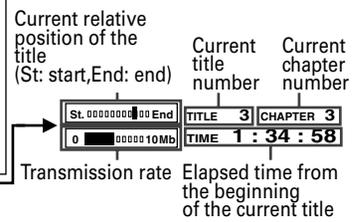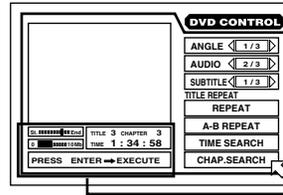


**CD CONTROL display**

You can select and set various functions for Audio CD playback from this display.

• **To bring up the CD CONTROL display**

Whenever an Audio CD is inserted, press ON SCREEN.

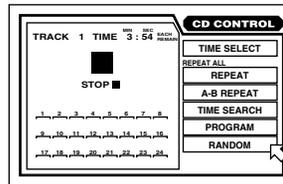

Preliminary knowledge


### VCD CONTROL display

There are two types of VCD CONTROL display. The display shown on the right is available only during Video CD playback.

When a Video CD disc is stopped, a display similar to the CD CONTROL display appears.

- **To bring up the VCD CONTROL display**


Press ON SCREEN when a Video CD is inserted. The appropriate display appears according to the unit's status.

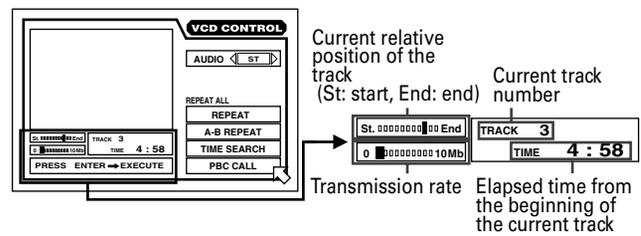

English

### MP3 CONTROL display (See page 41)

The display shown on the right appears when an MP3 disc is set. You can select the desired Group or track to be played back.

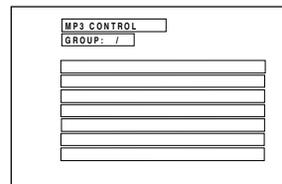


Preliminary knowledge

## To prevent the monitor from burning out [SCREEN SAVER]

A television monitor screen may be burned out if a static picture is displayed for a long time. To prevent this, the unit automatically activates the screen saver function if a static picture, such as an on-screen display or menu, is displayed for over 5 minutes.

- Pressing any button on the unit or the remote control unit will release the screen saver function and return to the previous display.
- You can select one of several screen saver modes available (see page 47).
- The screen saver function is not activated during Audio CD/MP3 disc playback or after stopping Audio CD/MP3 disc playback.

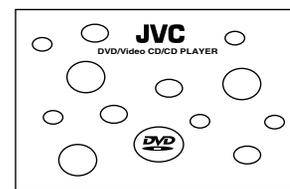

## On-screen guide icons

During DVD VIDEO playback, you may see icons displayed over the picture. These have the following meanings.



: Displayed at the beginning of a scene recorded from multiple angles. (See page 35.)



: Displayed at the beginning of a scene recorded with multiple audio languages. (See page 37.)



: Displayed at the beginning of a scene recorded with multiple subtitle languages. (See page 36.)

 
You can set the unit not to display on-screen icons above via the preference settings described on page 45.

### About invalid operation icon


When you press a button, if the unit does not accept its operation, appears on your television screen. Operations are occasionally unacceptable even if is not displayed.

Note that some operations may not be accepted. For example, some discs may not allow rapid advance/reverse or slow-motion playback.

## How to use numeric buttons



The function of the numeric buttons differs depending on the setting of the TV - DVD switch. When setting it to TV, the buttons are used to select a TV channel (see page 19). When setting it to DVD, the buttons are used to select a track/title or enter a disc time or chapter number.

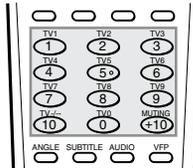

### To select a track/title number

- **To select a number between 1 and 10**  
Press the corresponding button for the number.
- **To select a number higher than 10**  
Use the +10 button.

 
Examples:

To select 13            +10 → 3  
 To select 34            +10 → +10 → +10 → 4  
 To select 40            +10 → +10 → +10 → 10

### To enter a time or chapter number

The method for entering a time for Time search or chapter number for Chapter search is different from above. See the corresponding sections in this manual for the details.

\* There is another method for selecting a track or group of an MP3 disc. See the appropriate section.



### To select a TV channel

 
Press the corresponding numeric buttons. See page 19 and 20 for details.

# About discs

## Playable disc types

Playable and non-playable disc types are as follows:

### Playable discs

DVD VIDEO 	Video CD 	Audio CD 
--	---	--

The DVD VIDEO Logo is a trademark.

- CD-R and CD-RW discs recorded with the Audio CD or MP3 format can be played back.
- Some disc may not be played back because of the disc characteristics or recording condition.
- DVD VIDEO players and DVD discs have their own Region Code numbers. This unit only can play back DVD VIDEO discs whose Region Code numbers include "1".

Examples of playable DVD VIDEO discs:



This unit accommodates both the NTSC and PAL system and can playback discs recorded with either system.

### Non-playable discs


DVD-ROM, DVD-RAM, DVD AUDIO, DVD-R, DVD-RW, CD-ROM, PHOTO CD, CD-EXTRA, CD-G, CD-TEXT

- Playing back discs listed as "Non-playable discs" above may generate noise and damage speakers.
- This unit can play back audio recorded in CD-G, CD-EXTRA and CD-TEXT discs.


## Disc structure

A DVD VIDEO disc is comprised of "titles", while an Audio CD, Video CD is comprised of "tracks". Each title may be divided into some "chapters". For example, if a DVD VIDEO disc contains some movies, each movie may have its own title number, and each movie may be divided into some chapters. In a DVD VIDEO KARAOKE disc, each song usually has its own title number and does not have chapters. In general, each title has independent content, while each chapter in the same title has continuity.

(Example: DVD VIDEO disc)

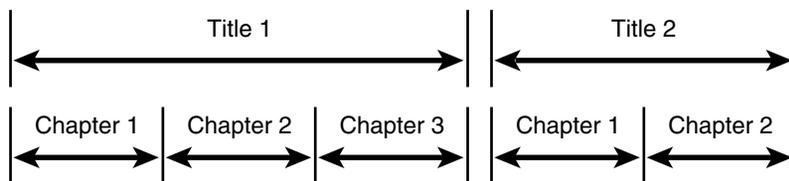

(Example: Audio CD/Video CD)

 

# Getting started

## Connections

\*In the following description, "TV" may be substituted with "monitor" or "projector."

\*Before using the unit, you have to connect the unit to a TV and/or amplifier.


### Before making any connections

- Do not connect the AC power cord until all other connections have been made.
- Since different components often have different terminal names, carefully read the instructions supplied with the component you are going to connect.


### To connect to a conventional TV

You can enjoy playback by simply connecting the unit to a TV. To improve audio sound quality, connect the AUDIO OUT jacks to your separate audio equipment. (See the following pages.)

The unit

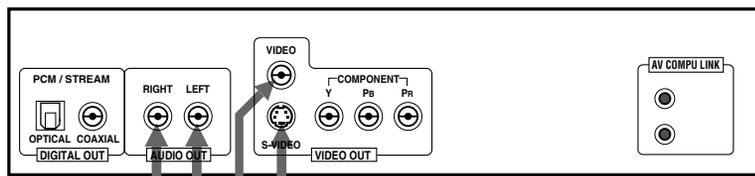

If the TV has an AV COMPU LINK terminal, you can use the AV COMPU LINK function. See "AV COMPU LINK remote control system" on page 51 for details.

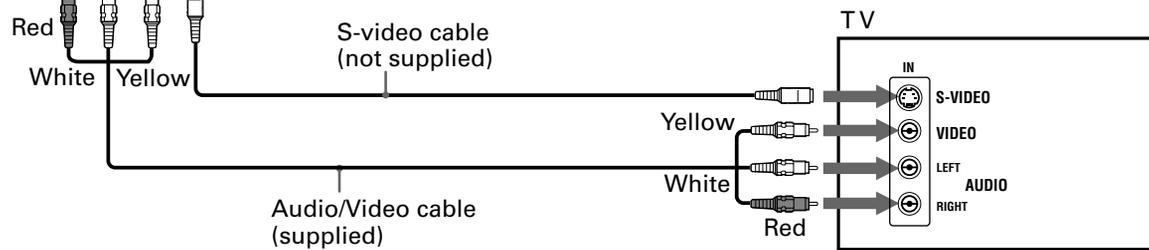

Connect the unit to a TV equipped with stereo audio input and video input jacks using the supplied audio/video cables.

- If your TV has a monaural audio input instead of stereo, you need to use an optional audio cable which converts stereo audio output to monaural.
- If your TV has an S-video input, you can get better picture quality by connecting it with the S-VIDEO output of the unit using the S-video cable (optional) in addition to the (standard) video connection.


#### NOTES

- When connecting to a TV using the VIDEO OUT jack, make sure that the PROGRESSIVE indicator on the front panel is not lit. If it is lit, the VIDEO and S-VIDEO outputs do not feed the correct signals. To turn off the PROGRESSIVE indicator, see "How to make the Progressive scan mode active" on page 15.
- Connect VIDEO OUT of the unit directly to the video input of your TV. Connecting VIDEO OUT of the unit to a TV via a VCR may cause a monitor problem when playing back a copy-protected disc.

## To connect to a TV with the component video input jacks

English

You can enjoy high picture quality by connecting the unit's COMPONENT VIDEO OUT jacks to the COMPONENT VIDEO IN jacks of your TV with the video cables.

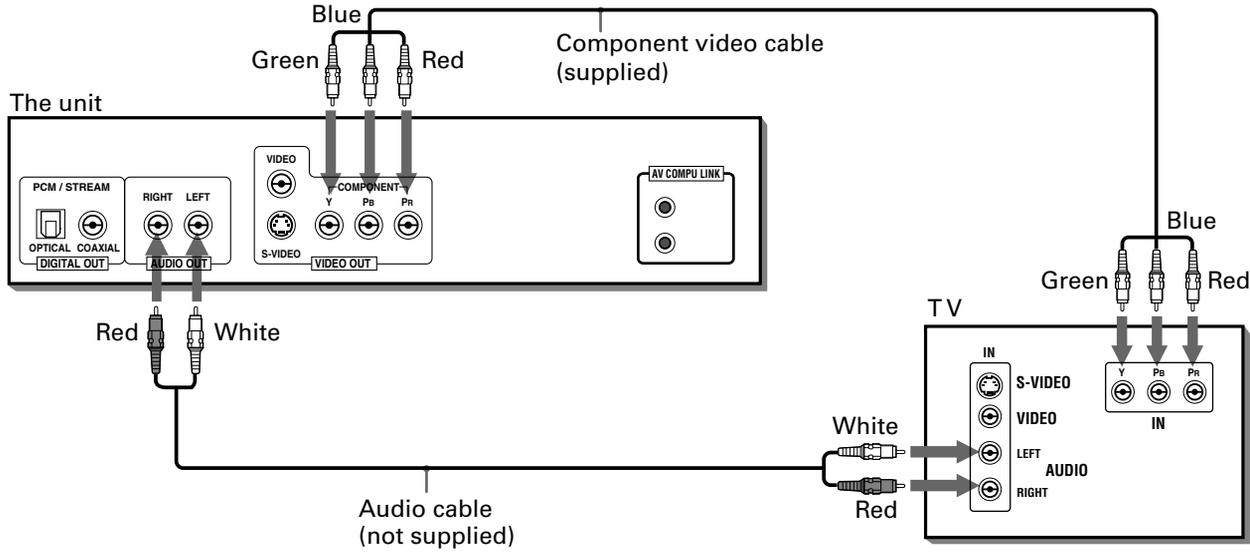

Getting started


The unit supports the Progressive scan system as well as the conventional Interlace scan system. If your television or monitor supports the progressive video input, you can enjoy a high quality picture by making the Progressive scan mode active.

### How to make the Progressive scan mode active

Press and hold down the VFP - PROGRESSIVE SCAN button for a few seconds.

The Progressive scan mode switches on and off. When it is active, the PROGRESSIVE indicator on the front panel is lit.

- You should note that not all Progressive TV and High-Definition TV sets are fully compatible with the unit and may cause artifacts to be displayed in the picture. In case of progressive scan picture problems, it is recommended that you switch the setting to the "Interlace Scan" output. If there are questions regarding our TV set compatibility with the unit, please contact our customer service center.
- All JVC Progressive TV and High-Definition TV sets have no problem. (Example: AV-61S902)

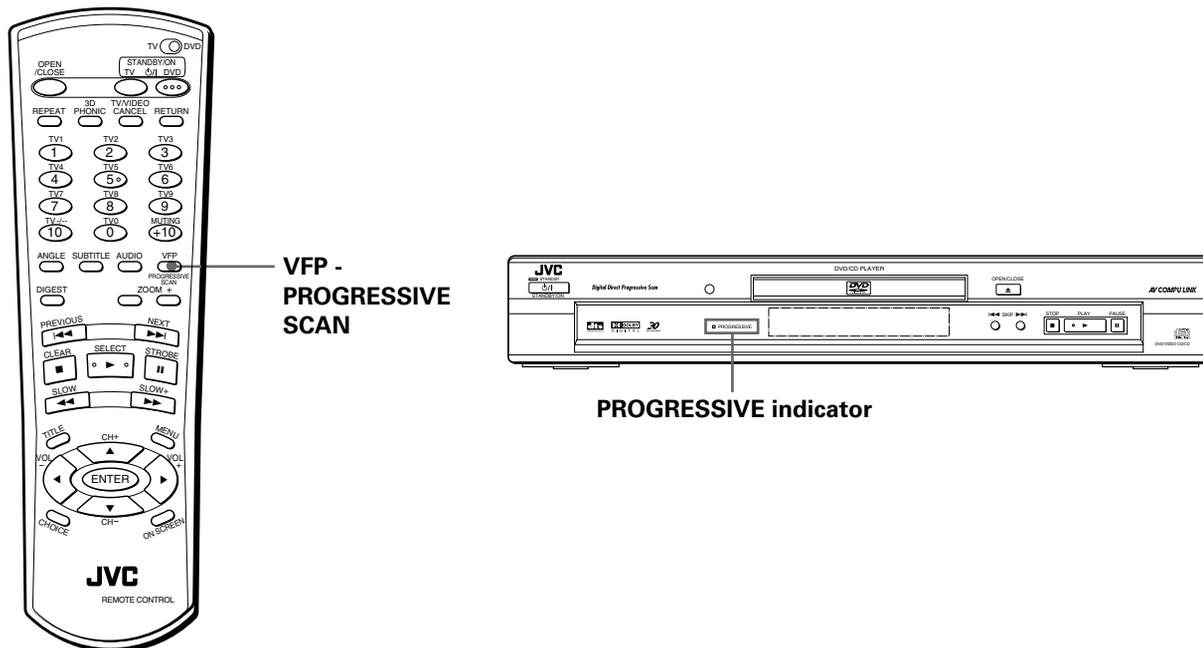

Getting started

**NOTES**

- Connect "Y" to "Y", "Pb" to "Pb", "Pr" to "Pr" correctly.
- When the component video input jacks of the TV is of the BNC type, use an adapter to convert a pin jack to a BNC jack (optional).
- When the Progressive scan mode is active, the VIDEO and S-VIDEO outputs do not feed the correct signals.

**About SCAN MODE**

To display video on the monitor (television) screen, the conventional scanning method is called "Interlaced scan". With this method, only half of the horizontal lines are displayed at a time. So two fields complete a single picture (frame); i.e., the first field, containing all the odd-numbered lines, is displayed followed by the second field, containing all the even-numbered lines.

On the other hand, the Progressive scan system scans all horizontal lines at a time, so you can double the number of pictures compared with the interlaced scan, resulting flicker-free, high-density picture.

To enjoy the progressive scanned video, a monitor (or TV or projector) to be connected to the unit must have the Progressive inputs.


Depending on the material source format, DVD VIDEO discs can be classified into two types; film source and video source (Note that some DVD VIDEO discs contain both film source and video source). Film sources are recorded as 24-frame-per-second information, while (NTSC) video sources are recorded as 30-frame-per-second (60-field-per-second interlaced) information.

When the unit plays back a film source material, uninterlaced progressive output signals are created using the original information. When a video source material is played back, the unit interleaves lines between the interlaced lines on each to create the pseudo uninterlaced picture and outputs as the progressive signal.

Getting started

**To connect to an audio amplifier or receiver**

You can enjoy high-quality audio by connecting the unit's audio output to your amplifier or receiver.

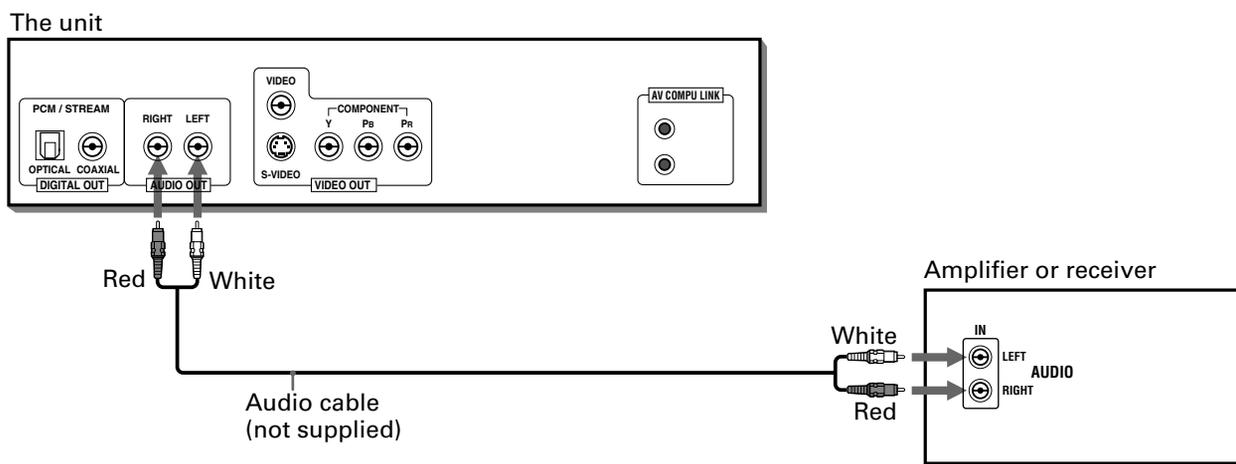

- Connect the unit's AUDIO OUT to any line-level inputs (such as AUX, DVD, CD, etc.) of an audio amplifier or receiver.


**NOTE**

- When using the unit with a stereo amplifier or receiver, make the "DOWN MIX" setting in "PREFERENCE 2" to "Lo/Ro". (See page 47.)

## To connect to audio equipment with a digital input

You can enhance the sound quality by connecting either of the unit's DIGITAL OUT jacks to the digital input of an amplifier, MD, etc. by using an optional digital cable (OPTICAL or COAXIAL). The digital audio signal from a disc is directly transferred. If you connect the unit to a Dolby Digital or DTS decoder or an amplifier with a built-in decoder by using an optional digital cable, you can enjoy high-quality surround sound.

When you make the digital connection, we recommend also to make the analog connection, because, depending on discs, no signal may be output from the DIGITAL OUT.

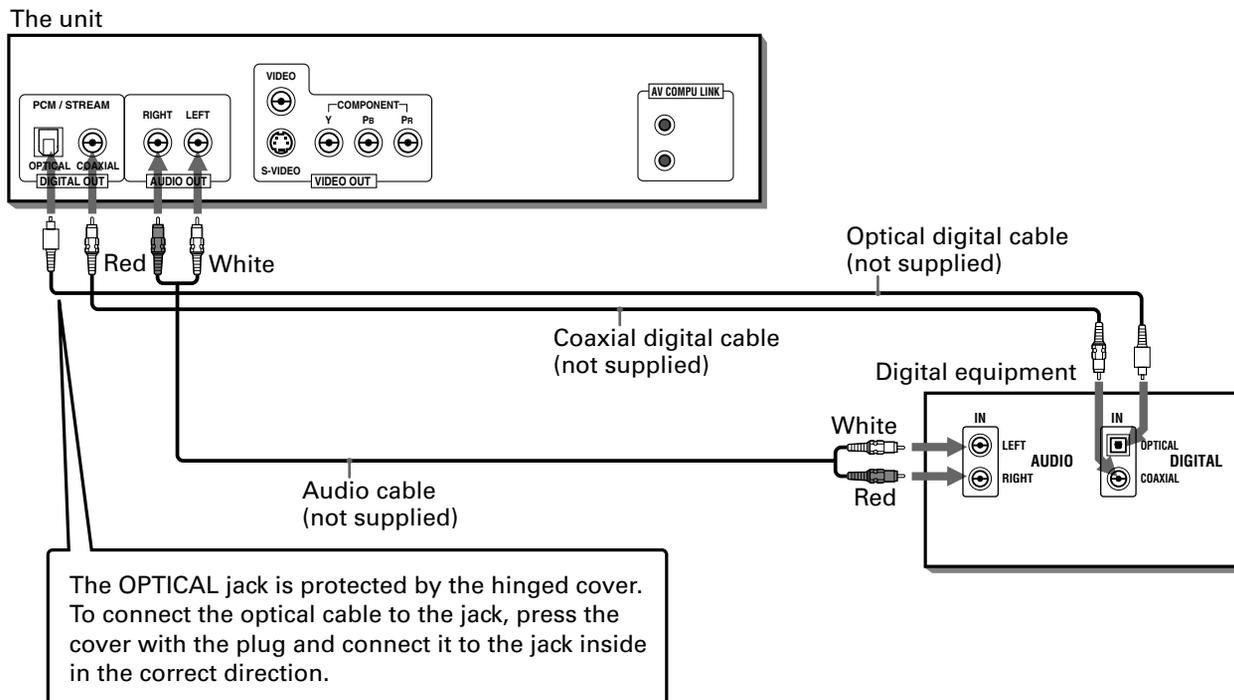

### NOTES

- When you connect the unit's DIGITAL OUT to digital audio equipment, before using, make the "DIGITAL AUDIO OUTPUT" setting in the "PREFERENCE 2" on-screen display correctly according to the connected audio equipment. If the "DIGITAL AUDIO OUTPUT" is not set correctly, loud noise may be generated from speakers, causing damage to them. See "DIGITAL AUDIO OUTPUT" on page 46.
- With the digital connection, the "COMPRESSION" settings in the "PREFERENCE 2" on-screen display are invalid. Settings for these items must be made from the decoder.

## To connect the power cord

When all the audio/video connections have been made, insert the smaller plug of the supplied AC power cord to the unit's AC IN connector, then insert the other end to the wall outlet. Make sure that plugs are inserted firmly. The STANDBY indicator lights and setup is completed.

### Warning

- Disconnect the power cord if you are not going to use the unit for a long time.
- Disconnect the power cord before cleaning the unit.
- Disconnect the power cord before moving the unit.
- Do not connect or disconnect the power cord with wet hands.
- Do not pull the power cord when disconnecting it, as this may damage the cord and cause fire, electric shock, or other accidents.

### Warning

- Do not damage, alter, twist, or pull the power cord, as this may cause fire, electric shock, or other accidents.
- To prevent any accidents or damages caused by an unsuitable AC power cord, only use the supplied power cord. If the cord is damaged, contact a dealer and get the new power cord.
- Do not put anything heavy, or the unit, on the power cord, as this may cause fire, electric shock, or other accidents.


## Using the remote control unit

Using the remote control, you can operate not only all the functions of the unit but also basic functions of your TV.


### To install batteries in the remote control unit

The battery compartment is located on the back of the remote control unit.


**1** Press down on the point shown by the arrow at the top of the compartment cover, and pull up the cover to open the compartment.

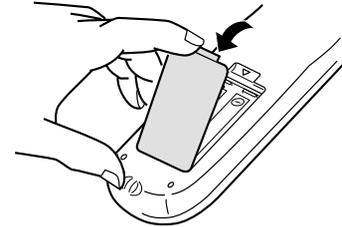

**2** Place the two accessory R6P (SUM-3)/AA(15F) batteries in the remote control according to the polarity markings (“+” and “-”) inside the compartment and on the batteries.

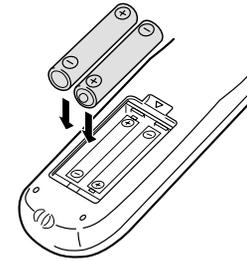

**3** Place the cover over the compartment, and press down lightly.

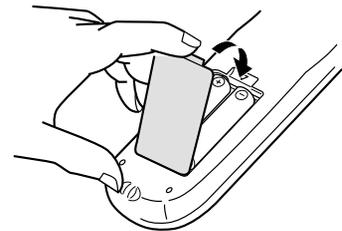

- The batteries will last about six months with normal use. If the functions of the remote control become erratic, replace the batteries. See below for more information.

### Precautions for the safe use of batteries

Observe the following precautions for the safe use of batteries. If they are used improperly their life will be shortened, they may burst or their contents may leak.


#### **Precaution**

- Remove the batteries from the remote control if it is not going to be used for a long period of time.
- Remove dead batteries and dispose of them properly.
- Never leave dead batteries lying around, take them apart, mix them with other refuse, or throw them into an incinerator.
- Never touch liquid that has leaked out of a battery.
- Do not mix new and old batteries, or batteries of different types, when replacing them.

## To use the remote control unit for TV operation

You can operate your TV from the remote control unit.

### Setting the remote control signal for operating your TV.

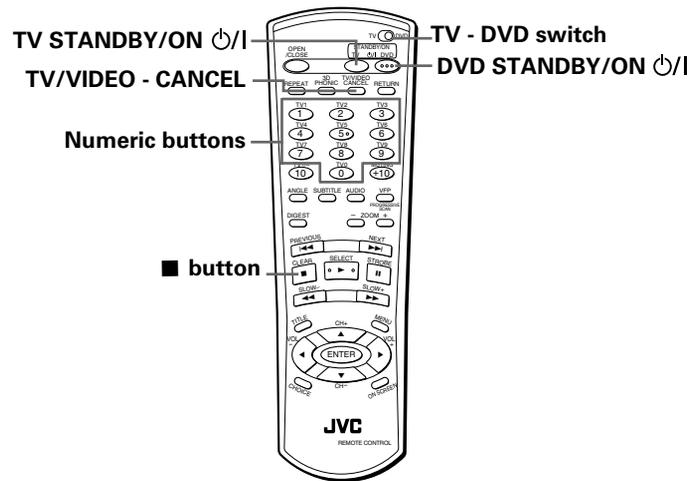

- 1 Holding down TV/VIDEO - CANCEL, enter the manufacturer code of your TV listed below by using the numeric buttons (0 to 9).  
Do not release TV/VIDEO - CANCEL. Keep holding it until the next step is completed.

**Example:**

To enter the manufacturer code "01": Press "0" then "1"

- 2 Press ■ while holding down TV/VIDEO - CANCEL.
- 3 Try to operate your TV by pressing TV STANDBY/ON. If your TV turns on or off, you have successfully set the control signal.

**Manufacturer code list**

No.	Manufacturer
01	JVC
02	PHILIPS/CCE/MAGNAVOX
03	mitsubishi
04	PANASONIC
05	RCA
06	SHARP
07	SONY
08	TOSHIBA
09	ZENITH
10	PHILCO/HITACHI
11	PANASONIC
12	SAMSUNG
13	SANYO/SEARS
14	TOSHIBA

No.	Manufacturer
15	GRADIENTE
16	SANYO
17	PHILCO/DAEWOO
18	LG (GOLDSTAR)
19	GRUNDIG
20	NEC/GRADIENTE
21	PHILCO
22	BEIJING/NOBLEX
23	JVC (ONWA)
24	JVC (ONWA)
25	JVC (ONWA)
26	THOMSON
27	FERGUSON
28	ITT

No.	Manufacturer
29	MIVAR
30	FINLUX
31	NOKIA
32	FUNAI
33	SAMSUNG
34	SAMSUNG/PEONY/CHANGHONG
35	SAMSUNG
36	AIWA
37	DAEWOO
38	JINXING/PEONY
39	PEONY
40	KONKA
41	TCL

Getting started

The following buttons can be used for operating the TV:

To use the CURSOR (CH-, CH+, VOL-, VOL+), TV/VIDEO - CANCEL and numeric buttons for TV control, set the TV - DVD switch to "TV":



	<b>Turns the TV on or off.</b>
	<b>Switches the TV input mode between TV and VIDEO.</b>
	<b>Selects the TV channels directly.</b> *For some TVs, pressing "+10" functions as the "100+," while "10" functions as the ENTER button if your TV requires pressing the ENTER button after selecting a channel number.
	<b>Mutes the TV sound.</b>
	<b>Changes the TV channels.</b>
	<b>Adjusts the TV volume.</b>

Getting started

**NOTES**

- The remote control unit is initially set operating a JVC TV.
- If there is more than one code listed for the manufacturer of your TV, try them one by one until you succeed.


# Basic operations

In the following description, the buttons on the remote control unit are mainly used, however, you may use the corresponding buttons on the front panel of the unit if available.

English

## Turning on/off the unit

Press DVD STANDBY/ON  $\phi/I$  on the remote control unit or press STANDBY/ON  $\phi/I$  on the front panel.

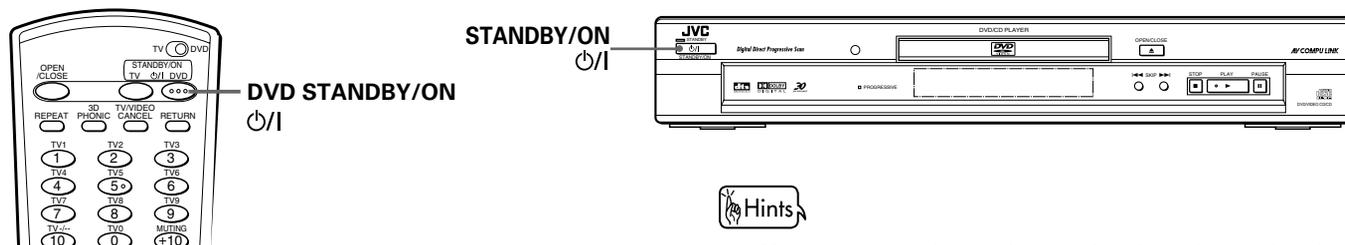

### Hints


- You can turn on the unit by pressing the  $\blacktriangleright$  button. In this case, the unit starts playback if the disc is set in the disc tray.
- If no disc is set, "NO DISC" appears on the display window.
- You can turn on the unit by pressing the  $\blacktriangle$  (OPEN/CLOSE) button on the front panel. In this case, the disc tray opens.

### NOTE

- Even if you press the DVD STANDBY/ON  $\phi/I$  or STANDBY/ON  $\phi/I$  button to turn off the unit, the unit is not disconnected from the AC power source as long as it is connected to the wall outlet. This state is called the standby mode. In this state, the unit consumes a very small amount of power.

## Inserting and removing discs

- 1 Press  $\blacktriangle$  (OPEN/CLOSE) to open the disc tray.
- 2 Place the disc in the tray.

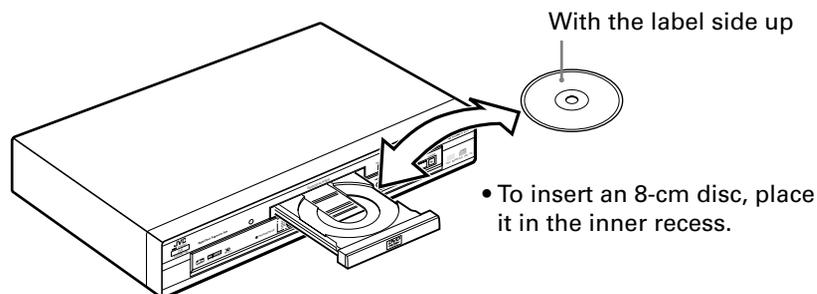

- 3 Press  $\blacktriangle$  (OPEN/CLOSE) to close the disc tray.


The unit reads the disc information and the corresponding opening display (depending on the disc type) appears on the TV screen (See page 9).

### NOTES


- Do not load a non-playable disc. For details about playable and non-playable disc types, see page 13.
- When loading a disc in the tray, be sure to position the disc inside the recess. Otherwise, the disc may be damaged when the tray is closed, or the disc may not be removed from the unit.
- Do not use any stabilizer when playing back a disc.
- With some DVD VIDEO discs, the unit starts playback automatically after inserting the disc.
- If you insert a DVD VIDEO disc whose region code does not match the unit, "REGION CODE ERROR!" is shown in the DVD opening display. For detail about the region code, see page 13.

## Basic playback

Note that this section describes basic operations for playback of DVD VIDEO, Audio CD and Video CD discs. For MP3 disc playback, see the independent chapter on and after page 41.

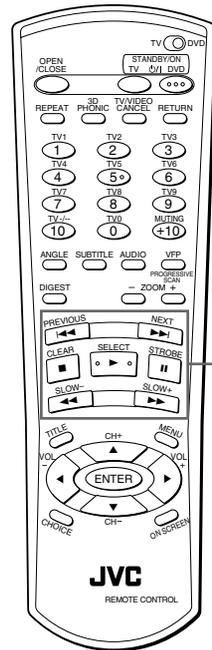

Basic control buttons

 

Basic control buttons

### To start playback



Press ►.

The unit starts playback from the beginning.

#### NOTES

- When the resume point is memorized, pressing ► starts playback from that point instead of the beginning. See page 24.
- During playback, the display window shows the title/chapter or track number being played.
- With Video CD discs with PBC control or some DVD discs, the menu display may appear on the TV screen after starting playback. In such a case, select an item to be played back from the menu. For operation using a menu, see page 25.
- With some DVD discs, the unit starts playback automatically after inserting the disc.

### To stop playback completely



Press ■.

The unit stops playback.



- If you press ▲ (OPEN/CLOSE) during playback, the unit stops playback and opens the tray.

### To stop playback temporarily



Press ■■.

The unit pauses playback. To resume playback, press ►.

## To advance or reverse playback rapidly while monitoring



English

### ■ During playback

#### Method 1 (from the remote control unit only)

Press ◀◀ or ▶▶.

Each press of ◀◀ or ▶▶ increases the playback speed. You can select the speed among 2x, 5x, 20x and 60x the normal speed.

Pressing ▶ returns the unit to normal playback.

#### Method 2

Hold down ◀◀◀ or ▶▶▶.

Holding down ▶▶▶ advances playback rapidly, while holding down ◀◀◀ reverses playback rapidly at 4 times the normal speed. Releasing the button returns the unit to normal playback.

## To locate the beginning of the scene or song



### ■ During playback

Press ◀◀◀ or ▶▶▶.

Press ◀◀◀ to locate the beginning of the current chapter, title, or track, and press ▶▶▶ to locate the beginning of the next chapter, title, or track.

#### **NOTE**

- When you play a Video CD disc with the PBC function or a DVD VIDEO disc, the unit may locate a different place, but it will generally locate the beginning of the title, chapter or track.

## Resuming playback

The unit can memorize the position on a disc where you interrupt playback, and resume playback from that position later.

### To memorize the interrupted position



#### ■ During playback

Press ■, or press DVD STANDBY/ON  on the remote control unit or STANDBY/ON  on the front panel.

The unit memorizes the interrupted position.



- If you interrupt playback by pressing ■ and then turn off the power, the memory is not cleared.

### To resume playback



#### ■ While the disc you interrupt playback last time is still in the disc tray

Press ►.

The unit starts playback from the position where you interrupted playback last time.

#### • To clear the resume position memory

Carry out one of the followings.

 
- \*Take out the disc from the tray.
- \*Press ■ while stopped.
- \*Turn on the unit by pressing STANDBY/ON  (on the remote control) or  (on the front panel).

#### NOTES

- The resume function does not work with Audio CD and MP3 discs.
- In the case of a Video CD disc with PBC function, the unit may resume playback from a point slightly earlier or later than the resume point you stored.

## Advanced operations

- Note that this section describes operations for playback of DVD VIDEO, Audio CD and Video CD discs. For MP3 disc playback, see the independent chapter on and after page 41.
- Make sure that the TV - DVD switch is set to "DVD" when using the CURSOR ▲/▼/◀/▶, numeric and TV/VIDEO - CANCEL buttons for controlling the unit.




### Playing from a specific position on a disc

You can play a disc from the selected track, title or chapter, or from the specified time.

#### To locate a desired scene from the DVD menu



DVD VIDEO discs generally have their own menus which show the disc contents. These menus contain various items such as titles of a movie, names of songs, or artist information, and display them on the TV screen. You can locate a desired scene by using the menu.

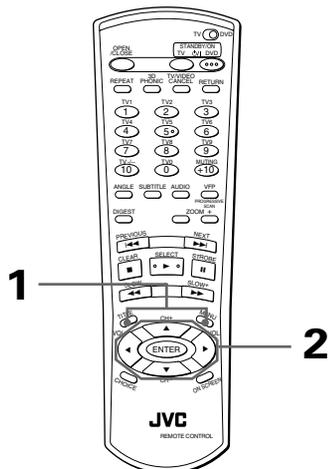

- Whenever a DVD VIDEO disc is loaded

#### 1 Press TITLE or MENU.

The menu appears on the TV screen.




##### About menu

Normally, a DVD VIDEO disc which contains more than one title may have a "title" menu which lists the titles. In this case, the menu appears on the TV screen by pressing the TITLE button. Some DVD VIDEO discs may also have a different menu which appears by pressing the MENU button.

See the instructions of each DVD VIDEO disc for its particular menu.

Example:

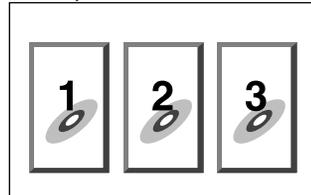

#### 2 Use CURSOR ▲/▼/◀/▶ to select a desired item, then press ENTER.

The unit starts playback of the selected item.



- With some discs, you can also select items by entering the corresponding number using the numeric buttons, which may cause the unit to automatically start playback.


#### NOTES

- When  appears on the TV screen by pressing TITLE in step 1:  
The disc does not have a menu listing the titles.
- When  appears on the TV screen by pressing MENU in step 1:  
The disc does not have a menu.
- The menu button does not work while stopped.

#### To locate a desired scene from the menu of the Video CD with PBC



Some Video CD discs supports the PBC function. PBC is an abbreviation of "PlayBack Control." A Video CD disc recorded with PBC has its own menus, such as a list of the songs of the disc. You can locate a specific scene by using the menu.

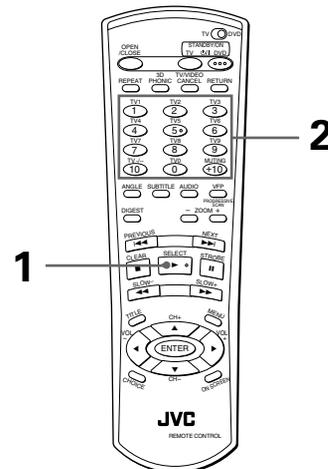


- When a Video CD disc with PBC is stopped

#### 1 Press ▶.

A disc menu appears on the TV screen (The PBC function is activated).

Example:

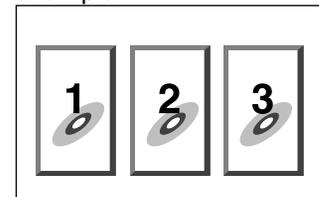

"Pbc" is indicated in the display window on the front panel.

#### 2 Use the numeric buttons to select the desired item.

- See page 12 for details about how to use the numeric buttons.

Advanced operations

The unit starts playback of the selected item. You can return to the menu by pressing the RETURN button.

When "NEXT" or "PREVIOUS" appears on the TV screen, the unit generally works as follows:

- Pressing ►► advances to the next page.
- Pressing ◀◀ returns to the previous page.

\* The method of the operation is different depending on the disc.


**Hints**

- To activate the PBC function when a PBC-compatible Video CD disc is being played back without the PBC function, press ■ then press ►.
- You can also activate the PBC function using the on screen menu display as follows.
  - 1 Press ON SCREEN.
  - 2 Use CURSOR ▲/▼ to move ↖ to [PBC CALL], then press ENTER.
- If you want to playback a PBC-compatible Video CD disc without activating the PBC function, start playback by using the numeric buttons instead of the ►. See the next paragraph.

**To locate a desired selection using the numeric buttons**



You can locate a desired title or chapter (DVD VIDEO) or track (Audio CD/Video CD) by specifying the number.

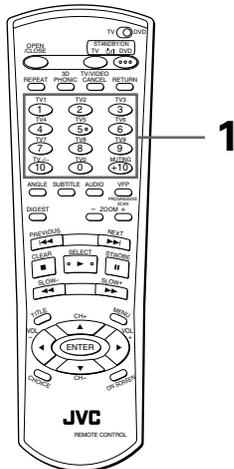

- For DVD VIDEO/Audio CD: During playback or while stopped
- For Video CD: During playback without PBC function or while stopped

**1** Use the numeric buttons to specify the number.

- \* During DVD VIDEO playback (except when a menu is shown), a chapter is specified.
- \* While a DVD VIDEO is stopped, a title is specified.
- \* For an Audio CD or Video CD, a track is specified.

The unit starts playback from the beginning of the selection.

- See page 12 for details about how to use the numeric buttons.

Depending on the disc type and the unit status, what is specified differs.

Unit status	Disc type	What is specified
While stopped	DVD VIDEO	title or chapter(*)
	Audio CD/ Video CD	track
During playback	DVD VIDEO	chapter
	Audio CD/ Video CD	track

- \* If a disc contains more than one title, a title is specified. If a disc contains only one title, a chapter is specified.

The selected title or track number appears in the display window on the front panel.

**NOTES**


- During DVD VIDEO playback, if a menu is shown on the TV screen, the numeric buttons may be used for selecting an item in the menu.
- When ⊙ appears on the TV screen: The title or track you have selected is not contained in the disc.
- This function does not work during Video CD playback with PBC function.

**To locate a desired selection using**

◀◀ or ▶▶



You can locate the beginning of a chapter (for DVD VIDEO) or track (for Audio CD/Video CD) by using the ◀◀ or ▶▶.

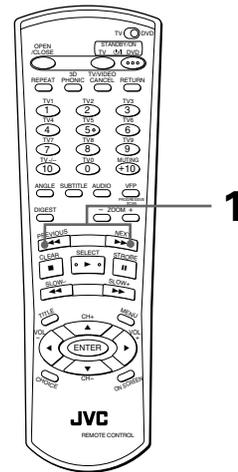

- For DVD VIDEO: During playback
- For Audio CD: During playback or while stopped
- For Video CD: During playback without PBC function

**1** Press ◀◀ or ▶▶.

With an Audio CD or Video CD, pressing the button skips a track. With a DVD VIDEO disc, pressing the button skips a chapter or title depending on the disc configuration.

The selection number appears in the display window on the front panel.

- To skip forward chapters/tracks, press ►► as many times as required.
- To skip to the beginning of the current track/chapter, press ◀◀ once.
- To skip back chapters/tracks, press ◀◀ as many times required.


**NOTES**

- This function may not work with some DVD VIDEO discs.
- This function does not work during Video CD playback with PBC function.

**To locate a desired scene by specifying the chapter number [CHAP.SEARCH]**



If the current title of a DVD VIDEO disc being played is divided into chapters, you can skip to a desired chapter by specifying the chapter number using the on-screen display.

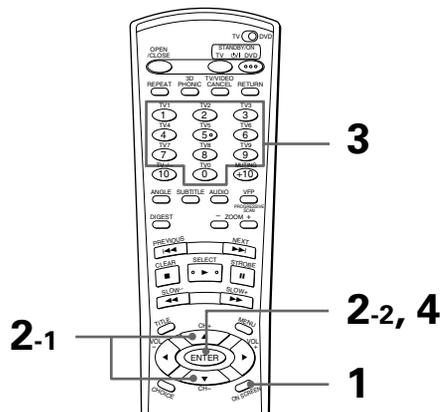


■ During DVD VIDEO playback

**1** Press ON SCREEN.

The on-screen display appears on the TV screen.

**2** Use CURSOR ▲/▼ to move to [CHAP. SEARCH], then press ENTER.

"GO TO CHAPTER =" appears in the message area. The color of [CHAP. SEARCH] changes.

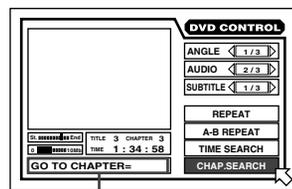

Message area

**3** Use the numeric buttons (0 to 9) to enter the desired chapter number.

Example:

To select chapter number 8:  
Press "8" → ENTER.

To select chapter number 37:  
Press "3" → "7" → ENTER.

The specified number appears in the message area.

**4** Press ENTER.

The unit starts playback from the selected chapter.



- The "10" and "+10" buttons are not used in this function.


**NOTES**

- You can also locate a desired chapter directly by specifying the chapter number using the numeric buttons during playback (except when a menu is shown). See page 26.
- When the chapter number is incorrect in step 3: Overwrite the incorrect number with the correct number.
- When is displayed in the TV screen in step 4: The chapter you have selected is not contained in the disc, or chapter search does not work on the disc.
- To return to the regular display: Press ON SCREEN.

**To locate a desired position in the current title or track [TIME SEARCH]**



You can play a disc from the desired position by specifying the elapsed time from the beginning of the current title or track using the TIME SEARCH function. Note that some DVD VIDEO discs do not contain time information, and the TIME SEARCH function cannot be used.

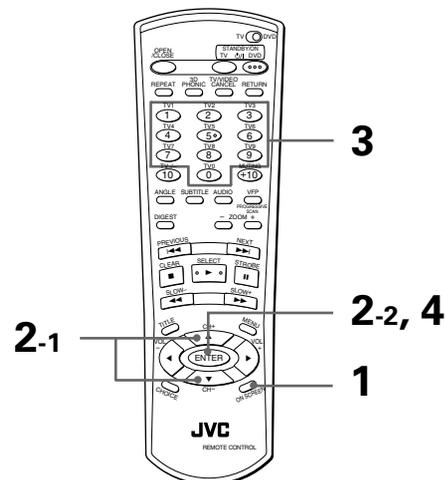

- For DVD VIDEO: During playback
- For Audio CD: During playback or while stopped
- For Video CD: During playback without PBC function or while stopped

**1** Press ON SCREEN.

The on-screen display appears on the TV screen.

**2** Use CURSOR ▲/▼ to move to [TIME SEARCH], then press ENTER.

"GO TO" appears in the message area. The color of [TIME SEARCH] changes.

Advanced operations


**3** Use the numeric buttons (0 to 9) to enter the time.

The specified time appears in the message area.

**4** Press ENTER.


The unit starts playback from the specified time.

(for DVD VIDEO)

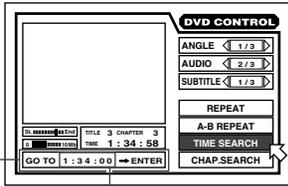

Selected time  
Message area

(for Audio CD)

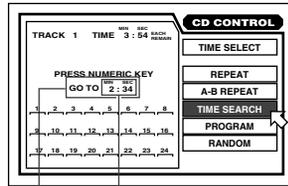


Selected time  
Message area

**Hints**

- "10" and "+10" buttons are not used with this function.
- You can specify the time in hour/minute/second format for DVD VIDEO discs, and in minute/second format for Audio and Video CD discs.


(for Video CD)

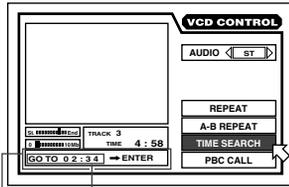

Selected time  
Message area

**Example (for DVD VIDEO)**


To playback from 2(H):34(M):00(S)

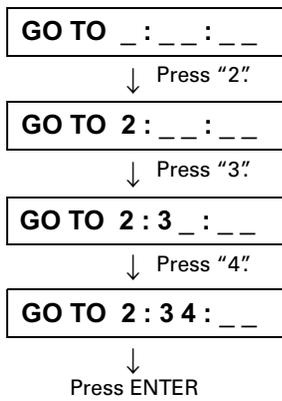

You do not have to press "0" to enter the trailing zeros (for the last two digits in the example above). Of course, it is possible to enter them.

**When you make a mistake**

Move the cursor to the incorrect value, then press the correct button to re-select the value.

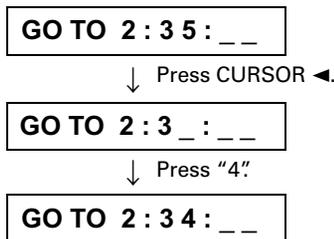


**NOTES**

- **When  appears on the TV screen in step 2:**  
The time you have selected is not contained on the disc, or the time search function does not work on the disc. Also note that the time search function does not work during Video CD playback with the PBC function.
- **To return to the regular display:**  
Press ON SCREEN.
- **The TIME SEARCH function cannot be used during program playback.**

**To locate a desired scene from the display [DIGEST]**




The unit can display the opening scene of each title or chapter on a DVD VIDEO or each track of a Video CD. You can select a desired scene from those displayed on the TV screen.

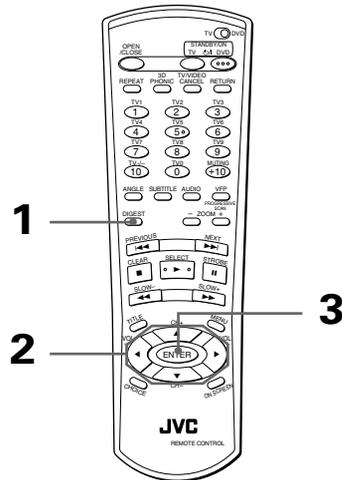

- For DVD VIDEO: While stopped or during playback
- For Video CD: While stopped or during playback without PBC function

**1** Press DIGEST.

Up to nine opening scenes are displayed.

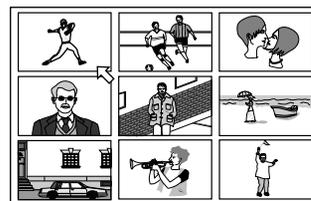

- While a DVD VIDEO disc is stopped:  
The opening scene of each title appears on the TV screen.
- During DVD VIDEO disc playback:  
The opening scene of each chapter in the current title appears on the TV screen.
- When a Video CD disc is loaded:  
The opening scene of each track appears on the TV screen.

**2** Use CURSOR ▲/▼/◀/▶ to move  to select the desired scene.

If there are more than 9 scenes, the digest screen will have more than one page. In this case, pressing ▶▶ advances to the next page, while pressing ◀◀ returns to the previous page.



Selected scene

**Hints**

- When the lower right scene is selected, pressing CURSOR ▶ advances to the next page if available. Similarly, when the upper left scene is selected, pressing CURSOR ◀ returns to the previous page (if available).
- Depending on discs, it may take some time until all scenes of the current page appear on the TV screen. If you want to turn the page, you do not have to wait to press ◀◀ or ▶▶ until all scenes appear.

**3** Press ENTER.

The unit starts playback from the selected scene.


**NOTE**

- With some discs, depending on the contents, it may take some time until all the scenes appear on the screen.

## Special picture playback

The unit provides special picture playback functions including Frame-by-frame, Strobe, Slow-motion and Zoom.

### To advance a still picture frame-by-frame

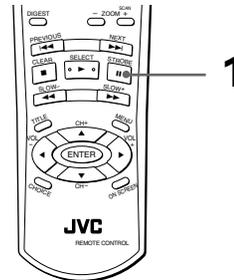


- While paused (still)

**1** Press **||**.

Each time you press **||**, the still picture advances to the next frame.

Pressing ▶ returns to normal playback.

### To display continuous still pictures [STROBE]

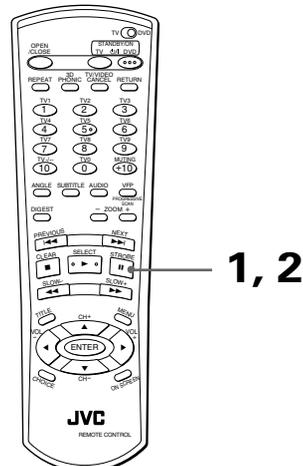


- During playback

**1** At the point you want to view as continuous photographs, press **||**.

The unit pauses playback.

**2** Press and hold **||** for more than 1 second.

Nine continuous still pictures appear on the TV screen.

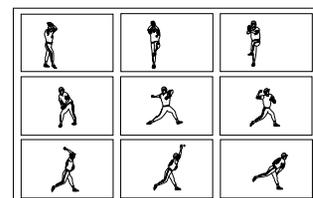

Advanced operations


**Hints**

- Pressing **II** when the nine still pictures are shown will advance pictures frame by frame.
- **To cancel strobe play**  
Press and hold **II** for more than 1 second.

**NOTE**

- If you press and hold **II** for more than 1 second during playback, nine still pictures also appear but they advance in normal playback speed.

**To playback in slow-motion [SLOW]**

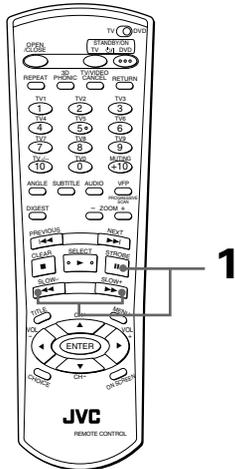

- During playback

**1** Press **II**, then use **◀/▶**.


To play forward slow-motion, press **▶▶**, and to play reverse slow-motion (for DVD VIDEO discs only), press **◀◀**. First, the unit plays the slowest speed, and each time you press the button, the playback speed increases.

- **To return to normal playback**  
Press **▶**.
- **To pause slow-motion playback**  
Press **II**.

**NOTES**

- The sound is muted during slow-motion playback.
- Reverse slow-motion playback is not possible for a Video CD.


**To zoom in/out [ZOOM]**

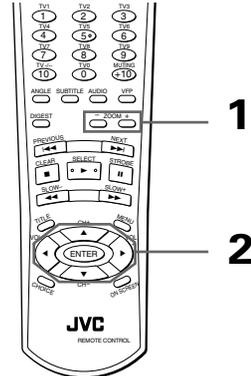

- During playback or while paused


**1** Press ZOOM + or -.

The unit zooms in by pressing ZOOM + or zooms out by pressing ZOOM -. Each time you press ZOOM +, the magnification is doubled (up to x 1024). Each time you press ZOOM -, the magnification is halved (down to x 1/8).

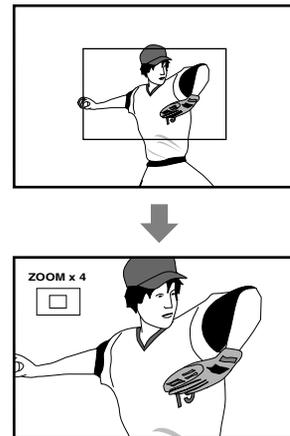

At the top-left of the screen, the information for the current magnification appears, as well as the zoomed-in position of the scene that can be moved by operating the next step.

**2** Use CURSOR **▲/▼/◀/▶** to move the zoomed position.

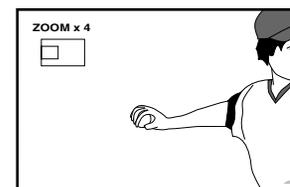

- **To return to normal playback**  
Press ENTER.

**NOTE**

- While zoomed, the picture may look coarse.


## Changing the playback order

You can play tracks on a disc inserted in the desired order (for Audio CD) or in random order (for Audio CD/Video CD).

### To playback in the desired order [PROGRAM]



You can play tracks on an Audio CD/Video CD disc in the desired order by using the Program function.

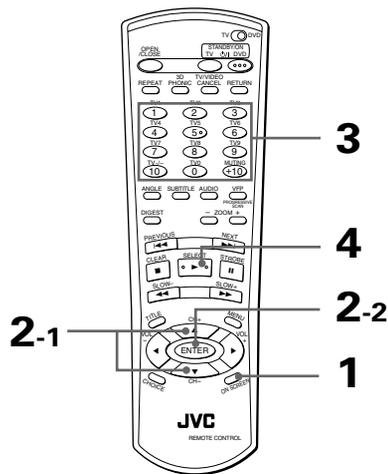

■ While stopped


#### 1 Press ON SCREEN.

The on-screen display appears on the TV screen.


#### 2 Use CURSOR ▲/▼ to move to [PROGRAM] and press ENTER.

The color of [PROGRAM] changes.

(for Audio CD)

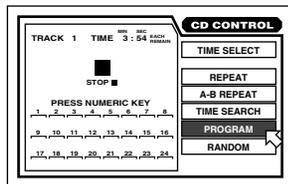

(for Video CD)

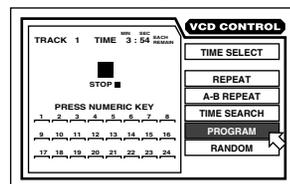


The program table appears on the on-screen display (as shown above).

The "PROGRAM" indicator lights in the display window on the front panel.

#### 3 Specify tracks in the desired order using the numeric buttons.

See page 12 for details about how to use the numeric buttons.

Up to 24 tracks can be programmed. You may select the same track more than once.

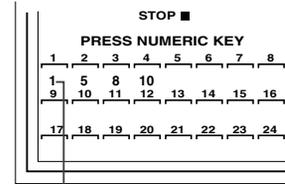

Selected track number

#### • If you specify a wrong selection

Press TV/VIDEO - CANCEL. The last selection programmed is erased.

#### • To clear the program

Press .

#### 4 Press to start program play.

When all of the programmed tracks have finished playback, the unit stops but the program remains.

#### NOTE

- During program playback, pressing skip to the next selection of the program. Pressing returns to the beginning of the current selection.

#### • To quit program playback

Press ENTER when points [PROGRAM]. [PROGRAM] returns to its original color.

(When playing back a Video CD, you have to press and then press ON SCREEN to bring up the on-screen display.)

#### • To clear the program

While stopped and the on-screen display is shown on the TV screen, move to [PROGRAM] and then press . All the programmed tracks are erased.




- While programming tracks, the current program step number and the selected track number are indicated in the display window.

Advanced operations

## To playback in random order [RANDOM]



You can play tracks on an Audio CD or Video CD disc in random order by using the Random function.

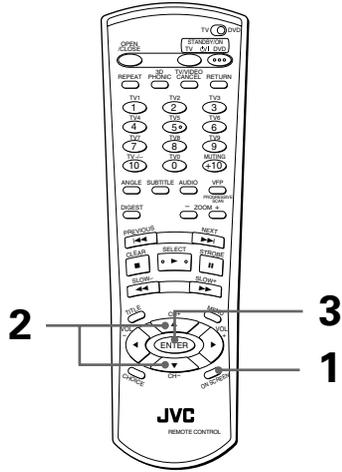


■ While stopped

**1** Press ON SCREEN.


The on-screen display appears on the TV screen.

**2** Use CURSOR ▲/▼ to move to [RANDOM].

(for Audio CD)

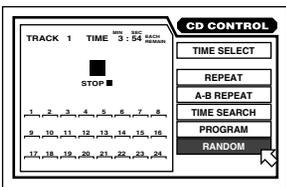

(for Video CD)

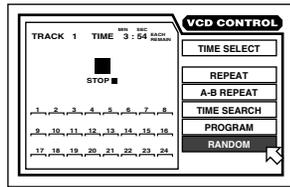

**3** Press ENTER.

The color of [RANDOM] changes.

The unit starts random playback.

The "RANDOM" indicator appears in the display window on the front panel. After playing all tracks of the disc, random playback ends.

Hints

- The same track will not be played back more than once during random play.
- During Audio CD playback, pressing ENTER when points [RANDOM] quits random mode and continues playback in the normal order.
- **To quit random playback in the middle**  
Press . The unit stops playback and quits the random playback mode.


## Repeat playback

You can repeat playback of the current selection or all disc contents (except DVD VIDEO). You can also repeat playback of a desired part.

### To repeat the current selection or all tracks [REPEAT]



#### Method 1

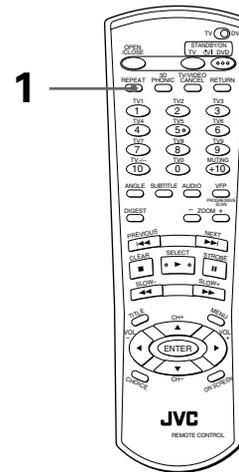


- For DVD VIDEO: During playback
- For Audio CD/Video CD: In any condition except Video CD playback with PBC

**1** Press REPEAT.

Each time you press REPEAT, the repeat mode toggles among All repeat, Repeat 1 and OFF. You can see the selected mode by icons in the display window on the front panel as below.


- : Repeats the current title for DVD VIDEO or the all tracks for Audio CD/Video CD.
- : Repeats the current chapter for DVD VIDEO or the current track for Audio CD/Video CD.
- No indication: The repeat mode is off.

 (Display window)



Repeat mode indicators

**Method 2**

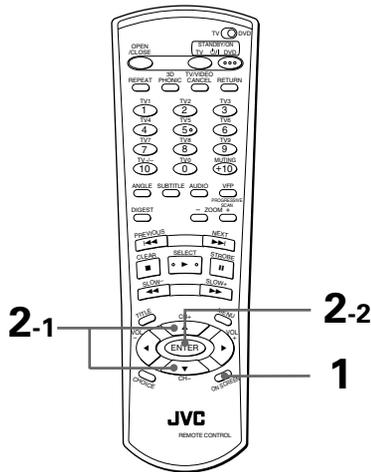

- For DVD VIDEO: During playback
- For Audio CD/Video CD: In any condition except Video CD playback with PBC


**1 Press ON SCREEN.**

The on-screen display appears on the TV screen.


**2 Use CURSOR ▲/▼ to move [REPEAT], then press ENTER.**

Each time you press ENTER, the repeat mode changes as follows depending on the disc type and unit's status:

• **During DVD VIDEO playback**

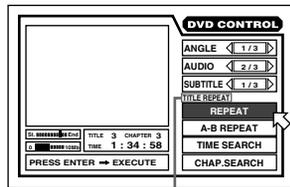


Selected repeat mode

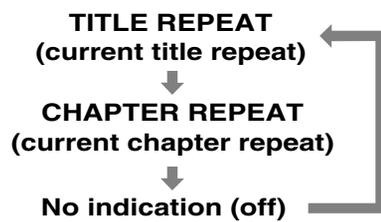


• **Audio CD/Video CD**

(for Audio CD)

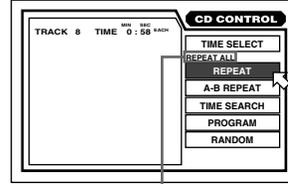


Selected repeat mode

(for Video CD)

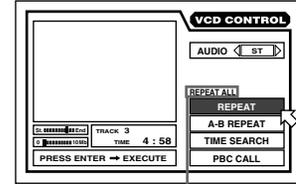

Selected repeat mode

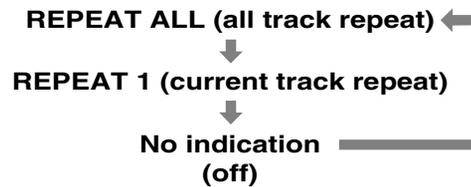

The selected mode is also shown on the on-screen display, however, it is shown in the different way from the display window. The following table shows the relation between them.

Disc type	On-screen display	Display window
DVD VIDEO	TITLE REPEAT	☺
	CHAPTER REPEAT	☺1
Audio CD/Video CD	REPEAT ALL	☺
	REPEAT 1	☺1

• **To stop repeat playback**

Press ■ .

When a DVD VIDEO disc is set, the unit stops playback and quits the repeat mode.

When an Audio CD or Video CD disc is set, the unit stops playback but does not quit the repeat mode.

• **To quit repeat playback**

Perform one of the following:


- \* Press REPEAT until the repeat mode indicator goes off in the display window.
- \* When [REPEAT] points [REPEAT], press ENTER repeatedly until [REPEAT] returns to its original color.

**NOTES**

- When the program playback mode is active with an Audio CD or Video CD, the repeat mode changes in the same manner (i.e. toggles among REPEAT ALL, REPEAT 1 and no indication). Note that, however, in the "REPEAT ALL" mode the unit repeats all the programmed tracks, instead of all tracks on the disc.
- If ☹ appears when pressing ENTER in step 2 above during DVD VIDEO playback  
You cannot repeat the title or chapter because of the disc contents.
- Repeat playback function cannot be used during Video CD playback with PBC function.
- To turn off the on-screen display  
Press ON SCREEN.

Advanced operations

**To repeat a desired part  
[A-B REPEAT]**

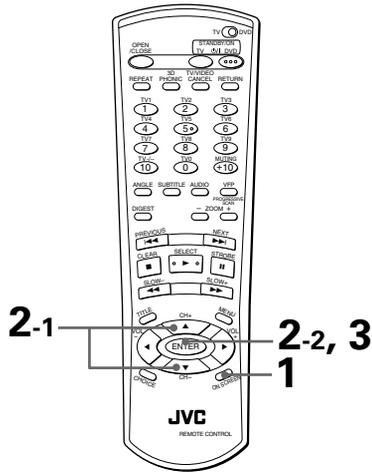

**NOTES**

- To turn off on-screen display  
Press ON SCREEN.
- If appears when pressing ENTER in step 2 during DVD VIDEO playback


You cannot repeat the selected portion because of the disc contents.

■ During playback

- 1 Press ON SCREEN.**  
The on-screen display appears on the TV screen.
- 2 Use CURSOR ▲/▼ to move to [A-B REPEAT], then press ENTER at the beginning of the part you want to repeat (point A).**  
The color of [A-B REPEAT] changes.
- 3 Press ENTER at the end of the part you want to repeat (point B).**  
The unit locates "A" and starts repeat playback between "A" and "B."


Advanced operations

(for DVD VIDEO)

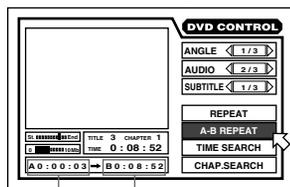


Point A Point B

(for Audio CD)

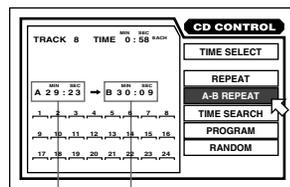

Point A Point B

(for Video CD)

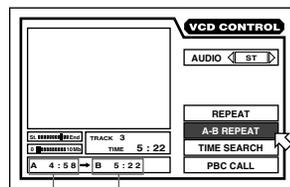

Point A Point B

- **To quit A-B repeat playback**  
Press . The unit stops playback and quits A-B repeat mode.

Hints

- During playback, pressing ENTER when is pointed at [A-B REPEAT] quits A-B repeat mode and continues playback.
- You can also quit A-B repeat mode by pressing or .

## Selecting a scene angle of DVD VIDEO

You can enjoy a variety of scene angles if the DVD VIDEO disc contains "multi-angle" parts, where multiple cameras were used to shoot the same scene from different angles.


### Hints

- At the beginning of a "multi-angle" part,  appears on the TV screen.

### To select a scene angle from the normal screen [ANGLE]



#### From normal screen

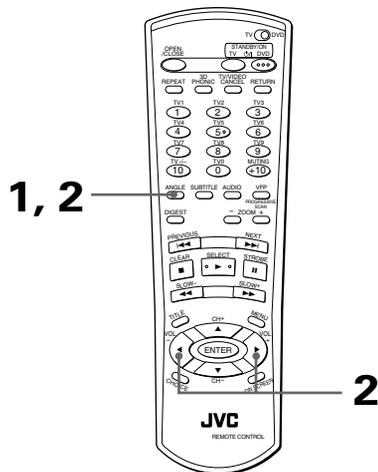

- During DVD VIDEO playback


#### 1 Press ANGLE.

The Angle selection display appears on the TV screen.



#### 2 Use ANGLE or CURSOR to select the desired angle.


Each time you press ANGLE or CURSOR  , the angle changes.

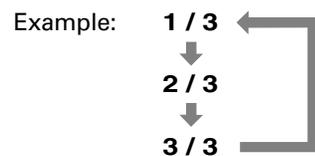

### NOTES

- The Angle selection display will automatically disappear if you do not change the angle for several seconds.
- To turn off the Angle selection display manually, press ENTER.
- When  appears on the TV screen  
The current scene is not recorded from multiple angles.

#### From on-screen display

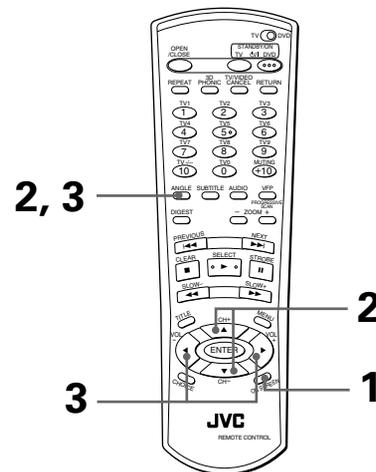


- During DVD VIDEO playback


#### 1 Press ON SCREEN.

The on-screen display appears on the TV screen.

#### 2 Use CURSOR or ANGLE to move to [ANGLE].

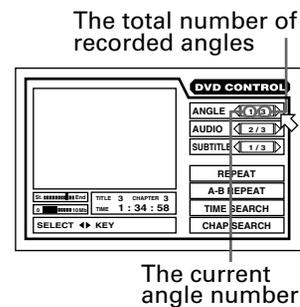

#### 3 Use CURSOR or ANGLE to select the desired angle number.

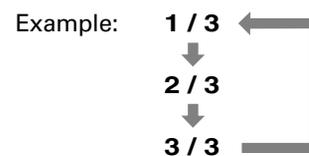


### NOTES

- To turn off the on-screen display  
Press ON SCREEN.
- When  appears on the TV screen  
The current scene is not recorded from multiple angles.

Advanced operations


## To select a scene angle from the angle list display [ANGLE]

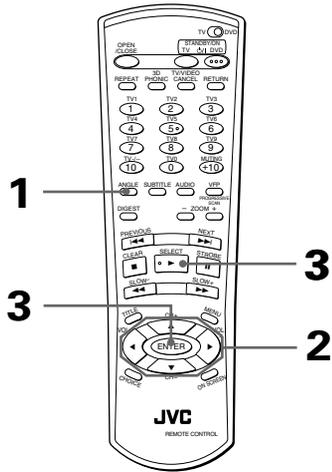

■ During DVD VIDEO playback

**1** Press and hold ANGLE for more than 1 second.

Up to nine camera angles recorded on a disc appear on the TV screen.

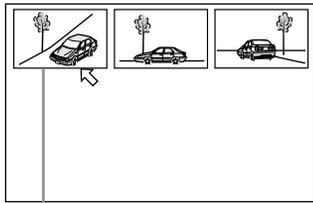

The selected camera angle

**2** Use CURSOR  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$  to select the desired angle.

**3** Press ENTER or  $\blacktriangleright$ .

The unit starts playback by the selected angle on the full-sized screen.

**NOTES**

- When  $\odot$  appears on the TV screen in step 1: The current scene is not recorded from multiple angles.
- During the operation above, audio is muted.


## Changing the language and sound

For DVD VIDEO discs, you can select the subtitle language, as well as the audio language/sound included on a disc. For Video CD discs, you can select the audio channel(s).

### To select the subtitle language [SUBTITLE]




From normal screen

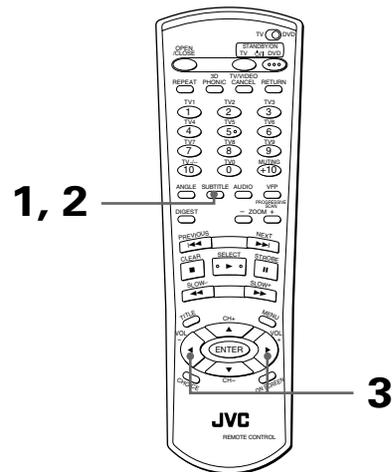

■ During DVD VIDEO playback

**1** Press SUBTITLE.


The Subtitle selection display appears on the TV screen.

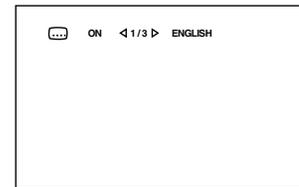


**2** To turn the subtitle on and off, press SUBTITLE.

**3** To select the desired subtitle language, use CURSOR  $\blacktriangleleft/\blacktriangleright$ .

Each time you press CURSOR  $\blacktriangleleft/\blacktriangleright$ , the subtitle language changes.

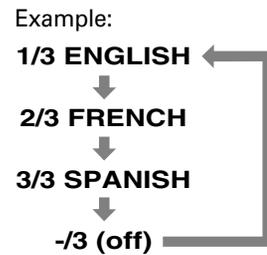


**From on-screen display**

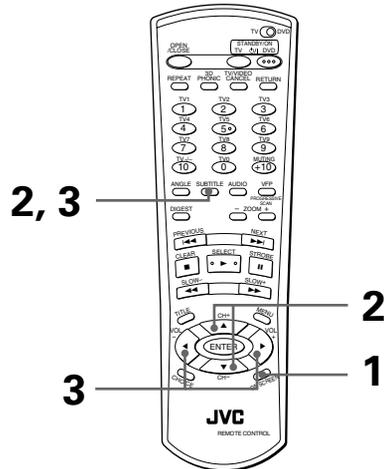

■ During DVD VIDEO playback

- 1** Press ON SCREEN.  
The on-screen display appears on the TV screen.
- 2** Use CURSOR ▲/▼ or SUBTITLE to move to [SUBTITLE].

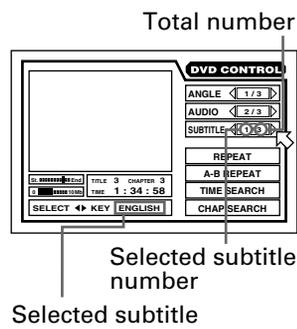

- 3** Use CURSOR ◀/▶ or SUBTITLE to select the desired subtitle.  
Each time you press CURSOR ◀/▶ or SUBTITLE, the subtitle changes.

**NOTES**

- For DVD VIDEO, the selected language may be abbreviated on the TV screen. See "Appendix A: Table of languages and their abbreviations" at the end of this manual.
- The Subtitle selection display will automatically disappear if you do not change the subtitle for several seconds.
- To turn off the Subtitle selection display manually, press ENTER.
- To turn off the on-screen display:  
Press ON SCREEN.
- When  appears on the TV screen:  
You cannot select the subtitle.


**To change the audio language or sound [AUDIO]**

English



By AUDIO selection, you can choose the audio language of movies or enjoy KARAOKE with or without the vocal.

**From normal screen**

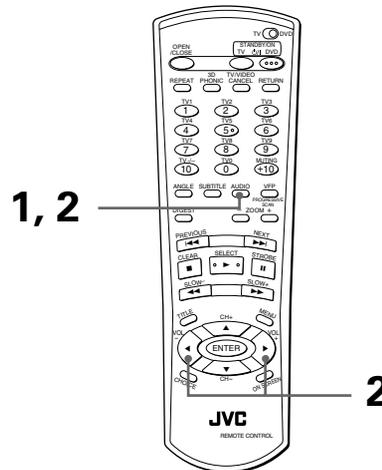


■ During playback

- 1** Press AUDIO.  
The Audio selection display appears on the TV screen.



- 2** Use AUDIO or CURSOR ◀/▶ to select the desired audio.

**From on-screen display**

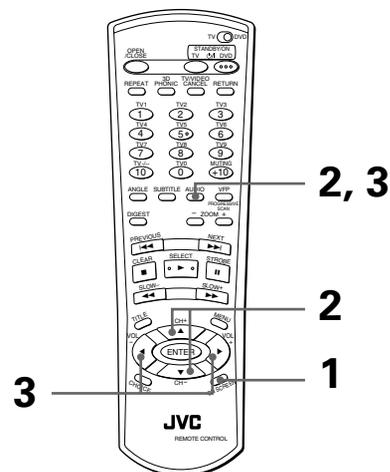


■ During playback

- 1** Press ON SCREEN.  
The on-screen display appears on the TV screen.


Advanced operations

**2** Use CURSOR ▲/▼ or AUDIO to move [AUDIO].

(for DVD VIDEO)

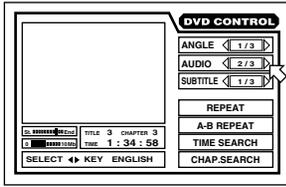

(for Video CD)

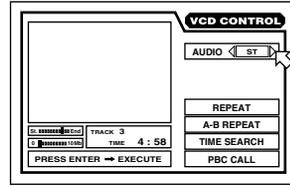


**3** Use CURSOR ◀/▶ or AUDIO for audio selection

Each time you press CURSOR ◀/▶ or AUDIO, the audio changes.

See the above examples for audio selection.


• For DVD VIDEO

Each time you press AUDIO or CURSOR ◀/▶, the audio language or sound changes.

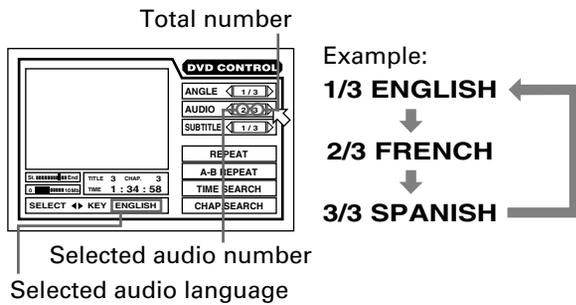

• For Video CD

Each time you press AUDIO or CURSOR ◀/▶, the playback audio changes as follows.

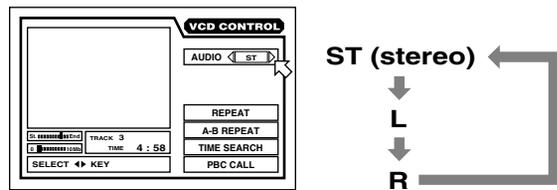

**NOTES**


- For DVD VIDEO, the selected language may be abbreviated on the TV screen. See "Appendix A: Table of languages and their abbreviations" at the end of this manual.
- The Audio selection display will automatically disappear if you do not change the audio for several seconds.
- To turn off the Audio selection display manually, press ENTER.
- To turn off the on-screen display: Press ON SCREEN.
- When ⊙ appears on the TV screen (for a DVD VIDEO disc): You cannot select the audio.

## Miscellaneous functions

### To adjust the picture character [VFP]




You can adjust the picture character according to the type of programming, picture tone or personal preferences.

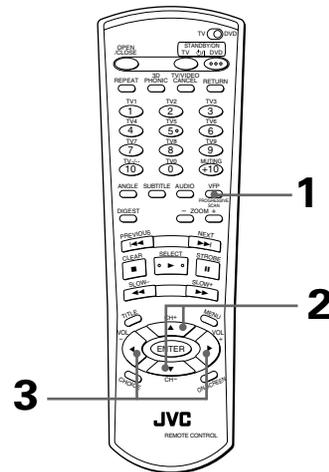

■ During playback

**1** Press VFP - PROGRESSIVE SCAN to select the desired preset.

Each time you press the button, the preset changes as follows:

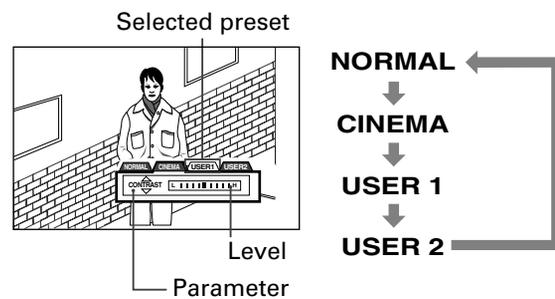

"NORMAL" and "CINEMA" are factory presets and you cannot change parameters for them.

While selecting "USER 1" or "USER 2", you can adjust parameters that affect the picture character and store the settings as the user preset. See the step below.

**2** To define a user setting, select a parameter to be edited using CURSOR ▲/▼ from the followings.

- **BRIGHTNESS**  
Controls the brightness of the screen.
- **CONTRAST**  
Controls the contrast of the screen.
- **SHARPNESS**  
Controls the sharpness of the screen.

- **GAMMA**  
Controls the brightness of neutral tints with maintaining the brightness of dark and bright portions.
- **TINT**  
Controls the tint of the screen.
- **COLOR**  
Controls the color depth of the screen.
- **Y DELAY**  
Controls the color gap of the screen.

**3** Adjust the level of the parameter using **CURSOR** ◀/▶.

Moving the adjusting bar to the left reduces the effect, while moving the bar to the right enhances the effect.

**NOTE**

- The number of setting steps depends on parameters.


**Hints**

- The VFP screen disappears if no operations are made for more than 10 seconds. You can also turn off the VFP screen manually by pressing ENTER.

**To simulate surround sound [3D PHONIC]**



Using the 3D PHONIC function, you can get a simulated surround effect from your stereo system.

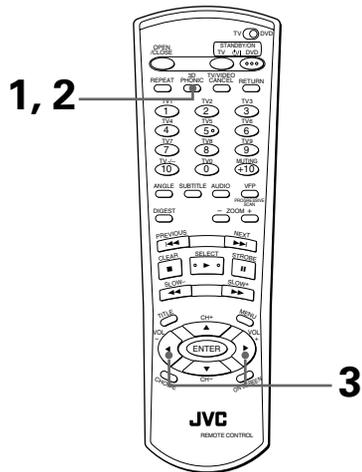


■ During playback

**1** Press 3D PHONIC.

The 3D PHONIC display appears on the TV screen.

**2** Select the desired mode by using 3D PHONIC.

Each time you press the 3D PHONIC button, the 3D PHONIC mode changes as follows:

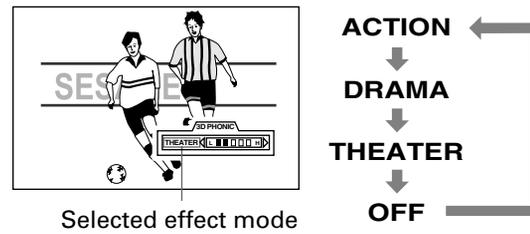

- **ACTION**  
Suitable for action movies and sports programs in which sounds dynamically move.
- **DRAMA**  
Natural and warm sound. You can enjoy movies in a relaxed mood.
- **THEATER**  
You can enjoy sound effects like in a major theater in Hollywood.

**3** Press **CURSOR** ◀/▶ to adjust the effect level.

You can adjust the effect level in 5 steps.



Effect level

- Toward L: Reduces the effect.
- Toward H: Enhances the effect.

**Hints**

- To turn off the 3D PHONIC screen, press ENTER. The 3D PHONIC screen disappears if no operations are made for more than 10 seconds.

**NOTES**


- The 3D PHONIC function works correctly only when playing back a DVD VIDEO disc recorded with the Dolby Digital. With other sources, you cannot get any effect if you press the 3D PHONIC button.
- When playing back a DVD VIDEO disc recorded with the Dolby Digital that does not contain the rear signal, you cannot get a correct 3D Phonic sound though you can change the 3D PHONIC setting.
- The 3D PHONIC function does not affect the Dolby Digital bitstream signal from the DIGITAL output jack.
- When you set the 3D PHONIC function is active, the "DOWN MIX" and "COMPRESSION" setting in the "PREFERENCE 2" display are disabled.

Advanced operations

## To check the disc time [TIME SELECT]



You can choose the time display mode for an Audio CD or Video CD disc in the display on the front panel and in the on-screen display.

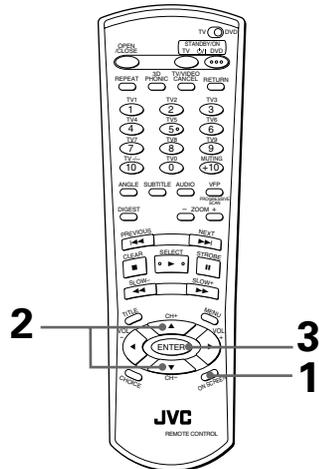


- For Audio CD: During playback or while stopped
- For Video CD: While stopped

**1** Press ON SCREEN.

The on-screen display appears on the TV screen.


**2** Use CURSOR ▲/▼ to move to [TIME SELECT].

(for Audio CD)

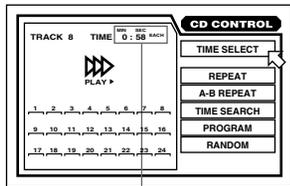

Time display

(for Video CD)

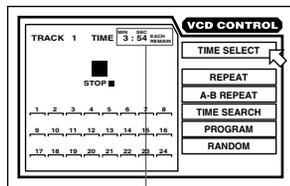


Time display


**3** Press ENTER.

Each time you press ENTER, the time mode changes as follows:

- During playback (for Audio CD)

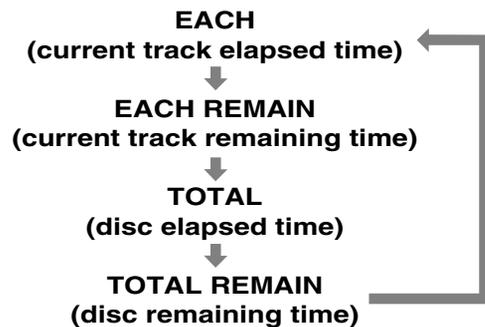


- While stopped

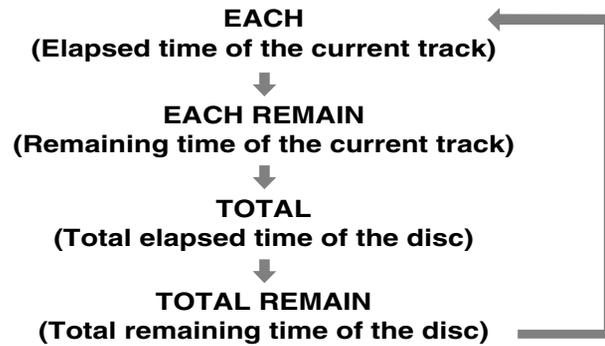

- When you select "EACH REMAIN" while stopped, you can change the track by pressing or .

## Changing the brightness of the display window

You can dim the brightness of the display window.

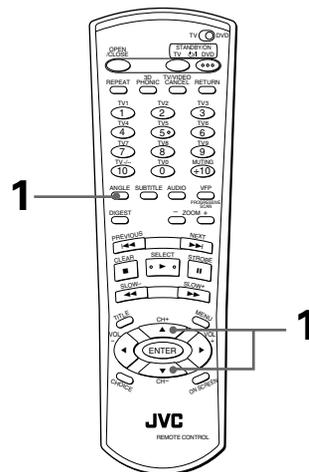

- When no disc is inserted or while stopped

**1** Press CURSOR ▲ or ▼ while holding down ANGLE.

You can select the brightness of the display window from among three levels.

# MP3 disc playback

This unit can playback CD-R/RW discs recorded by the MP3 format (we refer to those discs as MP3 discs in this manual).

Though available functions with MP3 discs are limited, operations for the available functions are similar to those with Audio CD discs.


## What is MP3?

MP3 is the abbreviation of "MPEG1 Audio Layer 3". MPEG Audio is a compression specification that compresses the audio portion only. This image compression method is used in DVD or Video CD, etc. The audio data has been compressed into about 1/10.

## About MP3 disc

On an MP3 disc, each material (song) is recorded on a Track (file). Tracks are usually grouped into a "Group" (folder) by category, by artist, etc. In addition, Groups can also be members of Groups (Groups' Group), creating hierarchical Group layers. If you are familiar with personal computers, you may easily understand the hierarchical Group layer construction of MP3 discs because it is similar to the folder layer construction of computers.

This unit can handle up to 100 Tracks per Group, up to 100 Groups per Group layer and up to 10 Group layers. If a disc has more Tracks, Groups or Group layers than the above, the unit does not recognize those exceeding the maximum numbers and cannot playback them.

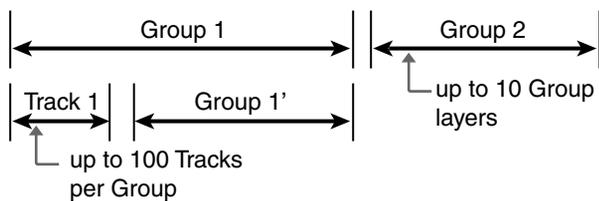

### NOTES for making a private MP3 disc using a CD-R/CD-RW disc:

- Select "ISO 9660" as the disc format.
- Do not select the "multi-session" recording.
- Finalize the disc after completing recording.

### NOTES


- The unit does not support "packet write" discs.
- Some disc may not be played back because of the disc characteristics or recording condition.
- The unit does not output a digital audio signal from DIGITAL OUT when playing back an MP3 disc.
- You cannot playback Tracks in the desired (programmed) or random order.
- The screen saver function is not active with an MP3 disc, as with an Audio CD.

## Operations

English

### Basic operations

MP3

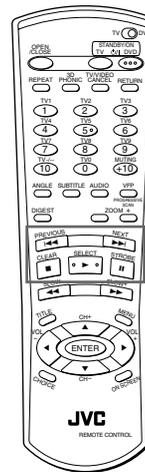

Basic control buttons

The following table shows basic functions of basic control buttons.


As you can see, all buttons below function the same as with Audio CD discs.

Buttons	Functions
	Starts playback
	Stops playback completely
	Pauses playback temporarily
	Skips back or forward a Track in the group.*

\* You cannot skip a Track across a Group.

### NOTES

- The current Track numbers are shown on the display window in the following manner.

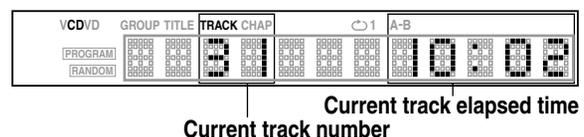


- Only MP3 files are shown on the display window as a track.
- Group number is not shown in the display window. When selecting such a track, "--" is shown, instead of the Track number, in the display window.
- You cannot advance or reverse playback of an MP3 disc rapidly.
- You cannot see any other time information but the current track elapsed time.

MP3 disc playback


## Specifying the desired Group and Track

MP3

When loading an MP3 disc, after the disc contents are read, the MP3 CONTROL display automatically appears on the TV screen. You can specify the desired Group and Track for playback via this display.

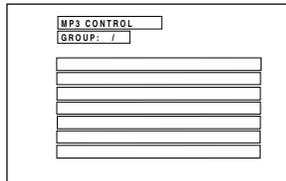

You can specify the desired Group/Track from the display by the following procedure.

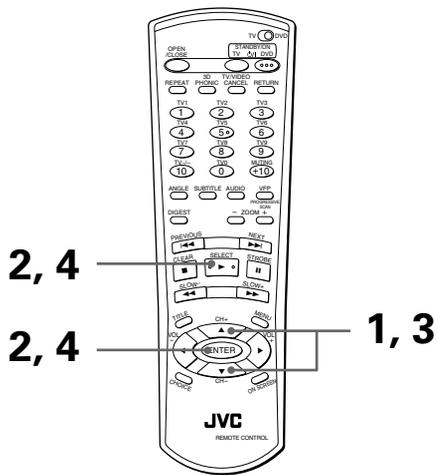

■ When the MP3 selection display is shown while stopped

**1** Highlight a desired Group using CURSOR ▲/▼.

▲/▼.

**2** Press ENTER or ►.

The highlighted Group is selected, and contents of the Group is shown.

- If tracks in the selected Group are shown, go to the next step.
- If there are one or more Groups in the selected Group, repeat steps 1 and 2 until tracks in the selected Group are shown.

**3** Highlight a desired Track using CURSOR ▲/▼.

▲/▼.



Selected Group

Selected Track

**4** Press ENTER or ►.

The unit starts playback from the specified Track. During playback, the bottom row of the display shows something like below.

Track 1/12 01 : 23 : 45

Track time

The number of tracks in the current group

Current track number


### NOTES

- You can select (highlight) a track which does not belong to any Group (if there is any). In this case, pressing ENTER or ► immediately starts playback.
- Only MP3 files are shown on the MP3 CONTROL display.
- The order of Groups/Tracks shown in the MP3 CONTROL display may differ from the order shown on your personal computer when you set the disc on your computer.

## Repeat playback

MP3

You can repeat playback of the current track or group.

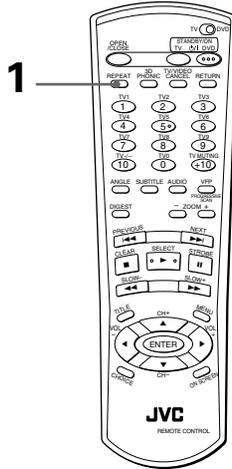

### ■ During playback or while stopped

#### 1 Press REPEAT.

Each time you press REPEAT, the repeat mode toggles among current group repeat, current track repeat and off.

You can see the selected mode by icons in the display window on the front panel as below.

- ↻: Repeats the current group on the disc.
- ↻1: Repeats the current track.
- No indication: The repeat mode is off.

#### • To stop repeat playback

Press ■ .

#### • To quit repeat playback

Press REPEAT as many times until no repeat icon is shown on the display window.

#### **NOTE**

- You cannot repeat all contents on a disc.

MP3 disc  
playback


# Initial settings

## Selecting preferences

You can set various preferences for playback via two preference displays.

### How to set preferences

You can bring up a preference display at any time except the unit is turned off.

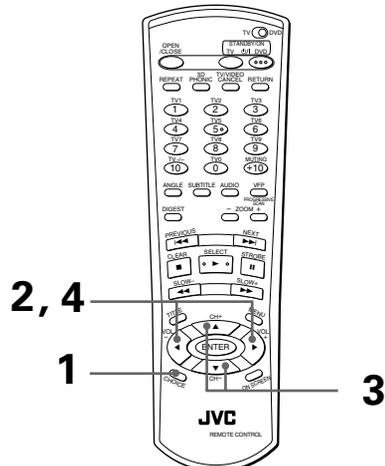


■ In any condition except the unit is turned off.

#### 1 Press CHOICE.


One of the Preference on-screen displays appears on the TV monitor.

You can see two tabs for the displays (PREFERENCE 1 and PREFERENCE 2) at the top.

#### 2 Select the appropriate tab using CURSOR ◀/▶ when points either one of the tabs.

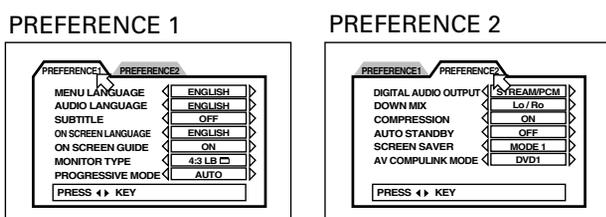

#### 3 Move to select the item you want to edit by using CURSOR ▲/▼.

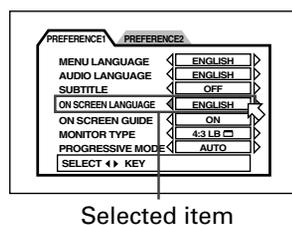

#### 4 Press CURSOR ◀/▶ to select from options.

- For details about each setting, see the following paragraphs:

### NOTES

- To return to the normal screen: Press CHOICE.
- If you bring up a PREFERENCE display during playback, the unit memorizes the current playback position, and resumes playback from that position later when dismissing the PREFERENCE display.


## Language and display preference

The "PREFERENCE 1" display handles preferences related to language and display.

### MENU LANGUAGE

You can select the default "display" language to be displayed if it is contained on a DVD VIDEO disc.

Each time you press CURSOR ▶, the language setting changes in the following order:

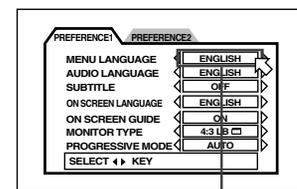

Selected language

**ENGLISH → SPANISH → FRENCH → CHINESE → GERMAN → ITALIAN → JAPANESE → language code from AA to ZU**

(See "Appendix A: Table of languages and their abbreviations" at the end of this manual.)


Pressing CURSOR ◀ changes the language setting in the reverse order of the above.

- \* If the selected language is not recorded, the disc's default display language will be displayed.

### AUDIO LANGUAGE

You can select the default audio language to be played if it is contained on a DVD VIDEO disc.

Each time you press CURSOR ▶, the language setting changes in the following order:

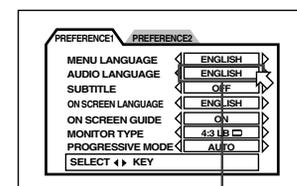

Selected language

**ENGLISH → SPANISH → FRENCH → CHINESE → GERMAN → ITALIAN → JAPANESE → language code from AA to ZU**

(See "Appendix A: Table of languages and their abbreviations" at the end of this manual.)


Pressing CURSOR ◀ changes the language setting in the reverse order of the above.

- \* If the selected language is not recorded, the disc's default audio language will be played.

## SUBTITLE

You can select the default subtitle language to be displayed if it is contained on a DVD VIDEO disc.

Each time you press CURSOR **▶**, the language setting changes in the following order:

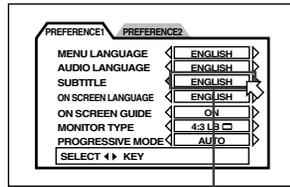

Selected language

**OFF → ENGLISH → SPANISH → FRENCH → CHINESE → GERMAN → ITALIAN → JAPANESE → language code from AA to ZU**

(See "Appendix A: Table of languages and their abbreviations" at the end of this manual.)


Pressing CURSOR **◀** changes the language setting in the reverse order of the above.

\* If the selected language is not recorded, the disc's default subtitle language will be displayed.


## ON SCREEN LANGUAGE

You can select the on-screen display language of the unit.

Each time you press CURSOR **▶**, the language setting changes as follows:

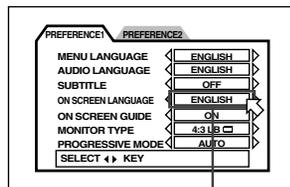

Selected language

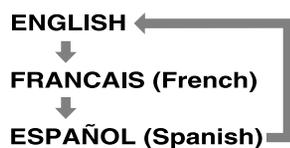

English    ON SCREEN LANGUAGE ◀ ENGLISH ▶


French    LANGUE D'ECRAN ◀ FRANCAIS ▶

Spanish    IDIOMA EN PANTALLA ◀ ESPAÑOL ▶

Pressing CURSOR **◀** changes the language setting in the reverse order of the above.

## ON SCREEN GUIDE

The unit can display "on-screen guide" icons or characters on the picture, which show what is happening to the disc or the unit.

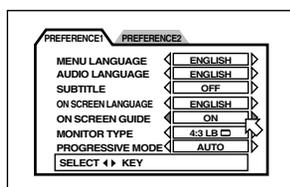

Examples of "on-screen guide" icons or characters:




- **ON**  
The on-screen guide will be displayed.
- **OFF**  
The on-screen guide will not be displayed.

English


## MONITOR TYPE

You can select the monitor type to match your TV when you playback DVD VIDEO discs recorded for wide screen televisions.

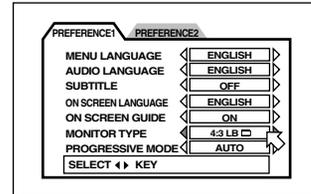

- **4:3 LB**  (Letter Box Conversion)

Should be selected when you connect a normal TV to the unit. When you play a wide picture recorded on a DVD VIDEO disc, the picture is displayed with bands across the upper and lower portions of the screen.

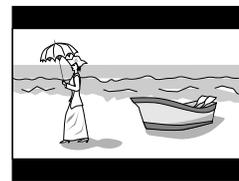


- **4:3 PS**  (Pan Scan Conversion)

Should be selected when you connect a normal TV to the unit. When you play a wide picture recorded on a DVD VIDEO disc, a portion of the picture is automatically cut off from the left and right sides of the image. Depending on the disc, it may not be possible to playback in this mode. In that case, the picture is played back as in 4:3 LB  mode.



- **16:9 AUTO** (Wide Television screen)

Should be selected when you connect a wide-screen TV to the unit.

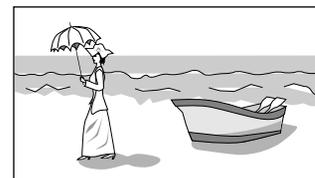

Initial settings

- **16:9 NORMAL** (Wide Television screen)

Should be selected when you connect the unit to a wide-screen TV whose aspect ratio is fixed to 16:9 (the unit automatically adjusts the screen width of the output signal correctly when playing back a "4:3" source).


### NOTES

- If a disc does not support "4:3 Pan Scan", the letter box screen appears even if you set the MONITOR TYPE to "4:3 LB ".
- If you playback a "4:3" DVD VIDEO source with the "16:9 NORMAL" mode, the picture character slightly changes due to the process for converting the picture width.

Initial settings

**PROGRESSIVE MODE**

You can select the progressive mode from the following options.

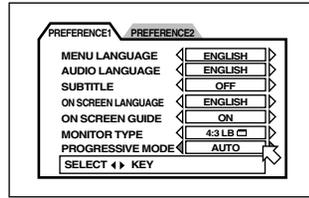

- **AUTO**  
The unit recognizes the picture type (film or video source) of the current disc according to the disc information.
- **VIDEO 1**  
Suitable for playing back a video source disc with static (inactive) pictures.
- **VIDEO 2**  
Suitable for playing back a video source disc with dynamic (active) pictures.
- **FILM**  
Suitable for playing back a film or progressive source disc.
- **SMART**  
Used to playback a disc containing both video and film source materials. The unit recognizes the picture type according to the current data.

\* Normally, set the PROGRESSIVE MODE to "AUTO"  
\* Some DVD discs may not be played back correctly with the "AUTO" mode. If the playback picture is unclear or noisy with a particular DVD Video disc, try to change the mode.

**NOTE**


- When playing back a film-source DVD Video disc with the "PROGRESSIVE MODE" set to "FILM", "SMART" or "AUTO" and the progressive scan mode is active, the PROGRESSIVE indicator on the front panel lights. (See page 15.)

**Audio and system preference**

The "PREFERENCE 2" display handles preferences related to audio and system.

**DIGITAL AUDIO OUTPUT**

To connect the unit's digital output to an external device equipped with a digital input, this item must be set correctly.

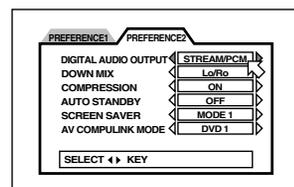

- **PCM ONLY**  
Should be selected when you connect the DIGITAL OUT jack of the unit to the linear PCM digital input of other audio equipment.

- **STREAM/PCM**  
Should be selected when you connect to the digital input of an amplifier with a built-in DTS, Dolby Digital, or MPEG multichannel decoder.
- **DOLBY DIGITAL/PCM**  
Should be selected when you connect to the digital input of a Dolby Digital decoder, or an amplifier with a built-in Dolby Digital decoder.

The following chart shows the relationship between types of playback discs and output signals.

Playback discs	Output		
	STREAM/PCM	DOLBY DIGITAL/PCM	PCM ONLY
DVD with 48/44.1 kHz, 16 bit linear PCM	48/44.1 kHz, 16 bit, stereo linear PCM	←	←
DVD with 48/44.1 kHz, 20/24 bit linear PCM	48/44.1 kHz, 16 bit, stereo linear PCM*	←	←
DVD with 96 kHz, linear PCM	48 kHz, 16 bit, stereo linear PCM*	←	←
DVD with DTS	DTS bitstream	48 kHz, 16 bit, stereo linear PCM*	←
DVD with Dolby Digital	Dolby Digital bitstream	←	48 kHz, 16 bit, stereo linear PCM*
DVD with MPEG multichannel	MPEG bitstream	48 kHz, 16 bit, stereo linear PCM	←
Video CD	44.1 kHz, 16 bit, stereo linear PCM	←	←
Audio CD	44.1 kHz, 16 bit, stereo linear PCM	←	←
Audio CD with DTS	DTS bitstream	44.1 kHz, 16 bit, stereo linear PCM	←
CD -R/RW with MP3	No output	←	←

\* With some DVD VIDEO discs that are not fully copy-protected, a 20 or 24 bit digital signal may be output.

**NOTES**

- The unit does not provide the DTS decoding function.
- When playing a DVD VIDEO or Audio CD disc with DTS, use a DTS decoder to get correct signals from your speakers.

## DOWN MIX

To playback a DVD VIDEO disc recorded with surround multichannel audio correctly, the DOWN MIX setting must be properly made according to your audio system.

Note that this setting affects only the output signal from the ANALOG AUDIO output jacks when playing back a DVD VIDEO disc recorded with surround multichannel audio.

- **Lt/Rt**  
Should be selected when you enjoy multichannel surround audio by connecting the unit's ANALOG AUDIO output to a surround decoder.
- **Lo/Ro**  
Should be selected when you enjoy conventional 2-channel stereo audio by connecting the unit's AUDIO output to a stereo amplifier/receiver or television set, or when you duplicate audio of a DVD VIDEO disc recorded with surround audio to your MD, cassette, etc.

### NOTE

- The Down mix function does not work when the 3D PHONIC function is activated.

## COMPRESSION




The compression function suppresses the dynamic range of 2-channel audio output signals. This function is always active when playing back a 5.1-channel source.

- **ON**  
The compression function is always active regardless of sources.
- **OFF**  
The compression function is inactive when playing back a one- or two-channel source.

## AUTO STANDBY

When the unit is stopped for more than 30 minutes or 60 minutes, the unit enters standby mode automatically.

- **60**  
Time is set to 60 minutes.
- **30**  
Time is set to 30 minutes.
- **OFF**  
The auto standby function is off.

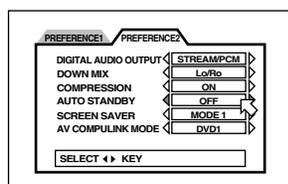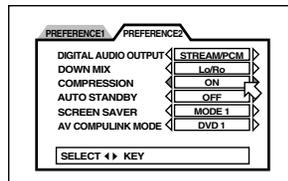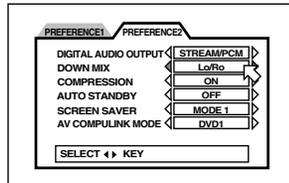

## SCREEN SAVER

A television monitor screen may be burned out if a static picture is displayed for a long time. To prevent this, the unit automatically activates the screen saver function if a static picture, such as an on-screen display or menu, is displayed for over 5 minutes.

- **MODE 1**  
The current picture gets dark.
- **MODE 2**  
The "screen saver" picture appears and its brightness changes.
- **OFF**  
The screen saver function is off.



### NOTE

- The monitor screen of a projector or projection TV is easily burned out if the screen saver mode is set to OFF and a static picture is displayed for a long time.

## AV COMPULINK MODE

If you use the AV COMPU LINK system, you must set this item correctly.


Select from the three options: "DVD1", "DVD2" and "DVD3" according to the equipment to be connected. See page 51.

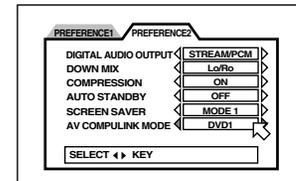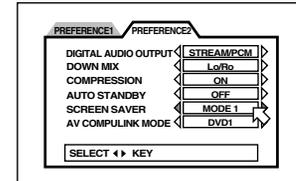

## Limiting playback by children


This function restricts playback of DVD VIDEO discs which contain violent (and other) scenes according to the level set by the user. For example, if a movie which includes violent scenes supports the parental lock feature, such scenes which you do not want to let children view can be cut or replaced with other scenes.

### To set Parental Lock for the first time [PARENTAL LOCK]

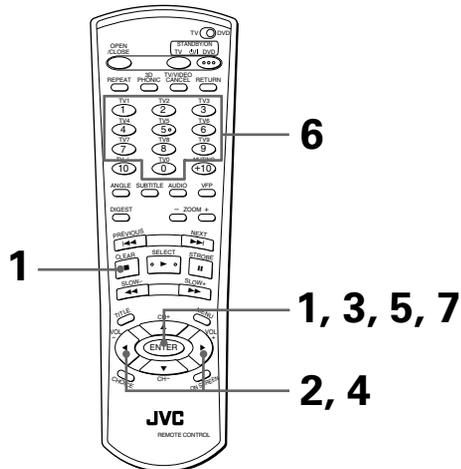


■ While a DVD VIDEO disc is stopped or no disc is inserted

- 1** Press ENTER while holding down ■ on the remote control unit.  
The Parental Lock on-screen display appears on the TV screen.  
↔ points [Country Code].
- 2** While ↔ points [Country Code], use CURSOR ◀/▶ to select the "US" for country code.  
The country code whose standards were applied to rate the DVD VIDEO disc should be selected. See "Appendix B: Country code list for parental lock"

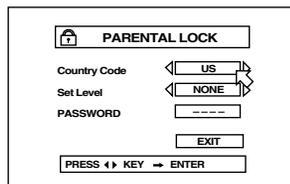


- 3** Press ENTER.  
↔ moves to [Set Level].

- 4** While ↔ points [Set Level], use CURSOR ◀/▶ to select the parental lock level.

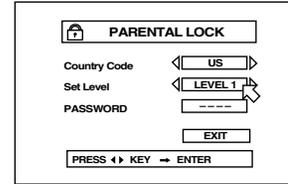


Each time you press CURSOR ◀/▶, the parental level changes as follows:

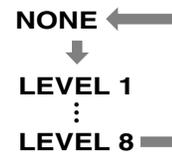

#### Hints

- "LEVEL 1" is the strictest level. "NONE" means no restriction. Discs rated higher than the selected level are restricted.

- 5** Press ENTER.  
↔ moves to [PASSWORD].
- 6** Enter your 4-digit password using the numeric buttons (0 to 9).

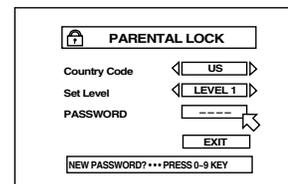

- 7** Press ENTER.  
The parental level and password are set.  
↔ moves to [EXIT].  
Pressing ENTER again returns to the opening display.


#### Hints

- If you enter an undesired password in step 6 above, reenter the password before pressing ENTER.

## To change the settings [PARENTAL LOCK]



You can change the Parental lock settings later.

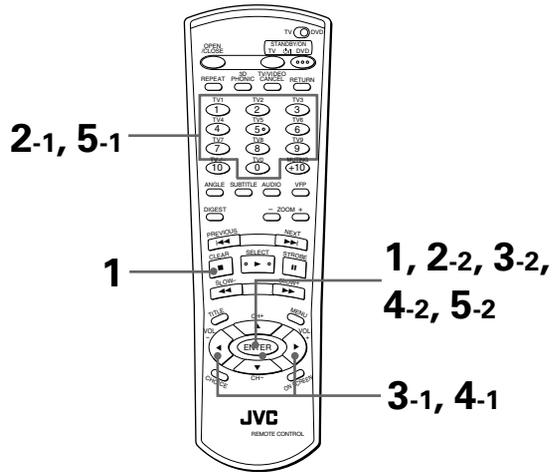

**5** Enter the password using the numeric buttons (0 to 9) and press ENTER.

↩ moves to [EXIT].

The password entered in the above step becomes the new password. If you do not change the password, enter the same password as in the step 2. Even if you want to change only the country code and/or parental level, do not forget to enter the password after changing the country code and/or parental level. Otherwise, the new country code and/or parental level will not become effective. Pressing ENTER again returns to the opening display.

English

### NOTES


- When you enter the wrong password more than 3 times in step 2 above, ↩ moves to [EXIT] automatically and CURSOR ▲/▼ does not work.
- If you forget your password in step 2 Enter "8888."

■ While a DVD VIDEO disc is stopped or no disc is inserted

**1** Press ENTER while holding down ■ on the remote control unit.

The Parental Lock on-screen display appears on the TV screen.

↩ points [PASSWORD].

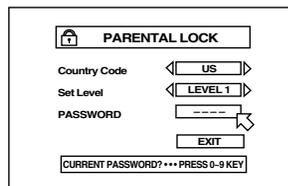

**2** Enter your current 4-digit password using the numeric buttons (0 to 9) and press ENTER.

↩ moves to [Country Code] if you enter the correct password.

If you enter the wrong password, "WRONG! RETRY..." appears on the TV screen, and you cannot go to the next step.

**3** To change the country code, use CURSOR ◀/▶ to select the desired country code and press ENTER.

↩ moves to [Set Level].

When you change the country code, you must select the parental level.


**4** To change the set level, use CURSOR ◀/▶ to select the desired level while ↩ points [Set Level], and then press ENTER.

↩ moves to [PASSWORD].

## To temporarily release the Parental lock [PARENTAL LOCK]




When you set the parental level strictly, some discs may not be played back at all. When you insert such a disc and try to play it, the following Parental Lock on-screen display appears on the TV screen, asking you whether you want the parental lock to be temporarily released or not.

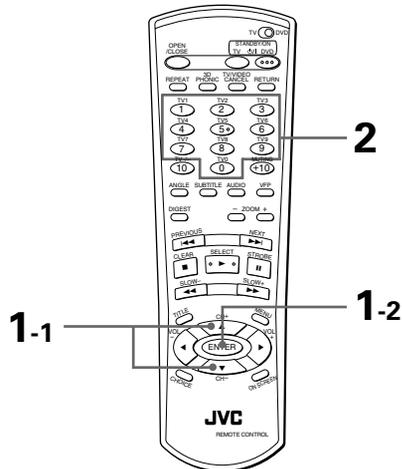

**1** Use the CURSOR  $\blacktriangle/\blacktriangledown$  to move  $\boxtimes$  to [YES], then press ENTER.

$\boxtimes$  moves to the PASSWORD field. When selecting [NO], press  $\blacktriangle$  (OPEN/CLOSE) to remove the disc.

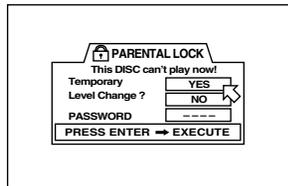

**2** Enter your 4-digit password using the numeric buttons (0 to 9).

The Parental lock is released, and the unit starts playback. If you enter the wrong password, "WRONG! RETRY..." appears on the TV screen. Enter the correct password.

**NOTE**

- When you enter the wrong password more than 3 times in step 2 above,  $\boxtimes$  moves to [NO] automatically and CURSOR  $\blacktriangle/\blacktriangledown$  do not work.

## Additional information

### AV COMPU LINK remote control system

The JVC AV COMPU LINK system allows you to enjoy video or audio with the simplest operation.

If your video/audio player (such as a DVD player, CD player and VCR) and television or/and amplifier/receiver support the JVC AV COMPU LINK system and are tied with the JVC AV COMPU LINK cable(s), when you simply starting the player, all the necessary settings of the television and/or amplifier/receiver for enjoying playback are automatically performed.


**AV COMPU LINK**

#### NOTE


- The cable for connecting between the AV COMPU LINK jacks is not supplied with the unit. Purchase an optional audio cable with monaural mini-plugs on both ends for AV COMPU LINK connection.

### Connection and setup


Using the AV COMPU LINK cable, connect the AV COMPU LINK terminals of each component to one another.

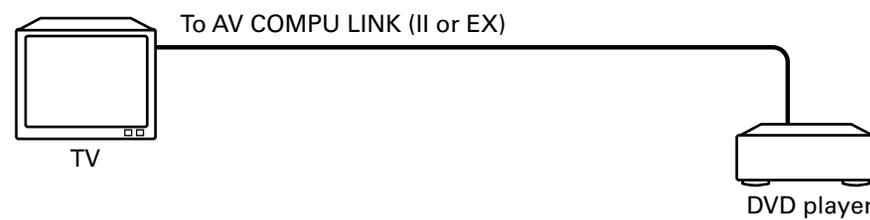

- If you connect a DVD player to a television via AV COMPU LINK, set the DVD player's AV COMPU LINK setting as follows.
  - When connecting to VIDEO-1 input terminal of the television: DVD2
  - When connecting to VIDEO-2 input terminal of the television: DVD3

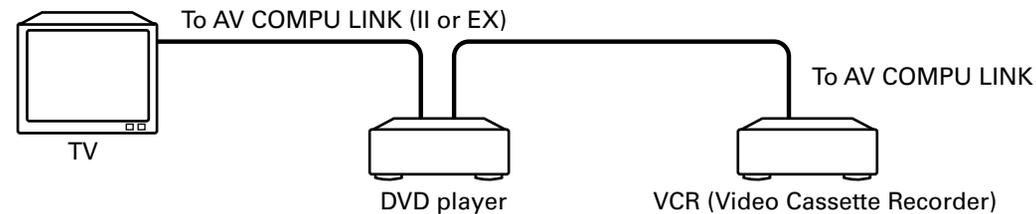

- If you connect a DVD player to a television and VCR via AV COMPU LINK, set the VCR's Remote Control Code and DVD player's AV COMPU LINK setting as follows.
  - When connecting to VIDEO-1 input terminal of the television:
    - DVD player's AV COMPU LINK setting: DVD2
    - VCR's Remote Control Code: B
  - When connecting to VIDEO-2 input terminal of the television:
    - DVD player's AV COMPU LINK setting: DVD3
    - VCR's Remote Control Code: A

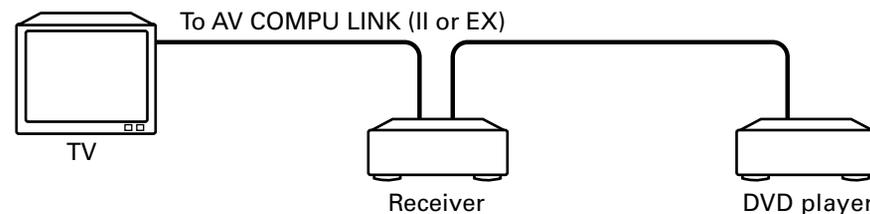

- If you connect a DVD player to a television and receiver via AV COMPU LINK, set the DVD player's AV COMPU LINK setting to DVD1.
  - The DVD player's AV COMPU LINK setting is operated in the PREFERENCE 2 display. See page 47 for operation.
  - For information on the connection between the TV and the Receiver, refer to the Receiver's Instructions.

#### Additional information

##### **IMPORTANT!**

You connect the component video output to your TV:

- Set the DVD player's AV COMPULINK setting to DVD1.
- Make the video/audio connection between the DVD player and your receiver using the supplied audio/video cable, and do not make the S-VIDEO connection.

##### **Notes for connection**

- If you connect a DVD player to a receiver via AV COMPU LINK in a system including a Dolby digital decoder, some functions may not be performed automatically.
- The AV COMPU LINK terminal on some televisions indicates "II." Do not connect the terminal indicating "II" with the AV COMPU LINK terminal on a receiver. If connected, the system will not work correctly.
- Connect the AUDIO OUT jacks of the DVD player to the audio input jacks of a receiver that indicating "DVD." Otherwise, the system will not work correctly.
- There may be no description about connections to a DVD player in the instruction manual of a television or VCR. However a television or VCR with AV COMPU LINK terminals indicating "II" or "EX" can be connected to a DVD player.

## Operation

You can enjoy pictures and/or sound by just putting a source component (which plays back the pictures and/or sound such as a DVD player or VCR) into play mode. You do not have to operate the TV and receiver including not having to perform power switching.

- 1** Turn on the main power of the television.
- 2** Insert a disc into the source component.
- 3** Press ► of the source component.


The following actions are performed automatically:

- Turning on the power for the television.
- Setting the source of the television to the external input (VIDEO-1 or VIDEO-2).
- Turning on the power for the receiver.
- Setting the source of the receiver to the component which has started playback.

## Care and handling of discs

### How to handle discs

When handling a disc, do not touch the surface of the disc. Since discs are made of plastic, they are easily damaged. If a disc gets dirty, dusty, scratched or warped, the images and sound will not be picked up correctly, and such a disc may cause the player to malfunction.

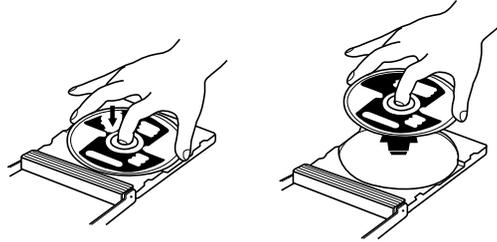

### Label side


Do not damage the label side, stick paper to or use any adhesive on its surface.

### Storage

Make sure that discs are kept in their cases. If discs are piled on top of one another without their protective cases, they can be damaged. Do not put discs in a location where they may be exposed to direct sunlight, or in a place where the humidity or temperature is high. Avoid leaving discs in your car!

### Maintenance of discs

If there are fingerprints or other dirt adhering to a disc, wipe with a soft dry cloth, moving from the center outwards. If a disc is difficult to clean, wipe with a cloth moistened with water. Never use record cleaners, petrol, alcohol or any anti-static agents.

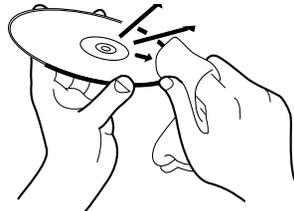

### CAUTION

Sometimes during play noise or images may be garbled. This is sometimes due to the disc. (It may not be up to industry standards.)  
These symptoms are caused by the discs, not by the malfunction of the unit.

Additional information

## Troubleshooting

What appears to be a malfunction may not always be serious. Please go through the following list before requesting service.

Symptom	Possible case	Remedy
Power does not come on.	Power plug is not inserted securely.	Plug in securely.
Remote control does not work.	Too far from the unit.	Move closer to the unit.
	The tip of the remote unit is not pointed in the right direction.	Point the infrared light-emitting window toward the remote sensor on the front panel.
	Batteries are exhausted.	Replace the batteries with new ones.
	Battery polarity is incorrect.	Take out the batteries and insert them again in the correct direction.
The TV/VIDEO - CANCEL, CURSOR or numeric buttons do not work.	The TV - DVD switch is not correctly set.	To control the unit, set the TV - DVD switch to "DVD". To control your TV, set the TV - DVD switch to "TV".
No picture is displayed on the monitor.	Connection of video cable is incorrect.	Connect the cable correctly.
	Input selection of TV is incorrect.	Select correctly.
	Disc is not playable.	Use a playable disc. (See page 13.)
	The Progressive scan mode is set to ON though the unit is connected to a TV via the VIDEO OUT jack.	Set the Progressive scan mode to OFF. (See page 15.)
Picture is noisy or blurred.	The unit is connected to a VCR directly and the copyguard function is activated.	Connect the unit so that the picture signal flows directly to the TV.
	With some discs, a picture may be blurred when setting the "PROGRESSIVE MODE" to "FILM" or "AUTO".	Set the "PROGRESSIVE MODE" to "VIDEO".
No audio is reproduced.	Connection is incorrect.	Check the connections.
	Input selection of amplifier is incorrect.	Select correctly.
No audio is reproduced when playing back a DVD disc recorded with 96 kHz, linear PCM audio using the DIGITAL OUT jack.	The audio signal is not derived from the unit's DIGITAL OUT.	Use the AUDIO OUT when playing back such discs.
Sound is distorted or noise is generated.	Disc is dirty.	Wipe the disc surface.
Picture does not fit the television screen.	MONITOR TYPE is not correctly set.	Select monitor type correctly. (See page 45.)
	Television is not correctly set.	Set the television correctly.
Operation is not possible.	Microcomputer malfunction due to lightning or static electricity.	Turn off the power and unplug the power cord, then connect the power cord again.
	Moisture condensation caused by a sudden change of temperature or humidity.	Turn off the power, then turn it on a few hours later.

Additional information

## Specifications

### General

Readable discs: DVD VIDEO, Audio CD, Video CD  
 Video format: NTSC, 525i/525p selectable

### Other

Power requirements: AC 120 V  $\sim$ , 60 Hz  
 Power consumption: 15 W (POWER ON), 1.5 W (STANDBY mode)  
 Mass: 2.6 kg (5.8 lbs)  
 Dimensions (W x H x D): 435 mm x 68 mm x 267.5 mm  
 (17-3/16 inch x 2-11/16 inch x 10-9/16 inch)

### Video outputs

COMPONENT (pin jacks): Y Output: 1.0 Vp-p (75  $\Omega$ )  
 Pb/Pr Output: 0.7 Vp-p (75  $\Omega$ )  
 VIDEO OUT (pin jack): 1.0 Vp-p (75  $\Omega$ )  
 S-VIDEO OUT (S jack): Y Output: 1.0 Vp-p (75  $\Omega$ )  
 C Output: 286 mVp-p (75  $\Omega$ )  
 Horizontal resolution: 500 Lines or more

### Audio outputs

ANALOG OUT (pin jack): 2.0 Vrms (10 k $\Omega$ )  
 DIGITAL OUT: (COAXIAL): 0.5 Vp-p (75  $\Omega$  termination)  
 (OPTICAL): -21 dBm to -15 dBm (Peak)

### Audio characteristics

Frequency response: CD (sampling frequency 44.1 kHz): 2 Hz to 20 kHz  
 DVD (sampling frequency 48 kHz): 2 Hz to 22 kHz  
 (2 Hz to 20 kHz for DTS and Dolby Digital bitstream signals)  
 DVD (sampling frequency 96 kHz): 2 Hz to 44 kHz  
 Dynamic range: 16 bit: More than 98 dB  
 20 bit: More than 106 dB  
 24 bit: More than 106 dB  
 Wow and flutter: Unmeasurable (less than  $\pm 0.002\%$ )  
 Total harmonic distortion: less than 0.002%

\* Specifications and appearance subject to change without prior notice.

## Appendix A: Table of languages and their abbreviations

When you select the subtitle language or sound, the languages shown below are displayed as abbreviations. To select the desired language, select the abbreviation corresponding the language you want to.

AA	Afar
AB	Abkhazian
AF	Afrikaans
AM	Ameharic
AR	Arabic
AS	Assamese
AY	Aymara
AZ	Azerbaijani
BA	Bashkir
BE	Byelorussian
BG	Bulgarian
BH	Bihari
BI	Bislama
BN	Bengali, Bangla
BO	Tibetan
BR	Breton
CA	Catalan
CO	Corsican
CS	Czech
CY	Welsh
DA	Danish
DZ	Bhutani
EL	Greek
EO	Esperanto
ET	Estonian
EU	Basque
FA	Persian
FI	Finnish
FJ	Fiji
FO	Faroese
FY	Frisian
GA	Irish
GD	Scots Gaelic
GL	Galician
GN	Guarani
GU	Gujarati
HA	Hausa
HI	Hindi
HR	Croatian
HU	Hungarian
HY	Armenian
IA	Interlingua
IE	Interlingue

IK	Inupiak
IN	Indonesian
IS	Icelandic
IW	Hebrew
JI	Yiddish
JW	Javanese
KA	Georgian
KK	Kazakh
KL	Greenlandic
KM	Cambodian
KN	Kannada
KO	Korean (KOR)
KS	Kashmiri
KU	Kurdish
KY	Kirghiz
LA	Latin
LN	Lingala
LO	Laothian
LT	Lithuanian
LV	Latvian, Lettish
MG	Malagasy
MI	Maori
MK	Macedonian
ML	Malayalam
MN	Mongolian
MO	Moldavian
MR	Marathi
MS	Malay (MAY)
MT	Maltese
MY	Burmese
NA	Nauru
NE	Nepali
NL	Dutch
NO	Norwegian
OC	Occitan
OM	(Afan) Oromo
OR	Oriya
PA	Panjabi
PL	Polish
PS	Pashto, Pushto
PT	Portuguese
QU	Quechua
RM	Rhaeto-Romance

RN	Kirundi
RO	Rumanian
RU	Russian
RW	Kinyarwanda
SA	Sanskrit
SD	Sindhi
SG	Sangho
SH	Serbo-Croatian
SI	Singhalese
SK	Slovak
SL	Slovenian
SM	Samoan
SN	Shona
SO	Somali
SQ	Albanian
SR	Serbian
SS	Siswati
ST	Sesotho
SU	Sundanese
SV	Swedish
SW	Swahili
TA	Tamil
TE	Telugu
TG	Tajik
TH	Thai
TI	Tigrinya
TK	Turkmen
TL	Tagalog
TN	Setswana
TO	Tonga
TR	Turkish
TS	Tsonga
TT	Tatar
TW	Twi
UK	Ukrainian
UR	Urdu
UZ	Uzbek
VI	Vietnamese
VO	Volapuk
WO	Wolof
XH	Xhosa
YO	Yoruba
ZU	Zulu

## Appendix B:Country code list for parental lock

This list is used for the parental Lock operation. For details, see page 48.

AD	Andorra	ES	Spain	LB	Lebanon	SA	Saudi Arabia
AE	United Arab Emirates	ET	Ethiopia	LC	Saint Lucia	SB	Solomon Islands
AF	Afghanistan	FI	Finland	LI	Liechtenstein	SC	Seychelles
AG	Antigua and Barbuda	FJ	Fiji	LK	Sri Lanka	SD	Sudan
AI	Anguilla	FK	Falkland Islands	LR	Liberia	SE	Sweden
AL	Albania	FM	Micronesia (Federated States of)	LS	Lesotho	SG	Singapore
AM	Armenia	FO	Faroe Islands	LT	Lithuania	SH	Saint Helena
AN	Netherlands Antilles	FR	France	LU	Luxembourg	SI	Slovenia
AO	Angola	FX	France, Metropolitan	LV	Latvia	SJ	Svalbard and Jan Mayen
AQ	Antarctica	GA	Gabon	LY	Libyan Arab	SK	Slovakia
AR	Argentina	GB	United Kingdom	MA	Morocco	SL	Sierra Leone
AS	American Samoa	GD	Grenada	MC	Monaco	SM	San Marino
AT	Austria	GE	Georgia	MD	Moldova, Republic of	SN	Senegal
AU	Australia	GF	French Guiana	MG	Madagascar	SO	Somalia
AW	Aruba	GH	Ghana	MH	Marshall Islands	SR	Suriname
AZ	Azerbaijan	GI	Gibraltar	ML	Mali	ST	Sao Tome and Principe
BA	Bosnia and	GL	Greenland	MM	Myanmar	SV	El Salvador
BB	Barbados	GM	Gambia	MN	Mongolia	SY	Syrian Arab Republic
BD	Bangladesh	GN	Guinea	MO	Macau	SZ	Swaziland
BE	Belgium	GP	Guadeloupe	MP	Northern Mariana Islands	TC	Turks and Caicos Islands
BF	Burkina Faso	GQ	Equatorial Guinea	MQ	Martinique	TD	Chad
BG	Bulgaria	GR	Greece	MR	Mauritania	TF	French Southern Territories
BH	Bahrain	GS	South Georgia and the South Sandwich	MS	Montserrat	TG	Togo
BI	Burundi	GT	Guatemala	MT	Malta	TH	Thailand
BJ	Benin	GU	Guam	MU	Mauritius	TJ	Tajikistan
BM	Bermuda	GW	Guinea-Bissau	MV	Maldives	TK	Tokelau
BN	Brunei Darussalam	GY	Guyana	MW	Malawi	TM	Turkmenistan
BO	Bolivia	HK	Hong Kong	MX	Mexico	TN	Tunisia
BR	Brazil	HM	Heard Island and McDonald Islands	MY	Malaysia	TO	Tonga
BS	Bahamas	HN	Honduras	MZ	Mozambique	TP	East Timor
BT	Bhutan	HR	Croatia	NA	Namibia	TR	Turkey
BV	Bouvet Island	HT	Haiti	NC	New Caledonia	TT	Trinidad and Tobago
BW	Botswana	HU	Hungary	NE	Niger	TV	Tuvalu
BY	Belarus	ID	Indonesia	NF	Norfolk Island	TW	Taiwan, Province of China
BZ	Belize	IE	Ireland	NG	Nigeria	TZ	Tanzania, United Republic of
CA	Canada	IL	Israel	NI	Nicaragua	UA	Ukraine
CC	Cocos (Keeling) Islands	IN	India	NL	Netherlands	UG	Uganda
CF	Central African Republic	IO	British Indian Ocean Territory	NO	Norway	UM	United States Minor Outlying Islands
CG	Congo	IQ	Iraq	NP	Nepal	US	United States
CH	Switzerland	IR	Iran (Islamic Republic of)	NR	Nauru	UY	Uruguay
CI	Côte d'Ivoire	IS	Iceland	NU	Niue	UZ	Uzbekistan
CK	Cook Islands	IT	Italy	NZ	New Zealand	VA	Vatican City State (Holy See)
CL	Chile	JM	Jamaica	OM	Oman	VC	Saint Vincent and the Grenadines
CM	Cameroon	JO	Jordan	PA	Panama	VE	Venezuela
CN	China	JP	Japan	PF	French Polynesia	VG	Virgin Islands (British)
CO	Colombia	KE	Kenya	PG	Papua New Guinea	VI	Virgin Islands (U.S.)
CR	Costa Rica	KG	Kyrgyzstan	PH	Philippines	VN	Vietnam
CU	Cuba	KH	Cambodia	PK	Pakistan	VU	Vanuatu
CV	Cape Verde	KI	Kiribati	PL	Poland	WF	Wallis and Futuna Islands
CX	Christmas Island	KM	Comoros	PM	Saint Pierre and Miquelon	WS	Samoa
CY	Cyprus	KN	Saint Kitts and Nevis	PN	Pitcairn	YE	Yemen
CZ	Czech Republic	KP	Korea, Democratic People's Republic of	PR	Puerto Rico	YT	Mayotte
DE	Germany	KR	Korea, Republic of	PT	Portugal	YU	Yugoslavia
DJ	Djibouti	KW	Kuwait	PW	Palau	ZA	South Africa
DK	Denmark	KY	Cayman Islands	PY	Paraguay	ZM	Zambia
DM	Dominica	KZ	Kazakhstan	QA	Qatar	ZR	Zaire
DO	Dominican Republic	LA	Lao People's Democratic Republic	RE	Réunion	ZW	Zimbabwe
DZ	Algeria			RO	Romania		
EC	Ecuador			RU	Russian Federation		
EE	Estonia			RW	Rwanda		
EG	Egypt						
EH	Western Sahara						
ER	Eritrea						

# Authorized Service Centers

---

QUALITY **JVC**<sup>®</sup> SERVICE  
*HOW TO LOCATE YOUR JVC SERVICE CENTER*  
**TOLL FREE: 1 (800) 537-5722**  
**<http://www.jvc.com>**

Dear Customer,  
In order to receive the most satisfaction from your purchase, please read the instruction booklet before operating the unit. In the event that repairs are necessary, please call 1 (800)537-5722 for your nearest authorized servicer or visit our website at **[www.JVC.com](http://www.JVC.com)**  
Remember to retain your Bill of Sale for Warranty Service.

---

## Do not service the television yourself

---

### Caution


 
To prevent electrical shock, do not open the cabinet. There are no user serviceable parts inside. Please refer to qualified service personnel for repairs.

### Accessories

To purchase accessories for your JVC product, please call toll free: 1 (800)882-2345 or on the web at **[www.JVC.com](http://www.JVC.com)**

---



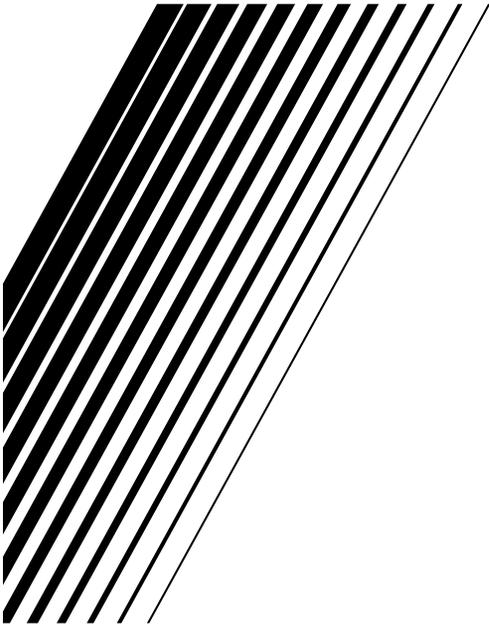

**JVC**  
VICTOR COMPANY OF JAPAN, LIMITED

