

TV User's Guide

We bring good things to life.

Important Information

WARNING

To reduce the risk of fire or shock hazard, do not expose this TV to rain or moisture.



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

Cautions



CAUTION:

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION:

Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqú au fond.

Operate TV only on 120 volts, 60 Hz AC power (normal house power).

FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Note To Cable TV Installer

Product Registration This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

Please fill out the product registration card and return it immediately. Returning this card allows us to contact you if needed.

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you ever need them. The numbers are located on the back of the TV.

Model No.__

Serial No.___

Purchase Date:

Dealer/Address/Phone:_____

Table of Contents

Important Information	Warning, Product Registrationi	
Quick Guide to Your TV	Startup 2-3 Hook up your TV, Plug in the TV, Put Batteries in the Remote, Turn on the TV, Place Channels in Memory, Set the Time Basic Tour of the Remote 4 Power, Volume, Channel, Special, and Menu Buttons 4 Menu Basics 5 Colors, Menu Buttons, Moving through the Menus 5	
Using Your Remote	With Remote Buttons 6	
Adjusting Your TV	Overall Picture 7 Picture Settings 8 Color, Tint, Brightness, Sharpness, Autocolor, Picture Reset Sound Settings 9 Stereo, Tone 9	
Using Advanced Features	Placing Channels in Memory/Autoprogram 10Setting the Sleep Timer 11Setting the Alarm Clock 12Watching Closed Captioning 13Setting Your TV for Antenna or Cable 14	
References	Front Panel Buttons15Displays on the Screen16Trouble Checks17-18Limited Warranty19Order Form for Parts20-21	

Quick Guide to Your TV

Startup

The steps below will get your TV connected and ready for watching. *For more details, see the page numbers listed.*

1. Hook up your TV

Details are in the Connections *Guide*.



Hook up any antennas, cables or other equipment to your TV before you follow the steps below.

CAUTION: Matching stands were designed to be used with the TV models included in this book. The recommended stands are provided with hardware to secure the TV to the stand so that it cannot be easily pulled off or tipped over. Your GE dealer can help you choose the appropriate stand for your TV.

Stands are not available by mail order. To locate your nearest GE dealer call 1-800-447-1700.

If you choose not to use the stand recommended for your TV, take precautions that the stand or furniture the TV is placed on is properly located and of adequate size and strength to prevent the TV from accidentally being tipped over or pulled off. This could cause damage to the TV and or personal injury.

2. Plug in the TV



Plug the cord into the outlet, matching the wide and the small end of the plug with the outlet.

3. Put Batteries in the Remote



- A. Pull off the cover of the battery compartment.
- B. Place the two AAA batteries as shown, matching the + and end of each battery in the compartment.
- C. Replace the cover.



Quick Guide to Your TV

Basic Tour of the Remote

Basic information about your remote is shown below. This will give you a general idea of how your remote works. *For more details, see page 6.*

Power Button

Volume, Channel, and Special Buttons *Details are on page 6.*

Turns the TV on and off.

Operate the TV. Operate special features of the TV.

Menu Buttons Details are on page 5.



Change the menus and features on the screen.

Quick Guide to Your TV

Menu Basics

General information about using the on-screen menu system is shown below. Details on using the remote buttons are on page 6. Many menu items are explained in detail in Adjusting Your TV starting on page 7 and Using the Advanced Features starting on page 10.





Press MENU repeatedly to see each of the four menu colors. Each menu has a different color background as shown at the left.

Menu Buttons

These buttons are used with the TV's menus to adjust the features. You can use the menu buttons on the remote or the front of the TV.





Moving through the Menus

			13
Controls	Alarm	Adiust	Setup
Autopro	gram	Í	
Channe Cable/A			stored

- 1. Press MENU to move from menu to menu.
- 2. Press CHANNEL up and down to move through the features in the menu.
- Press VOLUME + and to move left and right on the menu lines.

Using Your Remote

With Remote Buttons



DISPLAY

Shows displays on the screen. Clears menus from the screen.

POWER Turns the TV on and off.

MUTE Switches the TV sound on or off.

PREV CH (Previous Channel)

Changes back and forth between two channels.

Select a channel and then select another. Press PREV CH to switch between the two channels.

CHAN 2 and 1 (Channel up and down) Scans up and down through channels in the TV's memory.

Moves up and down menus. See Menu Basics on page 5.

VOL + and – (Volume up and down) Raises and lowers sound.

Moves left and right on a menu line. *See Menu Basics on page 5.*

Changes a feature setting.

CLEAR

Clears menus and displays from the screen.

MENU

Shows menus on the screen and moves from menu to menu.

RESET Returns the picture adjustments to the original settings.

Number Buttons

Selects any channel number.

Two numbers must be pressed for each channel. Press 0 and 6 for channel 6.

For three digit channels, press and hold 1 until 1-- appears on the screen. Then press the other two numbers.

INPUT Switches between the TV channels and Video 00.

SKIP (Commercial Skip)

Allows you to look at other channels during commercials.

Each press adds 30 seconds. Use the CHANNEL or number buttons to scan the other channels. TV switches back to original channel when time runs out. Press CLEAR to cancel SKIP.

Adjusting Your TV

Overall Picture

Follow the steps below to lighten or darken the overall picture without changing the color levels.

1. Select the Controls Menu

Controls Alarm Adjust Setup Sleep Timer: -:--Closed Captioning: Off Picture -.....+ Stereo: On Tone: High Press MENU to select the Controls menu. This menu is yellow.

2. Highlight Picture

Controls	Alarm	Adjust	Setup
Sleep T	imer: -	:	·
Closed	Caption	ning: Off	
Picture	l	+	
Stereo:	On		
Tone: I	High		

Press CHANNEL down to highlight Picture.

3. Use VOLUME + and - to adjust the Picture



Press VOLUME + to lighten the picture.

OR

Press VOLUME — to darken the picture.

Adjusting Your TV

Picture Settings

Follow the steps below to change the picture on the screen to your personal setting. The chart below explains your options.

1. Select the Adjust Menu

Controls	Alarm	Adjust	Setup
Color	I	+	
Tint	Gı	R	
Bright	I	+	
Sharp	I	+	
Autocol	or: On		
Picture	Reset		

Press MENU repeatedly to select the Adjust menu. This menu is light blue.

Press CHANNEL down to highlight the picture item you want to adjust.

3. Use VOLUME + or – to adjust each item

Controls	Alarm	Adjust	Setup
Color	I	+	·
Tint	Gı	R	
Bright	l	+	
Sharp	I	+	
Autocol	or: On		
Picture	Reset		

Press VOLUME + or – to adjust	
each item.	

	Press VOLUME + to:	Press VOLUME – to:
Color	Increase color richness	Lower color to black and white
Tint	Give red tint to skin color	Give green tint to skin color
Bright (Brightness)	Add more light to dark parts of the picture	Add more dark to light parts of the picture
Sharp (Sharpness)	Show cleaner, clearer images	Make picture more smooth
Autocolor	Turn on to keep Color and Tint in proper balance each time you change channels	Turn off for manual adjustment of Color and Tint
Picture Reset	Reset the picture back to the original settings	Reset the picture back to the original settings

Adjusting Your TV

Sound Settings: Stereo and Tone

Follow these steps to adjust the Stereo or Tone of your TV. The chart below explains your options.

XS[®] Stereo

An Innovative Method for Providing Stereo Sound Effect The sound delivered by your television is XS Stereo. This patented process suppresses noise, restores the dynamic range and electronically expands the stereo signal to create a more spacious sound effect.

Press MENU to select the Controls menu. This menu is yellow.

2. Highlight item to change

1. Select the Controls Menu

Controls Alarm Adjust Setup Sleep Timer: -:--Closed Captioning: Off Picture -.....+ Stereo: On Tone: High

Controls Alarm Adjust Setup

Sleep Timer: -:--Closed Captioning: Off Picture -.....+ Stereo: On Tone: High

> Press CHANNEL down to highlight the sound item you want to adjust.

3. Use VOLUME + or - to adjust each item

> Controls Alarm Adjust Setup Sleep Timer: -:--Closed Captioning: Off Picture -.....+ Stereo: Off Tone: High

Press VOLUME + or - to adjust each item.

Stereo	On Sound is automatically reproduced in stereo or mono, whichever the TV station is broadcasting.	Off Sound is reproduced in mono.
Tone	High High pitched sounds are louder.	Low Low pitched sounds are louder.

Placing Channels in Memory (Autoprogramming)

Only channels 2–13 appear in the TV's memory when you first turn it on. The channels available in your area must be programmed into the TV's memory when you hook up your TV. Using CHANNEL up and down allows you to scan through these channels.

You may want to add or delete a few channels if some stations have weak signals or were off the air when the TV was programmed. *Refer to the Add or Delete Channels section below.*

1. Place channels in memory (Autoprogram)

		13
Controls Autopro	Adjust	Setup
Channe Cable/A	ory: 13 S le	tored
		15
		10
Controls Autopro		Setup
Channe Cable/A		tored

- A. Hook up an antenna, cable or components before you begin these steps or you will not be able to add channels into memory.
- B. Press MENU repeatedly to select the Setup Menu and highlight Autoprogram. This menu is white.
- C. Press VOLUME + to start the TV adding all active channels into memory.
- D. Wait until the TV has cycled through all the channels and returns to the original channel.

2. Add or delete channels

			13
Controls	Alarm	Δdiust	Setun
Autopro	gram	·	
Channe Cable/A			Stored

	13
Controls Alarm Adju	st Setup
Autoprogram	
Channel Memory: <u>13</u>	<u>B</u> Erased
Cable/Air: Cable	

- A. Press MENU repeatedly to select the Setup menu. This menu is white.
- B. Press CHANNEL down to highlight Channel Memory.
- C. Press VOLUME + to underline the channel number.
- D. Select the channel number you want to add or delete with the number buttons.
- E. Press VOLUME + to add or delete a channel (you will see Stored on the screen when added and Erased when deleted).
- F. Repeat D and E for more channels.

Setting the Sleep Timer

You can set your TV to turn itself off. If you're watching TV at night and fall asleep, the TV will turn off for you.

1. Set Sleep Timer

Controls Alarm Adjust Setup Sleep Timer: -: Closed Captioning: Off PictureI+ Stereo: On Tone: High
11:00 PM 13 Sleep
Controls Alarm Adjust Satur

Controls Alarm Adjust Setup Sleep Timer: 0 : <u>15</u> Closed Captioning: Off Picture -....I.....+ Stereo: On Tone: High

- A. Press MENU to select the Controls menu and highlight Sleep Timer. This menu is yellow.
- B. Press VOLUME + to enter the amount of time you want to watch TV before it shuts off. Each press equals 15 minutes.
- C. Press VOLUME to subtract time from the sleep timer.

2. Add more time

Controls Alarm Adjust Setup Sleep Timer: 0:01 Closed Captioning: Off Picture -.....+ Stereo: On Tone: High When 0:01 appears on the screen, the TV will shut off in one minute. Press VOLUME + to add more time.

3. Cancel the Timer

Controls Alarm Adjust Setup
Sleep Timer: -:
Closed Captioning: Off
Picture+
Stereo: On
Tone: High

- A. Press MENU to select the Controls menu and highlight Sleep Timer.
- B. Press VOLUME until the time reaches -:--.

Setting the Alarm Clock

The TV can be set to turn on each day like your alarm clock. You can set it to turn on to your favorite channel at a certain time. You can also set it to turn itself off again. The Alarm cannot be used until the clock is set.

1. Turn on the Alarm

12:34 / Alarm	۹M		13
Controls Alarm: (Alarm C On Time Off Time Clock:	On hannel e: Disa e: Disa	: 07 Ibled Ibled	Setup

2. Set the Alarm Channel

12:34 / Alarm	۹M		13
Controls	Alarm	Adjust	Setup
Alarm: (Dn		
Alarm C	hannel	: <u>07</u>	
On Time	e: Disa	bled	
Off Time: Disabled			
Clock:	12:34	1 AM	

- A. Press MENU to select the Alarm menu and highlight Alarm. This menu is green.
- B. Press VOLUME + or to select On or Off.

- A. Press CHANNEL down to highlight the Alarm Channel.
- B. Press VOLUME + to highlight the channel number.
- C. Enter the channel that you want the TV to turn on to with the number buttons.

3. Set On and Off Times

Alarm	
Controls Alarm Alarm: On Alarm Channel On Time: 7:3 Off Time: Disa Clock: 12:34	: 07 30 AM abled
12:34 AM	13

13

12:34 AM

Alarm			10
Controls Alarm: (Alarm C On Time	Dn hannel	: 07	Setup
Off Time Clock:			

- A. Press CHANNEL down to highlight the On or Off Time.
- B. Press VOLUME to set the hour.
- C. Press VOLUME + to set the minutes.
- D. Press and hold VOLUME to choose Disabled. This turns the TV only on or only off at a certain time each day.

Watching Closed Captioning

Closed captioning displays the audio portion of a program as words on the TV screen. It is useful for the deaf, hearing impaired, or anyone who wants to watch a program without sound. If you have turned Closed Captioning on and it does not appear on the screen, it is not available on the channel you are watching.

This TV does not support the text mode. Text information typically consists of program information, weather bulletins, local activities, etc.

1. Select the Controls Menu

Controls	Alarm	Adjust	Setup
Sleep T			
Closed	Captior	ning: Off	
Picture	l	+	
Stereo:	On		
Tone: I	ligh		

Press MENU to select the Controls menu. This menu is yellow.

2. Highlight Closed Captioning

Controls Alarm Adjust Setup Sleep Timer: -: Closed Captioning: Off Picturet Stereo: On Tone: High				
Sleep Timer: -: Closed Captioning: Off Picture+ Stereo: On				
Closed Captioning: Off Picture+ Stereo: On	Controls	Alarm	Adjust	Setup
PictureI+ Stereo: On	Sleep T	imer:	-:	
Stereo: On	Closed	Captior	ning: Off	
	Picture	l	+	
Tone: High	Stereo:	On		
	Tone: H	ligh		

Press CHANNEL down to highlight Closed Captioning.

3. Select Setting

Controls	Alarm	Adjust	Setup
Sleep T	imer:	-:	
Closed	Captior	ning: C1	
Picture	·l	+	
Stereo:	On		
Tone: H	liah		

Press VOLUME + or - to select Off, C1, or C2. Select C1 for full translation of the primary language in your area. Select C2 for secondary language translation, simplified English, or whatever is being broadcast in your area.

Setting Your TV for Antenna or Cable

Your TV automatically adjusts this feature when the TV places channels in memory (Autoprogram). Follow the steps below to change the setting as needed.

1. Select the Setup menu

		13
Controls Alarm	Adjust Set	up
Autoprogram		
Channel Memor	ry: 13 Store	d
Cable/Air: Cable	e	

Press MENU repeatedly to select the Setup menu. This menu is white.

2. Highlight Cable/Air



Press CHANNEL down to highlight Cable/Air.

3. Select Cable or Air

	13
	divert Octor
Controls Alarm A Autoprogram	ajust Setup
Channel Memory	: 13 Stored
Cable/Air: Cable	9

Press VOLUME + or — to select Cable or Air. Select Cable if you have cable. Select Air if you have a home antenna connected to your TV.

Front Panel Buttons

For details on using buttons with menus, see Menu Basics on page 5.



MENU	Shows menus on screen.
	Moves from menu to menu.
CH 2 and 1	Channel up and down.
	Scans up and down through channels in the TV's memory.
	Moves up and down menus.
VOL + and -	Volume up and down
	Raises and lowers sound.
	Moves left and right on a menu line.
	Changes a feature setting.
POWER	Turns the TV on or off.

Displays on the Screen

Your TV shows the settings of several features on the screen. To see what features have been set on your TV, press DISPLAY on the remote.

12:00 AM Alarm Sleep	13	 or Video 00
Volume Mute Stere		 or Unusable Signal

<u>Screen Display</u>	Description
12:00 AM	Time of the clock. <i>Details are on page 3.</i>
13	Channel number you are watching.
Video 00	Indicates that a component is connected to the VIDEO jack on the back of the TV, it is turned on, and channel 00 is selected.
Alarm	Alarm clock is set to turn on or off. Details are on page 12.
Sleep	Sleep Timer is set to turn off the TV. Details are on page 11.
Volume	Sound level of the TV.
Unusable Signal	No signal is coming in on video input channel 00.
Mute	There is no sound. See MUTE button on page 6.
Stereo	The sound is being broadcast in stereo. Details are on page 9.
1:55	The time remaining for commercial skip. Details are on page 6.

Trouble Checks

You may have problems that can be fixed with a few minor adjustments. Look for the type of problem you are having below and then try the suggestions to get your TV going again. *For warranty information see page 19.*

Plug TV in.
Plug something else into the outlet to make sure it is working.
Make sure batteries in the remote are not dead.
Aim the remote at the TV and press POWER.
Make sure batteries are placed in the remote the right way. <i>See batteries on page 2.</i>
Unplug TV for a few minutes and then turn it on again.
Check antenna connections.
Check position of Cable/Air feature. See page 14.
Try another channel. Inactive channel may be tuned.
Make sure component connected to the VIDEO INPUT jacks is turned on if you choose channel 00.
Make sure TV is tuned to the same channel as the switch on back of VCR if watching a VCR.
Make sure TV/VCR button on VCR is in correct position when using VCR.
Try another channel. Inactive channel may be tuned.
Scan the channels.
Check antenna connections.
Adjust TV picture. See pages 7-8.
Turn Stereo off. The stereo broadcast may not be clear. See page 9.
Press VOLUME + or MUTE to restore sound.
Try another channel.
Try adjusting the Stereo or Tone. See page 9.
Change Stereo to off. The stereo broadcast may not be clear. See page 9.
Make sure Stereo is turned on. See page 9.

Trouble Checks

Trouble	Checks and Adjustments
<u>Remote</u>	
Remote lockup	Remove batteries and hold down one or more buttons for several seconds to drain the microprocessor inside the remote and reset it. Re-install the batteries and try remote again.
Works part or none of the	Clear the path between the remote and TV of any objects.
time	Aim the remote at the component you are trying to control.
	Make sure batteries in the remote are not dead.
	See if batteries are placed in remote correctly. See batteries, page 2.
Can't select certain channel	Press number buttons. Channel may not be in memory. See Autoprogram on page 10.
	Make sure TV/VCR switch on VCR is in the TV position if using VCR.
	For numbers over 100, press and hold 1 until 1 appears, then press the other two numbers.
	Set Cable/Air feature to Cable for channels higher than 69. See page 14.
TV Turns on or off	
Turns off by itself	Check Sleep Timer. See sleep timer on page 11.
-	Wait 30 seconds and turn on again, a power surge may have occurred.
	Check Alarm Off time. See alarm clock on page 12.
Turns on by itself	Check Alarm On Time. See alarm clock on page 12.
	Check clock time. See clock on page 3.
Does not turn off at Alarm Time	Make sure alarm is turned on or off. See alarm clock on page 12.
	Check clock time. See clock on page 3.
	Make sure Clock time is set correctly, including AM and PM.
	Check Alarm Off time.

Order Form for Parts

Remote #226725

This is the remote that came packed with your TV. You can use the order form at the right to order it by mail.



Cleaner #AHO35

To clean your TV cabinet, we recommend Murphy's® Oil Soap or Cleaner #AH035. You <u>should not</u> use cleaners such as Windex® with vinegar, Lenox® Furniture Polish spray or Heinz® Cleaning Vinegar to clean your TV cabinet. Using these cleaners will permanently mar the surface of the cabinet. Such damage is not covered under your purchase warranty.

Order Form Book No. 15083860				
Part	Part Number	Price	Qty	Total
Cleaner	AH035	\$ 6.95		
RemoteCRK20A1	226725	\$34.95		
Sales Tax We are required by lav appropriate sales tax f state, county, and loca merchandise is being s Shipping, Handling,	w to collect the or each individual ality to which the sent.		<u>\$</u> \$	5.00
Total Amount Enclosed		<u>\$</u>		
VISA or MasterCard preferred. Money order or check must be in U.S. currency only. No COD or CASH.				

Fill out both sides of the information

Detach Here

All specifications and descriptions of parts are subject to change without notice.

Order Form for Parts

USE YOUR CREDIT CARD
Copy complete account number
Card expires:
Copy complete account number
Copy Number above the name on your MasterCard
Card expires:
AUTHORIZED SIGNATURE
Prices are subject to change without notice.

PLEASE

Print or type your name and address. This will be your mailing label.

A complete and correct order will save you days of waiting.

Name:		
Street:		
	Apt:	
City:		
State:	Zip:	

Make sure that both sides of this form have been filled out.

U.S. and Canadian Orders

By Phone: 1 - 800 - 338 - 0376

Call this toll-free number between 8AM and 8PM Eastern Standard Time and place your order using your Visa or MasterCard. Use this number only to place an order for accessory items listed on this order form.

By Mail:

Detach the information at the left and mail the payment to Thomson Consumer Electronics, Inc., at:

Video Accessories PO Box 8419 Ronks, PA 17573

Most orders are shipped UPS within 72 hours. If it is not possible to ship within 30 days, we will notify you.

For more current information on these accessories, write to the following address:

Video Accessories Customer Service Thomson Consumer Electronics, Inc. Distributor & Special Products 2000 Clements Bridge Rd Deptford, NJ 08096-2088

International Orders

This offer is valid only in the U.S. and Canada. Send your request for price quotation (not orders) to:

International Customer Service Thomson Consumer Electronics, Inc. Distributor & Special Products 2000 Clements Bridge Rd Deptford, NJ 08096-2088 USA

Limited Warranty

What your warranty covers:	Any defect in material or workmanship.
How long after your	90 days for labor charges.
purchase:	One year for parts.
1	Two years for picture tube.
	The warranty period for rental units begins with the first rental.
What we will do:	Pay any Authorized GE Television Servicenter the labor charges to repair your television.
	Pay any Authorized GE Television Servicenter for the new or, at our option, rebuilt replacement parts and picture tube required to repair your television.
How you get service:	For screen sizes of 20" and smaller: Take your GE television to any Authorized GE Television Servicenter.
	For screen sizes larger than 20": Request service from any Authorized GE Television Servicenter.
	To identify your nearest Authorized GE Television Servicenter, ask your Dealer, look in the Yellow Pages, or call 1-800-447-1700.
	Show the service technician your evidence of purchase date.
What your warranty <i>does not</i> cover:	Customer instruction. (Your Owner's Manual clearly describes how to install, adjust, and operate your television. Any additional information should be obtained from your Dealer.)
	Installation and related adjustments.
	Acts of God, such as, but not limited to lightning damage.
	Signal reception problems not caused by your television.
	Damage from misuse or neglect.
	Remote control batteries.
	A television that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
	A television purchased or serviced outside the USA.
What to do with the Product Registration Card:	Please complete and mail the Product Registration Card packed with your set. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.
How state law relates to this warranty:	This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.
If you purchased your product outside the	This warranty does not apply. Contact your dealer for warranty information.

Thomson Consumer Electronics is one of the first corporations to take part in a special program to improve our environment.

Thomson has committed itself to a voluntary initiative program through the U.S. Environmental Protection Agency. The program's purpose is to reduce toxic air emissions and to promote pollution prevention.

Thomson's involvement includes a concentrated effort to phase in new water-based paints to replace solvent-based paints normally used in our manufacturing operations. The key benefit of these new paints is to significantly reduce air pollution.

Thomson Consumer Electronics remains committed to improving our manufacturing process through changes like these to help our environment. At Thomson, on-going efforts to maintain our valuable natural resources will continue to be a priority.

CONSUMER ELECTRONICS

10330 North Meridian Street Indianapolis, IN 46290-1024

©1995 Thomson Consumer Electronics, Inc. Trademark(s)® Registered Marca(s) Registrada(s) Printed in the U.S.A. TOCOM 15083860

