

## **Solid State Color TV**

# 32GX01B 32UX01S

## **OPERATING GUIDE**



**IMPORTANT SAFEGUARDS** 

2-4



FIRST TIME USE

5-19



THE REMOTE CONTROL

20-31









**EASY GRAPHIC GUIDE** SET UP CUSTOM VIDEO AUDIO THEATER ON-SCREEN DISPLAY

32-52



**USEFUL INFORMATION INDEX** 53-60

As an Energy Star Partner, Hitachi, Ltd. has deternimed that this product meets the Energy Star<sup>®</sup> guidelines for energy efficiency.





Follow all warnings and instructions marked on this Color Television.



#### WARNING

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of a sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

#### **WARNING:**

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS COLOR TELEVISION TO RAIN OR MOISTURE.

NOTE: ¥There are no user serviceable parts inside the Color Television.

¥Model and serial numbers are indicated on back side of the Color Television.

¥This Color Television is not intended for use in a computer room.

**CAUTION:** Adjust only those controls that are covered in the instructions, as improper changes or modifications

expressly approved by HITACHI could void the user's warranty.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

**MODIFICATIONS:** The FCC requires the user to be notified that any changes or modifications made to this device that

are not expressly approved by Hitachi America, Ltd. Home Electronics Division may void the user s

#### POWER SOURCE

This Color Television is designed to operate on 120 Volts 60Hz, AC current. Insert power cord into a 120 Volt 60Hz outlet.

TO PREVENT ELECTRIC SHOCK, DO NOT USE THE COLOR TELEVISION S (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES AND GROUND TERMINAL CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

NEVER CONNECT THE COLOR TELEVISION TO 50HZ, DIRECT CURRENT, OR ANYTHING OTHER THAN THE SPECIFIED VOLTAGE.

This Color Television receiver will display television closed captioning, ( cc or ), in accordance NOTE: with paragraph 15.119 of the FCC rules.



CAUTION: Never remove the back cover of the Color Television as this can expose you to very high voltages and other hazards. If the television does not operate properly, unplug the television and call your authorized dealer or service shop.



## IMPORTANT SAFEGUARDS

**CAUTION:** 

- · Read all of these instructions.
- Save these instructions for later use.
- · Follow all warnings and instructions marked

on the television.

SAFETY POINTS YOU SHOULD KNOW ABOUT YOUR HITACHI COLOR TELEVISION

Our reputation has been built on the quality, performance, and ease of service of HITACHI televisions.

Safety is also foremost in our minds in the design of these units. To help you operate these products properly, this section illustrates safety tips which will be of benefit to you. Please read it carefully and apply the knowledge you obtain from it to the proper operation of your HITACHI television.

Please fill out your warranty card and mail it to HITACHI. This will enable HITACHI to notify you promptly in the improbable event that a safety problem should be discovered in your product model.

 
#### FOR YOUR PERSONAL SAFETY

- 1. This television set is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other.) This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 2. When the power cord or plug is damaged or frayed, unplug the television from the wall outlet and refer servicing to qualified service personnel.
- 3. Do not overload wall outlets and extension cords as this can result in fire or electric shock.
- 4. Do not allow anything to rest on or roll over the power cord, and do not place the television where the power cord is subject to traffic or abuse. This may result in a shock or fire hazard.



- Do not attempt to service the television yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 6. Never push objects of any kind into the television s cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the television.
- If the television has been dropped or the cabinet has been damaged, unplug the television from the wall outlet and refer servicing to qualified service personnel.
- If liquid has been spilled into the television set, unplug it from the wall outlet and refer service to qualified service personnel.
- damage the picture tube surface







11-1. Do not place the television on an unstable cart, stand, or table. The television may fall, causing serious injury to a child or an adult, and serious damage to the appliance. Use only with a cart or stand recommended by manufacturer, or sold with the television. Wall or shelf mounting should follow the manufacturers instructions, and should use a mounting kit approved by the manufacturer.



11-2. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.





Do not subject your television to impact of any kind. Be careful not to



#### PROTECTION AND LOCATION OF YOUR TELEVISION

- 12. Do not use the television near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.
- Never expose the television to rain or water. If the set has been exposed to rain or water, unplug television from wall outlet and qualified refer to service personnel.
- 13. Choose a place where light (artificial or sunlight) does not shine directly on the screen.



- 14. Avoid dusty places. Accumulated dust inside the chassis may cause failure of the television when high humidity persists.
- 15. The television has slots or openings in the cabinet for ventilation purposes which provide reliable operation of the receiver and protect the television from overheating. These openings must not be blocked or covered.
- Never cover the slots or openings with cloth or other material



Never block the bottom ventilation slots of the television by placing it on a bed, sofa, rug, etc.



¥ Never place the television near over a radiator or heat register.



Never place the television in a built-in enclosure unless proper ventilation is provided.








#### PROTECTION AND LOCATION OF YOUR TELEVISION

- 16-1. If an outside antenna is connected to the television, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, NFPA No. 70-1975, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit size of grounding conductors, location of antenna discharge unit connection to grounding electrode, and requirements for the grounding electrode.
- 16-2. Note to CATV system installer:
  (Only for television with CATV reception). This reminder is provided to call the CATV system installer s attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

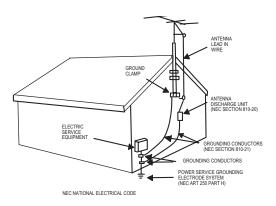

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE INSTRUCTIONS.

17. An outside antenna system should not be located in the vicinity of overhead power lines or other electrical lights or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.



18. For added protection for the television during a lightning storm, or when it is unused for long periods of time, unplug it from the wall outlet and disconnect antenna. This will prevent damage due to lightning and power-line surges.



#### **OPERATION OF YOUR TELEVISION**

19. This television should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply at your home, consult your dealer or local power company. For televisions designed to operate from battery power, refer to the operating instructions.



10. If the television does not operate normally by following the operating instructions, unplug the television from the wall outlet and refer servicing to qualified service personnel. Adjust only those controls that are covered in the instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified service technician to restore the television to normal operation.



21. If your television is to remain unused for a period of time, (such as when going on a holiday), turn the television OFF and unplug it from the wall outlet.



#### IF THE TELEVISION DOES NOT OPERATE PROPERLY

22. If you are unable to restore normal operation by following the detailed procedure in your operating instructions, do not attempt any further adjustments. Unplug the television and call your dealer or service technician.



- 23. Whenever the television is damaged or fails, or if there is a distinct change in performance that indicates a need for service, unplug the television and have it checked by a qualified service technician.
- 24. It is normal for some televisions to make occasional snapping or popping sounds, particularly when being turned on or off. If the snapping or popping is continuous or frequent, unplug the set and consult your dealer or service technician.



#### FOR SERVICING AND MODIFICATION

 Do not use attachments not recommended by the television manufacturer as they may cause hazards.



- 26. If replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 27. Upon completion of any service or repairs to the television, ask the service technician to perform routine safety checks to determine that the television is in safe operating condition.



## **PICTURE CAUTIONS**

#### **Picture Burn Prevention**

- ¥ Continuous on-screen displays such as video games, stock market quotations, computer generated graphics, and other fixed (non-moving) patterns can cause permanent damage to television receivers. Such PATTERN BURNS constitute misuse and are <u>NOT COVERED</u> by your HITACHI Factory Warranty.
- ¥ When using Picture-in-Picture function, the sub-picture should not be left permanently in one corner of the screen or a PATTERN BURN may develop over a long period of time.

#### **Public Viewing of Copyrighted Material**

Public viewing of programs broadcast by TV stations and cable companies, as well as programs from other sources, may require prior authorization from the broadcaster or owner of the video program material.

 


Check that you have the following accessories before disposing of the packing material.

- 1. Remote Control Unit.
- 2. Two AA size, 1.5V batteries (For Remote Control Unit).

For information regarding how to obtain these accessories, please call TOLL FREE 1-800-448-2244 for your nearest HITACHI Authorized Parts Distributor in the continental United States. For Alaska please contact your nearest HITACHI regional office.


PARTS NAME	PART NO.	ILLUSTRATION	
36UX01S 32UX01S CLU-431UG REMOTE CONTROL	HL01421	POWER TV CBL/SAT DVD/VCR  PIP SWAP MOVE FREEZE HELP PIP CH TV/VCR  MENU  MENU  MENU  LAST CH  VOL  CH  VOL  CH	
36GX01B 32GX01B CLU-381UG REMOTE CONTROL	HL01422	1 2 3 4 5 6 7 8 9	
32V TELEVISION STAND SP316B (Not included, order separately)	H530022	CUSTOM HITACHI TELEVISION STAND  Excellent for VCR and video- tape storage. Special features include curved smoked glass doors and an adjustable shelf. Available in Black.	
32V TELEVISION STAND SP317B (Not included, order separately)	H530023 (upgrade)		
36V TELEVISION STAND SP351B (Not included, order separately)	H530024		




**CAUTION:** Color television stand model SP316B or SP317B is designed for use only with a 32 inch or smaller color television set. Television stand model SP351B is designed for use with a 36 inch or smaller television set. Use of a smaller stand, a non Hitachi recommended stand or a generic stand may result in instability, causing possible injury.

## REMOTE CONTROL BATTERY INSTALLATION AND REPLACEMENT

- Open the battery cover of the remote control by pushing the notched part of the cover with your fingers.
- 2. Insert two new AA size batteries for the remote control. When replacing old batteries, push them towards the springs and lift them out.
- 3. Match the batteries to the (+) and (-) marks in the battery compartment.
- 4. Replace the cover.

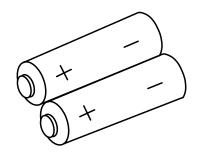

#### **BOTTOM VIEW**

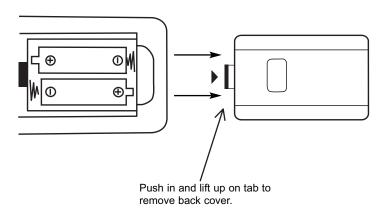

#### **CAUTION:**

- 1. If your television set is to remain unused for a long period of time, for instance when you go on vacation, unplug the television from the wall outlet.
- 2. Do not subject the remote control to shocks such as dropping it on the floor, etc. Precision parts may be damaged.
- 3. Do not allow the remote control to become wet and avoid placing it in areas of high humidity. Do not leave it on or near a heater. Excess heat or moisture may cause the unit to cease operation.
- 4. If the batteries become exhausted, remote control operation may become erratic or stop altogether. Replace the old batteries with new AA type.

#### **NOTES:**

- 1. The CHANNEL NO., VOLUME and OFF TIMER indicator are not displayed simultaneously.
- 2. To operate your TV, point the remote control at the remote sensor of the TV.

## HOW TO SET UP YOUR NEW HITACHI COLOR TV



#### **ANTENNA**

Unless your color TV is connected to a cable TV system or to a centralized antenna system, a good outdoor color TV antenna is recommended for best performance. However, if you are located in an exceptionally good signal area that is free from interference and multiple image ghosts, an indoor antenna may be sufficient.

#### LOCATION

Select an area where sunlight or bright indoor illumination will not fall directly on the picture screen. Also, be sure that the location selected allows a free flow of air to and from the back cover of the set.


To avoid cabinet warping, cabinet color changes, and increased chance of set failure, do not place the color TV where temperatures can become excessively hot, for example, in direct sunlight or near a heating appliance, etc.


#### **VIEWING**

To view the color television screen at its best, test various locations in the room. The drawings below show several suggestions.

The best picture is seen by sitting directly in front of the color TV and about 6 to 9 feet from the screen. During daylight hours, reflections from outside light may appear on the screen. If so, drapes or screens can be used to reduce the reflection or the color TV can be located in a different section of the room.

If the color TV s audio output will be connected to a Hi-Fi system s external speakers, the best audio performance will be obtained by placing the speakers equidistant from each side of the receiver cabinet and as close as possible to the height of the picture screen center. For best stereo separation, place the external speakers at least four feet from the side of the color television, place the surround speakers to the side or behind the viewing area. Differences in room sizes and acoustical environments will require some experimentation with speaker placement for best performance.

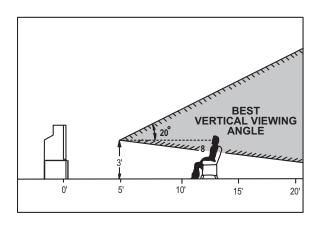

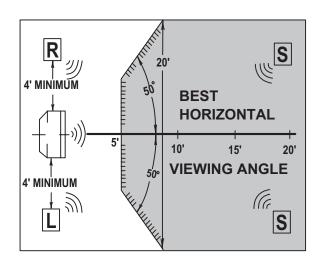


CAUTION:

The magnetic field of external speakers may cause the picture to distort if the speakers are placed too close to the color television. Move the speakers away from the color TV until there is no picture distortion.

## **HOOK-UP CABLES AND CONNECTORS**

 Most video/audio connections between components can be made with shielded video and audio cables that have phono connectors. For best performance, video cables should use 75-Ohm coaxial shielded wire. Cables can be purchased from most stores that sell audio/video products. Below are illustrations and names of common connectors. Before purchasing any cables, be sure of the output and input connector types required by the various components and the length of each cable.



#### 300-Ohm Twin Lead Connector

This outdoor antenna cable must be connected to an antenna adapter (300-Ohm to 75-Ohm).

#### "F" Type 75-Ohm Coaxial Antenna Connector

For connecting RF signals (antenna or cable TV) to the antenna jack on the television.





#### **Phono Connector**

Used on all standard video and audio cables which connect to inputs and outputs located on the television s rear jack panel and front control panel.

#### S-Video (Super Video) Connector

 
This connector is used on camcorders, VCRs, and laserdisc players with an S-Video feature in place of the standard video cable to produce a high quality picture.

#### **Antenna Connections**

These sets are equipped with one VHF/UHF antenna terminal. The VHF/UHF terminal can be used for normal TV, cable TV (CATV), a TV game, etc.


#### 1. VHF (75-Ohm) antenna/CATV (Cable TV)

When using a 75-Ohm coaxial cable system, connect the outdoor antenna or CATV coaxial cable to the ANT A (75-Ohm) terminal. If you have a second antenna or cable TV system, connect the coaxial cable to the ANT B terminal.




3. When both VHF and UHF antennas are connected Attach an optional ANTENNA MIXER to the TV antenna terminal and connect the cables to the

 ANTENNA MIXER.



#### 2. VHF (300-Ohm) antenna/UHF antenna

 
When using a 300-Ohm twin lead from an outdoor antenna disconnect the (VHF or UHF) indoor antenna leads from screws of the (VHF or UHF) adaptor and connect outdoor (VHF or UHF) antenna leads to these screws of a (VHF of UHF) adaptor.



#### Notes:

- If an outdoor antenna/CATV is used, disconnect the indoor antenna. Ghosting and poor reception may result if both the indoor and outdoor antennas/CATV are connected at the same time.
- Consult your dealer or service store for the ANTENNA MIXER and (VHF or UHF) adaptor.
- 3. The special converter (decoder) will be supplied by the cable company.



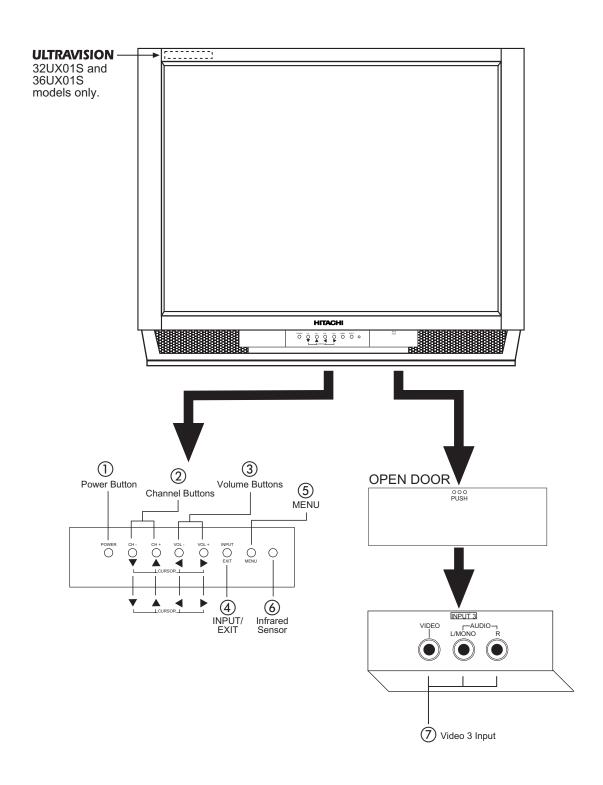

A detailed explanation of the circled numbers is on page 10. See page 22 and 24 for MENU, CURSOR, and EXIT button operations.



## FRONT PANEL CONTROLS

1 POWER Button

Press this button to turn the TV on or off.

(2) CHANNEL Selector

Press these buttons until the desired channel appears in the top right corner of the TV screen.

(3) VOLUME Level

Press these buttons for your desired sound level. The volume level will be displayed on the TV screen.

(4) INPUT/EXIT Button

Press this button to select the current antenna or VIDEO source. Your selection is shown in the top right corner of the screen. This button also serves as the EXIT button when in MENU mode.

NOTE:

Your HITACHI TV will appear to be turned OFF if there is no video input when VIDEO Source is selected. Press the INPUT button until the normal broadcast picture appears. (See page 23) If the picture does not appear, the power is OFF.

5 MENU Button

This button allows you to enter the MENU, making it possible to set TV features to your preference with out using the remote.

6 REMOTE CONTROL INFRARED Sensor


Point your remote control at this area when selecting channels, adjusting volume, etc.


(7) FRONT INPUT JACKS


Use these audio/video jacks for a quick hook-up to a comcorder or VCR to instantly view your favorite show or new recording. Press the INPUT button until VIDEO:3 appears in the top right corner of the TV screen. If you have mono sound, insert the audio cable into the left channel jack.



The front panel jacks are provided as a convenience to allow you to easily connect a camcorder or VCR as shown in the following examples:

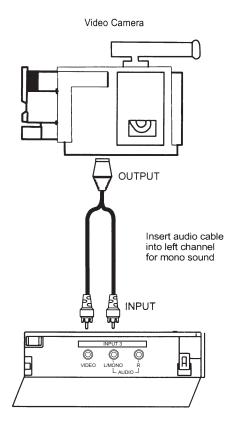


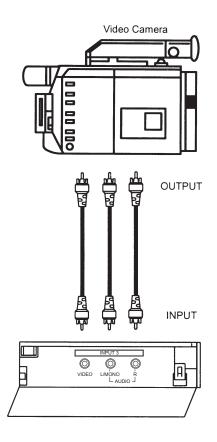

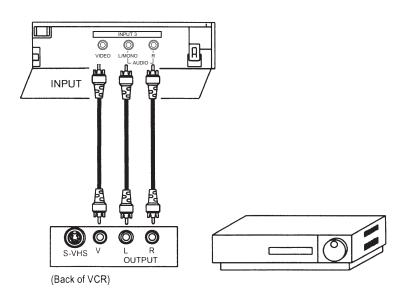

**NOTE:** Completely insert connection cord plugs when connecting to front panel jacks. If you do not, the picture that is played back may be abnormal.



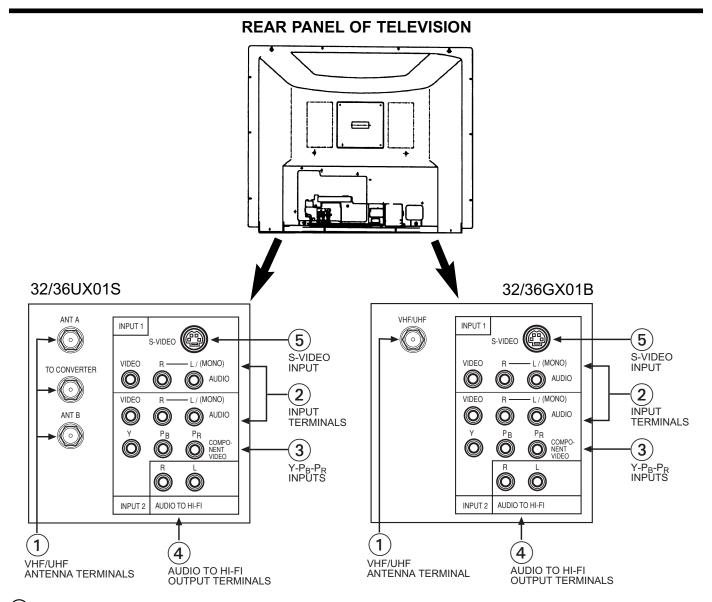

#### (1) Antenna Inputs

#### 32GX01B and 36GX01B models

The VHF/UHF terminal can be used for Normal TV, Cable TV (CATV), video games, etc.

#### 32UX01S and 36UX01S models

The remote control allows you to switch between two separate 75-Ohm RF antenna inputs, ANT A and ANT B. ANT A input can be displayed as a main picture or sub-picture. ANT B can only be displayed as a main picture. (ANT B cannot be displayed as a sub-picture.) The antenna output labeled TO CONVERTER allows the ANT A connection to pass directly to a different source such as a cable box.

#### (2) Audio/Video Inputs 1, 2

The INPUT button will step through each video source and antenna source input each time it is pressed. Use the audio and video inputs to connect external devices, such as VCRs, camcorders, laserdisc players, etc. (If you have mono sound, insert the audio cable into the left channel jack.)

### (3) Y-P<sub>B</sub>P<sub>R</sub> Input

This input provides Y-P<sub>B</sub>P<sub>R</sub> jacks for connecting equipment with this capability, such as a DVD Player. This input can receive 480i signal only.


#### (4) Audio to HI-FI

These jacks provide variable audio output to a separate stereo amplifier. With this connection, the audio to the stereo can be controlled by the television s main volume. Use these jacks for the SURROUND Left and Right channels. (See page 19)

#### (5) S-Video


Inputs 1 provide S-Video (Super Video) jacks for connecting equipment with S-Video output capability.



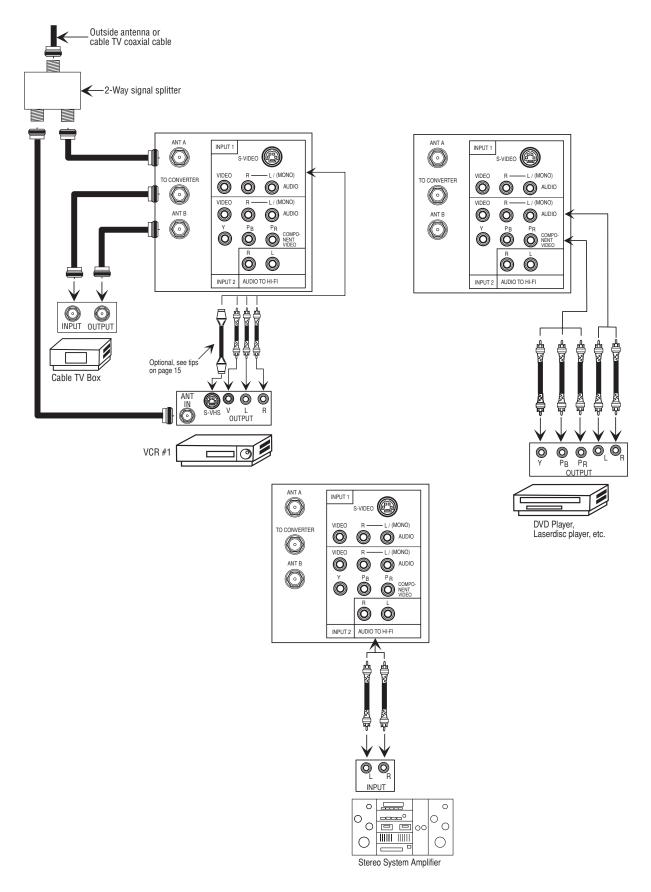

Typical full feature setup. Follow connections that pertain to your personal entertainment system.



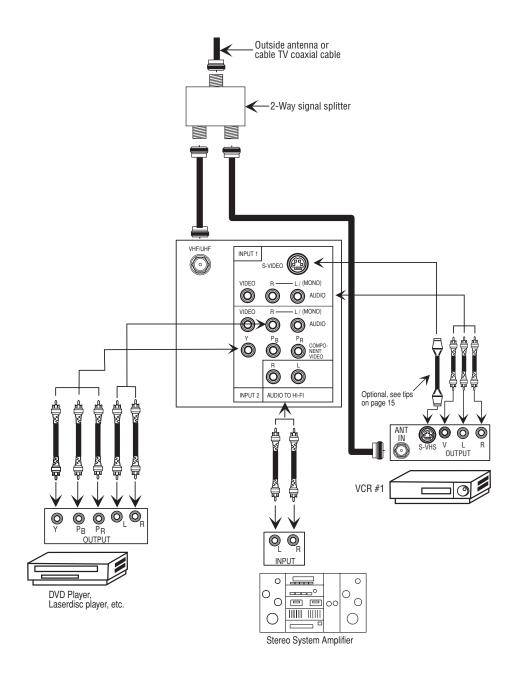

## TIPS ON REAR PANEL CONNECTIONS



The S-Video connections are provided for high performance laserdisc players, VCRs etc. that have this feature. Use these connections in place of the standard video connection if your device has this feature.

COMPONENT: Y- $P_BP_R$  connections are provided for high performance components, such as DVD players. Use these connections in place of the standard video connection if your device has this feature.

When using the Y-P<sub>B</sub>P<sub>R</sub> input jacks, connect your components audio output to the TV s Input 2 Left and Right Audio input jacks.


If your device has only one audio output (mono sound), connect it to the left audio jack on the television.

Refer to the operating guide of your other electronic equipment for additional information on connecting your hook-up cables.

## **EXTERNAL CONNECTIONS**

#### **CONNECTING EXTERNAL AUDIO AMPLIFIER**

To control the audio level of an external audio amplifier with the remote control, connect the system as shown below.

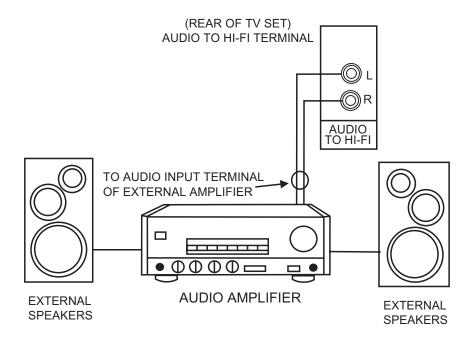

**NOTE:** To prevent damage to the speaker and distorted sound, set the volume control of the audio amplifier lower and adjust the sound using the remote control of the TV set.

## **CONNECTING EXTERNAL VIDEO SOURCES**

 
The exact arrangement you use to connect the VCR, camcorder, laserdisc player to your TV set is dependent on the model and features of each component. Check the owner's manual of each component for the location of video and audio inputs and outputs.

The following connection diagrams are offered as suggestions. However, you may need to modify them to accommodate your particular assortment of components and features. For best performance, video and audio cables should be made from coaxial shielded wire.

#### **Before Operating External Video Source**

The input mode is changed every time the INPUT button is pressed as shown below. Connect an external source to the INPUT terminal, then press the INPUT button as necessary to view the input source. (See page 23.)


#### INPUT MODE SELECTION ORDER



**NOTE:** When the TV is set to VIDEO and a video signal is not received from the VIDEO INPUT JACK on the jack panel of the TV (i.e., VCR/laserdisc player, etc. is not connected or the video device is OFF), the screen will be gray-blue.

#### CONNECTING A MONAURAL AUDIO VCR OR LASERDISC PLAYER


- 1. Connect the cable from the VIDEO OUT of the VCR or the laserdisc player to the INPUT (VIDEO) jack on the TV set below.
- 2. Connect the cable from the AUDIO OUT of the VCR or the laserdisc player to the INPUT (MONO)/L(AUDIO) jack.
- 3. Press the INPUT button to view the program from the VCR or the laserdisc player. The VIDEO mode disappears automatically after approximately eight seconds.
- 4. Press the INPUT button to return to the previous channel.

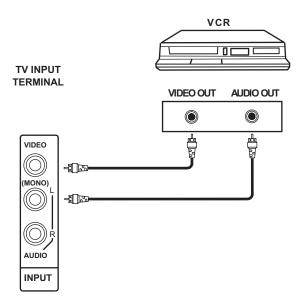



#### CONNECTING A STEREO VCR OR STEREO LASERDISC PLAYER

- 1. Connect the cable from the VIDEO OUT of the VCR of the laserdisc player to the INPUT (VIDEO) jack on the TV set below.
- 2. Connect the cable from the AUDIO OUT R of the VCR or the laserdisc player to the INPUT(AUDIO/R) jack.
- 3. Connect the cable from the AUDIO OUT L of the VCR or the laserdisc player to the INPUT(AUDIO/L) jack.
- 4. Press the INPUT button to view the program from the VCR or laserdisc player. The mode VIDEO disappears automatically after approximately eight seconds.
- 5. Press the INPUT button to return to the previous source.

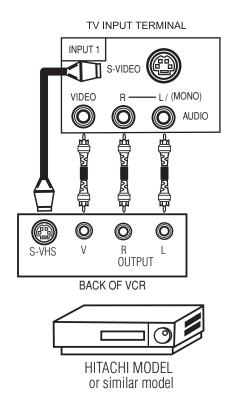

NOTE:


Completely insert the connection cord plugs when connecting to rear panel jacks. The picture that is played back will be abnormal if the connection is loose.

If you have an S-VHS VCR, use the S-INPUT cable in place of the standard video cable.


## CONNECTING EXTERNAL VIDEO SOURCES

#### CONNECTING A STEREO LASERDISC PLAYER OR DVD PLAYER TO INPUT 2.

- 1. Connect the cable from the YOUT of the Laserdisc or the DVD player to the INPUT 2 (Y) jack as shown below.
- Connect the cable from the P<sub>B</sub> OUT of the Laserdisc or the DVD player to the INPUT 2 (P<sub>B</sub>) jack, as shown below.
- Connect the cable from the P<sub>R</sub> OUT of the Laserdisc or the DVD player to the INPUT 2 (P<sub>R</sub>) jack, as shown below.
- Connect the cable from the AUDIO OUT R of the Laserdisc or DVD player to the INPUT 2 (AUDIO/R) jack.
- 5. Connect the cable from the AUDIO OUT L of the Laserdisc or DVD player to the INPUT 2 (AUDIO/L) jack.
- 6. Press the INPUT button until Y-PBPR appears, to view the program from the Laserdisc or DVD player. The mode Y-PBPR disappears automatically after approximately eight seconds.
- 7. Press the INPUT button to return to the previous source.

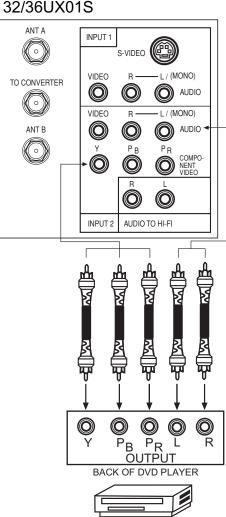

#### 32/36GX01B

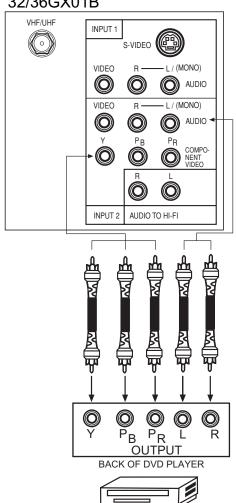

Completely insert the cable connection when connecting to rear panel jacks. The picture that is played back will be NOTE: abnormal if the connection is loose.

If you have a COMPONENT DVD or LASERDISC, use the COMPONENT connections in place of the standard or S-Video connection.


Y-P<sub>R</sub>P<sub>R</sub> can receive 480i signal only.

See Page 14 for TIPS ON REAR PANEL CONNECTIONS.



Match the numbers below to the diagrams for speaker placement and refer to the table for the different surround sound requirements. (See page 52 for SURROUND functions.)

- 1 The television s internal speakers.
- 2 These speakers are connected to a separate audio amplifier. Use the Audio to HI-FI output on the television.

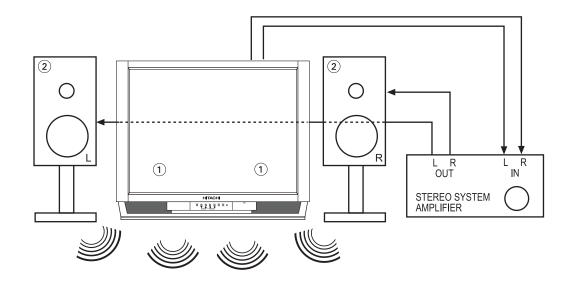

SURROUND FEATURE	REQUIRED CONNECTION	OPTIONAL CONNECTION	EFFECT
OFF	①	2	Receive mono and stereo sound.
ON	①,②		Surround channel added to left and right audio amplifier speakers.




In addition to controlling all the functions on your HITACHI Color TV, the new remote control is designed to operate different types of VCRs, DVD, CATV (Cable TV), and satellite converters with one touch. Basic operation keys are grouped together in one area.

To operate your TV, point the remote control at the remote sensor of the TV and press the TV button. The remote will now control your television.

To operate your DVD/VCR, point the remote at the remote sensor of the VCR and press the VCR button. The remote will now control your VCR. (See page 28 for instructions on how to program the remote to control your VCR.)


To operate your cable/satellite box, point the remote at the remote sensor of the cable/satellite box and press the CBL/SAT button. The remote will now control your cable/satellite box. (See page 29 for instructions on how to program the remote to control your cable/satellite box.)

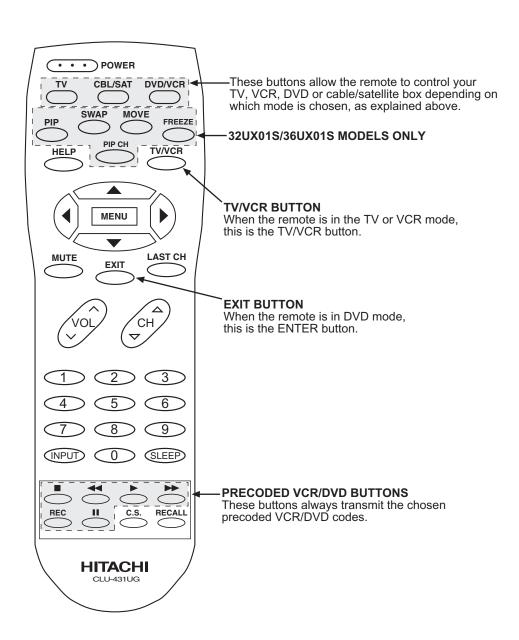





A detailed explanation of the circled numbers follows on pages 22 to 24.

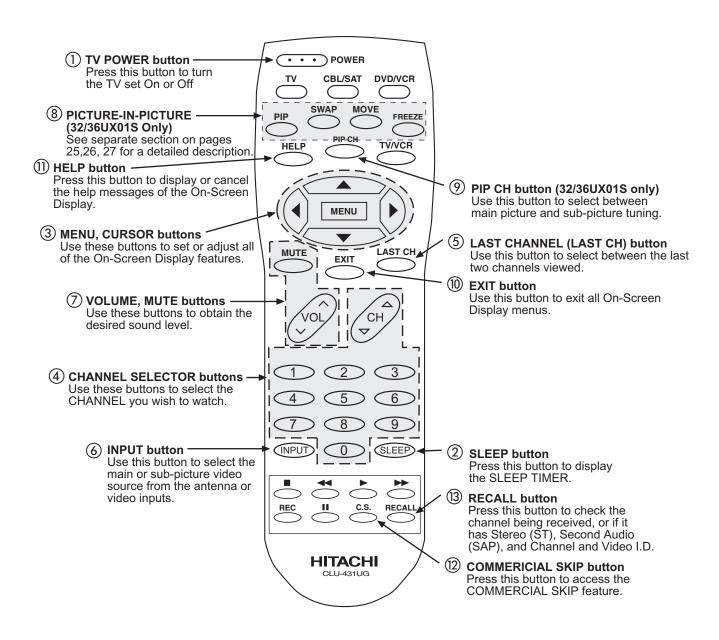

#### HOW TO USE THE REMOTE TO CONTROL YOUR TV

(1) TV POWER button

Press this button to turn the TV set on or off.

(2) SLEEP button

Press this button to display the SLEEP TIMER in the lower left corner of the screen. Every subsequent press of this button will add 15 minutes to the timer, up to a maximum of three hours.

(3) MENU, CURSOR buttons

All On-Screen Display features can be set or adjusted by using these buttons.

The MENU button will start the On-Screen Display.

The CURSOR buttons will highlight functions or adjust and set different features when MENU is pressed.

The CURSOR button will move PIP position when PIP is on. (32/36UX01S models only)

CURSOR buttons will also give you acces to FAMILY FAVORITES On-Screen Display.

(4) CHANNEL SELECTOR buttons

Enter two or three numbers to select channels. Enter 0 first for channels 1 to 9. For channels 100 and above, press the 1 button and wait for two seconds before pressing the last two digits of the channel.


Channel selection may also be performed by pressing CH up (▲) or down (▼).

You may also use these buttons for channel scanning. Press and hold the CH up ( $\blacktriangle$ ) or down ( $\blacktriangledown$ ) buttons and the TV will start quickly scanning through the channels. Release the CH up ( $\blacktriangle$ ) or down ( $\blacktriangledown$ ) buttons when the TV scans to the channel you wish to watch and the TV will tune to that channel.

NOTE: The TV may not receive some channels if you are not in the correct SIGNAL SOURCE mode. (see page 35)

#### (5) LAST CHANNEL button

Use this button to select between the last two channels viewed. (Good for watching two sporting events, etc.)

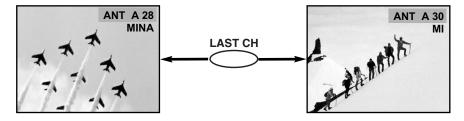




#### (6) INPUT button

#### 32GX01B and 36GX01B models

The INPUT button will select between antenna signal and the video inputs.

#### 32UX01S and 36UX01S models

The INPUT button will select between both antenna signals and the video input; if the Sub-picture is on, and the main picture is chosen with the PIP CH, the main picture will alternate between the video inputs and both antenna sources by every press of the INPUT button, if the Sub-Picture is chosen with the PIP CH, the Sub-Picture will alternate between the video inputs and Antenna A source by every press of the input button.

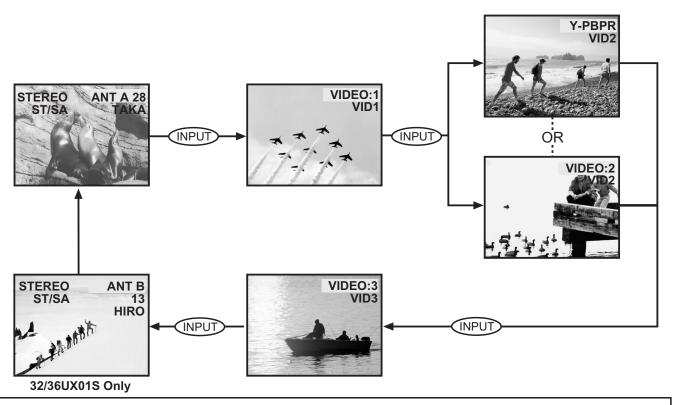

#### NOTE:

- 1. 32/36UX01S models, antenna B can not be displayed as a Sub-Picture.
- 2. Y-PBPR can not be displayed as a Sub-Picture.
- 3. Signals priority:
  - -Component Signal (Y-PBPR); Has the highest priority when connected in VIDEO 2 mode.
  - -Super Video Signal; Has a higher priority than the normal video signal in VIDEO 1 mode.

## HOW TO USE THE REMOTE TO CONTROL YOUR TV

#### (7) VOLUME, MUTE buttons

Press the VOLUME up (▲) or down (▼) button until you obtain the desired sound level.

To reduce the sound to one half of normal volume (SOFT MUTE) to answer the telephone, etc., press the MUTE button. Press the MUTE button again to turn the sound off completely (MUTE). To restore the sound, press the MUTE button one more time, or press the VOLUME up (**A**) button.



#### 8 PICTURE-IN-PICTURE (32/36UX01S models)

See separate section on pages 25-27 for a description.

#### (9) PIP CH buton (32/36UX01S models)

Use the PIP CH button to select between main picture and sub-picture tuning. The gray background on the channel number will indicate which channel is being controlled. This function is not available on 32/36GX01B models.

#### (10) EXIT button

When in MENU mode, this button will exit all On-Screen Displays.

#### (11) HELP button

Press this button if help is needed to change menu setting, and our context sensitive help system will provide explanations and/or directions for whatever function your cursor is on at that time.

Press this button again to cancel the help messages.


#### (12) COMMERCIAL SKIP button

Press this button to access the COMMERCIAL SKIP (CS) function. The COMMERCIAL SKIP timer icon will be displayed in the lower left corner of the screen beginning from 30 seconds of time out. Every subsequent press of this button will add 30 seconds to the COMMERCIAL SKIP timer, up to a maximum of 180 seconds. In COMMERCIAL SKIP, you can change to any station you wish to view with CH up (▲) or down (▼) and the digit keys, but after the COMMERCIAL SKIP timer reaches zero, it automatically changes back to the original station.

#### (13) RECALL button

Press this button when no menu is displayed to enable RECALL function. Use the RECALL function to check the channel being received, or if it has stereo (ST) or second audio (SAP).

You can also check the time, CHANNEL and VIDEO ID, if they are set.

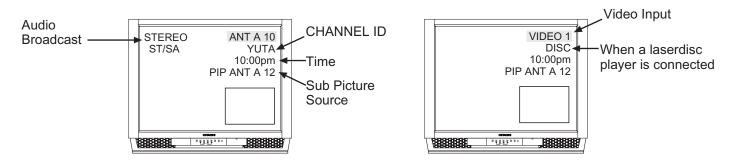

## PICTURE-IN-PICTURE (PIP) (32UX01S AND 36UX01S)



#### 32/36UX01S models only.


The Picture-in-Picture feature is convenient when you want to watch more than one program at the same time. You can watch a TV program while viewing other programs from the antenna source or any of the video inputs.

Your HITACHI Color TV incorporates Dual Tuner technology designed for improved viewing enjoyment. This Dual Tuner feature allows you to view antenna inputs on both the main picture and Sub-Picture simultaneously, with separate tuning control for each. The Dual Tuner can operate with only one input (ANT A only) or two inputs (ANT A and ANT B).

ANT A input can be viewed as the main picture and as the Sub-Picture. ANT B can only ve viewed as a main picture. To select between main picture and PIP Sub-Picture while tuning, press PIP CH button on the remote. The gray background will move with every press of the PIP CH button. When the gray background is on the top channel display, channel tuning is for the main picture. When the gray background is on the lower channel display, channel tuning is for the Sub-Picture. This method of picture tuning is the same for one antenna input (ANT A only) and two antenna inputs (ANT A and ANT B).


#### 32/36GX01B models:

Do not incorporate Dual Tuner technology.

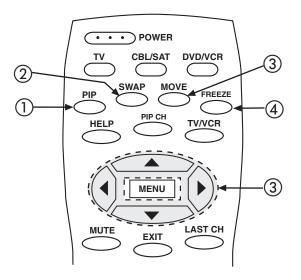

## 1 PIP button 32/36UX01S models only.

Press the PIP button and a Sub-Picture appears in one corner of the screen. Press the button again to remove the Sub-Picture from the screen. Use the PIP CH button to select between main and Sub-Picture tuning control (indicated by the gray background on the channel numbers). Press the INPUT button when Sub-Picture channel tuning is being controlled, to change between the Video Inputs and ANT A antenna source (ANT B source cannot be viewed as a Sub-Picture).

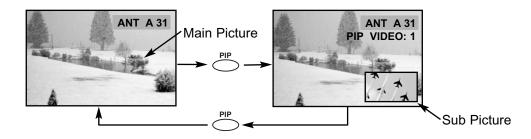


**NOTE:** When PIP is displayed, the CURSOR button will not activate the FAMILY FAVORITE menu. The CURSOR button will move the PIP positions.



## PICTURE-IN-PICTURE (PIP) (32UX01S and 36UX01S)
 
#### (2) SWAP button


If you wish to switch what is being shown on the main picture to the Sub-Picture, press the SWAP button.



**NOTE:** The SWAP function will not operate if ANT B input is set as the main channel (ANT B input cannot be displayed as a sub-picture).

#### (3) MOVE button


To move the sub-picture to another corner, press the MOVE button. the sub-picture moves one step counterclockwise every time the MOVE button is pressed. (Example below illustrates the MOVE operation for initial shipping conditions. If you have customized a PIP position, the MOVE operation may differ slightly from this example). It is also possible to customize the PIP position. To do this, press the CURSOR  $\blacktriangle$ ,  $\blacktriangledown$ ,  $\blacktriangleright$ ,  $\blacktriangleleft$  buttons.

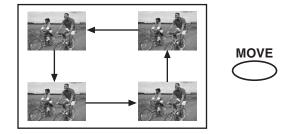




#### (4) FREEZE button

If you wish to freeze the Sub-Picture, press the FREEZE button. This is convenient when trying to write down the address for a mail order company, recording statistics for a sporting event, etc. To return the picture to motion, press the FREEZE button

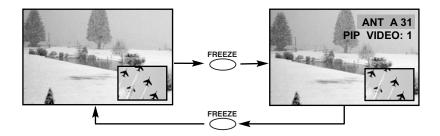

#### **Quick FREEZE button**

Press this button without a Sub-Picture to freeze the picture you are currently viewing. Press this button again to return to normal viewing.

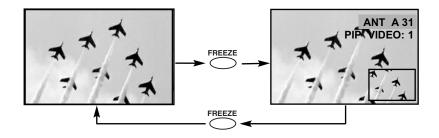

NOTE: Y-PBPR signal can not be displayed as a Sub-Picture.



CAUTION: A pattern burn may develop if the Sub-Picture is left in the same corner permanently. If the PIP feature is used frequently, occasionally shift the Sub-Picture to a different corner. You may also vary its position using the CURSOR **△**, **▼**, **▶**, **◄** buttons.




## USING THE REMOTE TO CONTROL VCR FUNCTIONS

#### Operating the precoded function for your VCR.

This remote is designed to operate different types of VCRs. You must first program the remote to match the remote system of your VCR. (refer to page 31)

- 1. Turn ON your VCR.
- 2. Aim the remote control at the front of your VCR.
- 3. Press the DVD/VCR button to switch to the VCR pre-coded mode.
- 4. Hold down the DVD/VCR button on the remote, enter the two digit preset code that matches your VCR as shown on page 31. The remote will turn off your VCR when the correct two digit preset code is entered. When this occurs, the remote control is programmed for your VCR. If the VCR does not turn off after five seconds, try a different two digit preset code.
- 5. The remote will now control you VCR.

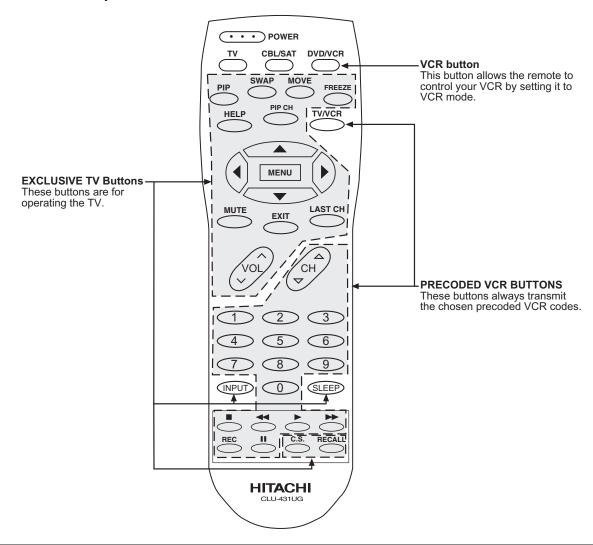

#### NOTES:

- 1. If your VCR cannot be operated after performing the above procedures, your VCR s code has not been precoded into the remote.
- 2. In the unlikely event that your VCR cannot be operated after performing the above procedures, please consult your VCR operating guide.
- 3. The remote control will remember the codes you have programmed until the batteries are removed from the remote control. After replacing the batteries repeat the entire programming procedure as stated above.
- 4. The INPUT button will act as your VCR 100 button if required.

**NOTE:** Refer to instruction manual of the VCR for operation of the buttons exclusively for the VCR.


## USING THE REMOTE TO CONTROL DVD FUNCTIONS



#### Operating the precoded function for your DVD Player.

This remote is designed to operate different types of DVD Players. You must first program the remote to match the remote system of your DVD Player. (refer to page 31)

- 1. Turn ON your DVD Player.
- 2. Aim the remote control at the front of your DVD Player.
- 3. Press the DVD/VCR button to switch to the DVD Player pre-coded mode.
- 4. Hold down the DVD/VCR button on the remote, enter the two digit preset code that matches your DVD Player as shown on page 31. The remote will turn off your DVD Player when the correct two digit preset code is entered. When this occurs, the remote control is programmed for your DVD Player. If the DVD Player does not turn off after five seconds, try a different two digit preset code.
- 5. The remote will now control you DVD Player.

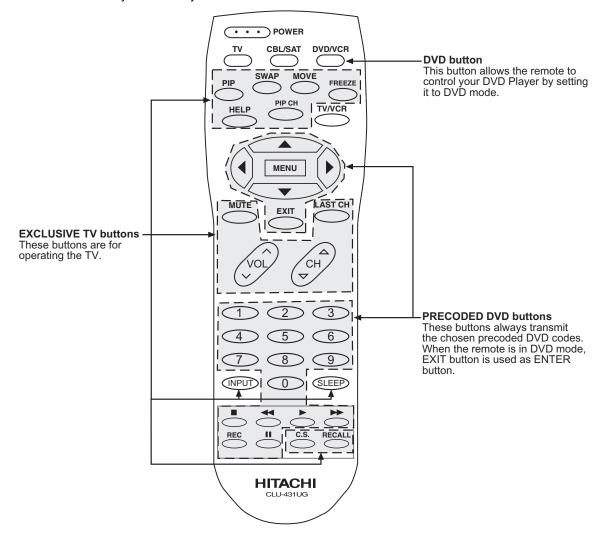

#### NOTES:

- 1. If your DVD Player cannot be operated after performing the above procedures, your DVD Player's code has not been precoded into the remote.
- In the unlikely event that your DVD Player cannot be operated after performing the above procedures, please consult your DVD Player operating guide.
- 3. The remote control will remember the codes you have programmed until the batteries are removed from the remote control. After replacing the batteries repeat the entire programming procedure as stated above.


NOTE: Refer to instruction manual of the DVD Player for operation of the buttons exclusively for the DVD Player.

## USING THE REMOTE TO CONTROL CABLE BOX/SATELLITE FUNCTIONS

#### Operating the precoded function for your cable/satellite box.

This remote is designed to operate different types of cable boxes and satellite systems. You must first program the remote to match the remote system of your cable/satellite box. (refer to page 31)

- 1. Turn ON your cable/satellite box.
- 2. Aim the remote control at the front of your cable/satellite box.
- 3. Press the CBL/SAT button to switch to the cable/satellite box pre-coded mode.
- 4. Hold down the CBL/SAT button on the remote, enter the two digit preset code that matches your cable/satellite box as shown on page 31. The remote will turn off your cable/satellite box when the correct two digit preset code is entered. When this occurs, the remote control is programmed for your cable/satellite box. If the cable/satellite box does not turn off after five seconds, try a different two digit preset code.
- 5. The remote will now control you cable/satellite box.

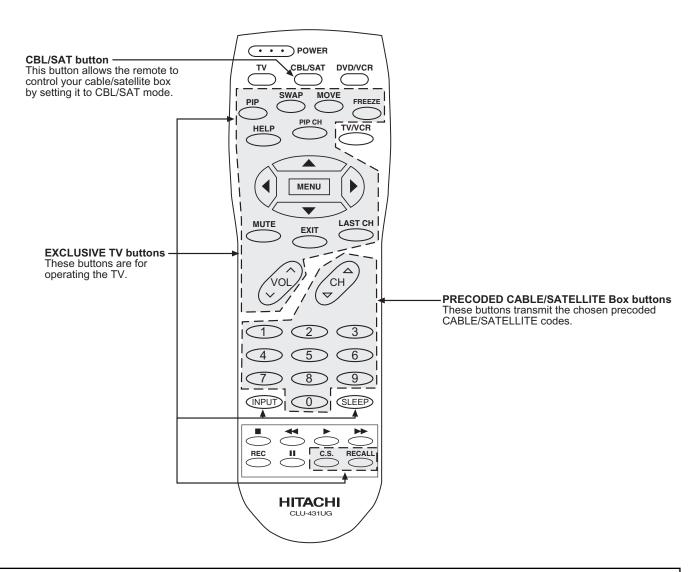

#### NOTES:

- 1. If your cable/satellite box cannot be operated after performing the above procedures, your cable/satellite box s code has not been precoded into the remote.
- 2. In the unlikely event that your cable/satellite box cannot be operated after performing the above procedures, please consult your cable/satellite box s operating guide.
- The remote control will remember the codes you have programmed until the batteries are removed from the remote control. After replacing the batteries repeat the entire programming procedure as stated above.







CABLE BRAND General Instrument Hamlin	.26,27,28 .18,19,20 13,14 .08,09,10 15,16
SATELLITE BRAND General Instrument Hitachi Hughes Panasonic Primestar Proscan RCA Sony	
VCR BRAND Aiwa Bell+Howell Daewoo Emerson .20,21 Fisher .34 General Electric Go-Video Hitachi .00,01,02,03 JVC .18 Magnavox .18 Mitsubishi .27 NEC Panasonic Philips Samsung Scott Sharp Shintom Sony Symphonic Teknica Toshiba	
DVD BRAND Hitachi Panasonic Pioneer RCA Sony Toshiba	54 55 56 53

 



- Press MENU on the remote control to display the different features on your HITACHI color TV.
- 2. Press the CURSOR buttons to highlight and select different features.
- 3. Press EXIT on the remote control to quickly exit from a menu.
- 4. Press HELP on the remote control when a menu is displayed, and text will appear giving a description of that menu.

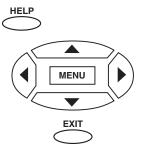


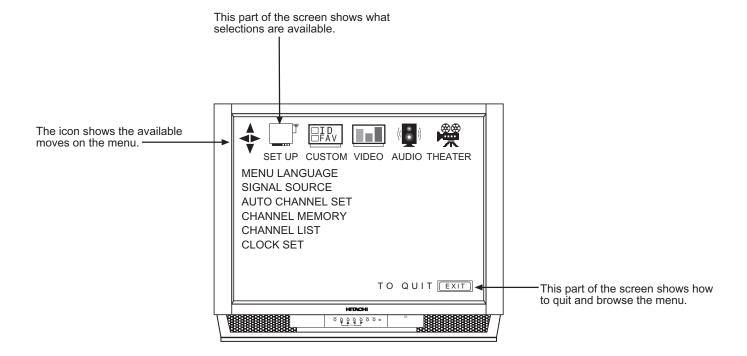





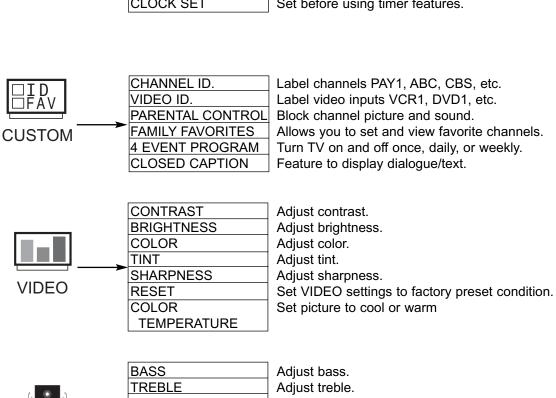

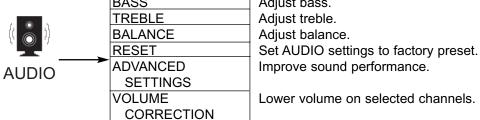









Select SETUP when setting your TV up for the first time. Use the CURSOR  $\blacktriangle$  or  $\blacktriangledown$  on the remote to highlight the function desired.

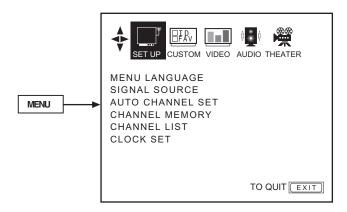

**NOTE:** To see an auto-demonstration of the on-screen displays with HELP text displayed, press and hold the POWER button on the TV set for approximately five seconds. Press the POWER button on the TV again to end the auto-demonstration.

**MENU LANGUAGE** 

This feature will allow you to select any one of three different languages for all on-screen displays.

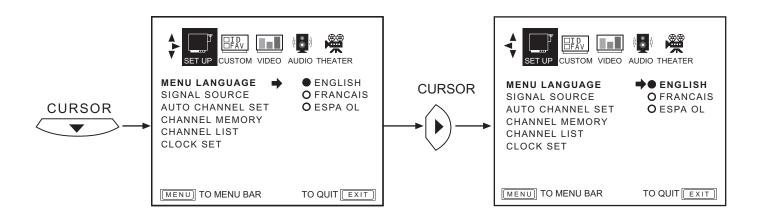


Use CURSOR ▲ or ▼ to select the MENU LANGUAGE of your choice.

Press EXIT to quit menu or CURSOR ◀ to return to previous menu.



**SIGNAL SOURCE** 

Select ANTENNA if you are using an indoor or outdoor antenna. Select CATV if you have cable TV.

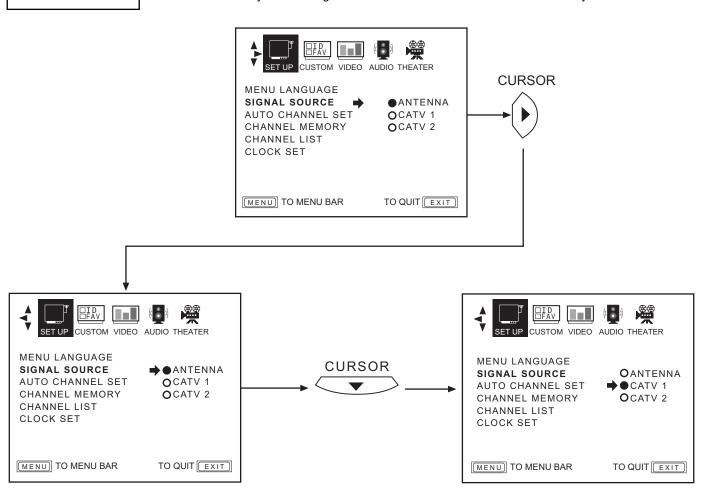

Press CURSOR ▲ or ▼ to highlight and select the correct SIGNAL SOURCE mode. Press EXIT to quit MENU or CURSOR ◀ to return to previous menu.

RECEPTION BAND				
	CATV 1 OR CATV 2			
AIR	CATV CHANNEL	Indicated on		
		the screen		
	VHF 2~13	2 ~ 13		
	Mid band A~1	14 ~ 22		
VHF 2 ~ 13ch	A-5 ~ A-1	95 ~ 99		
UHF 14 ~ 69ch	Super band J~W	23 ~ 36		
	Hyper band	37 ~ 64		
	W + 1 ~ W + 28			
	Ultraband	65 ~ 125		
	W + 29 ~ W + 84			

Reception channels for each mode are shown at the left.


Refer to your cable or TV guide for channel identification standards.

If certain CATV channels are poor or not possible in CATV1 mode, set SIGNAL SOURCE to CATV2.



**AUTO CHANNEL SET** 

This feature will automatically store active TV channels in CHANNEL MEMORY. This will allow you to skip unused channels when using CHANNEL UP ( $\blacktriangle$ ) or DOWN ( $\blacktriangledown$ ).

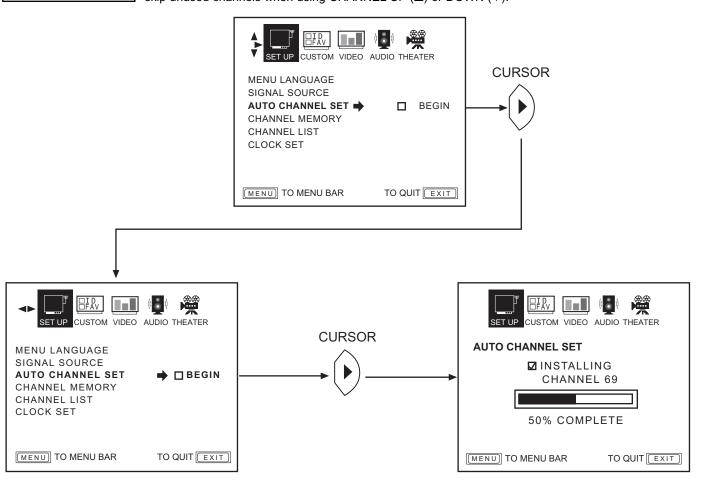

If the EXIT button is pressed while the AUTO CHANNEL SET function is engaged, programming will stop. After AUTO CHANNEL SET press EXIT to quit or CURSOR ◀ to return to previous menu.

#### 32/36UX01S models:


If two antennas are connected, switch antenna inputs with the INPUT button and repeat AUTO CHANNEL SET for the second antenna input.

Remember to select the correct SIGNAL SOURCE mode before using AUTO CHANNEL SET for the second antenna input. See CHANNEL MEMORY to add or erase additional channels. (see page 37)



**CHANNEL MEMORY** 

Use this function after AUTO CHANNEL SET to add or erase additional channels to the remote control CHANNEL ▲ or ▼ buttons.

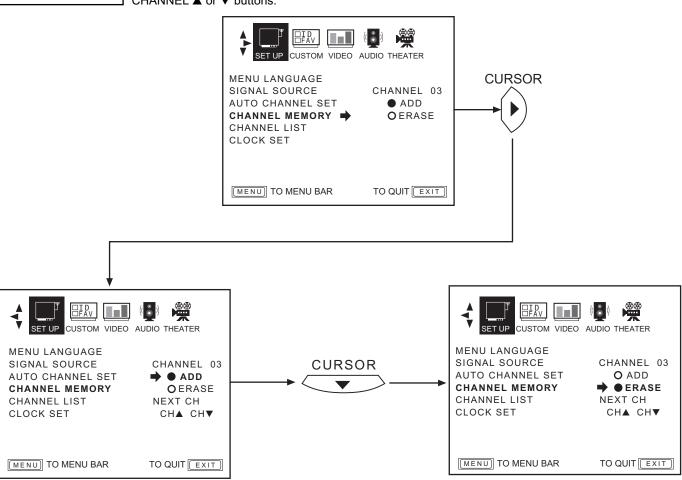


Add or erase additional channels while still in CHANNEL MEMORY using CHANNEL ▲ or ▼ or the number buttons to change the channel.

Press EXIT to quit menu or CURSOR ◀ to return to previous menu.



#### **CHANNEL LIST**

This function allows you to review which channels are labeled in CHANNEL ID (ID.), which have been added to CHANNEL MEMORY (SCAN), and which are protected by PARENTAL CONTROL LOCK (LOCK).

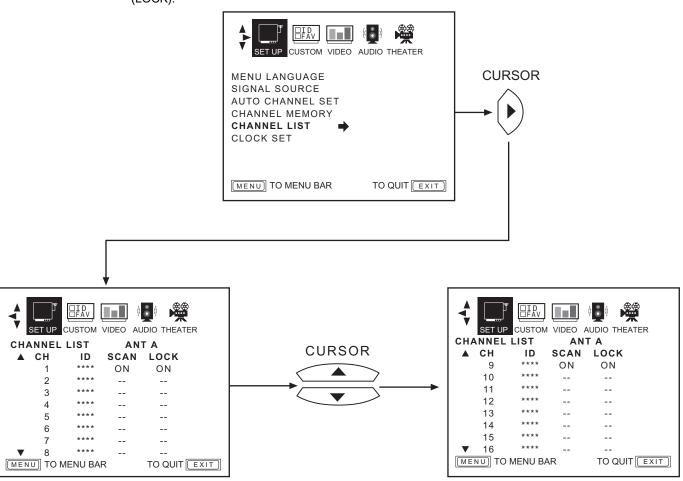

Press CURSOR ▲ or ▼ to review more channels.


Press EXIT to quit menu or CURSOR ◀ to return to previous menu.

**NOTE:** Each press of CURSOR ▲ or ▼ will display the next eight channels. For 32/36UX01S models, if ANT B source is selected, the header should read. Channel List ANT B.



**CLOCK SET** 

The time must be set before you can use the 4 EVENT PROGRAM or TV TIME OUT.

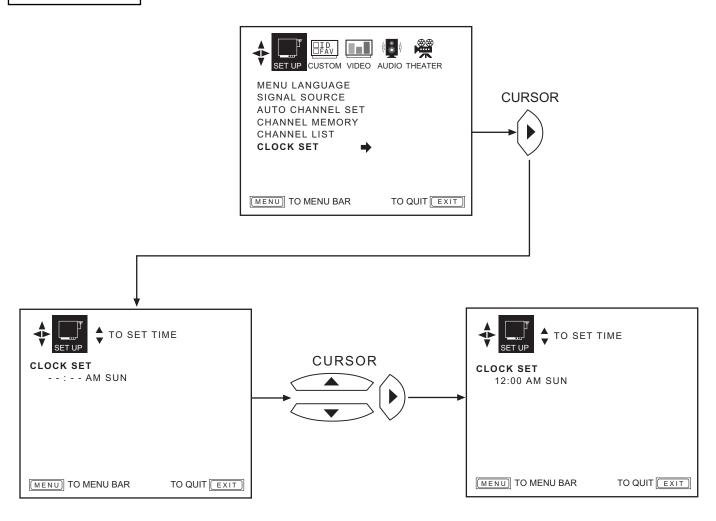

Use CURSOR ▲ or ▼ to set the time and day.

Press CURSOR ◀ or ▶ to change position.

Press EXIT to quit menu or CURSOR ◀ to return to previous menu when the CURSOR is in the first position.






This selection contains advanced features which will make TV viewing easier and more enjoyable.

CHANNEL ID.

Use this feature to give up to 20 channels a name when ANTENNA signal source is selected and up to 60 channels a name when CATV1 signal source is selected.

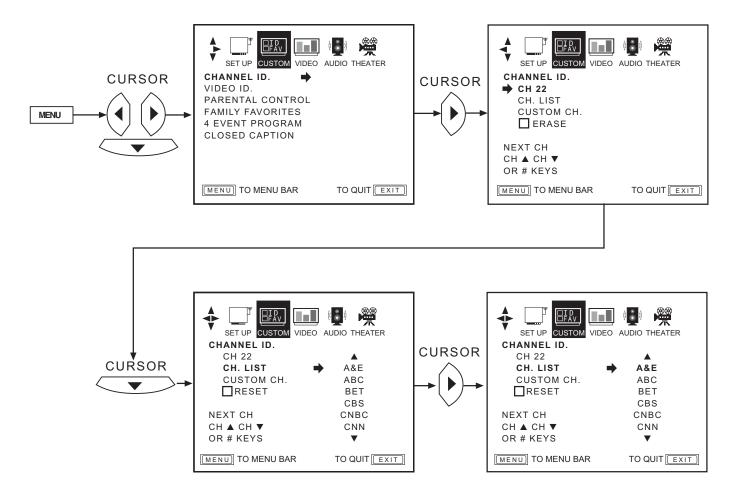

Press CURSOR ▲ or ▼ to scroll through the preset CHANNEL LIST.

Press CURSOR ▶ to select desired CHANNEL ID.

To customize CHANNEL ID, select CUSTOM CH.

Press CURSOR ▲ or ▼ to select letter.

Press CURSOR ◀ or ▶ to change character position.

(\*) represents a blank space.

Press CHANNEL ▲ or ▼ and the number buttons to label additional channels.

Press EXIT to quit menu or CURSOR ◀ to return to previous menu when the CURSOR is in the first position.

Select ERASE to erase a CHANNEL ID.


NOTE: 32/36UX01S models

If ANT A and ANT B are in the same SIGNAL SOURCE mode (see page 35), the CHANNEL ID for both antenna inputs will be the same. CHANNEL ID will be displayed only when channel is displayed as main picture.



VIDEO ID.

Use this feature to give a name to any of the video inputs.

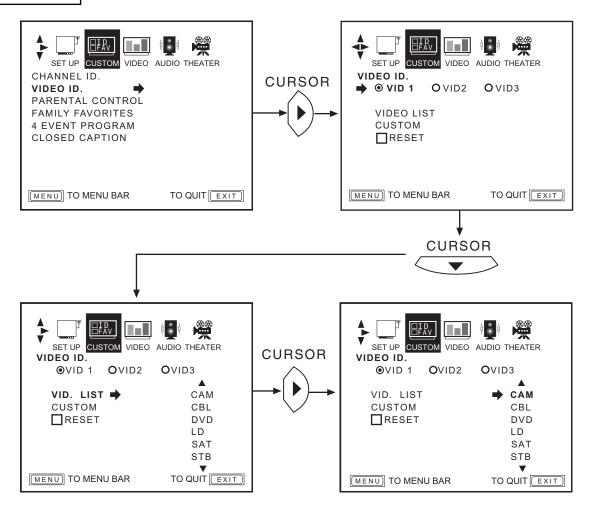

Press CURSOR ▲ or ▼ to scroll through the preset VIDEO LIST.

Press CURSOR ▶ to select desired VIDEO ID.

To customize VIDEO ID, select CUSTOM.

Press CURSOR ▶ (twice) to select the video input to be named.

Press CURSOR ▲ or ▼ to select letters.

Press CURSOR ▶ or ◀ to change position.

Press EXIT to quit menu or CURSOR ◀ to return to previous menu when the CURSOR is in the first position.

#### (\*) represents a blank space.

Select RESET to set VIDEO ID to original condition.


NOTE: VIDEO ID will be displayed only when VIDEO input is displayed as main picture.



PARENTAL CONTROL

This function will block out the picture and sound of the selected channel or video input. It can also be used to keep the TV from being viewed for a scheduled amount of time that you set.

The code to enter PARENTAL CONTROL is a four digit secret code number. The factory preset code is 0000. Use the number buttons to select secret code.

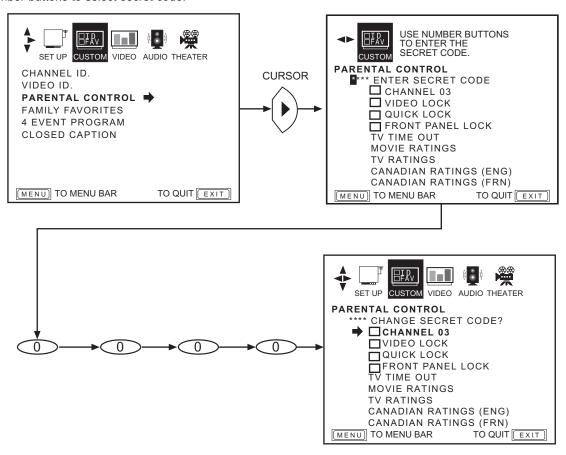

Use CURSOR ▲ or ▼ to highlight function and the CURSOR ▶ button to set ON or OFF.

When CHANNEL is turned on, the picture and sound for the chosen channel will be blocked out.

When VIDEO LOCK is turned on, the picture and sound for all video inputs will be blocked out.

When QUICK LOCK is turned on, the picture and sound for channels 3, 4 and all video inputs will be blocked out.

When FRONT PANEL LOCK is turned on, all buttons on the Front Panel will be deactivated, except the Power button.

When TV TIME OUT is turned on, you can set the BEGIN and END times and the TV cannot be viewed during that time period.(Set clock first.) Use CURSOR ▲ or ▼ to highlight ONCE (TV will time out one time only), DAILY (TV will time out every day), WEEKLY (TV will time out one time a week) or OFF (to disable this function) and then press cursor ▶ to select your choice.

To change the secret code number, select CHANGE SECRET CODE. Enter a new four digit key number you prefer.

If you forget your secret code, use the factory code 7777 to erase your key number. This will reset the secret code number back to the factory preset 0000.

Press EXIT to quit menu or cursor ◀ to return to previous menu.

NOTES:

- 1. For MOVIE/TV/CANADIAN RATINGS please refer to the PARENTAL CONTROL and MOVIE/TV RATINGS reference guide.
- 2. 32/36UX01S models


If ANT A and ANT B are in the same SIGNAL SOURCE mode, and channel is locked, it is locked on both antenna inputs.

When using TV TIME OUT make sure the clock is set (see page 39).



FAMILY FAVORITES (MENU)

This function allows you to group your favorite channels into six personalized categories that you can rename. A total of 24 channels can be stored in the FAMILY FAVORITES function.

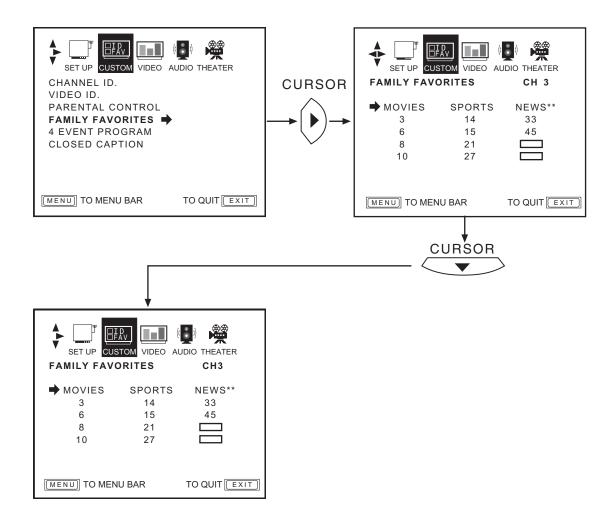

Press CURSOR ► to access the second part of the FAMILY FAVORITES menu when the cursor is in the first position. Channel stored with AUTO CHANNEL SET will automatically be stored in FAMILY FAVORITES.

To rename the categories, use the CURSOR buttons to highlight the category you would like to rename. Use CURSOR ▲ or ▼ to change a letter and CURSOR ▶ to select the next character to change.

To enter a channel into a category, highlight the channel location to be stored.

Press CHANNEL ▲ or ▼ or the number buttons to enter the desired channel. Repeat until category has been set with your favorite channels. The channel to be added is displayed in the top right corner of the screen. Enter channel 00 to erase a favorite channel.

To reset categories and channels back to original factory preset, press RECALL while you are renaming a category.

Press EXIT to quit menu, or CURSOR ◀ to return to previous menu when the CURSOR is in the first position.

NOTE: 32/36UX01S models


This function cannot be accessed when ANT B is the main channel.

When the set is in a SIGNAL SOURCE different from ANT A, the message PLEASE SWITCH TO ANT A will appear.



**FAMILY FAVORITES** (OPERATION)

Use this function to tune the main picture to a desired favorite channel.

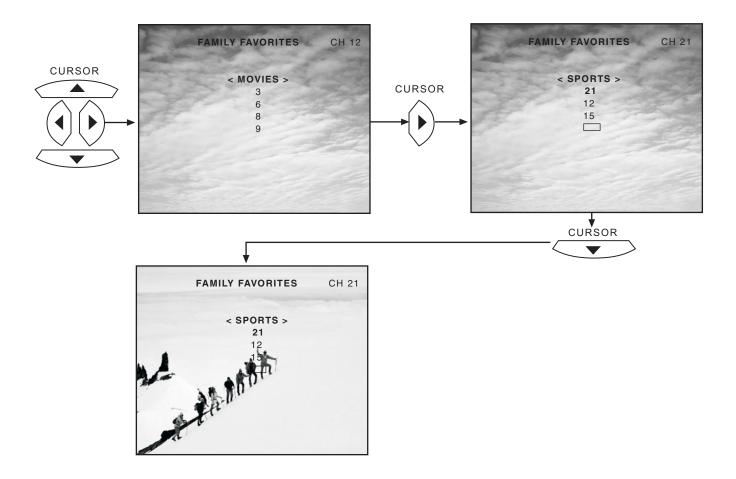

Press the CURSOR button.

Select a category using CURSOR ◀ or ▶ buttons.

Use CURSOR ▲ or ▼ buttons to highlight a favorite channel and the TV will automatically tune to that channel.


Press EXIT to remove FAMILY FAVORITES OSD from the screen.

NOTE: 32/36UX01S models

When PIP is displayed, the cursor will not activate the FAMILY FAVORITES menu. The CURSOR button will move

the PIP position.



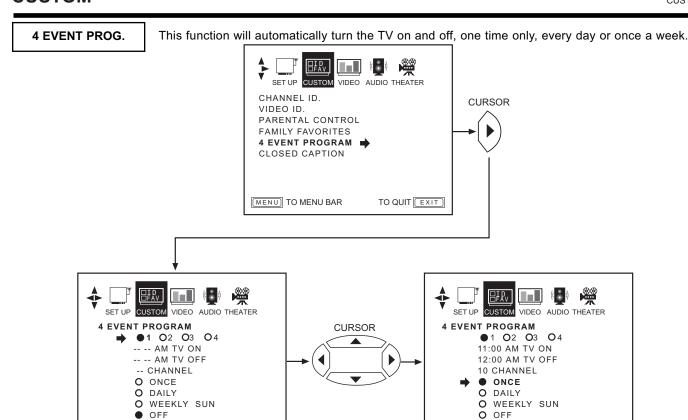

Press CURSOR ▶ to select PROGRAM 1, 2, 3, or 4.

MENU TO MENU BAR

Press CURSOR ▲ or ▼ to select the time the TV will turn on and off.

Use CURSOR ▶ to change position.

Press CURSOR ▲ or ▼ to highlight then CURSOR ▶ to select MODE: ONCE (TV will turn on/off one time only) or MODE: DAILY (TV will turn on/off at the same time every day), or MODE: WEEKLY (TV will turn on/off at same time every week) and MODE: OFF (to disable this function).

MENU TO MENU BAR


TO QUIT EXIT

Press CURSOR ▲ or ▼, CHANNEL (▲) or (▼), or number buttons to set the channel the TV will tune to when it automatically turns on.

Press EXIT to quit menu or cursor ◀ to return to previous menu.

If the clock is not set, you can not use this function and the screen below will appear.

TO QUIT EXIT

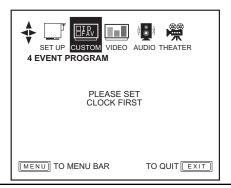

NOTES

- 1. The OFF Timer will only activate if the TV was turned on or tuned with the ON Timer and no channel selection was made after this time. If you change the channel after the ON Timer has been activated, the OFF Timer will deactivate
- 2. If no remote control button is pressed after ON Timer is activated, the TV will automatically turn off after three hours.




Do not use your TV as a deterrent when away from home by using the ON and OFF TIMERS. For safety, the TV should be turned off when you are away from home.



**CLOSED CAPTION** 

Closed captions are the dialogue, narration, and/or sound effects of a television program or home video which are displayed on the TV screen. Your local TV program guide denotes these programs as or .

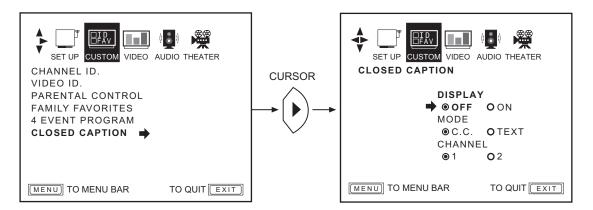

**DISPLAY:** ON/OFF will turn the CC display on or off.

**MODE:** C.C. (Closed Caption) is for the program you are viewing.

**TEXT** is for additional information such as news reports or a TV program guide. This information covers the entire screen and viewing the TV program is not possible. TEXT may not be available with every **CC** program.

**CHANNEL:** 1 is used for the primary language (usually English).


2 is sometimes used for a second language (may vary by region).

Use CURSOR ▲ or ▼ to highlight the function to change then press CURSOR ▶ to change the function. Press EXIT to quit menu or CURSOR ◀ to return to previous menu.





Select VIDEO to adjust picture settings and improve picture quality.

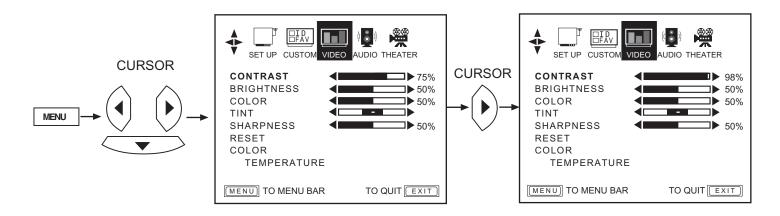

Use the CURSOR  $\blacktriangle$  or  $\blacktriangledown$  buttons to highlight the function to be adjusted. Press the CURSOR  $\blacktriangleleft$  or  $\blacktriangleright$  buttons to adjust the function. Press EXIT to quit menu.

**NOTE:** 1. If CONTRAST is selected, you are adjusting CONTRAST. The additional menu items BRIGHTNESS, COLOR, TINT, and SHARPNESS can be selected and adjusted in the same manner.

CONTRAST

Use this function to change the contrast between black and white levels in the picture.

**BRIGHTNESS** 

Use this function to adjust overall picture brightness.

COLOR

Use this function to adjust the level of color in the picture.

TINT

Use this function to adjust flesh tones so they appear natural. (It may be necessary to adjust TINT to obtain optimum picture quality when using the COMPONENT: Y-P<sub>B</sub>P<sub>R</sub> Input 2 jacks).

**SHARPNESS** 

Use this function to adjust the amount of fine detail in the picture.

RESET

When RESET is selected, press CURSOR ▶ to return video adjustments to factory preset conditions.


COLOR TEMPERATURE

Use this function to change color to cool for more blue, or warm for more red.



COLOR TEMPERATURE

Select VIDEO to adjust picture settings exactly the way you want it and improve picture quality.

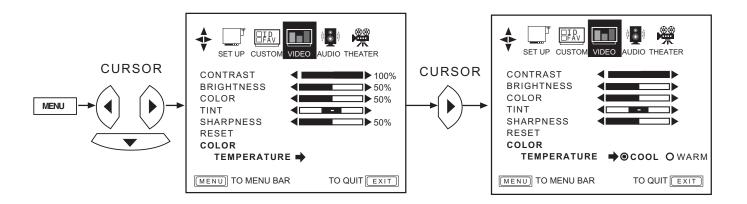

Use CURSOR ▲ or ▼ to select function.

Use CURSOR ▶ to change the function setting.

Press EXIT to quit menu or CURSOR ◀ to return to previous menu.


#### **COLOR TEMPERATURE**

Set this to WARM for hotter colors with more red, or set to COOL for less intense colors with more blue.





Select AUDIO SETTINGS to adjust the TV to your preference and to improve the sound quality.

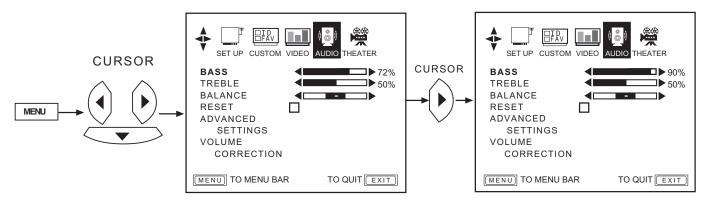

Use CURSOR ▲ or ▼ to highlight the function to be adjusted.

Press CURSOR ◀ or ▶ to adjust the function.

Use CURSOR ▲ or ▼ to highlight RESET, ADVANCED SETTING, or VOLUME CORRECTION then CURSOR ▶ to Select. Press EXIT to quit menu.

**NOTE:** If BASS is selected you are adjusting BASS. The additional menu items TREBLE and BALANCE can be selected and adjusted in the same manner.


BASS This function controls the low frequency audio to all speakers.

**TREBLE** This function controls the high frequency audio to all speakers.

BALANCE This function will control the left to right balance of the TV internal speakers, the AUDIO TO HI FI output.

**RESET** When RESET is selected, press CURSOR ▶ to return audio adjustments to factory preset conditions.



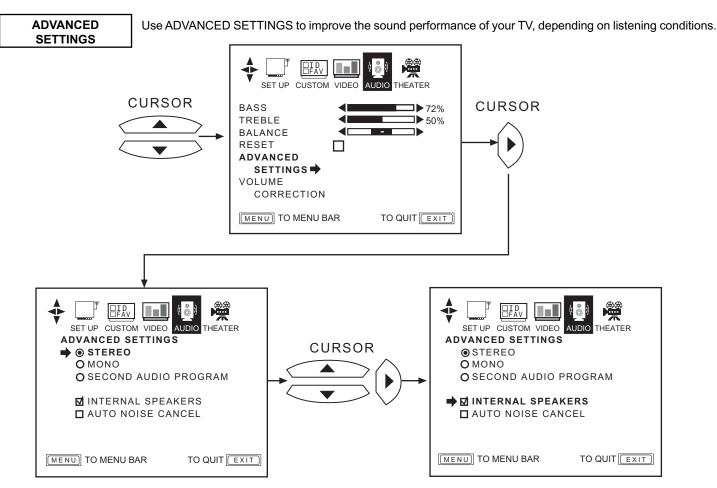

Press CURSOR ▲ or ▼ to highlight a function.


Press CURSOR ▶ to change the function setting. When the function has an ✓ in the box, it is ON.

Press EXIT to quit menu or CURSOR ◀ to return to previous menu.

#### **MTS MODE**

Multi-Channel Television Sound will allow you to select STEREO (a stereo broadcast), MONO (monaural sound) used when receiving a weak stereo broadcast or SAP (second audio program) which may be a secondary language, weather report, etc. The sources received will be displayed at the top left edge of the TV. The source you select will be displayed above the sources received. See example below for each selection when both stereo and second audio are received (monaural is always received).



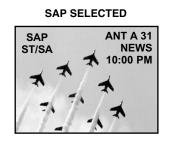



#### **INTERNAL SPEAKERS**


This function is useful when first setting up the external speakers, or if you prefer to use only speakers from a separate stereo system.

#### **AUTO NOISE CANCEL**

This function eliminates the noise between stations. If a channel is tuned and is noisy, this function will automatically eliminate the audio for that channel.



VOLUME CORRECTION use this function to reduce the volume level of up to four channels that sound loud compared to other channels.

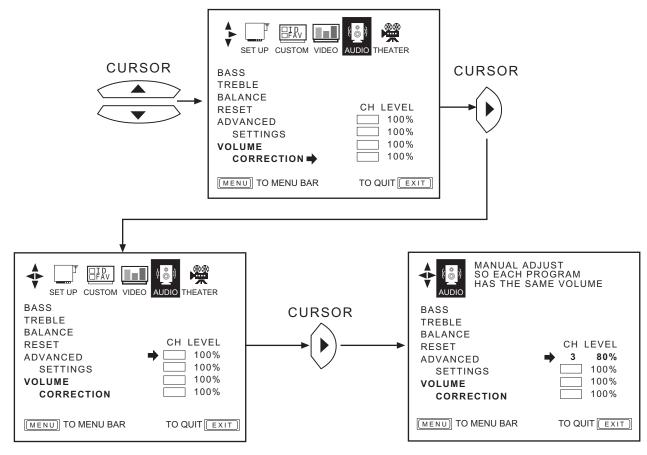

Press CURSOR ▲ or ▼ to highlight one of the four volume corrections, then press CURSOR ▶ to select.

Press CHANNEL ▲ or ▼ and number buttons to select a channel.

Press CURSOR ▶ to secelct, and ▲ or ▼ to adjust the volume level in 5% increments.

Press EXIT to quit menu or CURSOR  $\blacktriangleleft$  to return to previous menu.

**NOTE:** Volume Correction adjustment is for the channel display in the top right corner of the screen. To adjust a different channel, you must select the channel with the channel or number buttons and press CURSOR ▶.

If the channel has been corrected before, use the CURSOR  $\blacktriangle$  or  $\blacktriangledown$  to highlight and CURSOR  $\blacktriangleright$  to select that channel, then use the CURSOR  $\blacktriangle$  or  $\blacktriangledown$  to change the level.

To erase a channel from volume correction, select CHANNEL 00 when in incrementing mode.

The volume level will change from 50% to 100% in increments of 5%.






Use this function to choose picture settings for a true home THEATER experience.

**SURROUND** 

Use this function to choose from automatic picture settings to optimize your TV s performance.

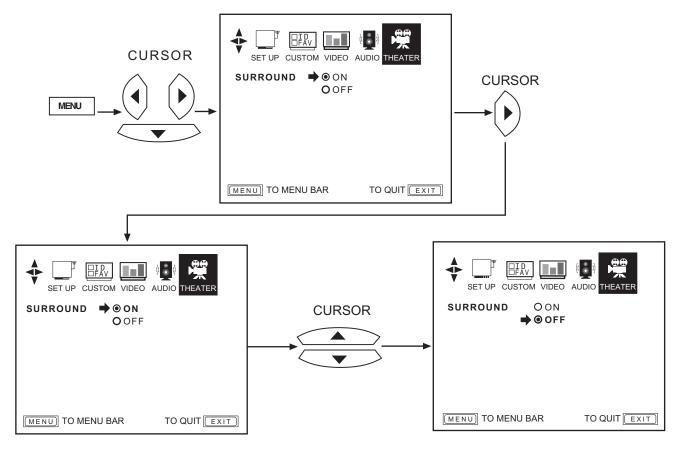

Press CURSOR ▲ or ▼ to highlight and change a surround function. Press exit to quit or CURSOR ◀ to return to previous menu.

#### **SURROUND OFF**

Use this for normal stereo/mono broadcasts.

**NOTE:** If sound is noisy when a stereo broadcast is received, and the TV is set to the SURROUND mode, decrease the TREBLE control or turn the Surround OFF.

## CARE OF YOUR HITACHI COLOR TV AND YOUR REMOTE CONTROL



#### DO

Make sure the TV set is turned OFF when cleaning the TV set.

Dust the screen and cabinet with a soft cloth.

Clean the screen with a soft cloth moistened in warm water and dry with a soft cloth. A mild soap may be used if the screen is extremely dirty.

Place your television away from extreme heat, humidity, and extremely dusty places.

Remove the plug from the wall outlet if your television will not be used for a long period of time, for instances, when you go on vacation.

#### DO NOT

Do not clean your screen or cabinet with strong cleaners, polishes or a chemically treated cloth.

Do not place rubber or vinyl products or cellophane tape on your television.


Do not touch the screen too often.

Do not subject the remote control to shocks such as dropping it on the floor, etc. Physical damage to the precision parts may result.

Avoid placing the remote control in a high humidity place or getting it wet. Do not leave it on or near a heater. Excessive heat or moisture may cause the unit to cease operation.


When the batteries run down, remote control operation will become erratic or possibly stop altogether. Replace the old batteries with two new AA size batteries.



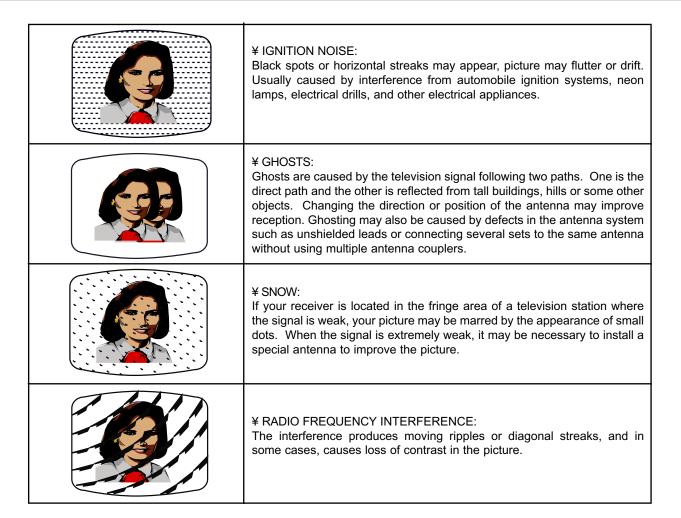

**NOTE:** The TV set can generate sound distortion in external devices such as a radio. Please separate radio equipment from the TV set to a considerable distance.



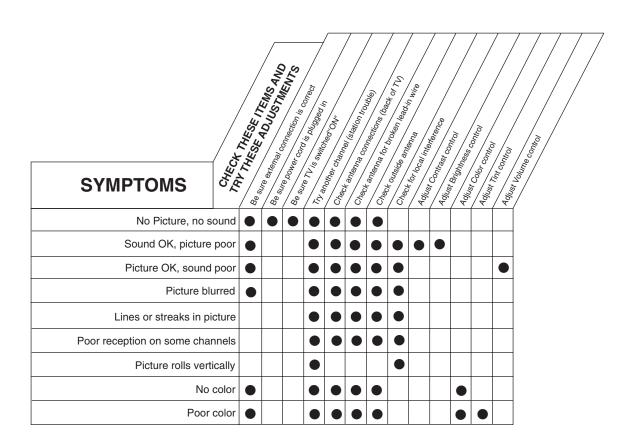

HITACHI Color Television incorporates advanced power surge protection technology designed to protect against component or circuit damage due to external or internal voltage power surges.

IF YOUR TELEVISION SHOULD APPEAR TO HAVE A LOSS OF POWER, PLEASE FOLLOW THIS PROCEDURE:

- 1. Press the power switch (ON/OFF switch) once.
- 2. If there is still no power, wait 30 seconds and press the power switch again.
- 3. If there is still no power, unplug the power cord from the wall. Wait 30 seconds and plug the power cord back in. Press the power switch again.

This protective technology should provide for years of lasting entertainment from your HITACHI Color Television.



#### Features:

- ¥ Dual Antenna Inputs (32UX01S and 36UX01S models)
- ¥ Superfine Picture Quality 700 Line Horizontal Resolution
- ¥ Remote Transmitter (Controls many VCR, DVD, cable box, and satellite brands)
- ¥ P-in-P Functions (32UX01S and 36UX01S models)
- ¥ EASY GRAPHIC GUIDE OSD
- ¥ Full set of input jacks, including S-Video
- ¥ Closed Caption Decoder
- ¥ Comb Filter, Wide-Band Video-Amp, and Color Temperature Control.
- ¥ MTS (Mulit-Channel Television Sound) Stereo Broadcast Reception
- ¥ Surround Sound
- ¥ VM-Velocity Modulation (32UX01S and 36UX01S models)
- ¥ COMPONENT: Y-P<sub>B</sub>P<sub>R</sub> Input Jacks
- ¥ V-Chip

Screen Size; 32V (32 inches measured diagonally) 32GX01B and 32UX01S

36V (36 inches measured diagonally) 36GX01B and 36UX01S

•	-	-		4.	_	
	п	D	u	T.	•	

¥ ¥	Power Input				
	32UX01S114W				
	36UX01S114W				
	32GX01B				
	36GX01B				
¥	Power Consumption (maximum)				
	32UX01S				
	36UX01S				
	32GX01B				
	36GX01B				
¥	Antenna input impedance				
¥	Channel coverage				
	VHF-Band				
	UHF-Band				
	CATV Mid Band				
	Super BandJ-W				
	Hyper Band				
	Ultra Band				
¥	Video				
¥	S-Video				
	Luminance (Y)1.0Vp-p, 75 Ohm				
	Chrominance (C)0.286Vp-p, 75 Ohm				
¥	Component Video				
	Luminance (Y)				
	Chrominance (Pb,Pr) 0.7Vp-p, 75 Ohm				
¥	Audio input level				
•	Average input level				
¥	Average input level 4/UmVrms				
¥	Maximum input level				

#### Outputs:

#### **Dimensions:**

32GX0 <sup>-</sup>	1B
32UX01	18

 $\frac{1}{4}$  Height (in.)  $\frac{26}{16}$  Height (in.)  $\frac{31}{16}$  Height (in.)  $\frac{1}{16}$  Height (in.)  $\frac{1}{16}$ 

#### 36GX01B 36UX01S

 $\frac{1}{4}$  Height (in.) 29  $\frac{17}{32}$  Width (in.) 35  $\frac{13}{32}$  Depth (in.) 24  $\frac{13}{32}$ 

NOTE:

Due to improvements, specifications in this operating guide are subject to change without notice.



### HITACHI



## Hitachi America, LTD. Home Electronics Division

Hitachi has made every effort to assure you hours of trouble free operation from your unit. However, should you require service, a network of Hitachi Authorized Service Facilities has been established in all 50 states and Puerto Rico. Each facility will provide you with convenient and expedient assistance. Our service hotline operator will direct you to the Hitachi Authorized Service Facility nearest you. Just present proof of purchase and/or delivery receipts to the Hitachi Authorized Service Facility, and service will be rendered in accordance with the terms of the limited warranty as stated on your warranty card or operating guide.

Should you have any questions regarding warranty, service, operation, or technical assistance, please contact:

Hitachi America, LTD. Home Electronics Division 1855 Dornoch Court San Diego, CA 92154

In Canada, please contact: 1-800-HITACHI (1-800-448-2244)

HITACHI (HSC) Canada Inc. 6740 Campobello Road Mississauga, Ont. L5N 2L8





# HITACHI