

# JVC

## AV-14JT5EU AV-21JT5EU

COLOUR TELEVISION

INSTRUCTIONS

AV-14JT5EU / AV-21JT5EU

**JVC**  
VICTOR COMPANY OF JAPAN, LIMITED



**ADDITIONAL INFORMATIONS FOR THE SET SOLD IN GREAT BRITAIN**

The appliance is supplied with a moulded three pin main plug fitted with 5Amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 5 amp and approved by ASTA or BSI to BS1362.

The plug contains a removable fuse cover that must be refitted when the fuse is replaced. In the event of the fuse cover being lost or damaged, the plug must not be used until a replacement cover has been obtained. Replacement fuse covers can be purchased from your nearest electrical dealer and must be the same colour as the original.

If the moulded means plug is unsuitable for the socket outlet in your home or is removed for any other reasons, then the fuse should be removed and the cut off plug disposed of safely to prevent the hazard of electric shock.

There is a danger of electric shock if the cut off plug is inserted into any socket outlet. If a replacement plug is to be fitted, please observe the wiring code shown below. The wires in the mains lead are coloured in the accordance with the following code:

**Blue-neutral**

**Brown-live**

As the colours of the wires in the main lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter E or coloured red.

Do not make any connections to the terminal in the plug which is marked by the letter E by the safety earth symbol or coloured green or green and yellow.

# CONTENTS



IMPORTANT SAFEGUARDS ..... 2



 
BEFORE LAUNCHING ..... 3




CONNECTING THE EXTERNAL EQUIPMENT .... 4



IDENTITY OF FEATURES ON LOCAL AND  
REMOTE CONTROL ..... 6



INSTALLATION..... 8

 

DAILY USE ..... 16



TELETEXT ..... 24



TROUBLESHOOTING ..... 26


SPECIFICATIONS ..... 27

# IMPORTANT SAFEGUARDS


 
## WATER AND MOISTURE

Never install the set in the following places; In a wet basement, bathroom. Do not place any container with liquid on the set.

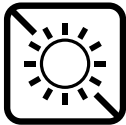

## HEAT

Never place the set near heat sources.



## VENTILATION

Do not cover the ventilation opening in the cabinet and never place the set in a confined space such as bookcase or built-in unless proper ventilation is provided.  
Leave a minimum 10cm gap all around the unit.



## OBJECT ENTRY

Do not insert foreign objects, such as needles and coins, in the ventilation openings.



## LIGHTNING STRIKING

You should disconnect the set from the mains and the aerial system during thunderstorms.



 
## CLEANING

Unplug the set from the mains during cleaning.




## AFTER MOVING THE SET

If the set is moved in a different direction, the MAIN POWER button must be switched off for at least 15 minutes in order to take out a colour strain on the screen.




## INSERTING BATTERIES INTO THE CONTROL UNIT

 Insert the batteries (two 1.5V, type AAA(R03))

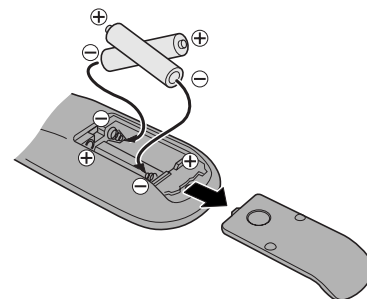


## MAINS CONNECTION

 Plug the mains cable into the power socket with 230V/50Hz AC.



## AERIAL CONNECTION

 
When using an outdoor aerial, it is usually connected to the set by means of 75 ohms.

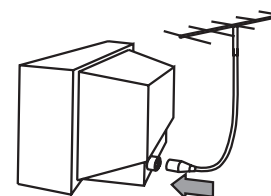

## SWITCHING ON AND OFF

### Switching on

 
Switch the set on with the MAIN POWER button (⏻), and then PR UP or DOWN button (⏮/⏭) on the front of the set. Or POWER button (⏻/⏪) or the UP/DOWN button or one of the NUMBER buttons on the remote control.

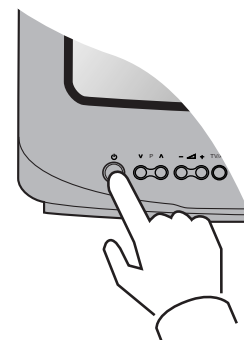

### Switching off

Press POWER button (⏻/⏪) on the remote control to return the set to its stand by mode.

 If you do not use the set for an extended period of time, turn it off with MAIN POWER button (⏻) on the set.

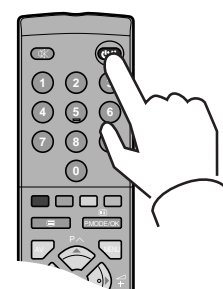

# CONNECTING THE EXTERNAL EQUIPMENT

## TV and AV

 
 
Use the AV button on the remote control, or on the front of the set to select one of the three options. Whenever the AV button is pressed, on the on-screen display will be changed as shown: AV ► S-VHS ► TV

 
## SCART JACK (Ⓜ):

This is used to connect a VCR ①, a PERI-TV decoder ②, a Camcorder or a video game console.

In most case, the set changes automatically to AV when the VCR connected is in display mode.

If not, press the AV button on the remote control or on the front of the set. You must turn the external equipment off to return to the TV mode.

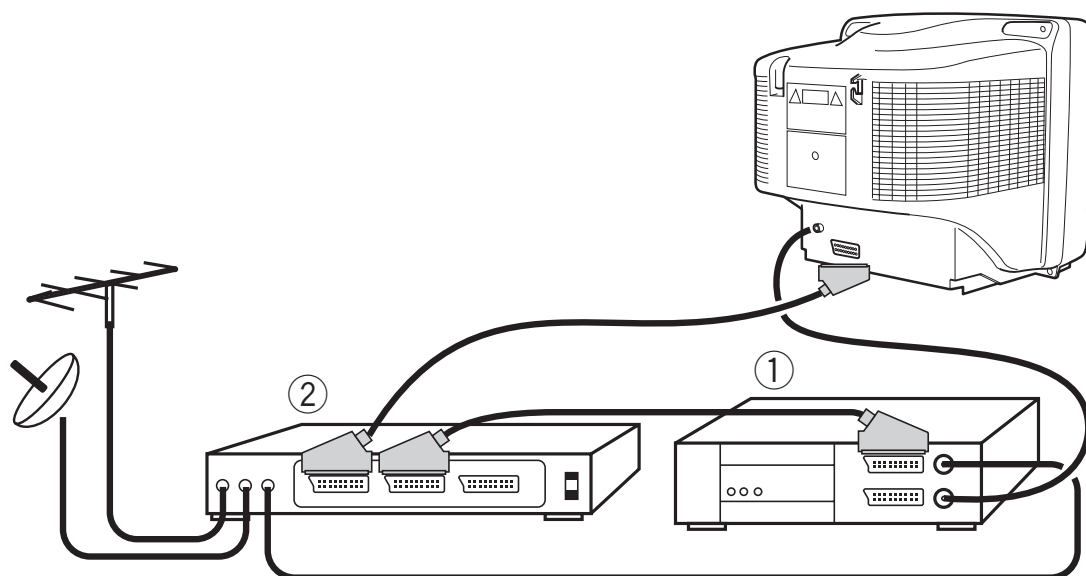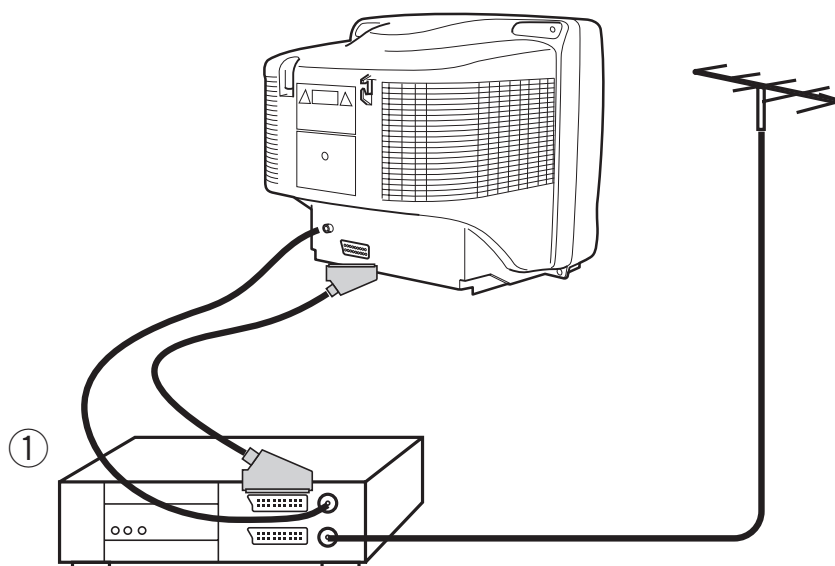

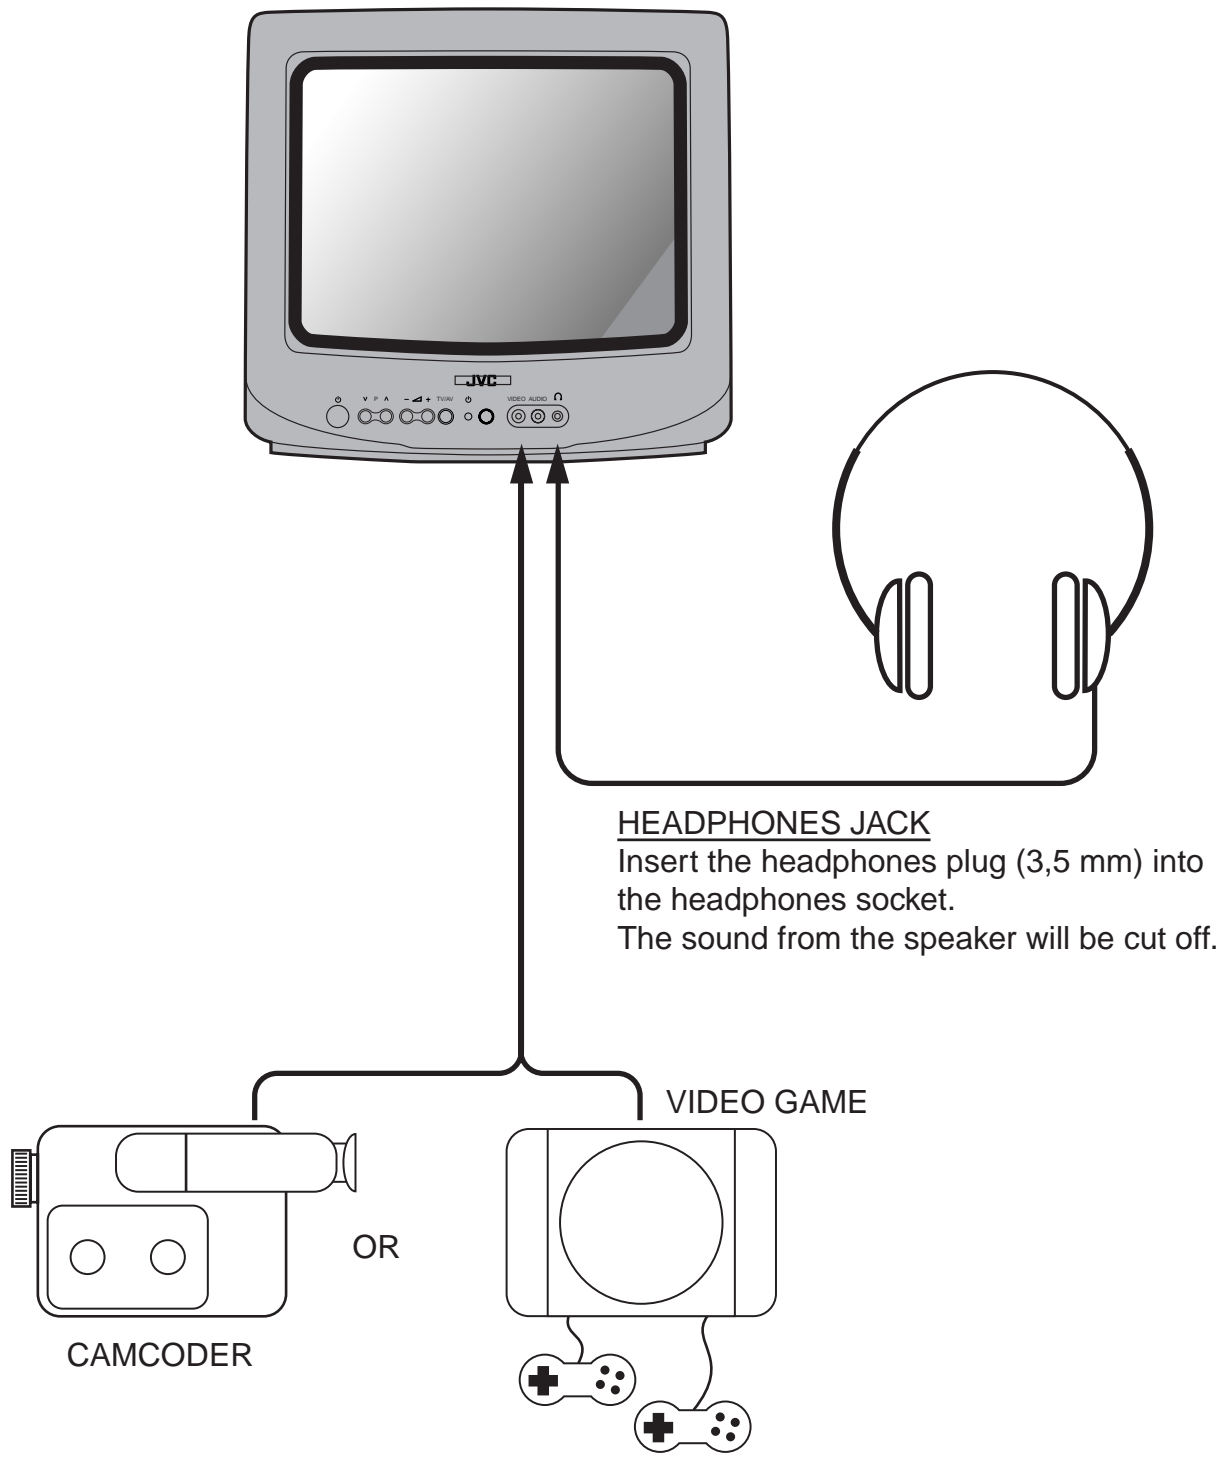

**HEADPHONES JACK**  
Insert the headphones plug (3,5 mm) into the headphones socket.  
The sound from the speaker will be cut off.

**FRONT AV JACK (AUDIO/VIDEO)**

Connect the AV (Audio/Video) socket with an appropriate cable to the corresponding socket of the external equipment.

Select AV mode by pressing the AV button.

 
 
Press the AV button to return to the TV mode.

Note that you can play only one apparatus, if two apparatuses are connected FRONT AV JACK and SCART JACK.


# IDENTITY OF FEATURES ON LOCAL AND REMOTE CONTROL

## LOCAL CONTROL

### Front

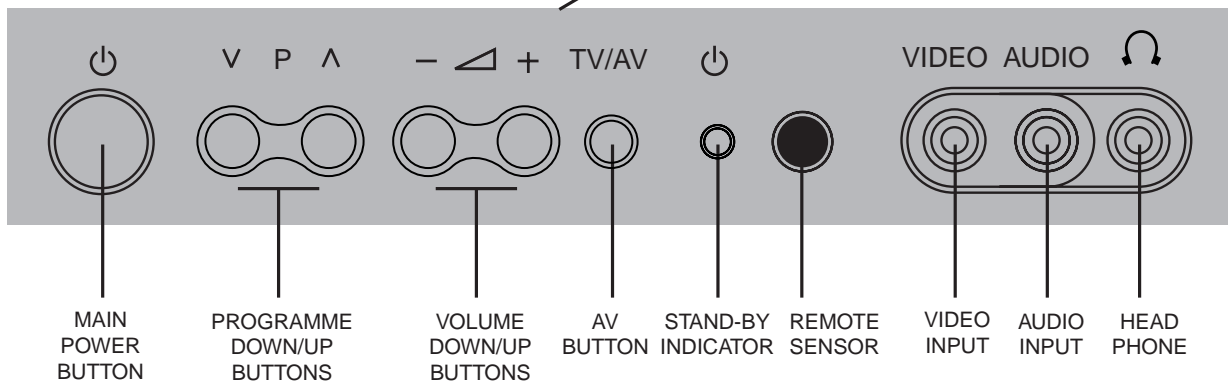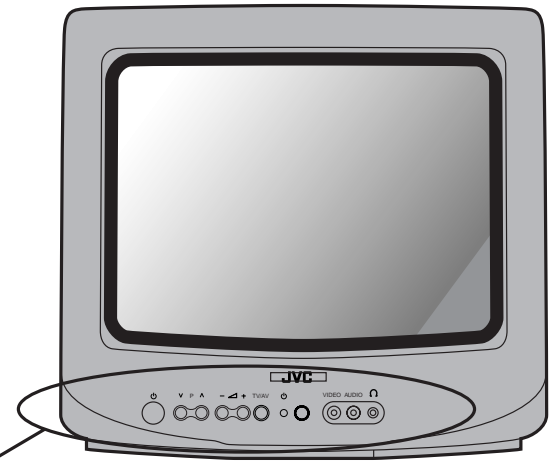

### Back

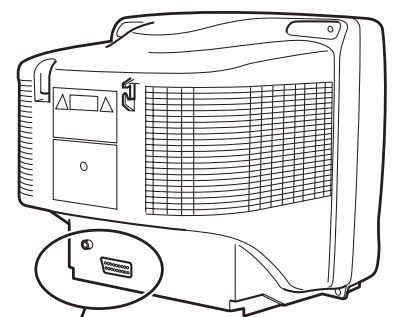 






# REMOTE CONTROL


## TV mode

 - 1 POWER
- 2 NUMBER 0-9
- 3 P. MODE/OK
- 4 AV
- 5 (PR/CURSOR) UP
- 6 VOLUME UP (CURSOR RIGHT)
- 7 MENU
- 8 (PR/CURSOR) DOWN
- 9 VOLUME DOWN (CURSOR LEFT)
- 10 MUTING
- 11 RECALL
- 12 SLEEP
- 13 Not used
- 14 MOVE
- 15 SKIP
- 16 TV/TEXT
- 17 DELETE
- 18 MODE
- 19 VCR/ [TV/TEXT] /DVD switch
- 20 VCR/DVD Control buttons

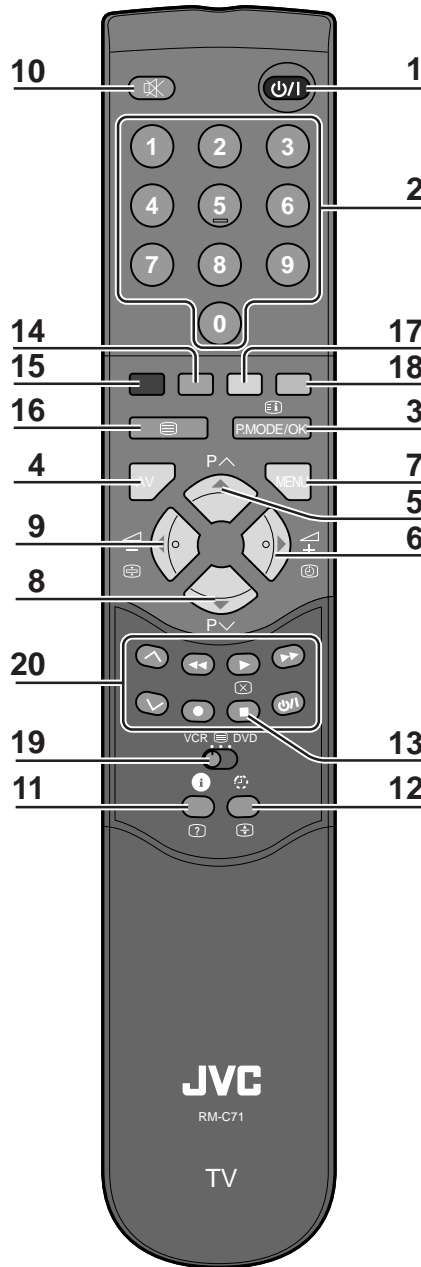

## TELETEXT mode

 - 1 POWER
- 2 NUMBER 0-9
- 3 INDEX
- 4 Not used
- 5 PAGE UP
- 6 SUBPAGE
- 7 MENU
- 8 PAGE DOWN
- 9 HOLD
- 10 MUTE
- 11 REVEAL
- 12 SIZE
- 13 CANCEL
- 14 GREEN KEY
- 15 RED KEY
- 16 TV/TEXT
- 17 YELLOW KEY
- 18 CYAN KEY
- 19 VCR/ [TV/TEXT] /DVD switch
- 20 Not used


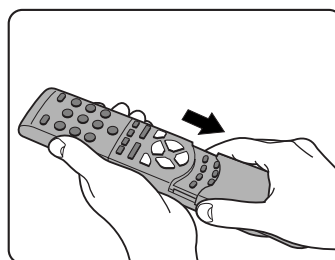


# INSTALLATION




Read this "INSTALLATION" before using the TV for the first time.

## USING THE MENU

  - Press the MENU button to display the MENU.  
To exit the MENU, press the MENU button again.





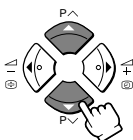
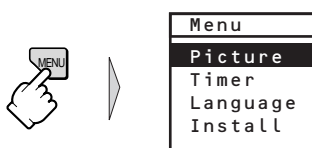


   - Select the sub-menu title with the UP/DOWN buttons, then press the RIGHT button to display the sub-menu.  
To return to the MENU, press the MENU button.

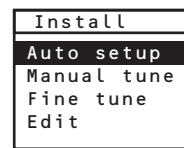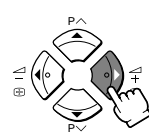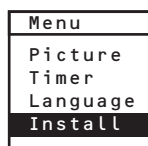

## AUTO SETUP

      - Select INSTALL from the MENU with the UP/DOWN buttons, then press the RIGHT button.

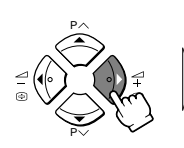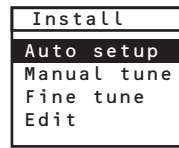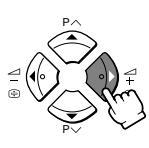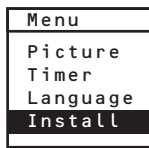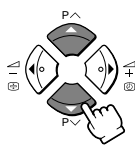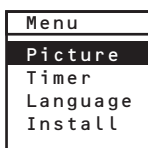

- Press the RIGHT button.

- When the AUTO SETUP has been completed, the EDIT menu is displayed.  
When not editing the programmes, press the MENU button 3 times and exit from the MENU.


When you want to edit the programmes, proceed to "USING THE EDIT MENU".

Edit					
Pr	Name	Ch	Picture	Sound	Skip
01	----	C01	Euro	BG	No
02	----	C07	Euro	BG	No
03	----	C25	Euro	BG	No
04	----	C35	Euro	I	No
05	----	C50	Euro	I	No
06	----	C63	Euro	BG	No
07	----	C72	France	LL'	No
08	----	C77	E/Euro	DK	No



① Select LANGUAGE from the MENU with the UP/DOWN buttons, then press the RIGHT button.

 ② Select the required language with the UP/DOWN buttons.

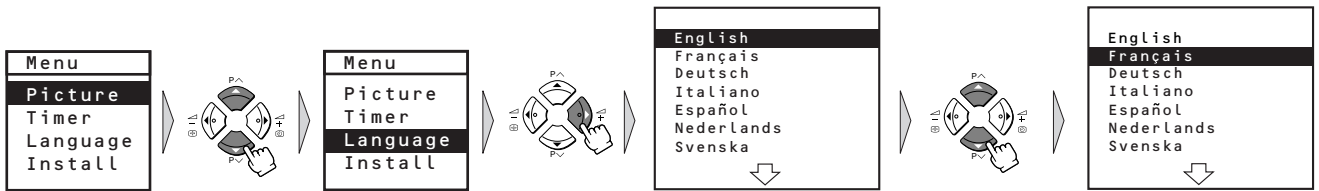

③ Choose the appropriate country with the UP/DOWN buttons, then press the RIGHT button.

**Note:**

- You should choose FRANCE to view a French broadcast (SECAM-L system).
- The country determines the teletext character set.



**Note:**

 
- If the channel you want to watch is not registered, use the MANUAL TUNE function to register that channel.
- If the picture is not displayed correctly, use the PICTURE function from the EDIT menu to change the settings. If the picture is still not displayed correctly, use the FINE TUNE function to finely tune the channel.
- If the sound is not correct, use the SOUND function from the EDIT menu to change the settings.

# INSTALLATION


- 1 Select INSTALL from the MENU with the UP/DOWN buttons, then press the RIGHT button.



- 3 Use the UP/DOWN buttons to select the number of the programme you want to edit.

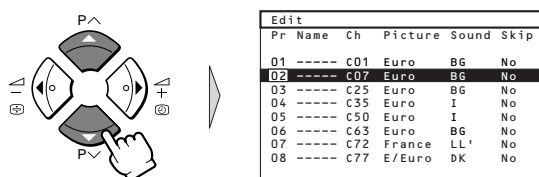


 You can select SKIP "YES" or "NO" with the SKIP button.  
A prog. marked with SKIP "YES" is skipped when changing channel using the UP/DOWN button.

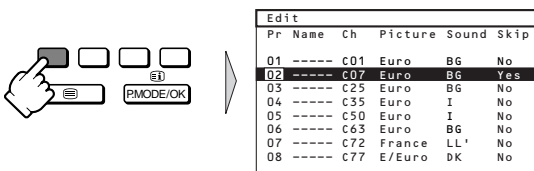



 
- ② Select EDIT with the UP/DOWN buttons, then press the RIGHT button.

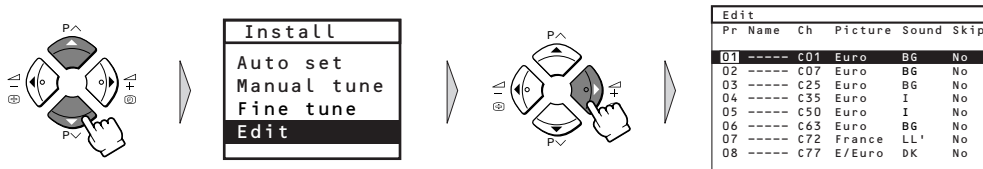

- ④ Edit the programme in accordance with the explanations of SKIP, DELETE, MOVE, NAME, CH., PICTURE and SOUND.  
 When the editing has been completed, press the MENU button 3 times and exit from the MENU.  
 When you want to continue to edit another program, use the LEFT/RIGHT buttons to move the cursor below "PR." (programme) and then return to step 3.

**DELETE**

 
When the DELETE button is pressed, the selected channel is deleted. The deleted channel is automatically moved to PR. 99 and the SKIP function is set to YES. If a channel is deleted, the programme numbers of the following channels are all lowered by one.

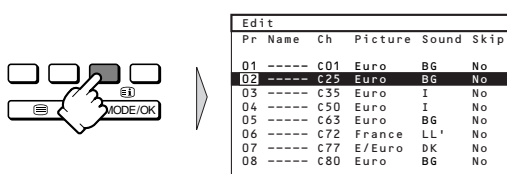


# INSTALLATION

## MOVE

 - 1 The MOVE function can be used to move a channel to a different programme number. Press the MOVE button to start the MOVE function.

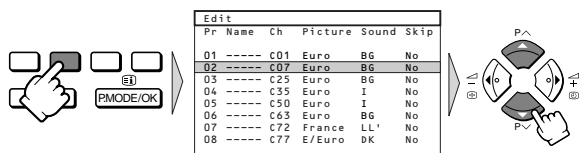


 - 2 Use the UP/DOWN buttons to select the programme number to which you want to move the channel and press the MOVE button again.

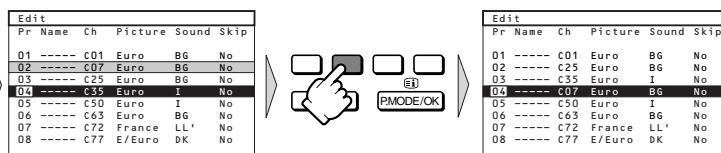


## NAME

 - 1 Names can be registered to channels. Use the LEFT/RIGHT buttons to move the cursor to below "NAME".

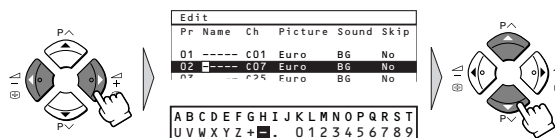


 - 2 Use the UP/DOWN buttons to select a character and use the LEFT/RIGHT buttons to move the cursor. Repeat this operation to create the name.

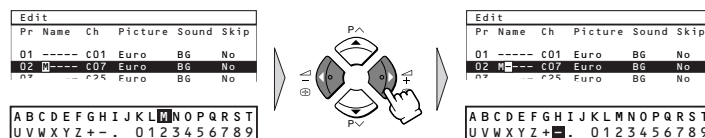


## CH. (CHANNEL)

 - 1 The channel registered to a programme number can be changed to another channel. Use the LEFT/RIGHT buttons to move the cursor to below "CH."

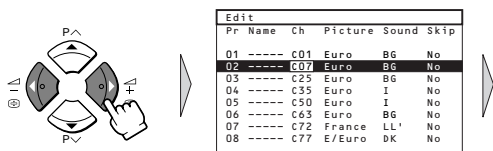

 
- 2 Use the UP/DOWN buttons to change the channel.

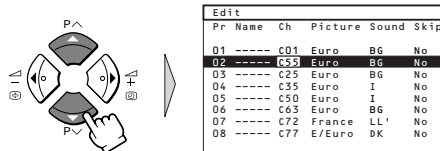




PICTURE

- ① If the picture is not displayed correctly, use the PICTURE function to change the colour system. Use the LEFT/RIGHT buttons to move the cursor to below "PICTURE".

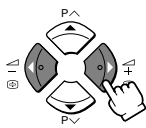 

Edit					
Pr	Name	Ch	Picture	Sound	Skip
01	----	C01	Euro	BG	No
02	----	C07	Euro	BG	No
03	----	C25	Euro	BG	No
04	----	C35	Euro	I	No
05	----	C50	Euro	I	No
06	----	C63	Euro	BG	No
07	----	C72	France	LL'	No
08	----	C77	E/Euro	DK	No

 
- ② Use the UP/DOWN buttons to select the colour system which displays the picture correctly.

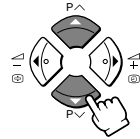

Edit					
Pr	Name	Ch	Picture	Sound	Skip
01	----	C01	Euro	BG	No
02	----	C07	E/Euro	BG	No
03	----	C25	Euro	BG	No
04	----	C35	Euro	I	No
05	----	C50	Euro	I	No
06	----	C63	Euro	BG	No
07	----	C72	France	LL'	No
08	----	C77	E/Euro	DK	No


SOUND

 - ① If the sound is not correct, use the SOUND function to change the sound system. Use the LEFT/RIGHT buttons to move the cursor to below "SOUND".

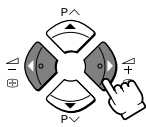

Edit					
Pr	Name	Ch	Picture	Sound	Skip
01	----	C01	Euro	BG	No
02	----	C07	Euro	BG	No
03	----	C25	Euro	BG	No
04	----	C35	Euro	I	No
05	----	C50	Euro	I	No
06	----	C63	Euro	BG	No
07	----	C72	France	LL'	No
08	----	C77	E/Euro	DK	No

 - ② Use the UP/DOWN buttons to select the sound system which gives the correct sound.

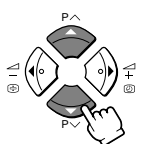


Edit					
Pr	Name	Ch	Picture	Sound	Skip
01	----	C01	Euro	BG	No
02	----	C07	Euro	E	No
03	----	C25	Euro	BG	No
04	----	C35	Euro	I	No
05	----	C50	Euro	I	No
06	----	C63	Euro	BG	No
07	----	C72	France	LL'	No
08	----	C77	E/Euro	DK	No

# INSTALLATION

 
## MANUAL TUNE

- 1 Manually register the channel to a programme number. When no menu is displayed, use the UP/DOWN buttons or the NUMBER 0-9 buttons to select the program number to which you want to register the channel.

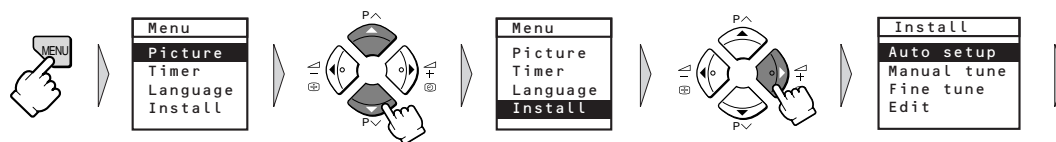


- 2 Display the MENU with the MENU button, then select INSTALL with the UP/DOWN buttons and press the RIGHT button.

 - 5 Press the LEFT/RIGHT buttons repeatedly until the channel you want is displayed.

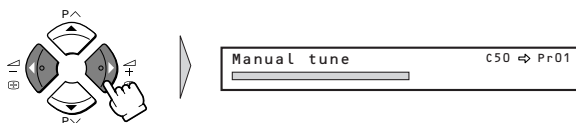

## FINE TUNE

 - 1 When the channel reception is poor, use the FINE TUNE function to fine-tune the channel. When no menu is displayed, use the UP/DOWN buttons or the NUMBER 0-9 buttons to display the channel that you want to fine-tune.

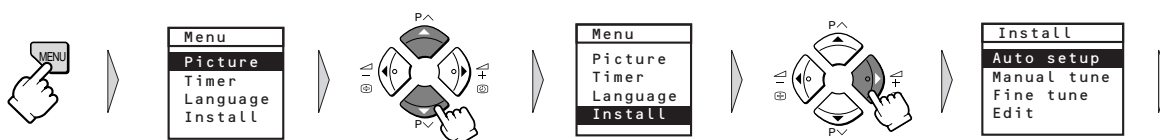


- 2 Display the MENU with the MENU button, then select INSTALL with the UP/DOWN buttons and press the RIGHT button.






 ③ Select MANUAL TUNE with the UP/DOWN buttons.

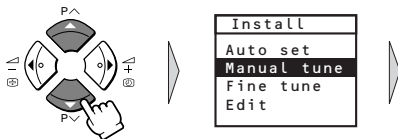


 ④ Press the LEFT/RIGHT buttons to search for a channel. Scanning stops when the TV finds a channel. The channel is then displayed.

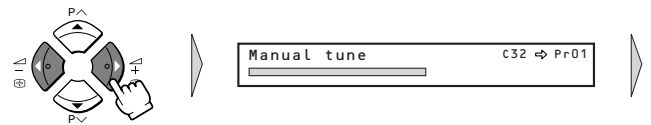


**Note:**

 
- If the sound is not correct even when the picture of the channel is displayed correctly, press the MODE button to select the sound system that has the correct sound.
- If the TV cannot search for the channel you want, press the MODE button, change to a different mode and then repeat the operation from step 4.



 ③ Select FINE TUNE with the UP/DOWN buttons.

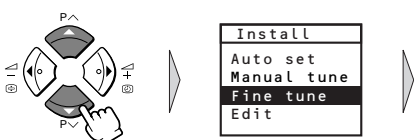

 ④ Keep the LEFT/RIGHT buttons pressed to fine-tune the channel.

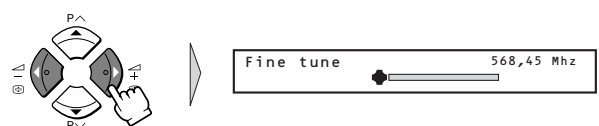


## DAILY USE

### SELECTING A PROGRAMME NUMBER

The set has a total of 100 programme numbers, 0...99. The NUMBER button 0...9 are used for direct programme selection. In order two digit programme, press the second numbered button within two seconds. Switch through the programme number step by step with the UP/DOWN buttons (P ∇/∧).

### VOLUME CONTROL

 
Adjust the volume with the VOLUME DOWN/UP buttons (- ∇ +) on the front of the set, or with the LEFT/RIGHT buttons on the remote control.

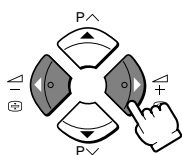

### MUTE

 Pressing the MUTING button (⊗) once turns the sound off. The sound returns if the button is pressed once more. The volume is adjusted with the VOLUME DOWN/UP (- ∇ +) or with the LEFT/RIGHT button.





## RECALL

The RECALL button is used to display the current status: programme number, station name, clock. This display appears for 5 seconds unless any button is pressed.



## SLEEP

By pressing the SLEEP button repeatedly, you can select one of the following settings:

0:00 ▶ 0:20 ▶ 0:40 ▶ 1:00 ▶ 1:20 ▶ 1:40 ▶ 2:00

The set will turn off after time you select.

**Automatic Switch-Off in No Broadcast Signal:**

If broadcast signal is not present for about 30 minutes, the set will be automatically turned off.

In AV mode, however, this function does not operate.



## PICTURE MODE

 
 
By pressing the P.MODE/OK button, you can select one of three picture settings (PICTURE MODEs); NORMAL I, NORMAL II or FAVOURITE.






# DAILY USE

## PICTURE ADJUSTMENT


- 1 Press the MENU button, then press the RIGHT button.

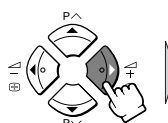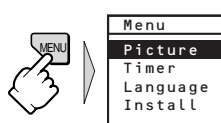


   - 2 Select an item with the UP/DOWN buttons, then adjust it with the LEFT/RIGHT buttons.

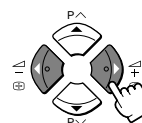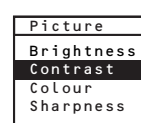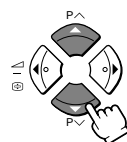


## VCR/DVD CONTROL BUTTONS

 - 1 You can control your JVC brand VCR or DVD player with the TV remote control. Set the VCR/  /DVD switch to the VCR or DVD position.




- 2 Press the VCR/DVD Control button to control your VCR or DVD player.

 **Note:**  
Some of the buttons may not work depending on the device.

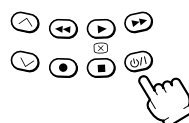

## USING THE MENUS WITHOUT THE REMOTE CONTROL

 
- 1 You can operate the menus with the buttons on the front panel of the TV. Press and hold the AV button (TV/AV) until the MENU appears.



- ③ When the adjustments have been completed, press the MENU button twice and exit from the MENU.

**Note:**

 Your adjustments are automatically stored in the FAVOURITE mode of PICTURE MODEs.



OSD HALFTONE FUNCTION

If you press the RECALL button with the MENU displayed on the screen, the OSD, except text will be half-toned. If you want to return to the normal OSD, press the RECALL button again.

- ② Use the following buttons to operate the menus.

Use the AV button (TV/AV) instead of the MENU button.

Use the PROGRAMME UP/DOWN button (VP^ ) instead of the UP/DOWN button.


Use the VOLUME UP/DOWN button (-▲+) instead of the LEFT/RIGHT button.

# DAILY USE
 
## USING THE TIMER MENU

- ① Select **TIMER** from the **MENU** with the UP/DOWN buttons, then press the **RIGHT** button.


- ② Use the UP/DOWN buttons to select the item and use the **RIGHT** button to move the cursor to the setting position.

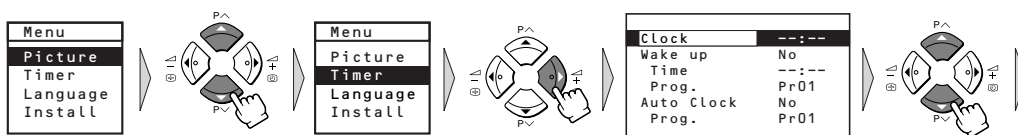

## CLOCK

- ① Setting the TV clock. Select **CLOCK** from the **TIMER** menu with the UP/DOWN buttons and press the **RIGHT** button.

 
- ② Use the UP/DOWN buttons to set the hours, then press the **RIGHT** button.

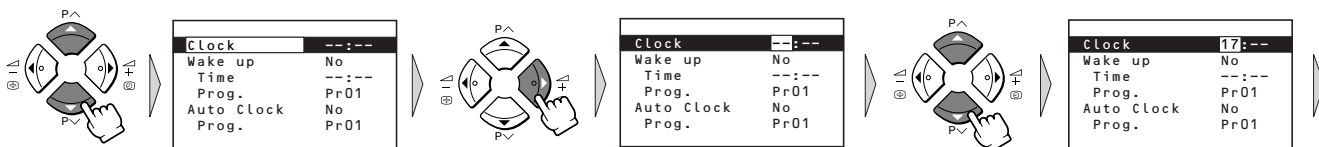


## AUTO CLOCK

- ① If the **AUTO CLOCK** function is set to a channel which broadcasts a teletext programme, the TV clock is automatically set with the time information which is included in the teletext data. Select **AUTO CLOCK** from the **TIMER** menu with the UP/DOWN buttons, then press the **RIGHT** button.

  
- ② Select **YES** with the UP/DOWN buttons, then press the **RIGHT** button.

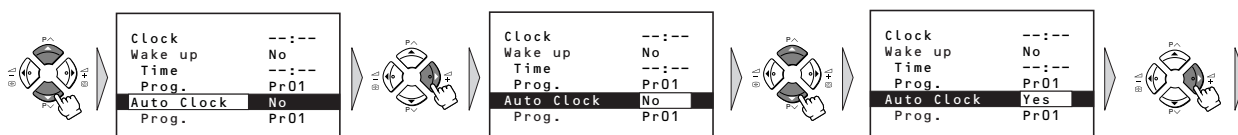



③ Perform the settings in accordance with the explanations of CLOCK, WAKE UP and AUTO CLOCK.

 
④ When the operation has been completed, press the MENU button twice and exit from the MENU.  
When you want to continue and perform some more settings, return to step 2 after using the LEFT/RIGHT buttons and move the cursor back to the left of the menu.

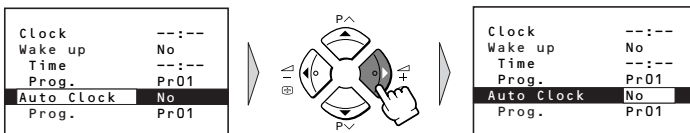

③ Use the UP/DOWN buttons to set the minutes. The TV clock starts.

**Note:**

 - You can use the AUTO CLOCK function to set the TV clock.
- If you turn off the TV's power with the MAIN POWER button, the clock setting is cancelled.

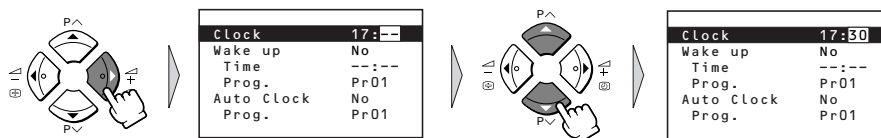


③ Select PROG. with the UP/DOWN buttons, then press the RIGHT button.

④ Use the UP/DOWN buttons to select the channel for the AUTO CLOCK function. If the channel is watched for 30 seconds or longer after exiting from the menu, the TV clock is automatically set.

**Note:**

 
- If you turn off the TV's power with the MAIN POWER button, the clock setting is cancelled. In this case, if you watch the channel which is set for the AUTO CLOCK function, the TV clock is automatically set and the clock starts.
- If there is no time information in the teletext data, the AUTO CLOCK function will not work.

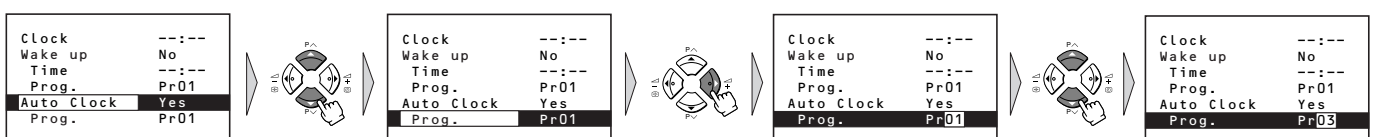

# DAILY USE

## WAKE UP

 
- ① You can use the WAKE UP function to automatically turn the TV on at a set time. You can also select the channel to be displayed when the TV is turned on. Select WAKE UP from the TIMER menu with the UP/DOWN buttons, then press the RIGHT button.

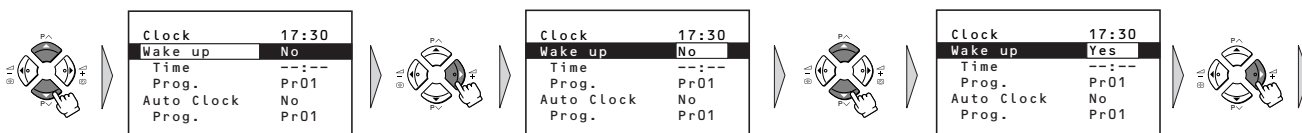

- ② Select YES with the UP/DOWN buttons, then press the RIGHT button.

- ⑤ Select PROG. with the UP/DOWN buttons, then press the RIGHT button.

 - ⑥ Use the UP/DOWN buttons to select the channel to be displayed when the TV is turned on.

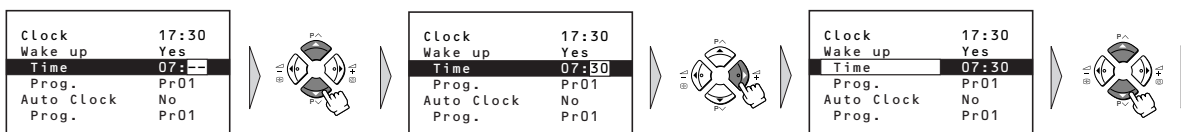


## CHILD LOCK

 - ① You can prevent the TV from being used without the remote control. Set the VCR/DVD switch to the (text) position.








- ③ Select TIME with the UP/DOWN buttons, then press the RIGHT button.

 
- ④ Use the UP/DOWN buttons and RIGHT button to set the time at which you want the TV to be turned on. When the setting is completed, press the RIGHT button.

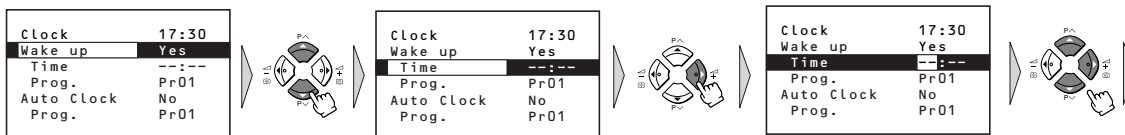

- ⑦ After exiting from the menu by pressing the MENU button twice, press the POWER button on the remote control and turn the TV off. The TV will be turned on at the set time.

**Note:**

 
- If the WAKE UP function is set to YES, the TV will be turned on every time the set time is reached. To cancel the WAKE UP function, set the WAKE UP function to NO.
- The WAKE UP function will not work unless the TV clock is working.
- The WAKE UP function will not work if you turn off the TV's power with the MAIN POWER button.
- For safety reasons, the TV will automatically turn off if no operations are made within approximately 3 hours after the TV is turned on with the WAKE UP function.

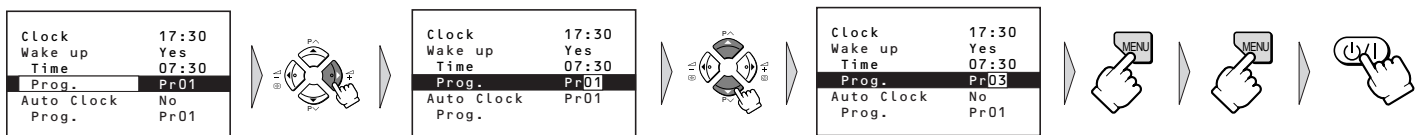

- ② Press the remote control buttons in the following order within 5 seconds and turn the TV off: RED button ► Green button ► Yellow button ► POWER button. The CHILD LOCK function will operate and you will not be able to turn the TV on without using the remote control. The STAND-BY INDICATOR flashes while the CHILD LOCK function is operating.

**Note:**

 The CHILD LOCK function has priority over the WAKE UP function.



# TELETEXT

## 1-SWITCHING TELETEXT ON/OFF

Set the VCR/☰/DVD switch to the ☰ (text) position, then press the TELETEXT button (☰). To return to the TV mode, press the TELETEXT button again.

### Note:

Some of the buttons may not work if the VCR/☰/DVD switch is not set to the ☰ (text) position.

## 2-COLOUR BUTTONS IN TOP/FLOF TELETEXT

A red, green, yellow and blue field is shown at the bottom of the screen. If TOP or FLOF teletext (FASTEXT) is transmitted by the station, pressing the corresponding colour button on the remote controller, you can select the desired page easily.

## 3-SELECTING PAGES

The NUMBER button 0...9 are used to enter a page number. The selected page number appears at the top of the screen and the page appears after a short time. The UP/DOWN buttons increase or decrease the current page number by 1.

## 4-INDEX PAGE

You can switch directly to the programme preview, (with TOP text), or the overview page of the station you are currently viewing by pressing the INDEX, (☰i), button.

## 5-PAGE HOLD


Several sub pages can be combined under a page number and are scrolled at an interval determined by the television station. The presence of sub pages is indicated by, for example, 3/6 beneath the time, which means that you are looking at the 3rd page of a total of 6 pages. If you want to look at a subpage for a longer period of time, press the HOLD, (☰), button. "STOP!" appears at the top of the screen and the contents of the subpage shown are kept on the screen and no longer updated or switched to other subpages. Pressing the HOLD button again, the current subpage appear.



---

## 6-CALLING UP SUBPAGE DIRECTLY


---

Pressing the SUBPAGE, (  ), button, “Sub-Code – – – –” appears beside page number. Enter the subpage number that you want to call up with the NUMBER button 0...9, for example, the 2nd page, sequence 0002. The desired subpage is sought and displayed.

---

## 7-WATCHING TELEVISION DURING TELETEXT MODE


---

Some pages are continually updated, for example, stock market reports, sports announcement and the latest news. If you want to watch television and stay informed at the same time, press CANCEL, (  ), button. The regular programme is still visible and the teletext page number appears at the top. Pressing the CANCEL button, the teletext page appears with the updated information.

---

## 8-REVEAL ANSWER


---

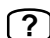This function can be used on certain pages to reveal the solution of riddles. Press the REVEAL button, (  ), to reveal a hidden answer and press again to hide it.

---

## 9-DOUBLING CHARACTER SIZE

---

Repeatedly pressing the SIZE button, (  ), doubles the character size in the following order: Upper half of the page ► Lower half of the page ► Return to normal size.

---

## 10-VOLUME AND BRIGHTNESS CONTROL IN TELETEXT MODE

---

Pressing the MENU button in the teletext mode displays the volume and brightness control menu at the bottom of the screen.

You can adjust volume and brightness using the LEFT/RIGHT button.



- If the plug is disconnected from the AC socket, or the TV aerial has problems, you may think there is a problem with the TV itself. Be sure to check the following before calling for service.

## IMPORTANT

- Review all instructions in this manual

	Problem	Action
■ GENERAL	The TV cannot be turned on.	<ul style="list-style-type: none"> <li>• Insert the plug in an AC socket.</li> <li>• Turn the main power on. (See page 3)</li> <li>• The buttons on the front panel of the TV will not work if the CHILD LOCK is operating. The CHILD LOCK function is operating if STAND-BY indicator blinks. Use the POWER button on the remote control to turn the TV on.</li> </ul>
	No picture or sound.	<ul style="list-style-type: none"> <li>• Check aerial connections. (See page 4)</li> <li>• Choose the correct input mode. (See page 4)</li> <li>• Choose the correct sound system manually. (See "SOUND" on page 13.)</li> </ul>
	The TV shuts off automatically.	<ul style="list-style-type: none"> <li>• Did you set the SLEEP function? (See page 17)</li> <li>• If broadcast signal is not present for about 30 minutes, the set will be automatically turned off.</li> <li>• For safety reasons, the TV will automatically turn off if no operations are made within approximately 3 hours after the TV is turned on with the WAKE UP function.</li> </ul>
	The TV turns on automatically.	<ul style="list-style-type: none"> <li>• Did you set the WAKE UP function? (See page 22)</li> </ul>
	Inoperable remote control.	<ul style="list-style-type: none"> <li>• Replace the batteries. (See page 3)</li> <li>• Insert the batteries correctly. (See page 3)</li> <li>• Use the remote control within about 7 metres of the TV.</li> </ul>
■ PICTURE	Poor colour.	<ul style="list-style-type: none"> <li>• Choose the correct colour system manually. (See "PICTURE" on page 13)</li> </ul>
	Lines or streaks in picture (interference).	<ul style="list-style-type: none"> <li>• Move the components apart until the interference is eliminated.</li> <li>• Reposition the aerial.</li> </ul>
	Spots (crosstalk).	<ul style="list-style-type: none"> <li>• Reposition the aerial.</li> <li>• Replace with an aerial with better directionality.</li> </ul>
	Double pictures (ghosts).	<ul style="list-style-type: none"> <li>• Reposition the aerial.</li> <li>• Replace with an aerial with better directionality.</li> </ul>
	Snowy pictures (noise)	<ul style="list-style-type: none"> <li>• Check aerial connections.</li> <li>• Redirect the aerial.</li> <li>• Replace or repair the aerial.</li> </ul>
■ SOUND	No sound from the TV's speakers.	<ul style="list-style-type: none"> <li>• Disconnect the headphones.</li> </ul>

### The following are normal and are NOT malfunctions:

- When touching the picture tube surface, you might feel a slight charge of static electricity. This is because the picture tube contains static electricity; it does not affect the human body.
- The TV may emit a crackling sound due to a sudden change in temperature. There is no problem unless the picture or sound is abnormal.
- When a still, bright image (of a white dress, for example) appears on the screen, the image may be coloured. This problem occurs in all picture tubes, and as the bright image disappears, the colour also disappears.
- This TV is equipped with a microcomputer that may operate abnormally due to interference from external components. If this happens, turn off the main power and disconnect the power cord from the AC socket. Then reconnect the power cord to the AC socket and turn on the main power again.

# SPECIFICATIONS

Item	Model	AV-14JT5EU	AV-21JT5EU
TV RF systems		CCIR B/G, I, D/K, L	
Colour systems		PAL, SECAM (NTSC 3.58 / 4.43 MHz only in AV modes)	
Channels and frequencies		E2-E12, E-21-E69, S1-S41, X, Y, Z, Z+1, Z+2, A-H, H+1, H+2, F2-F10, F21-F69, R1-R12, R21-R69	
Teletext systems		FLOF (Fastext) / TOP / WST (standard system)	
Power requirements		AC 230 V, 50 Hz	
Power consumption		Maximum 57 W, Average 37 W, Standby 2 W	Maximum 73 W, Average 53 W, Standby 2 W
Picture tube size		Visible area 34 cm (measured diagonally)	Visible area 51 cm (measured diagonally)
Audio output		Rated Power output: 3 W	
External input / output		21-pin Euroconnector (SCART)	
		VIDEO IN (RCA)	
		AUDIO IN (RCA)	
		Headphone jack (mini jack, dia. 3.5 mm)	
Dimensions (W × H × D)		366 mm × 338 mm × 385 mm	516 mm × 466.5 mm × 476 mm
Weight		9 kg	19.5 kg
Remote control unit		RM-C71	

**Design and specifications subject to change without notice.**