

 


COLOR TELEVISION

INSTRUCTIONS

Thank you for buying this JVC color television.
To make sure you understand how to use your new TV, please read this manual thoroughly before you begin.

- AV-29L31**
- AV-21L31B**
- AV-29L31B**

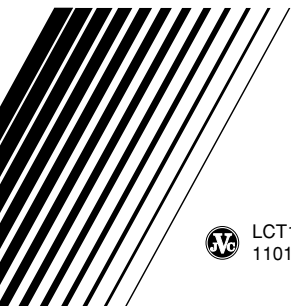

Contents

Safety precautions	2
Preparation	3
1 Confirm which remote control you have ...	3
2 Insert the batteries into the remote control ...	3
3 Connecting the antenna and VCR	4
4 Connecting other devices	5
5 Connect the power cord to the AC outlet ...	5
6 Initial setting	6
Basic operation	7
Remote control buttons and functions	8
ECO SENSOR button	8
PICTURE MODE button	8
CLOSED CAPTION button	8
BASS button	8
MUTING button	8
DISPLAY button	9
OFF TIMER button	9
CHANNEL SCAN button	9
RETURN + button	9
Using the TV's menus	10
Basic operation	10
INPUT	11
PICTURE TILT	11
VNR	11
COMPRESS (16:9)	11
AUTO SHUTOFF	12
CHILD LOCK	12
BLUE BACK	12
VIDEO-2 SET	13
AUTO CH PRESET	13
CHANNEL SKIP	14
MTS	14
CLOSED CAPTION	14
Picture Adjustments	15
Sound Adjustments	15
AI VOLUME	15
MONO SURROUND	15
Attaching the Twin Port Bass Blaster Unit	16
TV buttons and parts	17
Using the buttons on the TV	18
Troubleshooting	19
Specifications	Back cover



 
Safety precautions

WARNING

- To prevent fire or shock hazard, do not expose the TV to rain or moisture.

CAUTION

- Operate only from the power source indicated on the rear of the TV.
- Avoid damaging the power cord and mains plug. When you unplug the TV, pull it out by the mains plug. Do not pull on the power cord.
- Never block or cover the cabinet openings for ventilation. Never install the TV where good ventilation is unattainable. When installing this TV, leave spaces for ventilation around the TV more than the minimum distances shown in the diagram.
- Do not allow objects or liquid into the cabinet openings.
- In the event of a fault, unplug the TV and call a service technician. Do not attempt to repair it by yourself or remove the rear cover.
- The surface of the TV screen is easily damaged. Be very careful with it when handling the TV. Should the TV screen become soiled, wipe it with a soft dry cloth. Never rub it forcefully. Never use any cleaner or detergent on it.
- When you don't use this TV for a long period of time, be sure to unplug it.

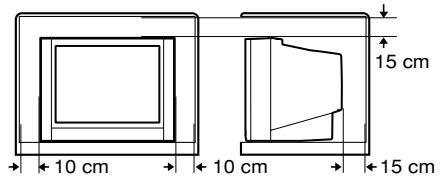

< AV-21L31B only >

 
The Twin Port Bass Blaster Unit is packaged together with the TV.
Before you use the TV, mount the Twin Port Bass Blaster Unit correctly on the TV.

Preparation


1 Confirm which remote control you have

Your TV comes with one of the two remote controls shown below. Functions you can operate differ depending on the type of remote control.

RM-C248

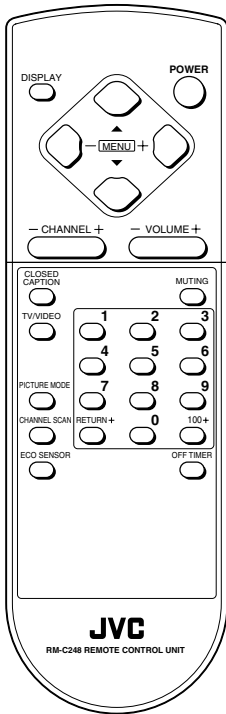

RM-C249

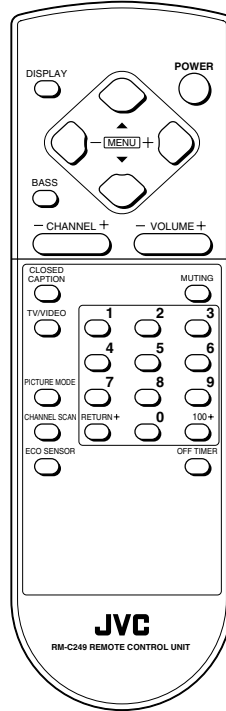 

2 Insert the batteries into the remote control

Correctly insert two batteries, observing the ⊕ and ⊖ polarities and inserting the ⊖ end first.

 
CAUTION:

Follow the cautions printed on the batteries.

Notes:

- Use AA/R6/UM-3 dry cell batteries.
- If the remote control does not work properly, replace with new batteries.

The supplied batteries are for testing, not regular use.

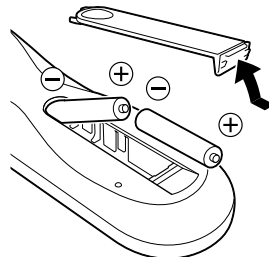


Preparation


3 Connecting the antenna and VCR

- Read the manuals provided with the devices. Depending on the device, the connection method may be different from the diagrams. Also the device settings may need to change depending on the connection method.
- Turn off all the devices including the TV.
- Connecting cables are not supplied.
- When connecting monaural audio to the TV, use the L/MONO jack.

 Connecting the antenna

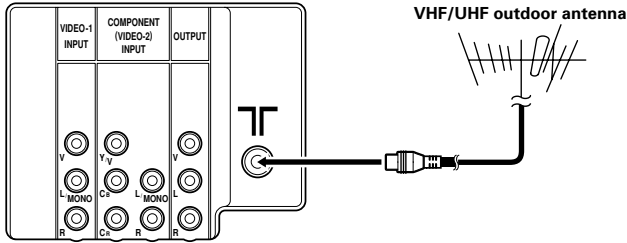

Connecting the antenna and VCR


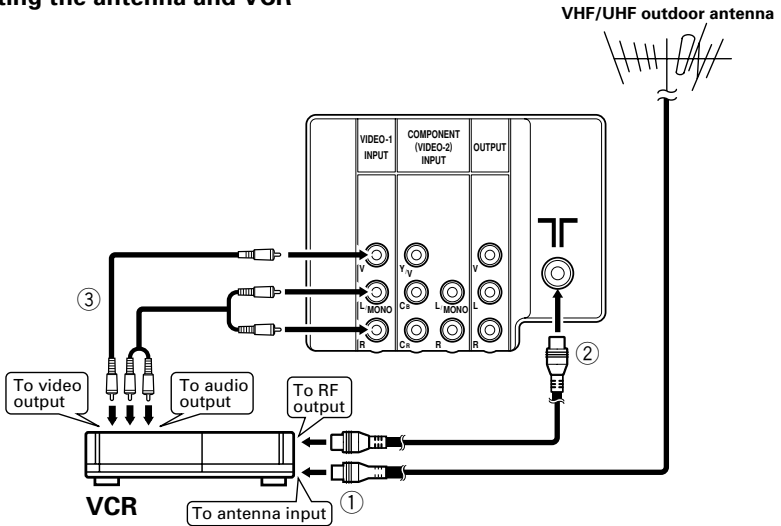 


Preparation

4 Connecting other devices

If you are not connecting any other devices, skip step 4 and perform step 5.

  - Use the headphones with a stereo mini jack (3.5 mm in diameter). When you connect the headphones, the TV speakers go off.
- The OUTPUT terminal outputs the video and sound signals which you are viewing on the TV. You can dub them onto the VCR connected to the OUTPUT terminal.
(The OUTPUT terminal cannot output component video signals. Also it cannot output any signals when the TV is turned off.)
- Connect components outputting a component signal (Y/C_B/C_R signal), such as a DVD player, to the VIDEO-2 terminal, and set VIDEO-2 SET function to “COMPONENT”. (See page 13.)
- The following illustrations are for the AV-29L31. Your TV’s front and rear pannels may not look exactly like the illustrations.

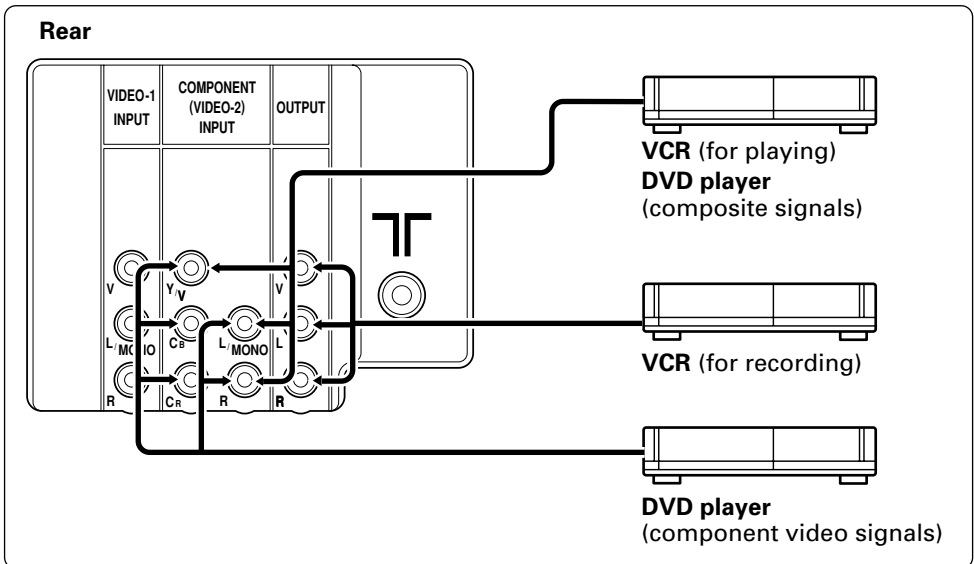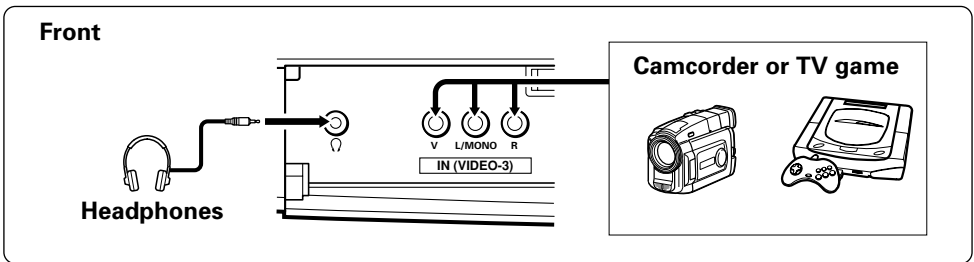

5 Connect the power cord to the AC outlet

Operate only from the power source indicated on the rear of the TV.

 
Preparation

6 Initial setting

When the TV is first turned on, it enters the initial setting mode, and the JVC logo is displayed. Follow the instructions on the on-screen display to perform the initial settings.

1 Press the Main power button on the TV.


The POWER lamp lights. After the JVC logo has been displayed, the TV automatically switches to the auto program mode.

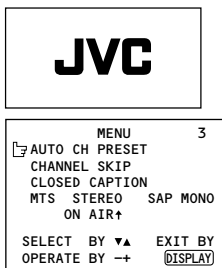

- The JVC logo does not appear if your TV has been turned on once before. In this case, use the AUTO CH PRESET functions to perform the initial settings. For details, see page 13.

2 Press the MENU -/+ buttons.

 The sub-menu is displayed.

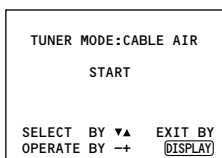

3 Press the MENU -/+ buttons to select "CABLE" or "AIR".

4 Press the MENU ▲/▼ buttons to select "START".

5 Press the MENU -/+ buttons to start the AUTO CH PRESET function.

 
">>> ON SEARCH" is displayed on the screen.

When all the TV channels that can be received on your TV have been preset, the display goes out and the AUTO CH PRESET function operation is completed.

To stop the AUTO CH PRESET function, press the MENU -/+ buttons.


This completes initial setting.

Now you're ready to enjoy your JVC TV.

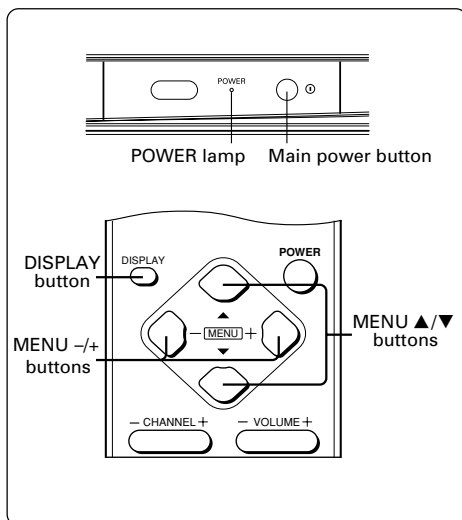

Basic operation

 - The illustration below is for the remote control RM-C248 supplied with AV-29L31. Your remote control may not look exactly like the illustrations.

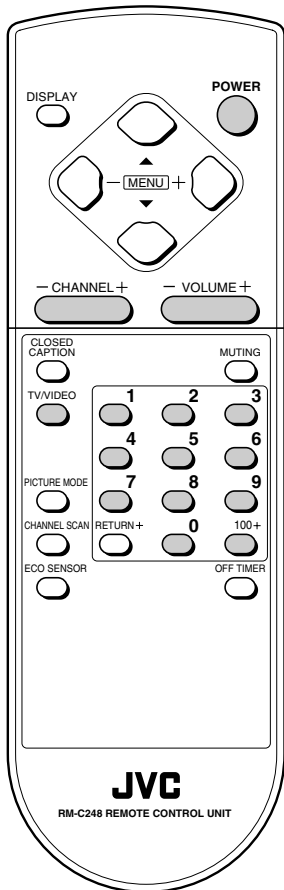

1 Press the **POWER** button to turn your TV on.

- If your TV does not turn on, press the Main power button on the TV then press the **POWER** button again.
- You can also turn on your TV by pressing any of the following buttons;
 - the **CHANNEL -/+** button
 - the **TV/VIDEO** button

2 Select a channel.

- Press the **CHANNEL -/+** button.
 - Up/down selection cannot be selected for channels to which the **CHANNEL SKIP** function has been set to "YES". See page 14.
- Press the **Number** buttons to enter the channel number.
 - When you want to select a channel number over 100, enter the two-digit number after pressing the **100 +** button.

3 Press the **VOLUME -/+** button to adjust the sound.

4 To turn your TV off, press the **POWER** button.

- We recommend that you press the Main power button on the TV to turn the main power off if you do not plan to use your TV for a long time or if you wish to save energy.

Viewing Images from an External Device:

- Press the **TV/VIDEO** button to select the **VIDEO** mode.
- You can also use the **INPUT** function to select the **VIDEO** mode. For details, refer to page 11.

Remote control buttons and functions

ECO SENSOR button

You can adjust this TV so that the screen automatically adjusts to the optimum contrast according to the brightness of your room. This function reduces eye strain and the power consumption of this TV.

Press this button to select the desired mode.

DIGITAL ECO SENSOR DISPLAY:

The ECO SENSOR function switches on. In this mode, the clover mark indicating the brightness of your room is displayed for several seconds each time the brightness changes. The number of clover marks displayed on screen increases as your room becomes darker.

DIGITAL ECO SENSOR:

The ECO SENSOR function switches on. However, in this mode, the clover mark will not be displayed.

DIGITAL ECO SENSOR OFF:

The ECO SENSOR function switches off.

PICTURE MODE button

You can select one of three picture adjustment settings as you like.

Press this button to select a mode.

BRIGHT:

Heightens contrast and sharpness.

STANDARD:

Standardizes picture adjustments.

SOFT:

Softens contrast and sharpness.

- Pressing this button returns all the picture settings in "MENU 4" to their default settings.

CLOSED CAPTION button

If they are included in a program, you can view closed captions or text information.

Press this button to select the mode.

□ → OFF → CLOSED CAPTION → TEXT □

- To change caption or text channels see page 14.

BASS button

< AV-21L31B/AV-29L31B only >

You can enjoy a powerful bass sound by using the BASS (Bass Reflex) function.

Press this button to turn the BASS function on or off.

- To use this function, you must first mount the Twin Port Bass Blaster Unit packaged with the TV on top of the TV. For details, see page 16.

MUTING button

You can turn the sound off instantly.

Press this button.

To turn the sound on, press this button again.

Remote control buttons and functions

DISPLAY button

You can continuously display the current channel number or VIDEO mode on the screen.

Press this button.

To turn the display off, press this button again.

- When selecting a VIDEO mode with no signal, indication of the VIDEO mode becomes fixed on the screen.

OFF TIMER button

You can set the TV to automatically turn off after a set time.

Press this button to select the period of time.

- You can set the period of time to a maximum of 120 minutes in 10 minute increments.
- 1 minute before the OFF TIMER function turns off the TV, “GOOD NIGHT!” appears.

To display the remaining time, press this button once.

To cancel the OFF TIMER function, press this button to set the period of time to 0.

- The OFF TIMER function will not turn off the TV’s main power.

CHANNEL SCAN button

You can quickly view all TV channels programs that you can view on your TV, and search for the program you want to view.

1 Press this button to start scanning TV channels.

The TV channel programs are each displayed for several seconds.

- The programs of TV channels for which the CHANNEL SKIP function is set to “YES” are not displayed.

2 When you find the program you want to view, press this button again to stop scanning.

RETURN + button

You can set a channel you frequently view to the Return Channel and you can view that channel at any time with one-touch.

To set the channel to the Return Channel:

1 Select the channel you want to set to the Return Channel.

2 Press this button and hold until the message “RETURN PLUS PROGRAMMED!” appears.

- When you turn off the TV, the Return Channel setting is cancelled.

To view the Return Channel:

Press this button.

- You can view two channels (current channel and Return Channel) alternately by pressing this button.

To cancel the Return Channel setting:

 
Press this button and hold until the message “RETURN PLUS CANCELLED!” appears.

If no channel is set to the Return Channel:

You can view the channel selected right before the current channel by pressing this button.

Using the TV's menus


This TV has a number of functions you can operate using the menus. To use all your TV's functions fully, you need to understand how to use the menus.

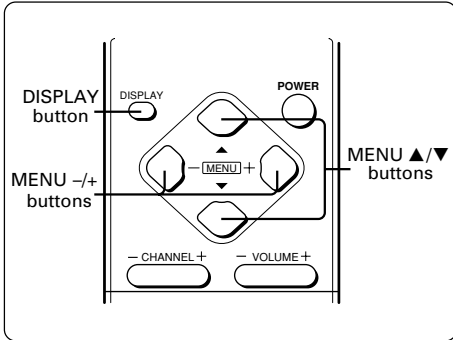

4 Press the MENU +/- buttons to change function settings.

Example:

 Changes the AUTO SHUTOFF setting.

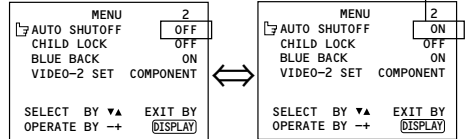


- With some functions, the operation method may differ.

Basic operation

1 Press the MENU ▲/▼ buttons.

 One of the 5 menus is displayed.

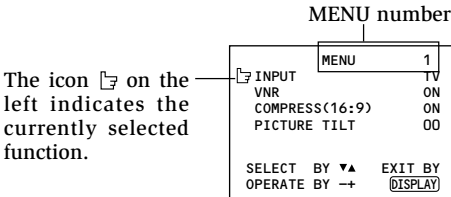

2 Repeatedly press the MENU ▲/▼ buttons to display a desired menu.

- If you hold down the ▼ button, the next menu is displayed.
- If the selected function is on the first line, pressing the ▲ button displays the preceding menu.

3 Repeatedly press the MENU ▲/▼ buttons to select a desired function.

5 Press the DISPLAY button to turn the display off.

- To operate a menu using the buttons on the front panel of the TV, refer to "Operating menus" on page 18.

Using the TV's menus

INPUT

You can view images from VCRs or other devices connected to your TV.

- 1 Press **MENU ▲/▼** to display the "MENU 1" menu, then select "INPUT".

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY →+ [DISPLAY]	

- 2 Press **MENU -/+** to select the "VIDEO-1", "VIDEO-2" or "VIDEO-3".

TV mode changes to VIDEO mode.

PICTURE TILT

< AV-29L31 and AV-29L31B only >

There are cases where the Earth's magnetic force may make the picture tilt. If this happens, you can correct the picture tilt.

- 1 Press **MENU ▲/▼** to display the "MENU 1" menu, then select "PICTURE TILT".

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY →+ [DISPLAY]	

- 2 Continue pressing **MENU -/+** until the picture becomes level.

VNR

You can reduce picture noise.

- 1 Press **MENU ▲/▼** to display the "MENU 1" menu, then select "VNR".

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY →+ [DISPLAY]	

- 2 Press **MENU -/+** to select "ON".

To cancel the VNR function, select "OFF".

COMPRESS (16:9)

This function converts a normal picture (4:3 aspect ratio) into a wide picture (16:9 aspect ratio).

Use for pictures with a 16:9 aspect ratio that have been squeezed into a normal picture (4:3 aspect ratio), to restore their original dimensions.

- 1 Press **MENU ▲/▼** to display the "MENU 1" menu, then select "COMPRESS (16:9)".

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY →+ [DISPLAY]	

- 2 Press **MENU -/+** to select "ON".



To cancel the COMPRESS (16:9) function, select "OFF".

Using the TV's menus

AUTO SHUTOFF

You can set your TV to turn off if no signals are received for about 15 minutes or longer after the end of a broadcast.

- 1 Press **MENU ▲/▼** to display the "MENU 2" menu, then select "AUTO SHUTOFF".

MENU	2
☐ AUTO SHUTOFF	ON
CHILD LOCK	ON
BLUE BACK	ON
VIDEO-2 SET	COMPONENT
SELECT BY ▼▲	EXIT BY
OPERATE BY →+	DISPLAY

- 2 Press **MENU -/+** to select "ON".

To cancel the AUTO SHUTOFF function, select "OFF".

- The AUTO SHUTOFF function does not turn off the TV's main power.
- The AUTO SHUTOFF function will not work for a VIDEO mode.

CHILD LOCK

You can disable the front control buttons of the TV.

When this function is set to "ON", the TV can be operated using only the remote control.

Use this function to prevent children from operating the TV without parental consent.

- 1 Press **MENU ▲/▼** to display the "MENU 2" menu, then select "CHILD LOCK".

MENU	2
AUTO SHUTOFF	ON
☐ CHILD LOCK	ON
BLUE BACK	ON
VIDEO-2 SET	COMPONENT
SELECT BY ▼▲	EXIT BY
OPERATE BY →+	DISPLAY

- 2 Press **MENU -/+** to select "ON".

To cancel the CHILD LOCK function, select "OFF".

- The CHILD LOCK function is canceled when you turn the power off.

BLUE BACK

You can mute the sound and change the picture into a blue screen while no signals are received by the TV, or when the signals are unstable.

- 1 Press **MENU ▲/▼** to display the "MENU 2" menu, then select "BLUE BACK".

MENU	2
AUTO SHUTOFF	ON
CHILD LOCK	ON
☐ BLUE BACK	ON
VIDEO-2 SET	COMPONENT
SELECT BY ▼▲	EXIT BY
OPERATE BY →+	DISPLAY

- 2 Press **MENU -/+** to select "ON".

To cancel the BLUE BACK function, select "OFF".

 
- To view a broadcast even when the reception signal is poor, set the BLUE BACK function to "OFF".
- Even when the BLUE BACK function is set to "OFF", the sound may not be audible.

Using the TV's menus

VIDEO-2 SET

Set the VIDEO-2 SET correctly according to the video signal input from the external device connected to the VIDEO-2 terminal. If this setting is incorrect, images will not be displayed.

- 1 Press MENU ▲/▼ to display the "MENU 2" menu, then select "VIDEO-2 SET".

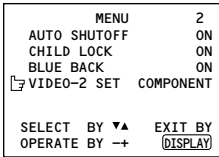

- 2 Set the VIDEO-2 SET according to the video signal input from the VIDEO-2 terminal.

If a normal video signal (composite video signal) is input:

Press the MENU -/+ buttons to select "VIDEO".

 
If a component video signal (Y/C_B/C_R signals) is input:

Press the MENU -/+ buttons to select "COMPONENT".

AUTO CH PRESET


You can automatically preset all TV channels that can be received by your TV to channels.

- 1 Press MENU ▲/▼ to display the "MENU 3" menu, then select "AUTO CH PRESET".

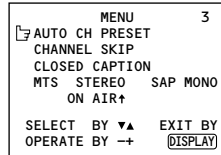

- 2 Press MENU -/+ .

 The sub-menu is displayed.

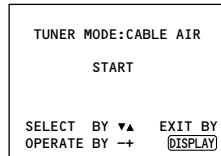

- 3 Press MENU -/+ to select "CABLE" or "AIR".

- 4 Press MENU ▲/▼ to select "START".

- 5 Press MENU -/+ to start the AUTO CH PRESET function.

">>> ON SEARCH" is displayed on the screen.

When all the TV channels that can be received on your TV have been preset, the display goes out and the AUTO CH PRESET function operation is completed.

To stop the AUTO CH PRESET:

 
Press the MENU -/+ button.

Using the TV's menus

CHANNEL SKIP


You can set undesired channels to be skipped. Channels set to be skipped cannot be selected by the CHANNEL +/- buttons nor the CHANNEL SCAN button.

- 1 Press MENU ▲/▼ to display the "MENU 3" menu, then select "CHANNEL SKIP".

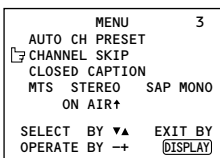

- 2 Press MENU +/-.

 The sub-menu is displayed.

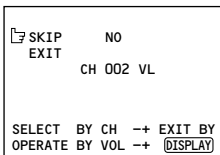

- 3 Press CHANNEL +/- to select the channel you want to skip.

 
- 4 Press VOLUME +/- to select "YES".

The channel is set to be skipped. To cancel the CHANNEL SKIP function, select "NO".

- 5 Repeat steps 3 and 4 if you want to set another channel to skip.

To turn the display off:

- 1 Press MENU ▼ to select "EXIT".

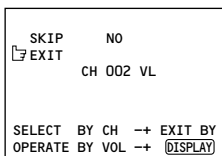


- 2 Press VOLUME +/- to turn the display off.

MTS

You can select a MTS (Multi-Channel Television Sound) setting for stereo, mono and SAP (Second Audio Programs).

 - 1 Press MENU ▲/▼ to display the "MENU 3" menu, then select "MTS".

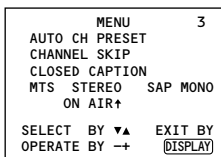


- 2 Press MENU +/- to select the mode.

- "ON AIR↑" indicates the signal currently being sent.
- Select "MONO" to reduce excess noise in a program or channel.

CLOSED CAPTION


You can view closed captions or text information.

 - 1 Press MENU ▲/▼ to display the "MENU 3" menu, then select "CLOSED CAPTION".

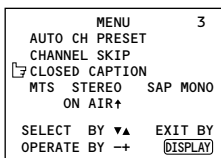

- 2 Press MENU +/-.

 The sub-menu is displayed.

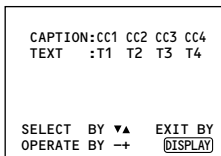

- 3 Press MENU ▲/▼ to select "CAPTION" or "TEXT".

 
- 4 Press MENU +/- to select the caption or text channel.

Using the TV's menus

Picture Adjustments

You can adjust the picture as you like.

- 1 Press **MENU ▲/▼** to display the "MENU 4" menu.

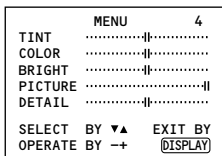

- 2 Press **MENU ▲/▼** to select an item and press **MENU -/+** to adjust it.

 
TINT* - : Reddish + : Greenish
COLOR - : Lighter + : Deeper
BRIGHT - : Darker + : Brighter
PICTURE - : Lower + : Higher
DETAIL - : Softer + : Sharper

* When you have selected "COMPONENT" using the VIDEO-2 SET function, hue does not change even if you adjust TINT.

Sound Adjustments

You can adjust the sound as you like.

- 1 Press **MENU ▲/▼** to display the "MENU 5" menu.

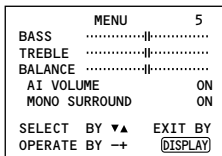


- 2 Press **MENU ▲/▼** to select an item and press **MENU -/+** to adjust it.

BASS - : Weaker + : Stronger
TREBLE - : Weaker + : Stronger
BALANCE - : Left + : Right

AI VOLUME

You can prevent the sudden increase or decrease of volume that occurs when changing channels or switching VIDEO modes.

 - 1 Press **MENU ▲/▼** to display the "MENU 5" menu, then select "AI VOLUME".

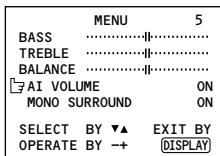

- 2 Press **MENU -/+** to select "ON".

 
To cancel the AI VOLUME function, select "OFF".

- The AI VOLUME function may not operate as expected if the sound input level from a broadcast station (or video software) is extremely low.
- The AI VOLUME function for TV mode and VIDEO mode can be set separately. For example, you can set it to be off in TV mode and on in VIDEO mode. If you set the AI VOLUME function while viewing a TV channel, the setting is registered as the setting for TV mode. If you set the AI VOLUME function while viewing images from a VIDEO terminal, the setting is registered as the setting for VIDEO mode.

MONO SURROUND

You can enjoy normal monaural sound more by converting it into a stereo-like sound.

- 1 Press **MENU ▲/▼** to display the "MENU 5" menu, then select "MONO SURROUND".

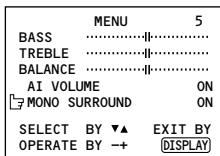

- 2 Press **MENU -/+** to select "ON".

To cancel the MONO SURROUND function, select "OFF".

Attaching the Twin Port Bass Blaster Unit

< AV-21L31B only >

The Twin Port Bass Blaster Unit is packaged together with the TV. Before you use the TV, mount the Twin Port Bass Blaster Unit correctly on the TV.

Note:

- The BASS functions do not work unless the Twin Port Bass Blaster Unit is connected correctly to the TV. For details on the BASS functions, see page 8.

 
 
CAUTION:

- The Twin Port Bass Blaster Unit is just placed on top of the TV and is not held in place by a screw. When you use the Twin Port Bass Blaster Unit, pay attention to the following cautions. Otherwise, the Twin Port Bass Blaster Unit or TV may fall over and be damaged, or cause unexpected injury.
 - Do not rest your hands or elbows on the Twin Port Bass Blaster Unit.
 - Do not move the TV with the Twin Port Bass Blaster Unit mounted on top of the TV. Before you move the TV, be sure to remove the Twin Port Bass Blaster Unit.
 - Do not move the TV by holding the Twin Port Bass Blaster Unit.

- 1 Place the Twin Port Bass Blaster Unit on top of the TV making sure that the mounting pin on the bottom of the Twin Port Bass Blaster Unit fits into the mounting hole on the top of the TV.**

- When you mount the Twin Port Bass Blaster Unit, make sure that the mounting pin fits properly into the mounting hole. Otherwise, the Twin Port Bass Blaster Unit may slide off the top of the TV. This may damage the Twin Port Bass Blaster Unit or cause unexpected injury.


- 2 Firmly insert the Twin Port Bass Blaster Unit connector into the BASS SPEAKER OUT terminal.**

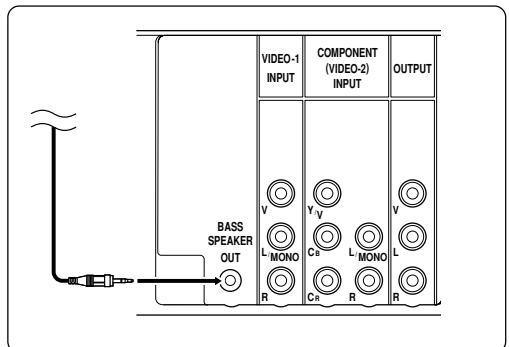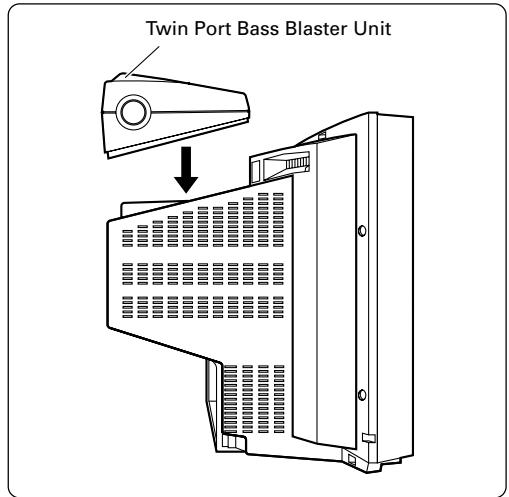


TV buttons and parts

Front
 
< AV-29L31 and AV-29L31B >

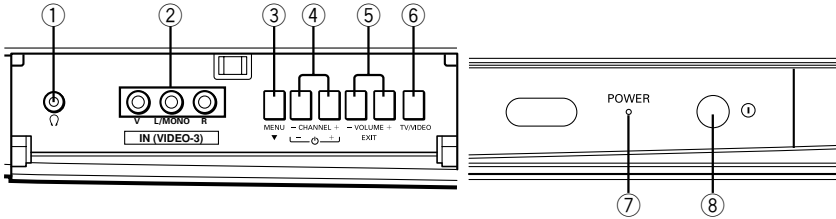


< AV-21L31B >

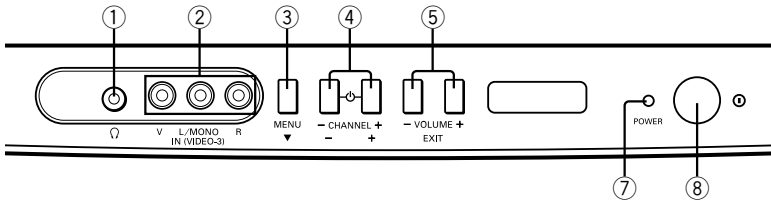 

- ① Headphone jack
- ② VIDEO-3 terminal
- ③ MENU button
- ④ CHANNEL +/- buttons

- ⑤ VOLUME +/- buttons
- ⑥ TV/VIDEO button
- ⑦ POWER lamp
- ⑧ Main power button

 Rear

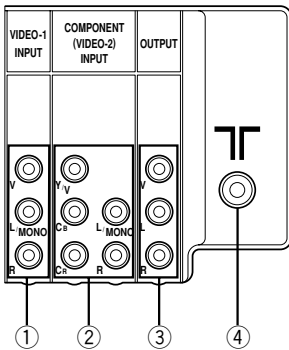

- ① VIDEO-1 INPUT terminal
- ② COMPONENT (VIDEO-2) INPUT terminal
- ③ OUTPUT terminal
- ④ Antenna socket

Using the buttons on the TV

Basic operation

- Check to make sure the CHILD LOCK function is set to “OFF”. When the CHILD LOCK function is set to “ON”, the TV cannot be operated using the front control buttons. For details, see “CHILD LOCK” on page 12.
- 1 Press **CHANNEL -/+** to turn the TV on from standby mode.
 - 2 Press **CHANNEL -/+** to select a channel.
 - 3 Press **VOLUME -/+** to adjust the volume.
 - 4 To turn your TV off, press the **Main power button** to turn off the TV’s main power.

To change the TV mode to the VIDEO mode:

- Press the **TV/VIDEO** button if the TV has one. See page 7.
- If the TV has no **TV/VIDEO** button, select the **VIDEO** mode with the **INPUT** function in “MENU 1”.

Operating menus

You can operate functions in menus using the front control buttons on the TV.

- 1 Press **MENU ▼** to display a menu.
- 2 Press **MENU ▼** repeatedly to display the menu you want to use.
- 3 Press **MENU ▼** to select the desired function or item.
- 4 Press **MENU -/+** or **VOLUME -/+** to carry out the desired operation.
For details, see the description for each function.
- 5 Press **VOLUME -/+** to turn the menu display off.

Troubleshooting

If there is no picture or the TV does not operate normally, make sure the problem isn't due to the reasons indicated below.

If the problem persists even after taking the measures indicated, please contact a service technician.

Cannot turn the TV on

- Press the Main power button on the TV.
- Connect the power cord to the AC outlet.

The screen turns blue

- Is the BLUE BACK function on? (see page 12.)

Remote control inoperable

- Replace the batteries. (see page 3.)

Buttons on front of the TV do not work

- Switch the CHILD LOCK function off. (see page 12.)

TV does not respond immediately

- Press the main power button on the TV to turn off the main power. Press the main power button again to turn on the TV. If the TV returns to a normal state, operation is normal.

The TV turns off suddenly

- Is the OFF TIMER function set to operate? (see page 9.)
- Is the AUTO SHUTOFF function on? (see page 12.)

Poor sound

- Adjust the sound settings. (see page 15.)

Poor picture

- Adjust the picture settings. (see page 15.)
- Is a component signal output device, such as a DVD player, connected correctly? (see page 5.)
- Is the VIDEO-2 SET function setting correct? (see page 13.)
- If noise (snow) totally blocks out the picture, check the following.
 - Have the TV and antenna been connected properly?
 - Has the antenna cable been damaged?
 - Is the antenna pointing in the right direction?
 - Is the antenna itself faulty?
- If the TV or antenna suffer interference from other equipment, stripes or noise may appear in the picture. Move any equipment which can cause interference away from the TV.
- If the TV or antenna suffer interference from signals reflecting from mountains or buildings, double-pictures (ghosting) will occur. Change the antenna's direction or replace it with an antenna with better directionality.
- When a white and bright still image (such as a white dress) is displayed on the screen, the white part may look as if it is colored. When the image disappears from the screen, the unnatural colors will also disappear.

The picture is tilted

< AV-29L31 and AV-29L31B only >

- A picture may be tilted due to the influence of the earth's magnetism. In this case, use the PICTURE TILT function to adjust the tilt. (see page 11.)

Screen is 80% black

- Press the CLOSED CAPTION button to select "OFF". (see page 8.)

Specifications

TV RF systems

M

Colour systems

NTSC

Channels

VHF 2 to 13, VHF 14 to 69

Sub Mid, Super, Hyper and Ultra bands.

External input / output

VIDEO-1: VIDEO input, AUDIO L/R input

VIDEO-2/COMPONENT: VIDEO input, AUDIO L/R input,
COMPONENT VIDEO (Y/C_B/C_R) input

VIDEO-3: VIDEO input, AUDIO L/R input

OUTPUT: VIDEO output, AUDIO L/R output

Headphone jack: stereo mini jack (3.5 mm diameter)

Sound-multiplex systems

BTSC (Multi Channel Sound)

Design and specifications subject to change without notice.

JVC

VICTOR COMPANY OF JAPAN, LIMITED

 


彩色電視機

使用說明書

感謝惠購JVC彩色電視機。
請在使用電視機前通讀本說明書，以便
掌握新電視機的使用方法。

AV-29L31
AV-21L31B
AV-29L31B

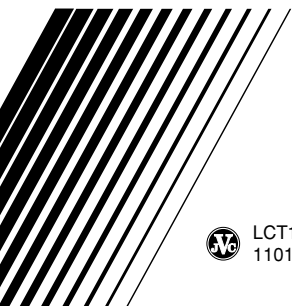

LCT1118-001A-H
1101-Ki-NV-JMT

目錄

安全須知	2
準備	3
1 確認遙控器的種類	3
2 將電池裝入遙控器	3
3 連接天線和錄像機	4
4 連接其他裝置	5
5 將電源線插入交流電源插座	5
6 初始設定	6
基本操作	7
遙控器按鈕和功能	8
ECO SENSOR 按鈕	8
PICTURE MODE 按鈕	8
CLOSED CAPTION 按鈕	8
BASS 按鈕	8
MUTING 按鈕	8
DISPLAY 按鈕	9
OFF TIMER 按鈕	9
CHANNEL SCAN 按鈕	9
RETURN + 按鈕	9
使用電視機的菜單	10
基本操作	10
輸入	11
畫面糾正	11
降噪	11
垂直壓縮 (16:9)	11
自動關機	12
童鎖	12
藍背景	12
視頻-2設定	13
自動頻道預置	13
頻道跳越	14
多頻道電視音響	14
封閉字幕	14
圖像調節	15
聲音調節	15
自動音控	15
單聲道環繞聲	15
安裝TWIN PORT BASS BLASTER	16
電視機按鈕和部件	17
使用電視機的按鈕	18
故障排除	19
規格	封底

 
安全須知

警告

- 為了防止火災或觸電的危險，請勿將電視機暴露於雨中或放在潮濕之處。

注意

- 僅在電視機背面所示的電源規格內操作使用。
- 請勿損傷電源線和主插頭。撥下插頭時應拿著主插頭撥出而不要拉電源線。
- 切勿擋住或蓋住用於通風的開放縫隙。切勿將電視機安裝在通風不良之處。安裝電視機時，請在電視機周圍留出不小於圖示的最小距離的空間，以便通風。
- 請勿讓物體或液體進入電視機的開放縫隙中。
- 電視機發生故障時，請撥下電源插頭，並請維修服務人員修理。請勿自行維修或打開後蓋。
- 電視機屏幕的表面容易損壞。使用電視機時請十分小心。當電視機屏幕髒污時，請用柔軟的乾布擦拭。切勿用力擦。切勿使用任何清潔劑或去污劑。
- 當長期不使用電視機時，請務必撥下插頭。

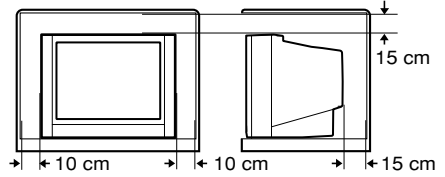



<僅適用於AV-21L31B>

與電視機一起裝有TWIN PORT BASS BLASTER（雙端口低音發音器裝置）。使用電視機之前，請將TWIN PORT BASS BLASTER裝置正確地安裝在電視機上。

準備

1 確認遙控器的種類

  本電視機帶有下列兩種遙控器之一。可使用的功能因遙控器的種類不同而不同。

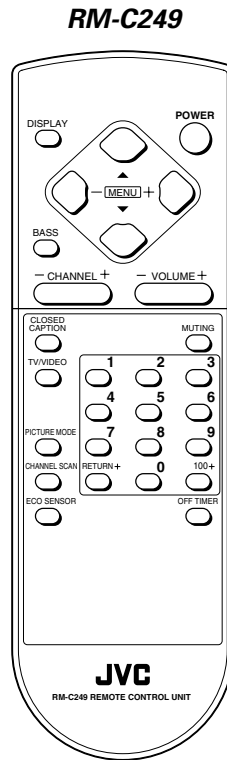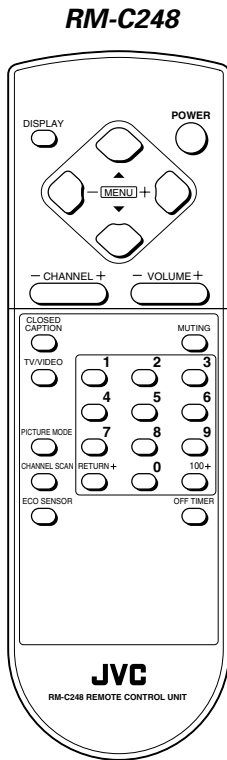

2 將電池裝入遙控器

 
正確插入兩節電池，注意正⊕極和負⊖極，先插入負⊖極端。

注意：

請遵從印在電池上的注意事項。

注：


- 請使用AA/R6/UM-3/5號乾電池。
- 如果遙控器操作不正常，請換上新電池。
附帶的電池是用於測試的，而不是用於正式使用的。

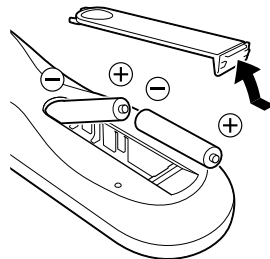


3 連接天線和錄像機

- 請閱讀裝置附帶的使用說明書。有的裝置的連接方法可能不同於圖示方法。而且裝置的設定也可能因連接方法而異。
- 關閉電視機在內的所有裝置。
- 不提供連接電纜。
- 將單聲道音頻裝置與電視機相連接時，請使用L/MONO插口。

 連接天線

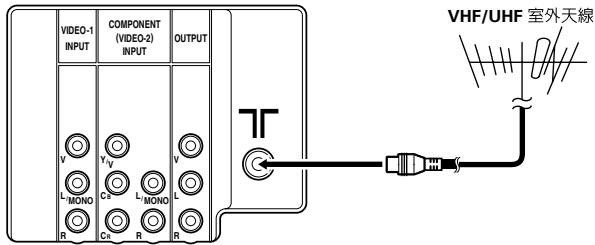



接天線和錄像機

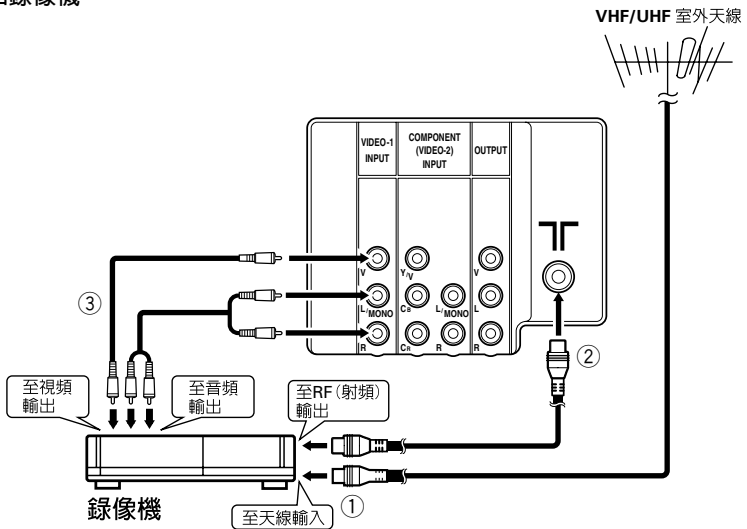 

4 連接其他裝置

如果不需連接任何其他裝置時，請跳過步驟4，執行步驟5。

  - 請使用帶立體聲微型插口（直徑3.5毫米）的耳機。與耳機相連接時，電視機的揚聲器關閉。
- OUTPUT端子輸出從電視機上觀看的圖像的視頻和聲音信號。可將它們復制在連接在OUTPUT端子上的錄像機上。
(OUTPUT端子不能輸出組合視頻信號。當電視機關閉時不能輸出任何信號。)
- 將DVD播放機等輸出組合視頻信號（Y/Cb/Cr信號）的組件與VIDEO-2端子相連接，並將視頻-2設定功能設定為“COMPONENT”。（參照第13頁。）
- 下圖是用於AV-29L31的。您的電視機的前面板和後面板可能不同於該插圖。

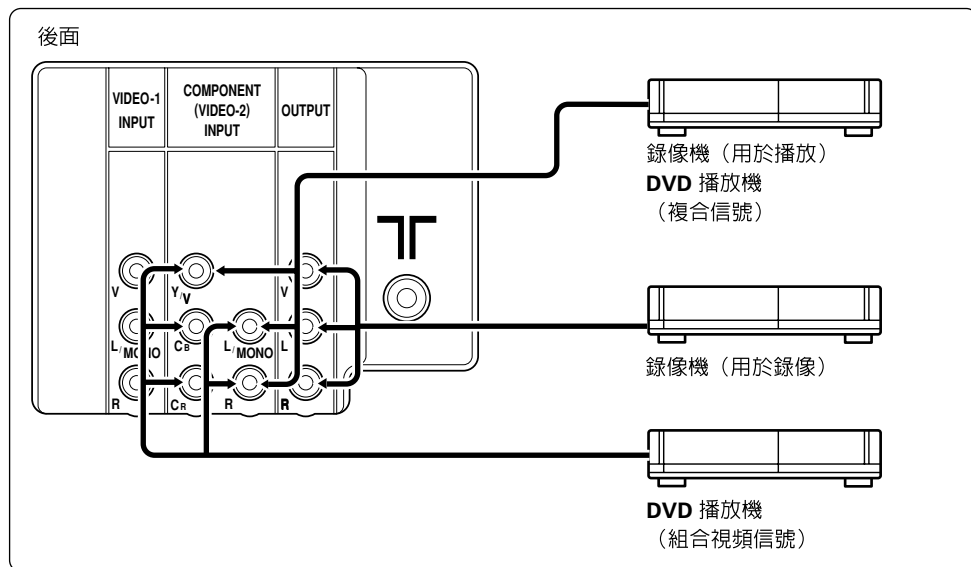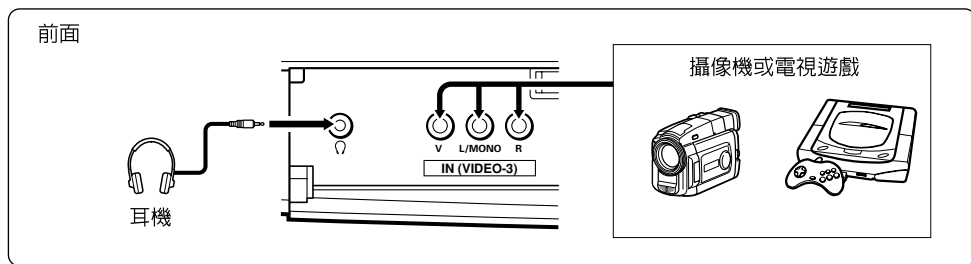

5 將電源線插入交流電源插座

 
僅在電視機背面所示的電源規格內操作使用。

6 初始設定


首次打開電視機時，將進入初始設定模式，並出現JVC標誌。
請按照屏幕上顯示的說明，進行初始設定。

1 按下電視機上的主電源按鈕。

POWER指示燈發出。顯示JVC標誌後，電視機自動切換為語種設定模式。

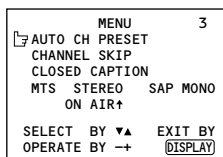


 - 如果以前已打開過電視機，則不會顯示JVC標誌。此時，請利用自動頻道預置功能，進行初始設定。詳細說明，請參照第13頁。

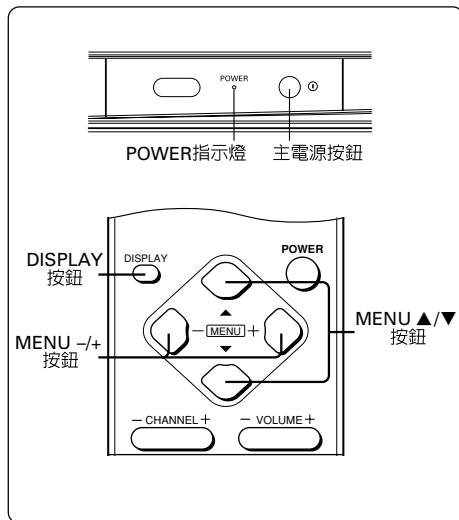

2 按下 MENU +/- 按鈕。

 顯示子菜單。

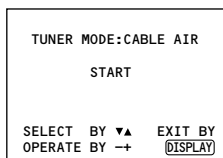

3 按下MENU +/- 按鈕，選擇“CABLE”或“AIR”。

4 按下MENU ▲/▼按鈕，選擇“START”。

5 按下 MENU +/- 按鈕，起動自動頻道預置功能。

在屏幕上會顯示“>>>ON SEARCH”。

當預置了所有可接收的電視頻道後，該顯示消失，自動頻道預置功能結束。

 
要結束自動頻道預置功能時，請按下MENU +/- 按鈕。

初始設定已結束。

請欣賞JVC電視機。

基本操作

- 下圖是AV-29L31所附帶的遙控器RM-C248。您使用的遙控器可能不完全如圖所示。

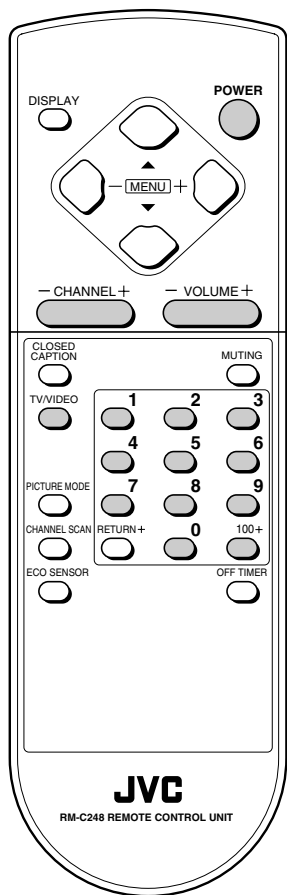

1 按下 **POWER** 按鈕，打開電視機。

- 如果電視機未打開，請按下電視機上的主電源按鈕，然後再次按下POWER按鈕。
- 也可透過按下下列任一按鈕來打開電視機；
 - CHANNEL -/+ 按鈕
 - TV/VIDEO按鈕

2 選擇頻道。

■ 按下 CHANNEL -/+ 按鈕。

- 對於頻道跳越已設為“YES”的頻道，不能用上下選擇功能進行選擇。請參照第14頁。

■ 按下數字按鈕，輸入頻道號。

- 當要選擇大於100的頻道時，請按下100+按鈕後，輸入兩位數。

3 按下 **VOLUME -/+** 按鈕，調節聲音。

4 按下 **POWER** 按鈕，關閉電視機。

- 長期不使用電視機或想節電時，推薦您按下電視機上的主電源按鈕，以關閉主電源。

從外接裝置上觀看圖像：

請按下TV/VIDEO按鈕，選擇視頻模式。

- 也可使用輸入功能來選擇視頻模式。詳細說明，請參照第11頁。

遙控器按鈕和功能

ECO SENSOR (ECO電子眼) 按鈕

可調節本電視機，使屏幕自動根據室內的明亮程度調節至最佳對比度。此功能減少眼睛緊張和電視機的電力消費。

請按下此按鈕，選擇所需模式。

DIGITAL ECO SENSOR DISPLAY:

打開ECO SENSOR功能。在此模式時，每當室內的明亮程度發生變化時，都會顯示幾秒鐘表示室內明亮程度的三葉草標記。室內變暗時，顯示在屏幕上的三葉草標記會增加。

DIGITAL ECO SENSOR:

打開ECO SENSOR功能。但是在此模式時，不顯示三葉草標記。

DIGITAL ECO SENSOR OFF:

關閉ECO SENSOR功能。

PICTURE MODE (圖像模式) 按鈕

可按需選擇三種圖像調節設定值。

請按下此按鈕，選擇一個模式。

BRIGHT:

加大對比度和銳度。

STANDARD:

調節圖像至標準。

SOFT:

使對比度和銳度柔和。

- 按下此按鈕，將“MENU 4”中的所有圖像設定值全部返回到默認設定值。

CLOSED CAPTION (封閉字幕) 按鈕

如果節目中有封閉字幕，可觀看封閉字幕或文字資訊。

請按下此按鈕，選擇一個模式。

▢ → OFF → CLOSED CAPTION → TEXT ▢

- 要改變字幕或文字頻道時，請參閱第14頁。

BASS (低音) 按鈕

<僅適用於AV-21L31B/AV-29L31B>

利用BASS (低頻反射) 功能，可欣賞大功率低音音響。

請按下此按鈕，打開或關閉低音功能。

- 要利用此功能，首先必須將與電視機包裝在一起的雙端口低音喇叭安裝在電視機的頂端。詳細說明，請參照第16頁。

MUTING (靜音) 按鈕

可立刻關閉聲音。

請按下此按鈕。

再次按下此按鈕，打開聲音。

遙控器按鈕和功能

DISPLAY (顯示) 按鈕

可在屏幕上持續顯示當前頻道號或視頻模式。

請按下此按鈕。

再次按下此按鈕，停止顯示。

- 當選擇無信號的視頻模式時，視頻模式的顯示會固定在屏幕上。

OFF TIMER (關機定時器) 按鈕

可將電視機設定成到了設定的時間後自動關閉。

請按下此按鈕，選擇時間。

- 可以10分鐘為增量設定時間，最多為120分鐘。
- 在OFF TIMER功能關閉電視機前的1分鐘，會出現“GOOD NIGHT!”。

按一次此按鈕，會顯示剩餘時間。

按下此按鈕，把時間設為0時，將取消OFF TIMER功能。

- OFF TIMER功能不會關閉電視機的主電源。

CHANNEL SCAN (頻道掃描) 按鈕

可迅速觀看所有可在您的電視機上收看的電視頻道節目，搜索想要觀看的節目。

1 按下此按鈕，開始掃描電視頻道。

每個電視頻道節目各顯示幾秒鐘。

- 不能顯示頻道跳越功能被設為“YES”的電視頻道節目。
- 2 當出現想要觀看的頻道時，請再次按下此按鈕，可停止掃描。

RETURN + (智能控制調回系統) 按鈕

可將經常觀看的頻道設定為調回頻道，任何時候僅需按一下就可觀看該頻道。

若要將頻道設定為調回頻道：

- 1 選擇要設定為調回頻道的頻道。
- 2 持續按住此按鈕，直至出現“RETURN PLUS PROGRAMMED!”的訊息。
 - 關閉電視機時，將取消調回頻道的設定。

若要觀看調回頻道：

請按下此按鈕。

- 按下此按鈕，可交替觀看兩個頻道（當前頻道和調回頻道）。

若要取消調回頻道設定值：

 
持續按住此按鈕，直至出現“RETURN PLUS CANCELLED!”的訊息。

若沒有頻道被設定為調回頻道：

按下此按鈕，可觀看當前頻道之前選擇的頻道。

使用電視機的菜單


本電視機具有許多可用菜單操作的功能。爲了充分利用所有的電視機功能，請掌握利用菜單的方法。

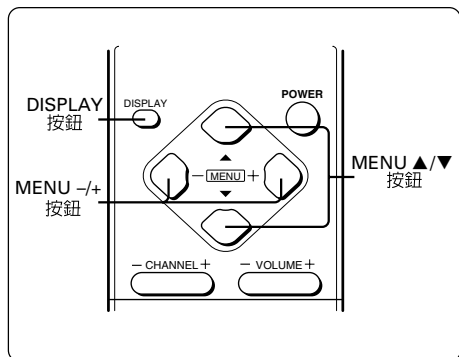

4 按下 MENU +/- 按鈕，改變功能的設定值。

例如：

 
改變AUTO SHUTOFF設定值。

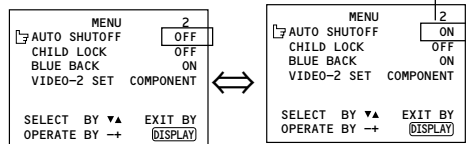

- 有些功能的操作方法可能不同。

基本操作

 1 按下 MENU ▲/▼ 按鈕，顯示五個菜單之一。

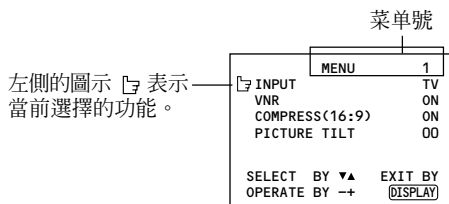

2 反復按下 MENU ▲/▼ 按鈕，顯示所需菜單。

- 如果持續按住 ▼ 按鈕，會顯示下一菜單。
- 如果所選功能在第一行，則按下 ▲ 按鈕會顯示前一菜單。

3 反復按下 MENU ▲/▼ 按鈕，選擇所需功能。

5 按下 DISPLAY 按鈕，關閉顯示。

- 要用電視機前面板上的按鈕操作菜單，請參照第18頁上的“操作菜單”。

使用電視機的菜單

輸入 (INPUT)

可觀看來自與電視機連接的錄像機或其他裝置的圖像。

- 1 按下 **MENU ▲/▼**，顯示“MENU 1”菜單，然後選擇“INPUT”。

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY → DISPLAY	

- 2 按下 **MENU -/+**，選擇“VIDEO-1”，“VIDEO-2”或“VIDEO-3”。

電視模式轉換為視頻模式。

畫面糾正 (PICTURE TILT)

<僅適用於AV-29L31和AV-29L31B>

地球的磁力有時可能會使圖像傾斜。此時，可糾正圖像的傾斜。

- 1 按下 **MENU ▲/▼**，顯示“MENU 1”菜單，然後選擇“PICTURE TILT”。

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY → DISPLAY	

- 2 持續按住 **MENU -/+**，直至圖像變成水平。

降噪 (VNR)

可減少圖像的噪音。

- 1 按下 **MENU ▲/▼**，顯示“MENU 1”菜單，然後選擇“VNR”。

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY → DISPLAY	

- 2 按下 **MENU -/+**，選擇“ON”。
要取消降噪功能時，請選擇“OFF”。

垂直壓縮 (16:9) (COMPRESS (16:9))


此功能將普通圖像（4:3縱橫比）轉換成寬型圖像（16:9縱橫比）。

用於具有16:9縱橫比但已被壓縮成普通圖像（4:3縱橫比）的圖像，可恢復成原有尺寸。

- 1 按下 **MENU ▲/▼**，顯示“MENU 1”菜單，然後選擇“COMPRESS(16:9)”。

MENU	1
INPUT	TV
VNR	ON
COMPRESS(16:9)	ON
PICTURE TILT	00
SELECT BY ▼▲ EXIT BY	
OPERATE BY → DISPLAY	

 - 2 按下 **MENU -/+**，選擇“ON”。



要取消垂直壓縮 (16:9) 功能時，請選擇“OFF”。

使用電視機的菜單

自動關機 (AUTO SHUTOFF)

可將電視機設定成當最後一個電視節目結束後約15分鐘以上未接收到信號時關閉電視機。

- 1 按下 **MENU ▲/▼**，顯示“MENU 2”菜單，然後選擇“**AUTO SHUTOFF**”。

MENU	2
☐ AUTO SHUTOFF	ON
CHILD LOCK	ON
BLUE BACK	ON
VIDEO-2 SET	COMPONENT
SELECT BY ▼▲	EXIT BY
OPERATE BY →←	[DISPLAY]

- 2 按下 **MENU -/+**，選擇“**ON**”。

要取消自動關機功能時，請選擇“**OFF**”。

- 自動關機功能並不關閉電視機的主電源。
- 自動關機功能對視頻模式無效。

童鎖 (CHILD LOCK)

可使電視機的前面控制按鈕功能無效。

當此功能被設定為“**ON**”時，隻能用遙控器操作電視機。

利用此功能可防止兒童在未得到父母的同意的情況下操作電視機。

- 1 按下 **MENU ▲/▼**，顯示“MENU 2”菜單，然後選擇“**CHILD LOCK**”。

MENU	2
AUTO SHUTOFF	ON
☐ CHILD LOCK	ON
BLUE BACK	ON
VIDEO-2 SET	COMPONENT
SELECT BY ▼▲	EXIT BY
OPERATE BY →←	[DISPLAY]

- 2 按下 **MENU -/+**，選擇“**ON**”。

要取消童鎖功能時，請選擇“**OFF**”。

- 關閉電源時，童鎖功能被取消。

藍背景 (BLUE BACK)

當電視機未接收到信號或信號不穩定時，可靜音並將圖像變成藍色屏幕。

- 1 按下 **MENU ▲/▼**，顯示“MENU 2”菜單，然後選擇“**BLUE BACK**”。

MENU	2
AUTO SHUTOFF	ON
CHILD LOCK	ON
☐ BLUE BACK	ON
VIDEO-2 SET	COMPONENT
SELECT BY ▼▲	EXIT BY
OPERATE BY →←	[DISPLAY]

- 2 按下 **MENU -/+**，選擇“**ON**”。

要取消藍背景功能時，請選擇“**OFF**”。

 
- 要想觀看較弱信號的廣播時，請將藍背景功能設定為“**OFF**”。
- 即使藍背景功能設為“**OFF**”，也還可能聽不見聲音。

使用電視機的菜單

視頻-2設定 (VIDEO-2 SET)

請按照從連接在VIDEO-2端子上的外接裝置輸入的視頻信號正確地設定視頻-2設定。如果設定不正確，將不能正確顯示圖像。

- 1 按下 **MENU ▲/▼**，顯示“MENU 2”菜單，然後選擇“VIDEO-2 SET”。

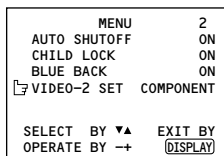

- 2 按照 VIDEO-2 端子輸入的視頻信號設定視頻-2設定。

如果輸入的是普通的視頻信號（複合信號）時：

按下MENU -/+ 按鈕，選擇“VIDEO”。

 
如果輸入的是組合視頻信號（Y/C_b/C_r信號）時：

按下MENU -/+ 按鈕，選擇“COMPONENT”。


自動頻道預置 (AUTO CH PRESET)

可自動將所有電視機可接收的電視頻道預置為頻道。

- 1 按下 **MENU ▲/▼**，顯示“MENU 3”菜單，然後選擇“**AUTO CH PRESET**”。

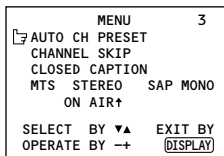

- 2 按下 **MENU -/+**。
顯示子菜單。

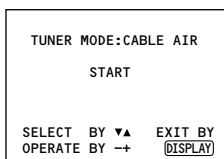 

- 3 按下 **MENU -/+**，選擇“**CABLE**”或“**AIR**”。

- 4 按下 **MENU ▲/▼**，選擇“**START**”。

- 5 按下 **MENU -/+**，啟動自動頻道預置功能。

在屏幕上會顯示“>>>ON SEARCH”。

當預置了所有電視機可接收的電視頻道後，該顯示消失，自動頻道預置功能結束工作。

 
若要停止自動頻道預置：

請按下MENU -/+ 按鈕。


頻道跳越 (CHANNEL SKIP)

可設定不要的頻道，將其跳過。被設定為跳躍的頻道不能用CHANNEL +/- 按鈕或CHANNEL SCAN按鈕選擇。

- 1 按下MENU ▲/▼，顯示“MENU 3”菜單，然後選擇“CHANNEL SKIP”。

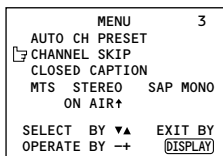


- 2 按下MENU +/-。
- 顯示子菜單。

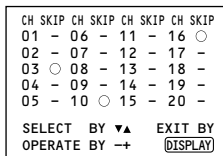 

- 3 按下CHANNEL +/-，選擇要跳躍的頻道。
 - 4 按下VOLUME +/-，選擇“YES”。
- 該頻道被設定為跳躍的頻道。
要取消頻道跳越功能時，請選擇“NO”。
- 5 如要設定其他頻道跳躍時，請重複步驟3和4。

若要關閉顯示：

 - 1 按下MENU ▼，選擇“EXIT”。

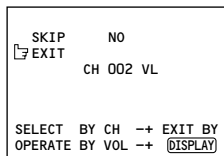


- 2 按下VOLUME +/-，關閉顯示。

多頻道電視音響(MTS)

可選擇MTS（多頻道電視音響）設定，以選擇立體聲、單聲道和SAP（第二聲訊節目）。

 - 1 按下MENU ▲/▼，顯示“MENU 3”菜單，然後選擇“MTS”。

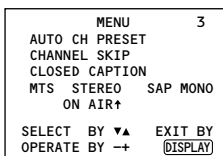


- 2 按下MENU +/-，選擇模式。

- “ON AIR↑” 指示現正發送的信號。
- 選擇“MONO”，降低節目或頻道中的雜訊。


封閉字幕 (CLOSED CAPTION)

可觀看封閉字幕或文字資訊。

 - 1 按下MENU ▲/▼，顯示“MENU 3”菜單，然後選擇“CLOSED CAPTION”。

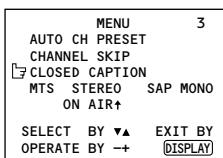

- 2 按下MENU +/-。
- 顯示子菜單。

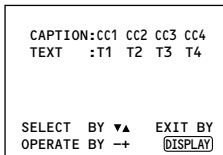 


- 3 按下MENU ▲/▼，選擇“CAPTION”或“TEXT”。
- 4 按下MENU +/-，選擇字幕或文字頻道。

使用電視機的菜單

圖像調節

可按照需要調節圖像。

 - 1 按下 **MENU ▲/▼**，顯示“MENU 4”菜單。

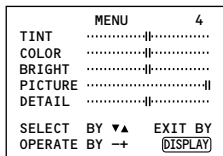

- 2 按下 **MENU ▲/▼**，選擇一個項目，並按下 **MENU -/+** 進行調節。


TINT*	- : 較紅	+ : 較綠
COLOR	- : 較淡	+ : 較深
BRIGHT	- : 較暗	+ : 較亮
PICTURE	- : 較低	+ : 較高
DETAIL	- : 較柔和	+ : 較明顯

* 用VIDEO-2 SET功能選擇“COMPONENT”後，您不能調節TINT。

聲音調節

可按照需要調節聲音。

 - 1 按下 **MENU ▲/▼**，顯示“MENU 5”菜單。

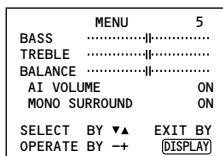


- 2 按下 **MENU ▲/▼**，選擇一個項目，並按下 **MENU -/+** 進行調節。

BASS	- : 較弱	+ : 較強
TREBLE	- : 較弱	+ : 較強
BALANCE	- : 左側	+ : 右側

自動音控 (AI VOLUME)

可防止改變頻道或切換視頻模式時的音量的突然增減。

 - 1 按下 **MENU ▲/▼**，顯示“MENU 5”菜單，然後選擇“AI VOLUME”。

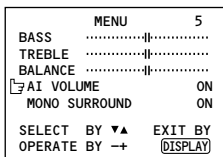

- 2 按下 **MENU -/+**，選擇“ON”。

要取消自動音控功能時，請選擇“OFF”。

 
- 如果來自廣播臺（或視頻軟體）的聲音輸入電平極低時，自動音控功能可能不能發揮應有的功能。
- 可分別用於設定電視模式和視頻模式的自動音控功能。例如，可將其設定為在電視模式時為關，在視頻模式時為開。如果在觀看電視頻道時設定自動音控功能，則該設定值被登記為用於電視模式的設定值。如果在觀看來VIDEO端子的圖像時設定自動音控功能，則該設定值被登記為用於視頻模式的設定值。

單聲道環繞聲

(MONO SURROUND)

可轉換為擬立體聲的音響，以欣賞普通的單聲道音響。

- 1 按下 **MENU ▲/▼**，顯示“MENU 5”菜單，然後選擇“MONO SURROUND”。

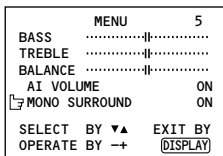

- 2 按下 **MENU -/+**，選擇“ON”。

要取消單聲道環繞聲功能時，請選擇“OFF”。

安裝TWIN PORT BASS BLASTER (雙端口低音發音器裝置)

<僅適用於AV-21L31B>

與電視機一起裝有TWIN PORT BASS BLASTER裝置。使用電視機之前，請將TWIN PORT BASS BLASTER裝置正確地安裝在電視機上。

注：

- 除非將TWIN PORT BASS BLASTER裝置正確連接於電視機，否則BASS（超低音）功能不能發揮作用。

 
 
注意：

- 僅需將TWIN PORT BASS BLASTER裝置放在電視機的頂上，而無需用螺絲固定。使用TWIN PORT BASS BLASTER裝置時，請遵守下列注意事項。否則TWIN PORT BASS BLASTER裝置或電視機可能會倒下並損壞，或意外受傷。
 - 請勿將手或肘放在TWIN PORT BASS BLASTER裝置上。
 - 請勿連著電視機頂上的TWIN PORT BASS BLASTER裝置一起搬動電視機。搬動電視機前，請務必取下TWIN PORT BASS BLASTER裝置。
 - 請勿邊拿著TWIN PORT BASS BLASTER裝置邊搬動電視機。

- 1 將**TWIN PORT BASS BLASTER**裝置放在電視機的頂上，並使**TWIN PORT BASS BLASTER**裝置底部的安裝銷插入電視機頂上的安裝孔內。

- 安裝TWIN PORT BASS BLASTER裝置時，請確認安裝銷正確插入安裝孔內。否則，TWIN PORT BASS BLASTER裝置可能會滑離電視機的頂端。這會損壞TWIN PORT BASS BLASTER裝置，或意外受傷。


- 2 將**TWIN PORT BASS BLASTER**裝置的插頭緊緊地插入**BASS SPEAKER OUT**(低音揚聲器輸出) 端子內。

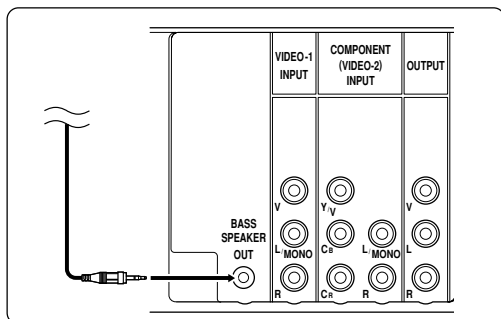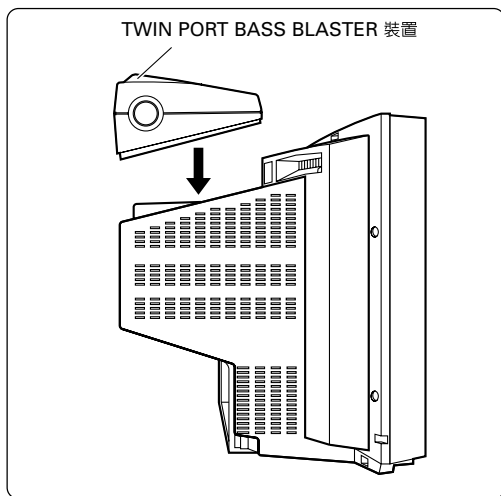


電視機按鈕和部件

前面
 
<AV-29L31和AV-29L31B>

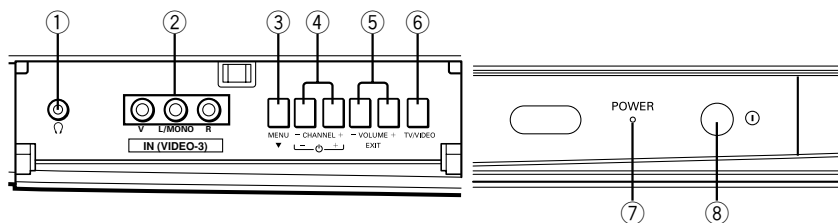


<AV-21L31B>

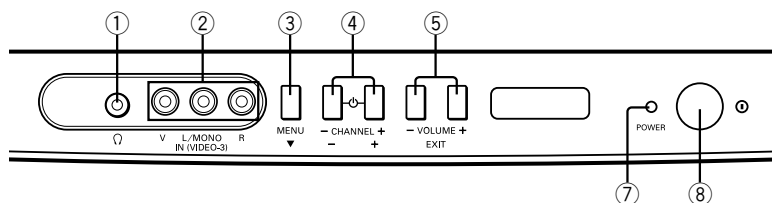 

- ① 耳機插口
- ② VIDEO-3端子
- ③ MENU按鈕
- ④ CHANNEL -/+ 按鈕

- ⑤ VOLUME -/+ 按鈕
- ⑥ TV/VIDEO按鈕
- ⑦ POWER指示燈
- ⑧ 主電源按鈕

 後面

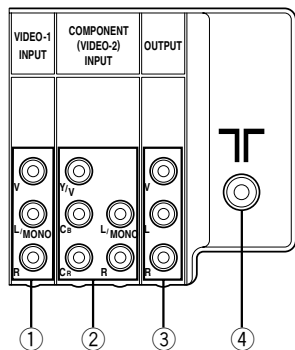

- ① VIDEO-1 INPUT端子
- ② COMPONENT (VIDEO-2) INPUT端子
- ③ OUTPUT端子
- ④ 天線插口

使用電視機的按鈕

基本操作

- 請確認童鎖功能被設為“OFF”。當童鎖功能為“ON”時，不能用前面控制按鈕操作電視機。詳細說明，請參照第12頁上的“童鎖(CHILD LOCK)”。

- 1 按下 **CHANNEL -/+**，從標準模式打開電視機。
- 2 按下 **CHANNEL -/+**，選擇頻道。
- 3 按下 **VOLUME -/+** 按鈕，調節音量。
- 4 要關閉電視機時，請按下主電源按鈕，關閉電視機的主電源。

若要將電視模式轉換為視頻模式：

- 如果電視機帶有TV/VIDEO按鈕，請按下該按鈕。請參照第7頁。
- 如果電視機沒有TV/VIDEO按鈕，請用“MENU 1”中的輸入功能選擇視頻模式。

操作菜單

可用電視機前面控制按鈕操作菜單中的功能。

- 1 按下 **MENU ▼**，顯示菜單。
- 2 反復按下 **MENU ▼**，顯示需使用的菜單。
- 3 按下 **MENU ▼**，選擇所需的功能或項目。
- 4 按下 **MENU -/+** 或 **VOLUME -/+**，進行所需的操作。
詳細說明，請參照各功能的說明。
- 5 按下 **VOLUME -/+** 關閉菜單的顯示。

故障排除

如果無圖像顯示或電視機工作不正常，請檢查問題是否是由下列所示的原因引起的。如果即使採用了下列方法還是解決不了問題時，請與維修人員聯絡。

不能打開電視機

- 按下電視機上的主電源按鈕。
- 將電源線連接於交流電源插座。

屏幕變為藍色

- 藍背景(BULE BACK)功能是否為開？（參照第12頁。）

遙控器不起作用

- 更換新電池。（參照第3頁。）

電視機前面的按鈕不起作用

- 關閉童鎖(CHILD LOCK)功能。（參照第12頁。）

電視機不能立刻反應

- 按下電視機上的主電源按鈕，關閉主電源。再次按下主電源按鈕，打開電視機。如果電視機回到正常狀態，則工作正常。

電視機突然關閉

- 是否設定了關機定時器(OFF TIMER)功能？（參照第9頁。）
- 是否自動關機(AUTO SHUTOFF)功能為開？（參照第12頁。）

聲音不正常

- 調節聲音設定值。（參照第15頁。）

圖像不正常

- 調節圖像設定值。（參照第15頁。）
- DVD播放機等組合信號輸出裝置的連接是否正確？（參照第5頁。）
- 視頻-2設定(VIDEO-2 SET)設定值是否正確？（參照第13頁。）
- 如果噪音(雪花)遮住了整個圖像時，請檢查下列各點。
 - 電視機和天線的連接是否正確？
 - 天線電纜是否損壞？
 - 是否天線指向右方？
 - 天線是否壞了？
- 如果電視機或天線受其他裝置的干擾，會在圖像上出現條紋或噪音。請使造成干擾的裝置遠離電視機。
- 如果電視機或天線受來自大山或建築物的信號反射的干擾，會出現雙重圖像(重影)。請改變天線的方向或將其更換為方向性較好的天線。
- 當在屏幕上顯示明亮的白色靜止圖像(例如白色衣服)時，白色部分會看上去呈彩色。當圖像從屏幕上消失後，該不自然的色彩也會消失。

圖像傾斜

<僅適用於AV-29L31和AV-29L31B>

- 因地球磁力的影響，圖像可能會傾斜。此時，請利用畫面糾正(PICTURE TILT)功能調節傾斜。（參照第11頁。）

屏幕80%為黑色

- 按下CLOSED CAPTION(封閉字幕)按鈕，選擇“OFF”。（請參閱第8頁。）

規格

電視RF制式

M

彩色制式

NTSC

頻道

VHF 2至13, VHF14至69

副中頻、高頻、超高頻和極高頻頻道

外接輸入／輸出

VIDEO-1:

VIDEO 輸入, AUDIO L/R 輸入

VIDEO-2/COMPONENT: VIDEO 輸入, AUDIO L/R 輸入,
COMPONENT VIDEO (Y/Cb/Cr) 輸入

VIDEO-3:

VIDEO 輸入, AUDIO L/R 輸入

OUTPUT:

VIDEO 輸出, AUDIO L/R 輸出

耳機插口:

立體聲微型插口 (直徑3.5毫米)

聲音多重制式

BTSC (多頻道音響)

設計和規格如有變更，恕不預先通告。

JVC

VICTOR COMPANY OF JAPAN, LIMITED