


Locations

Locations of remote control buttons

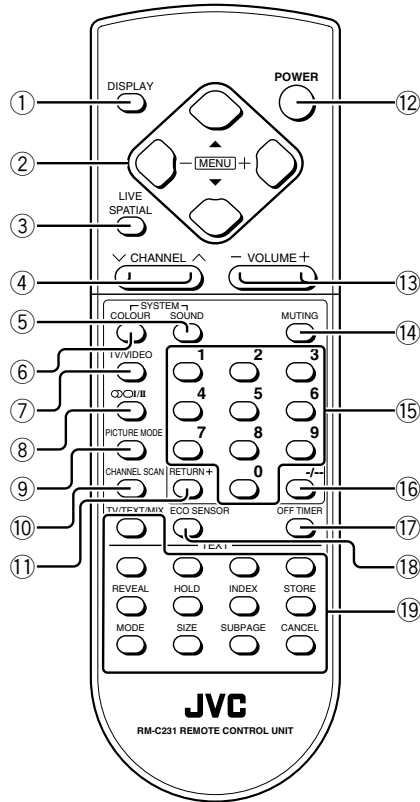


①	DISPLAY button	p.20
②	MENU buttons	
	• MENU ▲/▼ buttons	
	• MENU -/+ buttons	
③	LIVE SPATIAL button	p.18
④	CHANNEL ∇/∧ buttons	p.13
⑤	SOUND SYSTEM button	p.17
⑥	COLOUR SYSTEM button	p.17
⑦	TV/VIDEO button	p.15
⑧	Multi Sound button	p.17
	(AV-21PS only)	
⑨	PICTURE MODE button	p.17
⑩	CHANNEL SCAN button	p.14
⑪	RETURN + button	p.21
⑫	POWER button	p.6,13,14
⑬	VOLUME -/+ buttons	p.14
⑭	MUTING button	p.14
⑮	Number buttons	p.13
⑯	-/- button	p.13
⑰	OFF TIMER button	p.20
⑱	ECO SENSOR button	p.20
	Teletext buttons	p.26
	(AV-21PS only)	


No. 56018

Locations

Locations of front panel buttons and lamps

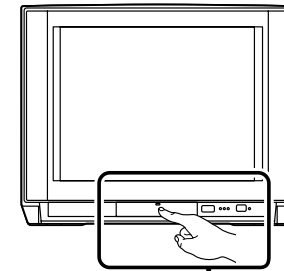

(behind the door)

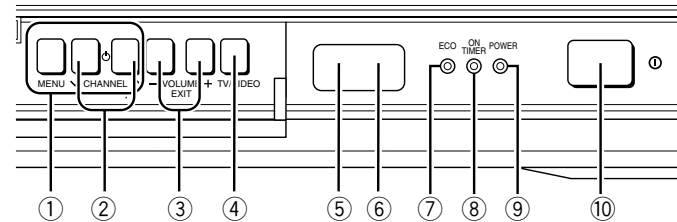

①	MENU buttons	p.25	⑤	ECO sensor	
	• MENU button		⑥	Remote control sensor	
	• MENU -/+ buttons		⑦	ECO lamp	p.20
②	CHANNEL ∇/∧ buttons	p.15	⑧	ON TIMER lamp	p.22
③	VOLUME -/+ buttons	p.15	⑨	POWER lamp	p.6,13,14
④	TV/VIDEO button	p.15	⑩	Main power button	p.6,15