

JVC

COLOUR TELEVISION INSTRUCTIONS

ENGLISH



This illustration shows AV-29S357.

AV-29Q317B **AV-21Q317B**
AV-29RXP8 **AV-21R318**
AV-29S357 **AV-21RXP8**
 AV-21S357

The illustrations of AV-29S357 is used in this instruction manual for explanation purpose. Your TV may not look exactly the same as illustrated.

Thank you for buying this JVC colour television.
To make sure you understand how to use your new TV, please read this manual thoroughly before you begin.

WARNING

 
TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

- Operate only from the power source indicated on the rear of the TV.



- Avoid damaging the power cord and mains plug. When unplugging the TV, grasp the mains plug. Do not pull on the power cord.

- This TV can be turned on/off power by connecting/disconnecting the AC plug into AC outlet. While this TV is being installed, enough space should be reserved for connection/disconnecting the AC plug into AC outlet by hand.



- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



 
- Do not allow objects or liquid into the cabinet openings.



CAUTION

TO ENSURE PERSONAL SAFETY, OBSERVE THE FOLLOWING RULES REGARDING THE USE OF THIS TV.

- Never block or cover the ventilation openings.
- Never install the TV where good ventilation is unattainable.
- When installing this TV, leave spaces for ventilation around the TV of more than the minimum distances as shown.



- The surface of the TV screen is easily damaged. Be very careful with it when handling the TV. Should the TV screen become soiled, wipe it with a soft dry cloth. Never rub it forcefully. Never use any cleaner or detergent on it.



In the event of a fault, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

Knowing your TV's features

Please see the chart below and check the function are equipped for your TV's model number. The model number is indicated at the rear of your TV. When you press a button concerned to a function that is not available for your TV, it does not work and the logo "Ø" appears on the screen.

Function	Model No.	AV-29Q317B	AV-29RXP8	AV-29S357	AV-21Q317B	AV-21R318	AV-21RXP8	AV-21S357
PIP control buttons (Green label)		-	•	•	-	-	•	•
PICTURE TILT		•	•	•	-	-	-	-
MaxxBass		-	•	•	-	•	•	•
AI ECO SENSOR		-	•	•	-	•	•	•
ECO MODE		•	-	-	•	-	-	-
PICTURE BOOSTER		•	-	•	•	•	-	•

Features	Descriptions
DVD MENU	Just connect DVD player to the television. The television will detect DVD signal and display picture on the screen automatically and you can adjust pictures and sound while you are watching DVD as your desire. When disconnect DVD player, the television will display the previous channel.
MaxxBass	MaxxBass enhances bass sound that cannot be reproduced by normal speakers to be heard by our ears.
PIP (Picture in Picture)	You can view two screens (Main picture and Sub picture) at the same time.
FAVORITE CH (Channel)	You can register up to four favorite channels for quick recall with one press.
AI ECO SENSOR	TV detects the brightness of your room and automatically adjust the picture brightness to a suitable level for a better eyecare.
ECO MODE	You can adjust TV screen contrast according to the brightness of your room to suitable level for a better eyecare.
AI VOLUME	TV adjusts the volume automatically for all TV channels to avoid sudden change of the volume when selecting different TV channels or selecting Video Mode.
TINT	You can adjust TINT setting for all colour systems, including PAL.

Note : Some functions written in this instruction manual may not be available for your TV.

Contents

Knowing your TV's features.....	3
Connections	4
Initial settings.....	5
Remote control buttons and basic functions	6
TV buttons and functions.....	7
Operating the menus	7

Picture setting.....	9
Picture in picture (PIP) operation	11
Sound setting	11
Customized setting.....	13
TV channel presetting	15

Troubleshooting.....	17
Specifications	18


Connections

The illustration of AV-29S357 is shown here for explanation purpose. Your TV may not look exactly the same as illustrated.


CAUTION

Ensure to turn off all equipments including the TV before connecting the AC mains plug to the AC outlet.

Connecting to the aerial cable and VCR

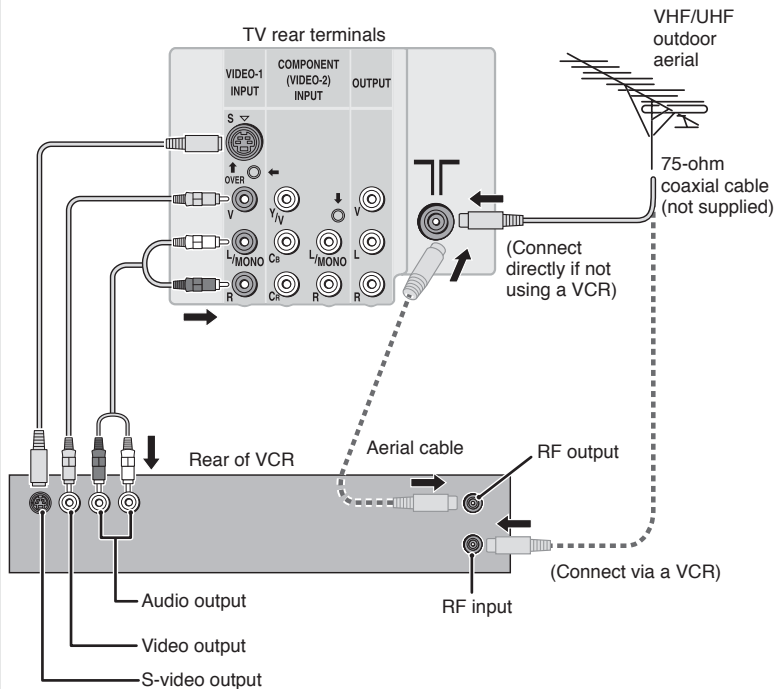


Connecting to the rear component/video input terminal and output terminal

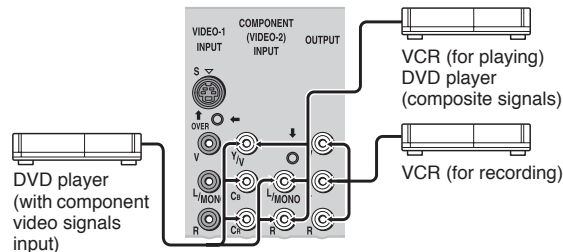

- When connecting to COMPONENT (VIDEO-2) input, depending on the connection, choose the appropriate video input using the menu (➔ page 14).

Connecting to the front video input terminal

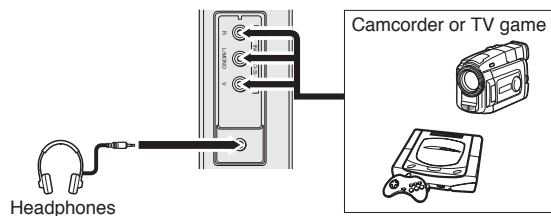

After all the connections have been made, insert the mains plug to the AC outlet.



Initial settings

1

Turn on the TV




JVC logo appears



or wait 15 seconds to run Setup Tour


2

Select a language

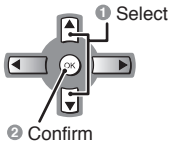

3


Searching for the channels (AUTO PROGRAM)

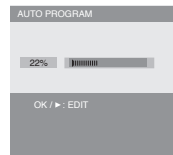

To stop or wait until AUTO PROGRAM finishes

4

Edit the channel list

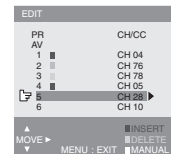

To edit the channel list,
→ page 15.



To complete Setup Tour


To restart Setup Tour after above setup has completed



(while the cursor is pointing to PICTURE MODE and within 3 seconds)

Remote control buttons and basic functions

- Insert two batteries by following the ⊕ and ⊖ polarities and inserting the ⊖ end first.
- Use AA/R6/UM-3 dry cell batteries.
- If the remote control does not work properly, fit new batteries. The supplied batteries are for testing, not regular use.

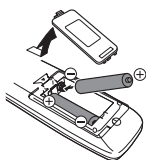

Operating the menus (⇒ page 7)

- Display the programme or video terminal number and stereo/bilingual broadcast system.
- To return to the previous menu

RETURN PLUS function

Return to the frequently viewed channel.

Choose the channel you want to programme



Press and hold

RETURN PLUS
PROGRAMMED!

To cancel




Press and hold

RETURN PLUS
CANCELED!

RETURN function

If you have not set or have canceled the RETURN PLUS channel, this will return to the previously viewed channel.

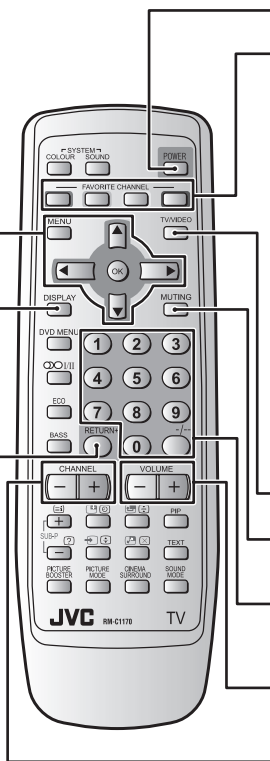

Turn the TV on from standby and vice versa

Programme and recall 4 favourite channels

(colour buttons: red, green, yellow, blue)

Choose the TV channel you wish to programme



Press and hold
any button

PROGRAMMED! ■

Repeat to programme another favourite channel.

To recall the favourite channel, press the corresponding colour button.

- When the TV is in Text function or MENU mode, the favourite channel function is not available.
- When the TV is in PIP function, the favourite channel function cannot be programmed but can recall the favourite channel.

TV or video terminal input selection, Exit from the menu

Turn the volume Off / On

Programme number selection

For two digits :

 


Adjust the volume level, Turn off Muting

Channel selection

Select the desired channel number.

For Hyper Scan




Press and hold


PR changes without changing the picture. Once you stop pressing CHANNEL+ or CHANNEL- button, picture will change to the desired PR.

TV buttons and functions

The illustration of AV-29S357 is shown here for explanation purpose. Your TV may not look exactly the same as illustrated.

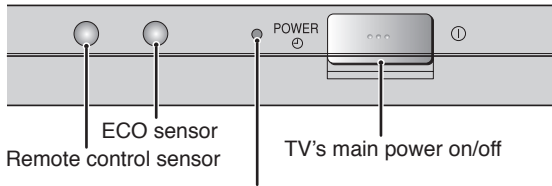


 
 
 





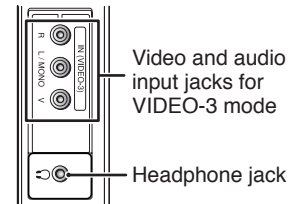

- TV or Video terminal input selection, Exit from the menu
- Display the menu and exit after finish setting
- Channel selection, To select menu function
- Volume level adjustment, To choose a Top menu and adjust the desired menu function



Power lamp - Indicates the TV's status.
 No colour: TV's main power is being turned off.
 Red: TV's main power is turned on.
 Blink: While the TV is in standby mode, ON TIMER function is in used.
 While the TV is in turn on mode, OFF TIMER function is in used.
 Note: When you turn off the power switch while TV is in standby mode, the power lamp will go off in 5-10 seconds. When you operate the TV, POWER Lamp will blink.

    Operating the menus



<p>To display the MENU.</p> 	<p>To select a Top menu.</p>  <p>When the cursor is at MENU.</p>	<p>To select a second menu.</p>  <hr style="border: 0.5px dashed black;"/> <p>To display other pages.</p>  <p>To return to the previous menu.</p> 	<p>To select for go to third menu.</p>  <p>or</p>  <p>Depend to the on screen guide.</p>	<p>To select, adjust or choose the setting of a function.</p>  <p>or</p>  <p>Depend to the on screen guide.</p>	<p>To exit.</p> 
--	--	--	--	---	--

Operating the menus (continued)

You can use the DVD MENU by switch channel to VIDEO-2 or press the DVD MENU button on the remote control. See the menus location in the below table.

Top menu	Page	2nd menu	For RF / Video-1 / Video-3 (MENU)	For Video-2 (DVD MENU)
			3rd menu / Adjustments	3rd menu / Adjustments
PICTURE or DVD MENU PICTURE*	9	PICTURE MODE	USER / VIVID / SOFT	DVD THEATER STATUS set to OFF : USER / SHARP / CLEAR / VIVID / SOFT DVD THEATER STATUS set to ON : USER / SHARP / CLEAR
	10	PICTURE SETTING	PICTURE MODE set to USER : CONTRAST / BRIGHT/ SHARP/ COLOUR / TINT PICTURE MODE set to SOFT or VIVID:-	PICTURE MODE set to USER : CONTRAST / BRIGHT/ SHARP / COLOUR / TINT PICTURE MODE set to SHARP or CLEAR or SOFT or VIVID : -
	9	WHITE BALANCE	NORMAL / COOL / WARM	DVD THEATER STATUS set to OFF : NORMAL / COOL / WARM DVD THEATER STATUS set to ON : -
	13	VNR (Only available in RF, VIDEO-1 and VIDEO-3)	OFF / AUTO / MIN / MAX	-
	9	PICTURE BOOSTER	OFF / HIGH / LOW	-
	13	AUTO SIGNAL DETECT (Only available in VIDEO-2)	-	ON / OFF
	13	DVD THEATER STATUS (Only available in VIDEO-2)	-	ON / OFF
SOUND or DVD MENU SOUND*	12	AI VOLUME	ON / OFF	ON / OFF
	12	SOUND MODE	USER / MUSIC / CINEMA / NEWS	USER / MUSIC / CINEMA / DRAMA
	11	EQUALIZER (SOUND MODE set to USER and CINEMA SURROUND set to OFF only)	Adjust the sound level of each frequencies.	Adjust the sound level of each frequencies.
	12	BALANCE	Left Stronger / Right Stronger	Left Stronger / Right Stronger
	11	CINEMA SURROUND	ON / OFF	ON / OFF
FEATURES	11	MaxxBass	OFF / HIGH / LOW	OFF / HIGH / LOW
	14	ON TIMER	Set timer for turn on the TV	Set timer for turn on the TV
	14	OFF TIMER	Set timer for turn off the TV	Set timer for turn off the TV
	14	CHILD LOCK	ON / OFF	ON / OFF
	9	COMPRESS (16:9)	ON / OFF	ON / OFF
	10	AI ECO SENSOR or ECO MODE	OFF / MODE-1 / MODE-2 / DISPLAY or OFF / ECO-1 / ECO-2	DVD THEATER STATUS set to OFF : OFF / MODE-1 / MODE-2 / DISPLAY or OFF / ECO-1 / ECO-2 DVD THEATER STATUS set to ON : -
	14	VIDEO-2 SETTING	VIDEO / COMPONENT	VIDEO / COMPONENT
	9	PICTURE BOOSTER	HIGH / LOW / OFF	HIGH / LOW / OFF
	10	BLUE BACK	ON / OFF	ON / OFF
	10	PICTURE TILT	Tilt the picture.	Tilt the picture.
SET UP	14	BEEP	ON / OFF	ON / OFF
	15	AUTO PROGRAM	Register the TV channel.	Register the TV channel.
	15	EDIT / MANUAL	MOVE / INSERT / DELETE / MANUAL	MOVE / INSERT / DELETE / MANUAL
	9	COLOUR SYSTEM	AUTO / PAL / SECAM / NTSC3.58 / NTSC4.43	VIDEO-2 SETTING set to COMPONENT : AUTO VIDEO-2 SETTING set to VIDEO : AUTO / PAL / SECAM / NTSC3.58 / NTSC4.43
	13	LANGUAGE	Select the languages.	Select the languages.

* For DVD THEATER STATUS set to ON only

Picture setting

COLOUR SYSTEM

You can select the appropriate colour system when the picture is not clear or no colour appears.



You can also operate this function from the menu.



For the colour system in each country or region, see the table below:

Area	Country or Region	System
Asia, Middle East	Bahrain, Kuwait, Oman, Qatar, United Arab Emirates, Yemen, Indonesia, Malaysia, Singapore, Thailand, India, China, Vietnam, Hong Kong, etc.	PAL
	Islamic Republic of Iran, Lebanon, Saudi Arabia, etc.	SECAM
	Philippines, Taiwan, Myanmar, etc.	NTSC
Europe	Russia, etc.	SECAM
	Czech Republic, Poland, Germany, Holland, Belgium, UK, etc.	PAL
Oceania	Australia, New Zealand, etc.	PAL
Africa	Republic of South Africa, Nigeria, etc.	PAL
	Egypt, Morocco, etc.	SECAM

PICTURE BOOSTER

You can improve picture clarity when the picture is unclear due to the low signal reception.



OFF	Cancel the function
HIGH	Perform at maximum level.
LOW	Perform at minimum level.

WHITE BALANCE

You can change the white balance of the picture to better match the type of video being viewed.



NORMAL	Normal white balance
COOL	Bluish white
WARM	Reddish white

When DVD THEATER STATUS set to ON, WHITE BALANCE is not available in VIDEO-2. → Page 8.

COMPRESS (16:9)

You can convert a normal picture (4:3 aspect ratio) into a wide picture (16:9 aspect ratio).



PICTURE MODE

You can choose the desired picture setting with one-touch.



USER	You can change this picture setting (CONTRAST, BRIGHT, SHARP, COLOUR, TINT) as you like. (→ PICTURE SETTING)
SHARP	To sharpen this picture.
VIVID	Heightens contrast and sharpness.
SOFT	Softens contrast and sharpness.
CLEAR	To soften the picture.

You can also operate this function from the menu.



To return the USER setting to default, press the blue button when the PICTURE SETTING menu is displayed.

See details for the location menus in "Operating the menus" → Page 8.

Picture setting (continued)

PICTURE SETTING

You can adjust the desired picture setting when selecting USER in PICTURE MODE.

1 (MENU) ➔ (PICTURE menu) ➔ (PICTURE MODE) ➔ (USER)

2 (MENU) ➔ (PICTURE menu) ➔ (PICTURE SETTING)

CONTRAST	◀ : Lower contrast	▶ : Higher contrast
BRIGHT	◀ : Darker	▶ : Brighter
SHARP	◀ : Softer	▶ : Higher
COLOUR	◀ : Lighter	▶ : Deeper
TINT	◀ : Reddish	▶ : Greenish

See details for the location menus in “Operating the menus” ➔ Page 8.

BLUE BACK

You can set the TV to automatically change to a blue screen and mute the sound if the signal is weak or absent, or when there is no input from an antenna.

(MENU) ➔ (FEATURES menu) ➔ (BLUE BACK) (Choose ON or OFF)

This function is only available in RF mode.

AI ECO SENSOR (ECO)/ECO MODE

You can automatically adjust TV screen contrast according to the brightness of your room.

OFF	Cancel the function.
MODE-1/ECO-1	Mild contrast (recommended).
MODE-2/ECO-2	Even contrast.
DISPLAY (for AI ECO SENSOR only)	Display the graphic of the function.



You can also operate this function from the menu.

(MENU) ➔ (FEATURES menu) ➔ (AI ECO SENSOR / ECO MODE)

Note: AI ECO SENSOR for S and R series.
ECO MODE for Q series.

 
When DVD THEATER STATUS set to ON, AI ECO SENSOR / ECO MODE is not available in VIDEO-2. ➔ Page 8.

Correcting the Slanting Picture (PICTURE TILT)

You can correct the picture tilt caused by the earth's magnetic force.

1 (MENU) ➔ (FEATURES menu) ➔ (PICTURE TILT)

The following display appears.



Picture in picture (PIP) operation

You can display a sub picture within the main picture on the screen.



to display the sub picture.

You can hear the sound from the main picture only.

When main picture and sub picture are the same TV channel:

Press SUB-P +/-	Main picture will be changed TV channel follow as sub picture.
Press ↔ (Input)	To change sub picture to video mode.
Press CHANNEL +/-	Sub picture will be changed TV channel follow as Main picture.
Press CHANNEL +/-	Until main picture change to video mode.

To cancel, press the PIP button again.

While a sub picture is being displayed, you can perform the following functions.

+ (SUB-P)	Select the desired TV channel for sub picture.
↔ (Input)	Select the input source for the sub picture.
↔ (Swap)	Swap between the main picture and sub picture.
Ⓜ (Position)	Change the sub picture position. <div style="margin-left: 20px;"> lower right → lower left upper right → upper left </div>
Ⓜ (Freeze)	Freeze the sub picture.

When VIDEO-2 is set to component, you cannot select VIDEO-2 for sub picture.

When VIDEO-2 is set to component and if the input source of the main picture is set to VIDEO-2 with component, PIP button is disabled and sub picture cannot be displayed.

Sound setting

MaxxBass

You can enjoy an enhanced bass sound which cannot be played by normal speakers.



OFF	MaxxBass is turned off.
HIGH	MaxxBass effect is high.
LOW	MaxxBass effect is low.

You can also operate this function from the menu.

(MENU) → **(SOUND menu)** → **(MaxxBass)**

"MaxxBass" is a registered trademark of Waves Audio Ltd. in the USA, Japan and other countries.

CINEMA SURROUND

You can enjoy an enhanced sound for wider audience.



OFF	Cancel the function.
ON	Listen to sound with wider audience effect.

You can also operate this function from the menu.

(MENU) → **(SOUND menu)** → **(CINEMA SURROUND)**


EQUALIZER

You can adjust the sound level of each frequencies when selecting USER mode in SOUND MODE.

1 (MENU) → **(SOUND menu)** → **(SOUND MODE)** → **(USER)**

2 (MENU) → **(SOUND menu)** → **(EQUALIZER)**

3 Select and adjust the desired frequencies.

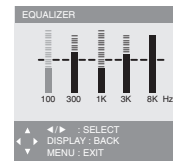

Adjust high frequency will affect higher pitch sound and vice versa. When CINEMA SURROUND set to ON, you cannot adjust EQUALIZER (→ page 8).

Sound setting (continued)

 
BALANCE

You can adjust the volume balance between the left and right speakers.

(MENU) → (SOUND menu) → (BALANCE)

SOUND MODE

You can choose the desired sound setting.



USER	Change the sound setting as you like. Select USER and adjust the frequencies in EQUALIZER (100, 300, 1K, 3K, 8K Hz), → page 11.
MUSIC	Emphasize on music effect.
CINEMA	Emphasize on movie sound.
NEWS	Emphasize on vocal sound.
DRAMA	Emphasize on drama sound.

You can also operate this function from the menu.

(MENU) → (SOUND menu) → (SOUND MODE)

When SOUND MODE is set to other than USER, EQUALIZER function becomes unavailable.

See details for location menus in "Operating the menus" → Page 8.

 
AI VOLUME

You can adjust the volume of all the channels and video inputs to the same level automatically depends on the strength of signal of the sources.

(MENU) → (SOUND menu) → (AI VOLUME) (Choose ON or OFF)

SOUND SYSTEM

You can select an appropriate sound system when abnormal sound occurs even when the picture appears normal.



This function is not available in video mode.

For the sound system in each country or region, see the table below:

Area	Country or Region	System
Asia, Middle East	Bahrain, Kuwait, Oman, Qatar, United Arab Emirates, Yemen, Indonesia, Malaysia, Singapore, Thailand, India, etc.	B/G
	China, Vietnam, etc.	D/K
	Hong Kong, etc.	I
	Islamic Republic of Iran, Lebanon, Saudi Arabia, etc.	B/G
Europe	Philippines, Taiwan, Myanmar, etc.	M
	Russia, Czech Republic, Poland, etc.	D/K
	Germany, Holland, Belgium, etc.	B/G
Oceania	UK, etc.	I
	Australia, New Zealand, etc.	B/G
Africa	Republic of South Africa, etc.	I
	Nigeria, Egypt, Morocco, etc.	B/G

Customized setting

AUTO SIGNAL DETECT

When the DVD input signal is detected, the input mode will automatically change to VIDEO-2 and when the DVD input signal is not detected, the input mode will automatically change to RF previous input mode.

DVD players: Press the "POWER ON" button on the player for signal detection.

VCRs: Press the "POWER ON" button on the device, followed by the "PLAY" button, signal detection and DVD menu display.



Only available in VIDEO-2 mode. ➔ Page 8.

DVD THEATER STATUS

You can enjoy an enhanced picture quality for movie playback in a dark room, like watching a movie in the theater.



OFF	Cancel the function.
ON	Enjoy movie playback with suitable colour temperature, sharp subtitles and improved gradation for black, like in a theater.

When you set DVD THEATER STATUS to ON, AI ECO SENSOR / ECO MODE and WHITE BALANCE adjustment become unavailable.

Only available in VIDEO-2 mode. ➔ Page 8.

VNR

You can reduce the picture noise.




OFF	VNR is turned off.
AUTO	Effect of VNR is automatically controlled.
MIN	Effect of VNR becomes minimum level.
MAX	Effect of VNR becomes maximum level.

If you select MAX, the picture becomes softer even if the original picture is sharp.

Only available in RF, VIDEO-1 and VIDEO-3. ➔ Page 8.

LANGUAGE

 You can choose the desired on screen display language.




Customized setting (continued)

ON TIMER

You can set the TV to turn on automatically from standby mode at a set channel and time.

 1 (MENU) ➔ (FEATURES menu) ➔ (ON TIMER)



2 Choose the PR (channel) that you want to watch when the TV turns on. External input, AV position and any un-preset channel cannot be chosen for PR.

3 Set the ON TIMER to your desired period of time. When the ON TIMER is set to other than 00:00, the ON TIMER is activated. You can set the period of time to a maximum of 12 hours in 15-minute intervals.

 
4 To off the ON TIMER, set ON TIMER to OFF.

Note: If TV is not in standby mode when ON TIMER is reach the setting time, this case is not available.

OFF TIMER

You can set the TV to turn off automatically to standby mode after a set time.

1 (MENU) ➔ (FEATURES menu) ➔ (OFF TIMER) ➔



2 You can set the period of time to a maximum of 120 minutes in 10 minutes intervals.

3 When the remaining elapse time is one minute, "GOOD NIGHT!" appears on the screen.

4 You can display the OFF TIMER screen again to confirm or change the remaining time.

5 To off the OFF TIMER, select OFF or turn off the TV's main power.

BEEP

You can use the BEEP function to alert you during AUTO SIGNAL DETECT, AI ECO SENSOR Detect, Stereo Detect, ON TIMER/OFF TIMER operations and when some buttons on the remote control are pressed.

(MENU) ➔ (FEATURES menu) ➔ (BEEP) (Choose ON or OFF)

CHILD LOCK

You can disable the front control buttons of the TV.

(MENU) ➔ (FEATURES menu) ➔ (CHILD LOCK) (Choose ON or OFF)

VIDEO-2 SETTING

You can set the VIDEO-2 SETTING according to the video signal output from external devices connected to the VIDEO-2 terminal.

(MENU) ➔ (FEATURES menu) ➔ (VIDEO-2 SETTING) (Factory setting is COMPONENT)

VIDEO If a normal video signal (composite video signal) is input.

COMPONENT If a component video signal (Y/Cb/Cr) is input.

You must choose a setting according to the signal that you input to VIDEO-2. (If you input the VIDEO Signal or VCR Signal to VIDEO-2, you must set VIDEO-2 SETTING to VIDEO.)

For connection, ➔ page 4.


TV channel presetting

To register the TV channels automatically (AUTO PROGRAM)

You can register the TV channels automatically.

1 **MENU** ➔ **SET UP menu** ➔ **AUTO PROGRAM**

2

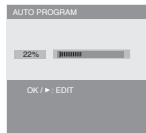

3 to stop or when AUTO PROGRAM finishes.

4 The EDIT menu appears.


To edit the channel list	Proceed to Step 2 of "To edit the channel list" on this page.
If a channel is not registered	Proceed to Step 3 of "To register the TV channels manually" on this page.
To exit the menu	Press the MENU button.

To register the TV channels manually (MANUAL in the EDIT menu)

You can register the TV channels into the TV's channel list manually.

1 **MENU** ➔ **SET UP menu** ➔ **EDIT/MANUAL**

2

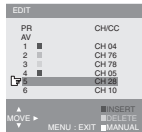

3 Choose the channel which you want to register.

4 (blue) to activate the MANUAL function. (The sound system of the channel appears at the right of the CH/CC number.)

5 to choose an appropriate sound system.
For details, see "SOUND SYSTEM". ➔ Page 12

6 (red) OR (green) to search for the TV channel.

7 Searching stops when a channel is found and displayed.

If the reception is poor	Press the yellow or blue button to fine tune the TV channel.
If noisy sound is heard	Press the ► button to choose an appropriate sound system.

8 to exit.

To edit the channel list (MOVE, DELETE and INSERT in the EDIT menu)

You can edit the TV channel list as you like.

After this operation, other channel's PR number will be changed.

1 Repeat Steps 1 and 2 of "To register the TV channels manually (MANUAL in the EDIT menu)", ➔ see left.

2 Choose the channel which you want to change its PR number, or delete, or register a new channel.

3 **To change the PR number (MOVE)** Press the ► button. Then move it to the new PR number you want to use for the channel by pressing the ▲/▼ button. Finally press the ◀ button.

To delete the channel (DELETE) Press the yellow button.

To add the new channel (INSERT) If you add a new TV channel of NTSC-M system, press the SOUND SYSTEM button to change the sound system to M, then select EDIT/MANUAL in SET UP menu. Press the green button, then press the ► button to choose "CC" or "CH". Enter the CH/CC number for the channel you wish to add. The TV starts to search for the channel. When a TV channel has already been registered in PR99, using the INSERT function deletes that TV channel.

4 to exit.

TV channel presetting (continued)

CH/CC number

When you want to use the INSERT function on page 15, find the CH/CC number corresponding to the channel number of the TV channel from this table.

Channel No.	Country
US	United States, Philippines, etc..
CCIR	Middle East, Southeast Asia, etc..
OIRT	Eastern Europe, Russia, Vietnam, etc..
AUSTRALIA	Australia, etc..

Channel

CH	US	CCIR	OIRT	AUSTRALIA
CH 02	US-2	E2	R1	AU-0
CH 03	US-3	E3		AU-1
CH 04	US-4	E4	R2	AU-2
CH 05	US-5	E5	R6	AU-6
CH 06	US-6	E6	R7	AU-7
CH 07	US-7	E7	R8	AU-8
CH 08	US-8	E8	R9	AU-9
CH 09	US-9	E9		
CH 10	US-10	E10	R10	AU-10
CH 11	US-11	E11	R11	AU-11
CH 12	US-12	E12	R12	
CH 13	US-13			
CH 14	US-14, W+29			
CH 15	US-15, W+30			
CH 16	US-16, W+31			
CH 17	US-17, W+32			
CH 18	US-18, W+33			
CH 19	US-19, W+34			
CH 20	US-20, W+35			
CH 21	US-21, W+36	E21		
CH 22	US-22, W+37	E22		
CH 23	US-23, W+38	E23		
CH 24	US-24, W+39	E24		
CH 25	US-25, W+40	E25		
CH 26	US-26, W+41	E26		
CH 27	US-27, W+42	E27		
CH 28	US-28, W+43	E28		AU-28
CH 29	US-29, W+44	E29		AU-29
CH 30	US-30, W+45	E30		AU-30
CH 31	US-31, W+46	E31		AU-31/AU-32
CH 32	US-32, W+47	E32		AU-33

CH	US	CCIR	OIRT	AUSTRALIA
CH 33	US-33, W+48	E33		AU-34
CH 34	US-34, W+49	E34		AU-35
CH 35	US-35, W+50	E35		AU-36
CH 36	US-36, W+51	E36		AU-37
CH 37	US-37, W+52	E37		AU-38
CH 38	US-38, W+53	E38		AU-39/AU-40
CH 39	US-39, W+54	E39		AU-41
CH 40	US-40, W+55	E40		AU-42
CH 41	US-41, W+56	E41		AU-43
CH 42	US-42, W+57	E42		AU-44
CH 43	US-43, W+58	E43		AU-45
CH 44	US-44, W+59	E44		AU-46
CH 45	US-45, W+60	E45		AU-47/AU-48
CH 46	US-46, W+61	E46		AU-49
CH 47	US-47, W+62	E47		AU-50
CH 48	US-48, W+63	E48		AU-51
CH 49	US-49, W+64	E49		AU-52
CH 50	US-50, W+65	E50		AU-53
CH 51	US-51, W+66	E51		AU-54
CH 52	US-52, W+67	E52		AU-55/AU-56
CH 53	US-53, W+68	E53		AU-57
CH 54	US-54, W+69	E54		AU-58
CH 55	US-55, W+70	E55		AU-59
CH 56	US-56, W+71	E56		AU-60
CH 57	US-57, W+72	E57		AU-61
CH 58	US-58, W+73	E58		AU-62
CH 59	US-59, W+74	E59		AU-63/AU-64
CH 60	US-60, W+75	E60		AU-65
CH 61	US-61, W+76	E61		AU-66
CH 62	US-62, W+77	E62		AU-67
CH 63	US-63, W+78	E63		AU-68
CH 64	US-64, W+79	E64		AU-69
CH 65	US-65, W+80	E65		
CH 66	US-66, W+81	E66		
CH 67	US-67, W+82	E67		
CH 68	US-68, W+83	E68		
CH 69	US-69, W+84	E69		

CC	US	CCIR	OIRT	AUSTRALIA
CC 01		S-1		AU-5
CC 02		S-2		
CC 03		S-3		
CC 04		S-4		
CC 05		S-5		
CC 06		S-6		AU-5A
CC 07		S-7		
CC 08		S-8		
CC 09		S-9		
CC 10		S-10		
CC 11		S-11		
CC 12		S-12		
CC 13		S-13		
CC 14	A	S-14		
CC 15	B	S-15		
CC 16	C	S-16		
CC 17	D	S-17		

CC	US	CCIR	OIRT	AUSTRALIA
CC 18	F	S-18		
CC 19	F	S-19		
CC 20	G	S-20		
CC 21	H	S-21		
CC 22	I	S-22		
CC 23	J	S-23		
CC 24	K	S-24		
CC 25	L	S-25		
CC 26	M	S-26		
CC 27	N	S-27		
CC 28	O	S-28		
CC 29	P	S-29		
CC 30	Q	S-30		
CC 31	R	S-31		
CC 32	S	S-32		
CC 33	T	S-33		
CC 34	U	S-34		
CC 35	V	S-35		
CC 36	W	S-36		
CC 37	W+1	S-37		
CC 38	W+2	S-38		
CC 39	W+3	S-39		
CC 40	W+4	S-40		
CC 41	W+5	S-41		
CC 42	W+6			
CC 43	W+7			
CC 44	W+8			
CC 45	W+9			
CC 46	W+10			
CC 47	W+11			
CC 48	W+12			
CC 49	W+13			
CC 50	W+14			
CC 51	W+15			
CC 52	W+16			
CC 53	W+17			
CC 54	W+18			
CC 55	W+19			
CC 56	W+20			
CC 57	W+21			
CC 58	W+22			
CC 59	W+23			
CC 60	W+24			
CC 61	W+25			
CC 62	W+26			
CC 63	W+27			
CC 64	W+28			
CC 75		X		
CC 76		Y	R3	
CC 77		Z	R4	AU-3
CC 78		Z+1	R5	
CC 79		Z+2		AU-4
CC 95	A-5			
CC 96	A-4			
CC 97	A-3			
CC 98	A-2			
CC 99	A-1			

Troubleshooting

If a problem occurs when you are using the TV, check the below troubleshooting guide before calling for repair.

Problem	Cause / Solution	Page
No picture, no sound	• Deactivate the BLUE BACK function if it is turned on.	10
	• Choose the appropriate sound system. Refer to "SOUND SYSTEM".	12
Snowy picture	• Check the aerial cable and TV connections.	4
Stripes appear on the picture	• Interference caused by devices such as an amplifier, personal computer, or a hair drier. Move it away from your TV.	–
Double-pictures (ghosting) occur	• Interference occurs caused by signal reflecting from mountains or building. Try to adjust the aerial's direction or use another antenna.	–
Poor picture	• Choose the appropriate colour system. Refer to "COLOUR SYSTEM".	9
	• Adjust the COLOUR or BRIGHT setting. Refer to "PICTURE SETTING".	10
White and bright still image look as if it was coloured	• Inevitable phenomenon due to the nature of the picture tube. This is not a malfunction.	–
Top of the image from software products or video tape is distorted	• Due to the condition of the video signal, the image was not properly recorded. This is not a malfunction.	–
Poor sound	• Adjust the sound frequency properly. Refer to "SOUND SYSTEM".	12
Cannot operate the remote control	• The batteries may be exhausted. Replace with new batteries. • Ensure that you are operating the remote control at less than seven meters from the front of your TV.	6
Cannot operate the menus	• Press TV/VIDEO button to return to TV mode and try operating the menus.	–
Cannot operate the front control buttons	• Deactivate the CHILD LOCK function if it is turned on.	14

Problem	Cause / Solution	Page
Colour patches appear at the corner of the screen	• This maybe due to magnetized device such as a speaker placed near to your TV. Move it away from your TV. Alternatively, you can also use the magnetic shielded speaker.	–
Picture is tilted	• This maybe due to the earth magnetism. Refer to "PICTURE TILT" to correct the tilt.	10
Image takes a short period to be displayed	• Image required time to stabilize before display. This is not a malfunction.	–
TV may emit crackling sound	• This is due to a sudden change in temperature and it is not a malfunction. If the crackling sound is too frequent, request your service technician for inspection.	–
Feel a slight electric shock when touching the TV screen	• This is due to the static electricity of the picture tube and it will not harm the human body. This is not a malfunction.	–
AUTO SIGNAL DETECT does not work	• Set the AUTO SIGNAL DETECT function to ON.	13
	• Turn the VCR or DVD Player off and on again.	–
	• Check that the video cable connection on VIDEO-2 is properly connected.	–
Suddenly, the TV input changes to VIDEO-2	• Check whether the AUTO SIGNAL DETECT function is on or off.	13
	• AUTO SIGNAL DETECT function may work when you operate the VCR or DVD player even if you do not make it to playback.	–
AUTO SIGNAL DETECT does not work correctly	• Check the video cable connection.	–
	• Some VCR or DVD player may output the video signal discontinuously. If this happens, AUTO SIGNAL DETECT function cannot work correctly.	–
"PLEASE DISCONNECT VIDEO-1 CABLE!" appears on the screen.	• Please disconnect either S-VIDEO cable or video input cable from video-1 input.	–

Specifications

MODE	AV-21Q317B	AV-21R318	AV-21RXP8	AV-21S357
TV RF systems	B, G, I, D, K, M			
Colour systems	(RF mode)	PAL, SECAM, NTSC3.58 MHz, NTSC4.43 MHz		
	(VIDEO mode)	PAL, SECAM, NTSC3.58 MHz, NTSC4.43 MHz		
Channel and Frequencies	VHF low channel (VL) : 46.25 to 140.25 MHz VHF high channel (VH) : 147.25 to 423.25 MHz UHF channel (U) : 431 to 863.25 MHz *Receives cable in mid band (X to Z, S1 to S10, super band (S11 to S20) and hyper band (S21 to S41)			
Power input	AC 110 to 240 V, 50/60 Hz (operating AC 90 to 260 V, 50/60 Hz)			
Power consumption	MAX : 105 W AVG : 95 W	MAX : 108 W AVG : 88 W	MAX : 108 W AVG : 88 W	MAX : 122 W AVG : 99 W
Screen size (Measured diagonally)	Picture tube : 548.4 mm Visible area : 508.0 mm	Picture tube : 548.8 mm Visible area : 508.0 mm	Picture tube : 548.8 mm Visible area : 508.0 mm	Picture tube : 548.4 mm Visible area : 508.0 mm
Audio output (Rated power output)	(6.5 x 13) cm x 2	(6.5 x 13) cm x 2	(6.5 x 13) cm x 2	(6.5 x 13) cm x 2
Speakers	3W + 3W	7W + 7W	7W + 7W	7W + 7W
External input / output	VIDEO - 1 : S-VIDEO input, VIDEO input, AUDIO L/R input VIDEO - 2 / COMPONENT : VIDEO input, AUDIO L/R input, COMPONENT VIDEO (Y/CB/CR) input VIDEO - 3 : VIDEO input, AUDIO L/R input OUTPUT : VIDEO output, AUDIO L/R output Headphone jack : Stereo mini jack (3.5 mm diameter)			
Dimension (W x H x D)	649 x 487 x 351 mm	649 x 487 x 488 mm	649 x 487 x 488 mm	649 x 487 x 351 mm
Weight	22 kg	23 kg	23 kg	22 kg
Accessories	Remote control unit : RM-C1171 x 1 AA/R6/UM-3 dry cell battery x 2 Matching aerial adapter x 1	Remote control unit : RM-C1171 x 1 AA/R6/UM-3 dry cell battery x 2 Matching aerial adapter x 1	Remote control unit : RM-C1170 x 1 AA/R6/UM-3 dry cell battery x 2 Matching aerial adapter x 1	Remote control unit : RM-C1170 x 1 AA/R6/UM-3 dry cell battery x 2 Matching aerial adapter x 1

Design and specifications subject to change without notice.

Specifications

MODE	AV-29Q317B	AV-29RXP8	AV-29S357
TV RF systems	B, G, I, D, K, M		
Colour systems	(RF mode)	PAL, SECAM, NTSC3.58 MHz, NTSC4.43 MHz	
	(VIDEO mode)	PAL, SECAM, NTSC3.58 MHz, NTSC4.43 MHz	
Channel and Frequencies	VHF low channel (VL) : 46.25 to 140.25 MHz VHF high channel (VH) : 147.25 to 423.25 MHz UHF channel (U) : 431 to 863.25 MHz *Receives cable in mid band (X to Z, S1 to S10, super band (S11 to S20) and hyper band (S21 to S41)		
Power input	AC 110 to 240 V, 50/60 Hz (operating AC 90 to 260 V, 50/60 Hz)		
Power consumption	MAX : 163 W AVG : 132 W	MAX : 152 W AVG : 139 W	MAX : 163 W AVG : 132 W
Screen size (Measured diagonally)	Picture tube : 728.0 mm Visible area : 676.0 mm	Picture tube : 728.9 mm Visible area : 676.0 mm	Picture tube : 728.0 mm Visible area : 676.0 mm
Audio output (Rated power output)	(6.5 x 13) cm x 2	(6.5 x 13) cm x 2	(6.5 x 13) cm x 2
Speakers	10W + 10W	10W + 10W	10W + 10W
External input / output	VIDEO - 1 : S-VIDEO input, VIDEO input, AUDIO L/R input VIDEO - 2 / COMPONENT : VIDEO input, AUDIO L/R input, COMPONENT VIDEO (Y/CB/CR) input VIDEO - 3 : VIDEO input, AUDIO L/R input OUTPUT : VIDEO output, AUDIO L/R output Headphone jack : Stereo mini jack (3.5 mm diameter)		
Dimension (W x H x D)	810 x 616 x 394 mm	810 x 616 x 506.5 mm	810 x 616 x 394 mm
Weight	38 kg	42 kg	41 kg
Accessories	Remote control unit : RM-C1171 x 1 AA/R6/UM-3 dry cell battery x 2 Matching aerial adapter x 1	Remote control unit : RM-C1170 x 1 AA/R6/UM-3 dry cell battery x 2 Matching aerial adapter x 1	Remote control unit : RM-C1170 x 1 AA/R6/UM-3 dry cell battery x 2 Matching aerial adapter x 1

Design and specifications subject to change without notice.

JVC