

Panasonic

Colour Television

TC-1400Z

TC-1401ZR

Operating Instructions

Please read these instructions completely before operating this set.

 
TQB4G0007

Dear Panasonic Customer


Welcome to the Panasonic family of customers.
We hope that you will have many years of enjoyment from your new colour television set.

Warnings and Cautions


Power Source and TV System

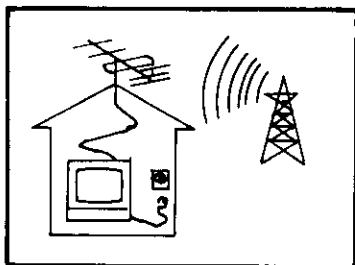

 
This TV set can be operated on AC 230V, 50 Hz. It is designed exclusively for broadcast systems PAL B & G.

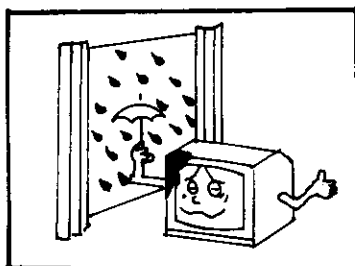

 To prevent damage which may result in fire or electrical shock, do not expose the TV set to rain or excessive moisture.

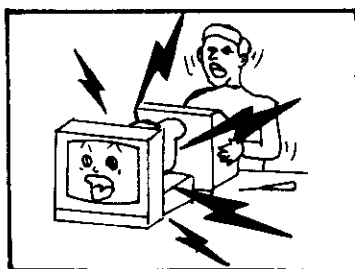


 High Voltage:
Do not remove the rear cover, as live parts are accessible when it is removed.

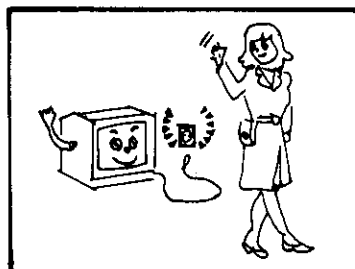


Remove the plug from the wall outlet (Power point) when the TV set is not used for a prolonged period of time.

 
Cabinet and Picture Tube Care

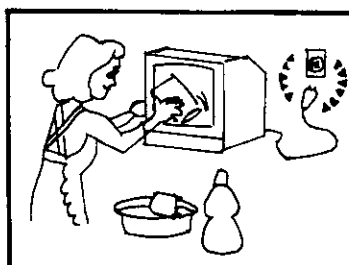

 The cabinet and picture tube can be kept in good condition by simply wiping with a clean, soft cloth moistened with mild detergent and water. Do not use solutions containing benzol, petroleum or a chemical cloth. For safety, remove plug from the wall outlet.

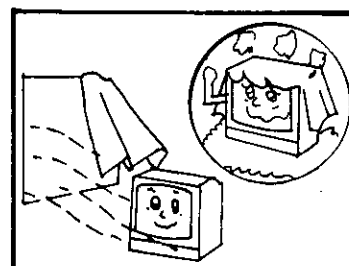

 Adequate ventilation is essential to prevent failure of electrical components.

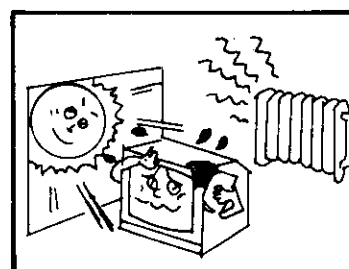


Avoid exposing the TV set to direct sunlight and other sources of heat.

Contents

Location of controls	2
Tuning Procedure	3-4
General Operation	5
Remote Control Operation (TC-1401ZR only)	6
Battery Installation and Replacement for Remote Control Transmitter (TC-1401ZR only)	7
Troubleshooting	8
Specifications	9








Location of Controls

 Note: Operating instructions for the Numbers from (1) to (18) on this page are explained on the page 5 and 6.

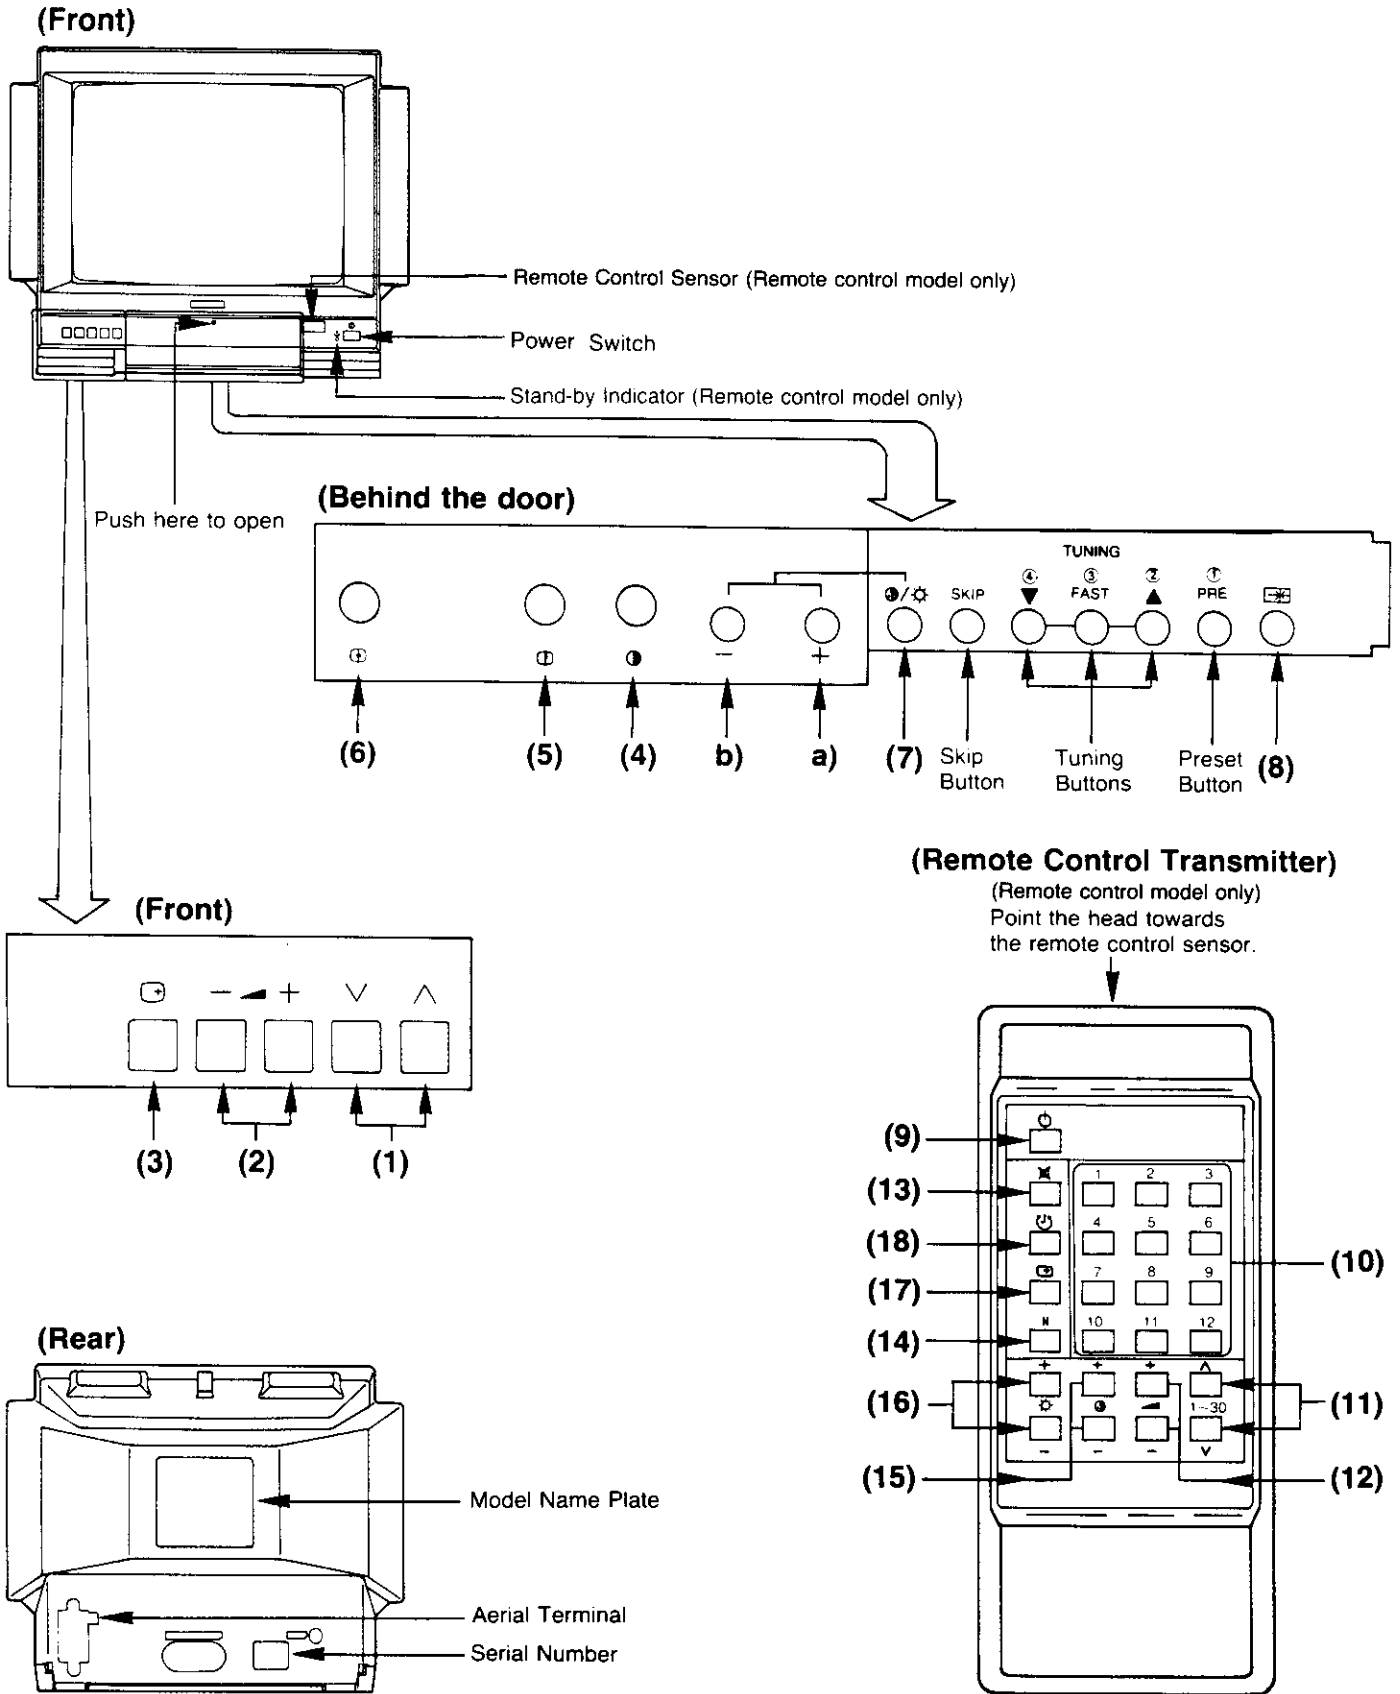

Tuning Procedure

       Operation Steps

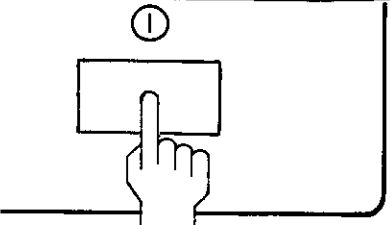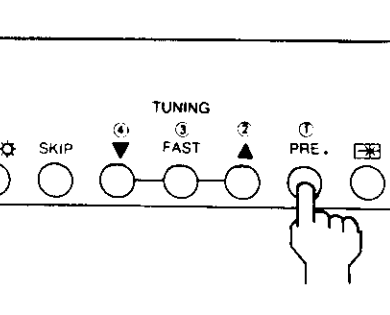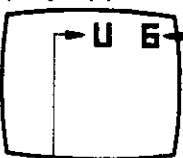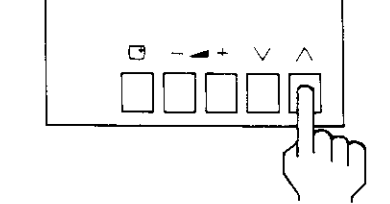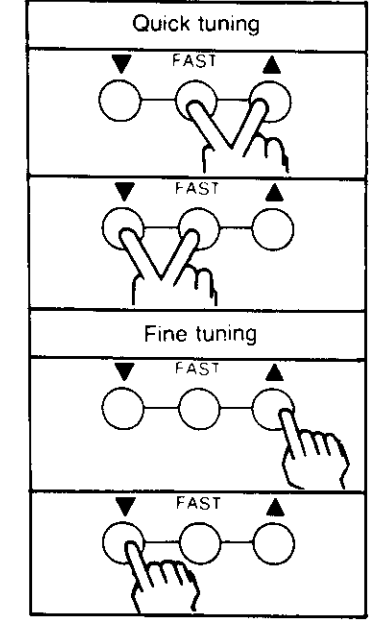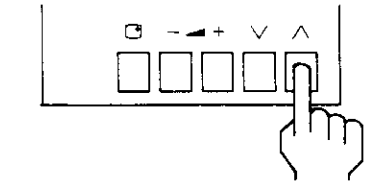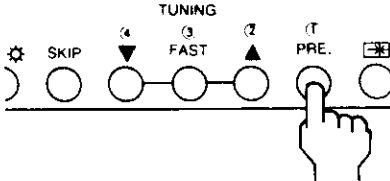1		<p>Push the Power Switch on the TV set to turn it on.</p>
2		<p>Push the "PRE." (PRESET) Button until the on-screen display appears as shown below.</p>  <p>Programme number (1 ~ 30)</p> <p>Band Indicator (V_L : VHF Low Band, V_H : VHF High Band, U : UHF Band)</p>
3		<p>Push either the Programme Number Up "\wedge" or Down "∇" Button to select the desired programme number on which you want to tune the TV Station of your choice.</p>
4		<p>Quick Tuning - Fast Selection Push and hold either the Tuning Up "\blacktriangle" / Down "\blacktriangledown" Button together with the "FAST" Button until the picture of the desired station appears on the screen. The band display can be changed from V_L - V_H - U or vice versa in similar manner.</p> <p>Fine Tuning Push either the Tuning Up "\blacktriangle" or Down "\blacktriangledown" Button until the picture and sound quality are at their best. When the tuning button is released, this tuning position is automatically memorized.</p>
5		<p>Repeat steps 3 and 4 to tune all the available TV stations on the remaining programme numbers. (Ensure that a new programme number is set before tuning each station).</p>
6		<p>After all stations are tuned, push the "PRE." (PRESET) Button to return the TV set to the normal operation mode.</p>

 
Tuning Procedure

Programme Number Skip Function

This function makes it possible to skip the programme numbers on which no TV stations are tuned. This function is only effective when the Programme Number Up “^” or Down “v” Button is pushed (either on the TV set or the Remote Control).

How to set

1. Select a programme number you want to skip.
2. Push the “PRE.” (PRESET) Button until the on-screen display appears.
3. Push the “SKIP” Button until the programme number and the “SKIP” indication appear.

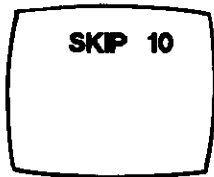

4. Push the “PRE.” (PRESET) Button again.

How to cancel

1. Push and hold the “PRE.” (PRESET) Button until the on-screen display appears.
2. Select the desired programme number with the Programme Number Up “^” or Down “v” Button.
3. Push and hold the “SKIP” Button until the “SKIP” indication disappears.
4. Push the “PRE.” (PRESET) Button again.

General Operation

(Refer to diagram on page 2.)

(1) Programme Number Up and Down Buttons

Push the Programme Number Up “^” Button to select the higher programme numbers.
Push the Programme Number Down “v” Button to select the lower programme numbers.

(2) Volume Up “+” and Down “-” Buttons

Push the Volume Up “+” Button to increase the sound level.
Push the Volume Down “-” Button to decrease the sound level.

(3) Recall Button

Push the Recall Button to activate the on-screen display.
The current Programme Number will be displayed.

(4) Contrast Control

 
Adjust for proper contrast level.

(5) Sharpness Control

Adjust for sharpness of the picture.

(6) Vertical-Hold Control

Adjust this control if the picture rolls either up or down.

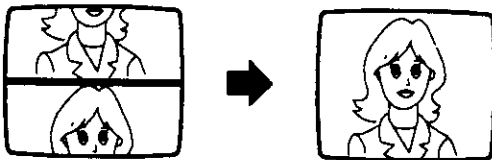


(7) Colour / Brightness Selection Button

Push the Colour/Brightness Button. The “CLR” or “BRT” indication will appear on the screen. Push either the Up “+” or the Down “-” Button to change the level of the selected function as shown below.

Colour function

 Brightness function

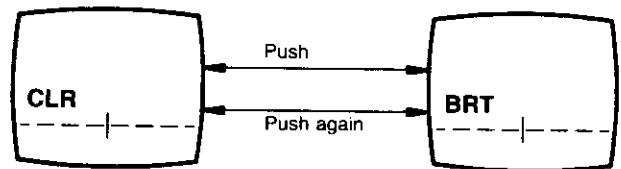


- a) Push the “+” Button to increase the level of selected function level.
- b) Push the “-” Button to decrease the level of selected function level.

(8) AFC Button

Under normal reception conditions, the AFC Button is not used. However, in areas of poor reception or constant interference, a slight adjustment of the tuning may improve the picture and sound quality.

How to cancel the AFC

 1. Push the “PRE.” (PRESET) Button until the on-screen display appears.
2. Push either the Tuning Up “▲” or Down “▼” Button for slight adjustment.
3. Push the “AFC” Button. The “■” symbol appears at the left side of the programme number on the screen.

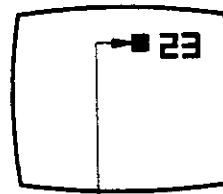

AFC OFF symbol appears

4. Push the “PRE.” (PRESET) Button again.

Remote Control Operation (Remote control model only)

(Refer to diagram on page 2.)

The Remote control can only be used when the "Power" Switch on TV set is in the ON position.

(9) Power (Stand-by) Button

Push this button to turn the TV set off.
(The Stand-by Indicator will light up.)
Push it again to turn the TV set on.

Note:

Do not leave the TV set in the stand-by condition for a long period of time.
It is better to switch it off when you are away for an extended period of time.

(10) Direct Programme Selection Buttons

Push one of the 12 Programme Selection Buttons, to select one of the programme numbers 1 ~ 12 directly.
The programme numbers 13 ~ 30 can be selected with the Programme Number Up "▲" or Down "▼" Button.

(11) Programme Number Up and Down Buttons

Push the Programme Number Up "▲" Button to select the higher programmes.
Push the Programme Number Down "▼" Button to select the lower programmes.

(12) Volume Up "+" and Down "-" Buttons

Push the Volume Up "+" Button to increase the sound level.
Push the Volume Down "-" Button to decrease the sound level.

(13) Sound Mute Button

Push this button once to mute the sound.
The on-screen display of the previous sound level will appear in red.
Push the button once again or push the Volume "Up" or "Down" Button to restore the previous sound level.

(14) Normalization Button

When this button is pushed, the colour and brightness are automatically reset to the factory-preset levels.

(15) Colour Up and Down Buttons

Push the Colour Up "+" Button to increase the colour (saturation) level.
Push the Colour Down "-" Button to decrease the colour (saturation) level.

(16) Brightness Up and Down Buttons

Push the Brightness Up "+" Button to increase the brightness level.
Push the Brightness Down "-" Button to decrease the brightness level.

(17) Recall Button

Push the Recall Button to activate the on-screen display.
The current Programme Number will be displayed.

(18) Off-Timer Button

The TV set can be preset to switch off after a fixed period. Pushing the Off Timer button will set the TV for 30 minutes, push again to set 60 minutes and again for 90 minutes.

Pushing the button once more will return the Off Timer to zero.



When a time for switch off has been set, the pre-set time will be displayed on the screen in the bottom right hand corner until the preset time expires or is cancelled.

Off Timer can be cancelled in the following ways:

1. Set the Off Timer condition to "00" using the Off Timer button.

Note:

 
This only cancels the Off Timer command but does not switch off the TV set.

2. Turning the TV set off, using the "Power" button on the Remote Control or the "Power" switch on the TV set.

Battery Installation and Replacement for Remote Control Transmitter (Remote control model only)


Battery Installation

Batteries: Use two "R6" size dry cells.

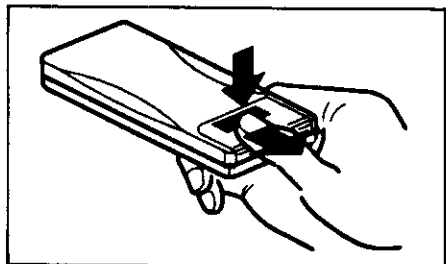


1. Open the cover.

 (Press down and slide the cover out.)

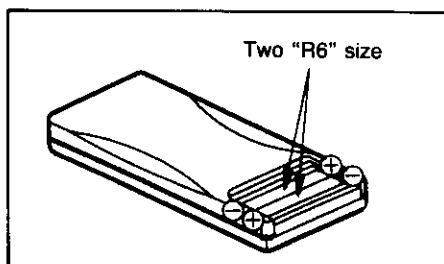

2. Replace the batteries.

 (Insert the batteries with the correct polarity as indicated by the (+) and (-) symbols.)



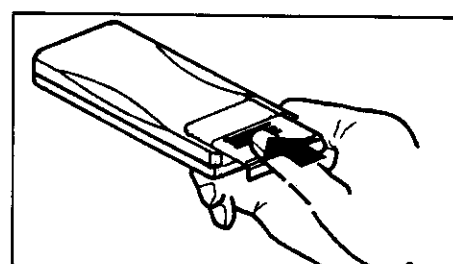


3. Replace the cover.

   (A snap-lock holds the cover in place.)


 




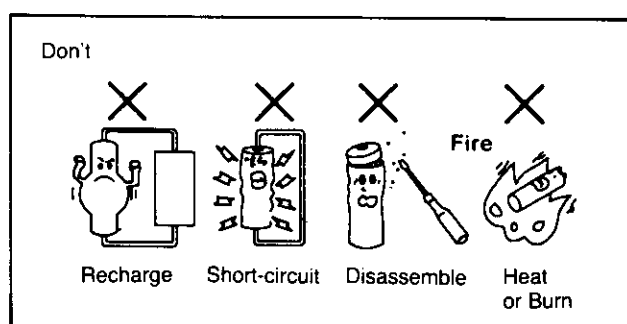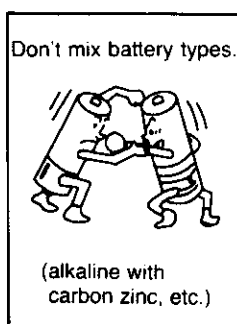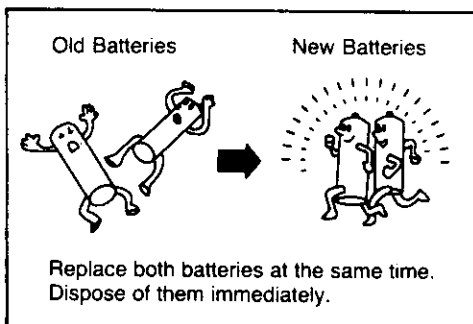



 





 

Battery precautions

Incorrect use of batteries can cause electrolyte leakage which will corrode the remote control transmitter or cause the batteries to burst. The following precautions must be carefully observed.



Troubleshooting

Before you call for service, determine the symptoms and make a few simple checks as shown below.

Symptoms		Checks
Picture	Sound	
 Snowy Picture	 Noisy Sound	Aerial Location and / or Connection
 Multiple Image	 Normal Sound	Aerial Direction and Location
 Interference	 Noisy Sound	Electrical Appliances Cars / Motorcycles Fluorescent Lamps
 Normal Picture	 No Sound	Volume (Check whether the mute function has been activated on the Remote Control.) Speakers select Switch (Applicable for TV equipped with Speakers select Switch)
 No Picture	 No Sound	Not plugged into AC outlet Not switched on Contrast and Brightness / Volume setting (Check by pushing the Power (Stand-by) Button on the Remote Control)
 Rolling Picture	 Normal Sound	Adjust the V-Hold control (Applicable for TV equipped with Vertical-Hold control)
 No Colour	 Normal Sound	Colour Control
   No Colour Rolling Picture H-Line	 Noisy Sound	System Switch.(or Switches) (Applicable for TV equipped with System Switch)

Specifications

Power Source :	AC 230 V, 50 Hz
Power Consumption :	65 W Stand by 12 W (Remote control model only)
Receiving Systems :	PAL System B & G
Receiving Channels :	VHF 1 - 11 UHF 21 - 69
Picture Tube :	36 cm (14 inches) measured diagonally, 90°deflection
Audio Output :	3.0 W (Max.)
Dimensions (W x D x H) :	424 x 372 x 348 mm
Mass (Weight) :	10.5 kg (Net)