 
 


Panasonic

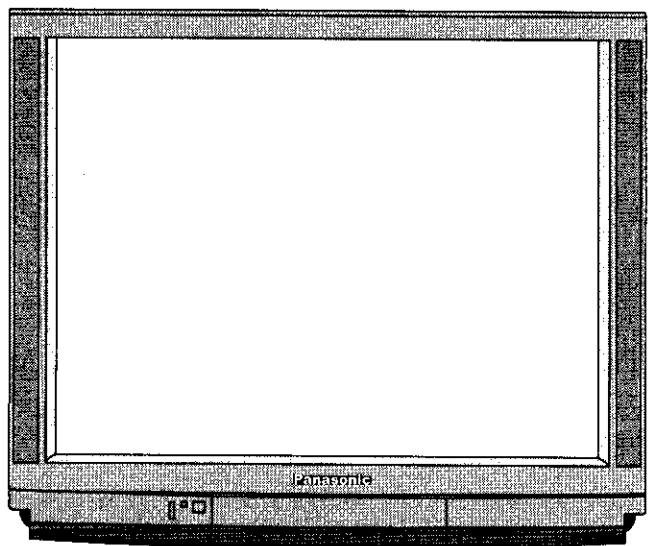

**Stereo Colour Television
With Teletext
TX-80V95Z**

**Stereo Colour Television
TC-80V95A**

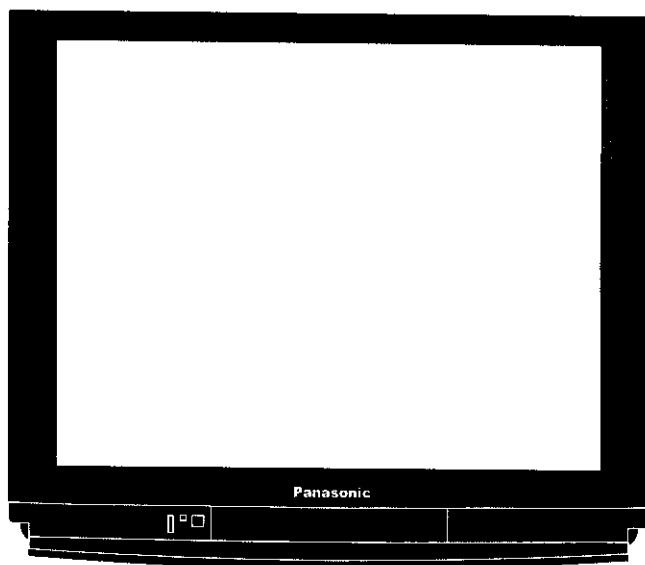

Operating Instructions

Please read these operating instructions completely before operating this set and retain the booklet for future reference.

TQB4A0148

Dear Panasonic Customer,

Welcome to the Panasonic family. We hope that you will have many years of enjoyment from your new Colour Television.

Please retain your proof of purchase along with these operating instructions. Space has been made available on page 5 of this instruction book for recording the Serial Number. The Serial Number can be found on the back cover of the set and on the packing carton.

 
Important Information

Programme Location Numbers

Throughout this booklet "Programme Location Numbers" are referred to. *These are memory locations into which you can tune television broadcast stations.* Any television station can be tuned into any Programme Location Number.

Picture Quality

All televisions are affected by Magnetic Interference.

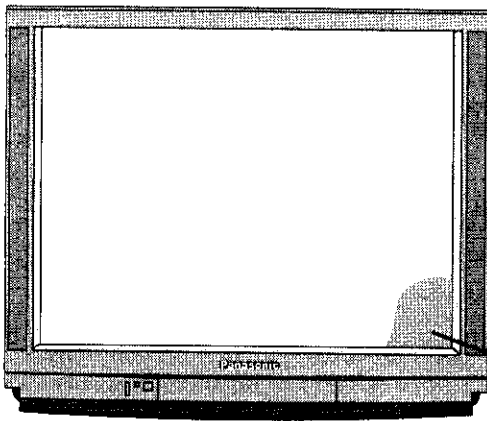

Magnetic interference may come from such things as unshielded motors, moving the TV while it is switched ON, turning off a vacuum cleaner too close to the TV, lightning strikes nearby or many other things.

The interference shows up as *coloured patches* which appear while the TV is switched ON.

 
A typical result may look like the picture shown.

- Your Panasonic Television is designed to overcome this with the inclusion of a demagnetising (degaussing) function.
- To activate this feature, simply switch your Television OFF with the Power On/Off Switch (not with the remote control) for 30 minutes and then switch it back ON.
- This will ensure that you enjoy the picture clarity as it was meant to be.

Getting Started


Connect the Aerial

The RF (Aerial) Input impedance of this television is 75Ω . If your aerial lead is 300Ω ribbon (two wires separated by a flat plastic sheet) you will require a $300\Omega/75\Omega$ Balun in order to connect your aerial to the television.

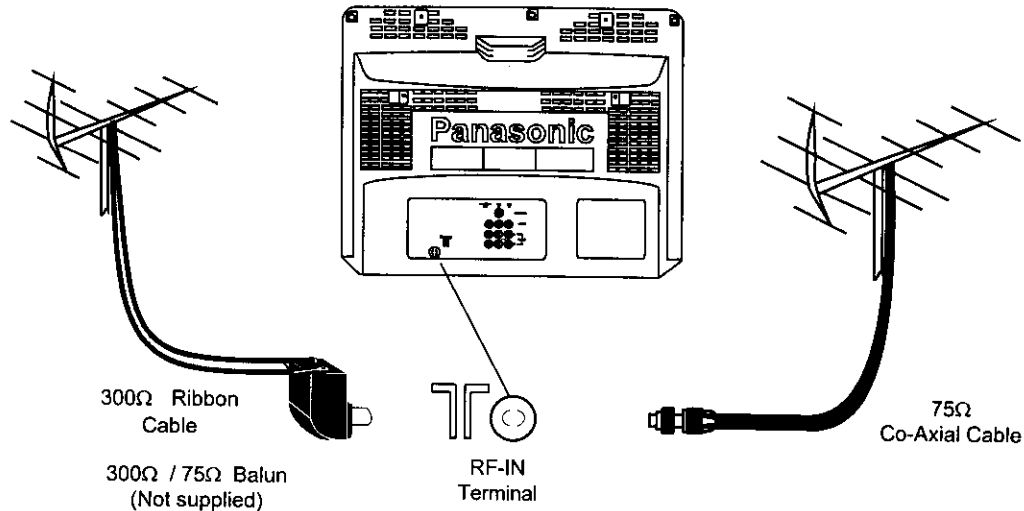

For your safety any external aerial should be installed by a reputable qualified installer and should comply with Australian Standard AS1417.1 or International Standard EIS597-1.

 Connect the Power Plug

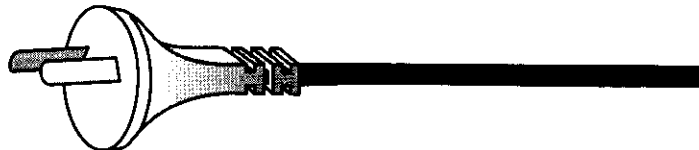


The TC-80V95A is designed for the Australian Standard Mains Voltage of 240V 50Hz.
The TX-80V95Z is designed for the New Zealand Standard Mains Voltage of 230V 50Hz.

NOTE:

If the television is not going to be used for an extended period, remove the power plug from the wall outlet.

 Turn on the Television

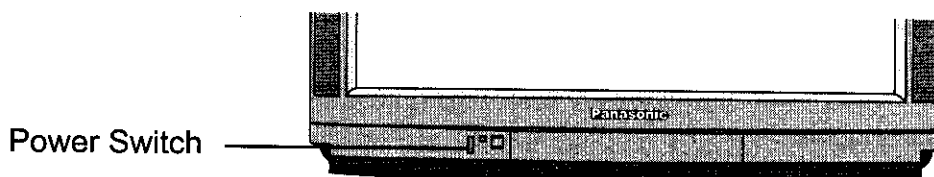

Push the Power Switch to turn the television ON. Sit back and enjoy your new Panasonic television.

Getting Started

Battery Installation and Replacement

 
Open the Battery Cover

TC-85V95A

Put your thumbnail under the battery cover (at the small recess) and lift. The cover will come away from the remote control.

TX-85V95Z

Place your thumb on the battery cover, apply slight downward pressure and slide back. The cover will come away from the remote control.

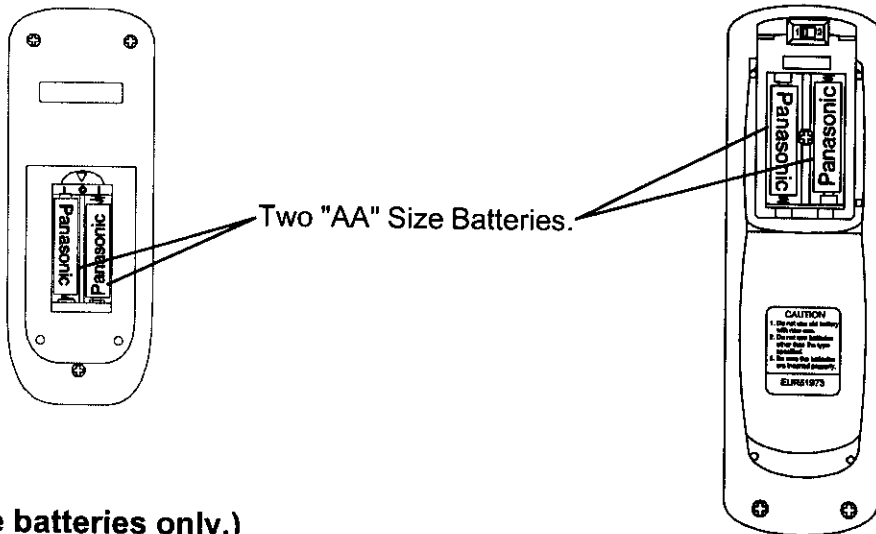

(Use "AA" size batteries only.)

Insert the batteries according to the corresponding "+" and "-" symbols on both the batteries and inside the Battery compartment. Replace the Rear Cover.

Battery Precautions

Do Not use rechargeable batteries. Differences in size and performance may cause incorrect operation.

Do Not mix battery types (Alkaline with zinc-carbon etc.)

Do Not mix old and new batteries. Replace both batteries at the same time.

Do Not attempt to recharge batteries.

Do Not short circuit batteries.

Do Not disassemble batteries.

Do Not heat or burn batteries.

 
VCR Mode Selection Switch (TX-80V95Z only)

The remote controls have been designed to work with a selected group of Panasonic and National video recorders. It may not work with some older model VCRs.

With the majority of compatible Panasonic or National VCRs the VCR Mode Selection Switch (on the remote control for the TX-80V95Z only) should be set to "1". If VCR control cannot be carried out try setting this switch to position "2". This switch is located under the battery cover.

To open the battery cover, apply a slight downward pressure and slide the cover back. This allows the cover to be removed.

VCR Mode Selection Switch

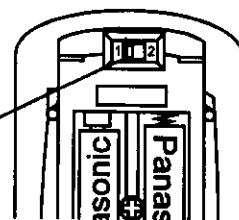

Contents

| | |
|---|----------------|
| Control Panel Television Operation | 6 ~ 7 |
| Remote Control Television Buttons | 8 ~ 12 |
| VCR Operation | 13 |
| Teletext Operation (TX-80V95Z only) | 14 ~ 15 |
| Tuning Procedure | 16 ~ 19 |
| Automatic Search | 16 |
| Manual Search | 17 |
| Tuning the Television to a VCR | 17 |
| Fine Tuning using AFC (Automatic Frequency Control) | 18 |
| Skip | 19 |
| Connecting Equipment | 20 ~ 21 |
| Connecting Equipment to the TV Front Terminals | 20 |
| Front Panel Connections | 20 |
| Connecting Equipment to the TV Rear Terminals | 20 ~ 21 |
| Monitor Out | 20 |
| Rear Terminals | 21 |
| Connecting a Standard VCR to the AV Input | 21 |
| Connecting S-Video Equipment to the AV Input | 21 |
| Customer Information | 22 ~ 23 |
| Warnings and Cautions | 22 |
| Troubleshooting | 22 |
| Specifications | 23 |

Customer's Record



The serial number of this product can be found on its rear cover and on the carton. It is recommended that you note the serial number and other details in the space provided and retain this booklet in a safe place as a permanent record of your purchase to aid in identification in the event of theft or loss.




| | |
|----------------|------------|
| Model No. | _____ |
| Serial No. | PA - _____ |
| Purchase Date | _____ |
| Purchased From | _____ |

   Television Control Panel Buttons

 
 
 

 

 
CONTROL PANEL

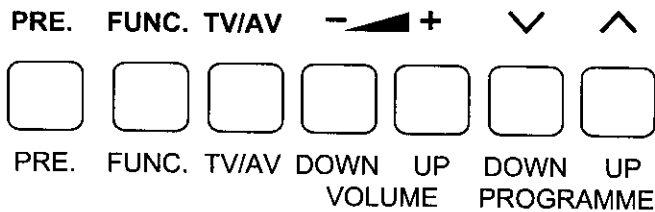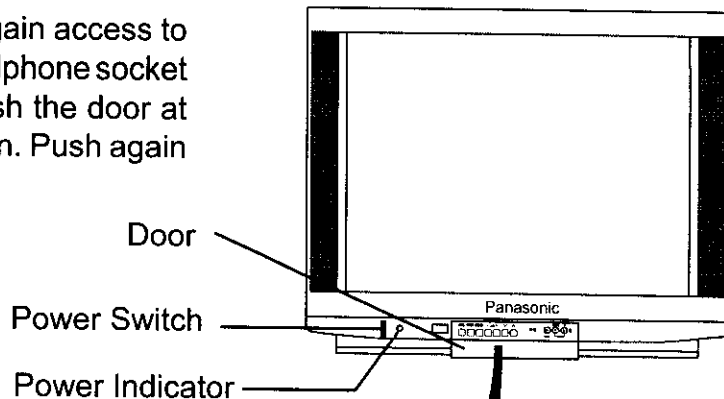Open the control panel door to gain access to the Television Controls, the headphone socket and the front AV Terminals. Push the door at the point marked "PUSH" to open. Push again to close.

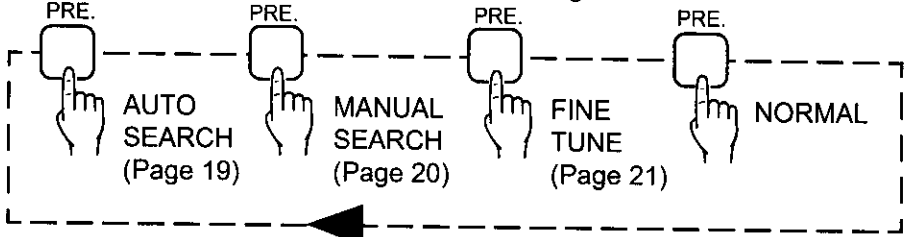


| BUTTON | WHAT IT DOES |
|---|--|
|  | <p>POWER This button is used to turn the television on and off. The Indicator light (red) will be on whenever the television is ON or in Stand-By. The light will go out when the television is turned OFF.</p> |
| <p>PRE.</p>  | <p>PRE. PRE. stands for Preset. This button is used for tuning.</p>  |


Television Control Panel Buttons
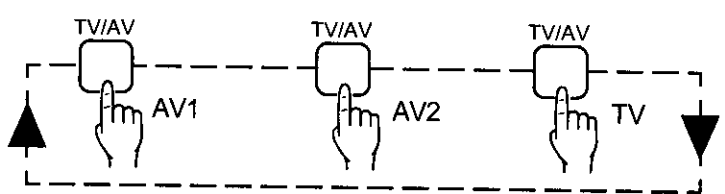
| BUTTON | WHAT IT DOES |
|--|--|
| <p>FUNC.</p>  | <p>FUNC. FUNC. stands for Function. Pressing this button allows you to make adjustments to the various functions of the television. Each time the button is pressed the next function is selected. Each function can be adjusted by using the Volume Up (+) or the Volume Down (-) Buttons. The functions are displayed in the following sequence:-</p> <p>COLOUR Increase or decrease the colour level. NTSC-TINT Increase or decrease the colour hue. (Only operates with an NTSC signal). BRIGHT Increase or decrease the brightness level. CONTRAST Increase or decrease the contrast level. SHARPNESS Increase or decrease the picture sharpness. BASS Increase or decrease the sound bass level. TREBLE Increase or decrease the sound treble level. BALANCE Adjust the sound level balance between the left and right speakers. COLOUR SYS Switches between the following colour system options:- AUTO, PAL , NTSC 4.43, (RF only) or AUTO, PAL , NTSC 4.43, NTSC 3.58 (AV only).</p> <p>The television Colour System is normally set to the AUTO mode. If the AV picture is from an NTSC tape choose the Colour-Sys setting which gives the best picture.</p> |
| <p>TV/AV</p>  | <p>TV/AV This button is used to select the normal broadcast television stations or one of the AV (Audio/Video) inputs.</p>  |
|  | <p>VOLUME DOWN This button is used to reduce the volume output level from the television. The volume level is indicated on the screen as a green bar and as a number (0 ~ 63).</p> |
|  | <p>VOLUME UP This button is used to increase the volume output level from the television.</p> |
|  | <p>PROGRAMME NUMBER DOWN Pressing this button selects the next lower Programme Number in sequence. Programme Numbers which have been "Skipped" (See page 19) will be bypassed when this button is used.</p> |
|  | <p>PROGRAMME NUMBER UP Pressing this button selects the next higher Programme Number in sequence. Programme Numbers which have been "Skipped" (See page 19) will be bypassed when this button is used.</p> |

 Remote Control Buttons

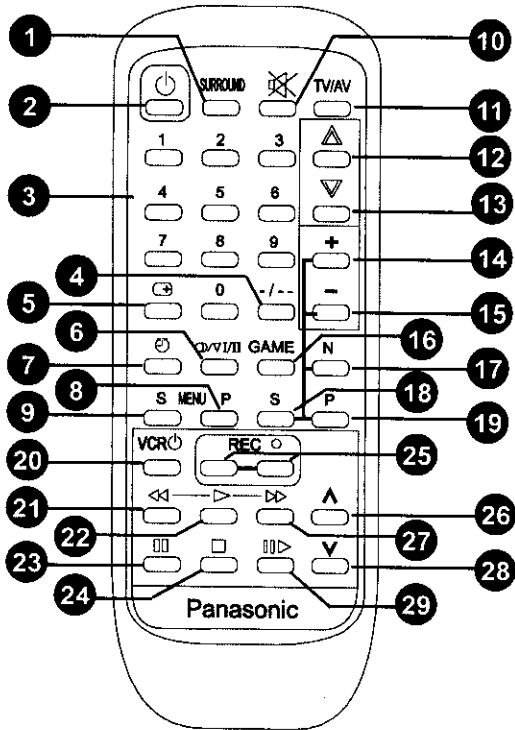

EUR644660
Remote Control for the
TC-80V95A

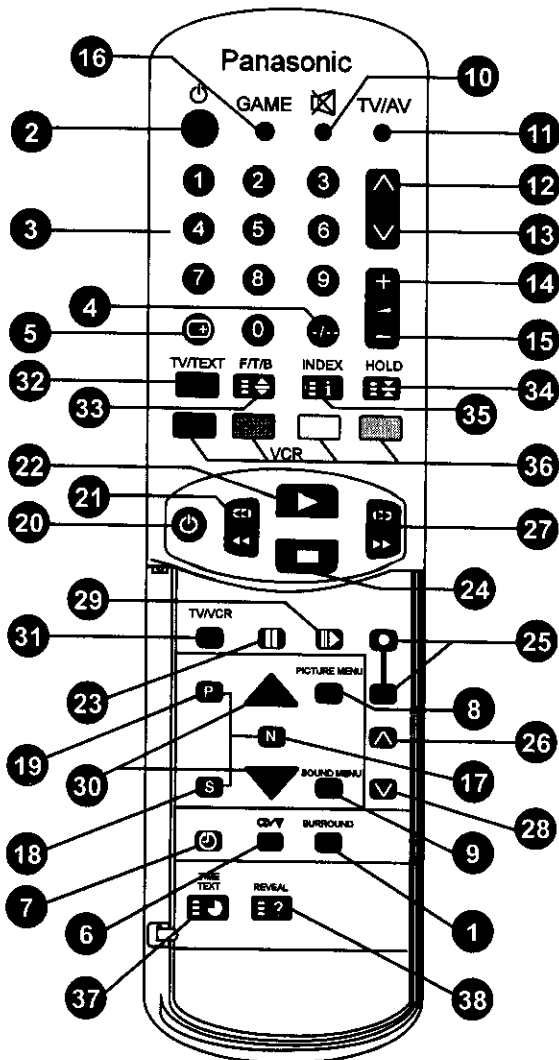 

EUR51973
Remote Control for the
TC-80V95Z
Refer to page 14 for Tetetext
Buttons

Remote Control Buttons


| Number | Description | Page |
|--------|--------------------------------------|------|
| 1 | Surround | 10 |
| 2 | Standby | 10 |
| 3 | Direct Access Programme Numbers | 10 |
| 4 | Two Digit Programme Number Selection | 10 |
| 5 | Recall | 10 |
| 6 | Stereo / Mono / Bilingual | 10 |
| 7 | Off-Timer | 11 |
| 8 | Picture Menu | 11 |
| 9 | Sound Menu | 11 |
| 10 | Sound Mute | 11 |
| 11 | TV/AV | 11 |
| 12 | Programme Number Up | 11 |
| 13 | Programme Number Down | 12 |
| 14 | Volume Up | 12 |
| 15 | Volume Down | 12 |
| 16 | Game | 12 |
| 17 | Normalisation | 12 |
| 18 | Sound Option | 12 |
| 19 | Picture Option | 12 |
| 20 | VCR Standby | 13 |
| 21 | Rewind / Review | 13 |
| 22 | Play | 13 |
| 23 | Pause | 13 |
| 24 | Stop | 13 |
| 25 | Record | 13 |
| 26 | VCR Programme Number Up | 13 |
| 27 | Fast Forward / Cue | 13 |
| 28 | VCR Programme Number Down | 13 |
| 29 | Still Advance | 13 |

 TX-80V95Z Only





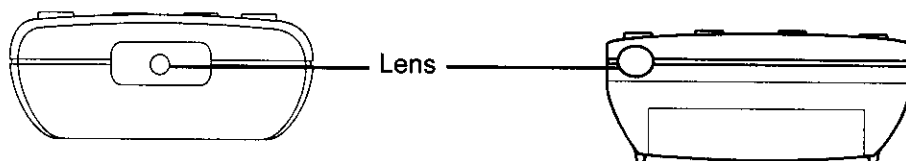

| | | |
|----|-------------------------|----|
| 30 | Level Up & Down Buttons | 12 |
| 31 | TV / VCR | 13 |
| 32 | TV / TEXT | 14 |
| 33 | F / T / B | 14 |
| 34 | HOLD | 14 |
| 35 | INDEX | 14 |
| 36 | Colour Coded Buttons | 14 |
| 37 | TIME TEXT | 14 |
| 38 | REVEAL | 14 |

Caring for the Remote Control













The lens of the Remote Control should be kept clean and free of dust and grease. Use a soft cloth, water and a mild detergent to keep the lens clean.























Remote Control Television Operation

| BUTTON | WHAT IT DOES |
|---|--|
|  | <p>SURROUND SOUND Surround Sound is designed to recreate the spatial effect of a movie theatre or concert hall. It brings an added depth to the sound from your television. During Stereo broadcasts, pressing this button switches between "STEREO SURROUND" and "SURROUND OFF".</p> |
|  | <p>STAND-BY The remote control button is used to turn the television into Stand-by mode. When the television is in Stand-By it is possible to turn it back on by pressing this remote control Power Button, the Programme Number UP Button, the Programme Number DOWN Button or any of the direct Programme Number Buttons.</p> |
|  | <p>DIRECT PROGRAMME NUMBER SELECTION Single Digit Programme Numbers (0 to 9) can be accessed directly by pressing the corresponding number on the Remote Control Transmitter.</p> |
|  | <p>TWO DIGIT PROGRAMME NUMBER SELECTION To directly access Programme Numbers 10 to 99, press the "- / - -" Button followed by the two digits required. For example, to select Programme Number 12, press the "- / - -" Button followed by the "1" Button and then the "2" Button.</p> |
|  | <p>RECALL This button operates in three stages. Stage 1 - Pressing this button will display all current active functions. The functions which can be displayed include AV Number, Programme Number, Colour System, Sound Menu, Picture Menu, Surround Mode, Stereo or Mono and Off-Timer setting. After about 2 seconds it automatically switches to stage 2. Stage 2 - Pressing the button again displays the Programme Number or the AV Number. Stage 3 - Pressing for the third time cancels the recall function.</p> |
|  | <p>STEREO / MONO Normally the television will detect whether the broadcast signal is Mono or Stereo and will set the mode accordingly. If the Stereo signal is weak or the receiving conditions are not optimum, it is recommended that the Mono mode be manually selected. Pushing the button changes the mode from Stereo to Mono and back again.</p> <p>* BILINGUAL This system allows two languages to be transmitted on one signal. Switching between the Main (I) and Sub (II) positions selects the desired language.</p> <p>* Note: Bilingual sound is not currently available in Australia or New Zealand.</p> |












Remote Control Television Operation

| BUTTON | WHAT IT DOES |
|---|--|
|   | <p>OFF-TIMER Pressing the Off-Timer allows the television to be preset to turn off after a period of time. Each time the button is pressed the timer setting will change. The settings are 30, 60, 90, 0 and AUTO.</p> <p>The numbers represent the time, in minutes, before the TV turns off.</p> <p>Setting the Off-Timer to AUTO will cause the television to turn off (to Stand-by) five minutes after the television broadcast station you are tuned to stops transmitting.</p> <p>Setting the OFF-TIMER to 0 will cancel the timer operation.</p> |
| <p>MENU P</p>   | <p>PICTURE MENU The Picture Menu Button allows you to select one of three different picture modes (Standard, Dynamic, Soft).</p> <p>Dynamic: Used for viewing in brighter environments (daytime viewing). Higher levels of contrast and brightness setting are selected.</p> <p>Standard: Used for normal viewing conditions (evening lighting). The contrast and brightness setting are set to standard.</p> <p>Soft: Used for viewing conditions in a darkened room. The contrast and brightness levels are reduced.</p> |
| <p>S MENU</p>   | <p>SOUND MENU The Sound Menu Button allows you to choose between two different sound modes (Music, Speech).</p> <p>Music: Used where music is more common than speech such as musicals, video clips etc.</p> <p>Speech: Used where speech is more common than music such as talk shows, news broadcasts etc.</p> |
|   | <p>SOUND MUTE Pressing this button reduces the sound from the television to nil. Pressing the button again returns the sound to the original setting. Pressing either Volume Up (+) or Down (-) will also restore the volume level setting.</p> |
| <p>TV/AV</p>   | <p>TV / AV Pressing the TV/AV Button will cycle between the TV, AV1, AV2 and back to TV.</p> |
|   | <p>PROGRAMME NUMBER UP Pressing this button selects the next higher Programme Number in sequence. Programme Numbers which have been "Skipped" (See page 19) will be bypassed when this button is used.</p> |

Remote Control Television Operation

| BUTTON | WHAT IT DOES |
|---|--|
|   | <p>PROGRAMME NUMBER DOWN Pressing this button selects the next lower Programme Number in sequence. Programme Numbers which have been "Skipped" (See page 19) will be bypassed when this button is used.</p> |
|   | <p>VOLUME UP This button is used to increase the volume output level from the television. The volume level is indicated on the screen as a green bar and as a number (0 ~ 63).</p> |
|   | <p>VOLUME DOWN This button is used to decrease the volume output level from the television.</p> |
| <p>GAME</p>   | <p>GAME This button is used to switch between the television and AV2. The picture options can be individually set for AV2 when in the Game mode.</p> |
| <p>N</p>   | <p>NORMALISATION The Normalisation Button is used to reset the television to factory preset levels for Colour, Sharpness, Contrast, Brightness, Treble, Bass and Balance. The button will only operate if the relevant menu is displayed on the screen.</p> |
| <p>S</p>   | <p>S Pressing this button allows you to make adjustments to the various sound functions of the television. Each time the button is pressed the next function is selected. Each function can be adjusted.</p> |
| <p>S</p>   | <p>TC-80V95A Use the Volume Up (+) or Down (-) Buttons. TX-80V95Z Use the Level Up (▲) or Down (▼) Buttons. The functions are displayed in the following sequence:- BASS Increase or decrease the sound bass level. TREBLE Increase or decrease the sound treble level. BALANCE Adjust the sound level balance between the left and right speakers.</p> |
| <p>P</p>   | <p>P Pressing this button allows you to make adjustments to the various picture functions of the television. Each time the button is pressed the next function is selected. Each function can be adjusted.</p> |
| <p>P</p>   | <p>TC-80V95A Use the Volume Up (+) or Down (-) Buttons. TX-80V95Z Use the Level Up (▲) or Down (▼) Buttons. The functions are displayed in the following sequence:- COLOUR Increase or decrease the colour level. NTSC-TINT Increase or decrease the hue. (Only operates in the AV Mode with an NTSC Signal). BRIGHT Increase or decrease the brightness level. CONTRAST Increase or decrease the contrast level. SHARPNESS Increase or decrease the picture sharpness.</p> |
|   | <p>LEVEL UP & DOWN (TX-80V95Z only) This button is used with the Picture Function and Sound Function Buttons to change the level of the function selected.</p> |

Remote Control VCR Operation

| BUTTON | WHAT IT DOES |
|---|---|
|  | <p>TV / VCR (TX-80V95Z only) Used to switch the output of the VCR between the video tape / VCR Programme Number and the aerial input.</p> |
|  | <p>VCR POWER (STAND-BY) This button is used to turn the VCR Off. VCRs are usually left in Stand-By in order for the Dew detector to work correctly.</p> |
|  | <p>REWIND / REVIEW This button causes the tape to reverse. With some VCRs it is possible to watch the picture in reverse in order to find a particular place on the tape.</p> |
|  | <p>PLAY Used to start playback of a tape.</p> |
|  | <p>PAUSE This button is used to stop the tape momentarily. Depending on the VCR, the tape drive may automatically turn off after a preset time.</p> |
|  | <p>STOP Pressing this button stops the tape drive and cancels any recording or playback activity.</p> |
|  | <p>RECORD * Push both Buttons in order to commence recording.</p> |
|  | <p>PROGRAMME NUMBER UP Pressing this button selects the next higher VCR Programme Number in sequence.</p> |
|  | <p>FAST FORWARD / CUE This button causes the tape to increase speed. With some VCRs it is possible to watch the picture during fast forward in order to find a particular place on the tape.</p> |
|  | <p>PROGRAMME NUMBER DOWN Pressing this button selects the next lower VCR Programme Number in sequence.</p> |
|  | <p>STILL ADVANCE When the Pause has been activated, pushing this button will move the tape forward one frame at a time.</p> |

*** WARNING:**

Unauthorised recording of material from Television Broadcasts or from other video and/or audio sources may contravene copyright laws.

Tuning Procedure (Automatic Search)

Important Information

 
 
Use the automatic tuning procedure only if you wish to reset *ALL* Programme Number Locations. The numbers on the remote control refer to Programme Location Numbers and do not necessarily correspond to local television channel numbers. If you want the local television station numbers and the Programme Location Numbers to agree *DO NOT* use this function: refer to "Manual Search" on page 17.

The TV/AV switch should be set to TV for this function to operate. When you start the automatic search, the television will automatically search for television broadcasts through both VHF bands and the UHF band. During this process all of the available television broadcast channels will be automatically allocated to sequential Programme Number locations starting with location 1.

PRE.



1. Press the PRE. (Preset) button. The on-screen display appears as shown:

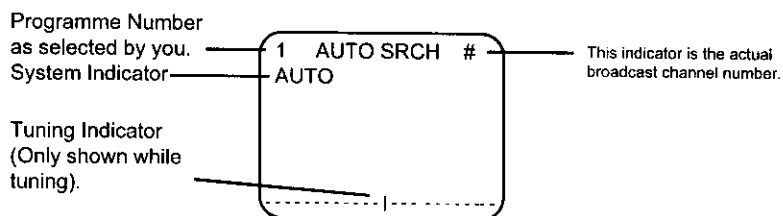

2. Press the Volume Up Button to start the Auto Search. Auto Search will automatically allocate each received broadcast signal to a sequential Programme Number. The operation will cease when all available channels have been tuned.

PRE.



3. Return the television to normal operation by pushing the PRE. Button three times.

NOTE:

A maximum of 100 television channels (0~99) can be programmed.

After you have finished with the automatic tuning and returned to normal viewing, push the Programme Number Up Button to confirm the tuning condition for each Programme Number. If a Programme Number is unwanted, it is possible to "SKIP" or bypass that Programme Number. Please refer to "SKIP" setting details on page 19.

Remote Control Teletext Operation (TX-80V95Z only)

Teletext Page Selection

TV/TEXT

 


Push the TV/TEXT Button to select Text Mode. If the volume is left on you can hear the television programme while watching teletext.

The main index will be displayed. The main index lists the topics available from teletext. Each topic may have its own index.



Select the required starting page number. All page numbers consist of three digits; the lowest page number is 100 and the highest is 899.



Use the Page Number Up & Down buttons to select the next higher or Lower page.



The colour coded buttons will have page numbers allowing quicker access to some pages.

TV/TEXT



Press TV/TEXT to return to television viewing.

Teletext Sub-Page Selection

When a Page has more than one screen (sub-page) of information, it takes approximately 30 seconds before each sub-page is displayed. You may have to wait for some time before the sub-page you require becomes available.

With this function it is possible to enter the number of the desired sub-page. This sub-page number entered will be the next one displayed.

Select Text Mode and choose a page as described above.



Press the Time Text button



When the page has been received, the sub-pages can be viewed. The sub-page number must be entered as a four digit number e.g. sub-page 3 would be entered as 0003.



Pushing the red button selects the previous sub-page number.
Pushing the green button selects the next sub-page number.

TV/TEXT



Press TV/TEXT to return to television viewing.

 
Fine Tuning (Automatic Frequency Control)

Under normal viewing conditions the AFC (Automatic Frequency Control) remains "ON". However in areas of poor reception or constant interference a slight adjustment to the tuning may improve the picture quality. The television should be switched ON and the TV/AV Switch set to TV. Refer to page 16 for details of the on-screen display.

PRE.





1. Press the PRE. (Preset) button three times.

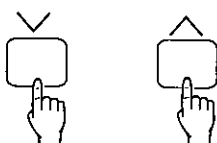


2. Press the Programme Up or Programme Down button to select the required Programme Number. The Programme Number can also be selected directly using Direct Access Programme Numbers on the remote control.

  The on-screen display will appear as shown:

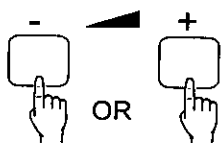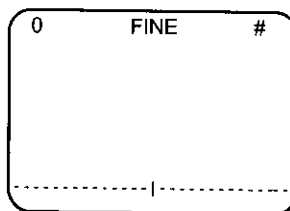

3. Press the Volume Up or Volume Down button to start the Fine Tuning. The On-Screen Tuning Indicator will slowly move in the direction selected. When the button is released the tuned position will be automatically memorised.

 A small square will appear to the left hand side of the Programme Number to indicate that the AFC has been turned OFF.

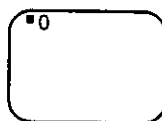

4. If more than one Programme Number is to be Fine Tuned repeat steps 2 and 3.
5. Press the PRE. Button once to finalise the operation.

Cancelling the Fine Tuning

To cancel the Fine Tuning follow the Manual Search procedure on page 17.

 
 
Tuning Procedure (Manual Search)

Use this tuning procedure only if you wish to reset individual Programme Numbers. The television should be switched ON and the TV/AV Switch set to TV. Refer to page 16 for details of the on-screen display.


PRE.



1. Press the PRE. (Preset) button until the on-screen display appears as shown:

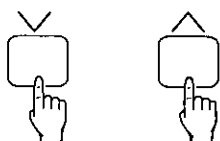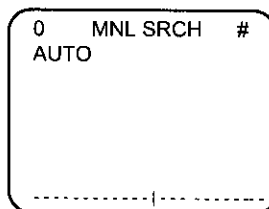

 2. Press the Programme Up or Programme Down button to select the required Programme Number. The Programme Number can also be selected directly using Direct Access Programme Numbers on the remote control.

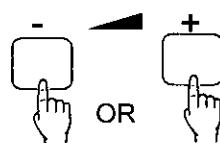

3. Press the Volume Up or Volume Down button to start the Manual Search. The Search function will automatically search for the next broadcast channel and will stop when one is found. Press the button again if the channel is not the desired one.

PRE.



4. To tune more stations repeat steps 2 and 3 until all channels are tuned. A maximum of 100 Programme Numbers (0 ~ 99) can be programmed.
5. Press the PRE. Button twice to finish the tuning procedure.

Tuning the Television to a VCR

1. Turn the VCR On and either start a known tape playing or set the VCR Test Signal, if fitted, to On (refer to the VCR operating instructions).
2. Repeat steps 2, 3 and 4 of the Manual Tuning procedure above. The television will treat the VCR as if it was a normal television broadcast station.

NOTES:

1. The antenna lead must be connected to the VCR and the VCR RF-Out must be connected to the TV RF-In. Please refer to page 21.
2. The picture and sound quality are usually much better if the VCR is connected using the AV Terminals. Please refer to page 21.

 
Connecting Equipment to the TV Front Terminals

Front Panel Connections



Behind the front panel door is the headphone socket and the AV2 input.

NOTE: When a headphone plug is inserted into the headphone socket the internal speakers will be automatically disconnected: only the headphones will function.

The front input terminals allow quick and easy access for computer games, video cameras and other equipment which is not usually permanently connected. When a connection is made to the front panel terminals, the rear AV2 terminals are switched off.

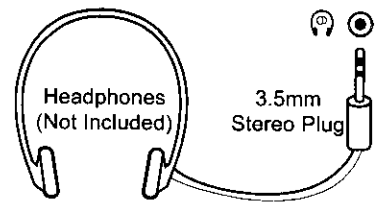

VIDEO CAMERA

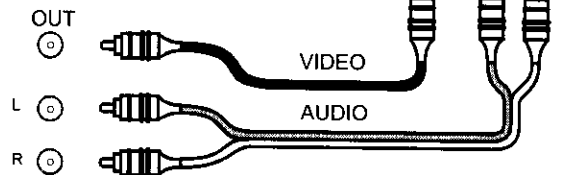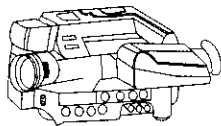  

Connecting Equipment to the TV (Rear)

Monitor Out

The Monitor Out terminals reproduce the signals currently on the television screen. The on-screen signals could be a television programme or signals connected to the AV1 input.

The Monitor Out facility can be used to allow one video source (video tape, video disk etc.) to be connected to more than one television. Connect the Monitor out from this television to the AV Input of the second television.

 
If a video recorder is connected to the Monitor Out and video sources (VCR, video disk, camera etc.) are connected to the AV1 input, the television becomes a visual display for tape editing or copying.*

The Monitor Out Audio can also be connected to a stereo amplifier or other hi-fi equipment.


STANDARD VIDEO RECORDER



TV USED AS A MONITOR

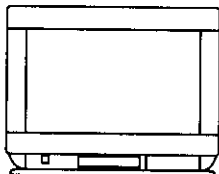


AUDIO AMPLIFIER

 

(No Video Connection)

NOTE:

 Never connect the same video recorder or other device to both the VIDEO IN and MONITOR OUT terminals of this television as this could cause incorrect operation.

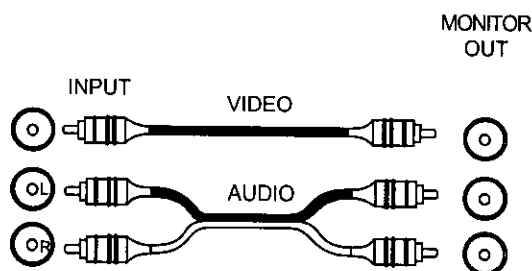

*** WARNING**

 
 
Unauthorised recording of material from Television Broadcasts or from other video and/or audio sources may contravene copyright laws.

Skip Operation

This option allows you to "SKIP (bypass) the unused or undesired Programme Numbers. The Function is only applicable when the Programme Number Up or Down buttons are pressed. The use of the remote control Direct Programme Number Buttons overrides the Skip function. The television should be switched ON and the TV/AV Switch set to TV. Refer to page 16 for details of the on-screen display.




1. Press the PRE. (Preset) button.
The on-screen display appears as shown:

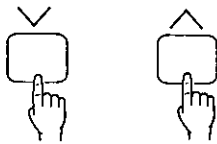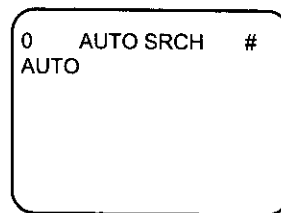

2. Press the Programme Number Up or Down button to select the Programme Number you want to skip. The Programme Number can be selected using the Direct Access Programme Number buttons on the remote control.



 3. Press the TV/AV button.
The on-screen display will change as shown :

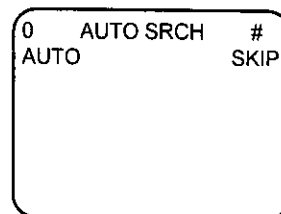

4. If you wish to skip any more Programme Numbers repeat steps 2 and 3.
5. Press the PRE. Button three times to return the TV to normal operating mode.

How to Cancel the Skip Operation

To cancel the Skip function follow the procedure outlined above. Use the "TV/AV" button to turn the "SKIP" off.

The Skip can also be cancelled by Manually tuning the Programme Number which has been "SKIPPED".

AUSTRALIA



www.panasonic.com.au

NEW ZEALAND

**Distributed in New Zealand by
Panasonic New Zealand Limited**

350 Te Irirangi Drive
East Tamaki, Auckland

Customer Care Center

Ph: 0800 726 276

Email: Customerservice@panasonicnz.co.nz

www.panasonic.co.nz



Matsushita Electric Co. (Aust) Pty Ltd

P.O. Box 326 Penrith NSW 2751

ABN: 25 000 611 389

 
Certified to International Environmental Standard ISO14001

Certified to International Quality Standard AS/NZS ISO9001




Connecting Equipment to the TV (Rear)

Rear Terminals

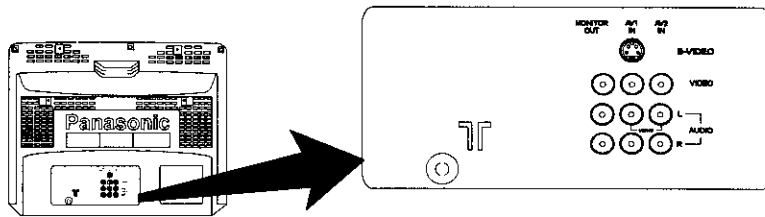


When using a VCR with the television *always* connect the Aerial to the VCR and connect an RF Cable (not supplied) between the VCR RF-Out and the television RF-In. You can watch videos by either tuning the television to the VCR (see page 17) or by connecting the VCR to the rear AV terminals.

 Note: When connecting a VCR through the RF-IN, please switch the TV to Mono.



Connecting a Standard VCR to the AV Input

 Most standard Video Cassette Recorders use RCA type video and audio connectors. If your VCR has different type connectors please refer to the VCR instruction book for details.

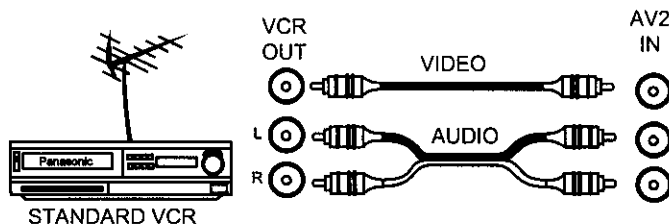

NOTE: A mono VCR can be connected to this television. Connect the VCR Audio out to the Left Audio input on the television. The sound will automatically be directed to both speakers.

Connecting S-Video Equipment to the AV Input

S-Video equipment uses a 4Pin Mini Din (Male) plug for the video and RCA plugs for the audio. When an S-Video cable is connected to an S-Video input terminal, the RCA video terminal for that AV position will be disconnected.

