

# PHILIPS



# STV

15 AB3536  
17 AB3546  
21 AB3556



# PHILIPS



# Contents

<b>Unpack and Connect</b>	pg.2
Mains and aerial	
Remote control	
Switching TV on	
Stand-by	
Indoor aerial	
<b>Installation</b>	pg.3
Activating the install menu	
Selecting your menu language	
Searching and storing TV channels	
<b>Manual store</b>	pg.4
Selecting the TV system	
Searching for a TV channel	
Allocating the programme number to a TV channel	pg.5
Adjusting the volume	
Storing	
<b>Auto store</b>	pg.6
<b>Favourite Programmes</b>	pg.7
<b>Operation</b>	pg.8
Selecting TV channels	
Volume control	
Temporarily interrupting the sound	
Time, date, stop-watch	
Sleep timer	
Personal Preference	
Brightness and Colour control	
<b>Main menu</b>	pg.9
Adjusting the picture	
Special features	pg.10
Clock, setting time and date	pg.11
Alarm	
<b>Teletext</b>	pg.12
<b>Peripheral connections</b>	pg.14
Connecting via aerial cable	pg.15
Connecting via eurocable	
Connecting via audio/video cables	
Headphones	
<b>Tips</b>	pg.16
Demo	

GB

Follow these instructions carefully.

- This **circle** in front of a sentence indicates that you have to do something.
- ▷ This **arrow** in front of a sentence indicates the result of what you have done.

# Unpack and Connect

1

## Positioning

 
Place the TV on a solid surface.

For ventilation, leave a space of at least 5 cm. free all around the set.

2

## Mains and aerial

This TV requires a mains voltage of 220/240 Volts, 50 Hz. Consult your dealer if the mains supply is different.

- Insert the mains plug into the wall socket.
- Insert the aerial connector into the aerial socket  on the back of the TV and into the wall aerial socket.

3

## Remote control


Your remote control has two sides with buttons. For the best result use the remote control in the horizontal position. When you turn the remote control you will hear the switch. This switch makes sure that the upper part can be activated. The bottom part is deactivated. Pressing buttons in this part will not have any effect.

 
- Remove the battery compartment cover.
- Insert the batteries supplied (1,5 Volts).
- Close the battery cover.



4

## Switching TV on


- Press the switch  on the front of your TV set.

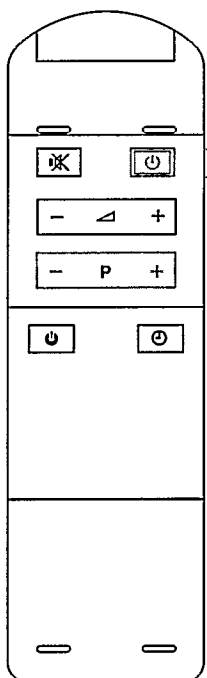

Does a red light on the TV light up? Then the TV is on Stand-by.

- Press **P -** or **+** on the remote control.
- ▷ The TV switches on.

### Stand-by

- By pressing  (Red) on the remote control you can temporarily switch the TV off.
- ▷ A red light on the TV lights up.
- Press **P -** or **+** to switch on the TV again.

Switch off your TV overnight instead of leaving it on Stand-by. You save energy and the picture tube is demagnetised which helps to maintain a good picture quality.


### Automatic Stand-by

If after a period of 15 minutes no aerial signal is received, the TV automatically switches to Stand-by.

### Indoor aerial

Read the following information only if you are using an indoor aerial.

On certain TV models the aerial is included in the box.

Insert the aerial into the mounting socket located on the back of the TV, then insert the aerial connector into the aerial socket .

In some circumstances (specific regions or if surrounded by high buildings) reception problems could occur.

Further improvement of reception could be obtained by:

- Rotating or varying the angle of the aerial.
- Using other aerial executions.
- Connecting your TV to an outdoor aerial.

## Control panel

The control buttons needed for adjusting the TV are located behind the control panel cover on the front of the TV.

To open, simply press on the middle of the panel cover.

# Installation

This part helps you with finding TV channels, allocating the TV channels on the programme numbers and adjusting picture and sound.

1

## Activating the INSTALLATION menu

- Press the two **INSTALL** buttons on the remote control at the same time, or press the **INSTALL** button on the front of the TV.
- ▷ **INSTALLATION** menu appears on the screen.

**INSTALLATION**  
 A LANGUAGE  
 B MANUAL STORE  
 C AUTO STORE  
 D SORT  
 E FAVOURITE PROG.

Select the menu item using the colour buttons **A B C D E** on the remote control.

2

## Selecting your menu language

You can choose the language of the menus which are shown on the screen.

- Select **LANGUAGE**.
- ▷ A menu of languages appears.

**LANGUAGE**  
 A ENGLISH  
 B DEUTSCH  
 C FRANCAIS  
 D ITALIANO  
 E ...

- Select **E ...** if your language does not appear on the first language menu.
- ▷ A second menu of languages appears.
- Select the colour button for your language choice.
- ▷ **INSTALLATION** menu appears again.

From this point on, all menus are presented in the language of your choice.

HELP

You can always press the **MENU** button on your remote control to go back to the **INSTALLATION** menu, or press **OFF** to leave the menu.

3

 
## Searching and storing TV channels

After you have selected your menu language, you can search for and store your TV channels using **MANUAL STORE** or **AUTO STORE**.

If you want to store all the TV channels automatically, use **AUTO STORE** (see page 6). After **AUTO STORE** you only have to allocate the TV channels on the programme numbers.

If you want to store the TV channels step-by-step, use **MANUAL STORE** (see page 4).

GB

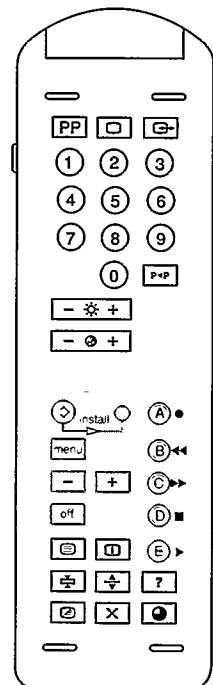

# MANUAL STORE

1

The **INSTALL** menu must be on the screen. If not press the two **INSTALL** buttons on the remote control at the same time, or press the **INSTALL** button on the front of the TV.

HELP

You can always press the **MENU** button on your remote control to go back to the **INSTALLATION** menu, or press **OFF** to leave the menu.

2

- Select the **MANUAL STORE** menu.
- ▷ The following menu appears.

**MANUAL STORE**  
**A SYSTEM**  
**B SEARCH**  
**C PROGRAM NUMBER**  
**D VOLUME**  
**E STORE**

3

 
## Selecting the TV system

The television picture is not broadcasted in the same way in all countries. You can change the TV system per programme number. Therefore you must select the appropriate TV system.

- Select **SYSTEM** from the menu.
- ▷ The first available country or region appears below the menu. Select your region or country:

Region	TV System	Used in:
WEST EUROPE	PAL BG - SECAM BG	West European countries except France, except United Kingdom and Ireland.
FRANCE	SECAM L L'	France.
UK	PAL I	United Kingdom and Ireland.

- Press — or + button to select the required country or region.

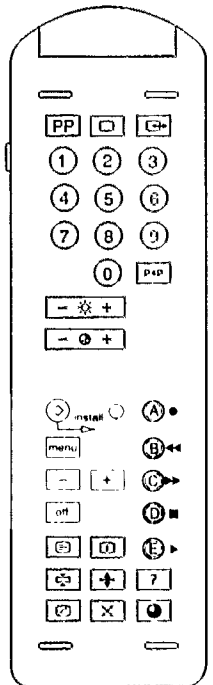

4

## Searching for a TV channel

- Select **SEARCH** from the menu.
- ▷ The TV searches for the first TV channel that can be received. One or more blocks appear below the menu. The blocks change the colour when a TV channel is found. As soon as a TV channel has been found, you can see the programme on the screen.

Do you want to search for a particular TV channel? Then select **SEARCH** again.





## Allocating the programme number to a TV channel

- Select **PROGRAMME NUMBER** from the menu.
- ▷ A programme number appears below the menu.
- Press **—** or **+** or press one or two **digit** buttons to select the programme number on which you want to store the TV channel.

GB



## Adjusting the volume

The volume broadcasted may differ for each channel. Here you can set your personal sound level per channel. When you press the green **PP** ( Personal Preference ) button on the remote control, the sound will automatically jump to your preferred level for this channel.

- Press **PP**.
- Select **VOLUME** from the menu.
- ▷ The volume indicators appears below the menu.
- Press **—** or **+** button to adjust the volume.

**Note :** This "volume per channel" is related to the setting of the green **PP** (Personal Preference) button. The "volume per channel" will change, when you adapt the Personal Preference. (See page 10).



## Storing

- Select **STORE** from the menu.
- ▷ **STORED** appears below the menu. All the previous steps are stored in the memory.

### REPEAT

For every TV channel you want to store, repeat steps 3 to 7. In some countries you can receive several broadcasting systems. If you want to store a TV channel in another system then, in step 3, change the TV system.

### HELP

You can always press the **MENU** button on your remote control to go back to the **INSTALLATION** menu, or press **OFF** to leave the menu.

# AUTO STORE

1

The TV itself searches automatically for the TV channel. **Do not use AUTOSTORE if you have already stored the TV channels with MANUAL STORE.**  
The **INSTALL** menu must be on the screen. If not press the two **INSTALL** buttons on the remote control at the same time, or press the **INSTALL** button on the front of the TV.

2

○ Select **AUTO STORE** from the menu.

	0	1	2	3	4	5	6	7	8	9
0	■	■	■							
1	■	■	■							
2										
3			■	■	■	■				
4			■	■	■	■				
5			■	■	■	■				

3

○ Press **-** or **+** to activate the automatic store.  
▷ Blue blocks appear. The TV searches for all TV channels and stores them automatically in the memory starting from block 59. Blocks become yellow when a TV channel is stored. It will take some minutes to store all the TV channels.

**Note:** The TV searches for TV channels in all systems. Your TV stores a channel if a signal is received, even if it is a channel with no sound or no picture. After the TV channels have been stored, the **INSTALLATION** menu reappears.

4

○ Now select **SORT** from the **INSTALLATION** menu to allocate the TV channels to the preferred programme numbers.  
▷ Blue and yellow blocks appear.  
Yellow blocks indicate stored TV channels.

5

 
○ Select **FROM**.  
▷ The programme number of the TV channel you are currently looking at appears on the screen.  
○ Press **-** or **+** or the **digit** buttons if you want to select a different TV channel.  
▷ The block indicating the selected number is red.

6

○ Select **TO**.  
▷ A programme number appears on the screen.  
○ Press **-** or **+** or the **digit** buttons to select the block to which you want to move the TV channel.  
▷ The selected block is green.

7

○ Select **STORE**.  
▷ The TV channel is now stored on the new programme number. The block indicating this programme is now yellow.

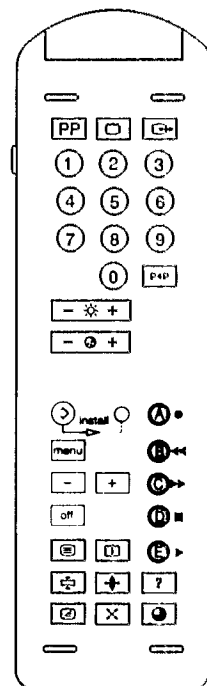

**REPEAT** Go back to 5 and repeat the sequence for each channel you want to move.

**HELP** You can always press the **MENU** button on your remote control to go back to the **INSTALLATION** menu, or press **OFF** to leave the menu.



## FAVOURITE PROGRAMMES

With the **MANUAL STORE** or **AUTO STORE** all the TV channels are now allocated on the programme numbers. With the **— P +** button you can go through all TV channels. You may prefer some programmes more than others. With **FAVOURITE PROGRAMMES** it is possible to jump from one favourite programme to another using the **— P +** button. You just jump over your NOT favourite programmes. These programmes are still accessible using the digits on your remote control. Follow these steps to indicate your **favourite programmes**.

GB

1

The **INSTALL** menu must be on the screen. If not press the two **INSTALL** buttons on the remote control at the same time, or press the **INSTALL** button on the front of the TV.

2

- Select **FAVOURITE PROG.** from the **INSTALLATION** menu.
- ▷ Blue and yellow blocks appear on the screen, blue blocks are non favourite programmes, yellow blocks are favourite programmes.

3

- Select **PROG.NO.**
- ▷ The block representing the programme number you are looking at is red.
- Select a programme number using the **—** or **+** or the **digit** buttons.

4

 
- Select **FAVOURITE**.
- ▷ **ON / OFF** appears below the menu.
- ON means favourite programme. OFF means not favourite programme. In this case you will jump over this programme when you are using the **— P +**.
- Note that the not favourite programme numbers can still be selected with the digit buttons on your remote control.

5

- Press **—** or **+** to select **ON/OFF**.

6

- Select **STORE**.
- ▷ The selection is stored.
- Repeat steps 3 to 6 for each programme number you want to make favourite or non favourite.

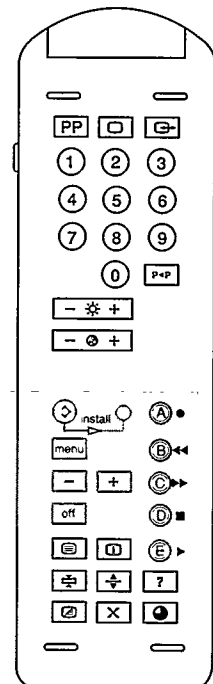


## HELP

You can always press the **MENU** button on your remote control to go back to the **INSTALLATION** menu, or press **OFF** to leave the menu.

# Operation


## Selecting a TV channel

 - Press **P -** or **+** or press one or two **digit** buttons on the remote control, or Press **P -** or **+** on the TV.
- ▷ The programme number of the selected TV channel appears on the screen.
- If you press **P◀P** on the remote control the TV switches to the previous selected TV programme.

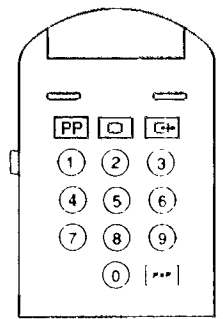

## Volume control

 - Press **△ -** or **+** on the remote control, or Press **△ -** or **+** on the TV.

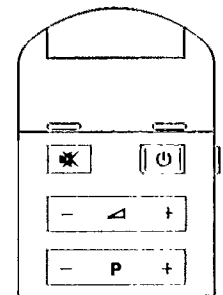


## Temporarily silencing the sound

- Press **M** (mute) on the remote control.
- ▷ The sound is temporarily silenced and the symbol **M** appears.  
Do you want the sound back?
- Press **M** again or **△ +**.

## Time, date, stop-watch

 - Press **C** on the remote control.
- ▷ The time and the date appears.  
If you need to set the current date and time refer to "CLOCK", page 11.
- Press **C** again to select the stop-watch. Press **C** another time to start the stop-watch. If you now press **C** again the time on the screen is stopped but the stop-watch is still running. Press **C** to run the time on the screen again.
- Press **C** more than 5 seconds to switch off the stopwatch.

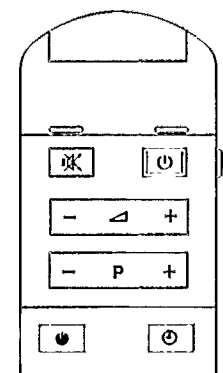

## Sleep-timer

With this feature you can select a time period after which the TV switches automatically to Stand-by mode.

 
- Press **S** until the required time period is displayed on the screen.  
This time period can be set in steps of 15 minutes starting from 90 minutes downwards.  
The count-down starts immediately after the time period is selected.  
You can see the remaining time by pressing **S** once.  
The time displayed on the screen will disappear within a few seconds.  
During the final minute of the selected time period, the seconds remaining begin to "count-down" on the screen, informing you that the TV is going to switch off. At the end of this time period the TV switches to Stand-by mode.
- If you want to stop the "sleep-timer" press **S** two or more times until the selected time period displayed is "00".

## Personal Preference

- If you press the green **PP** button on the remote control the brightness, contrast, colour and volume return to a fixed level. You can set this level to your personal preference using the MAIN MENU. (See "SPECIAL FEATURES" page 10).

## Brightness and Colour control

- Press **☀ -** or **+** on the remote control to adjust the brightness.
- Press **⊕ -** or **+** on the remote control to adjust the colour.  
You can also control brightness and colour via the MAIN MENU. (See page 9).

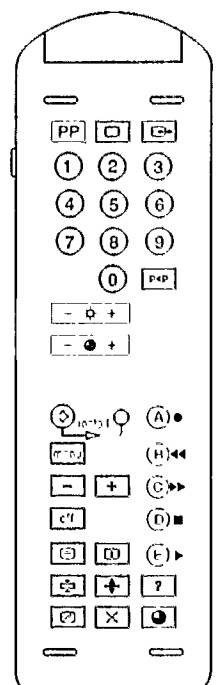

# MAIN MENU

In this chapter all the features relevant for daily use are explained: how to adjust the picture and the sound, how to use the alarm functions etc. You can adjust all the settings by choosing items from the **MAIN MENU** on the screen.

GB

## ADJUSTING THE PICTURE

You can set the brightness, colour and contrast according to your preference using the **PICTURE** menu.

1

- Press **MENU** on the remote control.
- ▷ The **MAIN MENU** appears.

2

- Select **PICTURE** from the **MAIN MENU**.
- ▷ The **PICTURE** menu appears.

3

- Press one of the colour button to select the item you want to adjust.
- Press **-** or **+** in order to adjust **BRIGHTNESS**, **COLOUR** or **CONTRAST**.
- Press **-** or **+** to set the **AUTOCONTRAST** or **SOUND ONLY** to **ON** or **OFF**.

### AUTOCONTRAST

 
If this feature is **ON** the TV automatically adjusts itself to the light conditions in your room. The sensor indicated **ABC** (Automatic Brightness Control) on your TV is activated.

### SOUND ONLY

If this feature is **ON** the TV screen has no picture, you will hear only the sound.

## HELP

You can always press the **MENU** button on your remote control to go back to the **MAIN MENU**, or press **OFF** to leave the menu.

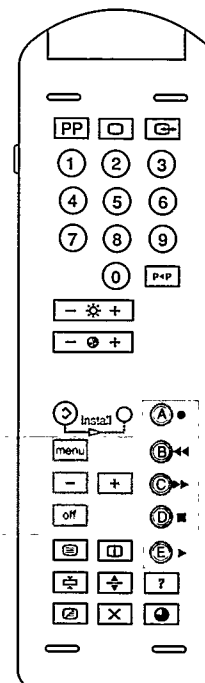

## SPECIAL FEATURES

Here some features are explained which are very handy to use occasionally.

1

- The **MAIN MENU** should be on your screen, if not:
  - Press **MENU** on the remote control.
  - ▷ The **MAIN MENU** appears.

2

- Select **SPECIAL FEATURES** from the **MAIN MENU**.
  - ▷ The **SPECIAL FEATURES** menu appears.

3

- Press one of the colour buttons to select the features you want to activate.
- Press **-** or **+** in order to activate or deactivate the function.

### CHILD LOCK


 

If this feature is **ON** the TV can only be operated with the remote control. The TV buttons have no effect. Use this feature to prevent undesired use of the TV. When you press a TV button **child lock** appears on the screen.

### DISPLAY PROGRAMME NUMBER

If this feature is **ON** the green programme number is always present in the upper right hand corner of the screen. If this feature is **OFF** the programme number is present a few seconds after changing a TV channel.

### PERSONAL PREFERENCE

 
You can store your personal preferred picture and sound. These preferences can be recalled with the green **PP** ( Personal Preference ) button on the remote control. Follow these steps to set your personal preference.

1. Set the brightness, colour and volume, using the  -   buttons on the remote control.
2. Select **PERSONAL PREF.**
3. Press **-** or **+** to store your settings.

**Note:** With "Personal Preference" you define a preferred general volume level. However, some TV channels transmit different volume levels (e.g. MTV). So, when pressing the green **PP** button, the volume levels of certain TV channels may be too loud or too soft. Via the **INSTALLATION** menu the volume level per channel can be adapted. (See page 5).

### DIGIT ENTRY TIME


To choose a programme number from 10 to 59 you must press two **digits** within a certain period. You can choose a **LONG** or a **SHORT** period.

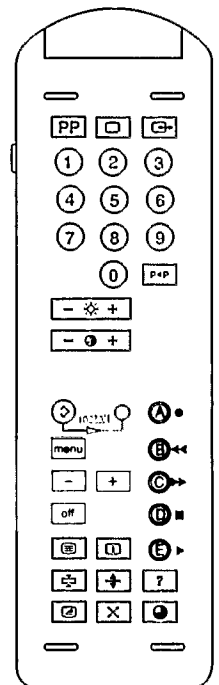

## HELP

You can always press the **MENU** button on your remote control to go back to the **MAIN MENU**, or press **OFF** to leave the menu.

## CLOCK - setting time and date

When you press  on your remote control, the clock and the date will appear. After a few seconds it will automatically disappear. Follow these steps to set the actual time and date.

1

- The **MAIN MENU** should be on your screen, if not:
  - Press **MENU** on the remote control.
  - ▷ The **MAIN MENU** appears.

2

- Select **CLOCK** from the **MAIN MENU**.

3

- Select **TIME**.
- Press the **digit** buttons to insert the time.
- Select **DATE**.
- Press the **digit** buttons to insert the date.
- Select **STORE**.
- ▷ The clock starts running with the new time.  
The time runs as long as the TV is switched on.


HELP

You can always press the **MENU** button on your remote control to go back to the **MAIN MENU**, or press **OFF** to leave the menu.

## ALARM

When the **ALARM** is **ON** the TV automatically switches to a set TV channel at a set time. You must specify the programme number and the time. Follow these steps:

1

- Check if the clock is set to the right time using the  button on the remote control. To adjust the time see "CLOCK" on this page.

2

- The **MAIN MENU** should be on your screen, if not:
  - Press **MENU** on the remote control.
  - ▷ The **MAIN MENU** appears.

3

- Select **ALARM**.

4

- Select **SWITCH-ON TIME**.
- Press the **digit** buttons to insert the starting time for the TV programme.
- Select **PROGRAM NUMBER**.
- Press the **digit** buttons to select the programme number.
- Press **—** or **+** to select **ON/OFF**. Select **ON** to activate the alarm. Select **OFF** to deactivate the alarm.

You will see a yellow light on the front of the TV, if the **ALARM** is switched **ON**.

HELP


You can always press the **MENU** button on your remote control to go back to the **MAIN MENU**, or press **OFF** to leave the menu.



# Teletext


Most TV channels broadcast information via teletext. Each channel which broadcasts teletext transmits a page with information on how to use its teletext system. Look for the teletext page with the index (usually page 100). TV programmes are sometimes subtitled for the hard of hearing. Depending on the TV channel, teletext is transmitted in different systems: WST, TOP, FLOF.

## Switching Teletext On and Off

- Select the TV channel for the desired teletext broadcast. Teletext cannot be switched on when there is a menu on the screen.
- Press  to switch on the teletext.
- ▷ The contents appear on the screen together with an information line at the top and an options line at the bottom.

In the information line appears:

- the number of the page transmitted or requested.
- the page counter.
- the name of the TV channel.
- date and time.
- only Page100 if there is no teletext broadcast.

- Press  again to switch off the teletext.
- ▷ The TV channel reappears.

## Selecting a Teletext Page

### With direct page selection

- Enter the desired page number with the digit buttons.
- ▷ The page counter seeks the page.
- ▷ If the counter keeps searching, then the page is not available.


or

 
### With the options line

- Select the desired subject with the corresponding colour button.
- ▷ The selected subject consists of a page and new options line.
- With the red button or the blue button select either the previous or the following page, indicated in the options line with a red — a blue +.

Does P?... appear or have you entered an incorrect number?  
First complete the number with random figures and then enter the correct page number again.

### Selecting the table of contents

- Press the white colour button or .
- ▷ The table of contents will appear.

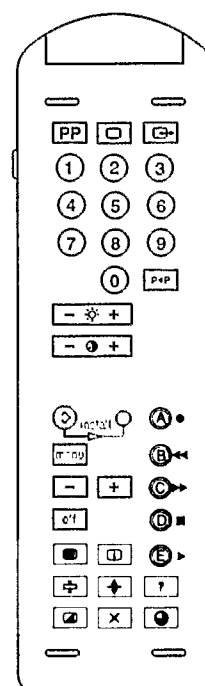


 

## HELP

You can always press  to switch off teletext.

## Special teletext functions

 

### Hold

A selected page number sometimes contains automatically rotated subpages. The total number of subpages and the subpage displayed are indicated on the screen. For example: 1/4.




- Press  to hold a subpage.
- ▷  appears in the information line.  
The information in this subpage is not being updated by the teletext editorial office.
- Press  again.
- ▷ The subpages rotate again.

### Reveal



Some pages contain concealed information, such as solutions to riddles and puzzles.

- Press  to call up concealed information.
- Press  again to switch off the concealed information.



### Interrupt

- Press .
- ▷ The TV channel appears.  
 indicates that you are still in the teletext mode. Before interrupting teletext, you can select a page number. When the page has been found, the information line appears briefly on your screen.
- Press  again.
- ▷ Teletext reappears.

### Mix





- Press .
- ▷ The teletext page is superimposed over the programme on the screen.
- Press  again.
- ▷ Only the teletext page is displayed.

### Enlarge

- Press  to enlarge the top half of the teletext page.
- Press  again to enlarge the bottom half of the teletext page.
- Press once more to return to normal page size.

### Subcode

By adding a subcode you can call up a subpage and hold it.



- Enter the page number.
- Press .
- Enter the subpage with 4 digits: e.g. 0003 for 3/7.
- Press .
- ▷ The TV channel appears. The information line appears as soon as the subpage has been found.
- Press  again.
- Press  to cancel the subcode.

### Exit

- Press .
- ▷ The TV programme appears on the screen again.

### Time

 
The time can only be called up if the TV channel you are watching is also broadcasting teletext.

- Press .
- ▷ The time appears.
- Press  again to switch off the time or wait a few seconds.



# Peripheral connections


Your TV has many possible connections. This drawing shows the most common connections. Please ask your dealer to connect equipment not mentioned here or for stacking and looping equipment.

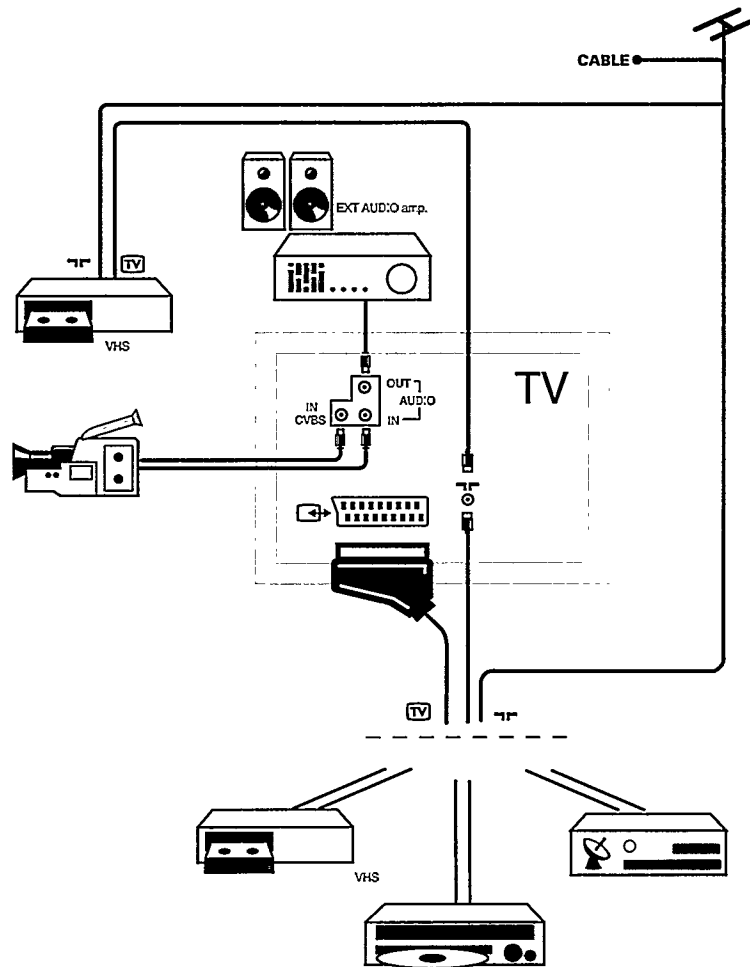

## Using the TV remote control for the videorecorder

Videorecorders accepting the RC5 code can be operated with the remote control supplied.

 If you want to use the TV remote control to operate the videorecorder, slide the button on the side to VCR position.

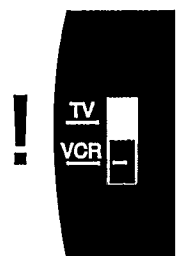






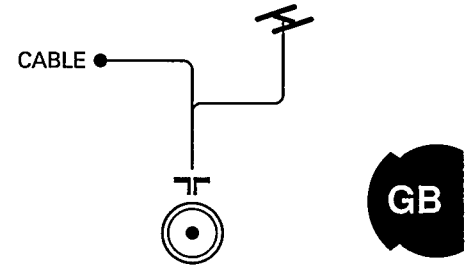 
# Connections

## Aerial connections

You can connect your videorecorder or other equipment via the aerial connection on the back of the TV.

You must search for the signal from the peripheral connected.


- Unplug the aerial plug from your TV and insert it into the aerial input  of your equipment.
- Connect another aerial plug to the output  of your equipment, connect the other side to the aerial input  of your TV.
- Switch on your equipment.
- Check in the handbook of the particular equipment to see what the test signal looks like.
- Now use the **MANUAL STORE** menu to search for and store this signal on a programme number. From now you can receive signals from your equipment on this programme number.



## Euroconnection (scart)

You can connect your videorecorder, camcorder, CDV player, cd, satellite tuner, game computer, CD-Interactive or other equipment via the euroconnector socket on the back of the TV. Ask your dealer for the appropriate cable.

 
Normally if the peripheral is switched on, the picture will automatically appear on the TV screen; if not press  on your remote control.


- Press  to switch to TV.




## Audio/video connections

You can connect your audio or video equipment to the TV AUDIO/VIDEO connectors on the back of the TV. Ask your dealer for the appropriate cable.


 
- Connect the audio cables to the audio input of your equipment and to (OUT) of your TV.
- ▷ If audio equipment is connected you can listen to your TV sound via your audio equipment.
- Press  on the remote control.
- ▷ The internal loudspeakers of your TV are switched off.
- The video equipment must be connected to the **IN CVBS** and to the **AUDIO IN** of your TV.

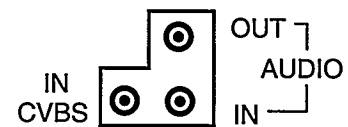


Normally if the peripheral is switched on, the picture will automatically appear on the TV screen; if not press  on your remote control.

- Press  to switch to TV.

## Headphones

  - Insert the plug into the headphones socket at the front of the TV. Adjust the volume with  or .
- ▷ The internal loudspeakers of your TV are automatically switched off. You can connect headphones with an impedance between 8 and 4000 Ohm, the jack type is 3,5 mm.

 If you want to connect more electronic equipment to your TV, consult your dealer.

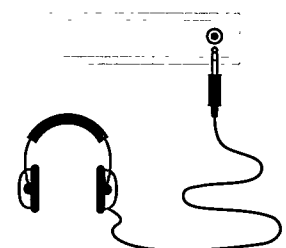

# Tips

## Poor or no picture:

Is your TV set or indoor aerial located too close to loudspeakers, unearthed audio equipment or neon lights, etc.?

Is the aerial connected properly?

Are the plugs tightly connected to the aerial socket and are the connection facilities to any other installed TV in good condition?

If an indoor aerial is used, refer to the "Unpack and Connect" section to improve the reception.

No sound? Have you selected the right TV system?

 
## Remote control is not working properly:

Probably the batteries are flat, replace the batteries.

Is the TV/VCR slide switch in the TV position?

**Do you hear something from your remote control?**

Its normal. You hear the gravity switch which makes sure you can work with both sides of the remote control.

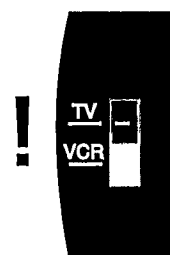


## The TV is not responding to the buttons on the TV?

Check if the child lock is OFF.


## No picture from connected equipment:

Is your TV switched to ext. equipment ?

- Press  one or more times.

Is the electronic equipment switched on and is START or PLAY pressed?

No picture from your videorecorder, or other equipment connected via Euroconnector (scart)?

- Press  to switch to EXT.1.

## Demo

Do you see the word DEMO on your screen? Then your TV automatically shows you the main functions in the menu. Press the buttons PROGRAM — and VOLUME + on your TV at the same time. DEMO is then switched off (or ON).

## No solution

Switch your TV off and on again with the  button.

### Never attempt to repair a defective TV set yourself.

Switch off the TV and call your dealer or TV-technician when nothing helps or when:

- A white horizontal stripe appears across the whole screen.
- The yellow lamp below the screen starts blinking when no buttons are pressed on the remote control.



Pick location <b>4B6-K04-K3</b>		am <b>1401</b>	Invoicenum <b>5559393-0004</b>		Wave <b>03</b>	Sort location <b>09-015</b>	
Cust.code		Quantity <b>1</b>					
1958	Stock <b>10</b>	Invoice and ship to <b>381403 170866</b>			Order <b>180997</b>		Date <b>384</b>
Qty. SPQ <b>1</b>	Service code <b>4822 736 53009</b>		Description <b>MODE D'EMPLOI</b>			SPQ <b>1</b>	
<b>4822 736 53009</b> A1					Made in:		
					<b>64</b>		

- Ⓞ **IDENTITY CARD** This card, together with the terms of guarantee (to be provided by your dealer), forms the full certificate of guarantee for this appliance.
- Ⓛ **GERÄTE-KENNKARTE** Diese Karte ist, zusammen mit den Garantiebestimmungen, die Ihr Händler Ihnen aushändigt, Ihr Garantieschein für dieses Gerät.
- Ⓛ **CARTE D'IDENTIFICATION** Associée aux conditions de garantie (qui vous sont remises par le revendeur), cette carte constitue le certificat de garantie de cet appareil.
- Ⓛ **IDENTIFICATIEKAART** Deze kaart vormt, samen met de garantievoorwaarden (welke door uw dealer verstrekt worden), het garantiebewijs voor dit apparaat.
- Ⓛ **CARTA D'IDENTIFICAZIONE** Questa carta, in rappresentanza delle condizioni di garanzia (da consegnare dal vostro rivenditore) il documento di garanzia per questo apparecchio.
- Ⓛ **TARJETA DE IDENTIFICACIÓN** La garantía de este aparato se compone de esta tarjeta y de las condiciones de garantía que le entregará su concesionario.
- Ⓛ **CARTÃO DE IDENTIFICAÇÃO** Este cartão, em conjunto com as condições de garantia em vigor (explicadas pelo seu vendedor) constituem o certificado de garantia do seu aparelho.
- Ⓛ **I.D. KORT** Dette kort, udfyldt af Deres forhandler, er tilstrækkelig garantidokumentation for dette apparat.
- Ⓛ **IDENTIFIKATIONSKORT** Dette kort, sammen med garanti betingelserne (som De får af forhandleren) udgjør garantibevist for dette apparat.
- Ⓛ **IDENTIFIERINGSKORT** I Sverige gäller särskilda konsumentbestämmelser. Var vänlig kontakta radiohandlaren för information.
- Ⓛ **TUNNISTUSKORTTI** Tämän laitteen takuudokumentin muodostuu tasta kortista ja takuehdosta (jälleenmyyjä antaa mukaan).
- Ⓛ **ΔΕΛΤΙΟ ΤΑΥΤΟΤΗΤΑΣ** Η καρτέλα αυτή μαζί με τους όρους εγγυήσεως (που θα προμηθευθείτε από το κατάστημα που αγοράσατε την συσκευή) αποτελούν το πλήρες πιστοποιητικό εγγυήσεως της συσκευής σας.

# PHILIPS



RC 3119 105 2027.1

