 


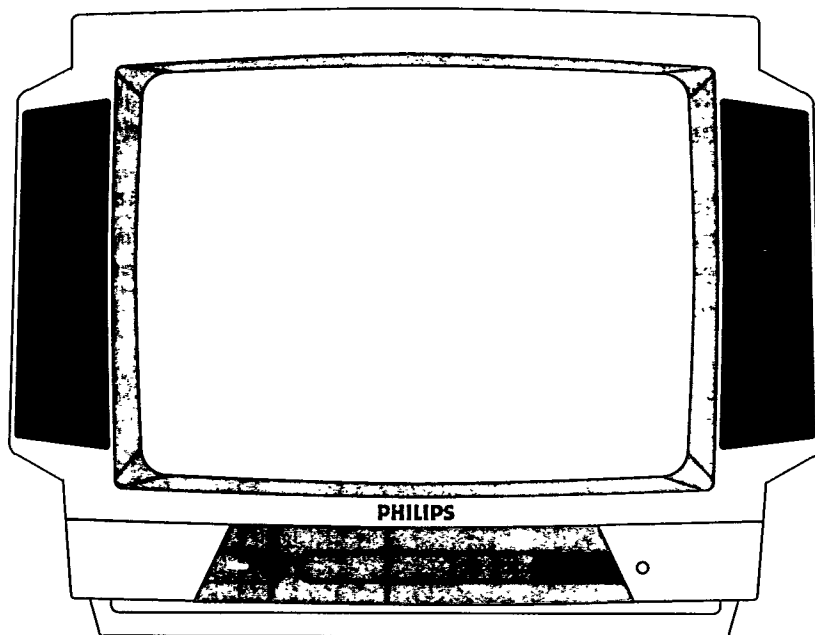

**PHILIPS**



**20GX1550**  
**20GX1850**

English

Español

Português

## COLOUR TELEVISION OPERATING INSTRUCTIONS

### Specifications

Picture Tube	:	20" (48 cm)
Audio Output	:	2 x 4 W (Stereo Playback) ; 4 W (Mono)
Tuning System	:	PLL (Phase Lock Loop)
Off-Air	:	84 Channels (Ch 2 to 69 and Ch 84 to 99)
Cable	:	122 Cable Channels (Ch 1 to 125 (except Ch 95, 96 and 97))
Power Consumption	:	53 W
Standby Power	:	10 W
Television Control Operation	:	On/Off, Volume, Channel, Install, Menu and control +/-
Remote Control Operation	:	On/Off, Volume, Channel, Mute, Display, Digit (0 - 9), DBB, AV, Menu and control +/-.
		Spatial and Stereo (only for remote control RC 7802)
On Screen Display	:	Sharpness, Hue (NTSC mode), Colour, Brightness, Contrast, Channel, Sleptimer, Mute, Volume and Bass Boost
Connections	:	75 ohms antenna Input, Video and Audio Inputs
Cabinet	:	Plastic
Dimensions (H x W x D)	:	(48 x 60 x 48) cm
Weight	:	23 kg

		VERSION /XX			
		54	77	85	87
TV	NTSC M			.	.
System	PAL M /PAL N /NTSC M (Trinorma)	.	.		
Operating Voltage	100 - 250 V~, 50/60 Hz	.	.	.	.

Note : Please refer to the type plate at the rear of the TV set or the Identification Sticker on the carton box for reference to the version number for the set.

**NOM**



# General Information

Congratulations on purchasing your new Philips colour TV set. It has been designed and tested to the highest standards and will provide quality picture and sound for your enjoyment. If you follow these operating instructions you will quickly learn how to adjust and operate all the functions of your new TV set; but always read and perform the instructions in the sequence shown.

## IMPORTANT:


**Switch off your TV overnight via the POWER ON/OFF button instead of leaving it on stand-by. You save energy and the Picture Tube is demagnetised which supports good picture quality.**

**When the set is switched on, do not shift or move the set around. Also sometimes it may develop an unevenness in colour in some parts of the screen. This can be eliminated by switching off the set with the mains power button and wait for 10 minutes before switching on again. If symptom still exists, call for service.**


Following are the Models with their respective distinct features.

	20GX1550	20GX1850
Full Remote Control	•	•
AV Connections	•	•
BTSC Stereo		•
Headphone		•
Remote control handset	RC7805	RC7802

 RC7802

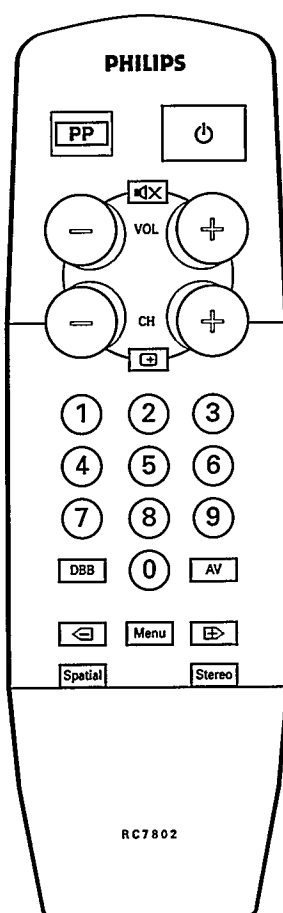

RC7805

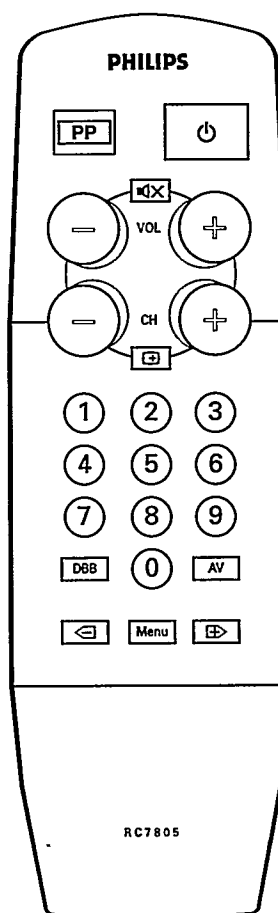 

# Safety Information

## Unplug your TV from the mains supply when :

- The RED light below the screen is flashing continuously.
- A bright white line is displayed across the screen.
- Cleaning the TV screen. Never use aggressive cleaning agents but a slight damp chamois leather.
- During a lightning storm or when the set is left unattended for an extended period of time , disconnect the antenna.
- **Caution** : Never attempt to repair a defective TV yourself; always consult a skilled service personnel.

English

 
## Before Calling For Service

Please make this simple checks before calling for service. These tips can save you time and money since charges for set installation and adjustments of customer controls are not covered under your warranty.

Symptoms	Items to Check and Actions
No Power	<ul style="list-style-type: none"> <li>• Check the TV set's AC power cord is plugged into mains socket.</li> <li>• Unplug the TV, wait for 60 seconds, then re-inserts plug into the mains socket and switch on the TV set again.</li> </ul>
No picture	<ul style="list-style-type: none"> <li>• Check antenna connections at the rear of the TV to see if they are properly connected to the TV input terminal.</li> <li>• Possible TV station trouble. Try another channel.</li> <li>• Increase the contrast setting first and then the brightness setting.</li> </ul>
Good picture but no sound	<ul style="list-style-type: none"> <li>• Increase the VOLUME.</li> <li>• Check that the set is not muted, press the MUTE button on the remote control handset.</li> <li>• When no TV signal is detected, the TV set automatically mutes the sound. This is a proper set operation and does not indicates a malfunction.</li> </ul>
Good sound but poor or abnormal colour or no picture	<ul style="list-style-type: none"> <li>• Increase the contrast setting first and then the brightness setting.</li> <li>• Check that the colour system selection is at the correct system (For Trinorma set only). Do not use the AUTO mode. (Refer to page 10)</li> </ul>
Snowish picture and noise	<ul style="list-style-type: none"> <li>• Check the antenna connection.</li> <li>• Do a fine tuning operation for the affected channel.</li> </ul>
Horizontal dotted lines	<ul style="list-style-type: none"> <li>• This may be caused by electrical interference (e.g. hairdryer, nearby neon lights, etc.).</li> <li>• Switch off the equipment.</li> </ul>
'Ghosts' or double image	<ul style="list-style-type: none"> <li>• This may be cause by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.</li> </ul>
One white line across the screen	<ul style="list-style-type: none"> <li>• Switch off the TV set immediately and consult the service personnel.</li> </ul>
TV not responding to Remote Control	<ul style="list-style-type: none"> <li>• Check whether the batteries are flat. Replace batteries if necessary.</li> <li>• Clean the remote control sensor lens on the TV set.</li> <li>• Check whether any obstruction between TV and remote control handset.</li> <li>• Operating range between TV and remote control handset should not be more than 6 metres.</li> </ul>


# Pre-Installation

## Placing the TV

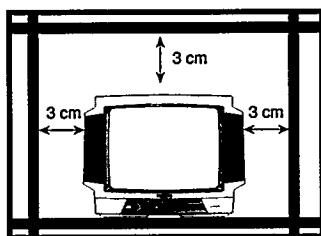

- Select a position for the TV near a power outlet and if possible away from direct sunlight or intense room lighting which will tend to reduce the clarity of the picture.
- Place the TV on a solid base (e.g. a TV/video cabinet)
- Leave at least 3 cm around each side of the TV for ventilation.
- Do not place the TV set near a radiator or other sources of heat.
- Do not expose the TV set to rain or excessive moisture.

## Power Connection

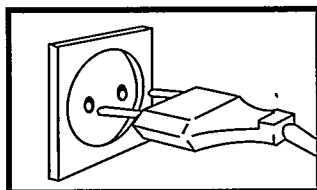 


### IMPORTANT :


Please refer to the section on Specifications for the correct mains voltage. (Consult your dealer if the mains supply is different.)

- Connect the TV to the mains supply socket.  
(This is not representative of the actual plug and socket.)
 
## Antenna Connection


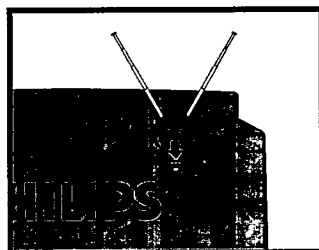


 If the indoor aerial is used, attach it to the TV at the mounting socket on the backcover and then connect the aerial plug to the antenna socket at the back of the TV.  
(Not provided for 77 model)

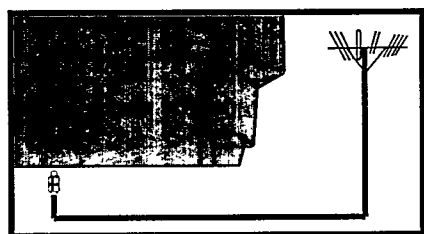

- Connect the aerial plug to the antenna socket at the rear of the TV.

## Battery Installation

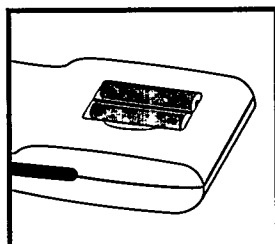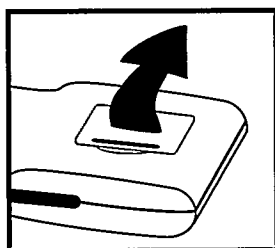  


### To insert batteries in the remote control handset :

- Remove the battery cover at the back of the remote control handset by lifting up in the direction of the arrow.
- Insert the two batteries (Type AAA, 1.5 V) into the battery holder as indicated.
- Replace the battery cover.

Note : To avoid damage from possible battery leakage, remove the batteries for extended unused period.

# Peripheral Equipment Connections

 Connections are located at the back panel of the TV set. Drawings below are graphical representation of the connection options of the TV set.

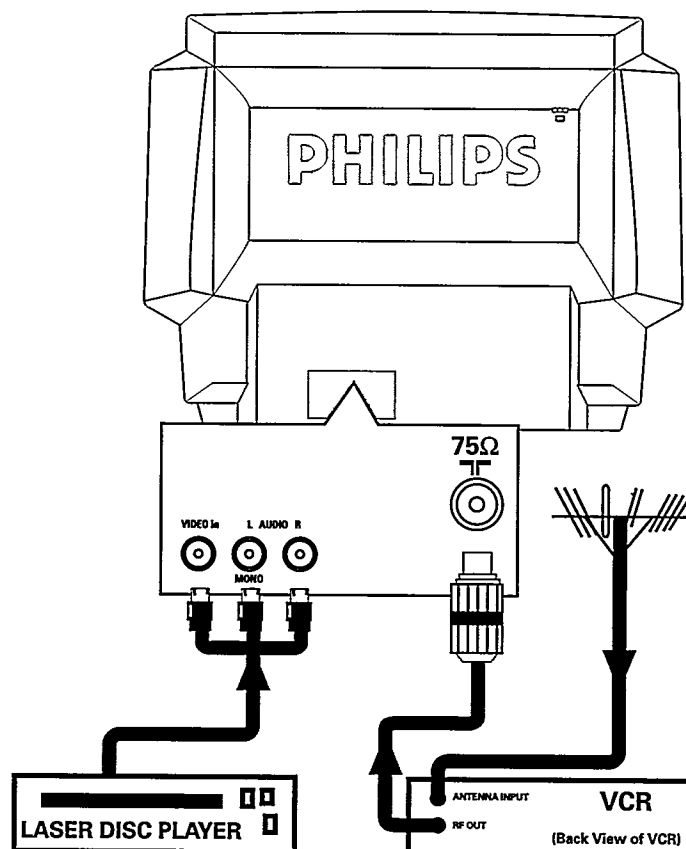


## AV Sockets

Most of the mono equipment can be used to playback via this connections. Model 20GX1550 are mono set. Connect the Video and the Audio L sockets to playback in the AV channel.

For model 20GX1850 which is equipped with a stereo playback decoder, then you are able to listen to stereo sound. Connect the Video, Audio Left and Right sockets from the equipment to the TV set respectively.

## Antenna RF input

 You can connect the antenna either through the VCR or directly to the TV. Connect the antenna to the RF input of the VCR and from the VCR RF output, connect to the antenna input ( 75Ω ) of your TV.

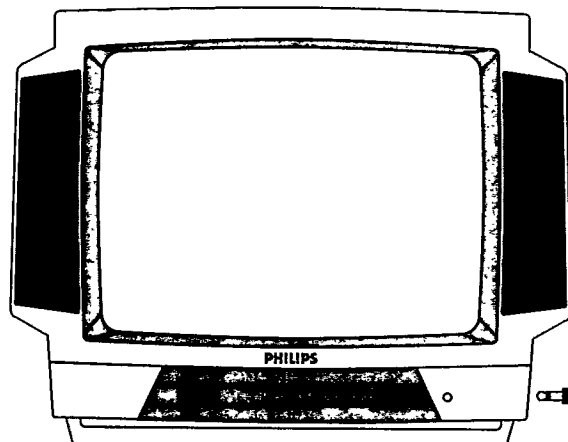

## Headphone

 
(Only available in 20GX1850 model)  
The headphone socket is of the 3.5 mm jack type and the headphone used should be between 32 and 4000 ohms.

# Installation Menu ( Primary Menu )

English

## Switching the TV ON/OFF

- Press the **POWER** button on the front of your TV to switch the TV ON and OFF.

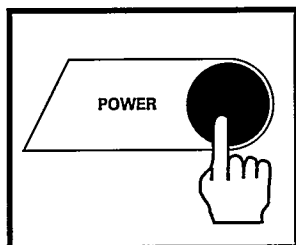

Note :

1. The last viewed TV station will be automatically selected when the set is first switched on.
2. If you want to view the demonstration mode before operating the set, please refer to the section on Operation (Secondary Menu).


**Press open the door cover to access to the Front Control panel.**

 
## Switching the TV ON from Stand-by mode

If the RED light below the screen is lighted up, it indicates that the set is on the stand-by mode. You can switch the TV on again either from the TV or with the remote control.


<p><b>TV</b></p> <ul style="list-style-type: none"><li>• Press either the <b>CHANNEL</b> &lt; or &gt; button on the front of the TV.</li></ul>	A diagram showing a hand with the index finger pointing at a button labeled "CHANNEL". Above the button are two smaller buttons with left and right arrow symbols.
	<p><b>Remote Control</b></p> <ul style="list-style-type: none"><li>• Press either the <b>CH +</b> or <b>-</b> button or any digit buttons.</li></ul>

You can also switch on the TV with the Stand-by button on the remote control.

- Press and hold the  button (for half a second) on the remote control to switch on the TV set.

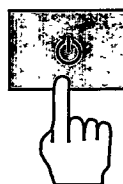

 
- 1 Press the **install** button on the front control panel of the TV set to start the Installation Menu.

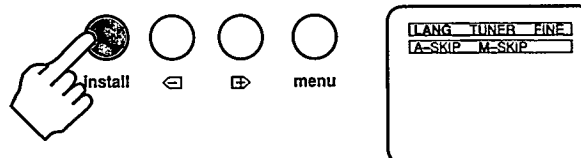


## A. LANGUAGE Selection

This function enables you to select the language for the on screen display. The language available for selection is English, Spanish or Portuguese.

 
2. Press the **menu** button to activate the **LANGUAGE** menu.

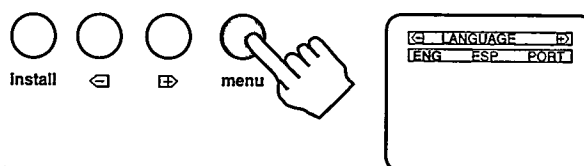

 3. Press the control **+** button to cycle through the **LANGUAGE** menu and select the language of your preference.

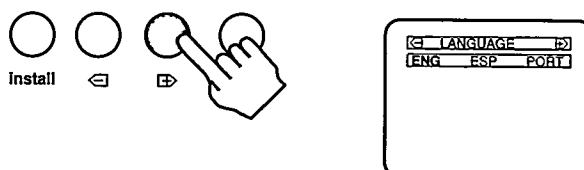

 4. When you have selected the preferred language, press the **menu** button to confirm the selection.

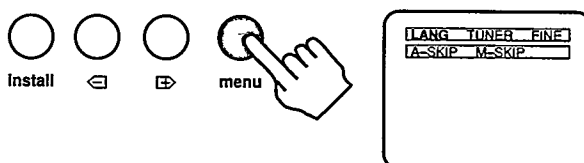


Note : If you wish to exit from the Installation menu after each selection, press the **install** button.


## B. TUNER Selection

 This function enables you to select the TV tuner either in the antenna or cable mode.


2. Press the control **+** or **-** button to select the **TUNER** menu.

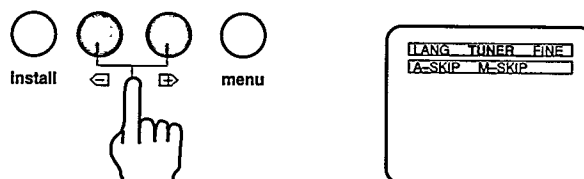

 
3. Press the **menu** button to activate the **TUNER** menu.

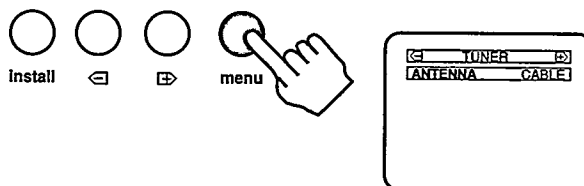

 4. Press the control **+** or **-** button to select either the **ANTENNA** or **CABLE** mode.

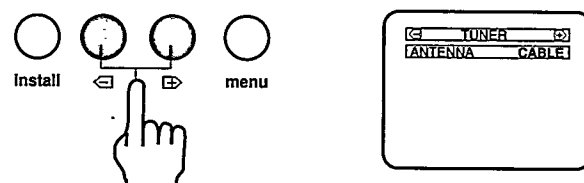


 
5. Press the **install** button to store the new setting and then press the **menu** button to exit.

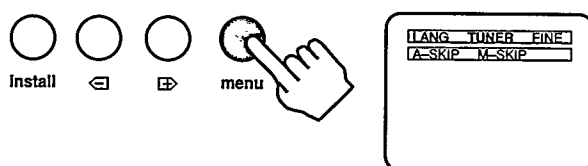



## C. FINE Selection

In case the picture and sound are not optimum (in area of poor reception or constant interference), a slight adjustment of the tuning may improve the picture and sound quality.

 
 
2. Press the control **+** or **-** button to select the **FINE** menu.

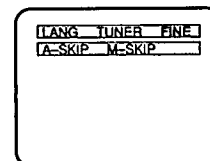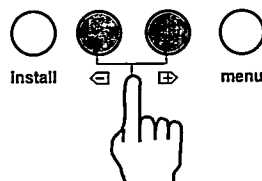

 
 
3. Press the **menu** button to activate the **FINE** menu.

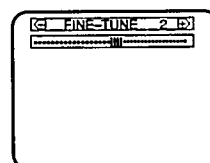

 
 
4. Press the **CHANNEL** **<** or **>** button to select the desired channel number to fine tune.

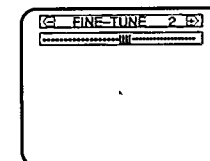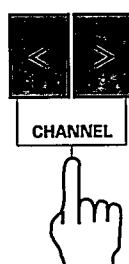

  5. Press the control **+** or **-** button to fine tune the channel until desired picture and sound is obtained.

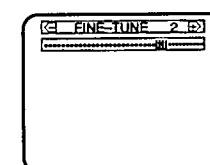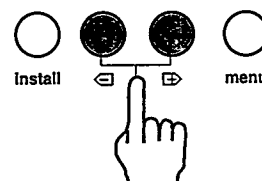

 
 
6. Press the **install** button to store the new setting and then press the **menu** button to exit.

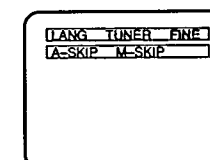



## D. AUTOMATIC SKIP Selection

This feature enables you to skip those non-transmitting channels automatically.

 
 
2. Press the control **+** or **-** button to select the **A-SKIP** mode.

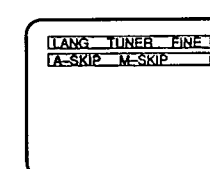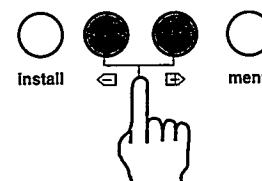

  3. Press the **menu** button to activate the **AUTO-SKIP** mode.

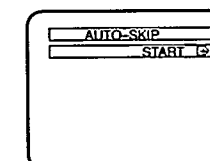

  4. Press the control **+** button to start the **A-SKIP** mode.

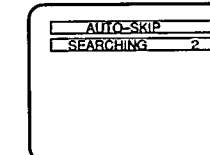



The TV will exit automatically to channel 2 or C1 after it had searched through either the antenna or cable channels.





## E. MANUAL SKIP Selection

  This feature enables you to skip those channels with bad signal manually.



2. Press the control **+** or **-** button to select the **M-SKIP** mode.

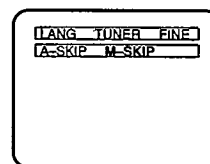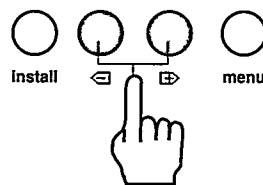

  3. Press the **menu** button to activate the **M-SKIP** mode.

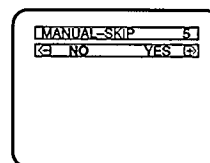



  4. Press the control **+** button to select **YES** to skip the channel from the memory.

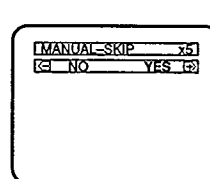

If you wish to skip other channel, press the **CHANNEL** **<** or **>** button to select the desire channel and repeat step 4 as above. If not proceed to step 5.

 
 
5. Press the **install** button to exit.

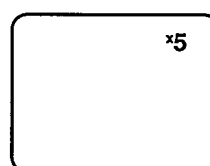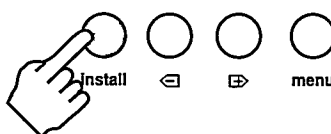



## F. Adding Skipped Channels

This feature enables you to add those channels which you had skipped earlier back to the memory.

 
 
2. Press the control **+** or **-** button to select the **M-SKIP** mode.

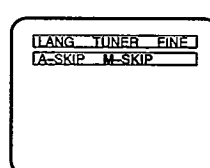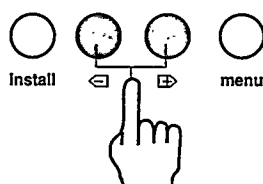

 
 
3. Press the **menu** button to activate the **M-SKIP** mode.

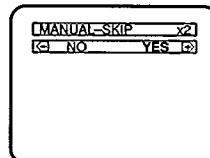

 
 
4. Press the control **+** or **-** button to select the desired channel number to be added to the memory.

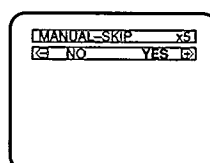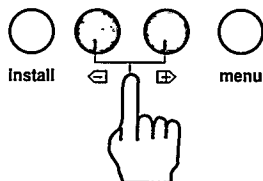

  5. Press the control **-** button to select **NO** to add those channels to the memory.

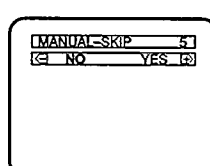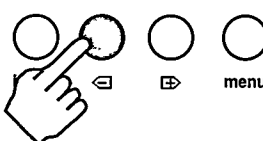

  6. Press the **install** button to exit.

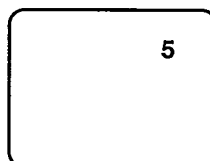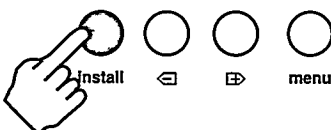

# Installation Menu ( Secondary Menu )

 
 
English

To access into the secondary menu, you have to press and hold the **install** button for about 2 seconds. The following modes are available in the secondary menu : Demonstration, Colour System selection and the Reset mode.



## A. Demonstration Mode

This function demonstrates one after another in a sequential order of the essential features of your TV.



1. Press and hold the **install** button for about 2 seconds.  
The word **DEMO** is highlighted in yellow.

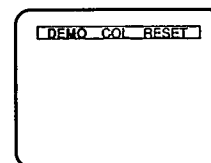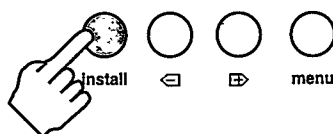

  2. Press the **menu** button to activate the **DEMONSTRATION** menu.

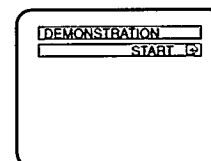

  3. Press the control **+** button to start the demonstration mode.

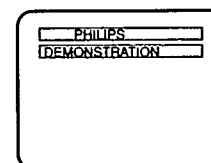


When the demonstration mode is switched on, the word **PHILIPS DEMONSTRATION** in red will be displayed on the screen in between each menu mode.

4. To stop the demonstration at any time, press the **install** button on the TV or the power ( **⏻** ) button on the remote control.



## B. Colour System Selection (for Trinorma set only)

 If during Automatic or Manual Tuning, the selected colour is distorted due to different TV transmission system, proceed with the following operations to restore the correct colour for the respective transmission.



1. Select the channel number you want to rectify the colour system.

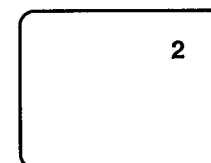

  2. Press and hold the **install** button continuously for about 2 seconds, to activate the secondary menu; then press the control **+** or **-** button to highlight the **COL** menu.

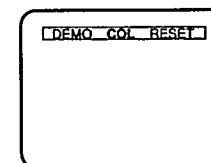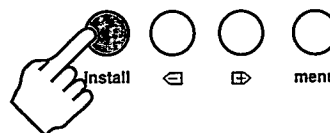

 
 
3. Press the **menu** button to activate the **COLOUR** menu.

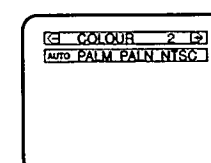


4. Press the control **+** or **-** button to select one of the following colour systems according to the respective transmission mode.

AUTO ; PAL M ; PAL N or NTSC

  If you select the **AUTO** mode, the TV will automatically select the respective colour system according to the transmission system.

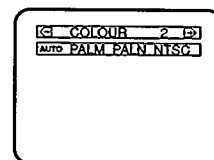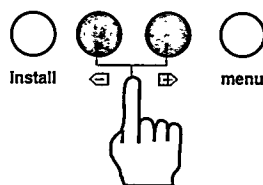


 
5. Press the **install** button to exit from the **COLOUR** menu.

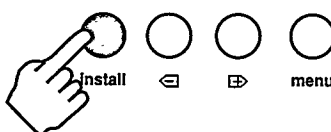



## C. Reset Channels Mode

This function enables you to reset ❶ all previously skipped channels, ❷ all adjusted fine tuning to normal position and ❸ all adjusted colour system selection back to auto position.

 
 
1. Press and hold the **install** button continuously for about 2 seconds, to activate the secondary menu; then press the control **+** or **-** button to highlight the **RESET** menu.

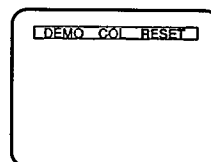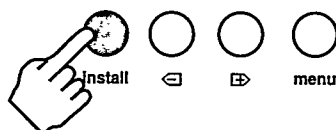

  2. Press the **menu** button to activate the **RESET** menu.

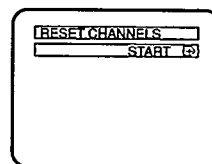

  3. Press the control **+** button to start searching and reset channels mode.

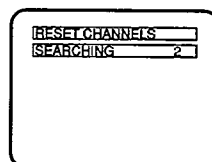


When the reset channels mode is switched on, it will scroll through all the channels (depending whether your TV is set to antenna or cable mode). When it had completed resetting, it will exit automatically to channel 2 (for antenna) or c1 (for cable).

# Operation

 You can now operate your TV either directly using the TV buttons or the remote control handset.

## 1. Switching the TV ON/OFF

- Press the **POWER** button on the front of your TV to switch the TV ON and OFF.

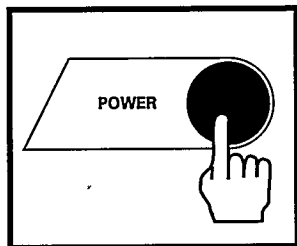

Note :

1. The last viewed TV station will be automatically selected when the set is first switched on.
2. If you want to view the demonstration mode before operating the set, please refer to the section on Installation (Secondary Menu).


## 2. Switching the TV ON from Stand-by mode

 If the RED light below the screen is lighted up, it indicates that the set is on the stand-by mode. You can switch the TV on again either from the TV or with the remote control.

<p><b>TV</b></p> <ul style="list-style-type: none"><li>• Press either the <b>CHANNEL &lt;</b> or <b>&gt;</b> button on the front of the TV.</li></ul>	A diagram showing a hand with the index finger pressing a button labeled "CHANNEL". Above the button are two arrows, one pointing left and one pointing right.	<p><b>Remote Control</b></p> <ul style="list-style-type: none"><li>• Press either the <b>CH +</b> or <b>-</b> button, any digit buttons or the Stand-by (⏻) button</li></ul>	A diagram showing a hand with the index finger pressing a button labeled "CH" with a "+" sign. Above the button are two circular buttons, one with a "-" sign and one with a "+" sign.
---	--	--	--

## 3. Selecting the TV Channels

Channels 2 to 69 and 84 to 99 are available for antenna TV selection while channel 1 to 125 (excluding 95,96 and 97) are available for cable TV selection.

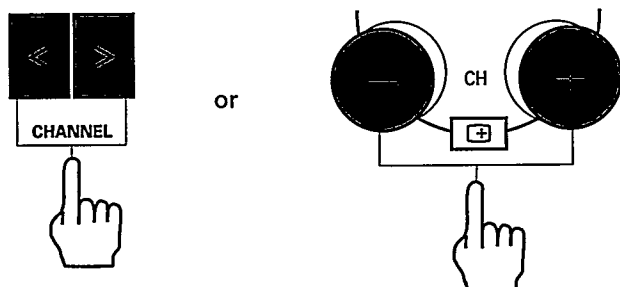

- Press the **CHANNEL >** on the TV or the **CH +** on the remote control to select a TV station stored on a higher channel number.

- Press the **CHANNEL <** on the TV or the **CH -** on the remote control to select a TV station stored on a lower channel number.

Channel numbers can also be selected using the digit buttons 0 to 9 on the remote control.

### A. Single Digit Channel Number (For antenna and cable TV)

- Press and hold any of the respective digit buttons which correspond to the stored TV station. (see Fig. 1)

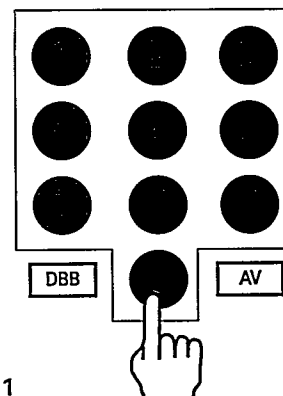 


Fig. 1

## B. Two Digit Channel Number (For antenna and cable TV)

(e.g. channel 28, see Fig. 2)

- ① Press the digit 2 button then
- ② Press the digit 8 button.

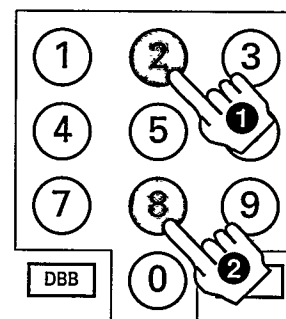 


Fig. 2

## C. Three Digit Channel Number (For cable TV only)

(e.g. channel 106, see Fig. 3)

- ① Press the digit 1 button;
- ② Press the digit 0 button and
- ③ Press the digit 6 button,


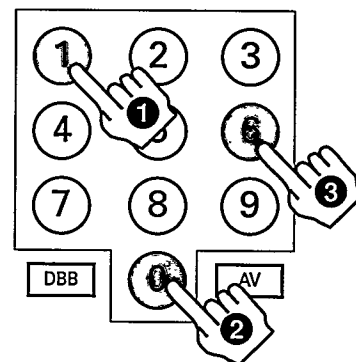 


Fig. 3

You must complete the above operation within a time frame of 2 seconds, if not, it will react as a Single Digit operation.

## 4. Adjusting the Volume

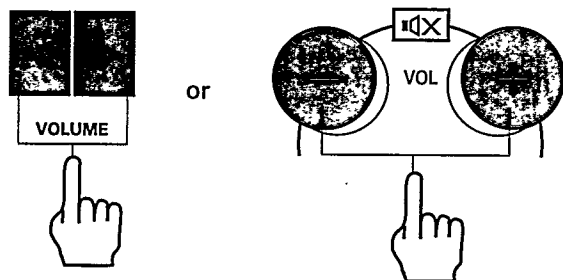 

- Press the **VOLUME** > on the TV or the **VOL** + on the remote control to increase the volume.

- Press the **VOLUME** < on the TV or the **VOL** — on the remote control to decrease the volume.



If you want to store the volume setting as your personal preference, press the **store** button on the TV set twice.

The following functions, S/No **5** to **12** are operations with the remote control handset.

## 5. Muting the Sound

  - Press the button to switch off the sound.

The sound is temporarily muted and the mute symbol is display on the screen.

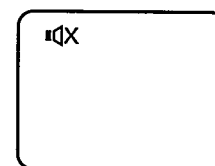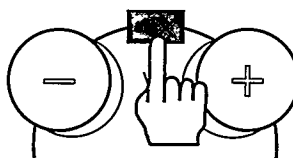


- Press the or the **VOL** + or — button to restore the sound.

## 6. Switching to 'Stand-by' mode

The TV can be put into 'Stand-by' mode in the following two ways.

### A. Directly

- Press the  button. The RED lamp below the TV screen is lighted and the TV is put into 'Stand-by' mode.






or

 
 
### B. Automatically

Approximately 10 minutes after a TV station stops transmission or at no signal reception, then the TV switches itself automatically to 'Stand-by' mode.

## 7. Displaying OSD

The 'On-Screen-Display' ( OSD ) allows you to see the channel number on which a TV station is stored and also the sleeptimer and bassboost selections.


- Press the  button once to display the channel number.
- Press the  button twice to display the sleeptimer and bassboost.
- Press the  button again to switch off the displayed information.

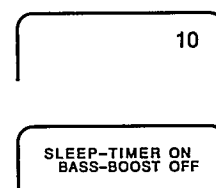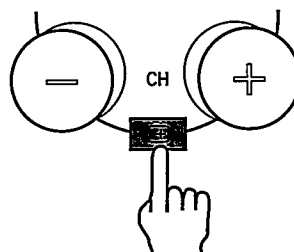

## 8. Personal Preference (PP)


If adjustments had been made to the picture and sound settings, it is possible to recall the stored settings either from your own or fixed ideal preferences.

 
### A. Recalling Personal Preference (PP)

- Press the  button once to reset the picture and sound settings to the one you have stored previously. (Refer to Menu Operation on storing of personal preference.) It is indicated by the word **PP**.




### B. Recalling Fixed Ideal Picture Reference (NORMAL)


- Press the  button once more will enable you to reset the picture and sound to the fixed ideal picture settings and is indicated by the word **NORMAL**.



## 9. Dynamic Bass Boost (DBB)

This feature enable you to enhance the amplification of the bass.

 
- Press the  button to switch on or off the amplification.

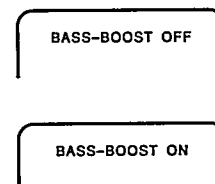

## 10. AV Source Selection

If your TV are connected to other peripherals equipment via the AV inputs, you can view the playback programmes in the AV channel.

 
- Press the **AV** button to switch between the AV mode and the TV mode.

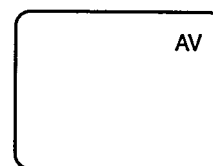


AV channel (AV is between channel 2 and 99 or c1 and c125) can also be selected via the **CH +** or **—** button on the remote control by scrolling through the channel numbers (provided AV channel is not skipped).

## 11. Spatial Sound (for model 20GX1850 only)

 - Press the **Spatial** button to switch on or off the special acoustic sound effect.



 
If you are in the **AV** mode, you can only select either **STEREO SPATIAL** or **MONO SPATIAL** depending on which sound mode you are playing back.



## 12. Stereo Sound (for model 20GX1850 only)

This feature is only applicable if you are receiving BTSC transmission through the antenna socket or playing back **stereo** programme via the AV sockets from stereo VCR or laser disc player.

 - Press the **Stereo** button to select one of the following sound : **SAP**, **MONO** or **STEREO**.
- Press the **Stereo** button to switch between **STEREO** or **MONO** sound when you are in the **AV** mode.




If you are playing back mono programmes (i.e. you only connect the Video socket and the Audio L socket), you must select to the mono sound mode, if not, you will only hear the sound coming out from one side of the speaker.

# Menu Operation

 The picture and sound settings are pre-set by the factory for ideal viewing, but you can store your own personal preference using the 'On Screen Menu'.


- Press the **menu** button on the Front Control Panel of the TV set or the remote control handset to cycle through the menu.

English

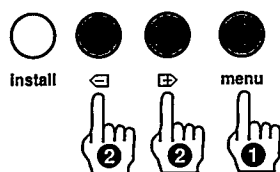


TV Control Panel

 or

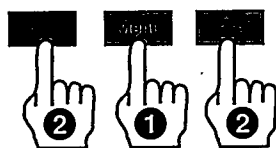

Remote Control Handset

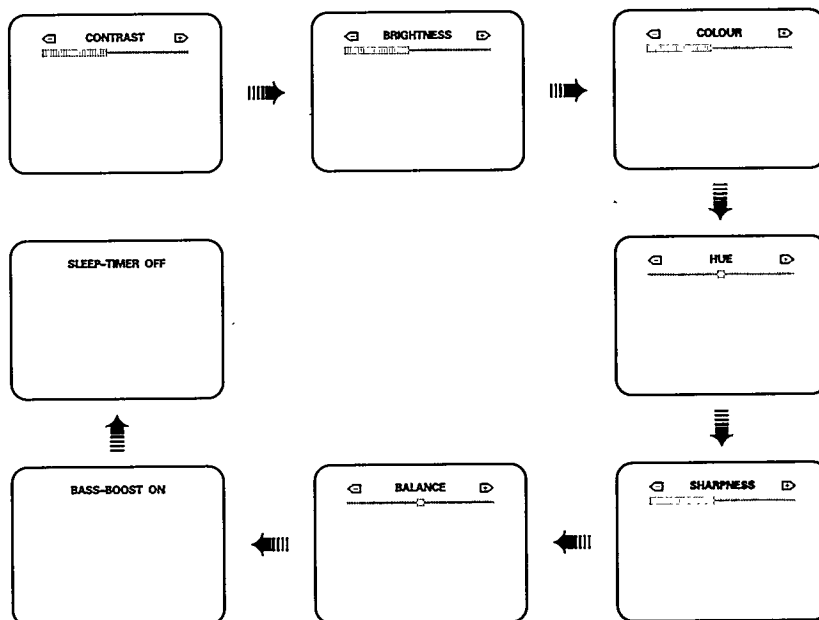 

## CONTRAST

- 1 Press the **menu** button to select **CONTRAST**.
- 2 Press the control **+** or **-** to increase or decrease the contrast setting.
- 3 If you want to store this setting as your personal preference, press the **install** button on the TV set.

Note : You can store all the settings (contrast, brightness, colour, hue, sharpness, balance and bass boost) at the end of the selections instead of after each setting.

## BRIGHTNESS

- 1 Press the **menu** button to select **BRIGHTNESS**.
- 2 Press the control **+** or **-** to increase or decrease the brightness setting.
- 3 If you want to store this setting as your personal preference, press the **install** button on the TV set.

## COLOUR

- 1 Press the **menu** button to select **COLOUR**.
- 2 Press the control **+** or **-** to increase or decrease the colour setting.
- 3 If you want to store this setting as your personal preference, press the **install** button on the TV set.

## HUE (For NTSC System Only)

- 1 Press the **menu** button to select **HUE**.
- 2 Press the control **+** or **-** to increase or decrease the colour tone setting.
- 3 If you want to store this setting as your personal preference, press the **install** button on the TV set.

## SHARPNESS

- 1 Press the **menu** button to select **SHARPNESS**.
- 2 Press the control **+** or **-** to increase or decrease the sharpness setting.
- 3 If you want to store this setting as your personal preference, press the **install** button on the TV set.

## BALANCE (For model 20GX1850 only)

- 1 Press the **menu** button to select **BALANCE**.
- 2 Press the control **+** or **-** to select right or left speaker output.
- 3 If you want to store this setting as your personal preference, press the **install** button on the TV set.

## BASS BOOST

- 1 Press the **menu** button to select **BASS BOOST**.
- 2 Press the control **+** or **-** to switch on or off the bass boost.
- 3 If you want to store this setting as your personal preference, press the **install** button on the TV set.

## SLEEPTIMER

- 1 Press the **menu** button to select **SLEEPTIMER**.
- 2 Press the control **+** or **-** to increase or decrease the sleeptimer setting.

With this feature, you can select a time period after which the TV set will switch to Stand-by mode automatically. The timer can be set in steps of 15 minutes from **OFF** up to a maximum of 120 minutes. Note : At the final minute of the selected time period, a prompting will be shown on the screen. During the final 30 seconds, the indication bar will begin to count down on the screen informing you that the TV set is going to switch to the Stand-by mode. At the end of the countdown, the TV will switch over to the stand-by mode.

You can switch off the SLEEPTIMER with one of the following steps :-

 
- A Select the **SLEEPTIMER** menu and select the timer to **OFF**;
- B Switch the TV set to Stand-by mode or
- C Switch off the TV set.




# Operating The Video Cassette Recorder

First you must refer to the operating instructions supplied with your video recorder for connection details.

- Switch OFF the TV before connecting the video recorder.

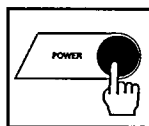


 - Connect the TV aerial cable to the RF IN on the video recorder.
- Connect one side of the cable supplied with the video recorder to the RF OUT on the video recorder and the other side of the cable to the antenna input on the TV.


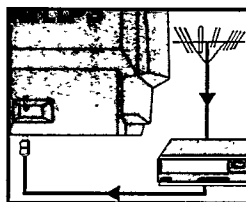


**Refer to the Video Recorder Instruction booklet for the pre-tuned video recorder signal.**


 
1. Switch on the TV and the video recorder.
2. Insert a pre-recorded tape into the video recorder and press the **PLAY** button on the video recorder.

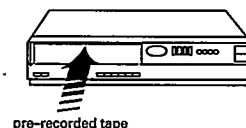

  
3. To select the channel for the video recorder, press the **install** button on the TV and then press the control **+** button to highlight the **M-SKIP** mode.

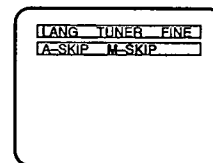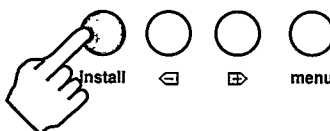

 
 
4. Press the **menu** button on the TV to select the **M-SKIP** mode.

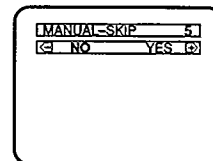

 5. Press the **CHANNEL** **<** or **>** button on the TV to select the designated channel number.

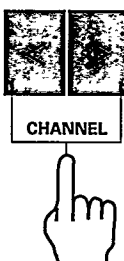

  6. When the video signal is located, press the control **—** button to add the channel number into memory, the display should indicate **NO**. Press the **install** button to exit and stop the video recorder.

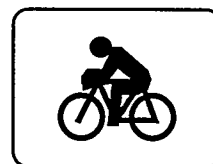

Video tape signal

7. Switch off the TV and the VCR.



