

BASIC CABLE AND ANTENNA CONNECTIONS

Your home's signal input might come from a single (75 ohm) round cable single (75 ohm) round cable om a single (75 ohm) round cable erter Box or from an antenna. In r case the connection to the TV is

 
If your Cable TV signal or Antenna signal is a round cable (75 ohm) then you're ready to con-

nect to the TV If your antenna has flat twin-lead wire (300 ohm), you first need to

the Converte

attach the antenna wires to the screws on a 300 to 75 ohm adapter. If you have a Cable Converter Box: Connect the Cable TV signal to the Cable Signal IN(put) plug on

> 2 Connect the Cable TV cable or Antenna cable (or 300 to 75 ohm dapter) to the 75\O plug on the TV. If you have a Cable Converter Box Connect the OUT(put) plug from th Converter to the 75Q plug on the TV.



7 COMPONENT VIDEO INPUT CONNECTION

Component Video inputs provide for the highest possible color and pic-ture resolution in the playback of digital signal source material, such as with DVD players. The color difference sig-nals (Pb, Pr) and the luminance (V) sig-

connections).
Connect the Component (Y, Ph, Pr) Video OUT jacks from the DVD player (or similar device) to the (Y, Pb, Pr) input) jack on the TV. When using the Component Video Inputs, it is best not to connect a signal to the AV in Video Jack.

2 Connect the red and white AUDIO CABLES to the Audio

left and right) output jacks on th ear of the accessory device to the Audio (L and R) AV1 in Input Jacks on the TV

Turn the TV and the DVD (or digital accessory device) ON. Press the AV button or the CH + or CH - buttons to scroll the avail able channels until CVI appears in the upper left corner of the TV screen

Insert a DVD disc into the DVD
 player and press the PLAY ▶ button on the DVD Player.

Helpful Hint The description for the component video co tors may differ depending on the DVD play accessory digital source equipment used (fo example, Y, Pb, Pr, Y, B-Y, R-Y, Y, Cr, Cb). Although abbreviations and terms may vary letters *b* and *r* stand for the blue and red col component signal connectors, and Y indicates luminance signal. Refer to your DVD or digit accessory owner's manual for definitions and connection details.

THE INSTALL MENU CONTROLS

Your TV has several controls to help with the first-time setup. These controls are found within the INSTALL onscreen sub menu. LANGUAGE CONTROL - For our Spanish and French speaking TV owners an onscreen LANGUAGE Control is present. This control can set the TV's onscreen menu to be shown in either English, Spanish, or French

French. 2 TUNER MODE CONTROL -This control changes the TV's sig-nal input to either ANTENNA, CABLE, or AUTO mode. In the AUTO mode, when the AUTO PROGRAM feature is activated, the TV will automatically choose the correct mode.

3 AUTOPROGRAM CONTROL -Your TV can automatically set itself for local area (or Cable TV) channels. This makes it easy for you to select only the TV stations in you area when the CHANNEL (+), (-)

buttons are pressed. Make sure the intenna or cable signal connection has been completed before AUTO PROGRAM is activated

Allows you to ADD or DELETE spe cific channels to the TV's memory.


pause for a second or two before changing to the chosen channel.

17 - SLEEP Button - Press the Sleep button to set the TV to automatically turn itself off after a set period of time. Press repeatedly to select 15, 30, 45, 60, 90, 120, 180, or 240 mir 9 - CC Button - Press to activate the Closed Captioning options. Repeatedly pressing the CC button will scroll the options available on

18 - NOTE: This button is dedicated to TIMER features within certain TV models. This TV does not contain these TIMER fea-tures, therefore the button will have no func-tionality when pressed. 10 - MENU Button - Press to display the on-screen menu. Also can be used to back out of the on-screen menu until it disappears from the TV's screen.

he TV screen.

# 089 -00-(17)--(18)

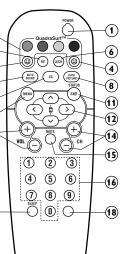



You can also just wait a few seconds after you finish the feature adjustment and the menu will disappear from the screen automatical-







5

 














Cable/Cable Box Connectio

 

Back of TV

 





### Channel Edit 🔺 Program No. ✓ Skipped or Off

### 2 CABLE BOX CONNECTIONS

If you cable signal uses a cable box or decoder, follow the easy steps below to complete the comparison

Cable Box (w/RF In/Outputs)

- **1** Connect the Cable Company supplied cable to the signal IN(put) plug on the back of the Cable Box.
- 2 Using a separate round coaxial cable connect one end to the OUT(put) (TO TV) plug on the back of the Cable Box.
- **3** Connect the other end of the round coaxial cable to the  $75\Omega$  input on the back of the television. Screw it down finger tight.

NOTE: Set the OUTPUT CHANNEL SWITCH on the back of the cable box to CH 3 or 4. Tune the TV to the same char nel and change channels at the cable box

 
for better sound reproduction.

AUDIO SYSTEM CONNECTION:

to a normal listening level.

not the television

Cable Signal I



### 8 MONITOR OUT(PUT) CONNECTION


 $T_{are great for recording with a VCR or}^{he Audio/Video (Monitor) Output jacks}$ Back of TV nnect an external audio systen



### 14 THE PICTURE MENU CONTROLS

 $\overline{T}^{o\ adjust\ your\ TV\ picture\ controls,}$ select a channel and use the Picture Menu Controls listed below:

- BRIGHTNESS CONTROL -Press the CURSOR RIGHT > or LEET but of the picture are as bright as you pr
- 2 COLOR CONTROL Press the CURSOR RIGHT > or LEFT < buttons to add or eliminate color.
- **3 PICTURE CONTROL** CUR-SOR RIGHT > or LEFT < but tons until lightest parts of the picture show good detail.
- 4 SHARPNESS CONTROL Press the CURSOR RIGHT > or LEFT > buttons to improve detail in the
- 5 TINT CONTROL Press the CURSOR RIGHT < or LEFT > buttons to obtain natural skin tones.
- 6 COLOR TEMP CONTROL -Press the CURSOR RIGHT > or LEFT < buttons to select NOR-MAL, COOL, or WARM picture pref erences. (NORMAL will keep the whites, white; COOL will make the whites, bluish; and WARM will make the whites, reddish.)
- 7 CONTRAST + CONTROL-Tress the CURSOR RIGHT > or LEFT < Automs to toggie the con-trol On or OFF. The Contrast + con-trol heips to "Shapen" the picture quality. The black portions of the pic-ture become icher in darkness and the whites become brighter.

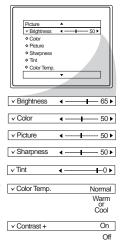

5 THE SOUN	d Menu Controls
To adjust your TV sound, select and use the Sound Menu Controls listed below:	
TREBLE: Press the CURSOR         LEFT< or RIGHT> buttons to       adjust the control. The control will         enhance the high frequency sounds.       BASS: Press the CURSOR LEFT          or RIGHT> buttons to adjust	Main         ▲           ● Picture         Treble           ✓ Sound         ● Bass           ● Features         Balance           ● Install         AVL
the control. The control will enhance the low frequency sounds.	More
BALANCE: Press the CURSOR LEFT< or RIGHT> buttons to adjust the level of sound coming from the left and right speakers.	
AVL: (Auto Volume Leveler) Press the CURSOR LEFT < or RIGHT > buttons to turn the control On or Off. When On, AVL will level out the sound being heard when sudden changes in volume occur during com- mercial breaks or channel changes.	✓ Treble         4
INCR. SURROUND: Press the CURSOR LEFT < or RIGHT >	√AVL On
buttons to select between Incr. Surround or Stereo settings (If	or Off
Stereo), or select Spatial or Mono (If Mono).	✓ Incr. Surround Spatial
ULTRA BASS: Press the CURSOR LEFT< or RIGHT> buttons to	or Mono
turn Ultra Bass On or Off. Ultra Bass will enhance the low frequency sound	v Incr. Surround Incr. Surround
SOUND: Press the CURSOR	
LEFT < or RIGHT > buttons to select between Stereo or Mono set-	✓ Ultra Bass On or Off
tings. Note: If Stereo is not present on a selected show and the TV is placed	or Off
in the Stereo mode, the sound coming from the TV will remain in the Mono	✓ Sound Mono
mode.	or Stereo

AutoLock 

Block Channel

Setup Code
 Clear All

Movie Rating 🔺

3000

03

000 000

4

♦ R ♦ NC-17

٧G

PG PG-13

I

The AutoLock™ feature can block

Industry ratings. Once you've entered your access coa and the AutoLock™ features are dis-

Proce the CURSOR UP A or

Press the CURSOR RIGHT >

3 Press the CURSOR UP ∧ or DOWN ∨ button to highlight any

4 Use the CURSOR RIGHT > but-ton on the remote to turn the rating

option ON or OFF.

automatically be blocked.)

access code.

When a rating level is chosen to be

blocked, any higher level rating will also

be blocked from viewing. (i.e.: If "R" is

NOTE: If you ever forget your code, th

0, 7, 1, 1 code is the factory default and can be used to enter and create a new

selected to be blocked. NC-17 and X will

button to display the MOVIE RATING options (G, PG, PG-13, R, NC17, or X).

of the Movie Rating options. When


highlighted, all these options can be turned ON (which will allow block-

ag) or OFF (which will allow view

**DOWN** button to highlight the words MOVIE RATING.

played on the screen.


uning based on the Movi

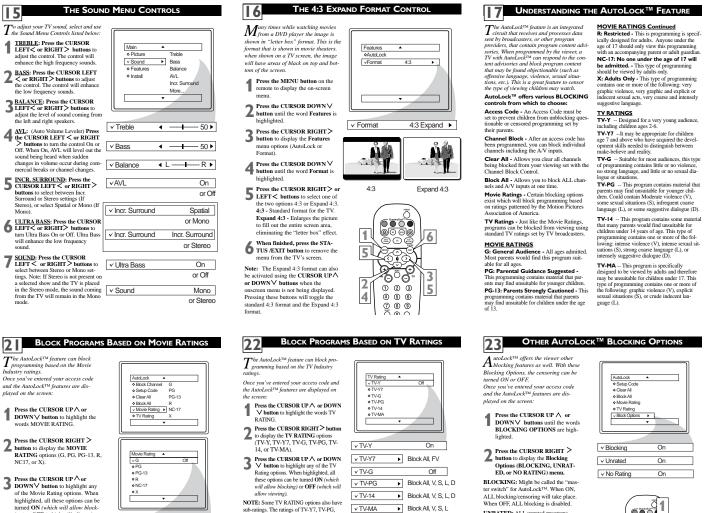

UNRATED: ALL unrated programs based on the Movie Ratings or Parenta (TV) Guidelines can be blocked if thi feature is set to ON and the BLOCKING feature is set to OFF. NO RATING: ALL programming with O content advisory data can be blocked if set to ON and the BLOCKING feature

3 Press the CURSOR UP ∧ or DOWN∨ buttons to highlight

When highlighted, each feature can be turned ON or OFF using the CURSOR RIGHT > or LEFT < outtons on the remot

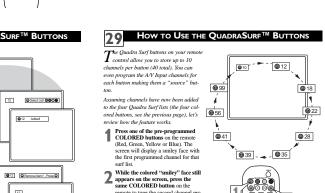

remote to tune the second channel pro-grammed for that specific surf list. 3 Repeatedly pressing the same COL-ORED button while the "smiley" face appears will tune all the pro-grammed channels. Pressing the COL-ORED button again will return you to ORED button again will ret the first channel in the list.

If the "smiley" face disappears from the creen and the same COLORED button is ressed, the surf channels will be displayed rting with the FIRST programmed chan-

nel again. 4 Repeat steps 1-3 for the other three COLORED buttons (Surf lists) if

```
5 Any time the "smiley race appears
with the channel number, pressing
the "frownie" face button will allow
             you to remove it from the list (see the previous page for more details).
```

### CREATING AN ACCESS CODE FOR AUTOLOCK<sup>™</sup> Over the next few panels you'll learn how to block channels and get a bet ter understanding of the rating terms for MOVIE RATINGS Continued R: Restricted - This is programming is spe-ically designed for adults. Anyone under the age of 17 should only view this programmin Main Picture AutoLook ◆Sound Fe iin progran

First, let's start by learning how to set a Press the MENU button on the remote to display the on-screen menu Press te CURSOR UP∧or DOWN ↓ button until the word FEA-TURES is highlighted. Features VAddLock Access Code Format

the numbered buttons

CONFIRM the code you just entered. Enter your new code again. "XXXX" will appear when ou enter your new code and then display the AutoLock™ menu

Proceed to the next panel to learn more

Closed Captioning (CC) allows you to read the voice content of television

programs on the TV screen. Designed to help the hearing impaired, this feature uses on-screen "text boxes" to show dia-

Press the CC button on the remote to display the current Closed Caption

centre le plus près de chez vous.

Veuillez contacter philips á:

Indicates In-Home/Car

Press the CC button repeatedly to choose from the four Closed Caption options (CC Off, CC1, CC2, CC Mute).

m is in progress

ations while the TV

-		A Jier you
	Features  VARELOCK Format	Abeen se now ready i AN Inputs
J		sor. Once you'v and the Aut
	Features         ▲           v AutiLock         Access Code           ◆ Format         XXXX	played on the Press
J	لص	BLOC lighted
	Feebuns  Valdblock New Code Format	2 Press buttor for tha
J		blocke
	/AmE.od. ▲           Biol. Chemel           Zisch (Chemel           Zisch (Chemel           Cher Al           Bion. Al           Mono Rahng           ▼17. Raing	3 Press select block. new ch
-	-	/ When

NOTE: If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new

USING THE SLEEPTIMER CONTROL

Press the SLEEP button on the remote control and the SLEEP times display will apprear on the scree

NOTE: An on-screen count down will appear during the last minute before the TV shuts itself off. If any button is pressed during the last minute of the countdown, the Sleeptimer setting will be cancelled

Quality service is as close as your telephone! Simply look over the list below for the number of a Factory Service Center near you. Your product will receive efficient and expedient carry-in, mail-in, or in-home service, and you will receive frace or mind, knowing your product is being given the expert attention of Philips' Factory


31

COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE Présentant à un centre de service philips, plus de 600 centres de réception de produits à néparer à Narves Le pars: contacter le centre de service aux consommatres le plus prodie pour savoir l'em-PLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL CÓMO OBTENER UN SERVICIO OPORTUNIO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO Través de un centra o Philipe de Servicio. Mas de uns sitios por todo el pais para la recepcion de pou Ductos necestingos de Reparadones: comunicarse com el centro de Servicio de Farrica Mas de Serca Para estos lugares dentro de un radio de 80 a 120 km (50 a 75 millas) del centro de Servicio local.

ATLANTA Philips Factory Service 550 Franklin Road., Suite F Marietta, GA 30067 800-273-1501	CLEVELAND Philips Factory Service 950 Keynote Circle Brooklyn Heights, OH 44131 800-331-7037
TAMPA Philips Factory Service 1911 US Highway 301 North, Suite 100 Tampa, FL 33619 800-442-2027	DETROIT Philips Factory Service 25173 Dequindre Madison Heights, MI 48071 800-438-1398
SAN FRANCISCO Philips Factory Service 681 East Brokaw Rd. San Jose, CA 95112 800-300-9013	DALLAS Philips Factory Service 415 N. Main Street, #107 Euless, TX 76040 800-952-3254
HOUSTON Philips Factory Service 1110 N. Post Oak Rd., Suite 100 Houston TX 77055	CHICAGO Philips Factory Service 1279 W. Hamilton Pkwy.

HOU 800-952-3254

Itasca, IL 60143 800-531-2922

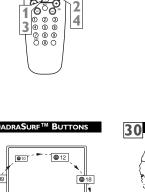

22

28 839 - 🚽 - 835

5 Remove Item? - Press

Any time the "smiley" face appea

is set to OFF 6 the desired feature


# BlockAll R Movie Rating → NC-17 TV Rating X • TV-14, TV-MA can be customized to block V On

(violence), FV (fantasy violence), S (sexual situations), L (coarse language), or D (suggestive dialogue).

4 Press the CURSOR RIGHT > button on the remote to turn the TV-Y or TV-G ON or OFF. Or, press the CUR-SOR RIGHT> bu nus for the TV-Y7. TV-PG. TV-14 or TV-MA rating 5 If the TV-Y7, TV-PG, TV-14 or TV-MA sub-menu is accessed sub-menu is accessed, press the CUR-SOR UP∧or CURSOR DOWN∨ button to select one of the options (Block All, V, S, L, D, or FV).

Press the CURSOR RIGHT> button on the rest of tton on the remote to turn the

nels from Surf lists.

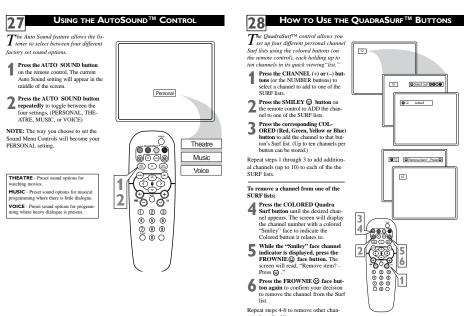

VTV-MA Block All, V, S, L

5000 000

12

44

12





AutoLock Setup Code


Clear All
 Block All


◆ TV Rating


### ✓ Blocking On ✓ Unrated On ✓ No Rating On

 

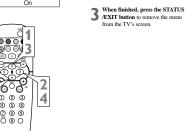

 

 

 

### TV-Y7 --It may be appropriate for children age 7 and above who have acquired the devel opment skills needed to distinguish between make-believe and reality. TV-G -- Suitable for most audiences, this tyr ogramming contains little or no violence, rong language, and little or no sexual dialogue or situations. **TV-PG** — This program contains material the narrents may find unsuitable for younger chilparents may find unsuitable for younger chil-dren. Could contain Moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D) TV-14 -- This program contains some material that many parents would find unsuitable for children under 14 years of age. This type of programming contains one or more of the fol-lowing: intense violence (V), intense sexual sit-

uations (S), strong coarse language (L), or intensely suggestive dialogue (D). TV-MA -- This program is specifically designed to be viewed by adults and th may be unsuitable for children under 17. Thi type of programming contains one or more or the following: graphic violence (V), explicit sexual situations (S), or crude indecent lan-

### 3 Press the CURSOR RIGHT> but-ton to display the FEATURES menu -V-AutoLock Access Code 4 Press the CURSOR UP ∧ or DOWN ∨ button until the words AUTOLOCK<sup>™</sup> are highlighted. 5 Press the CURSOR RIGHT > but-ton. The screen will read, "ACCESS CODE ----." 6 Using the NUMBERED buttons, enter 0, 7, 1, 1. "XXXX" appears on the Access Code screen as you press

"INCORRECT CODE" will appear on the screen, and you will need to enter 0, 7, 1, 1 again. The screen will ask you to enter a "New Code." Enter a "new" 4 digit code using the NUMBERED bu tons. The screen will then ask you to

Features 

V AutoLook 
Confirm Code

Format 
2000 200 

24 Using the Closed Caption Control

CC Off

900 100

000 000

Tampa/W Plorida \* Pt. Nyers/SW Florid

1-800-363-7278 (English or Spanish speaking)

1-800-661-6162 (Francophone) 1-800-363-7278 (Anglais ou Espagnol)

1-800-363-7278 (Inglés o Español)

FACTORY SERVICE LOCATIONS

NOTE: If you reside in one of our Philips Factory Service Branch areas (see directory or

NOTE, in you reside in one or our Finings Factory service Branch areas (see unectory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

NOTA: Si vous résidez dans une des régions desservies par une succursale de service aprè: vonta di fabricant Phillips (voir liste ci-dessous), vous pourrez contacter la branche de serv

reme uu nauricami rimiips (voir insie ci-dessous), vous pourrez contacter la branche de serv ce après vente la plus près de chez vous pour obtenir un service après vente rapide et effi-ace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour béné-cier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le soutra le plue prés de obravient.

NOTA: Si Ud, reside en una de nuestras zonas para sucursales Philips de servicio al de fábri

NUIK-SI UD, reside ein una de inuestraz zonatas para succarsate Frittigio de servicio na de tator-ca (ver directoria más abajo). Udo puede comunicarse con la socursat de servicio más cer-cana para doitar de marcina para entre la doita da la garantía. Udo dele recursione entre infigures cargos para entre la garantia entre entre

In Canada: How you can obtain efficient and expedient carry-in, mail-in, or in-home service

Au Canada: Comment obtenir le service après-vente pour les produits apportés ou envoyés

En el Canadá: Cómo recibir servicio efficiente para su producto, en persona, por correo o a

o. Favor de comunicarse con Philips al: 1-800-661-6162 (francófono

for your product. Please contact Philips at: 1-800-661-6162 (French speaking)

par la poste à notre centre de service ou le service à domicile

CC Off

CC1

CC2

CC Mute

ur personal access code has set (see previous page), you an to select the channels or the s you want to block out or cen ed your acces e entereu your .... toLock<sup>TM</sup> features are disthe screen: the CURSOR UP∧or N∨ buttons until the word CK CHANNELS are highthe CURSOR RIGHT >

 
to turn blocking ON or OFF t channel. When ON is d the channel will be the CH + or CH - button to Repeat step 9 to block the

finished, press the STA-4 TUS/EXIT button to remove the nenu from the screen.


access code.


25 Your TV can be set to automatically

Press theSLEEP button repeatedly to pick the amount of time (15, 30, 45, 60, 90, 120, 180, or 240 minutes) before the TV will turn itself off.



  BOW TO BLOCK CHANNELS WITH AUTOLOCK<sup>™</sup>





### 20 BLOCKING OR CLEARING ALL CHANNELS AT THE SAME TIME

A fter blocking specific channels there may come a time when you want to block or clear all the channels at the same time. Once you've entered your access cod and the AutoLock™ features are displayed on the screen:

Press the CURSOR UP∧or DOWN∨ buttons to select eit CLEAR ALL or BLOCK ALL.

2 If CLEAR ALL is selected, press the CURSOR RIGHT > button to clear all blocked channels. All chan nels will be viewable If BLOCK ALL is selected, pres

the CURSOR RIGHT > button to turn the control ON or OFF. When ON is selected, ALL available char ale will be blocked from vie

 
3 When finished, press the STA-TUS/EXIT button to remove the nenu from the screen

OTE: If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

AutoLock Setup Coo
 Clear All
 Block All Clear? Movie Rating
 TV Rating ✓ Clear All Cleared

Setup Code     Clear All     VBlock All     Off     Movie Rating     TV Rating	Block Channel		
Block All Off     Movie Rating	Setup Code		
<ul> <li>Movie Rating</li> </ul>		0"	
		Off	
TV Rating			
	<ul> <li>TV Rating</li> </ul>		

✓ Block All On



### 26 Using the AutoPicture<sup>™</sup> Control

Whether you're watching a movie or a sporting event, your TV has auto matic video control settings matched for your current program source or conten

 
Press the AUTO PICTURE button on the remote control. The current Auto Picture setting will be displayed on the screen.

2 Press the AUTO PICTURE button repeatedly to select either PER-SONAL, MOVIES, SPORTS, WEAK SIGNAL, or MULTIMEDIA

NOTE: The way you choose to set the

Picture Menu Controls will become your PERSONAL setting.

MOVIES - Preset picture options for watching SPORTS - Preset picture options for watch weak signal - Preset picture options for watching programs where the reception is not MULTIMEDIA - Preset picture option use with video gaming.



### FACTORY SERVICE LOCATIONS

### KNOXVILLE

Philips Factory Service One Philips Drive Knoxville, TN 37914 800-821-1767

PHILADELPHIA Philips Factory Servic 352 Dunks Ferry Rd. Bensalem, PA 19020 800-847-9320

LOS ANGELES

Philips Factory Service 20930 Bonita, Ste. V Carson, CA 90746 800-300-9013

### COLOR TELEVISION - 90 Days Free Labor, One Year Free Replacement of Parts (Two Years Free Replacement on Color Picture Tube) Must be carried in for service.

WHO IS COVERED tou must have proof of purchase service. A sales receipt or other that you purchased the product i of purchase

32

of purchase, takes one product is charactered produ-of purchase. The constraints of the product of the product. For 90 years of the product of the product of the product. For 90 years of the product of the products and parts will be repaired or replaced free, and labor is free. From 90 days to one years from the day of purchase, and parts labor charges. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the picture tabe, and for all labor darges. After two years from the day of purchase, and for all labor charges.

HAT IS EXCLUDED?

- rrver ID EACLUDED! jun warrang does not cover: labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of anterna sys-tems outside of the product. product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Bectronics Company.
- cause not within the control of r-mups Loo flectronics Company. reception problems caused by signal condit or cable or naterna systems outside the ur a product that requires modification or add ion to enable it to operate in any country than the country for which it was designed disctured, approved and/or autorized, or r of products damaged by these modification incidental or consequential diamager resulti consequential damages result duct. (Some states do not all ncidental or constant
- so the above exclusion may not apply to you This includes, but is not limited to, prerecord , whether copyrighted or not copyrig

### a product used for commercial or institutional WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries when the product is officially distributed by Philips Consumer Electronics Company. In countries wh

ion will attempt to provide service (although the may be a delay if the appropriate spare parts an actinical manual (s) are not readily available)

technical manual(s) are not readily available). **MAKE SURFYOU KEEP**. Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner' manual and keep both nearby. Also keep the origina box and packing material in case you need to return your product.

# Please check your owner's manual before re service. Adjustments of the controls discusse may save you a service call.

# TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS... Contact a Philps factory service center (see enclosed listy or authorized service center to arrange repair.

(in USA, Puerto Rico and US.Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you,)

Markanty Coverage In CanADa... Note: Product Warranty coverage may vary betwo countries where product is distributed by Philips Consumer Bietronies Company In order to rece full and specific warranty details for products sold and serviced in canada, please contact Philips at:

1-800-661-6162 (French Speaking) 1-800-531-0039 (English and Spanish Speaking

REMEMBER... Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

This warranty gives you specific legal rights. You may hav other rights which vary from state/province to state/provin Philips, P.O. Box 520890

(402) 536-4171

### Philips Consumer Electronics Company does not or tribute the product, the local Philips service organi rion will attempt to provide service (although the

LIMITED WARRANTY