

 


CONSUMER ELECTRONICS

PHILIPS



0 0 0 0 0 0 0 0 0 0 0 6 7 6

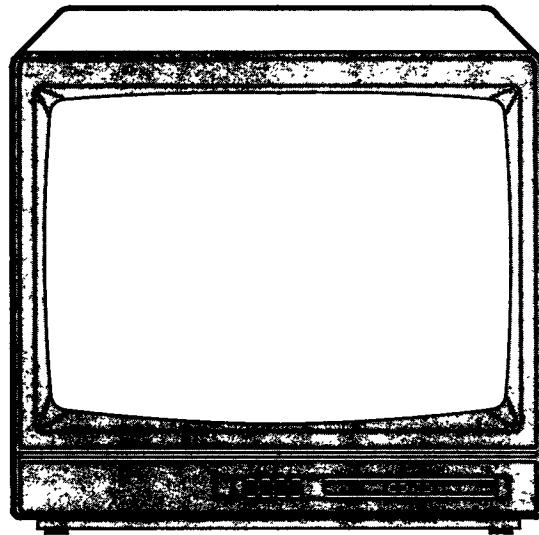

20GR1250
21GR1251

COLOUR TELEVISION

FARBFERNSEHER

TÉLÉVISEUR COULEUR

KLEURENTELEVISIE

TELEVISORE A COLORI

TELEVISOR EN COLOR

TELEVISÃO A CORES


FARVEFJERNSYN





FARGE-TV

FÄRG-TV

VÄRITELEVISIO

Ⓜ	English	Operating instructions	Page 1 - 6
Ⓝ	Deutsch	Bedienungsanleitung	Seite 7 - 12
Ⓕ	Français	Mode d'emploi	Page 13 - 18
Ⓝ	Nederlands	Gebruiksaanwijzing	Pagina 19 - 24
Ⓜ	Italiano	Istruzioni per l'uso	Pagina 25 - 30
Ⓔ	Español	Instrucciones de manejo	Página 31 - 36
Ⓟ	Português	Modo de emprego	Página 37 - 42
Ⓝ	Dansk	Betjeningsvejledning	Side 43 - 48
Ⓝ	Norsk	Bruksanvisning	Side 49 - 54
Ⓜ	Svenska	Bruksanvisning	Sidan 55 - 60
Ⓜ	Suomi	Käyttöohje	Sivu 61 - 66

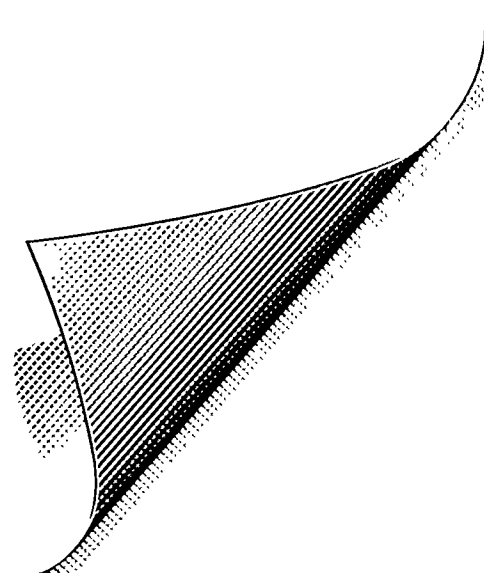 

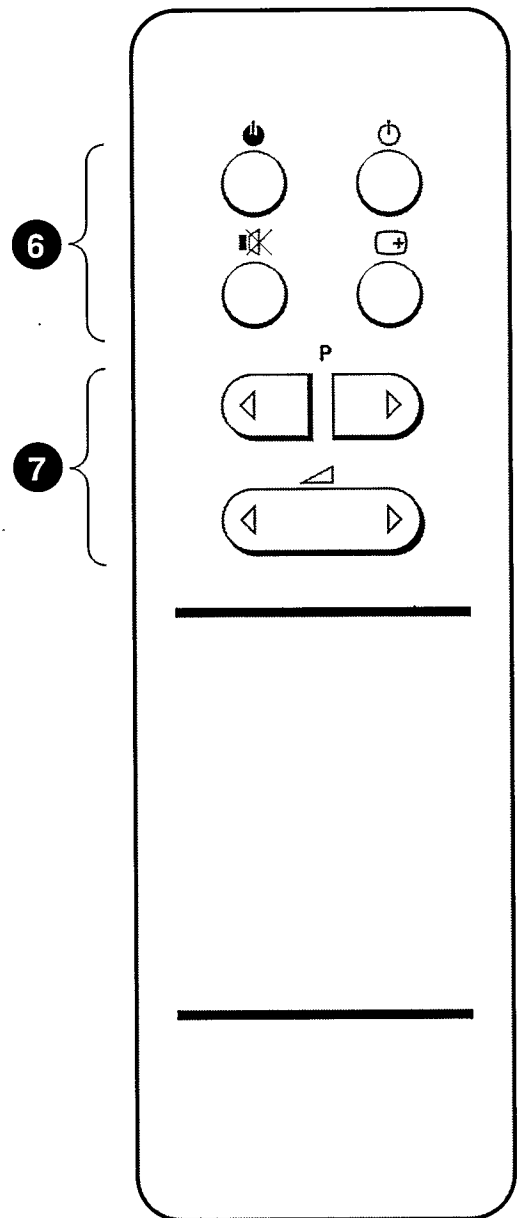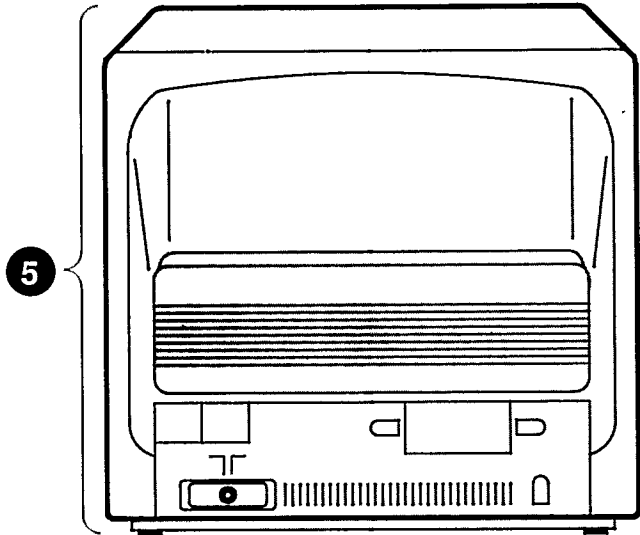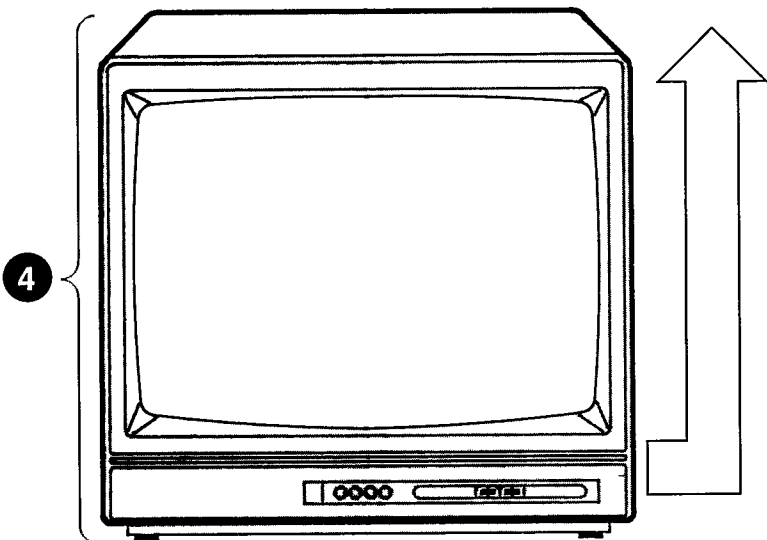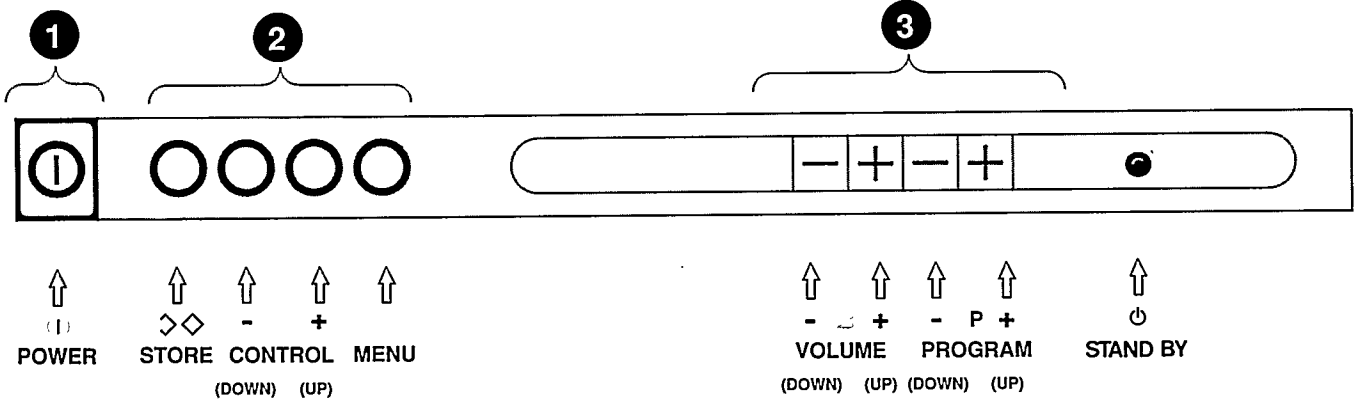    


Write in pencil your TV station (or device) selections here:

No. TV station/device	No. TV station/device
0	20
1	21
2	22
3	23
4	24
5	25
6	26
7	27
8	28
9	29
10	30
11	31
12	32
13	33
14	34
15	35
16	36
17	37
18	38
19	39

Installing and adjusting the TV

 
Page 2 to 3

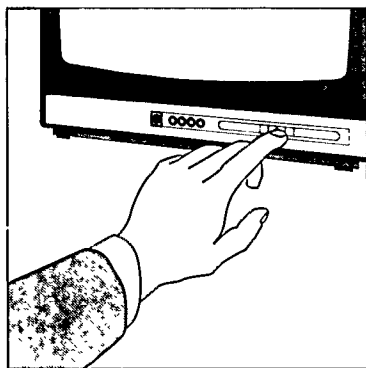

Introduction
 To install the TV
 To connect the TV
 To switch the TV on and off
 To insert batteries in the remote control handset
 To test the remote control handset
 To store TV stations on program numbers

Operating the TV

 
Page 3 to 5

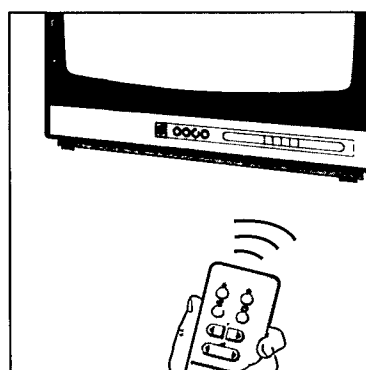

To select TV stations using program numbers
 To change and store the picture and sound settings
 To switch off the sound
 To select stand-by mode
 To select the 'sleep-timer'
 To display information

Additional features

 
Page 5 to 6

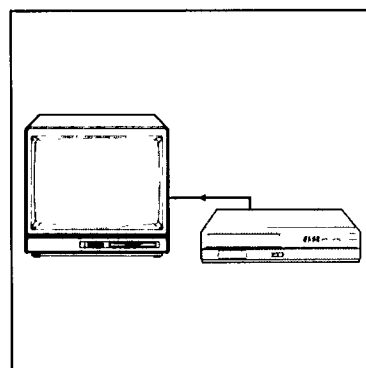

To connect a video recorder
 To use the 'store lock'

General information

 Page 6

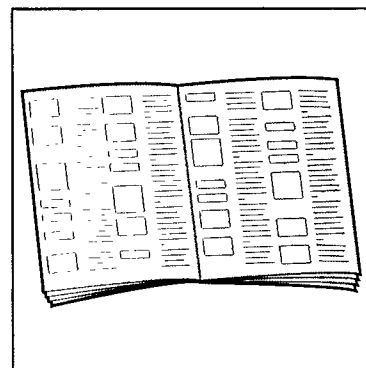

To clean the TV screen
 Fault indication

Introduction

 
Congratulations on purchasing your new colour TV. It has been designed and tested to the highest standards and will provide good quality pictures and sound for your enjoyment.

If you follow these operating instructions you will quickly learn how to adjust and operate all the functions of your new TV; but always read and perform the instructions in the sequence shown.

TV - Indicates actions that are performed using the TV buttons or sockets.



Handset - Indicates actions that are performed using the remote control handset.

Installing the TV

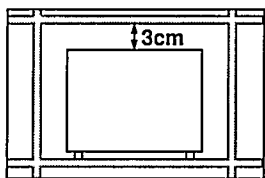


- TV** To install the TV
- Remove any packaging from the TV.
 - Find the remote control handset within the packaging.
 - Place the TV on a solid base (e.g. a TV/video cabinet).
 - Leave at least 3 cm around each side of the TV for ventilation.

  - TV** To connect the TV
- IMPORTANT:** The TV is only suitable for a mains voltage of 220/240 V ~, 50 Hz (Consult your dealer if the mains supply is different).
- Connect the TV to the mains supply socket.

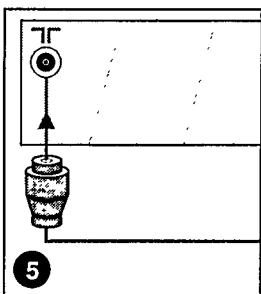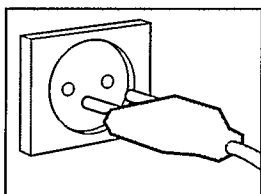


- Connect the aerial plug to the **T** socket on the back of the TV.

 
- TV** To switch the TV on
- Press the **⓪** POWER button on the front of the TV.

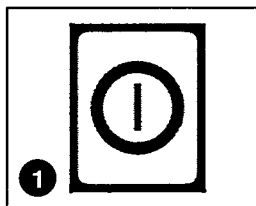

 
- If the RED lamp below the TVscreen is on, then you must press the **-** or **+** PROGRAM button. The TV will then switch on (for further information refer to the section 'To select stand-by mode').

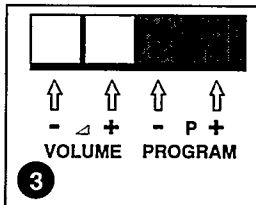

 
- TV** To switch the TV off
- Press the **⓪** POWER button on the front of the TV. (if you want to switch off the TV temporarily refer to the section 'To select stand-by mode').

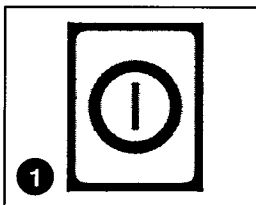

 
- Handset** To insert batteries in the remote control handset
- Remove the battery cover on the back of the remote control handset.
 - Insert the two batteries supplied (type LR03 1.5V).
 - Replace the battery cover.

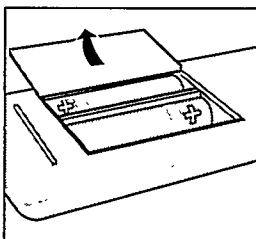

 - Handset** To test the remote control handset
- Switch on the TV.
 - Hold the remote control handset and direct it towards the lamp below the screen.

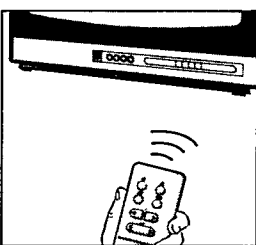

 
- Press the **◀ P** or **▶ P** program button. The lamp will flash 'RED' each time a button is pressed.

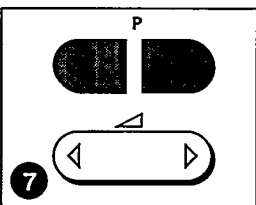


Adjusting the TV

The control buttons you need to store TV stations on program numbers are on the front of the TV.

 
TV To store TV stations on program numbers
(Upto 40 TV stations can be stored on program numbers using the following method.)

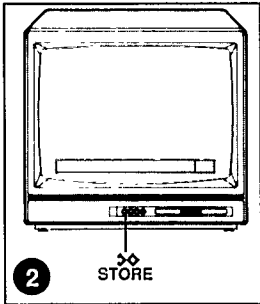

 
1. Press the $\diamond\diamond$ STORE button, so that the moving bar and other information is displayed on the screen.

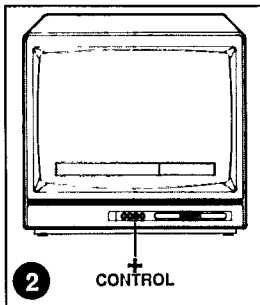

 2. Press the + CONTROL button so that the TV automatically searches until a TV station is found and displayed on the screen. If you want to continue searching for a specific TV station then press the + CONTROL button again.

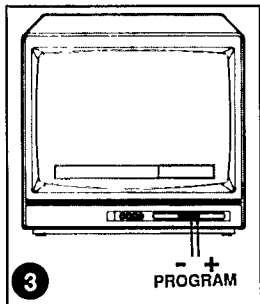

 3. Select the required program number (0 to 39) by pressing the - or + PROGRAM button. The selected program number is displayed on the screen.

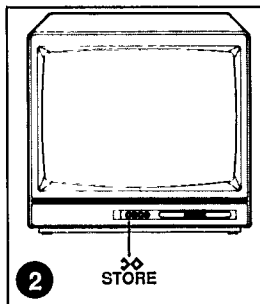

4. Press the $\diamond\diamond$ STORE button to store this selection. The moving bar and other information is now removed from the screen.

 
Repeat steps 1 to 4 until all the TV stations you require have been stored on program numbers.

note: You can write your TV station selections in the table provided in the inside cover.

Operating the TV


You can now operate your TV either using the remote control handset or directly using the TV buttons.

- Switch on the TV by pressing the \odot POWER button on the front of the TV. The TV station stored on program number 1 is automatically selected.

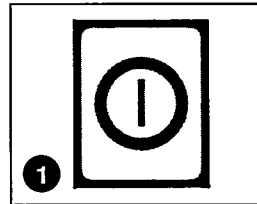


TV To select TV stations using the remote control handset

 - Press the \triangleright P button to select a TV station stored on a higher program number.
- Press the \triangleleft P button to select a TV station stored on a lower program number.

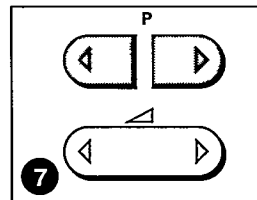

TV To select TV stations using the TV buttons

 
- Press the + PROGRAM button to select a TV station stored on a higher program number.
- Press the - PROGRAM button to select a TV station stored on a lower program number.

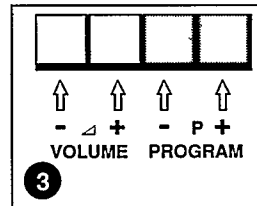

TV To change and store the picture and sound settings


(When the TV is first switched on the picture and sound settings are at certain values; initially these values have been stored by the factory, but you can store your own 'personal preferences' using the 'On-Screen-Menu'.)

 - Press the MENU button to select the first item in the menu.

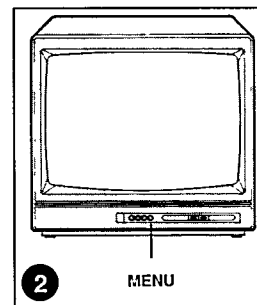


The brightness:

 - Press the + CONTROL button to increase the brightness.
- Press the - CONTROL button to decrease the brightness.

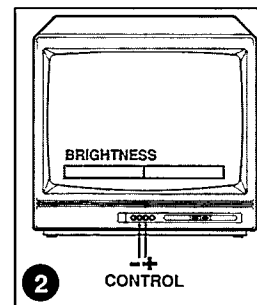

Operating the TV

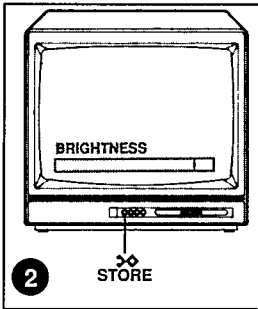 


- If you want to store this setting press the ◊◊ STORE button.

- Press the MENU button to select the next item in the menu.

The contrast:

 
- Press the + CONTROL button to increase the contrast.
- Press the - CONTROL button to decrease the contrast.
- If you want to store this setting press the ◊◊ STORE button.

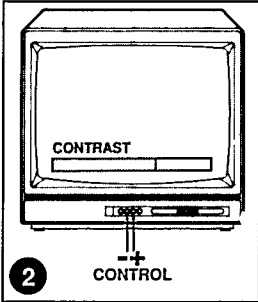

- Press the MENU button to select the next item in the menu.

The colour:

 
- Press the + CONTROL button to increase the colour intensity.
- Press the - CONTROL button to decrease the colour intensity.
- If you want to store this setting press the ◊◊ STORE button.

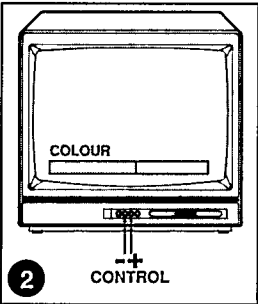

- Press the MENU button to select the next item in the menu.


The volume:

 - Press the + CONTROL button to increase the volume.
- Press the - CONTROL button to decrease the volume.
- If you want to store this setting press the ◊◊ STORE button.

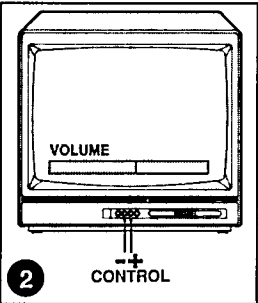

- Press the MENU button to quit the menu.

 note: If you want to quit the menu, for example after changing the contrast setting, you can either wait approximately 15 seconds, or continue to press the MENU button until the menu disappears from the screen.


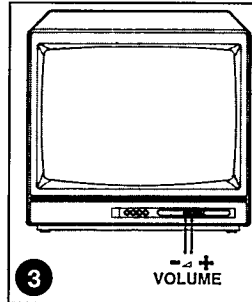


TV or **RF** To change the volume
The volume can be changed temporarily outside the menu using the - or + VOLUME buttons on the TV, or the \triangleleft button on the remote control handset.

- Press the + VOLUME button to increase the volume.
- Press the - VOLUME button to decrease the volume.

or

  - Press the \triangleright side of the \triangleleft button to increase the volume.
- Press the \triangleleft side of the \triangleleft button to decrease the volume.

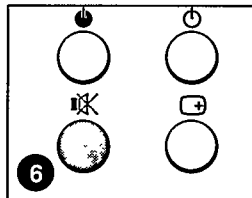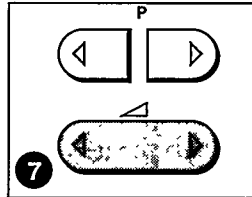

RF To switch off the sound

- Press the MUTE button to switch off ('mute') the sound.
- MUTE is displayed on the screen.
- Press the MUTE button again to switch the sound on.
- MUTE is removed from the screen.

 
RF To select stand-by mode
The TV can be put into stand-by mode in the following ways:

Directly


- Press the POWER button. The RED lamp below the TV screen is then on, and the TV is put into stand-by mode.


Automatically

Approximately 10 minutes after a TV station stops broadcasting ('closedown') then the TV switches itself automatically to stand-by mode.

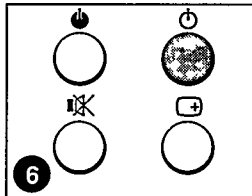

Operating the TV

 
 **To select the 'sleep-timer'**
(With this feature you can select a time period after which the TV switches to stand-by mode).

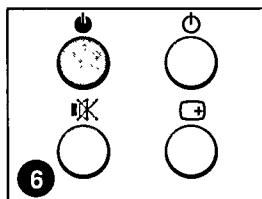

- Press the ● button until the required time period is displayed on the screen (the time period can be set in steps of 15 minutes starting from 90 minutes).


During the final minute of the selected time period, the seconds remaining begin to 'count down' on the screen informing you that the TV is going to switch to stand-by mode. At the end of this time period the TV switches to stand-by mode and the RED lamp below the screen is on.

   or  **To switch on the TV from stand-by mode**

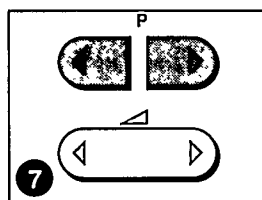


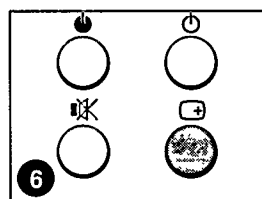 
- Press either the ◀ or ▶ P button on the remote control handset.



or,

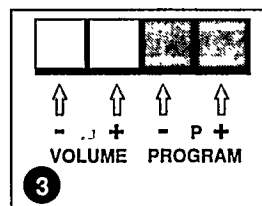


- Press the - or +PROGRAM button on the front of the TV. The RED lamp below the screen is then off.

  
 **To display information**
(The 'On-Screen-Display' allows you to see the program number on which a TV station is stored, and if the timer for stand-by mode is being used.)




 - Press the  button to display the information on the screen.
- Press the  button again to switch off the information display.


note: If you make changes to the volume after the  button has been selected then a moving bar is displayed which represents these changes as they are being made.

Additional features

  **To connect a video recorder**
(First you must refer to the operating manual supplied with your video recorder for connection details.)

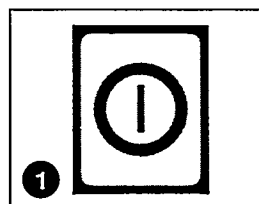

 - Switch off the TV before connecting the video recorder.

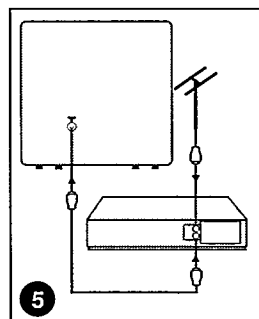


- Connect the TV aerial cable to the 7F input on the video recorder.
- Connect one side of the cable supplied with the video recorder to the TV output on the video recorder and the other side of the cable to the 7F input on the TV.


note: The 7F socket can also be used to connect other devices such as computers or TV games.

 **To store the video recorder signal on a program number**

 
- Switch on the TV, and the video recorder.



 
1. Insert a pre-recorded tape in the video recorder, and press the 'PLAY' button on the video recorder.

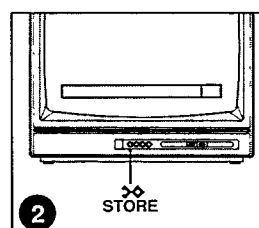

 
2. Press the  STORE button so that the moving bar and other information is displayed.

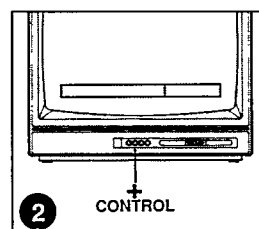

 3. Press the + CONTROL button so that the TV automatically searches for the video signal. If necessary press this button again until the video signal is found.

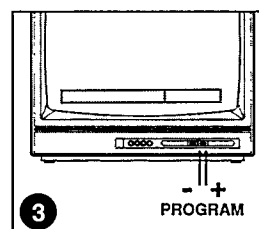

4. Select an available program number by pressing the - or +PROGRAM button on the TV.

 
5. Press the  STORE button to store the video signal on the selected program number.

6. Press the 'STOP' button on the video recorder.

Additional features

To select the program number for the video recorder signal

- Press the appropriate ◀ or ▶ P button (for the program number on which the video signal has been stored).

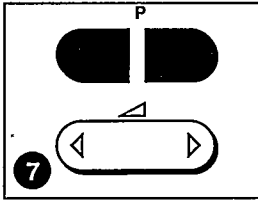

To use the 'store lock'

 
The store lock can be used:

- To prevent your TV station selections being accidentally lost from their program number.
- To prevent your stored sound and picture settings being changed.
- To limit the maximum volume setting on your TV.


To lock

- Select program number 38 using the - or + PROGRAM buttons.

- If you want to limit the maximum volume used on your TV then adjust the volume using the - or + VOLUME buttons.

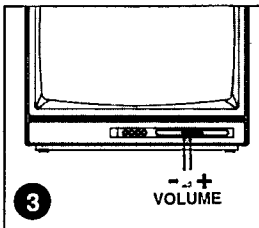

 
- Press the ◊◊ STORE button and the + PROGRAM button simultaneously to 'lock' your TV station selections.

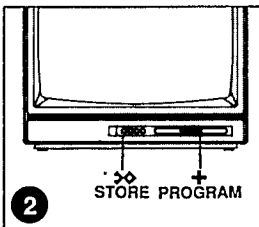

To unlock

- Select program number 38 using the - or + PROGRAM buttons.

 - Press the ◊◊ STORE button and the + CONTROL button simultaneously to 'unlock' your TV station selections.

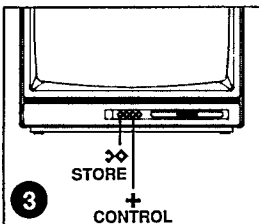

General information

To clean the TV screen

- It is possible to clean the TV screen using a slightly damp chamois leather. Never use aggressive cleaning agents.

Fault indication

 
IMPORTANT: Never attempt to repair a broken TV yourself; always consult a skilled TV service engineer.

If the TV does not give the desired picture or sound quality after switching on then check that:

- the aerial is connected properly.
- all controls and buttons are selected correctly.
- the selected TV station is no 'closed-down'.
- the sound is switched on (not 'muted').

Switch off the TV if:

- The RED lamp below the screen is flashing continuously.
- a bright white line is displayed across the screen.

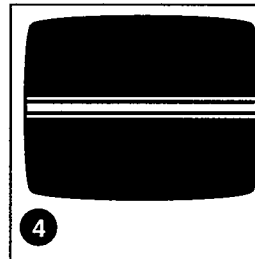

NOTES





- (GB) IDENTITY CARD** This card, together with the terms of guarantee (to be provided by your dealer), forms the full certificate of guarantee for this appliance
- (D) GERÄTE-KENNKARTE** Diese Karte ist, zusammen mit den Garantiebestimmungen, die Ihr Händler Ihnen aushandigt, Ihr Garantieschein für dieses Gerät.
- (F) CARTE D'IDENTIFICATION** Associée aux conditions de garantie (qui vous sont remises par le revendeur), cette carte constitue le certificat de garantie de cet appareil!
- (NL) IDENTIFICATIEKAART** Deze kaart vormt, samen met de garantievoorwaarden (welke door uw dealer verstrekt worden), het garantiebewijs voor dit apparaat
- (I) CARTA D'IDENTIFICAZIONE** Questa cartolina rappresenta insieme alle condizioni di garanzia (da consegnare dal vostro rivenditore) il documento di garanzia per questo apparecchio
- (E) TARJETA DE IDENTIFICACIÓN** La garantía de este aparato se compone de esta tarjeta y de las condiciones de garantía que le entregará su concesionario
- (P) CARTÃO DE IDENTIFICAÇÃO** Este cartão, em conjunto com as condições de garantia em vigor (explicadas pelo seu vendedor) constituem o certificado de garantia do seu aparelho
- (DK) I.D. KORT** Dette kort, udfyldt af Deres forhandler, er tilstrækkelig garantidokumentation for dette apparat
- (N) IDENTIFIKASJOKORT** Dette kort, sammen med garantibetingelsene (som De får av forhandleren) utgjør garantibeviset for dette apparat
- (S) IDENTIFIERINGS-KORT** I Sverige gäller särskilda konsumentbestämmelser. Var vanlig kontakta radiohandlaren för information
- (SF) TUNNISTUS-KORTTI** Tämän laitteen takuutodistus muodostuu tasta kortista ja takuuehdoista (jälleenmyyjä antaa mukaan)
- (GR) ΔΕΛΤΙΟ ΤΑΥΤΟΤΗΤΑΣ** Η κάρτα, μαζί με τους όρους εγγυήσεως (που θα προμηθευθείτε από το κατάστημα που αγοράσατε την συσκευή) αποτελούν το πλήρες πιστοποιητικό εγγυήσεως της συσκευής σας

PHILIPS



GRTAX

MADE IN ITALY



PHILIPS

VHF+S+UHF

220V~ 50Hz 45W

21GR1251/10B



779164

PM039137

