

# PHILIPS



# STV

25 PT 817 A

**MATCH**  **LINE**



 
# PHILIPS

**English**

Connect the two loudspeakers supplied to the connections on the back of the TV.  
The loudspeaker to the front left at L and the loudspeaker to the front right at R.  
Attach the loudspeakers to the TV set.

**Deutsch**

Die beiden mitgelieferten Lautsprecher an die Buchsen an der Rückseite des Fernsehgeräts anschließen. Den Lautsprecher links vom Gerät an L und den Lautsprecher rechts vom Gerät an R. Lautsprecher am Fernsehgerät befestigen.

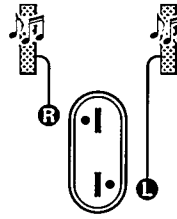


**Français**

Raccordez les deux haut-parleurs fournis aux prises prévues à l'arrière du téléviseur.  
Le haut-parleur avant gauche dans la prise L et le haut-parleur avant droit dans la prise R.  
Fixez les haut-parleurs au téléviseur.

**Nederlands**

 Sluit de 2 los meegeleverde luidsprekers aan op de aansluitingen achteraan op de TV.  
De luidspreker linksvoor op L en de luidspreker rechtsvoor op R.  
Bevestig de luidsprekers aan het TV-toestel

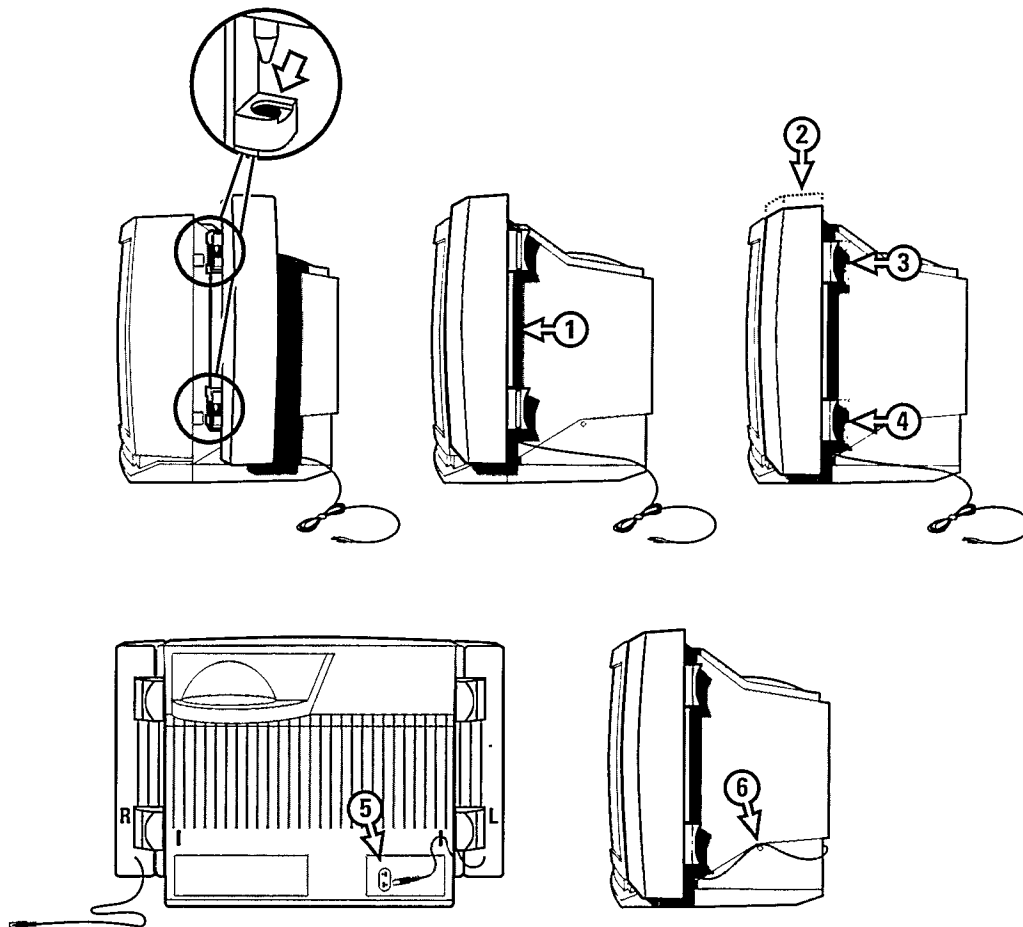

# About this handbook

This is a handbook to help you with the installation and operation of your new menu TV.

With a menu TV, menus can be called up on the screen. These menus provide information either about operations to be carried out or about functions you can select.

This handbook consists of two parts :

## Installation

This part helps you with installing your TV, selecting your menu language, locating and storing your TV channels and composing your favourite list of programme numbers. To do this, follow the directions of the **SYSTEM INSTALLATION** menu very closely. The installation menu is shown as it will appear on your screen.

SYSTEM INSTALLATION	
a	language
b	tv installation
select : a-b    menu    off	

TV INSTALLATION	
a	channel installation
b	preselection preferences
select : a-b    menu    off	

## Operation

After you have stored the TV channels, you can call them up on the screen. You can adjust the picture and sound via the main menu. The **MAIN MENU** is shown here as it will appear on the screen. Feel free to try out all the different possibilities of your TV. Use this part of the handbook to help you doing this.

MAIN MENU 1	
a	picture
b	sound
c	programme list
d	special features
e	>>>>
select : a-e    menu    off	

MAIN MENU 2	
a	recording source
b	system installation
c	>>>>
select : a-c    menu    off	

- This circle in front of a sentence indicates that you have to **do** something.
- ▷ This arrow in front of a sentence indicates the **result** of what you have done.

In the stripe under each menu you are told which keys you can press and how you can switch the menus off again.

## Contents

### Installation

Preparation .....	2
Switching TV on .....	4
Selecting your Menu language .....	4
Searching for and Storing TV channels .....	5


### Operation

 
Operation .....	10
Main Menu .....	11
Other Functions .....	16
Pip Picture in Picture .....	20
Teletext .....	22
Peripheral Equipment .....	25
Tips .....	32

# 1 Preparation

Place the TV on a solid surface.  
For ventilation, leave a space of at least 5 cm free all around the set.

This TV requires a mains voltage of 220 V - 240 V.


Insert the aerial plug tightly into the aerial socket  at the back of the TV with an aerial cable of good quality.  
You can improve the picture quality by using the suppressor-aerial-cable supplied.

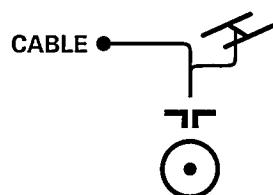


Insert the mains plug in the wall socket.

## Remote control

 This remote control has been developed to operate your TV.  
However some main functions of your audio and video equipment from our product programme are controllable as well.  
Rip off the label, written in your language from the label sheet, supplied with these instructions, click it onto the inside surface of the door of the remote control.

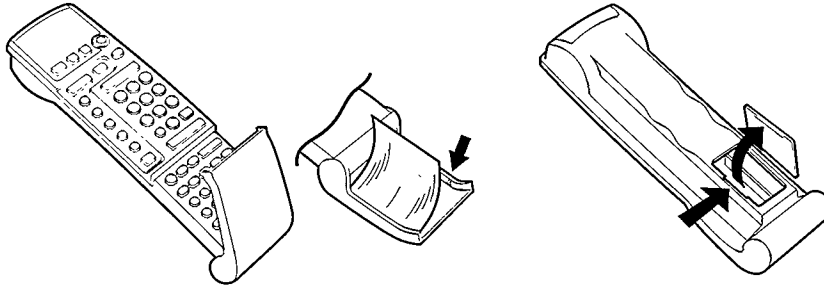


Remove the cover of the battery compartment on the back of the remote control.  
Insert the 2 batteries supplied (type R03-1,5V).  
Click the cover back into place.

- Press the  key.

You can now operate your TV with your remote control.

 Go on to 2.

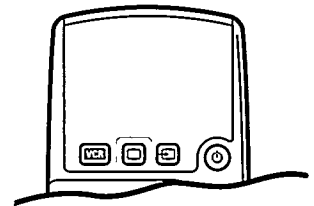

English

# 2 Switching TV on

- Press the switch ① on the front of your TV set.
- ▷ A green or red lamp lights up on the front of your TV set.

green ① .....

**Or** red ② .....

- ▷ The TV is switched on. The screen lights up.

The TV is switched on but the screen stays dark. Your TV is on standby.

- Press a digit key on the remote control.
- ▷ The green lamp lights up and blinks every time you press a key on the remote control.
- ▷ The TV switches on. The screen lights up.

Go on to 3.

Go on to 3.

# 3 Selecting your menu language

You can choose for yourself the language of the menus - the instructions and the various possible choices - which you call up on your screen.

- Open the control panel on the front of your TV.



- Press Install.

 
If the message CHILD LOCK ON appears, the child lock should be switched off. See Special Features, p. 14.

- ▷ The SYSTEM INSTALLATION menu appears on the screen.

SYSTEM INSTALLATION	
a	language
b	tv installation
select a-b menu off	

*It is also possible to enter the installation menu via the main menu. See Main Menu, p. 11.*

- Press the red key a on the remote control.
- ▷ The language menu appears on the screen.

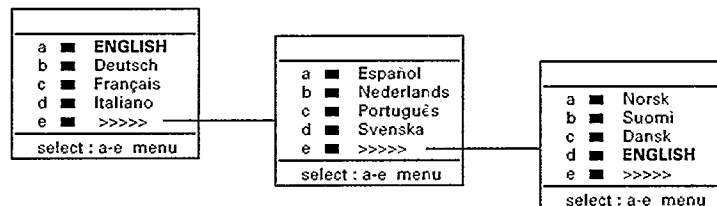

- Press the colour key of your language choice.
- Press the corresponding colour key for >>>> if the language you want does not appear on the first language menu.
- ▷ LANGUAGE STORED appears for a moment at the top of the menu. The language menu disappears and the SYSTEM INSTALLATION menu appears again. From this point on, all menus are presented in the language of your choice.

Go on to 4.

*Have you pressed the wrong key?  
Press the red key a for language again and make a new choice.*



## Searching for and storing TV channels

After you have switched on your TV and selected your menu language, you can search for and store your TV channels. Within the installation menu you yourself assign each of these TV channels a number and a name of your own choice, which are then used to call the channels up for viewing.

- Press the green key b.
- ▷ The TV INSTALLATION menu appears.

*Is the menu that appears not in your chosen language ?  
Press the MENU key and go back to 3. Select your menu language.*

- Press the red key a.
- ▷ The CHANNEL INSTALLATION menu appears.

<b>SYSTEM INSTALLATION</b>	
a	language
b	tv installation
select : a-b menu off	

<b>TV INSTALLATION</b>	
a	channel installation
b	preselection preferences
select : a-b menu off	

<b>CHANNEL INSTALLATION</b>		
step....	a	system
step....	b	search
step....	c	programme
step....	d	store
select : - + a-d 0-9 menu off		

Now follow very closely and step by step the instructions of the CHANNEL INSTALLATION menu. You must go through every step. Do this for every TV channel.

## step 3 Selecting the TV system

The television picture is not broadcast in the same way in all countries. We speak of different television systems (PAL, SECAM, NTSC,....) Now you must select the TV system yourself.

- Press the red key a.
  - ▷ The SELECTING THE SYSTEM menu appears..... **OR** ONLY ONE SYSTEM AVAILABLE appears .....
- 1 You have your own aerial.
- Press the colour key of the country or part of the world from where you want to select the TV channel.
  - ▷ The CHANNEL INSTALLATION menu now appears.
  - ▷ Your selection lights up.
- 2 You are connected to the cable system.
- Press the colour key of the country or part of the world where you now are located.
  - ▷ The CHANNEL INSTALLATION menu now appears.
  - ▷ Your selection lights up.

You have a set that can receive only one system.  
You do not need to make any selection.

Go on to step b.

Go on to step b.

*If you have pressed the wrong key, then repeat step a.*

# step

## Searching for a TV channel

 
This can be done in two different ways :  
Either automatic searching or else entering a frequency yourself.

**Automatic searching .....** **OR** **Entering a frequency yourself .....**

The TV itself searches for the channel.

- Press the green key b.
- ▷ **SEARCHING** appears and the TV is searching for a channel.
- ▷ The frequency increases until a channel is found.

Go on to step c if you want to store the channel that has been found.

- Press  under the door of the remote control to recognise which programme is being broadcast.
- ▷ The **CHANNEL INSTALLATION** menu disappears temporarily.

Do you want a different channel or is the reception poor ?

- Press the green key b again.

Is the reception still poor ? See Tips, p. 32.

If no TV channel is found, interrupt the automatic searching by pressing any digit key. Check if you have selected the correct TV system or if the aerial is connected properly.

A TV channel is transmitted at a certain frequency.

If you know the frequency, you can enter it directly and in this way call up the TV channel.

Ask for a list of the frequencies at your cable company or at a dealer.

- First enter the 5 digits of the desired frequency.
- For frequencies under 100 MHz, first enter a 0. For example : 063.25.

*Have you entered a wrong number ?  
First complete the frequency with arbitrary numbers and then start again.*

### Fine-tuning

You may be able to improve the reception of picture and sound of a TV channel. Adjust the frequency yourself with the **MENU** - or **+** key on the remote control.

Go on to step c.



## step Entering the programme number and name

Now you **yourself** must assign a number of your choice and a name to the TV channel located. In this way you decide for yourself the order of all your TV channels.

With the assigned programme number you can call up your TV channel again later.

A name of maximum 5 letters or numbers can be given to the programme numbers 0 to 29. For example : SUPER, BBC1, ...  
Thus you see immediately which TV channel you have stored under which programme number.

 
- Press the yellow key c.
- ▷ NAMING THE PROGRAMME appears.
- Press the red key a.
- Hold down the **P** - or + key on the remote control until the desired programme number appears in the menu.

In this list you can now enter the name of the TV channel.

With the arrow under the letter and number line you select which letter or which number in the list above you wish to enter.

In the list there is a red block next to the chosen programme number.

- Hold, as desired, either the green key b down to move the arrow to the left, or else the yellow key c to move the arrow to the right.
- ▷ The letter or number that you indicate with the arrow appears in the block.
- Press the blue key d.
- ▷ The block moves over one space.
- Now you can choose a following letter or number with the arrow.
- Place the arrow between z and 0 for a space.

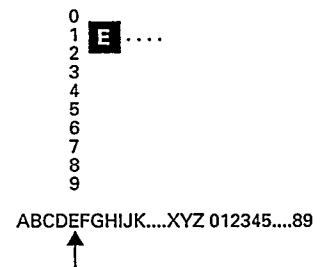

*Did you fill in a wrong letter or number ?*

*Press repeatedly on the blue key d until the block is back in the place where you want to make a change.*

*Now choose with the arrow the correct letter or the correct number.*

Is the complete name filled in ?

- Then press MENU.
- ▷ The CHANNEL INSTALLATION menu appears again.

Go on to step d.

step



## Storing steps a to c

Now the TV system, the located TV channel, its programme number and its programme name must be stored in the memory.

- o Press the blue key d.
- ▷ PROGRAMME STORED appears briefly at the top of the menu.
- ▷ The TV channel is stored in the memory.

repeat

Do you want to store another TV channel ?

- o Repeat steps a-b-c-d.

Are you connected to the cable system ?

- o Begin immediately with step b. You have already selected the TV system in step a for all channels.

out

Do you want to exit the CHANNEL INSTALLATION menu or have you finished locating TV channels ?

- o Press MENU.
- ▷ The TV INSTALLATION menu appears.



## Preselection Preferences

All the stored TV channels have been automatically placed into the programme list. In the PRESELECTION PREFERENCES menu you yourself should indicate for each stored TV channel if you want to keep that programme number as a favourite.

You can do this also for a programme number you want to reserve for the programmes you receive from your decoder.

This will make selecting your favourite TV channels a lot easier and faster.

TV INSTALLATION	
a	channel installation
b	preselection preferences
select a-b menu off	

PRESELECTION PREFERENCES	
a	programme number
b	favourite status
c	decoder
select a-c 09 menu off	

 
## Favourite TV channels

- Press the green key b in the TV INSTALLATION menu.
- ▷ The PRESELECTION PREFERENCES menu appears.
- Press the red key a.
- ▷ PROGRAMME NUMBER lights up.
- Select the programme number of a TV channel with MENU - or + or with the digit keys.
- Press the green key b.
- ▷ FAVOURITE STATUS lights up.
- Press MENU - or + to select NO or YES.  
In this way you decide whether you want to keep the selected TV channel as a favourite TV channel or not.
- Repeat this for each programme number.
- ▷ From now on when you run quickly through the TV channels by holding the P - or + key pressed down, only those TV channels which are in the favourite list will be displayed.  
When you select a TV channel with the digit keys, the indication of the selected TV channel will be displayed in white characters when it is a TV channel from the favourite list, in red characters when it is a TV channel which is not in the favourite list.

## Decoder

- In case you have connected a decoder, see Decoders p. 28, you can define one or more programme numbers as a decoder preselection.
- Press the red key a in the PRESELECTION PREFERENCES menu.
  - ▷ PROGRAMME NUMBER lights up.
  - Select the programme number under which you want to store the programme coming from your decoder with MENU - or + or with the digit keys.
  - Press the yellow key c.
  - ▷ DECODER lights up.
  - Press MENU - or + repeatedly until the designation EXT1 or EXT2 appears according to the euroconnector to which you connected your decoder. Select NO if you do not want the selected programme number being activated as a decoder preselection.
  - Press MENU twice.
  - ▷ The SYSTEM INSTALLATION menu appears again.
  - Press off to exit the SYSTEM INSTALLATION menu.

# Operation

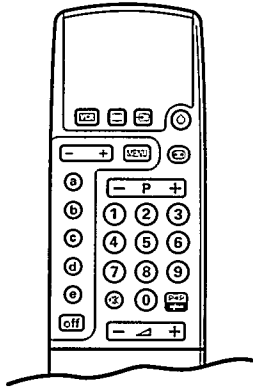

Every time you press a key on the remote control, the green lamp ① on the front of your TV set blinks.


## Switching TV on

- Press ① on the front of your TV.
- ▷ A green lamp ① lights up. PR1 appears briefly and possibly also the programme name.
- ▷ Does a red lamp ② light up? Your TV is on standby. Read on.

## Standby

- With the standby key ③ at the top of the remote control you can temporarily switch the TV off.
- ▷ The lamp ③ on the TV lights up.
- Press a digit key in order to turn the TV on again.  
If for a period of 10 minutes no aerial signal is received, then your set automatically switches to standby.  
Switch off your TV overnight instead of leaving it on standby. You save energy and the picture tube is demagnetised which supports good picture quality.

## Selecting TV channels

- Select the TV channel with the digit keys on the remote control.
- For a two-digit programme number, enter the second digit within 2 seconds.
- If you want to know which channel you are watching, open the door of the remote control and press  short.




Quickly run through the TV channels from the Favourite list.

 
- Hold the P - or + key pressed down.

## Volume control


- Press  - or +.

## Temporarily interrupt the sound

- Press .
- ▷ The sound is temporarily interrupted.
- ▷ The lamp  on the front of the TV lights up.
- Press  again to get the sound back.

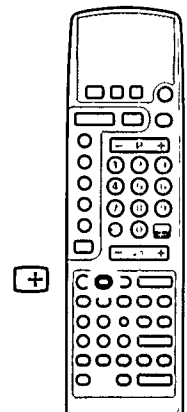

# Main Menu

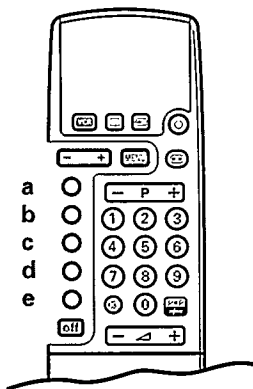 

You use the keys in the grey area of the drawing to operate the main menu.

With the colour keys a-b-c-d-e you select your choice in the menus.

- The main menu is split into 2 menus and you can:
- . adjust **picture** and **sound** according to personal preference
  - . call up a **programme list** with an overview of the TV channels stored
  - . select from among various **special features**
  - . select **recording sources** for your video recorder
  - . enter the **system installation** menu.

- o Press MENU.
- ▷ The MAIN MENU appears.
- o Press off to switch off each menu.

MAIN MENU 1	
a ■	picture
b ■	sound
c ■	programme list
d ■	special features
e ■	>>>>
select : a-e menu off	

MAIN MENU 2	
a ■	recording source
b ■	system installation
c ■	>>>>
select : a-c menu off	

## Adjusting the picture

- o Press MENU.
- o Press the corresponding colour key for PICTURE.
- ▷ The PICTURE menu appears
- o Press one of the colour keys to select the adjustment you want to regulate.  
When you have a set that can receive the NTSC system and when USA is selected in Selecting the TV system, see p. 5, also the option tint appears.
- ▷ The selected adjustment lights up.
- o Press MENU - or + in order to regulate the selected adjustment.
- o Press a colour key once more in order to select another adjustment.

Do you want to store the changed adjustment in the memory ?

- o See Special Features, PP store, p. 14.

- o Press MENU.
- ▷ The MAIN MENU appears again.

PICTURE 1	
a ■	brightness
b ■	colour
c ■	contrast
d ■	sharpness
select : a-d menu off	

## Adjusting the sound

- Press MENU.
- Press the corresponding colour key for SOUND.
- ▷ The SOUND 1 menu appears.

### Volume, balance, treble, bass

- Press one of the colour keys to select the adjustment you want to regulate.
- ▷ The selected adjustment lights up.
- Press MENU - or + in order to regulate the selected adjustment.
- Press a colour key again to select another adjustment.


### Do you want to store the modified adjustment in the memory ?

- Press MENU.
- ▷ The MAIN MENU appears.
- See Special Features, PP store, p. 14.


### Speech

- Press the white key e in the SOUND 1 menu.
- ▷ The SOUND 2 menu appears.
- Press the corresponding colour key for SPEECH.
- ▷ SPEECH lights up.
- Press MENU + to reveal the treble and to suppress the bass.
- Press MENU - to switch off.




### Spatial sound

- Press the corresponding colour key for SPATIAL in the SOUND 2 menu.
- ▷ SPATIAL lights up.
- Press MENU - or + to switch off or on.
- ▷ When SPATIAL ON is selected, it seems as though the loudspeakers are spread further apart from one another. You get a spatial sound effect.
- ▷ The lamp  on the TV lights up.

### Mono broadcasting :

- Select SPATIAL ON.
- ▷ The lamp  on the front of the TV lights up.
- ▷ You get a pseudo stereo effect.

### Stereo broadcasting :

- ▷ The lamp  lights up.
- Select SPATIAL ON.
- ▷ The lamps  and  light up.
- ▷ You get a spatial stereo effect.

SOUND 1	
a	■ volume
b	■ balance
c	■ treble
d	■ bass
e	■ >>>>
select a-e menu off	

SOUND 2	
a	■ speech
b	■ spatial
c	■ sound mode
d	■ >>>>
select a-d menu off	



## Sound mode

- Press the corresponding colour key for **SOUND MODE** in the **SOUND 2** menu.
- ▷ **SOUND MODE** lights up.
- ▷ If the TV channel which you are now watching transmits stereo or digital sound and if your set is equipped with Nicam, you can choose between :
  - . **stereo** or **mono** if the TV channel transmits *stereo* sound
  - . **digital** or **analogue** if the TV channel transmits *digital* sound.
- Select **analogue** or **mono** in case of weak digital or stereo sound signals.
- Press **MENU** - or +.

If you do not make a sound choice for the TV channel which you are watching your TV will choose between stereo or digital sound, depending on the sound the TV channel transmits.

- Press **MENU**.
- ▷ The **MAIN MENU 1** appears again.

## Programme list

- Press **MENU**.
- Press the corresponding colour key for **PROGRAMME LIST**.
- ▷ A list with an overview of the stored TV channels appears.
  - TV channels from the favourite list are displayed in white characters.
  - TV channels which are not in the favourite list are displayed in red characters.
- Press **MENU**.
- ▷ The **MAIN MENU 1** appears again.
  
- Press **off**.
- ▷ The **MAIN MENU** disappears.

## Special features

- Press MENU.
- Press the corresponding colour key for SPECIAL FEATURES.
- ▷ The SPECIAL FEATURES menu appears.
- Press a colour key in order to choose between child lock, sleeptimer, pp store, demonstration or pip size (for the sets with the picture in picture option).
- ▷ Your choice lights up.
- Press once more on a colour key to make another choice.

SPECIAL FEATURES 1	
a	■ child lock
b	■ sleeptimer
c	■ pp store
d	■ demonstration
e	■ pip size
select a-e menu off	

### Child lock

If the child lock is on, the TV can only be switched on with the digit keys on the remote control. The keys on the TV cannot be used.

- Press the corresponding colour key for CHILD LOCK.
- Press MENU - or + to switch the child lock off or on.

### Sleeptimer

 
With the aid of the sleeptimer you can set the time when the TV should switch itself off.

- Press the corresponding colour key for SLEEPTIMER.
- Hold the key MENU + pressed down.
- ▷ The counter runs from **off** up to **90** minutes.
- Hold the key MENU - pressed down.
- ▷ The counter runs from **90** down to **off**.

If you have set a time, then one minute before the TV switches off the remaining minute automatically appears on the screen.

You can always switch off your set earlier.

Up to the last minute you can always change the time set.

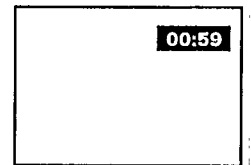

### PP store

Adjustments made in the picture- and sound menu can be stored in the memory and be called up again with the PP key.

- Press the corresponding colour key for PP STORE.
- ▷ PP STORE lights up and PERSONAL PREFERENCE STORED appears briefly on the top of the menu.

At this point all previous adjustments are cancelled.

See also Other functions, p.17.

### Demonstration

This function demonstrates one after another all the possible options of your TV.

 
- Press the corresponding colour key for DEMONSTRATION.
- Press MENU + to switch the demonstration on.
- Press **off** in order to stop the demonstration.

### Pip size

You can select either a large or a small pip format.

- Press the corresponding colour key for PIP SIZE.
- Press MENU - or +.

For more information about Pip, see Pip, Picture in Picture, p. 20.

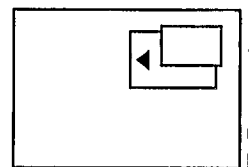



## Recording Source

If you want to record a programme, then first read Peripherals, Recording, p. 31.

## System Installation

 
You can also enter the System Installation menu via the Main Menu 2 to select your menu language and to locate and to store your TV channels.

- Press **MENU**.
- Press the corresponding colour key for **SYSTEM INSTALLATION**.
- ▷ The **SYSTEM INSTALLATION** menu appears on the screen.
- Now follow very closely and step by step the instructions as described on page 4 and following.

# OFF

- Press **MENU** to leave the **SYSTEM INSTALLATION** menu.
- Press **off** to leave the **SYSTEM INSTALLATION** menu or the **MAIN MENU**.

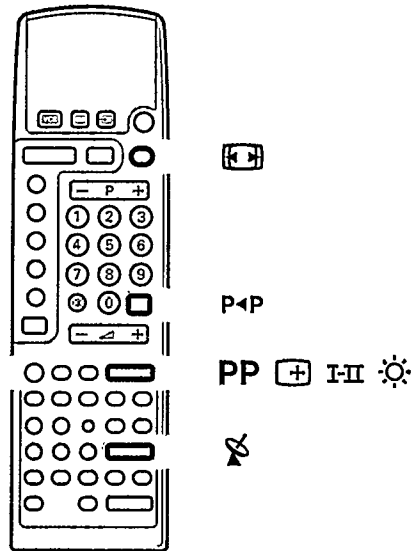

# Other functions



## Movie compress

Movies and other new programmes in the future are broadcast in the Wide Screen format.


D2-MAC satellite programmes in the Wide Screen format recorded on a video recorder or prerecorded Wide Screen tapes can be reproduced on a normal TV screen in a conventional picture format.

- Press .
- ▷ The picture is compressed.  
There are black bars at the top and bottom of the screen.
- Press  again to switch off movie compress.


When you have a Wide Screen format video recorder connected with a eurocable, the pictures will be compressed automatically.




## Previous programme

- Press the P<P key.
- ▷ The previous selected TV channel is displayed again.  
The  indication has a video recorder function.

## Brightness

- Open the door of the remote control.
- Press  - or + in order to adjust the brightness.

## Selecting satellites

The keys  - and + are only functional when having connected a satellite tuner in combination with a satellite positioner and an automatically rotatable polarmount antenna to select satellites.

## PP key

With the green PP-key you can call up again the picture and sound adjustments which have been stored with the PP store in the Special Features menu, p.14.

- Open the door of the remote control.
- Press PP.

## Information on screen

After the selection of a TV channel the following information appears briefly on your screen :

- . the programme number and name of the selected TV channel
  - . DIGITAL SOUND AVAILABLE if the TV-station transmits digital sound
  - . DIGITAL SOUND if it is selected and received
  - . the name of the pip connection if pip is switched on.
- See Pip-Picture in Picture, p.20

- Open the door of the remote control.
- Press **+** short.
- ▷ The channel information appears on the screen for a few seconds.
- ▷ If the sleeptimer is on, then the remaining time becomes visible.

PR1 BBC1

DIGITAL SOUND

00:59

English

## Permanent Programme number

 
- Open the door of the remote control.
- Press **+** long.
- ▷ The channel information appears on the screen for a few seconds. The permanent programme number remains in the upper right hand corner of the screen when it was off, or disappears when it was on.

## Bilingual Broadcast

If you are watching a TV channel which is being broadcast in two languages, dubbed and original language, the lamp I or II on the front of your TV lights up.

- Open the door of the remote control.
- Press key I-II and select language I or II.
- ▷ The setting is stored in the memory for the selected TV channel when switching to another TV channel or to standby.

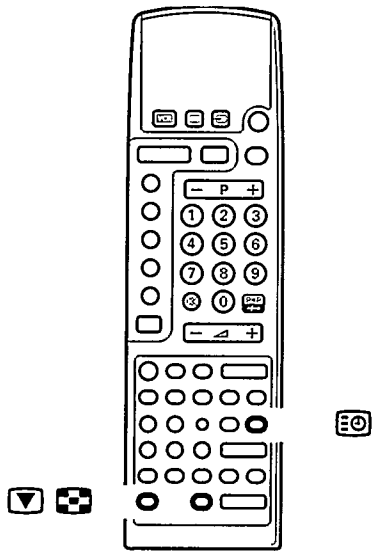

I-II




## Time

 The time can only be called up if the TV channel you are watching is also broadcasting teletext.



Teletext does not need to be switched on.

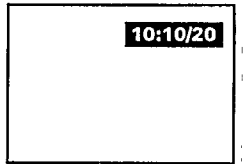- Open the door of the remote control.
- Press .
- ▶ The time appears in the upper right hand corner of the screen.
- Press  again in order to switch off.




## Freezing the picture

 
When watching you can freeze the picture at any moment.

- Press .
- Press  again to return to normal picture.

## Mosaic screen

With the mosaic screen, you can scan the TV channels stored in the favourite list, display successive frozen pictures with the photo finish function and reproduce the main picture image by image with the strobe function.

- Press .
- ▷ A menu line appears on the bottom line of the screen. It contains four functions, each having another background colour, corresponding to the menu colour keys.
- Press the corresponding colour key to activate one of the 4 functions.

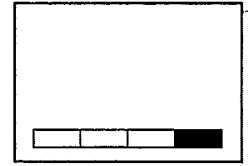


### Scan

- Press the red key a.
- ▷ A scan of the stored TV channels is performed, starting with programme number 0.

*It is quite normal that during the scan you may notice a slight shaking or distortion of the picture.*

Only TV channels placed in the favourite list are displayed. On the last position, bottom right, a live picture is shown of the TV programme that was displayed before the mosaic screen was switched on.

 - Press the red key a again.
- ▷ A following series of stored TV channels from the favourite list is scanned. Each mosaic picture will contain its belonging programme number.
- Select a TV channel with the digit keys.
- ▷ The mosaic screen disappears and the selected TV programme will be displayed.
- Press the blue key d to interrupt the scan function and to switch off the mosaic screen.

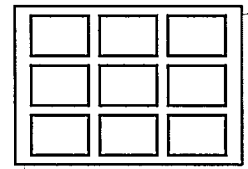

*Never perform a scan while recording a TV programme with a video recorder connected to EXTERNAL 1 or 2 and when having selected an option in the Recording Source menu since the scan will be recorded on tape.*


### Photo finish

 - Press the green key b.
- ▷ The main picture is displayed in successive frozen pictures. The last picture on the bottom right will remain live.
- Press the green key b again.
- ▷ A new photo finish picture is displayed, overwriting the old one.
- Press the blue key d to switch off the photo finish function and to switch off the mosaic screen.
- ▷ The TV programme that was selected before the mosaic screen was switched on, appears again.

### Strobe

- Press the yellow key c.
- ▷ The picture is reproduced image by image. So you get an interrupted movement.
- Press the yellow key c again.
- ▷ The picture is reproduced image by image in a faster way.
- Press the yellow key c once again.
- ▷ The strobe function is switched off.
- Press the blue key d to switch off the mosaic screen.

# Pip - Picture in Picture

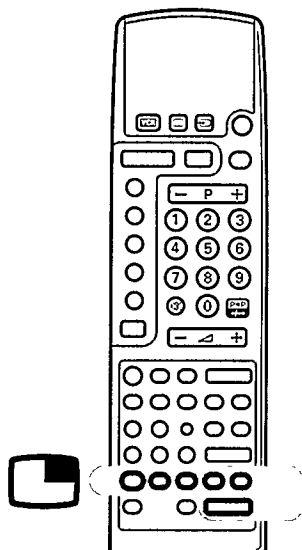




For TV sets with the Picture in Picture option.

With pip, picture in picture, you can call up a little screen within the main TV screen. Thus at the same time you can watch a programme from other equipment, connected with a eurocable.


The picture in the small screen has no sound.


## Switching pip on and off

  - Open the door of the remote control.
- Press .
- ▷ The pip screen appears and the image is the same as in the main screen.
- ▷ The name of the pip programme appears briefly on the main screen.
- Press  again to switch pip off.

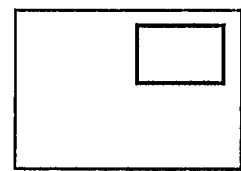


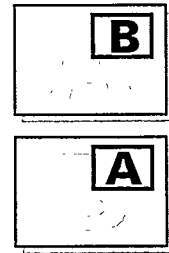 
## Selecting pip connections

- Press  repeatedly.
- ▷ The name of the connections appear.  
If any other electronic unit is connected and switched on, then its programmes appear in the pip screen.  
Select on your video recorder the TV channels which you have stored in it.  
For connecting equipment to EXTERNAL 1, EXTERNAL 2, FRONT, see Peripheral Equipment, p. 25.

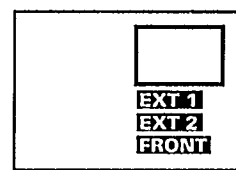



## Switching screens


- Press .
- ▷ The main screen and the pip screen exchange places.  
If the TV channel is only in the pip screen and not in the main screen, then use - P + of the pip keys in order to change your TV channel in the pip screen.

 


## Still Picture

- Press .
- ▷ The picture in the pip screen stands still.  
Even when pip is not switched on, the main screen will appear as a still picture in the pip screen.
- Press  again or select another channel in the pip screen in order to cancel the still picture.

## Moving the Pip screen

- Press .
- ▷ Each time you press this key, the pip screen moves to another corner of the main screen.

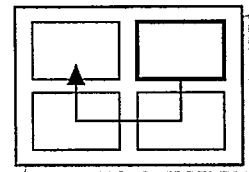


English


## Pip Size

 You can select either a large or a small pip screen.  
See Main Menu : Special Features, p.14.


# Teletext

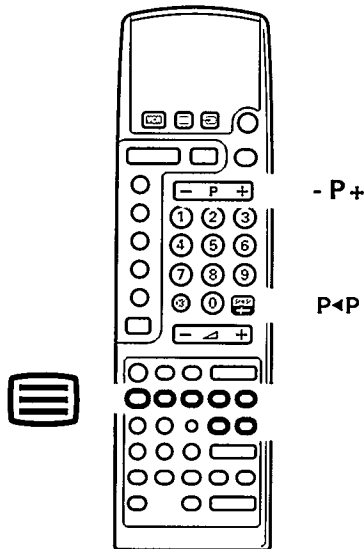

Most TV channels broadcast information via teletext. Each channel which broadcasts teletext transmits a page with information on how to use its teletext system. Look for the teletext page with the index (usually page 100). TV programmes are sometimes subtitled for the hard of hearing. Depending on the TV channel, teletext is transmitted in different systems: WST, TOP, FLOF. The system utilised is indicated in the options line at the bottom of the screen.

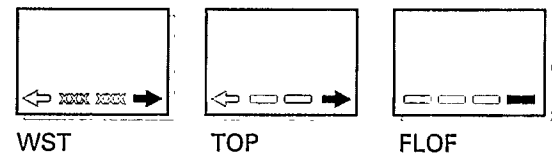 


## Switching Teletext On and Off

- Select the TV channel for the desired teletext broadcast.  
Teletext cannot be switched on when there is a menu on the screen.
- Open the door of the remote control.
- Press  in order to switch on the teletext.
- ▷ The contents appear on the screen together with two information lines at the top and an options line at the bottom.

When a selected teletext page contains several subpages, the subpage numbers which are automatically stored in the memory appear in the first information line. The coloured number indicates the displayed subpage. The white numbers refer to the subpages which can be selected with MENU - or +.

In the following information line appears:

- . the name of the TV channel selected
- . the page counter
- . date and time.

- Press  again in order to switch off the teletext.
- ▷ The TV channel reappears.

## Easy Teletext system

The major advantages of this new teletext system are :

A considerable **reduced waiting time** by predicting what the user will probably select and which results in :

- . a fast and direct selection of previous and following pages which are in transmission
- . the precapturing of the pagenumbers read from the displayed page
- . the direct selection of the last 2 page numbers selected with the digit keys
- . the precapturing of the pages referred to in the options line
- . the creation of a **habit watcher list** : not predictable pages, being selected by the user, are put in a list of preferred pages so that they are immediately available afterwards.

The precapturing of up to **9 subpages** to be controlled by the teletext user.



## Selecting a Teletext Page

With the digit keys ..... **Or** With the options line.....

- Enter the desired page number with the digit keys.
  - ▷ The page counter seeks the page or the page appears immediately when the page number has been stored in the memory.
  - ▷ A message appears when you have entered a not existing or an incorrect page number. Page numbers beginning with 0 or 9 do not exist.
  - Enter the correct page number.
- Select with the colour keys, corresponding to the coloured options at the bottom of the screen and depending on the teletext the selected TV channel transmits,
    - the previous - or the following - pages
    - the previous selected pages
    - another subject

## Quickly run through the teletext pages

- Press P - to run through the previous pages.
- Press P+ to run through the following pages.

## Selecting the previous teletext page

- Press the P◀P key.
- ▷ The previous selected teletext page is displayed again.

 
## Selecting subpages

When a selected teletext page consists of different subpages, one of the subpages appears on the screen.

The coloured number in the first information line refers to the displayed subpage.

The other subpage numbers appear in white as soon as the transmission has found them.

- Press MENU - to select the previous subpage.
- Press MENU + to select the following subpage.






## Selecting the table of contents

- Press the white colour key e.
- ▷ The table of contents appears.

## Special teletext functions

### Hold

 

You can stop the page counter from seeking when you have entered a wrong page number or when the page is not available.

 - Press .
- ▷  appears in the first information line.  
The page counter stops seeking the entered page number.
- Enter another page number.
- ▷  disappears.






 
### Reveal

Some pages contain concealed information, such as solutions to riddles and puzzles.


 
- Press .
- Press  again in order to switch off the concealed information.

### Interrupt



- Press .
- ▷ The TV programme appears.
- ▷  at the top of the screen indicates that you are still in the teletext mode.  
Before interrupting teletext, you can select a page number.  
When the page has been found, the information line appears briefly on your screen.
- Press  again.
- ▷ Teletext reappears.

 


### Mix

- Press .
- ▷ The teletext page and the TV programme appear on the screen at the same time.
- Press  again.
- ▷ Only the teletext page is displayed.


 
### Enlarge

- Press  to enlarge the top half of the teletext page.
- Press  again to enlarge the bottom half of the teletext page.
- Press once more to return to normal page size.

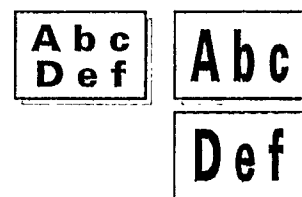

### Subpage

By adding a subcode you can call up a desired subpage.

- Enter the page number.
- Press .
- Enter the desired subpage with the digit keys : e.g. 3 for the third page of seven subpages.
- Press  in order to cancel the subcode.

### Subtitles and newsflashes

 
- Select the contents page (usually page 100).
- Select the page number for subtitles or newsflashes.
- ▷ Subtitles or newsflashes, if there are, appear at the bottom of the TV programme.

# Peripheral Equipment

There is a wide range of electronic equipment that can be connected to your TV.  
The following connection diagrams show you where the different equipment should be connected at the back or the front of the TV.

## TV and video recorder

- Connect the aerial cables 1 and 2 as shown alongside. A better picture quality is obtained if you connect a eurocable 3 additionally.

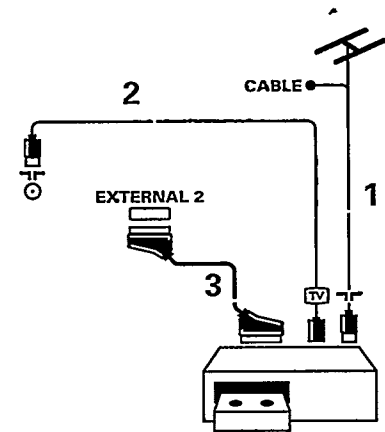


## S-VHS video recorder

- Do you have a S-VHS video recorder with S-VHS cinch connectors, then connect as well as the aerial cables 1 and 2

the S-VHS cables 4 and 5

 **Do not** connect an additional eurocable.

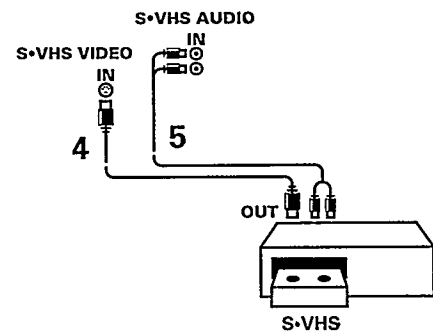

English

**OR**

- Do you have a S-VHS video recorder with a S-VHS euroconnector, then connect as well as the aerial cables 1 and 2, the S-VHS eurocable 3.

 
Never connect to the same TV one video recorder with S-VHS cables at the same time as one video recorder with a euroconnector.  
The euroconnector has no function.

Searching for and storing the testsignal of the video recorder

- Unplug the aerial cable of the aerial socket ㊦ of your video recorder.
- Switch on your TV and video recorder.
- Press the **Install** key at the front of your TV, or enter the System Installation menu via the main menu.
- ▶ The **SYSTEM INSTALLATION** menu appears.
- Search for the testsignal of your video recorder in the same way as you searched for and stored the TV channels. See Installation, Searching for and storing TV channels, p. 5.  
Store the testsignal either under programme number 0 or between 50 and 59.
- Insert the aerial plug again into the aerial socket ㊦ of your video recorder after you have stored the testsignal.


**TV, video recorder 1 and one or more peripherals**

- Connect the aerial cables 1, 2 and 3 as shown alongside. A better picture quality is obtained if you connect the eurocables 4 and 5 additionally.
- Look for the test signal of your peripheral in the same way as you do for a video recorder.

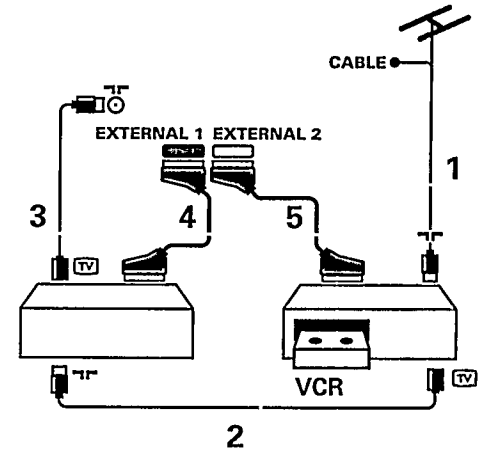

When having more than one peripheral, connect them to each other with an extra aerial cable 6 and an additional eurocable 7 to obtain a better picture quality.

 
Only with a video recorder connected to EXTERNAL 2 it is possible to record a programme from your TV as well as from other connected equipment. See Recording with your video recorder, p. 31.

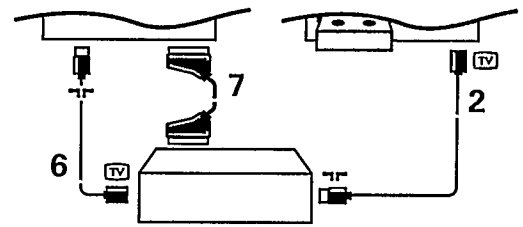

**TV and laser disc or satellite tuner**

- Connect the aerial cables 1 and 2 as shown alongside. A better picture quality is obtained if you connect the eurocable 3 additionally.

 
Look for the test signal of your equipment in the same way as you do for a video recorder.

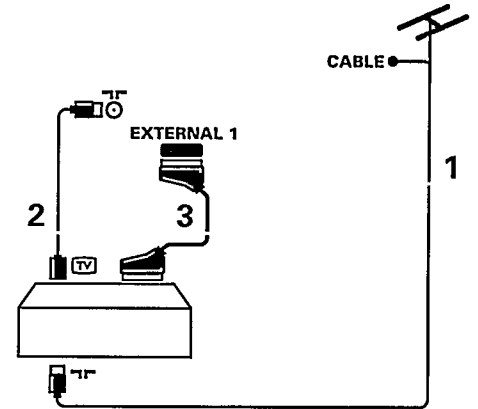

**Audio equipment**


You can listen to your TV sound via your audio equipment.

  - Therefore connect the audio cables to the audio input of your equipment and to Audio L and R at the back of your TV.
- Press on the remote control.
- ▷ The loudspeakers of your TV are switched off.

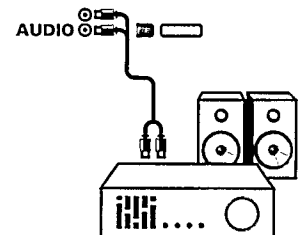

 



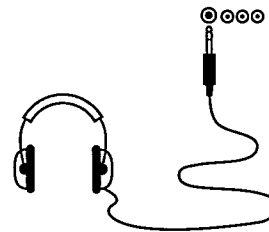 
## Camera and camcorder

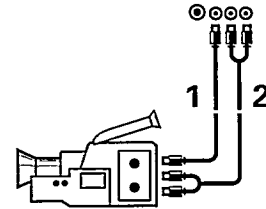- Connect your camera or camcorder to **FRONT** at the front of your TV.
- Connect the equipment to **Video 1** and **Audio L 2** for mono equipment.
- In the **SOUND** menu select mono sound. See Main Menu, Adjusting the sound, Sound mode, p. 13.
- Connect **Audio R 2** for stereo equipment.
- In the **SOUND** menu select stereo sound.



## Headphone

- Insert the plug into the headphone socket  at the front of the TV.
- Adjust the volume with  - or .
- Press  on the remote control.
- ▶ The internal loudspeakers of your TV are switched off.  
The headphone socket has an impedance of between 8 and 4000 Ohm and is of the 6.3 mm jack type.

 


## Decoders

Cable TV offers you a wide choice of programmes. Most of them are free, others are to be paid for by the viewer. This means that you will need to subscribe to the broadcasting organisation whose programmes you wish to receive. This organisation will supply you a corresponding decoder unit to allow the programmes to be unscrambled. For further information, ask your dealer. See also the booklet supplied with your decoder.

### Connecting a decoder with an aerial socket to the TV

- Connect the aerial cables 1 and 2 as shown alongside.  
When your decoder has a euroconnector you obtain a better picture quality if you connect a eurocable 3 additionally.

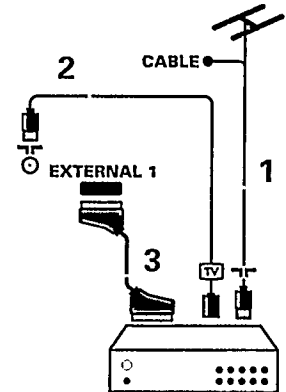


### Connecting a decoder without an aerial socket to the TV

- Connect the decoder with your TV with a eurocable 3 only.

### Connecting the decoder to the video recorder


Some video recorders have a special euroconnector for decoder.

 - Connect a eurocable to the euroconnector of your decoder and to the special euroconnector of your video recorder.  
See also the handbook of your video recorder.
- To connect your video recorder to the TV, see before.

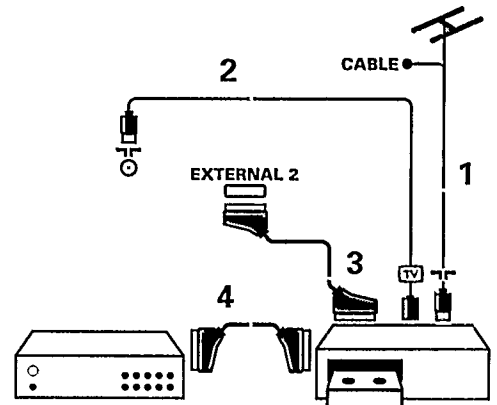

If you want to connect more equipment to your TV, consult your dealer.

## Reproducing Picture and Sound

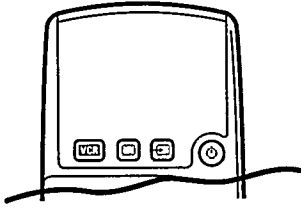 

Most of the audio and video equipment from our range of products can be operated with the remote control.

**a. from equipment connected only with an aerial cable**

- Switch your TV on.
- With the digit keys select the programme number under which you have stored the test signal.
- Switch on the equipment with the remote control.
- ▷ The picture and/or sound is reproduced.

 
Do you want to watch TV again ?

- Enter the programme number of the TV channel which you want to watch with the digit keys.


**b. from equipment connected with a eurocable**

- Switch your TV on.
- Switch your equipment on.
- ▷ Either the picture and/or the sound is reproduced or descrambled.


If this is not the case :

- Press  repeatedly until the designation EXT1, EXT2 or FRONT appears on the screen, according to where you connected your equipment at the back or the front of your TV.
- ▷ Either the picture and/or the sound is reproduced.


Do you want to watch TV again ?

 - Press the  key.







**c.** from a S-VHS recorder connected with **S-VHS** cables

- o Switch your TV on.
- o Press  repeatedly until the indication EXT2 appears on the screen.
- o Switch your S-VHS recorder on.
- ▷ The picture stored in your video recorder from a pre-recorded cassette or from a TV channel is reproduced.

**d.** from equipment connected to the **front** of the TV

- o Switch your TV on.
- o Press  repeatedly until the indication FRONT appears on the screen.
- o Switch your equipment on.
- ▷ The picture is reproduced.  
Do you want to watch the TV picture again ?
- o Enter the programme number of the TV channel which you want to watch with the digit keys.

## Operating the video recorder with the TV remote control

- o Keep the VCR key pressed and press one of the video recorder keys of the remote control at the same time.
  - VCR +  for play
  - VCR +  for record
  - VCR +  for stop
  - VCR +  for rewind
  - VCR +  for wind
  - VCR +  for timer.



## Recording with your video recorder

### 1. Recording a TV programme

only using an aerial cable

- Select the programme number on your video recorder.
- Press record ● under the door of the remote control or on your video recorder.

using a eurocable connected to the euroconnector EXTERNAL 2

- Select the programme number on the TV.
- Press MENU.
- Press the corresponding colour key for RECORDING SOURCE in the MAIN MENU 2 menu.
- ▷ RECORDING SOURCE appears.
- Press the red key a.
- ▷ TV TO EXT 2 is displayed.
- Set your video recorder to record. (See the handbook for your video recorder.)
- Press record ● under the door of the remote control or on your video recorder.

using a eurocable connected to the euroconnector EXTERNAL 1

- Select the programme number on the TV.
- Set your video recorder to record. (See the handbook for your video recorder.)
- Press record ● under the door of the remote control or on your video recorder.

### 2. Recording a programme from connected peripheral equipment

- Switch on the equipment.
- Press MENU.
- Press the corresponding colour key for RECORDING SOURCE in the MAIN MENU 2 menu.
- ▷ RECORDING SOURCE appears.
- With the colour keys select the connection from which you want to record.
- ▷ Your selection lights up.
- Set your video recorder to record. (See the handbook for your video recorder.)
- Press record ● under the door on the remote control or on your video recorder.

RECORDING SOURCE	
a ■	TV to EXT 2
b ■	EXT 1 to EXT 2
c ■	FRONT to EXT 2
select : a-c    menu off	


# Tips

## Poor Picture

Have you selected the correct TV system ?  
Is your TV set or house aerial located too close to loudspeakers, non-earthed audio equipment or neon lights, etc. ?

Mountains or high buildings can cause double pictures or ghost images.  
Sometimes you can improve the picture quality by changing the direction of the outside aerial.

Is the picture unrecognisable ? Check if you have entered the correct frequency or adjust the frequency by fine tuning. See Installation, p. 5.

Are brightness and contrast out of adjustment ? Press the PP key.  
Switch off your TV overnight with  on the front of the TV.


## No picture

Is the aerial connected properly ? Are the plugs tightly connected in the aerial socket ?  
Is the aerial cable in good condition and does it have suitable plugs ? Are the connection facilities to a possible secondly installed TV in good condition ? If in doubt, consult your dealer.

NO PICTURE means that the selected peripheral equipment is transmitting no picture.

Did you press the correct keys on the remote control ?

Try it once more.

Did you press  again after switching on teletext ?


Has the child lock been switched off ? See Special Features, p. 14.

## Sound

Did you perhaps interrupt the sound with the  key ?

Is the sound coming out of only one loudspeaker ? Was the balance perhaps set to one extreme ? See SOUND menu, p. 12.

## Remote control

Does your TV no longer respond to the remote control ? Press the  key again.  
Perhaps the batteries are empty. See Preparation, p. 2.

## Menu

Did you select the wrong menu ? Once more press MENU or **off** to exit from the menu.

## Connections

Check whether your peripheral equipment is in fact properly connected. See p. 25.  
Have you switched on the peripheral equipment ?

## No solution ?

Switch your TV set off and then on again.

**Never attempt to repair a defective TV yourself.**

Check with your dealer or call a TV technician when nothing helps or when different lamps in front start blinking without having pressed any key on the remote control.

Table of TV frequencies.  
 Frequenztafel der Fernsehsender.  
 Liste des fréquences des émetteurs.  
 Frequentietabel TV-zenders.  
 Tabella delle frequenze delle trasmissioni.  
 Lista de frequências.

Tabla de frecuencias de transmisión de televisión.  
 Frekvens oversigt.  
 Frekvenstabell.  
 Tabell över TV-frekvenser.  
 TV-taajukksien taulukko.

EUROPA	
CHANNEL...FREQ (MHz)	
E2 .....	48.25
E3 .....	55.25
E4 .....	62.25

ITALY	
CANALE...FREQ (MHz)	
A .....	53.75
B .....	62.25
C .....	82.25

FRANCE	
CANAL...FREQ (MHz)	
2.....	55.75
3.....	60.50
4.....	63.75

S1.....	105.25
S2.....	112.25
S3.....	119.25
S4.....	126.25
S5.....	133.25
S6.....	140.25
S7.....	147.25
S8.....	154.25
S9.....	161.25
S10.....	168.25

EUROPA	
CHANNEL...FREQ (MHz)	
E5.....	175.25
E6.....	182.25
E7.....	189.25
E8.....	196.25
E9.....	203.25
E10.....	210.25
E11.....	217.25
E12.....	224.25

ITALY	
CANALE...FREQ (MHz)	
D.....	175.25
E.....	183.75
F.....	192.25
G.....	201.25
H.....	210.25
H1.....	217.25

CANAL...FREQ (MHz)	
5.....	176.0
6.....	184.0
7.....	192.0
8.....	200.0
9.....	208.0
10.....	216.0

Canaux interbande	
B.....	116.75
C.....	128.75
D.....	140.75
E.....	159.75
F.....	164.75
G.....	176.75
H.....	188.75
I.....	200.75
J.....	212.75
K.....	224.75
L.....	236.75
M.....	248.75
N.....	260.75
O.....	272.75
P.....	284.75
Q.....	296.75

S11.....	231.25
S12.....	238.25
S13.....	245.25
S14.....	252.25
S15.....	259.25
S16.....	266.25
S17.....	273.25
S18.....	280.25
S19.....	287.25
S20.....	294.25

S21.....	303.25
S22.....	315.25
S23.....	327.25
S24.....	339.25
S25.....	351.25
S26.....	363.25
S27.....	375.25
S28.....	387.25
S29.....	399.25
S30.....	411.25
S31.....	423.25
S32.....	435.25
S33.....	447.25

H1.....	303.25
H2.....	311.25
H3.....	319.25
H4.....	327.25
H5.....	335.25
H6.....	343.25
H7.....	351.25
H8.....	359.25
H9.....	367.25
H10.....	375.25
H11.....	383.25
H12.....	391.25
H13.....	399.25
H14.....	407.25
H15.....	415.25
H16.....	423.25
H17.....	431.25
H18.....	439.25
H19.....	447.25

21.....	471.25
22.....	479.25
23.....	487.25
24.....	495.25
25.....	503.25
26.....	511.25
27.....	519.25
28.....	527.25
29.....	535.25
30.....	543.25
31.....	551.25
32.....	559.25
33.....	567.25
34.....	575.25
35.....	583.25
36.....	591.25
37.....	599.25
38.....	607.25
39.....	615.25
40.....	623.25
41.....	631.25
42.....	639.25
43.....	647.25
44.....	655.25

45.....	663.25
46.....	671.25
47.....	679.25
48.....	687.25
49.....	695.25
50.....	703.25
51.....	711.25
52.....	719.25
53.....	727.25
54.....	735.25
55.....	743.25
56.....	751.25
57.....	759.25
58.....	767.25
59.....	775.25
60.....	783.25
61.....	791.25
62.....	799.25
63.....	807.25
64.....	815.25
65.....	823.25
66.....	831.25
67.....	839.25
68.....	839.25
69.....	855.25

## GB

The frequencies used by a cable company may differ from the frequencies on the table. Consult your cable company or your dealer for detailed information.

## D

In Kabelfernsehanlagen können Abweichungen von den in den Frequenztabellen aufgeführten Frequenzen vorkommen. Bitte wenden Sie sich an Ihren Fachhändler oder Ihre Kabelfernsehgesellschaft, die Ihnen die zutreffenden Frequenzen mitteilt.

## F

Les fréquences utilisées par une société de télédistribution peuvent être différentes de celles sur la liste des fréquences. Consultez votre société de télédistribution ou votre revendeur pour des informations plus détaillées.

## NL

De frequenties die gebruikt worden door een kabelmaatschappij kunnen verschillen van deze op de tabel. Raadpleeg uw kabelexploitant of uw handelaar voor meer informatie.

## I

Le frequenze usate da una società di teledistribuzione possono essere differenti da quelle sulla tabella. Consultate la società di teledistribuzione o il vostro rivenditore per informazioni specifiche.

## E

Las frecuencias utilizadas por las empresas de distribución de señal por cable, pueden ser diferentes de las que se encuentran en esta tabla. Consulte con su compañía de distribución de televisión por cable o con su distribuidor para que le proporcionen una información más detallada.

## P

As frequências utilizadas por uma sociedade de teledistribuição podem ser diferentes das indicadas na lista de frequências. Consultar a sociedade de teledistribuição ou o vendedor para informações mais detalhadas.

## DK

Frekvenser benyttet af kabeloperatører kan være afvigende fra disse, kontakt deres kabeloperatør eller forhandler for nærmere information.

## N

Frekvensene som benyttes på et kabelnett kan avvike fra de som er oppført i tabellen. Kontakt ditt kabel-TV selskap eller din forhandler for nærmere opplysninger.

## S

Frekvenserna som används i kabel-TV-näten kan avvika från frekvenserna i tabellen. Kontakta ditt kabel-TV-bolag eller din radiohandlare för vidare information.

## SF

Kaapeliyhtiöiden käyttämät taajuudet voivat poiketa taulukossa olevista taajuuksista. Tarkat tiedot saat kaapeliyhtiöstä tai myyjältä.

