 


Television Instruction Manual



 
PHILIPS

2 Preparation

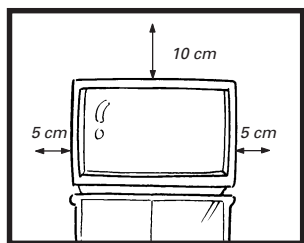


Installing the TV

- Place your TV set on a stable and strong base.
- Leave at least a free space of 5 cm on both sides and 10 cm from the top for good ventilation of the TV set.
- Do not place anything on the TV set which might damage it e.g. plants or heat sources.

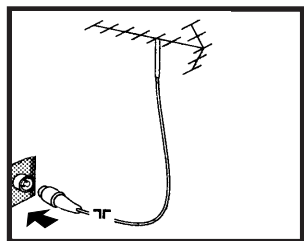

Connecting the aerial

 - Insert the aerial plug into the socket  at the back of the TV.

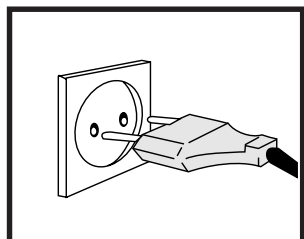


Connecting the mains

- Insert the mains plug into the wall socket and switch on.

Refer to the specification at the back of the TV for the correct operating voltage.


(Picture is only a representation of the actual plug and socket)

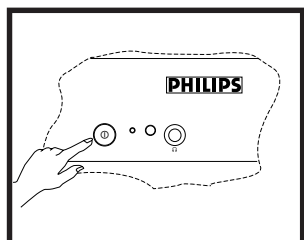 

Switching on

- Press the on/off button at the front of the TV to switch it on.

 If the indicator is red, press either the digit, channel, A/CH, AV or  key.

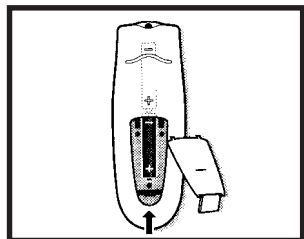


Installing the remote control


- Remove the cover at the back of the remote control
- Insert the correct type and size batteries into the compartment, making sure that they are the right way around.

3

 
Useful Tips

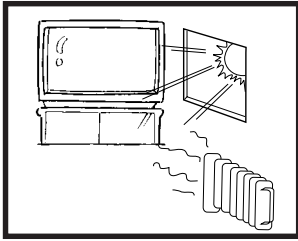


Avoid heat and direct sunlight.

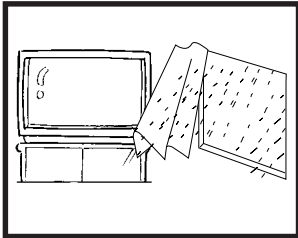 


Avoid direct exposure to rain or water.

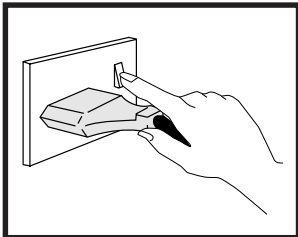 

 DO NOT leave your TV on standby for a prolonged period. Switch off your TV if not in use. This will allow the TV to be demagnetised giving good picture.

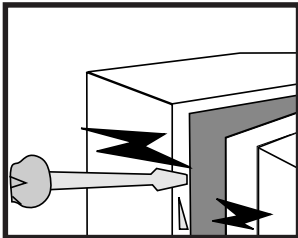

 Never repair the TV yourself – get a skilled personnel!

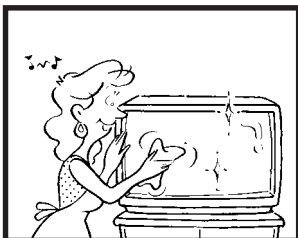

Clean the TV's screen with a slightly damp soft cloth only when necessary.

 
Note : Do not use abrasive solvent as it can damage the screen's coating.

4

Connecting peripheral equipment

Equipment such as VCR, Laser disc player, VCD etc. could be connected to the video and audio (AV) sockets at the back of the TV. Switch off the TV and equipment before making any connection.

Connection for playback

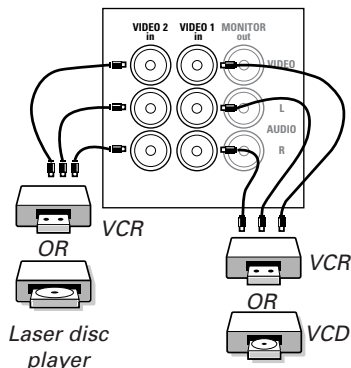

1. Connect to AV sockets

 
- connect the corresponding sockets of the equipment to that of the TV.
- to view the playback, select a channel named AV1 (if connection is made to sockets at VIDEO 1 in) or AV2 (if connection is made to sockets at VIDEO 2 in).

Note : If you have connected a computer game set to VIDEO 1 in, select a channel named GAME1 to playback. If your connection is made to VIDEO 2 in, then select GAME2 to playback.


2. Connect to aerial socket (only for VCR)

The playback on your VCR is considered a TV channel by your TV if you connect via the aerial socket. You must tune in to your VCR's test signal and assign the channel number 0 to it. Refer to your VCR's instruction manual for more details.

- connect the RF cable to the VCR's "RF in" and connect the "RF out" of the VCR to the aerial socket of the TV.
- select channel 0 and tune in to to your VCR's signal.
- to view the playback, select channel 0.

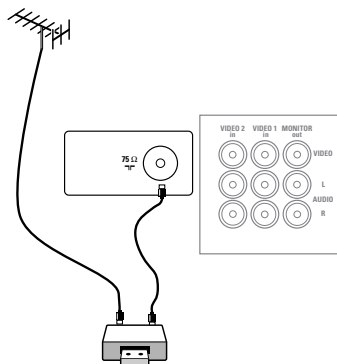


Connection for recording

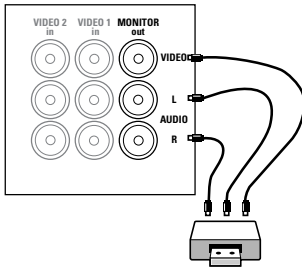 


1. From the TV channel you are watching

 - connect the corresponding sockets of the VCR to the sockets at MONITOR out.

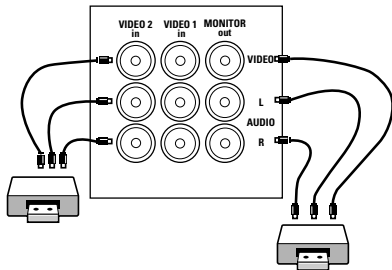

2. From one VCR to another VCR

 
- connect the sockets of the VCR which you wish to record from to the corresponding sockets at either VIDEO in 1 or VIDEO in 2.
- connect the sockets of the receiving VCR to the corresponding sockets at MONITOR out.

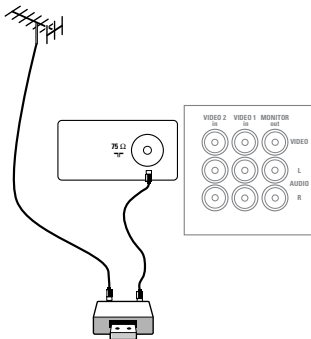

3. From the TV antenna

- connect the RF cable to the VCR's "RF in" and the "RF out" of the VCR to the aerial socket of the TV.

 Connection for headphones

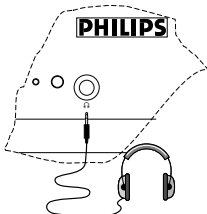


- connect the headphones to the socket at the front of the TV.

The headphones impedance must be between 8 and 4000 ohms.


6

The TV's controls

 For 25PT models

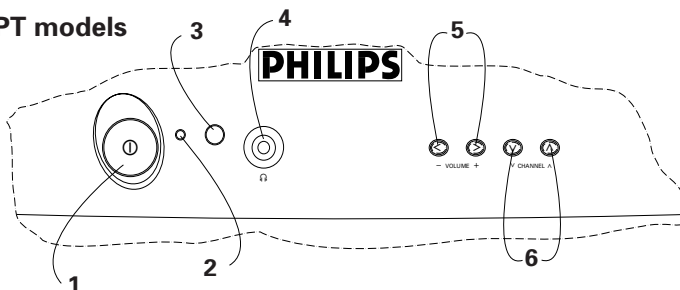

For 29PT models

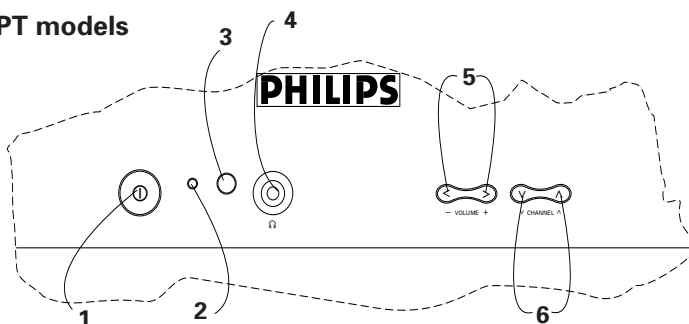 

1. Mains power

Switch on or off the TV.

2. Red light indicator

When light is on, it indicates that the TV is on standby. Note :If no signal is detected by the TV after 10 minutes, it will switch to standby automatically.

3. Remote control sensor

For the remote control to work, it must be activated within the operating range of this sensor.

4. Headphone socket

For connection of headphones.

5. Volume adjustment

 
 
To adjust volume level. Press these 2 keys simultaneously will call up the 1st level menu. Press these 2 keys again will exit menu. Works as cursor left (VOLUME —) or right (VOLUME +) in a menu.

6. Channel selection

To select a lower or higher channel number. Works as cursor up (CHANNEL ^) or down (CHANNEL v) in a menu.

7 Using the remote control

For the remote control to work effectively, it has to be operated within the recommended operating range to the remote control sensor on the TV.

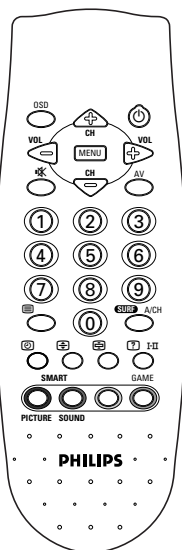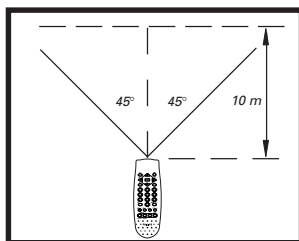

Press :



Screen information



Standby



 
External source



Mute



Menu



**Channel selection/
cursor up
or down**

Result :

In TV mode : Display channel number and sound mode
In a menu : Exit menu.

 
Switch off TV and a red indicator lights up. To switch on TV again, press either the ① to ⑨, , ,  or  key.

Select the external channels AV1 or AV2.

Switch off the sound of the TV. Press again to switch on the sound.

Call up the main menu. If there is an existing menu, pressing this key will bring you back to the previous level menu. If you are in the 1st level menu, pressing this will exit the menu.

TV mode : Select a higher or lower channel number .
In a menu : Scroll up or down.

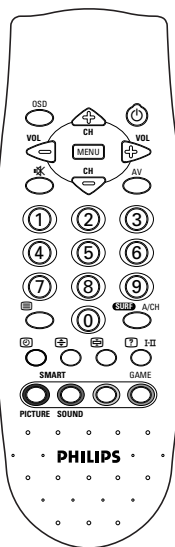**Press :**

Volume adjustment /cursor right or left

 


Digit

to



Surf or alternate channel

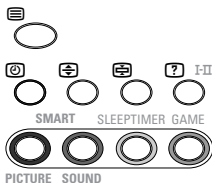Teletext function:

Sound mode

GAME

Game



Smart controls

Result :

TV mode : Adjust the volume of the TV set.
In a menu : Select or execute.

Key in numerals e.g. confidential code in child lock and in channel selection. For a 2-digit channel, the second numeral must be entered before the dash disappears.

Surf mode : Add or delete channel from the surf list. View channel in the surf list.
A/CH mode : Return to the previous channel.

Refer to the section on "Teletext".

Switch from stereo to mono sound (for stereo transmission) or choose between first language or second language (for bilingual transmission).

Select preset channels for games.

Select the presets for sound and picture.

Menus

1st level

BRIGHTNESS		44
COLOUR		28
CONTRAST		55
SHARPNESS		53
HUE		0
COLOUR TEMP	COOL	
CONTRAST PLUS	OFF	
VOLUME		19
BALANCE		0
TREBLE		50
BASS		50
INCREDIBLE ST	OFF	
AVL	OFF	
SLEEPTIMER	OFF	
CHILD LOCK		
SURF	A/CH	
INSTALLATION		

2nd level

CODE	----
CHANNEL	4
LOCK	NO


LANGUAGE	ENG
AUTO STORE	
SWAP	
SKIP	
MANUAL	

3rd level

FROM	3
TO	4
EXCHANGE	

CHANNEL	7
SKIP	NO

SYSTEM	AUTO
SEARCH	VHF1
FINE TUNE	
CHANNEL	2
STORE	

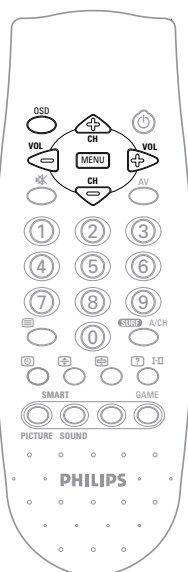 


To call up the 1st level menu :


- Press **MENU** key.

To use the menus:

 
- Press the cursor keys.

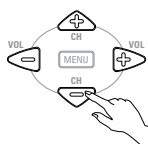

scroll up

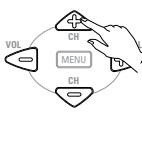 

scroll down

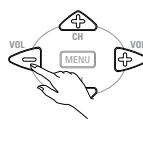 


select or execute

To exit from a menu:

- Press **MENU** key to go back to the previous level.
- OR
- Press **OSD** key to exit.

10 Installing the TV

 Selecting the menu language

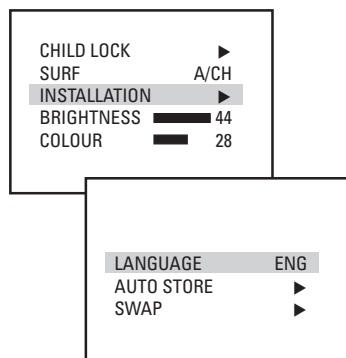


1. Call up 1st level menu with the **MENU** key.
2. Scroll up with the key to highlight INSTALLATION.
3. Select INSTALLATION with the or key.
LANGUAGE is highlighted.
4. Select the language of your choice with the or key.
From now on, all menus and screen information will be in the language that you have chosen.

5. Exit with the key.

Tuning in the TV channels

 There are 2 ways to tune in channels : automatically (by AUTO STORE) or manually (by MANUAL menu).

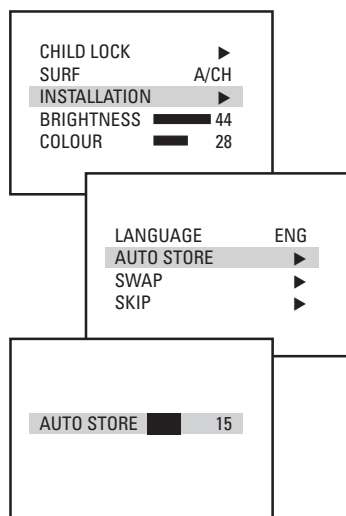


Auto store

Use to tune in channels automatically.

1. Call up 1st level menu with the **MENU** key.
2. Scroll up with the key to highlight INSTALLATION.
3. Select INSTALLATION with the or key.
4. Scroll down with the key to highlight AUTO STORE.
5. Select AUTO STORE with the or key.

 
A tuning bar appears and the TV will automatically store all available channels. Channels will be stored starting from the next channel number .

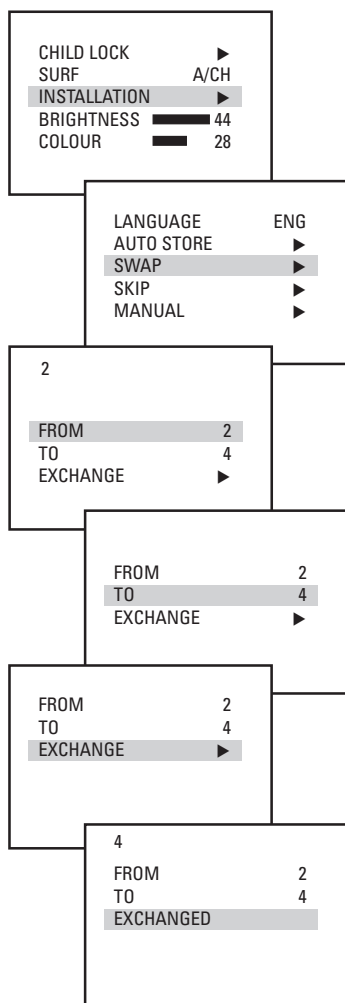

Swap

After the automatic tuning of TV channels, you may wish to rearrange the channel numbers according to your preference.

 1. Call up 1st level menu with the **MENU** key.
 2. Scroll up with the **Up** key to highlight **INSTALLATION**.
 3. Select **INSTALLATION** with the **Left** or **Right** key.
 4. Scroll down with the **Down** key to highlight **SWAP**.
 5. Select **SWAP** with the **Left** or **Right** key. **FROM** is highlighted.
 6. Select the channel you wish to change with the **Left** or **Right** or digit key.
 7. Scroll down with the **Down** key to highlight **TO**.
 8. Select the channel you wish to change to with the **Left** or **Right** or digit key.
 9. Scroll down with the **Down** key to highlight **EXCHANGE**.
 10. Press the **Left** or **Right** key to enter. The word **EXCHANGED** appears to confirm that the channel number is changed.
- To undo the above, press the **Left** or **Right** key.
11. Exit with the **OSD** key.

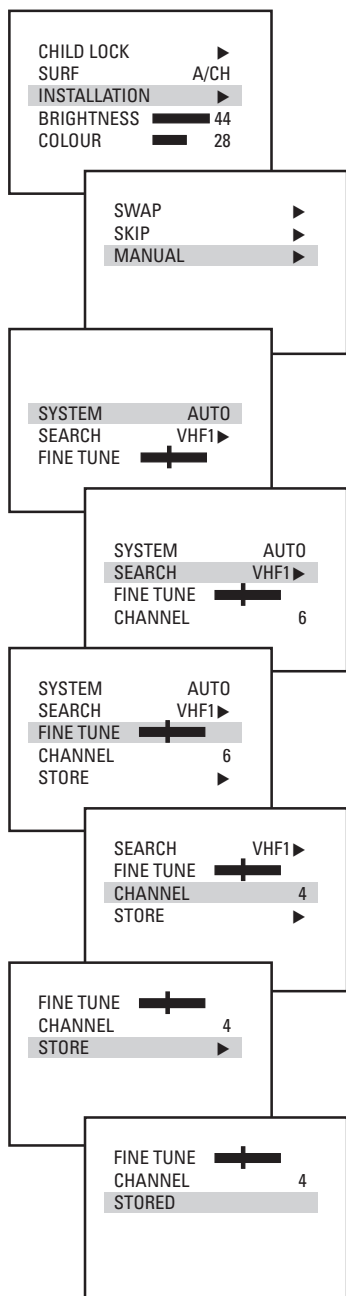

Manual

This menu enables you to search and store every available channel manually.

1. Call up 1st level menu with the key.
2. Scroll up with the key to highlight INSTALLATION.
3. Select INSTALLATION with the or key.
4. Scroll down with the key to highlight MANUAL.
5. Select MANUAL with the or key.
6. Scroll down with the key to highlight SEARCH.
7. Select the band (UHF, VHF1 or VHF3) with the key.
8. Press the key to start searching. Searching stops once a channel is available. If you decide to store the channel, proceed to the next step. If not, press the key to start searching again.
9. If you wish to fine tune the channel, scroll down to highlight FINE TUNE. Press the or key to fine tune.
10. Scroll down with the key to highlight CHANNEL and assign a channel number to the channel that you found.
11. Scroll down with the key to highlight STORE and press the or key to store the channel.
12. Exit with the key.

13

...installing the tv

 
 
 
 
 
How to deal with poor picture reception

You can use these 3 ways to deal with poor picture reception of your TV

- Skip channels
- System selection (for multi and dual system sets only)
- Fine tuning

Do the following steps to go into INSTALLATION menu.



1. Call up 1st level menu with the  key.
2. Scroll up with the  key to highlight INSTALLATION.
3. Select INSTALLATION with the  or  key.

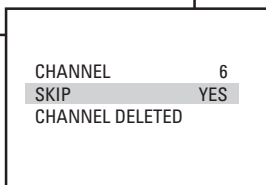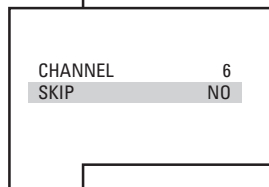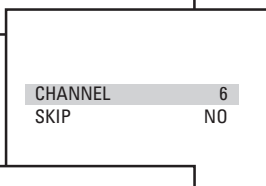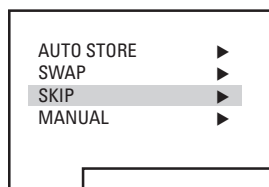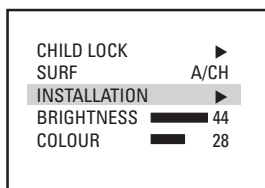

Skip channels

This menu enables you to skip channels which have bad reception or channels which you do not watched often. Once a channel is skipped, you will not be able to select it with the  or  keys.

  1. Scroll down with the  key to highlight SKIP.
2. Select with the  or  key. CHANNEL is highlighted.
3. Enter a channel number.
4. Scroll down with the  key to highlight SKIP.
5. Select YES with the  or  key. CHANNEL DELETED appears to confirm that the channel is skipped. *To unskip channels, repeat step 3 to 5 but select NO instead of YES.*
6. Exit with the  key.

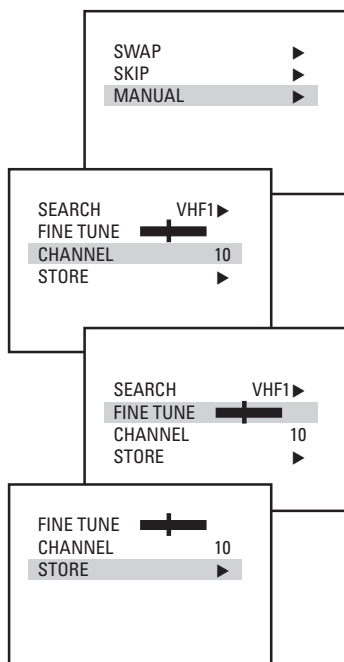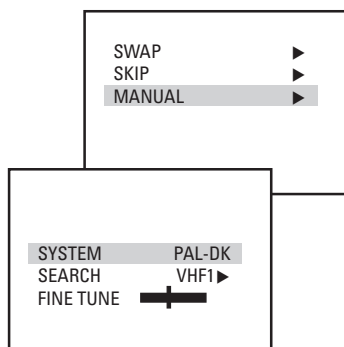

System selection (not applicable for single system sets)

For multi system sets:

This feature enables you to select either PAL-BG, PAL-I, PAL-DK, SECAM-DK, NTSC M or AUTO. If AUTO is selected, it means that the system is automatically selected according to the current transmission.

For dual system sets:

This feature enables you to select either PAL-DK or PAL-I.

1. Scroll down with the key to highlight MANUAL .
SYSTEM is highlighted.
2. Press the or key to select a suitable system.
3. Exit with the key.

Fine tuning

To fine tune the frequency of a channel.

1. Scroll down with the key to highlight MANUAL .
2. Press the or key to select MANUAL.
3. Scroll down with the key to highlight CHANNEL. Enter a channel number which you wish to fine tune.
4. Scroll up with the key to highlight FINE TUNE.
5. Press the or key to start fine tuning until you get the best picture and sound.
6. Scroll down with the key to highlight STORE. Press the or key to store changes.
7. Exit with the key.

15 Picture settings

 
Personal settings

You can do adjustment on BRIGHTNESS, COLOUR, CONTRAST, SHARPNESS, HUE*, COLOUR TEMP and CONTRAST PLUS of a picture via the 1st level menu. This adjustment will automatically be stored in the PERSONAL mode of the SMART PICTURE feature.

(*for NTSC programmes only)

How to do adjustment

1. Call up 1st level menu with the **MENU** key.
2. Scroll up or down with the **↑** or **↓** key to highlight the item that you wish to adjust.
3. Select or adjust with the **←** or **→** key.
4. Exit with the **○** key.

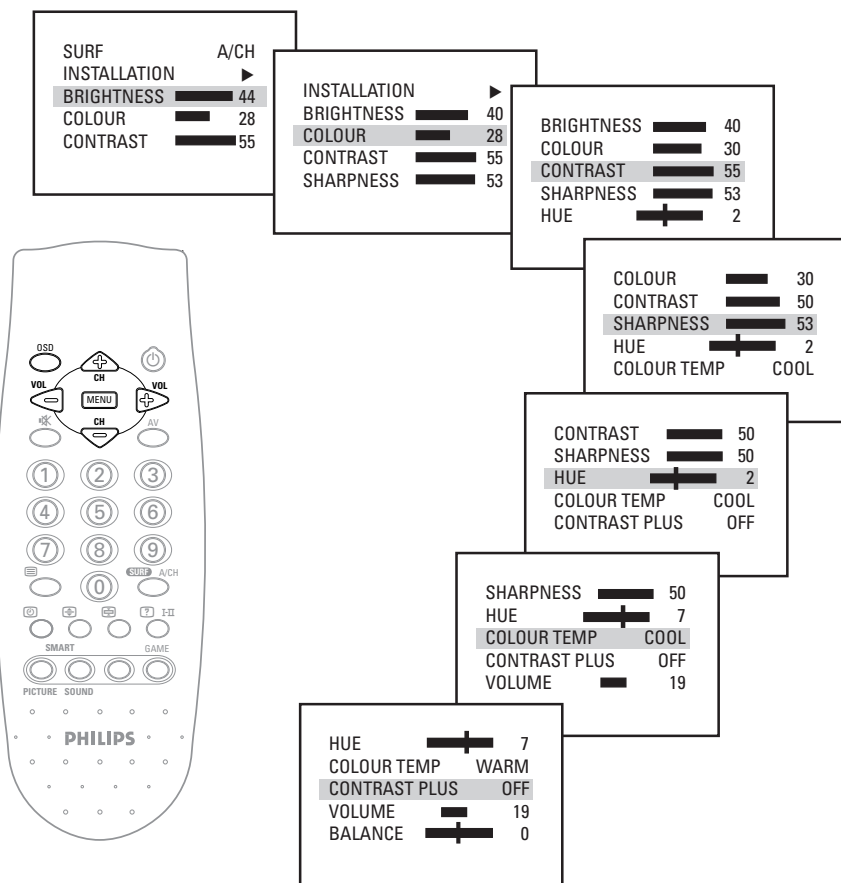


16

...picture settings

Smart Picture

These are some picture presets on the TV for your viewing pleasure. Press the  key repeatedly to select RICH, NATURAL, SOFT or PERSONAL.

 PICTURE

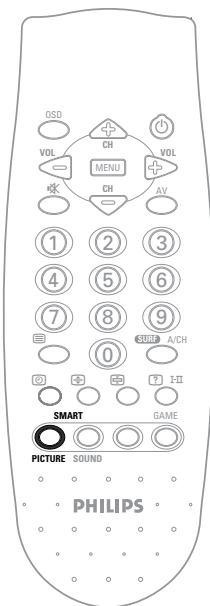

RICH

Very vibrant colours.

NATURAL

Natural and original colours.

SOFT

Warm colours and gives a cinema like effect when light is switched off.

PERSONAL

Your personal picture settings.

 
17 Sound settings

Personal settings

You can do adjustment on VOLUME, BALANCE, TREBLE and BASS of a picture via the 1st level menu. Adjustment on treble and bass will automatically be stored in the PERSONAL mode of the SMART SOUND feature.

How to do adjustment


1. Call up 1st level menu with the **[MENU]** key.
2. Scroll up or down with the **[↑]** or **[↓]** key to highlight the item that you wish to adjust.
3. Select or adjust with the **[←]** or **[→]** key.
4. Exit with the **[OSD]** key.

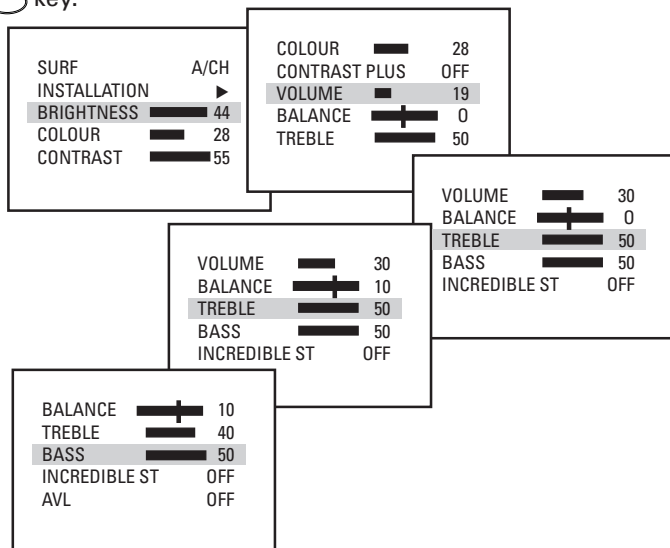

Incredible stereo

A feature to enhance stereo sound. Adjustment done will automatically be stored in the PERSONAL mode of the SMART SOUND feature.

 1. Call up 1st level menu with the **[MENU]** key.
2. Scroll down with the **[↓]** key to highlight INCREDIBLE ST.
3. Select ON with the **[←]** or **[→]** key.
4. Exit with the **[OSD]** key.

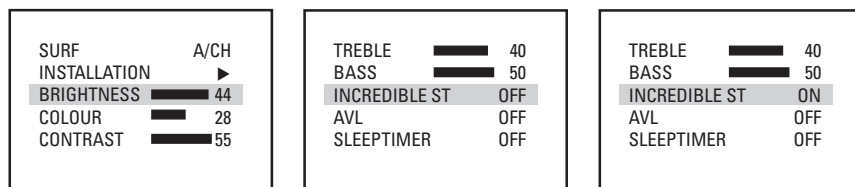

18 ...sound settings

AVL-Auto Volume Leveller

This feature if switched on will automatically adjust any sudden changes in the TV's volume to a preset level.

1. Call up 1st level menu with the **MENU** key.
2. Scroll down with the **DOWN** key to highlight AVL.
3. Select ON with the **LEFT** or **RIGHT** key.
4. Exit with the **OSD** key.

SURF	A/CH
INSTALLATION	▶
BRIGHTNESS	44
COLOUR	28
CONTRAST	55


BASS	50
INCREDIBLE ST	OFF
AVL	OFF
SLEEPTIMER	OFF
CHILD LOCK	▶

BASS	50
INCREDIBLE ST	OFF
AVL	ON
SLEEPTIMER	OFF
CHILD LOCK	▶


Smart Sound

These are some sound presets on the TV for your viewing pleasure. Press the **SMART SOUND** key repeatedly to select VOICE, MUSIC, THEATRE or PERSONAL*.

 
(Note *: "NORMAL" for certain model)

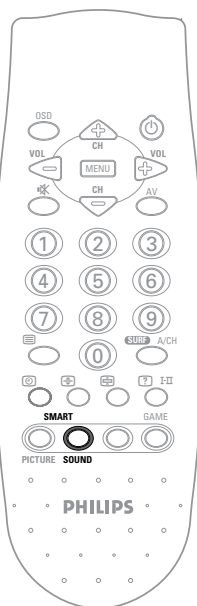


Emphasizes speech frequency.

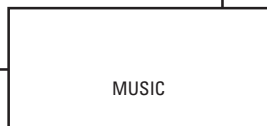 

 Emphasizes bass frequency so that music is dynamic.

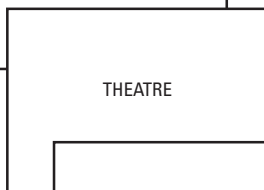

 Emphasizes low and high frequencies to give sensation to the action and a wider sound ambience.

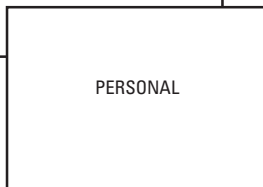


Your personal sound settings.

19 Off air stereo sound (only available in certain models)


If a TV programme is transmitted in NICAM* or STEREO*, you can switch to MONO and back again. When there are two languages in simultaneous transmission, you are able to select either one.

 (*Dependant on the sound system in transmission)

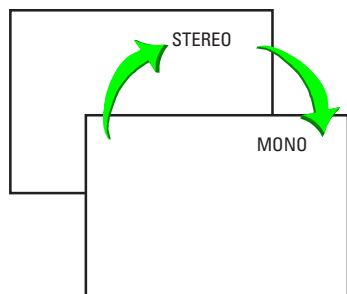

Switch to mono

 Press the key to switch between stereo and mono.

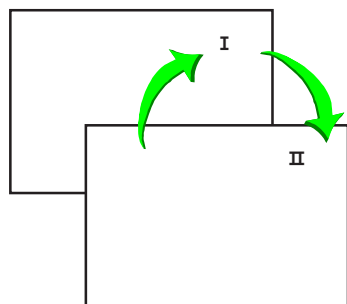

Select first or second language

Press the key to select first or second language.

Personal preference

This built in feature of the TV automatically store the picture and sound settings that you last made to a particular channel in the PERSONAL mode of Smart Picture or Smart Sound.

Personal preference settings

Group 1 :

For channel number 0 to 11, each channel has its own personal preference.

Group 2:


For channel number 12 to 99, one personal preference applies to all. If you make changes to the picture or sound settings of any channel in this group, this will be stored as the personal preference for all.

Group 3:

For channels AV1 and AV2, each channel has its own personal preference.

20 Sleep timer

 Sets timer to switch TV to standby in steps of 15 minutes to a maximum of 120 minutes. To disable timer, set to "OFF".

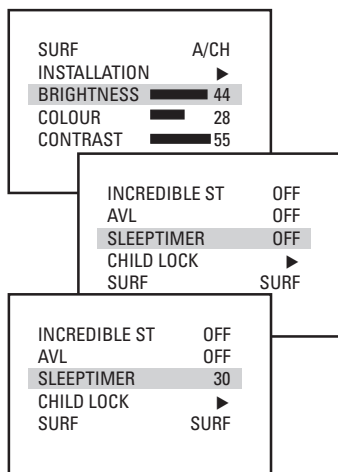

To set timer

1. Call up 1st level menu with the  key.
2. Scroll down with the  key to highlight SLEEPTIMER.
3. Select time period with the  or  key.
4. Exit with the  key.

 
Child Lock

This feature enables you to lock channels which you do not wish others e.g. children to watch. You have a choice to lock all channels (inclusive of AV1 or AV2) or individual channel (up to a maximum of 5 channels). Once a channel is locked:

- if you call channels up with the CHANNEL $\vee$ or $\wedge$ keys on the TV, there will be no picture and sound.
- access to the INSTALLATION sub-menu is disabled


You can only call up channels with your remote control. A message "LOCKED" and "CODE ----" appears on the screen each time you try to call up a channel with the controls on the TV. To bypass the lock mode, you will need to use your remote control to key in the 4-digit confidential code that you have entered when you locked it.

21 ...child lock

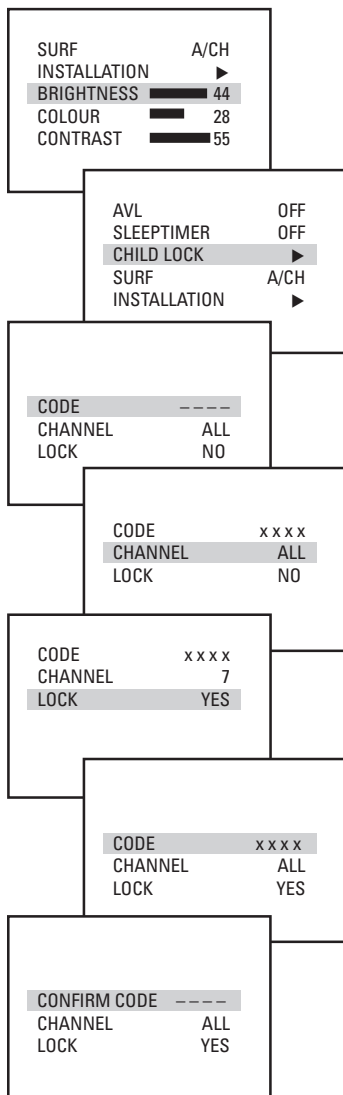

To lock channels

 1. Call up 1st level menu with the key.
2. Scroll down with the key to highlight CHILD LOCK.
3. Press or key to enter menu.
4. Key in the universal code 8888.
If you do not key in the code, you will not be able to change anything on this menu.
5. Press or key to select ALL (to lock all channels) or enter a channel number (to lock individual channels).
6. Scroll down with the key to highlight LOCK.
7. Press or key to select YES to lock the selected channel/s.
8. Repeat steps 5 to 7 for other channels which you wish to lock. Once you have completed, proceed to the next step.
9. Scroll up with the key to highlight CODE. Key in your own 4-digit confidential code. "CONFIRM CODE" appears.
10. Key in the 4 digits again to confirm and use it whenever you want to access to locked channels.
11. Exit with the key.

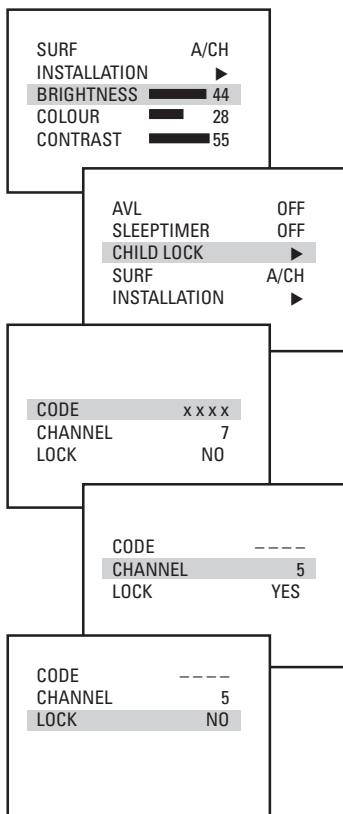

To unlock channels

1. Call up 1st level menu with the key.
2. Scroll down with the key to highlight CHILD LOCK.
3. Press or key to enter menu.

4. Key in the 4-digit confidential code which you have entered when you activate CHILD LOCK mode.

If you key in an incorrect code, all items in the child lock menu can be selected, but it is not possible to change any one of them. If you key in a correct code, CHANNEL will be automatically highlighted.

Tips : If you forget your confidential code, enter the universal code 8888.

 
5. Key in a channel number which you wish to unlock.
6. Scroll down with the key to highlight LOCK.
7. Press or key to select NO to unlock the selected channel.
8. Repeat steps 5 to 7 for other channels which you wish to unlock. Once you have completed, proceed to the next step.

9. Exit with the key.

23 Surf


There are 2 selectable functions:

1. **Surf** : Create a list of channels (maximum 8) whereby when you press the  key on the remote control, you are able to quickly view through all these channels.
2. **A/CH** : When this is selected and if you press the  key on the remote control, you are able to see the previously watched channel.

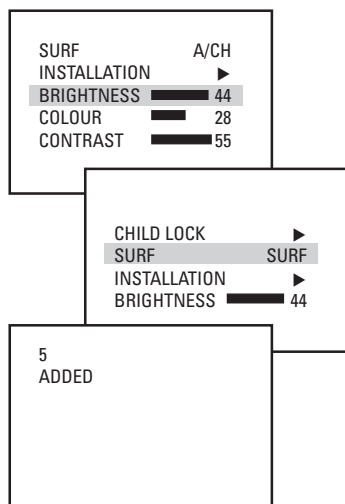


Creating a surf list

 1. Call up 1st level menu with the  key.
2. Scroll up with the  key to highlight SURF.
3. Select SURF with the  or  key.
4. Exit with the  key.
5. Select a channel. Press the SURF key within 4 seconds or while the channel number is still being displayed. "ADDED" appears below the channel number. This means the channel is added to the surf list.
6. Repeat step 5 for other channels which you wish to add to the surf list.

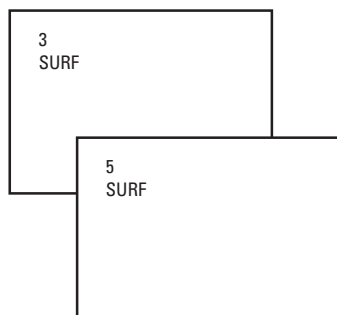


How to call up channels in the surf list

 1. Press the  key once and the TV will switch to the next channel which is on the surf list OR
Press and hold the  key to cycle through all the channels on the surf list.

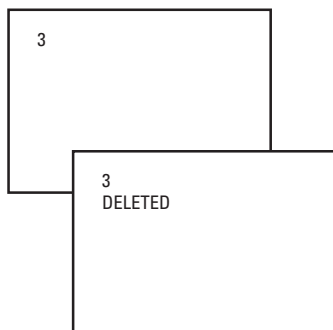

Deleting channels from a surf list

 1. Press the  key to call up channels in the surf list.
2. As soon as you find the channel you wish to delete, press the  key within 4 seconds or while the channel number is still being displayed. "DELETED" appears below the channel number. This means the channel is deleted from the surf list.
3. Repeat step 1 to 2 for other channels which you wish to delete from the surf list.

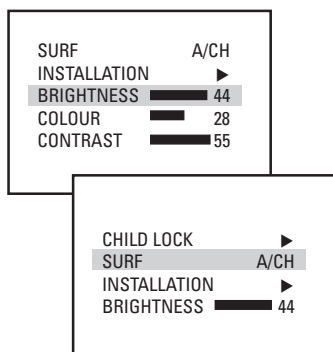


Selecting alternate channel (A/CH)

1. Call up 1st level menu with the  key.
2. Scroll up with the  key to highlight SURF.
3. Select A/CH with the  or  key.
4. Exit with the  key.

When you are viewing a channel (e.g. channel number 6) and if you wish to go back to the previous channel (e.g. channel number 3), press the  key once. If you wish to go back to channel number 6 again, press the  key again.

25

 Teletext (only available in certain models)

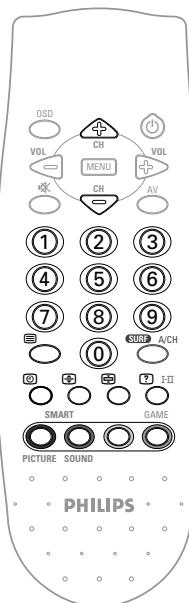

Press :



**on/off
teletext**

Result :

Press once to switch on teletext. Press again to switch off. The main index page is displayed. Each subject has a 3 digit page number. If the selected TV channel does not broadcast teletext, page 100 is displayed and the screen remains black. When this occurs, switch off teletext and select another channel.

coloured keys



Direct access to a subject. Subjects are displayed in 4 coloured bars at the bottom of the page. The coloured keys allow access to the subject in the corresponding colours.



**teletext
page**

The number (3 digits) is displayed at the top left hand corner of the screen and the counter starts searching. The counter will stop searching once the page is found. If the counter continue searching, this means the page is not available. Select another page.



**previous/
next page**

Displays the previous (◀) or the next (▶) teletext page .



reveal

Press once will reveal hidden information (solutions to puzzles, riddles). Press again to conceal.



**clock/
sub page**

In TV mode : Press once to display clock on the top right corner. Press again to switch off display.

In Teletext mode : Call up a sub page (only for teletext page with sub pages). Press once to start. "----" appears on the top left corner. Enter a sub page number e.g. 0003 for the third sub page. The selected page will be displayed with the sub page number.



**enlarge
page**

Press once to enlarge the top half of a page. Press again to enlarge the bottom half. Press the third time to return to normal size.



hold page

Press once to hold a rotating sub page. Press again to resume rotating. The total number of sub pages is indicated on the top right corner, e.g. 1/2 which means this is page 1 of a total of 2 pages.

26 Before calling for service

Please make these simple checks before calling for service as problems pertaining to TV installation and adjustment are not covered under your warranty.

Symptoms	What you should do
Colour patch (unevenness)	• Switch off the TV with the mains power button and wait for at least 20 minutes before switching on again. • Keep your TV away from any speakers or magnetic objects.
"Ghosts" or double images or Teletext garbled (for sets with Teletext only)	• Use of a highly directional antenna may improve the picture as this symptom may be due to obstruction by high rise buildings or hills.
No picture	• Check that the antenna at the back of the TV is properly connected. • Possible TV station problem. Try another channel.
Good picture but no sound	• Increase the volume. • Check that the TV is not muted. If it is, press the  key on the remote control to cancel mute.
Good sound but poor colour or no picture	• Adjust the contrast and brightness setting.
Snowish picture and noise	• Check the antenna connection.
Horizontal dotted lines	• Switch off any nearby electrical appliances e.g. hairdryer, vacuum cleaner etc. as these may have caused interference.
One white line across	• Switch off the TV immediately and call for after sales service.
TV not responding to remote control	• Check batteries and replace them if necessary. • Check that the remote control is operating within the recommended range.
Message "LOCKED ALL" or "LOCKED n" (where n is your current channel number)	• The child lock function is switched on. Refer to the section on "Child Lock-To unlock channels" to switch off the function.

27 Specification

Model type	25PT	29PT
Picture Tube visible area	59 cm	68 cm
Audio output	2 x 5 W	2 x 5 W
Set dimensions: Width	68 cm	76 cm
Height	54 cm	58 cm
Depth	47 cm	51 cm
Nett weight (approx. only)	26 kg	36 kg

TV System	Versions											
	56	57	67	68	69	70	73	74	75	79	93	94
PAL B/G/H	•	•	•	•	•	•	•	•	•	•		•
PAL I	•	•	•	•	•		•	•			•	
SECAM BG/DK	•	•	•	•	•		•	•				
PAL D/K	•	•	•	•	•		•	•			•	
NTSC M	•	•	•	•	•		•	•				
PAL 60 Playback	•	•	•	•	•	•	•	•	•	•	•	•

Note : For operating voltage, frequency, power consumption and model and version number, please refer to the type sticker at the back of the set.



28

INTERNATIONAL GUARANTEE CONDITIONS

This product is guaranteed by Philips for a period of one year after the date of purchase against defects due to faulty workmanship or materials. The guarantee covers both parts and labour.

Service under guarantee is only provided upon presentation of reasonable evidence (e.g. completed guarantee card or purchase receipts) that the date of the claim is within the guarantee period.

The guarantee is not valid if the defect is due to accidental damage (including in transport), misuse or neglect and in case of alterations or repair carried out by unauthorized persons.

The guarantee may not apply if the product requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized or if any damage results from these modifications.

Service (during and after guarantee) is available in all countries where this product is officially distributed by Philips. In countries where Philips do not distribute the product, the local Philips Service organization will also provide Service although there may be a delay if the appropriate spare parts and technical manual are not readily available.

These statements do not affect your statutory rights as a consumer.

In the event of difficulty please contact the Philips Information Centre in any country (see enclosed addresses).

CONDICIONES DE GARANTIAS INTERNACIONALES

Philips garantiza este producto durante 1 año, a partir de la fecha de adquisición, contra defectos debidos a una imperfecta fabricación o malos materiales. Esta garantía cubre tanto las piezas de recambio como la mano de obra.

Las reparaciones que pudieran producirse durante el período de vigencia de la presente garantía se efectuarán solo si se presenta una razonable evidencia (por ejemplo, mediante la presente garantía, debidamente cumplimentada, o la factura de compra), de que la fecha de la queja está dentro del período de garantía.

Esta garantía no tendrá validez si el defecto es debido a un deterioro accidental; un uso inadecuado o un mal trato y en el caso de modificaciones o reparaciones efectuadas por personal no autorizado.

El servicio (durante y después de la garantía) está disponible en todos los países donde el producto es oficialmente distribuido por Philips.

En países donde Philips no distribuya el producto, la organización local de Servicio Philips dará también el servicio necesario, aunque puede producirse una demora si los adecuados recambios no están fácilmente disponibles.

En todo caso, el titular de la garantía tiene todos los derechos mínimos reconocidos por la Ley. En el caso de cualquier dificultad, por favor dirijase al : Centro de Information al Consumidor (vease lista adjunta).

国际保用条款细则

本产品由飞利浦提供一年保用期，自购买日期开始计算之一年内，如因工艺或物料问题而导致产品损坏，飞利浦负责免费为顾客加以维修。此项保用服务包括零件及维修人工费用在内。

顾客必须在保用期内提供合理的证明文件（即完整的保用卡或购买收据），方可享用此项保用服务。

如果损坏是由于意外（包括运输方面），错误或疏忽使用本机，以及由未经本公司授权的人员进行维修而导致的，保用立刻失效。

如果本机需要某些修配，以使它能在不同于原来设计，制造，核准和/或认可的国家使用，又或者因为这些修配而导致本机损坏，保用亦告无效。

飞利浦在所有分销这一产品的国家中均提供有保用服务（包括保用期内及以后）。在没有分销这一产品的国家中，当地的飞利浦服务机构同样也将提供服务，但如果未能轻易获得现成可用的适当配件和技术手册，服务时间可能会有所延迟。

上述说明并不影响阁下作为一位消费者之法定权力，如有困难情况，请联络您国内就近的飞利浦咨询中心。（见所附之地址清单）。





29

CONSUMER INFORMATION CENTRES

WESTERN EUROPE

AUSTRIA

Philips Kunden information
Triesterstrasse 64
A-1100 Wien
Phone : (01)-0660/6201
Fax : (01)-60101 1312

BELGIUM

Philips Consumer Products
Léon Grosjeanlaan 2
B-1140 Brussel
Phone : (02)-702.03.03
Fax : (02)-702.02.60

GERMANY

Philips Infocenter
Consumer Electronics
Alexanderstraße 1
D-20099 Hamburg
Phone : (0180)-535-6767
Fax : (040)-2852-2310
Datex : J*32400#

DENMARK

Philips Konsument Elektronik A/S
Philips Kundecenter
Prags Boulevard 80
DK-2300 København. S.
Phone : 3288 3200
Fax : 3288 3908

FINLAND

Philipsin Asiakaspalvelu
Sinikalliontie 3
P.O. Box 75
SF-02630 Espoo
Phone : (90)-61580 230
Fax : (90)-61580 910

FRANCE

Service Consommateurs Philips
Rue des Vieilles Vignes
Croissy Beaubourg
B.P. 49
F-77423 Marne la Vallée. Cedex 2
Phone : (01)-64805454
Fax : (01)-64613348

GREECE

Philips S.A. Hellenique
25th March Street 15
P.O. Box 3153
G-10210 Athens
Phone : (01)-4894301-880
Fax : (01)-4894344

IRELAND

Philips Electronics Ireland Ltd
Newstead
Clonskeagh
Dublin 14
Phone : (01)-7640000
Fax : (01)-7640175

ITALY

Philips S.P.A.
Servizio Consumatori Philips
Piazza IV Novembre, 3
I-20124 Milano
Phone : 167-820026 (linea verde)
Fax : (02)-67522660

LUXEMBURG

Philips Luxemburg S.A.
19-21, rte. d'Arlon
L-8001 Strassen
Phone : 44 38 38-1
Fax : 45 39 88

the NETHERLANDS

Philips Consumenten Belangen.
Antwoordnummer 500
5600VB Eindhoven
Phone : 06-8406
Fax : (040)-2785187

NORWAY

Norsk A/S. Philips
Philips Kundetjeneste
Sandstuveien 70
Postboks 1
Manglerud
N-0680 Oslo 6
Phone : (022)-748250
Fax : (022)-748511

PORTUGAL

Centro de Informação aos
Consumidores
Estrada da Outurela 118
P-2795 Carnaxide
Lisboa.
Phone : (01)-416.30.63./ (01)-416.69.61
Fax : (01)-416.30.73

SPAIN

Philips Servicio Atención al Cliente
Bernardino Obregón, 26
E-28012 Madrid
Phone : (91)-5300777
Fax : (91)-4678925

SWEDEN

Philips Kundtjänst
Kottbygatan 7.Kista
S-16485 Stockholm
Phone : (08)-632 2250
Fax : (08)-632 2771

**30****CONSUMER INFORMATION CENTRES****SWITZERLAND**

Philips Info Centre
c/o SERLOG Servizio+Logistica S.A.
Fegistrasze 5
Ch-8957
Spreitenbach
Phone : (056)-4177270
Fax : (056)-4177575

UNITED KINGDOM

Philips Consumer Helpdesk
P.O. Box 298
420 London Road
Croydon - Surrey CR9 3QR
Phone : (0181)-665 6350
Fax : (0181)-689 4312

EASTERN EUROPE**CZECH REPUBLIC**

Philips Service
V Mezihorí 2
180 00 Prague
Phone : (02)-6831581
Fax : (02)-66310852

HUNGARY

Philips Markaszerviz
Kinizsi U 30-36
Budapest 1092
Phone : (01)-2164428
Fax : (01)-2187885

POLAND

Philips Polska CE
UL. Marszałkowska 45/49
00-648 Warszawa
Phone : (02)-6286070
Fax : (02)-6288228

RUSSIA

Philips Representation Office
Ul. Usacheva 35A
119048 Moscow
Phone : (095)-247 9125
Fax : (095)-247 9134

TURKEY

Türk Philips Ticaret A.S.
Talatpasa Caddesi No 5
80640-Göltepe/Istanbul
Phone : (0800)-211 40 36
Fax : (0212)-281 18 09

LATIN AMERICA**ANTILLES**

Philips Antillana N.V.
Kaminda A.J.E. Kusters 4
Zeelandia
P.O. Box 3523-3051
Willemstad, Curacao.
Phone : (09)-612799
Fax : (09)-612772

ARGENTINA

Philips Argentina S.A.
Centro de Información al Usuario
Vedia 3892
1430-Buenos Aires.
Phone : (01)-5442047
Fax : (01)-5452928

BRASIL

Philips da Amazona Indústria
Eletrônica Ltda.
Rua Jacerú, 151-Brooklin
04705-000
Sao Paula-SP.
Phone : 800123123
Fax : (011)-5315973

CHILI

Philips Chilena S.A.
Avenida Santa Maria 0760
P.O. Box 2687
Santiago de Chile
Phone : (02)-730 2000
Fax : (02)-777 6730

COLOMBIA

Industrias Philips de Colombia
S.A.-Division de Servicio
Calle 13, No 51-39
Apartado 4282
Bogota.
Phone : (01)-2600600
: 9800-18971 (toll free)
Fax : (01)-2616308

MEXICO

Consumer Information Centre
Norte 45 No.669
Col. Industrial Vallejo
C.P. 02300-Mexico, D.F.
Phone : (05)-3687788/9180050462
Fax : (05)-7284272

PARAGUAY

Philips del Paraguay S.A.
Avenida Artigas 1519
Casilla de Correos 605
Asuncion
Phone : (021)-211666
Fax : (021)-213007

PERU

Philips Peruana S.A.
Customer Desk
Comandante Espinar 719
Casilla 1841
Lima. 18
Phone : (014)-479783
Fax : (014)-468949

**31****CONSUMER INFORMATION CENTRES****URUGUAY**

Ind. Philips del Uruguay S.A.
Avenida Uruguay 1287
Customer Help Desk
11100 Montevideo
Phone : (02)-923392
Fax : (02)-920752

VENEZUELA

Industrias Venezolanas Philips S.A.
Apartado Postal 1167
Caracas 1010-A
Phone : (02)-2377575
Fax : (02)-2376420

NORTH AMERICA**CANADA**

Consumer Service Division
4977 Levy Street
Ville St.Laurent
Quebec H4R2N9
Phone : (514)-9560120
Fax : (514)-9560828

USA

Philips Service Company
P.O. Box 555
Jefferson City TN 37760
Phone : (423)-4758869
Fax : (423)-4750387

PACIFIC**AUSTRALIA**

Philips Consumer Service
Customer Information Centre
3 Figtree Drive
Homebush Bay NSW 2140
Phone : (02)-131124
Fax : (02)-7467970

NEW ZEALAND

Philips New Zealand Ltd.
Consumer Help Desk
2 Wagener Place
Mt. Albert
P.O. Box 1041
Auckland
Phone : 0800 658 224 (toll free)
Fax : (09)-849-7858

ASIA**BANGLADESH**

Philips Service Centre
100 Kazi Nazrul Islam
Avenue Kawran Bazar C/A
Dhaka-1215
Phone : (02)-812909
Fax : (02)-813062

CHINA

Philips Service Logistic Centre
385 Hong Cao Road
Shanghai 200233
Phone : (021)-4726839
Fax : (021)-4726843

Philips Authorized Service Centre
801 Dong Feng Road East
Guangzhou 510080
Phone : (020)-7766990
Fax : (020)-7766990

Philips Authorized Service Centre
Beijing Jing Pu Elec. Service Station
6/F Guo Hu Department Store
Xan Wu Men West Street
Beijing 100053
Phone : (01)-3021589
Fax : (01)-3021589

Philips Authorized Service Centre
148 Fu Jian Road M.
Shanghai 200001
Phone : (021)-3281005/328275
Fax : (021)-3281005

HONG KONG

Philips Hong Kong Limited
Consumer Service Division
Unit A, 10/F., Park Sun Building
103-107 Wo Yi Hop Road
Kwai Chung, N.T.
Phone : 2619-9663
Fax : 2485-3574

INDIA

Philips India
Consumer Relation Centre
Bandbox House
254-D Dr. A Besant Road
Worli
Bombay 400 025
Phone : (022)-4926611
Fax : (022)-4941698

Consumer Relation Centre
7 Justice Chandra Madhab Road
Calcutta 700 020
Phone : (033)-747333
Fax : (033)-4753839

Consumer Relation Centre
3, Haddows Road
Madras 600 006
Phone : (044)-8292221
Fax : (044)-8275208

Consumer Relation Centre
68, Shivaji Marg
New Delhi 110 015
Phone : (011)-5469692
Fax : (011)-5442402



32

CONSUMER INFORMATION CENTRES

INDONESIA

P.T. Philips Development Corporation
Consumer Electronics Service
Philips House 5th floor,
Jl. HR. Rasuna Said Kav. 3-4
Jakarta 12950
Phone : (021)-5201122
Fax : (021)-5205190

JAPAN

Philips Consumer Electronics
1-11-9, Ebisuminami
Shibuya-Ku
Tokyo 150
Phone : (03)-3719-2235
Fax : (03)-3715-9992

KOREA

Philips Korea Ltd.
Philips House
C.P.O. Box 3680
260-199,
Itaewon-Dong
Yongsan-Ku
Seoul 140-202
Phone : (02)-5961195/1196
: (02)-5967632/76325
Fax : (02)-5959688

MALAYSIA

Philips Malaysia Sdn. Berhad
Service Dept.
No.51, sect. 13 Jalan University
46200 Petaling Jaya, Selangor
P.O. Box 12163
50768 Kuala Lumpur
Phone : (03)-7562144
Fax : (03)-7560761

PAKISTAN

Philips Electr. Ind. of Pakistan Ltd.
Service Centre
Mubarak Manzil
39 Garden Road
Karachi-3
Phone : (021)-7737411-16
Fax : (021)-7726504

Philips Consumer Service Centre
168-F, Adamjee Road
Rawalpindi Cantt.
Phone : (051)-580902-3
Fax : (051)-584944

PHILIPPINES

Philips Electronics and Lighting Inc.
106 Valero St. Salcedo-Village
Makati, Metro Manila
Phone : (02)-8100161
Fax : (02)-8173474

SINGAPORE

Philips Singapore Private Ltd.
Consumer Service Dept.
Lorong 1, Toa Payoh
P.O. Box 340
Singapore 319762
Phone : 3502000
Fax : 2508037

TAIWAN

Philips Taiwan Ltd.
Consumer Products Division
4F-1, 5, Lane 768, Pateh Rd, Sec 4
P.O. Box 22978
Taipei
Phone : (02)-7882856
Fax : (02)-7882851

THAILAND

Philips Electronics (Thailand) Ltd.
Philips Service Centre
209/2 Sanpavut Road
Bangna
Bangkok 10260
Phone : (02)-3980141/3980790
Fax : (02)-3983319

AFRICA

MOROCCO

Philips Electronique Maroc.
304, BD Mohamed V.
Casablanca
Phone : (02)-302992
Fax : (02)-303446

SOUTH AFRICA

South Africa Philips
S.V. Div. 195 Main R.D.
Martindale
Johannesburg
P.O. Box 58088
Newville 2114
Phone : (011)-4705911
Fax : (011)-4705250

MIDDLE EAST

Philips Export B.V.
P.O. Box 17078
Jebel Ali
DUBAI
United Arab Emirates
Phone : (04)-313377
Fax : (04)-836128