



MCD 288











Quick Start Guide



- Step A *Connect*
- Step B *Setup*
- Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

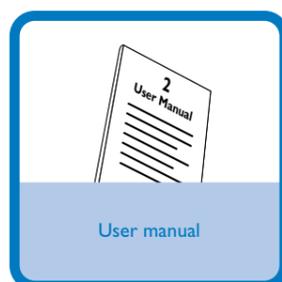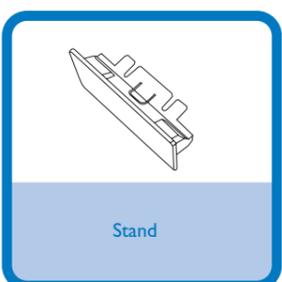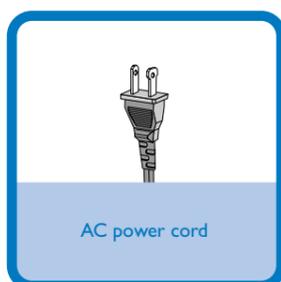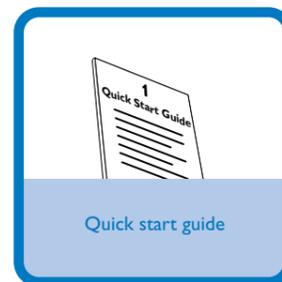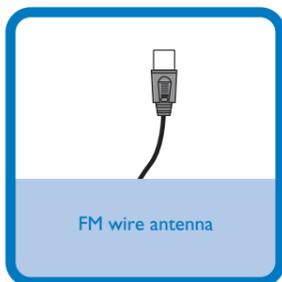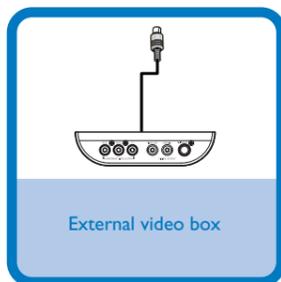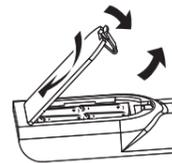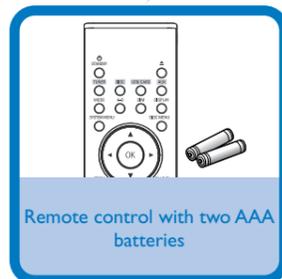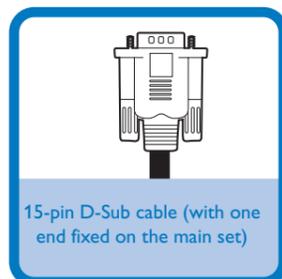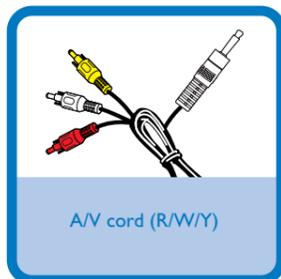

PHILIPS

Step A Connect

Tips


- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.

1 Connect the speaker (subwoofer) cables.

2 Connect the FM antenna.

3 Connect the A/V cord to a TV.

4 Connect the power cords of the system and TV.

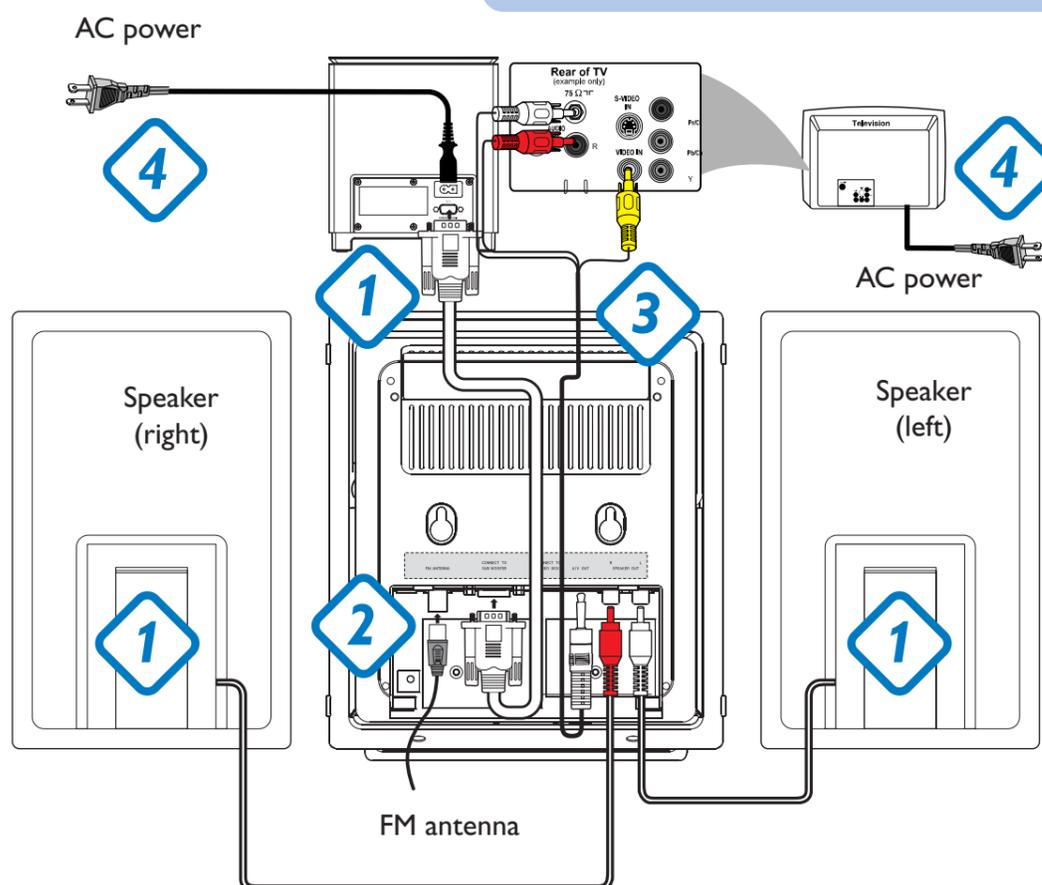


Step B Setup

Setting up the TV

1 Press **SOURCE** (**DISC** on the remote) to select disc source.

2 Turn on the TV and set it to the correct Video In channel.

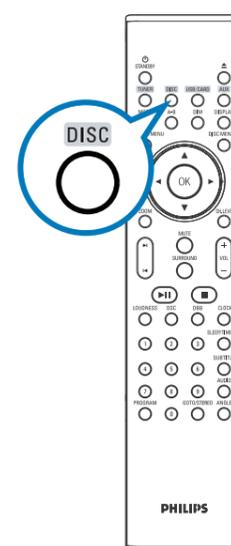

Step B Setup

Setting the clock

IMPORTANT!

– To set clock in the Eco Power mode, press and hold **STANDBY-ON/ECO POWER**  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **CLOCK** on the remote.

2


When the hour digits flash, press **VOLUME-/+** (**VOL+/-** on the remote) to set the hours.

3

Press **CLOCK** again and the minute digits flash. Then press **VOLUME-/+** (**VOL+/-** on the remote) to set the minutes.

4

Press **CLOCK** again to confirm the time setting.

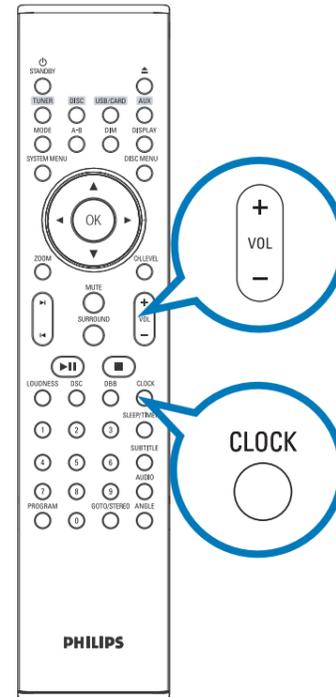

Setting DVD menu options


IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to interlaced mode.
- 2) Press **SYSTEM MENU** on the remote to exit the system menu and then **DISC** to exit progressive scan.

<p>SYSTEM SETUP</p> <ul style="list-style-type: none"> TV SYSTEM SCREEN SAVER CLOSED CAPTIONS TV TYPE PASSWORD RATING DEFAULT DIVX(R) VOD 	<p>VIDEO SETUP</p> <ul style="list-style-type: none"> COMPONENT TV MODE BRIGHTNESS CONTRAST HUE SATURATION 	<p>AUDIO SETUP</p> <ul style="list-style-type: none"> DIGITAL OUT DOWNMIX 3D PROCESSING LPCM NIGHT MODE
<p>LANGUAGE SETUP</p> <ul style="list-style-type: none"> OSD LANGUAGE AUDIO LANG SUBTITLE LANG MENU LANG 		

Tip
See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

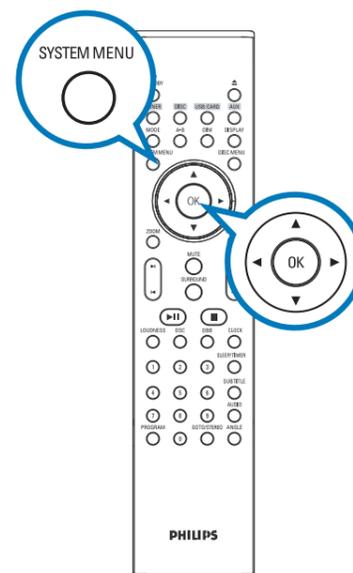


Step C Enjoy

Playing a disc

- 1 Insert a disc into the slot loader.
 - Make sure the label side is facing you.
 - Make sure you have removed any other disc from the slot loader.


- 2 Playback will start automatically. If not press ►||.

- 3 To stop playback, press ■.

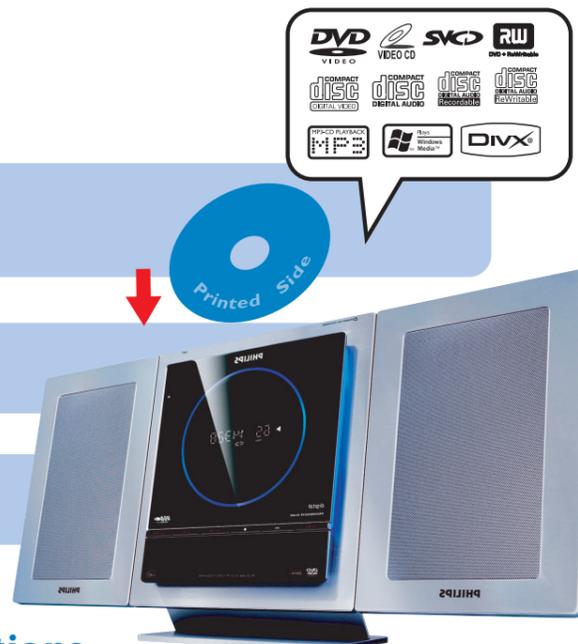

Programming and tuning to radio stations

- 1 Press **SOURCE** (**TUNER** on the remote) to select tuner source.
- 2 Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.
- 3 Press **PRESET** ◀/▶ until the desired preset station is displayed.

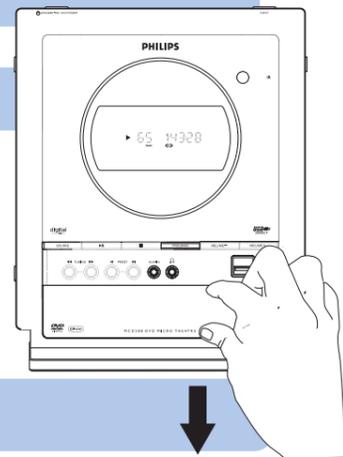

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more to select **USB** (or **USB/CARD** on the remote control).
- 3 Play the USB's audio files as you do with the albums/tracks on a CD,

IMPORTANT!
Slide down to expose some buttons and jacks on the front panel!

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

