

Your Television's Directions for Use



Read this manual first!

Congratulations on purchasing this Philips product. We've included everything you need to get started. If you have any problems, Philips Representatives can help you get the most from your new product by explaining:

- · Hookups,
- · First Time Setup, and
- · Feature Operation.

Do not attempt to return this product to the store.

For fast help, call us first! 1-800-531-0039

Thank you for making Philips a part of your home!

Let's make things better.



PHILIPS

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty | Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty
Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Congratulations on your purchase, and welcome to the "family!"





Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network. And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a PHILIPS product.

Sincerely,

Philips Consumer Electronics Company

P.S. Remember, to get the most from your PHILIPS product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!

Know these **safety** symbols



This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.


ATTENTION: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

IMPORTANT SAFETY INSTRUCTIONS Read before operating equipment

- 1. Read these instructions.
- 2. Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- 5. Do not use this apparatus near water.
- Clean only with a dry cloth.
- 7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **10.** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- **13.** Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- **15.** Damage Requiring Service The appliance should be serviced by qualified service personnel when:
 - The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
- **16. Tilt/Stability** All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinet design.
 - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
 - Also, do not éndanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
- Wall or Ceiling Mounting The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- **18. Power Lines** An outdoor antenna should be located away from power lines.
- 19. Outdoor Antenna Grounding If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.
 - Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mats and supporting structure grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Figure below.
- 20. Object and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

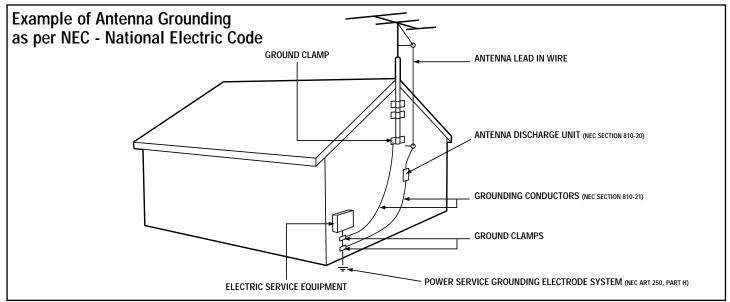

3

Rev. 2/23/01

TABLE OF CONTENTS

<u>Introduction</u>
Welcome/Registration of Your TV
Safety Instructions
Table of Contents
Picture Menu
How to use the Picture Adjustment Controls5
How to use the DNR (Digital Noise Reduction) Control 6
How to use the Contrast + (Black Stretch) Control
Sound Menu
Using the Treble, Bass, and Balance Controls8
How to Use the AVL Control
Setting the Incredible Surround Control
Setting the TV for SAP (Secondary Audio Programs)11
Setting the TV to receive Stereo Programming
Features Menu Using the Timer Controls
Using the Timer Controls
Understanding the AutoLock Controls
Setting Up the AutoLock Access Code
How to Clear All Channels at the Same Time
How to Block All Channels at the Same Time
Blocking Programming Based on Movie Ratings
Blocking Programming Based on TV Ratings
Additional AutoLock Blocking Options
How to Use the Closed Captioning Control22
Audio/Video Connections
Using the A/V Inputs Jacks
Using the A/V Output Jacks
Using the S-Video Input Jack
Using the Front A/V Input Jacks and Headphone Jack26
Remote Control Use
Setting up the Sleeptimer Option
Setting the Auto Picture Control
Setting the Auto Sound Control
Using the Quadra Surf Buttons (Alternate Channel) .30-31
Remote Use with Accessory Devices (Direct Method)32
Remote Use with Accessory Devices (Code Entry)33
Remote Use with Accessory Devices (Search Method)34
Remote Code Entry List
Remote VCR Related Buttons
General Information
Troubleshooting Tips
Glossary of Terms
Index
Factory Service Location
Warranty
wanany

Here are a few of the special features built into this new Color Television:

AutoLockTM feature allows you to block the viewing of certain channels or external audio/video connections where you might not want your children viewing inappropriate material.

Infrared Remote Control works your TV set, and allows you to program certain features with the press of one button. Can also be used with accessory devices such as VCRs, DVDs, Cable Boxes, and more.

Audio/Video Jackpanel for direct connections of accessory devices. There are even convenient Front A/V Inputs for Camcorder use and Headphones.

Standard broadcast (VHF/UHF) or Cable TV (CATV) channel capability.

Closed Captioning allows the viewer to read TV program dialogue or voice conversations as on-screen text.

Automatic Programming of Channels for quick and easy selection of favorite stations available in your area.

On-screen Features (in either English or Spanish) show helpful messages for setting of TV controls.

On Timer automatically turns the TV ON at a preset time, and channel.

Sleeptimer automatically turns the TV OFF at preset times.

Auto Picture[™] allows you to set the picture color, tint, contrast, etc. for various types of programming such as Sports, Movies, Personal, Weak Signal, or Multi Media with the push of one button.

Auto SoundTM controls allow you to set the sound controls for various types of listening programs such as Personal (sound controls the way you set them), Theater, Music, or Voice with the push of one button.

Treble, Bass and Balance controls to enhance the television's sound.

NOTE: It is possible that this owner's manual may be used with several different television models. Not all features (and drawings) discussed in this manual will necessarily match those found with your television system. This is normal and does not require you contacting your dealer or requesting service.

How to Use the Picture Adjustment Controls

To adjust your TV picture controls, select a channel and follow the steps shown below:

(BEGIN)

Press the MENU button on the remote to display the on-screen menu.

2> Press the CURSOR UP ▶ or DOWN buttons until the word PICTURE is highlighted.

3 Press the CURSOR RIGHT ▶▶ button to display the PICTURE menu features.

4 Press CURSOR UP ▶ or DOWN

■ buttons to scroll the Picture features and highlight the control you wish to adjust (Brightness, Color, Picture, Sharpness, Tint, or Color Temp.).

or the CURSOR RIGHT ►►

or the CURSOR LEFT ← buttons
to adjust the selected control or to make
selections for the Color Temp. control
(Normal, Warm, or Cool).

6 Press the CURSOR UP ▶ or
DOWN ■ buttons to select and adjust
other Picture Menu controls.

When finished, press the STATUS
/EXIT button to remove the menu
from the TV's screen.



SMART HELP

BRIGHTNESS Press the ▶►

or ◄◄ buttons until darkest parts of the picture are as bright as you prefer.


<u>COLOR</u> Press the ▶▶ or ◀◀ buttons to add or eliminate color.

PICTURE Press the ▶▶ or ◀◀ buttons until lightest parts of the picture show good detail.

SHARPNESS Press the ▶▶ or ◀◀ buttons to improve detail in the picture.

<u>TINT</u> Press the ▶▶ or ◀◀ buttons to obtain natural skin tones.

COLOR TEMP Press the ▶▶ or ◀◀ buttons to select NORMAL, COOL, or WARM picture preferences. (NORMAL will keep the whites, white; COOL will make the whites, bluish; and WARM will make the whites, reddish.)

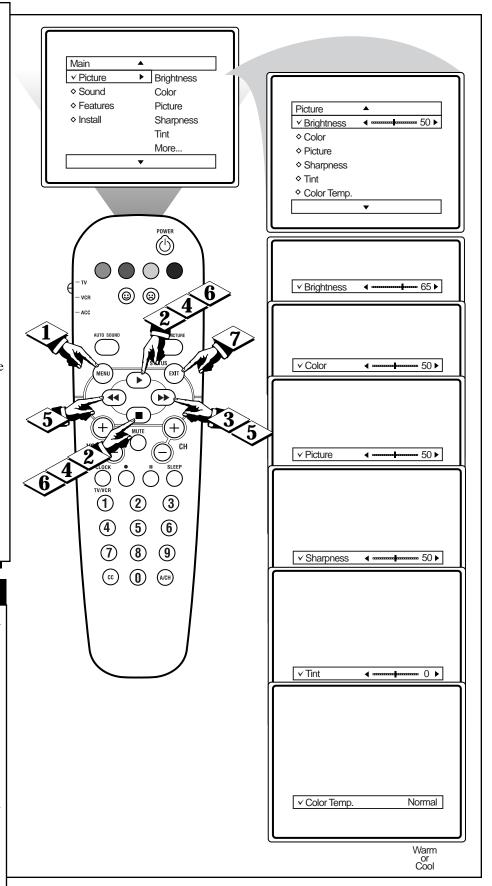

How to Use the DNR (Noise Reduction) Control

For reasons such as poor cable reception, the picture can sometime appear slightly "speckled" (or has signal noise shown in the picture). The DNR (Dynamic Noise Reduction) control can help eliminate this type of interference and improve the quality of the picture.

(BEGIN)

Press the MENU button on the remote to display the on-screen menu.

2 Press the CURSOR UP ▶ or CURSOR DOWN ■ button until the word PICTURE is highlighted.

3 Press the CURSOR RIGHT ▶▶ button to display the PICTURE menu features.

Press the CURSOR UP ➤ or CURSOR DOWN ■ button to scroll the Picture menu features until the word DNR is highlighted.

5 Press the CURSOR RIGHT **b** button turn the DNR feature ON or OFF.


6 When finished, press the STATUS /EXIT button to remove the menu from the TV's screen.



SMART HELP

"Noise" Reduction is a video adjustment feature that affects the picture quality of the TV not the sound.

NOTE: If the Sharpness control setting is under 50 (see Picture Adjustments on the previous page), the DNR control will have little or no effect to the TV's picture when switched to ON.

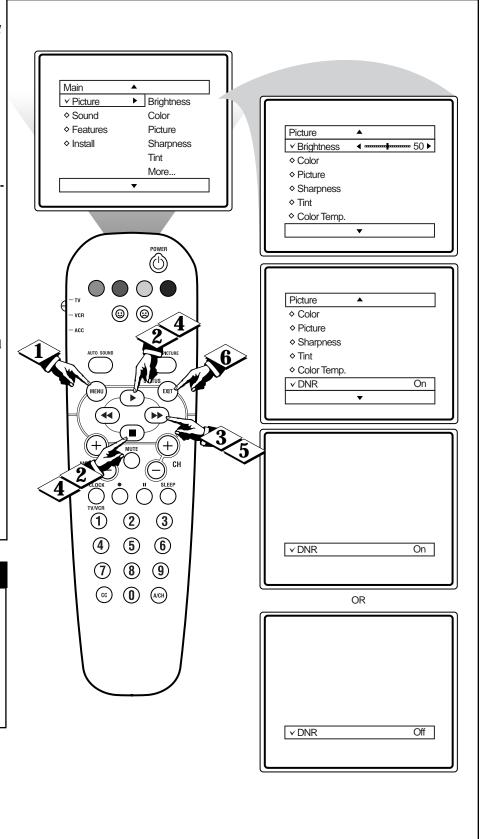

How to Use the Contrast + (Black Stretch) Control




The Contrast + (Black Stretch) control helps to "sharpen" the picture quality. The black portions of the picture become richer in darkness and the whites become brighter.

(BEGIN)

- Press the MENU button on the remote to display the on-screen menu.
- Press the CURSOR UP ➤ or CURSOR DOWN button until the word PICTURE is highlighted.
- 3 Press the CURSOR RIGHT ▶▶ button to display the PICTURE menu features.
- 4 Press the CURSOR UP ▶ or CURSOR DOWN button to scroll the Picture menu features until the word CONTRAST + is highlighted.
- button turn the CONTRAST + feature ON or OFF.

 button turn the CONTRAST + feature ON or OFF.
- 6 When finished, press the STATUS
 /EXIT button to remove the menu
 from the TV's screen.



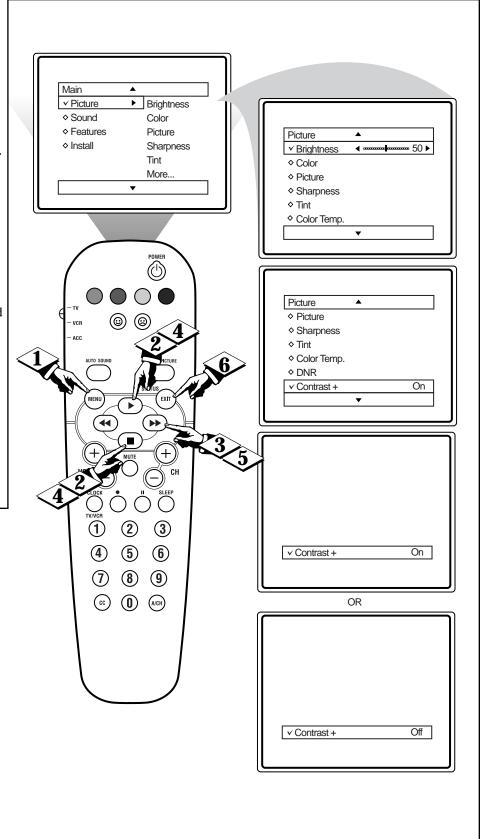




HOW TO ADJUST THE BASS, TREBLE, AND BALANCE CONTROLS

Besides the normal volume level control, your TV also has Bass, Treble and Balance sound controls. The TRE-BLE control effects only the high frequency sound coming from the TV enhancing the highs; while the BASS control effects only the low frequency sound coming from the TV enhancing the lows. The Balance control adjusts the sound level being heard from each speaker.

(BEGIN)

- Press the MENU button on the remote to display the on-screen menu.
- Press the CURSOR UP ➤ or CURSOR DOWN button until the word SOUND is highlighted.
- 3 Press the CURSOR RIGHT ▶▶ button to display the SOUND menu features.
- Press the CURSOR UP ➤ or CURSOR DOWN button to scroll the Sound menu features until the words TREBLE, BASS or BALANCE are highlighted.
- 5 Press the CURSOR RIGHT ▶▶
 or LEFT ◀◀ button to adjust the
 Treble, Bass or Balance controls.
- 6 When finished, press the STATUS /EXIT button to remove the menu from the TV's screen.



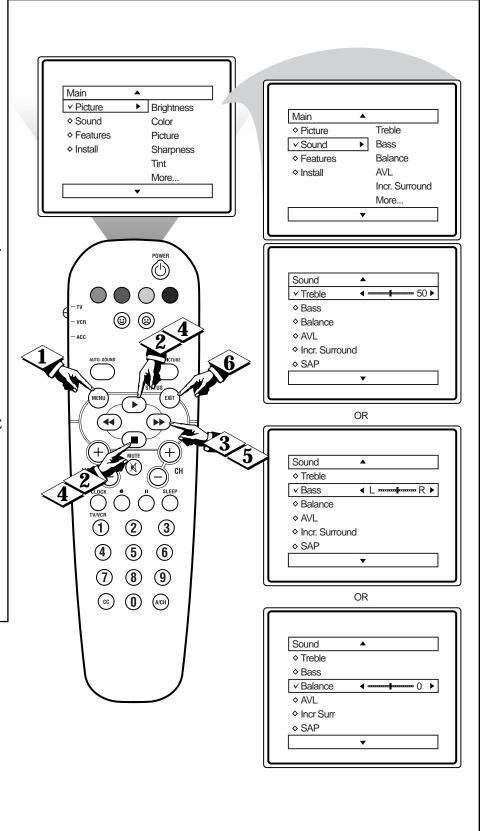

How to Use the AVL (Automatic Volume Leveler) Control



In most cases, the volume levels com-**I** ing from broadcast programming or commercials are never the same. With the AVL (Audio Volume Leveler) control turned ON, you can have the TV level out sound that is being heard. This makes for a more consistent sound by reducing the peaks and valleys that occur during program changes or commercial breaks. To turn the AVL ON, follow these steps.

(BEGIN)

1 Press the MENU button on the remote to display the on-screen menu.

2 Press the CURSOR UP ▶ or CUR-**SOR DOWN** ■ **button** until the word **SOUND** is highlighted.


3 Press the CURSOR RIGHT ▶▶ **button** to display the **SOUND** menu features.

4 Press the CURSOR UP \triangleright or **CURSOR DOWN** ■ button to scroll the Sound menu features until the word **AVL** is highlighted.

button to turn the **AVL** control ON or

 $\stackrel{\textstyle <}{\textstyle <}$ When finished, press the STATUS /EXIT button to remove the menu from the TV's screen.



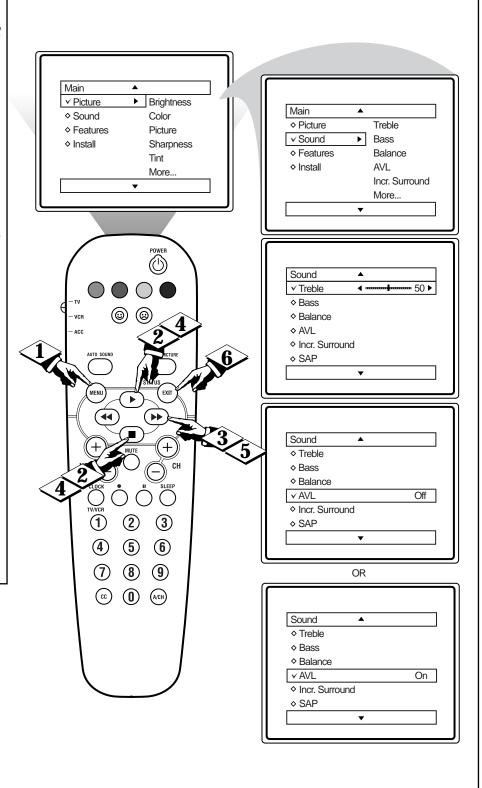



SETTING THE INCREDIBLE SURROUND CONTROL

The Incredible Surround feature adds greater depth and dimension to both monaural (MONO) and stereo TV sound. With the control turned ON the TV's speakers can add even wider sound separation to normal broadcasts.

(BEGIN)

Press the MENU button on the remote to display the on-screen menu.

2 Press the CURSOR UP ▶ or CURSOR DOWN ■ button until the word SOUND is highlighted.

3 Press the CURSOR RIGHT ▶▶ button to display the SOUND menu features.

4 Press the CURSOR UP ➤ or CURSOR DOWN ■ button to scroll the Sound menu features until the words INCR. SURROUND are highlighted.

5 Press the CURSOR RIGHT ▶▶ button to set the Incredible Surround control as follows:

MONO: When in the Mono Sound Mode, Incredible Surround can be set to Mono or Spatial.

STEREO: When in the Stereo Sound Mode, Incredible Surround can be set to Stereo or Incredible Surround.

6 When finished, press the STATUS /EXIT button to remove the menu from the TV's screen.




SMART HELP

NOTE: If the TV signal is being received from a mono source, pressing the INCR. SURR. button will cause either MONO or SPATIAL to appear on the the screen. If the TV signal is being received from a stereo source and the "Sound" control is set to Stereo, pressing the INCR. SURR. button will toggle two choices: STEREO and INCR. SURROUND.

SPATIAL – widens the "Mono" sound, simulating a broader, fuller sound.

INCR. SURROUND – widens the "Stereo" sound, simulating a broader, fuller sound.

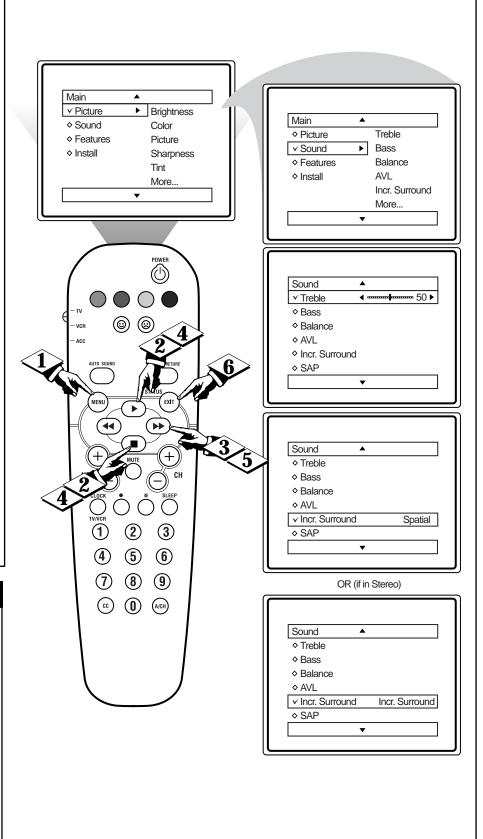

SETTING THE TV FOR SAP (SECONDARY AUDIO PROGRAMS)




A SAP signal is an additional part of the stereo broadcast system. Sent as a third audio channel, a SAP signal can be heard apart from the current TV program sound. TV stations are free to use SAP for any number of purposes.

If a SAP signal is not present with a selected program, the SAP option cannot be selected. Also, if SAP is selected on a channel (with SAP) and you select another channel, when you return to the original channel, SAP will be OFF. You will have to reselect the SAP feature.

(BEGIN)

- Press the MENU button on the remote to display the on-screen menu.
- Press the CURSOR UP ▶ or CURSOR DOWN button until the word SOUND is highlighted.
- 3 Press the CURSOR RIGHT >> button to display the SOUND menu features.
- 4 Press the CURSOR UP ▶ or CURSOR DOWN button to scroll the Sound menu features until the word SAP is highlighted.
- 5 Press the CURSOR RIGHT **b button** to turn the **SAP** control ON or OFF.
- 6 When finished, press the STATUS /EXIT button to remove the menu from the TV's screen.



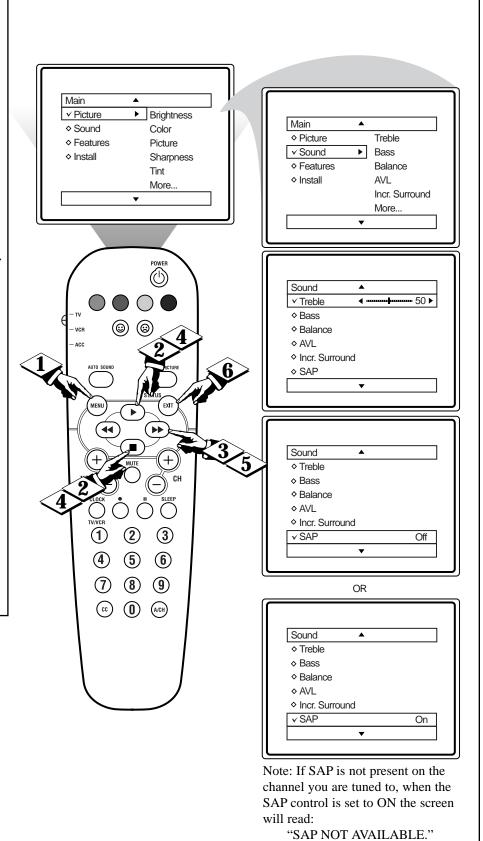



SETTING THE TV TO RECEIVE STEREO PROGRAMMING

You can receive broadcast stereo TV programs. The TV has both an amplifier and twin speakers through which the stereo sound can be heard.

(BEGIN)

Press the MENU button on the remote to display the on-screen menu.

Press the CURSOR UP ▶ or CURSOR DOWN ■ button until the word SOUND is highlighted.

3 Press the CURSOR RIGHT ▶▶ button to display the SOUND menu features.

4 Press the CURSOR UP ▶ or CURSOR DOWN ■ button to scroll the Sound menu features until the word SOUND is highlighted.

button to set the Sound control to
Mono or Stereo.

6 When finished, press the STATUS


/EXIT button to remove the menu
from the TV's screen.



SMART HELP

Remember, if stereo is not present on a selected show, the Sound control cannot be changed to Stereo. On the other hand, if stereo is present on a selected show the Sound control can be set to Mono.

When channel changes are made, the screen may indicate Mono for a second or two, then change to Stereo if the signal being received is in stereo.

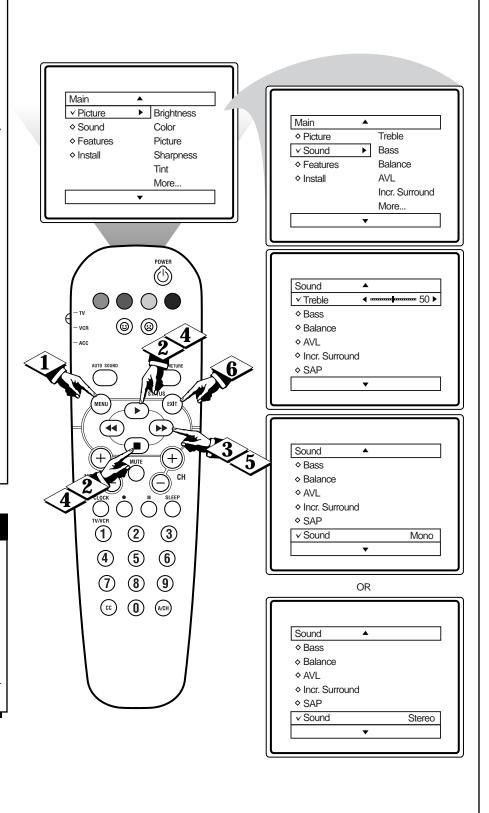

How to the Timer Controls

The Timer controls allow you to use your TV as an alarm clock if set to turn itself on and off at a specific time. It also can be set to tune to a specific channel at a specific time.

(BEGIN)

Press the CLOCK button on the remote. The Timer menu will appear on the screen.

2 Press the CURSOR UP ▶ or
DOWN ■ button to highlight one of
the Timer controls you wish to set
(Time, Start Time, Stop Time, Channel,
Activate, or Display).

3 Press the CURSOR RIGHT ▶▶ button to adjust the selected option.

TIME: Enter the current time with the numbered buttons. Use the Cursor Right button to move to the AM/PM area and use the Cursor Left or Right buttons to toggle AM or PM.

START TIME: Use the numbered buttons to enter a start-up time for the TV to turn on or to tune a specific channel.

STOP TIME: Use the numbered buttons to enter a time for the TV to shut itself off.

CHANNEL: Use the Numbered buttons or the CH + or - buttons to select a specific channel for the TV to tune to at the specific Start Time.


ACTIVATE: Set the Timer to preform it's function ONCE or DAILY.

DISPLAY: Set to ON or OFF. When ON, the time will be displayed ALL the time the TV in ON. When OFF, the time will only appear when the STATUS/EXIT button is pressed.

When finished, press the STATUS

/EXIT button to remove the menu from the TV's screen.



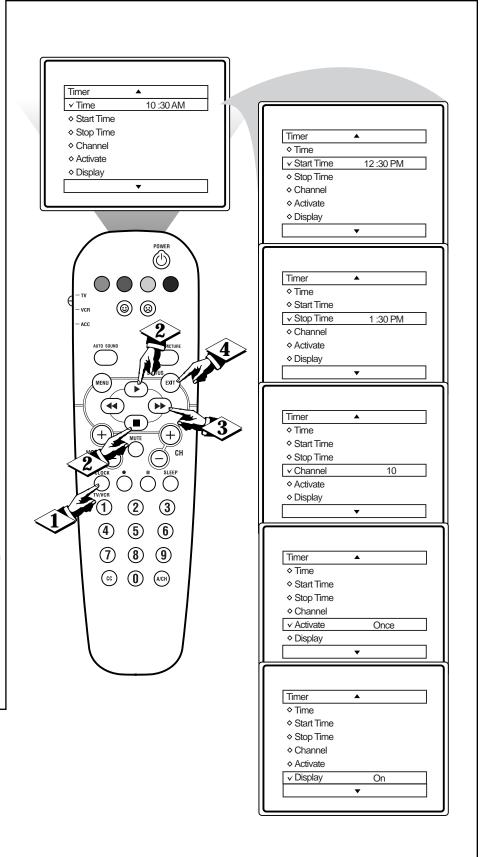



UNDERSTANDING THE AUTOLOCK CONTROLS

The AutoLock feature is an integrated circuit that receives and processes data sent by broadcasters, or other program providers, that contain program content advisories. When programmed by the viewer, a TV with AutoLock can respond to the content advisories and block program content that may be found objectionable (such as offensive language, violence, sexual situations, etc.). This is a great feature to censor the type of viewing children may watch.

Over the next few pages you'll learn how to block channels and certain rated programming. Below is a brief explanation of some terms and ratings you will find in the AutoLock feature.

AutoLock offers various BLOCKING controls from which to choose:

Access Code: An Access Code must be set to prevent children from unblocking questionable or censored programming set by their parents.

Channel Block: After an access code has been programmed, you can block individual channels including the A/V inputs.


Clear All: Allows you clear all channels being blocked from your viewing set with the Channel Block Control.

Block All: Allows you to block ALL channels and A/V inputs at one time.

Movie Ratings: Certain blocking options exist which will block programming based on ratings patterned by the Motion Pictures Association of America.

TV Ratings: Just like the Movie Ratings, programs can be blocked from viewing using standard TV ratings set by TV broadcasters.

To learn more about the Motion Picture Association of America Ratings and the TV Broadcasters Television Ratings, refer to the definitions listed on the columns to the right.

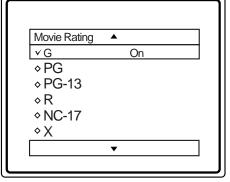

TV Rating	_		
✓ TV-Y		On	
♦ TV-Y7			
♦ TV-G			
♦ TV-PG			
♦ TV-14			
♦ TV-MA			
	_		

MOVIE RATINGS

(MOTION PICTURE ASSOCIATION OF AMERICA)

G: General Audience - All ages admitted. Most parents would find this program suitable for all ages. This type of programming contains little or no violence, no strong language, and little or no sexual dialogue or situations.

PG: Parental Guidance Suggested - This programming contains material that parents may find unsuitable for younger children. It may contain one or more of the following: moderate violence, some sexual situations, infrequent coarse language, or some suggestive dialogue.

PG-13: Parents Strongly Cautioned - This programming contains material that parents may find unsuitable for children under the age of 13. It contains one or more of the following: violence, sexual situations, coarse language, or suggestive dialogue.

R: Restricted - This is programming is specifically designed for adults. Anyone under the age of 17 should only view this programming with an accompanying parent or adult guardian. It contains one or more of the following: intense violence, intense sexual situations, strong coarse language, or intensely suggestive dialogue.

NC-17: No one under the age of 17 will be admitted. - This type of programming should be viewed by adults only. It contains graphic violence, explicit sex, or crude indecent language.

X: Adults Only - This type of programming contains one or more of the following: very graphic violence, very graphic and explicit or indecent sexual acts, very coarse and intensely suggestive language.

TV PARENTAL GUIDELINES

(TV BROADCASTERS)

TV-Y - (All children -- This program is designed to be appropriate for all children.) Designed for a very young audience, including children ages 2-6. This type of programming is not expected to frighten younger children.

TV-Y7 - (Directed to Older Children - This program is designed for children age 7 and above.) It may be more appropriate for children who have acquired the development skills needed to distinguish between make-believe and reality. This programming may include mild fantasy and comic violence (FV).

TV-G - (General Audience -- Most parents would find this program suitable for all ages.) This type of programming contains little or no violence, no strong language, and little or no sexual dialogue or situations.

TV-PG - (Parental Guidance Suggested -- This program contains material that parents may find unsuitable for younger children.) This type of programming contains one or more of the following: moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).

TV-14 - (Parents Strongly Cautioned This program contains some material
that many parents would find unsuitable
for children under 14 years of age.) This type
of programming contains one or more of the
following: intense violence (V), intense sexual
situations (S), strong coarse language (L), or
intensely suggestive dialogue (D).

TV-MA - (Mature Audience Only -This program is specifically designed to
be viewed by adults and therefore may
be unsuitable for children under 17.) This type
of programming contains one or more of the
following: graphic violence (V), explicit sexual
situations (S), or crude indecent language (L).

SETTING UP THE AUTOLOCK ACCESS CODE



Over the next few pages you'll learn how to block channels and get a better understanding of the rating terms for certain programming.

First, let's start by learning how to set a personal access code:


(BEGIN)

- Press the MENU button on the remote to display the on-screen menu.
- 2> Press the CURSOR UP ▶ or DOWN button until the word FEATURES is highlighted.
- 3 Press the CURSOR RIGHT button to display the FEATURES menu options.
- 4 Press the CURSOR UP ▶ or DOWN button until the words AUTOLOCK are highlighted.
- button. The screen will read, "ACCESS CODE - ."
- 6 Using the NUMBERED buttons, enter 0, 7, 1, 1. "XXXX" appears on the Access Code screen as you press the numbered buttons.
 - "INCORRECT CODE" will appear on the screen, and you will need to enter 0, 7, 1, 1 again.
- The screen will ask you to enter a "New Code." Enter a "new" 4 digit code using the NUMBERED buttons. The screen will then ask you to CONFIRM the code you just entered. Enter your new code again. "XXXX" will appear when you enter your new code and then display the AutoLock menu options.

Proceed to the next page to learn more...

SMART HELP

Parents - it isn't possible for your child to unblock a channel without knowing your access code or changing it to a new one. If your code changes, and you didn't change it, then you know it's been altered by someone else and blocked channels have been viewed.

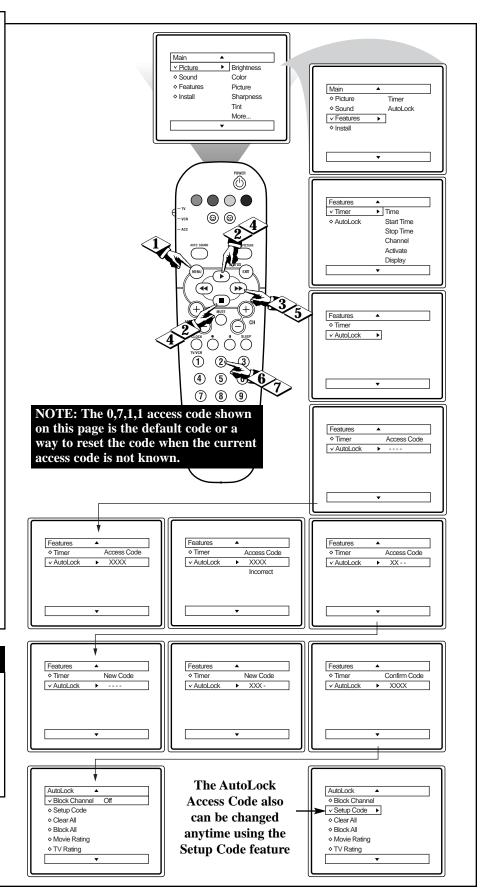

HOW TO BLOCK CHANNELS

A fter your personal access code has been set (see previous page), you are now ready to select the channels or The A/V Inputs you want to block out or censor.

(BEGIN)

- Press the NUMBERED (or CH +,

 -) buttons to tune the channel you wish to block or censor.
- Press the MENU button on the remote to show the on-screen menu.
- 3> Press the CURSOR UP ▶ or DOWN button until the word FEATURES is highlighted.
- **4** Press the CURSOR RIGHT ▶▶ button to display the FEATURES menu options.
- Press the CURSOR UP ➤ or DOWN button until the words
 AutoLock are highlighted.


Press the CURSOR RIGHT >> button.

- The correct access code number. "XXXX" shows on the Access Code display as you press the NUMBERED buttons. AutoLock menu options will be displayed.
- 8 Press the CURSOR UP ▶ or DOWN buttons until the words BLOCK CHANNELS are highlighted.
- 9 Press the CURSOR RIGHT >> button to turn blocking ON or OFF for that channel. When ON is selected the channel will be blocked.
- Press the CH + or button to select other channels you wish to block. Repeat step 9 to block the new channel.



SMART HELP

If you tune to a blocked channel and enter your Access Code to view the channel, ALL blocked channels will be viewable until the TV has been turned off. When the TV is powered back ON, the previously blocked channels will be blocked again.

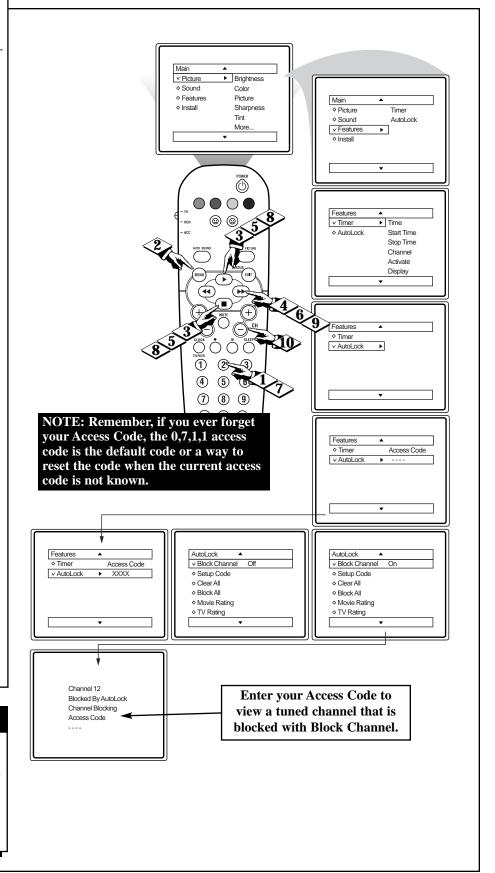

HOW TO CLEAR BLOCKED CHANNELS



A fter blocking specific channels there may come a time when you want to clear all the channels so they can be viewed. The following steps explain how to CLEAR ALL blocked channels.

(BEGIN)


- Press the MENU button on the remote to show the on-screen menu.
- 2 Press the CURSOR UP ▶ or DOWN button until the word FEA-TURES is highlighted.
- 3 Press the CURSOR RIGHT ▶▶ button to display the FEATURES menu options.
- 4 Press the CURSOR UP ▶ or DOWN button until the words AutoLock are highlighted.
- 5 Press the CURSOR RIGHT ▶▶ button.
- 6 Enter the correct access code number. "XXXX" shows on the Access Code display as you press the NUMBERED buttons. AutoLock menu options will be displayed.
- 7 Press the CURSOR UP or DOWN buttons until the words CLEAR ALL are highlighted.
- 8 Press the CURSOR RIGHT ▶▶ button to clear all blocked channels. The Clear All option will read, "Cleared."
- 9 When finished, press the STATUS /EXIT button to remove the menu from the TV's screen.



SMART HELP

If you tune to a blocked channel and enter your Access Code
to view the channel, ALL blocked channels will be viewable until the TV is
powered OFf and then turned back ON.
When the TV is powered back ON, the
previously blocked channels will be
blocked again.

CLEAR ALL will not work with the Movie and TV Ratings. These options must be reset individually.

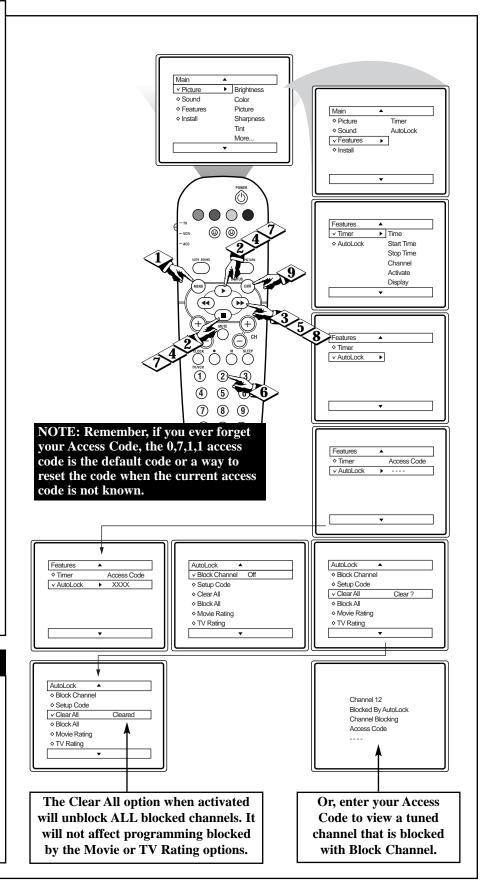

HOW TO BLOCK ALL CHANNELS AT THE SAME TIME

There may come a time when you want to Block All the television's channels. Maybe you don't want your children to watch TV for a given time. With the Block All control, ALL available channels (including the A/V Inputs) can be set to block at the same time.


(BEGIN)

- Press the MENU button on the remote to show the on-screen menu.
- Press the CURSOR UP ▶ or DOWN button until the word FEA-TURES is highlighted.
- 3 Press the CURSOR RIGHT button to display the FEATURES menu options.
- 4> Press the CURSOR UP ▶ or DOWN button until the words AutoLock are highlighted.
- 5 Press the CURSOR RIGHT ▶▶ button.
- 6 Enter the correct access code number. "XXXX" shows on the Access Code display as you press the NUMBERED buttons. AutoLock menu options will be displayed.
- 7 Press the CURSOR UP or DOWN buttons until the words BLOCK ALL are highlighted.
- 8 Press the CURSOR RIGHT button to turn Block All ON or OFF. When ON is selected, ALL available channels will be blocked.
- 9 When finished, press the STA-TUS/EXIT button to remove the menu from the screen.



SMART HELP

If you tune to a blocked channel and enter your Access Code to view the channel, ALL blocked channels will be viewable until the TV has been turned off. When the TV is powered back ON, the previously blocked channels will be blocked again.

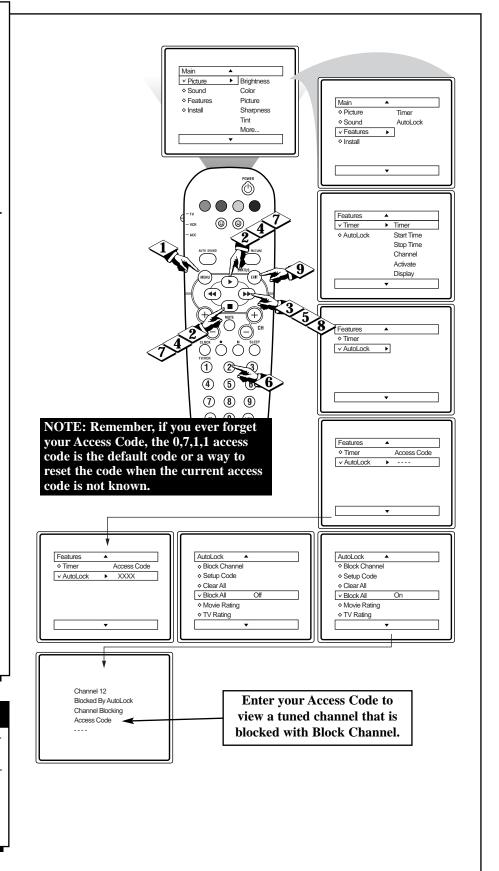

BLOCKING PROGRAMMING BASED ON MOVIE RATINGS



There are two types of program ratings within the AutoLock feature. One is based on the Movie Industry ratings while the other is based on the TV Industry ratings. Both can be used to block or censor programming that has been rated in either manner.

Let's first look at the Movie Rating options of AutoLock:


(BEGIN)

- Press the MENU button on the remote to display the on-screen menu.
- 2 Press the CURSOR UP ▶ or DOWN button until the word FEA-TURES is highlighted.
- Press the CURSOR RIGHT ▶▶ button to display the FEATURES menu options.
 - Press the CURSOR UP ➤ or DOWN button until AutoLock is highlighted.
- button. The screen will prompt you for your Access Code.
- On the remote, enter your 4 digit Access Code. The AutoLock menu options will be displayed.
- 7 Press the CURSOR UP ▶ or DOWN button to highlight the words MOVIE RATINGS.
- 8 Press the CURSOR RIGHT >> button to display the MOVIE RAT-INGS options (G, PG, PG-13, R, NC17, or X).
- 9 Press the CURSOR UP ➤ or
 DOWN button to highlight any of
 the Movie Ratings options. When highlighted, all these options can be turned
 ON (which will allow blocking) or
 OFF (which will allow viewing).
- Use the CURSOR RIGHT ▶▶ button on the remote to turn the rating option ON or OFF.



SMART HELP

When a rating is set to block, all higher ratings will be automatically blocked as well. (Example: If the the PG-13 rating is set to block, the R, NC-17, and X ratings will also be blocked.

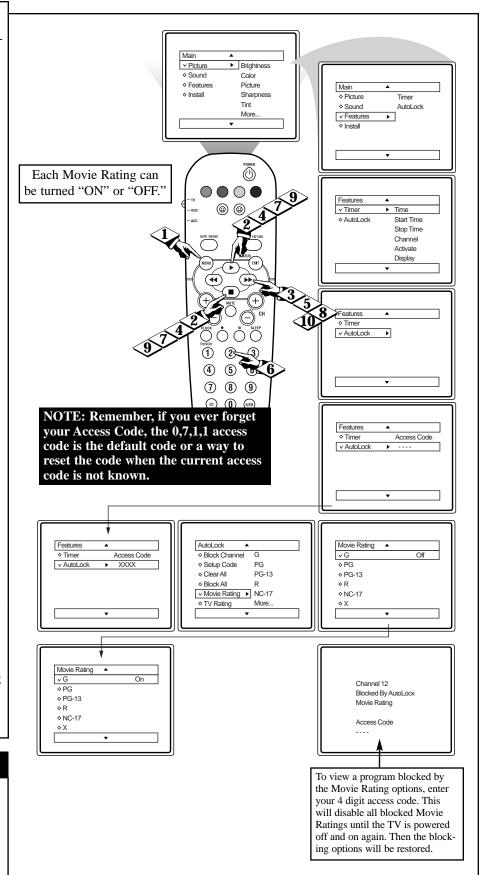

BLOCKING PROGRAMMING BASED ON TV RATINGS

This portion of the AutoLock features cover program ratings based on the TV Industry rating system. This is known as TV Ratings within AutoLock.

After selecting the Autolock feature and entering your personal access code, the AutoLock options screen appears;

BEGIN

Scroll the menu using the CURSOR UP > or DOWN buttons until the words TV RATINGS are highlighted.

button to display the TV Ratings (TV-Y, TV-Y7, TV-G, TV-PG, TV-14, or TV-MA). When highlighted, the TV-Y and TV-G can be turned ON (which will allow blocking) or OFF (which will allow viewing), of these rated programs.

The ratings of TV-Y7, TV-PG, TV-14, TV-MA can be customized to block V (violence), FV (fantasy violence), S (sexual situations), L (coarse language), or D (suggestive dialogue).


3 Press the CURSOR UP ▶ or DOWN button to highlight the desired rating.

4 Press the CURSOR RIGHT ▶ button on the remote to turn the TV-Y or TV-G rating ON or OFF. Or, press the CURSOR RIGHT ▶ button to enter the sub-menus for the TV-Y7, TV-PG, TV-14 or TV-MA ratings.

5 If the TV-Y7, TV-PG, TV-14 or TV-MA sub-menu is accessed, **press the CURSOR UP** ▶ or CURSOR DOWN button to select one of the options (Block All, V, S, L, D, or FV).

6 Press the CURSOR RIGHT ▶ button on the remote to turn the option ON or OFF.



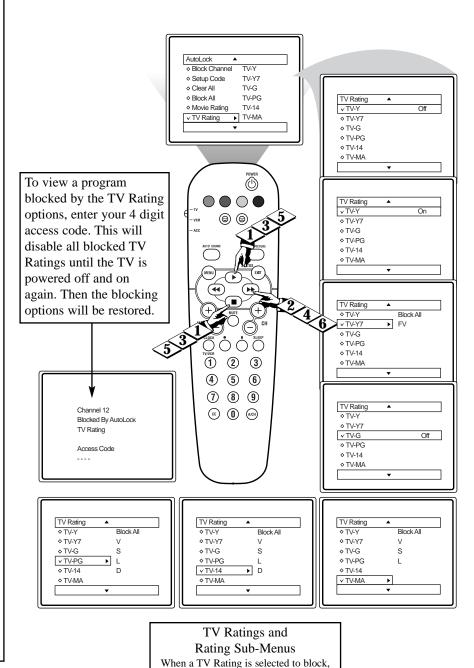

ALL higher ratings will be blocked also.

TV-Y - (All children -- This program is designed to be appropriate for all children.) Designed for a very young audience, including children ages 2-6. This type of programming is not expected to frighten younger children.

TV-Y7 - (Directed to Older Children -- *This program is designed for children age 7 and above.*) It may be more appropriate for children who have acquired the development skills needed to distinguish between make-believe and reality. This programming may include mild fantasy and comic violence (FV).

TV-G - (General Audience -- Most parents would find this program suitable for all ages.) This type of programming contains little or no violence, no strong language and little or no sexual dialogue or situations.

TV-PG - (Parental Guidance Suggested -- This program contains material that parents may find unsuitable for younger children.) This type of programming contains one or more of the following: some suggestive dialogue (D), infrequent coarse language (L), some sexual situations (S), or moderate violence (V).

TV-14 - (Parents Strongly Cautioned -- This program contains some material that many parents would find unsuitable for children under 14 years of age.) This type of programming contains one or more of the following: intensely suggestive dialogue (D), strong coarse language (L), intense sexual situations (S), or intense violence (V).

TV-MA - (Mature Audience Only -- This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.) This type of programming contains one or more of the following: crude indecent language (L), explicit sexual situations (S), or graphic violence (V).

USING THE AUTOLOCK BLOCKING OPTIONS




A utoLock offers the viewer other blocking features as well. With these Blocking Options, the censoring can be turned ON or OFF.

(BEGIN)

- Press the MENU button on the remote to show the on-screen menu.
- Press the CURSOR UP
 or

 DOWN button until the word FEA
 TURES is highlighted.
- 3 Press the CURSOR RIGHT button to display the FEATURES menu options.
- 4 Press the CURSOR UP ➤ or DOWN button until the words AutoLock are highlighted.
- **5** Press the CURSOR RIGHT ▶▶ button.
- number. "XXXX" shows on the Access Code display as you press the NUMBERED buttons. AutoLock menu options will be displayed.
- 7 Press the CURSOR UP or DOWN buttons until the words BLOCKING OPTIONS are highlighted
- 8 Press the CURSOR RIGHT **b** button to display the Blocking Options (BLOCKING, UNRATED, or NO RATING) menu.
- 9 Press the CURSOR UP ▶ or DOWN buttons to highlight the desired feature.
- When highlighted, each feature can be turned ON or OFF using the CURSOR RIGHT ▶▶ or LEFT ◀◀ buttons on the remote.



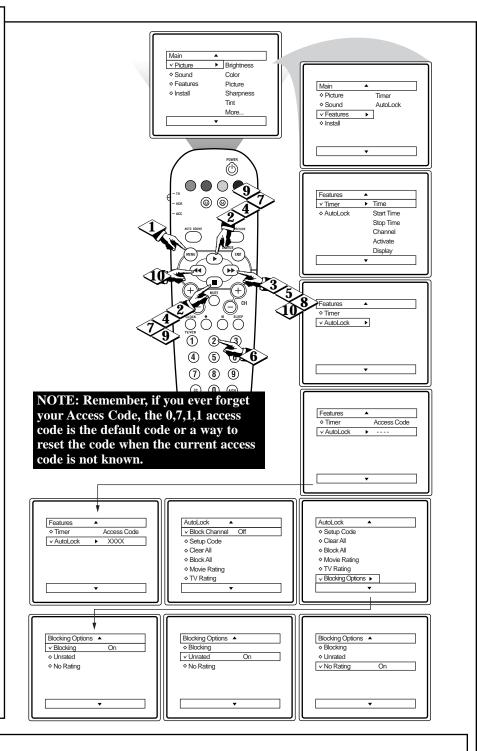

BLOCKING OPTIONS:

BLOCKING: This is what might be called the "master switch" for AutoLock. When in the ON position, ALL blocking/censoring will take place. When in the OFF position, ALL blocking is disabled.

UNRATED: ALL unrated programs based on the Movie Ratings or Parental (TV) Guidelines can be blocked if this feature is set to ON and the BLOCKING feature is set to OFF.

NO RATING: ALL programming with NO content advisory data can be blocked if this feature is set to ON and the BLOCKING feature is set to OFF.

How to Use the Closed Caption Control

Closed Captioning (CC) allows you to read the voice content of television programs on the TV screen.

Designed to help the hearing impaired, this feature uses on-screen "text boxes" to show dialogue and conversations while the TV program is in progress.

(BEGIN)

1 Press the CC button on the remote to display the current Closed Caption setting.


Press the CC button repeatedly to choose from the four Closed Caption options (CC Off, CC 1, CC 2, CC Mute). Dialogue (and descriptions) for the action on the captioned TV program will appear on-screen if the tuned program is broadcasting CC information.

When finished, press the STATUS
/EXIT button to remove the menu from
the TV's screen or let the option time out
and disappear from the TV screen.



SMART HELP

Not all TV programs and product commercials are made with Closed Caption (CC) information included. Neither are all Closed Caption modes (CC1, or CC2) necessarily being used during the transmission of a closed caption program. Refer to your area's TV program listings for the stations and times of Closed Caption shows.

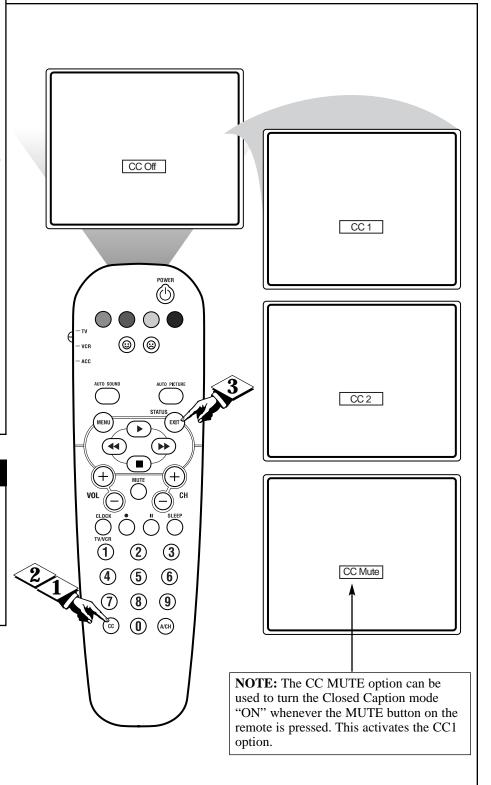

USING THE AUDIO/VIDEO INPUT JACKS

The TV's Audio/Video Input jacks are for direct picture and sound connections between the TV and a VCR (or similar accessory device) that has Audio/Video Output jacks.

(BEGIN)

(yellow) CABLE to the AV1 in VIDEO jack on the back of the TV. Then connect one end the AUDIO (red and white) CABLES to the AV1 in AUDIO L and R(left and right) jacks on the rear of the TV.

2 Connect other end of the VIDEO (yellow) CABLE to the VIDEO OUT jack on the back of the VCR. Then connect the other ends of the AUDIO (red and white) CABLES to the AUDIO (left and right) OUT jacks on the rear of the VCR.




Press the CH + or – buttons on the remote to scroll the channels until AV1 appears in the upper left corner of the TV screen.

5 Slide the TV/VCR/ACC switch to the VCR position.

6 Now your ready to place a prerecorded video tape in the VCR and press the PLAY ▶ button.



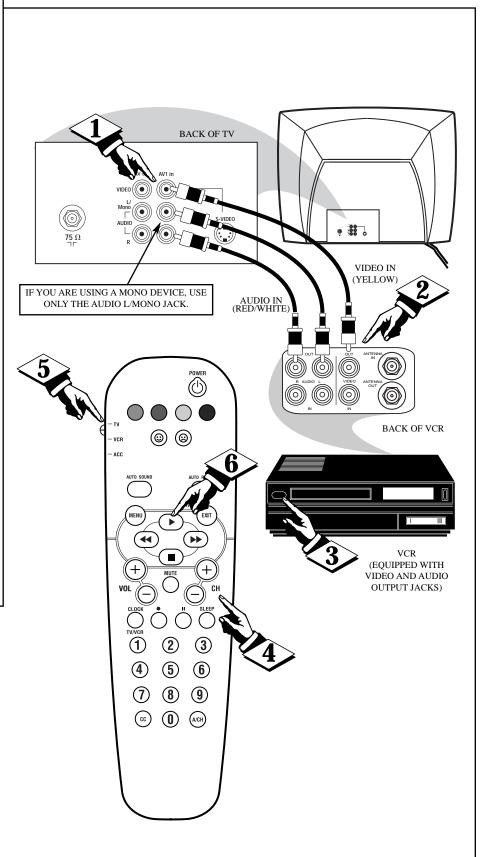

USING THE AUDIO/VIDEO (MONITOR) OUTPUT JACKS

The Audio/Video (Monitor) Output jacks are great for recording with a VCR or used to connect an external audio system for better sound reproduction.


(BEGIN)

- Tor an external audio system, connect one end of the R(ight) and L(eft) AUDIO (Monitor Out) jacks on the TV to the R and L audio input jacks on your amplifier or sound system. Set the audio system's volume to a normal listening level.
- ON. You can now adjust the sound level coming from the audio system with the VOLUME (+) or (-) button on the TV or remote control.

To connect a second VCR for recording:

- Video Cable to the Monitor Out
 VIDEO plug. Connect the other end to
 the VIDEO IN plug on the second
 VCR.
- 4 Connect one end of the red and white Audio cable from the Monitor Out AUDIO L and R plugs on the TV to the AUDIO IN plugs on the VCR.
- Turn the VCR ON, insert a blank
 VHS tape and it's ready to record
 what's being viewed on the TV screen.



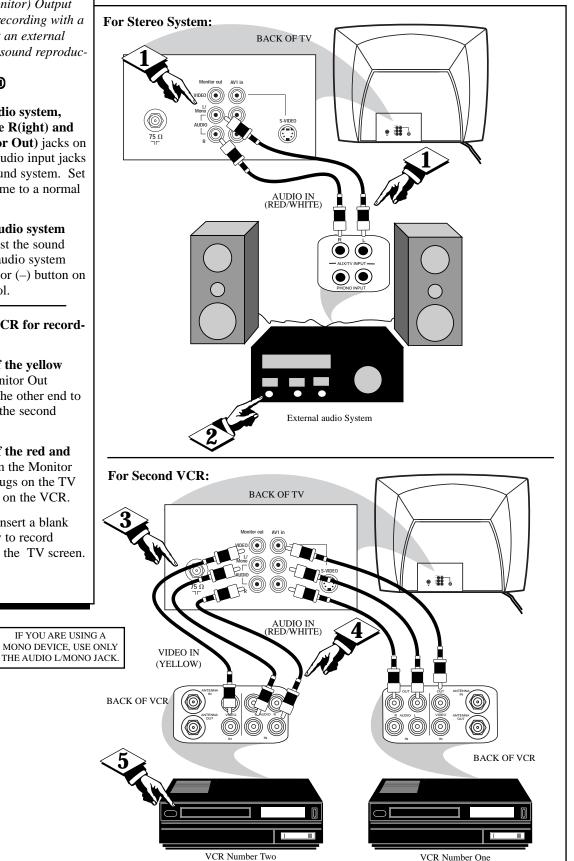

USING THE S-VIDEO INPUT JACKS

The S(uper)-Video connection on the rear of the TV can provide you with better picture detail and clarity for the playback of accessory sources such as DBS (digital broadcast satellite), DVD (digital video discs), video games, and S-VHS VCR (video cassette recorder) tapes than the normal antenna picture connections.

NOTE: The accessory device must have an S-VIDEO OUT(put) jack in order for you to complete the connection on this page.


(BEGIN)

- Connect one end of the S-VIDEO CABLE to the S-VIDEO jack on the back of the TV. Then connect one end the AUDIO (red and white) CABLES to the AV1 in AUDIO L and R(left and right) jacks on the rear of the TV.
- Connect other end of the S-VIDEO CABLE to the S-VHS (S-Video) OUT jack on the back of the VCR. Then connect the other ends of the AUDIO (red and white) CABLES to the AUDIO (left and right) OUT jacks on the rear of the VCR.
- Turn the VCR and the TV ON.
- Press the CH + or buttons on the remote to scroll the channels until SVHS appears in the upper left corner of the TV screen.
- Slide the TV/VCR/ACC switch to the VCR position.
- 6 Now your ready to place a prerecorded video tape in the VCR and press the PLAY button.



SMART HELP

The S-VIDEO and VIDEO AV1 in(puts) are in parallel. The S-VIDEO input is dominant when in use. If separate video signals are connected to the S-VIDEO and VIDEO AV1 in(puts), the signal from the VIDEO AV1 in(put) will not be usable.

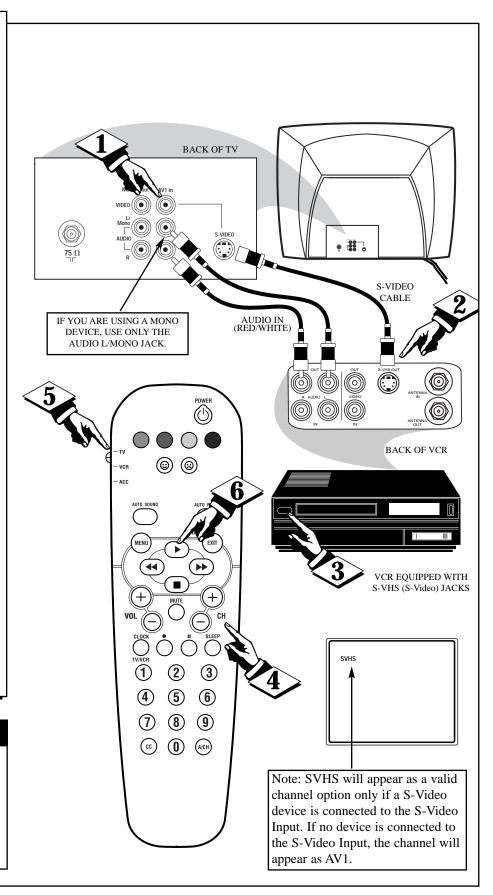


USING THE FRONT INPUT JACKS AND THE HEADPHONE JACK


For your convenience, Audio/Video Input jacks have been located on the front of the TV cabinet. These jacks are for use with camcorders or rental devices that are only to be connected for a short period of time. There also is a headphone jack located on the front of the TV when you're wanted to watch TV while others in the room do not.

BEGIN

- VIDEO CABLE to the Front VIDEO jack on the side of the TV. Then connect one end the AUDIO (red and white) CABLES to the Side AUDIO L and R (left and right) jacks on the front of the TV.
- 2 Connect other end of the yellow VIDEO CABLE to the VIDEO OUT jack on the back of the camcorder. Then connect the other ends of the AUDIO (red and white) CABLES to the AUDIO (left and right) OUT jacks on the rear of the camcorder.
- Turn the camcorder and the TV ON.
- Press the CH + or buttons on the remote to scroll the channels until "FRONT" appears in the upper left corner of the TV screen.
- Now your ready to place a prerecorded video tape in the camcorder and press its PLAY button.



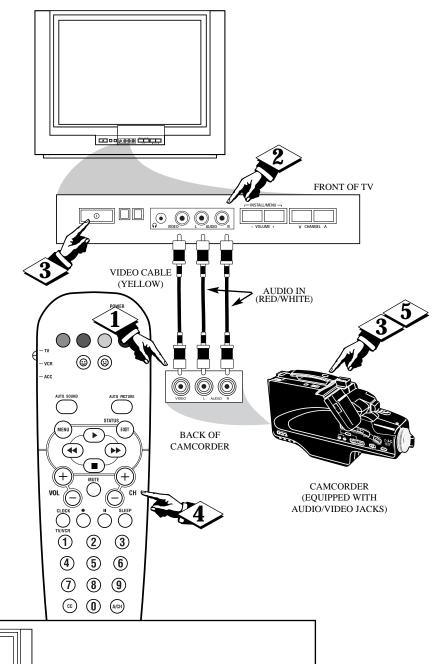

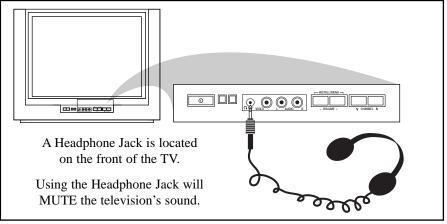

SETTING UP THE SLEEPTIMER OPTION



Have you ever fallen asleep in front of the TV only to have it wake you up at two in the morning with a test pattern screeching in your ears? Well, your TV can save you all that trouble by automatically turning itself off.

(BEGIN)

Press the SLEEP button on the remote control and the SLEEP timer display will appear on the screen.

Press the SLEEP button repeatedly to pick the amount of time (15, 30, 45, 60, 90, 120, 180, or 240 minutes) before the TV will turn itself off.


An on-screen count down will appear during the last minute before the TV shuts itself off.




SMART HELP

The on-screen menu will time out and disappear from the screen when you finish, or you can press the STATUS/EXIT button to clear the menu from the screen.

During the last minute of a SLEEP timer setting, an onscreen count down will be displayed. Pressing any button during the last minute will cancel the SLEEP timer.

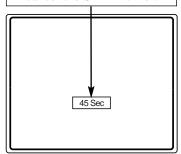

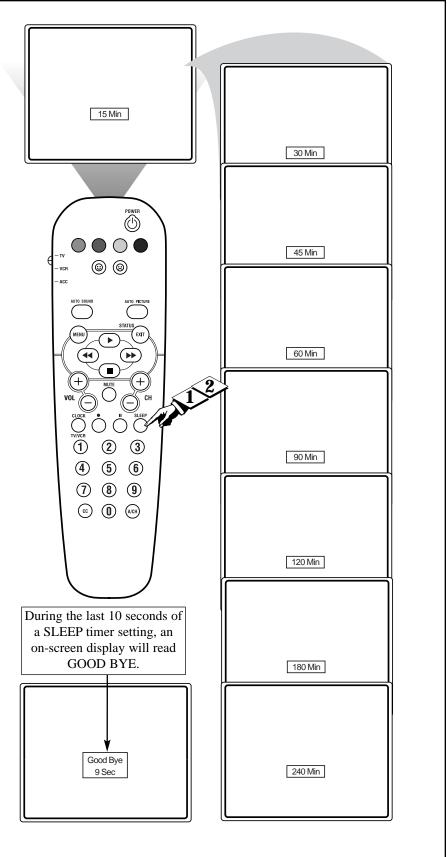



SETTING THE AUTO PICTURE CONTROL

Whether you're watching a movie or a sporting event, your TV has automatic video control settings matched for your current program source or content. The Auto Picture feature quickly resets your TV's video controls for a number of different types of programs and viewing conditions you may have in your home. Each Auto Picture setting is preset at the factory to automatically adjust the TV's Brightness, Color, Picture, Sharpness, Tint, Color Temperature, DNR and Contrast+ levels.

BEGIN

Press the AUTO PICTURE button on the remote control. The current Auto Picture setting will appear in the middle of the screen.

Press the AUTO PICTURE button repeatedly to select either PERSONAL, MOVIES, SPORTS, WEAK SIGNAL, or MULTI MEDIA picture settings.

Note: The **PERSONAL** setting is the setting that you setup using the PIC-TURE options within the on-screen menu. This is the only Auto Picture setting that can be changed. All other settings are setup at the factory during the time of production.


MOVIES - Preset picture options for watching Video Tapes, or DVDs.

SPORTS - Preset picture options for watching sporting events.

WEAK SIGNAL - Preset picture options for watching programs where the reception is not at its best.

MULTI MEDIA - Preset picture options for use with video gaming.



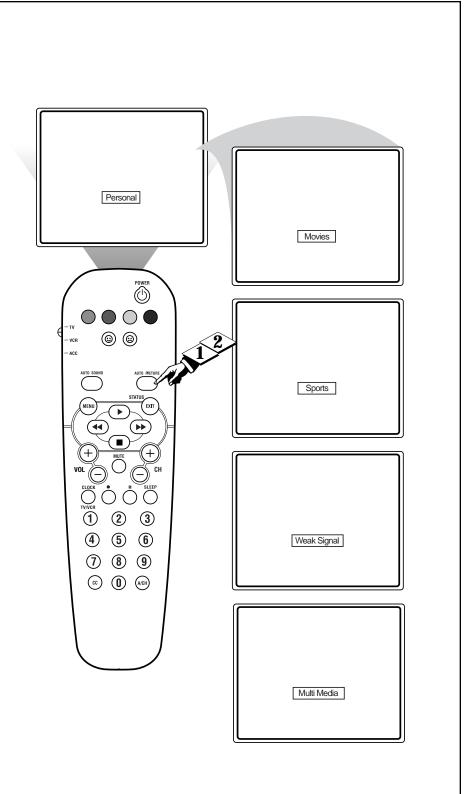

SETTING THE AUTO SOUND CONTROL



The Auto Sound feature allows the listener to select between four different factory set sound options. Personal (which can be set by the user), Theatre (for movie viewing), Music (for musical type programming) and Voice (when the program is mainly dialogue). These setting affect the Sound menu's Bass, Treble, AVL, and Incredible Surround controls

To select any of the options follow the directions below.

(BEGIN)

Press the AUTO SOUND button on the remote control. The current Auto Sound setting will appear in the middle of the screen.

Press the AUTO SOUND button repeatedly to toggle between the four settings.


Note: Only the **PERSONAL** control can be changed by the viewer. This changes the settings in the main onscreen menu's sound controls.

THEATRE - Preset sound options for watching movies.

MUSIC - Preset sound options for musical programming where there is little dialogue.

VOICE - Preset sound options for programming where heavy dialogue is present.



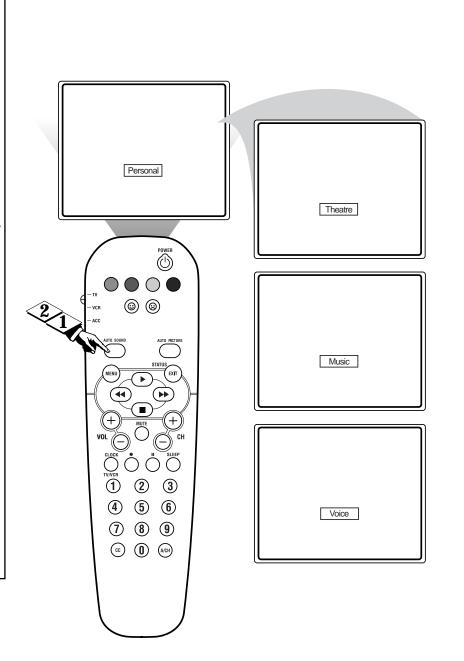



USING THE QUADRA SURF BUTTONS

A "list" or series of previously viewed channels can be selected with the Quadra SURF (colored) buttons on your remote control. With this feature you can easily switch between different TV programs that currently interest you. The Quadra Surf control allows you set up four different personal Surf lists using the colored buttons (on the remote control), each holding up to ten channels in its quick viewing "list."

(BEGIN)

tons (or the NUMBER buttons) to select a channel to add to one of the SURF lists.

2 Press the SMILEY ② button on the remote control to ADD the channel to one of the SURF lists.

ORED (Red, Green, Yellow or Blue)
button to add the channel to that button's
Surf list. (Up to ten channels per button
can be stored.)

Repeat steps 1 through 3 to add additional channels (up to 10) to each of the the SURF lists.

To remove a channel from one of the SURF lists;


4 Press the COLORED Quadra
Surf button until the desired channel appears. The screen will display the channel number with a colored "Smiley" face to indicate the Colored button it relates to.

5 While the "Smiley" face channel indicator is displayed, press the FROWNIE ② face button. The screen will read, "Remove item? - Press ② ."

6 Press the FROWNIE @ face button again to confirm your decision to remove the channel from the Surf list.

Repeat steps 4-6 to remove other channels from Surf lists.



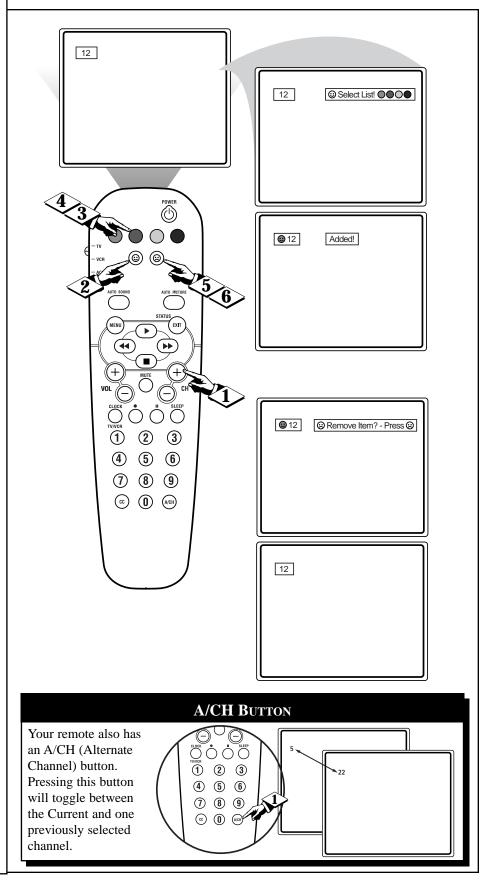

USING THE QUADRA SURF BUTTONS



The Quadra Surf buttons on your remote control allow you to store up to 10 channels per button (40 total). This is a great feature if you want to store all your favorite Sports channels, Movie channels, or News channels in one surf list. Family members can have there own favorite list of channels. You can even program the A/V Input channels (AVI, AV2, SVHS, FRONT, etc.) for each button making them a "source" button for your external accessory devices.

Assuming channels have now been added to the four Quadra Surf lists (the four colored buttons on the remote, see the previous page), let's review how the feature works.


(BEGIN)

- Press one of the pre-programmed COLORED buttons on the remote (Red, Green, Yellow or Blue). The screen will display a smiley face with the first programmed channel for that surf list.
- While the colored "smiley" face still appears on the screen, press the same COLORED button on the remote to tune the second channel programmed for that specific surf list.
- 3 Repeatedly pressing the same COL-ORED button while the "smiley" face appears will tune all the programmed channels for that specific surf list. After the last channel is tuned, pressing the COLORED button again will return you to the first channel in the list.

If the "smiley" face disappears from the screen and the same COLORED button is pressed, the surf channels will be displayed starting with the FIRST programmed channel again.

- Repeat steps 1-3 for the other three COLORED buttons (Surf lists) if desired.
- Any time the "smiley" face appears with the channel number, **pressing the** "**frownie**" **face button** will allow you to remove it from the list (see the previous page for more details).



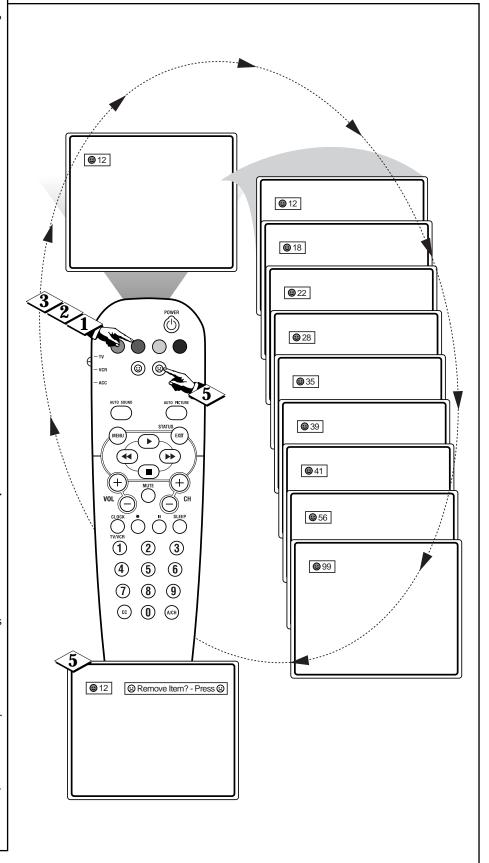



REMOTE USE WITH ACCESSORY DEVICES - DIRECT METHOD

Your remote control is set to work your TV and many infrared remote (IR) control VCRs, Cable Boxes, Satellite Systems, DBS, DVD, etc. However, an easy onetime step may be necessary before the remote will work your VCR.

Try this initial Direct Access Method to see if going on to the following section is necessary.

BEGIN

Place the TV/VCR/ACC Mode Switch in the proper position.

2 Point the remote control at the device and press the POWER button.

Does the remote turn the device ON?

If YES, stop and try other function buttons on the remote. If they also work the device, then the remote is ready and no further steps are needed.

If NO, continue...




remote control number for your brand of Device before going through the simple steps on the following page.

Find your Three-Digit Code on pages 35-37.

SMART HELP

Remember, if more than one mumber is listed, you may have to try more than the first Three-Digit code given in order to locate your Device's remote code.

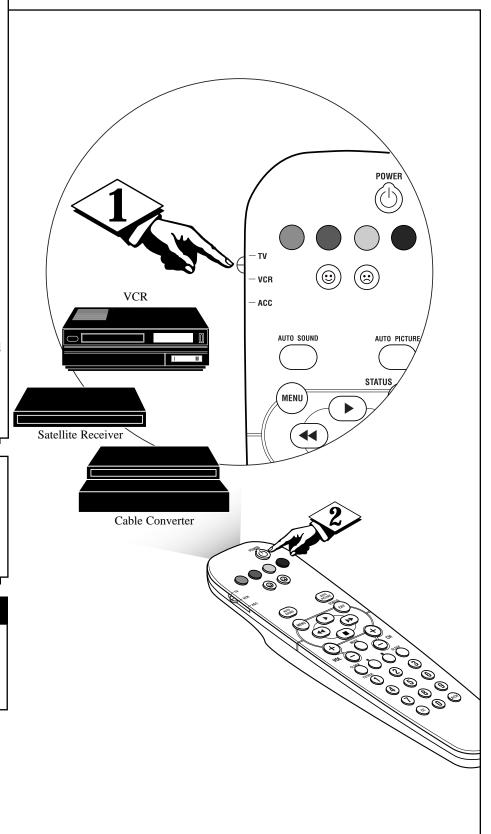

REMOTE USE WITH ACCESSORY DEVICES - CODE ENTRY METHOD



Now that you have looked up the three-digit Remote Code Number for your brand of device, you are ready to follow the four simple steps below.

Please read through steps 1-5 before beginning.

(BEGIN)

Place the TV/VCR/ACC Mode Switch in the proper position.

2 Press the VCR • RECORD button on the remote control and release.

3 Press the AUTO SOUND button on the remote within 30 seconds, then release.

4 Enter the THREE-DIGIT
REMOTE CODE NUMBER for your desired device. The remote is now ready to send commands to the unit.

Press the POWER button on the remote to turn the unit ON.




SMART HELP

Remember, if this doesn't work the first time, repeat steps using the same remote code number.

After a second try and the remote does not operate your device, see if there is another three-digit code number (pages 35-37) listed for your device and repeat the steps above using the new number.

If after repeated attempts the code number method does not work you device, try the **SEARCH METHOD** on the next page.

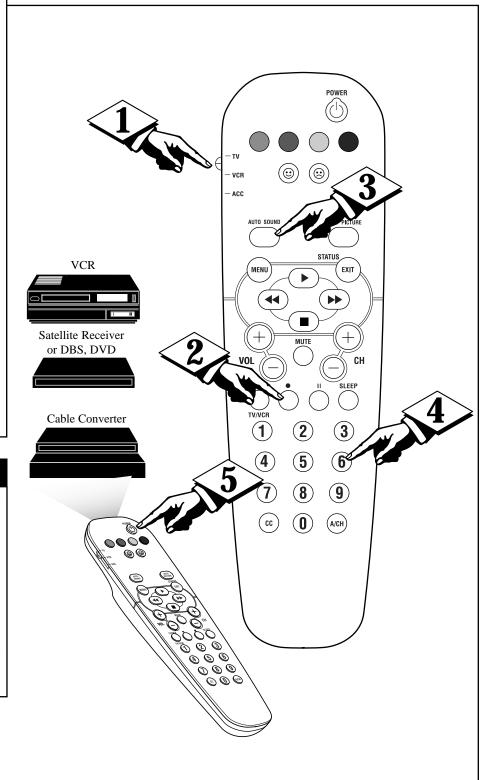



REMOTE USE WITH ACCESSORY DEVICES - SEARCH METHOD

Your TV remote can be set to work various external devices such as VCRs, Cable Boxes, Satellite Receivers, DBS, DVD, etc. by what is called the search method of remote control programming. This programming method can take a long time to preform so we reccomend you use it as a last resort.

Please read all the steps below before beginning.

(BEGIN)

Press the POWER button on the device your are attempting to program to turn it ON.

If programming a VCR or DVD type product that has a STOP play command, place a VCR Tape or DVD disc into the device. Press the PLAY button on the choosen device.

3 Place the TV/VCR/ACC Mode Switch in the proper position. TV for all television functions, VCR for programming Video Cassette Recorders or ACC for all other accessory devices.


4 Press the VCR • RECORD and the AUTO SOUND buttons simultaneously and hold them down.

As you continue to hold down the VCR
• RECORD and the AUTO SOUND
buttons, the remote will run through its
programmed code list. It will send out a
command for every code it has commanding the VCR or DVD to STOP
play. For Cable Boxes and Satellite
Receivers the command will be to
CHANGE CHANNELS.

5> When the STOP command happens for VCRs or DVD type devices, **release the two buttons** and the remote should control the device.

For Cable Boxes and Satellite Receivers the channel indicator will change. As soon as the channel changes **ONCE**, **IMMEDIATELY release the two buttons**. The remote should now control the devices. If the two buttons are held longer than the one channel change, the process will have to be repeated. This method can take up to 12 and a half minutes to perform.



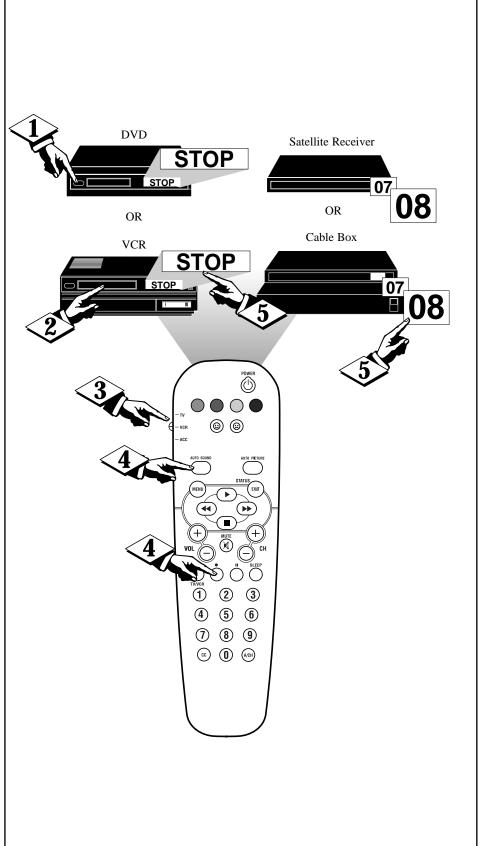

REMOTE CONTROL DIRECT ENTRY CODES



CABLE	CODE	CABLE	CODE		CODE
BOX	NUMBERS	BOX	<u>NUMBERS</u>	SATELLITE	NUMBERS
ABC	030, 034, 035,	Popular Mechanic	s427	Astra	135
		Prelude			200, 528
Allegro	180, 342	Pulsar		Avalon	423
Andover		Quasar		Axis	396
Antronix	049, 234	RCA		BT	542, 695
Archer049, 066				Beko	
BBT				Best	
Belcor					200
Bell & Howell		Regal		•	
Birgmingham Cable Communi		•			
British Telecom		• •			371, 542
Cable Star		Runco		C	389
Cabletenna					315
Cabletime					
Cableview			409		
Century					
Citizen					
Clyde					
Colour Voice					227, 423
Comband	· · · · · · · · · · · · · · · · · · ·				
Comtec					448
Comtronics				Expressvu	
Contec	,	C		*	094, 210, 216, 363
Cryptovision		•		Fidelity	
Decsat		Ç		-	135, 371, 424, 482
Digi				Freecom	
Eastern		0			
Emerson	· · · · · · · · · · · · · · · · · · ·	•			
Everquest		•		Galaxis	
Filmnet					
Focus					598
France Telecom				Goodmans	
GC Electronics		•			200, 216, 598, 777
GE					
GEC			308	Hinari	
Garrard					.200, 423, 424, 528, 600
Gemini					
General Instrument					695
GoldStar				Hughes Network Sys	
Goodmind	,				
Grundig					
Hamlin036, 047					135
Hitachi					
Jasco					
Jerrold			49, 066, 083, 180, 218, 234		227, 469, 531, 649, 685
Linear			054, 087, 090, 285	•	
Linsay				•	540, 634
MNet	,				
Macom					
Magnavox		Zentek			
Memorex			CODE		396
Movie Time		CAMPEL LIME	CODE		
NSC		SATELLITE	NUMBERS 279		749, 751
Novaplex					
Oak					
Optimus	048		389, 448, 482, 542, 640		
PVP Stereo Visual Matrix					371, 598
Panasonic					
Panther			79, 372, 488, 528, 536, 716		
Paragon					
Philips052, 054, 058					
Pioneer	, 171, 560, 904	Armstrong		Morgan's	



REMOTE CONTROL DIRECT ENTRY CODES

CODE	CODE	CODE
SATELLITE NUMBERS	VCR NUMBERS	VCR NUMBERS
Neuhaus	Action	Elin
Next Level	Admiral	Emerex
Nikko	Advantz	Emerson027, 029, 063, 064, 070,
Nokia	Adventura	
Nordmende	Aiko	238, 239, 305, 321, 322, 388, 506
Orbitech	Aiwa 027, 064, 334, 375, 379, 433, 463, 495	Ferguson
Oxford	Akai 068, 076, 080, 088, 133, 183, 269, 342	Fidelity
Pace	Akiba	Finlandia
Palladium	Akura	Finlux
Palsat	Alba047, 099, 236, 305, 322, 342, 379	Firstline
Panasonic	Ambassador	Fisher
Panda	America Action	Frontech
Patriot	American High	Fuji
Philips227, 319, 482, 598, 749, 751, 777	Amstrad	Funai
Phonotrend	Anitech	GE
Plasmatic	Asha	GEC108
Primestar	Asuka	Garrard
Promax	Audiovox	General
Prosat	Baird	Go Video
Quadral	Basic Line	GoldHand
RCA	Beaumark	GoldStar045, 064, 065, 252, 498, 507
RFT227, 247, 315	Bell & Howell	Goodmans 027, 047, 064, 089, 099, 305, 430
Radio Shack	Blaupunkt	Gradiente
Radiola		Graetz
Radix	Blue Sky	Granada
SAT	Brandt	Grandin
SEG	Brandt Electronic	Grundig030, 033, 034, 099, 108, 222,234, 253, 280, 374, 376, 405, 430
SM Electronic		HCM
Saba		HI-Q
Sabre	CCE	Hanseatic
Salora	CGE	Harley Davidson
SatPartner	Calix	Harman/Kardon065, 102, 108, 173, 188
Satec	Canon	Harwood
Schwaiger	Capehart	Headquarter
Seemann	Carver	Hinari
Siemens	Catron	Hitachi027, 031, 068, 069, 092,
Skymaster	Cimline	
Sony	Cineral	Hughes Network Systems
Star Choice	Citizen	Hypson
Star Trak	Clatronic	ITT068, 073, 131, 133, 267, 295, 411
Strong	Colt	ITV
Sunstar	Combitech	Imperial
Tantec	Condor047	Ingersol
TechniSat	Craig	Interfunk
Telefunken	Crown	JVC035, 068, 094, 233, 234, 411, 513
Teleka	Curtis Mathes	Jensen
Thomson	Cybernex	KEC
Tonna	Cyrus	KLH
Toshiba	Daewoo044, 047, 072, 114, 305	Kaisui
Triad	Dansai	Kendo
Triasat	Daytron	Kenwood
Uniden	De Graaf	Kodak
VTech	Denon	LXI
Ventana	Dual	Lai
Vortec	Dumont	Leyco
Wisi	Dynatech	Lloyd's
Zenith	ESC	Loewe
	Elbe	Logik
CODE	Elcatech	Luxor070, 073, 075, 089, 131, 133
VCR NUMBERS	Electrohome	M Electronic
ASA	Electrophonic	MEI
	- 	

REMOTE CONTROL DIRECT ENTRY CODES



CODE	CODE	CODE
VCR NUMBERS	VCR NUMBERS	VCR NUMBERS
MGA	Proscan	Tatung
MGN Technology	Protec	Teac
MTC	Pulsar	Tec
Magnasonic		Technics
	· ·	
Magnavox 027, 062, 066, 108, 130, 137, 176	Quarter	Teknika
Magnin	Quartz	Teleavia
Manesth	Quasar	Telefunken068, 214, 347, 348, 411
Marantz	Quelle	Tenosal
	RCA062, 069, 075, 087, 092, 104,	Tensai
Marta	132, 133, 176, 229, 267, 304, 480	Thomas
Matsui	RFT	Thomson
236, 322, 375, 379	Radio Shack	Thorn
Matsushita	Radiola108	Toshiba
Memorex027, 062, 064, 066, 073,	Radix	
074, 075, 131, 189, 236,	Randex	Totevision
	Realistic	Towada
Memphis		Triumph
Metz030, 033, 064, 189, 222, 254, 374	Rex	Uher
Minerva	Ricoh	Ultravox
Minolta	Roadstar	Unitech
Mitsubishi	Runco	Universum
	SBR	
Motorola	SEG	Vector
Multitech	SEI	Vector Research
Murphy	STS	Video Concepts067, 072, 088, 248
NAD	Saba068, 233, 234, 324, 347, 348, 411	Videosonic
NEC	Saisho	Wards027, 062, 069, 074, 075, 087,
	Salora	089, 099, 108, 176, 188, 239, 267
Neckermann	Samsung	White Westinghouse
Nesco	Sanky	XR-1000
Nikkai	Sansui027, 068, 094, 109, 236, 298, 506	Yamaha
Nikko	Sanyo073, 074, 131, 267, 295, 399	Yamishi
Nikon	Saville	Yokan
Noblex	Schaub Lorenz	Yoko
Nokia	Schneider	Zenith027, 060, 061, 066, 236, 506
Nordmende	Scott070, 072, 148, 211, 237, 238, 239	Zemur027, 000, 001, 000, 230, 300
Oceanic	Sears	DIGITAL CODE
Okano		VIDEO DISC NUMBERS
,		
Olympus	Seleco	Denon517, 661
Optimus064, 075, 085, 131, 189, 459	Semp	GE549
Optonica	Sentra	Harman/Kardon
Orion029, 031, 063, 115, 148, 211,	Sharp	JVC
	Shintom	Kenwood517, 561
Osaki	Shogun	Magnavox
Otto Versand	Shorai	Marantz
Palladium	Siemens	Mitsubishi
Panasonic		Onkyo530, 909
253, 254, 273, 405	Silva	Optimus
Pathe Cinema	Singer	Panasonic
Pathe Marconi	Sinudyne	Philips
Penney062, 064, 065, 067, 069, 081, 267	Solavox	Pioneer
Pentax	Sonolor	Proscan
Perdio	Sontec	RCA
Philco	Sony	Samsung
Philips062, 089, 108, 137, 173, 411, 430		Sharp
Phonola	Sunkai	Sherwood
Pilot	Sunpak	Sony
Pioneer	Sunstar	Technics
Polk Audio	Suntronic	Theta Digital
Portland	Sylvania027, 062, 070, 108, 130, 137	Toshiba
Profex	Symphonic	Yamaha
Profitronic	TMK	Zenith
Proline	Tashiko	

USING THE REMOTE'S VCR BUTTONS

When using the TV remote with a VCR, first make certain it is set to control your VCR (by the REMOTE CODE or SEARCH method).

(BEGIN)

Set the TV/VCR/ACC mode switch to VCR on the remote.

2 Point the top of the remote toward the front of the VCR (remote sensor window) when pressing the buttons.



VCR SYSTEM SWITCH

Set in the VCR position to send remote commands to the VCR.

PLAY BUTTON ▶

Press to begin playback of a video tape.

<u>REWIND BUTTON</u> ◀◀

Press to rewind tapes. For some VCR's the STOP button may have to be pressed first, then REWIND. In playback mode hold down the button to view picture moving rapidly in reverse.


(Clock) TV/VCR BUTTON

Press while in the VCR mode (VCR indicator on the front of the unit will light) to view the playback of a tape. Press again to place in the TV position (VCR indicator light will go off) to view one program while recording another program.

When used in the TV mode, the CLOCK/TV/VCR button will access the TV's Clock menu options.

RECORD • BUTTON

Hold the VCR • RECORD button down to begin a VCR recording.

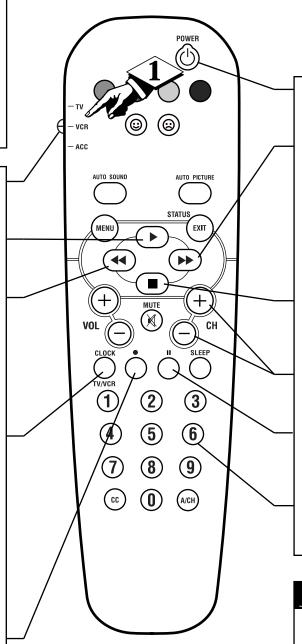

POWER BUTTON

Press to turn the VCR ON and OFF.

FAST FORWARD BUTTON ▶▶

Press to rapidly advance the tape. For some VCR's you may need to press the STOP button first, then the FAST FORWARD button. In playback mode hold the button down to view the picture moving rapidly in the forward direction.

STOP BUTTON

Press to stop the motion of a tape in playback, rewind, fast forward, etc.

CHANNEL + & - BUTTONS

Press to scan up or down through the VCR channel numbers.

PAUSE BUTTON II

Press to temporarily stop the tape during a playback or recording. Press again to release Pause.

NUMBER BUTTON

Press buttons for direct VCR channel selections.

SMART HELP

Remember, the VCR buttons on the remote will not operate your VCR if those features are not found on your VCR remote control.

Note: All VCR functions (particularly Search, Rewind, Fast Forward, etc.) will operate the same as with the original VCR remote control provided with the VCR.

TROUBLESHOOTING TIPS



Please make these simple checks before calling for service. These tips can save you time and money since charges for TV installation and adjustment of customer controls are not covered under your warranty.

CAUTION: A video source (such as a video game, Compact Disc Interactive - CDI, or TV information channel) which shows a constant non-moving pattern on the TV screen, can cause picture tube damage. When your TV is continuously used with such a source the pattern of the non-moving portion of the game could leave an image permanently on the picture tube. When not in use, turn the video source OFF. Regularly alternate the use of such video sources with normal TV viewing.

No Power

- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert plug into outlet and push POWER button again.
- Check that outlet is not on a wall switch. Be sure fuse is not blown on AC Power strip.

No Picture

- Check antenna connections. Are they properly secured to the TV's 75Ω plug?
- Check the TUNER MODE control for CABLE or ANTENNA setting.
- Check Audio/Video Input jack connections if using a VCR or other external device.

No Sound

- Check the VOLUME buttons.
- Check the MUTE button on the remote control.
- Check Audio/Video Input jack connections if using a VCR or other external device.

Unusual Screen Coloring

- Turn the TV OFF for several seconds, then power the set back ON.
- Unplug the TV for FIVE minutes. Plug the TV back into the AC outlet and power the TV ON. This should correct the problem.
- Check the Picture menu options for proper control settings.
- Press the Auto Picture button on the remote to change the color options. If the color resets itself, readjust the Picture menu option control.

Remote Does Not Work

- Check batteries. Replace with AA Heavy Duty (Zinc Chloride) or Alkaline batteries if necessary.
- Clean the remote and the remote sensor window on the TV.
- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert plug into outlet and push POWER button again. Be sure fuse is not blown on AC Power strip.
- Check to be sure TV outlet is not on a wall switch.

TV Displays Wrong Channel or No Channels Above 13

- Repeat channel selection.
- Add desired channel numbers (CHANNEL control) into TV memory.
- Check to be sure the TUNER MODE control is set to the CABLE option.

Cleaning and Care

- To avoid possible shock hazard be sure the TV is unplugged from the electrical outlet before cleaning.
- When cleaning the TV screen take care not to scratch or damage the screen surface (avoid wearing jewelry or using anything abrasive). Wipe the front screen with a clean cloth dampened with water. Use even, easy, vertical strokes when cleaning.
- Gently wipe the cabinet surfaces with a clean cloth or sponge dampened in a solution of cool clear water. Use a clean dry cloth to dry the wiped surfaces.
- Never use thinners, insecticide sprays, or other chemicals on or near the cabinet, as they might cause permanent marring of the cabinet finish.



GLOSSARY TO TELEVISION TERMS

Auto Picture Booster • A control that will automatically amplify "weak video signals" to a point where they are acceptable for viewing.

Auto Programming • The procedure of adding or deleting channel numbers into the Television's memory circuits. In this way the Television "remembers" only the locally available or desired channel numbers and skips over any unwanted channel numbers.

Closed Caption • Broadcast standard which allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired this feature uses onscreen "text boxes" to show dialogue and conversations while the TV program is in progress.

Coaxial Cable • A single solid antenna wire normally matched with a metal plug (F-type) end connector that screws (or pushes) directly onto a 75 Ohm input found on the Television or VCR.

Front Audio/Video Inputs • Located on the front of the TV these connectors (phono type plug) are used for the input of audio and video signals. Designed for easy use with VCRs or cameras.

Menu • An on-screen listing of feature controls shown on the Television screen that are made available for user adjustments.

On Screen Displays (OSD) • Refers to the wording or messages generated by the television (or VCR) to help the user with specific feature controls (color adjustment, programming, etc.).

Quadra Surf • The feature that allows the programming of four separate Surf lists holding up to 10 channels each.

Remote Sensor Window • A window or opening found on the Television control panel through which infrared remote control command signals are received.

Status/Exit • Allows the user to quickly confirm what channel number is currently being viewed. Status can also be used to clear the Television of on screen displays or information (rather than waiting for the displays to "time out" or automatically disappear from the screen).

Twin Lead Wire • The more commonly used name for the two strand 300 Ohm antenna wire used with many indoor and outdoor antenna systems. In many cases this type of antenna wire requires an additional adapter (or balun) in order to connect to the 75 Ohm Input terminals designed into the more recent Televisions and VCRs.

Tuner Mode • Designed for first time set up and use to set the TV for antenna or cable TV signal connections.


INDEX



Alternate Channel Control	Headphone Jack
Audio/Video Input Jacks	Incredible Surround Control
Audio/Video Output Jacks	Index
Auto Lock	Picture Control
Access Code	Quadra Surf Controls
Block All Channels Control	Registration Information
Blocking Channels	Remote Control Use with Accessory Devices:
Blocking Options	Code Entry List
Clear All Blocked Channels	Code Entry Method of Identification
Definitions/Understanding Auto Lock	Direct Access Method of Identification
Movie Ratings19	Search Method of Identification
TV Ratings	VCR Related Buttons
Auto Picture Control	S-Video Input Jacks
Auto Sound Control	Safety Information
AVL (Automatic Volume Leveler) Control9	SAP (Secondary Audio Program) Control
Balance Control	Sharpness Control
Bass Control	Sleeptimer Control
Brightness Control	Sound Control
Closed Caption Control	Stereo/Mono Settings
Color Control	Table of Contents
Color Temperature Control	Timer Controls
Contrast + (Black Stretch) Control	Tint Control
DNR (Digital Noise Reduction) Control	Treble Control
Factory Service Information	Troubleshooting Tips
Front Audio/Video Input Jacks	Warranty
Glossary of Terms	



FACTORY SERVICE LOCATIONS

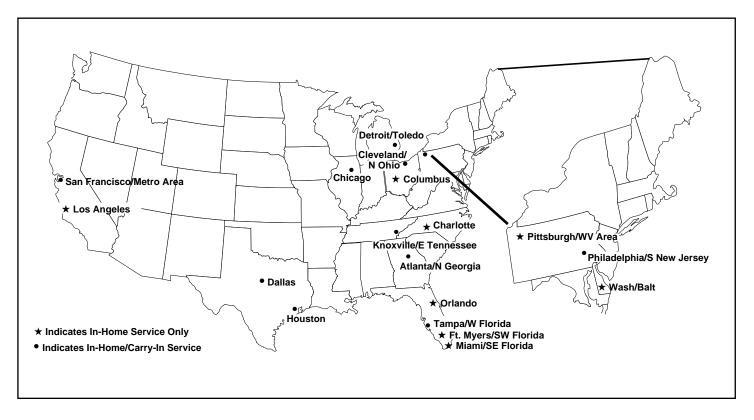

NOTE: If you reside in one of our Philips Factory Service Branch areas (see directory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

NOTA: Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le centre le plus près de chez vous.

NOTA: Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

In Canada

How you can obtain efficient and expedient carry-in, mail-in, or in-home service for your product

Please contact Philips at 1-800-661-6162 (French speaking) 1-800-363-7278 (English speaking)

Au Canada

Comment obtenir le service après-vente pour les produits apportés ou envoyés par la poste à notre centre de service ou le service à domicile

Veuillez contacter philips á: 1-800-661-6162 (Francophone)

1-800-363-7278

En el Canadá

Cómo recibir servicio efficiente para su producto, en persona, por correo o a domicillo

Favor de comunicarse con Philips al: 1-800-661-6162 (francófono)

1-800-363-7278 (anglófono)

MAC2929 Rev. BB - 1/1/2001 EL4482-3 Rev. CC 3135 015 07541

FACTORY SERVICE LOCATIONS



QUALITY SERVICE IS AS CLOSE AS YOUR TELEPHONE! SIMPLY LOOK OVER THE LIST BELOW FOR THE NUMBER OF A FACTORY SERVICE CENTER NEAR YOU. YOUR PRODUCT WILL RECEIVE EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE, AND YOU WILL RECEIVE PEACE OF MIND,

KNOWING YOUR PRODUCT IS BEING GIVEN THE EXPERT ATTENTION OF PHILIPS' FACTORY SERVICE.

COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS. PLUS DE 600 CENTRES DE RÉCEPTION DE PRODUITS À RÉPARER À TRAVERS LE PAYS: CONTACTER LE CENTRE DE SERVICE AUX CONSOMMATEURS LE PLUS PROCHE POUR SAVOIR L'EMPLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL.

CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO. MAS DE 600 SITIOS POR TODO EL PAIS PARA LA RECEPCION DE PRODUCTOS NECESITADOS DE REPARACIONES: COMUNICARSE CON EL CENTRO DE SERVICIO DE FABRICA MAS CERCANO PARA ESTOS LUGARES DENTRO DE UN RADIO DE 80 A 120 KM (50 A 75 MILLAS) DEL CENTRO DE SERVICIO LOCAL.

ATLANTA

Philips Factory Service 200 N. Cobb Pkwy., Suite 120 Marietta, GA 30062 800-273-1501

TAMPA

Philips Factory Service 1911 US Highway 301 North Tampa, FL 33619 800-442-2027

SAN FRANCISCO

Philips Factory Service 681 East Brokaw Rd. San Jose, CA 95112 800-300-9013

HOUSTON

Philips Factory Service 1110 N. Post Oak Rd., Suite 100 Houston, TX 77055 800-952-3254

CLEVELAND

Philips Factory Service 950 Keynote Circle Brooklyn Heights, OH 44131 800-331-7037

DETROIT

Philips Factory Service 25173 Dequindre Madison Heights, MI 48071 800-438-1398

DALLAS

Philips Factory Service 415 N. Main Street, #107 Euless, TX 76040 800-952-3254

CHICAGO

Philips Factory Service 1279 W. Hamilton Pkwy. Itasca, IL 60143 800-531-2922

KNOXVILLE

Philips Factory Service 6700 D Papermill Rd. Knoxville, TN 37919 800-821-1767

PHILADELPHIA

Philips Factory Service 352 Dunks Ferry Rd. Bensalem, PA 19020 800-847-9320

LIMITED WARRANTY

COLOR TELEVISION

90 Days Free Labor

One Year Free Replacement of Parts (Two Years Free Replacement on Color Picture Tube)

This product can be repaired in-home.

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, all parts will be repaired or replaced free, and labor is free. From 90 days to one year from the day of purchase, all parts will be repaired or replaced free, but you pay for all labor charges. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the picture tube, and for all labor charges. After two years from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- · a product used for commercial or institutional purposes.

WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Contact a Philips factory service center (see enclosed list) or authorized service center to arrange repair.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

TO GET WARRANTY SERVICE IN CANADA...

Please contact Philips at:

1-800-894-5463 1-800-363-7278

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL#	
SERIAL#	

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips Consumer Electronics Company, P.O. Box 2976, Longview, Texas 75606, (903) 242-4800