

Integrated High Definition LED Television User's Guide:

58L9300UC / 65L9300UC / 84L9300UC

If you need assistance:

Toshiba's Support Web site support.toshiba.com

For more information, see "Troubleshooting" on page 171 in this guide.

Owner's Record

The model number and serial number are on the back and side of your television.

Record these numbers, whenever you communicate with your Toshiba dealer about this Television.

Model name: _	
Serial number:	

Register your Toshiba Television at register.toshiba.com

Note: To display a High Definition picture, the TV must be receiving a High Definition signal (such as an overthe-air High Definition TV broadcast, a High Definition digital cable program, or a High Definition digital satellite program). For details, contact your TV antenna installer, cable provider, or satellite provider.

CHILD SAFETY:

PROPER TELEVISION PLACEMENT MATTERS



TOSHIBA CARES

- Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
- As you enjoy your television, please note that all televisions new and old-must be supported on proper stands or installed according to the manufacturer's recommendations. Televisions that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.



TUNE IN TO SAFETY

- ALWAYS follow the manufacturer's recommendations for the safe installation of your television.
- ALWAYS read and follow all instructions for proper use of your television.
- NEVER allow children to climb on or play on the television or the furniture on which the television is placed.
- NEVER place the television on furniture that can easily be used as steps, such as a chest of drawers.
- ALWAYS install the television where it cannot be pushed, pulled over or knocked down.
- ALWAYS route cords and cables connected to the television so that they
 cannot be tripped over, pulled or grabbed.



WALL OR CEILING MOUNT YOUR TELEVISION

- ALWAYS contact your retailer about professional installation if you have any doubts about your ability to safely mount your television.
- ALWAYS use a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
- ALWAYS follow all instructions supplied by the television and mount manufacturers.
- ALWAYS make sure that the wall or ceiling where you are mounting the television is appropriate. Some mounts are not designed to be mounted to walls and ceilings with steel studs or cinder block construction. If you are unsure, contact a professional installer.
- Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.



MOVING AN OLDER TELEVISION TO A NEW PLACE IN YOUR HOME.

- Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
- ALWAYS place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
- NEVER place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
- ALWAYS make sure your older CRT television does not hang over the edge of your furniture.



Dear Customer,

Thank you for purchasing this Toshiba LED TV. This document will help you use the many exciting features of your new LED TV. Before operating your LED TV. carefully read this manual completely.

Safety Precautions

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



WARNING
RISK OF ELECTRIC SHOCK
DO NOT OPEN.



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

Improper location and installation of a television can lead to the death of your child. Never place the television on furniture or in a location where children can climb up on and tip over the television. Please refer to the Child Safety information on page 2 and item 26) on page 4 in the Important Safety Instructions/Installation section.

WARNING

To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions. See item 26) on page 4.

WARNING: If you decide to wall mount this television, always use a mounting bracket that has been Listed by an independent laboratory (such as UL, CSA, ETL) and is appropriate for the size and weight of this television. The use of inappropriate or non-Listed mounting brackets could result in serious bodily injury and/or property damage. See "To Display your LED TV using a Wall Bracket:" on page 6.

WARNING (for 84L9300 Series)

This apparatus has been designed with Class I construction and must be connected to a mains socket outlet with a protective earthing connection (third grounding pin)

NOTE TO CATY INSTALLERS

This is a reminder to call the CATV system installer's attention to Article 820-40 of the U.S. NEC, which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical. For additional antenna grounding information, see items 33) and 34) on page 5.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.





- 10) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Additional Safety Precautions

- 14a) CAUTION: If the TV is dropped and the cabinet or enclosure surface has been damaged or the TV does not operate normally, take the following precautions:
 - ALWAYS turn off the TV and unplug the power cord to avoid possible electric shock or fire.
 - NEVER allow your body to come in contact with any broken glass or liquid from the damaged television. The LCD panel inside the TV contains glass and a toxic liquid. If the liquid comes in contact with your mouth or eyes, or your skin is cut by broken glass, rinse the affected area thoroughly with water and contact your doctor immediately.
 - ALWAYS contact a service technician to inspect the TV any time it has been damaged or dropped.

15) CAUTION:

- To reduce the risk of electric shock, do not use the polarized plug with an extension cord, receptacle, or other outlet unless the blades can be inserted completely to prevent blade exposure.
- To prevent electric shock, match wide blade of plug to wide slot; fully insert.

16) CAUTION:

 Do not let children swallow any small parts included on or with the product or play with the plastic bag. Keep the small parts and the plastic bag out of the reach of children.

17) CAUTION:

 Do not let water or other liquids come into contact with the product, as it may result in damage.

18) WARNING:

- To prevent the spread of fire, keep candles or other open flames away from this product at all times.
- Keep the product away from direct sunlight, fire or a heat source such as a heater. This may reduce the product lifetime or result in fire.

Installation, Care, and Service Installation

Follow these recommendations and precautions and heed all warnings when installing your TV:



WARNING: NEVER expose batteries to excessive heat such as sunshine or fire.

- 20) ALWAYS plug the product into an outlet that is located in such a manner that it can be easily unplugged in case the product requires service.
- 21) NEVER route the product's power cord inside a wall or similar enclosed area.

22) Never modify this equipment. Changes or modifications may void: a) the warranty, and b) the user's authority to operate this equipment under the rules of the Federal Communications Commission.

 
23)

 
DANGER: RISK OF SERIOUS PERSONAL INJURY, DEATH, OR EQUIPMENT DAMAGE

Never place the TV on an unstable cart, stand, or table. The TV may fall, causing serious personal injury, death, or serious damage to the TV.


24) When selecting a location for the TV,

- NEVER allow any part of the TV to hang over the edge of the supporting furniture,
- NEVER place the TV on tall furniture (for example, entertainment centers or bookcases) without anchoring both the furniture and the TV to a suitable support,
- Never place cloth or other material between the TV and the supporting furniture.
- · NEVER allow children to climb on the TV.
- 25) To avoid damage to this product, never place or store the TV in direct sunlight; hot, humid areas; or areas subject to excessive dust or vibration.
- 26) Always place the TV on the floor or a sturdy, level, stable surface that can support the weight of the unit. Secure the TV using one of the following methods:
 - (1) Secure the TV with a mounting screw (Recommended.)
 - Place the TV on a sturdy surface that has a sufficient thickness and screw the unit on the surface securely by using the mounting screw and the fall-prevention screw hole.






 - (2) Secure the TV with a sturdy strap to a wall stud, pillar, or other immovable structure. When connecting the strap:
- attach the strap to the TV using the hooks on the back of the TV, the clips on the pedestal, or the hole in the base of the pedestal as available.
- make sure the strap is tight, secure, and parallel to the floor.



 (3) Secure the TV with the fall-prevention band.






Fall-prevention band Mounting screw

Fall-prevention bands

 - 27) The apparatus shall not be exposed to dripping or splashing, and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 28) Never block or cover the slots or openings in the TV cabinet back, bottom, and sides. Never place the TV:
 - · on a bed, sofa, rug, or similar surface;
 - · too close to drapes, curtains, or walls; or
 - in a confined space such as a bookcase, built-in cabinet, or any other place with poor ventilation.
- 29) Always leave a space of at least 4 (four) inches around the TV. The slots and openings are provided to protect the TV from overheating and to help maintain reliable operation of the TV.
- 30) Never allow anything to rest on or roll over the power cord, and never place the TV where the power cord is subject to wear or abuse.
- 31) Never overload wall outlets and extension cords.
- 32) Always operate this equipment from a 120V AC, 60 Hz power source.
- 33) Always make sure the antenna system is properly grounded to provide adequate protection against voltage surges and built-up static charges (see Section 810 of the National Electric Code).





DANGER: RISK OF SERIOUS PERSONAL INJURY OR DEATH!

- When installing a rooftop antenna, use extreme care to make sure you are never in a position where your body (or any item you are in contact with, such as a ladder or screwdriver) can accidentally touch overhead power lines.
 Never locate the antenna near overhead power lines or other electrical circuits.
- Never attempt to install any of the following during lightning activity: a) an antenna system; or b) cables, wires, or any home theater component connected to an antenna or phone system.

Care

For better performance and safer operation of your TOSHIBATV, follow these recommendations and precautions:

35) If you use the TV in a room whose temperature is 32° F (0° C) or below, the picture brightness may vary until the LCD warms up. This is not a sign of malfunction.

36)

WARNING: RISK OF SERIOUS PERSONAL INJURY OR EQUIPMENT DAMAGE!

- Never use chemicals (such as air fresheners, cleaning agents, etc.) on or near the TV pedestal. Studies indicate that plastics may weaken and crack over time from the combined effects of chemical agents and mechanical stress (such as the weight of the TV). Failure to follow these instructions could result in serious injury and/or permanent damage to TV and TV pedestal.
- Always unplug the TV before cleaning. Gently wipe the display panel surface (the TV screen) using a dry, soft cloth (cotton, flannel, etc.). A hard cloth may damage the surface of the panel. Avoid contact with alcohol, thinner, benzene, acidic or alkaline solvent cleaners, abrasive cleaners, or chemical cloths, which may damage the surface. Never spray volatile compounds such as insecticide on the cabinet. Such products may damage or discolor the cabinet.
- 37) Never hit, press, or place anything on the back cover. These actions will damage internal parts.

38)

WARNING: RISK OF ELECTRIC SHOCK!



Never spill liquids or push objects of any kind into the TV cabinet slots.

- 39) During a thunderstorm, do not touch the connecting cables or product.
- 40) For added protection of your TV from lightning and power surges, always unplug the power cord and disconnect the antenna from the TV if you leave the TV unattended or unused for long periods of time.
- 41) Always unplug the TV to completely disconnect from mains power. When the TV is turned off using the on/off switch, it is not completely disconnected from power and a minute amount of current is still consumed.
- During normal use, the TV may make occasional snapping or popping sounds. This is normal, especially when the unit is being turned on or off. If these sounds become frequent or continuous, unplug the power cord and contact a Toshiba Authorized Service Provider.



WARNING: RISK OF SERIOUS PERSONAL INJURY OR EQUIPMENT DAMAGE!

Never strike the screen with a sharp or heavy object.

- 44) The LCD screen of this product can be damaged by ultraviolet radiation from the sun. When selecting a location for the television, avoid locations where the screen may be exposed to direct sunlight, such as in front of a window.
 - Never touch, press, or place anything on the LCD screen. These actions will damage the LCD screen. If you need to clean the LCD screen follow the instructions (in item 36) on page 5.

Service

45)



WARNING: RISK OF ELECTRIC SHOCK!



Never attempt to service the TV yourself. Opening and removing the covers may expose you to dangerous voltage or other hazards. Failure to follow this WARNING may result in death or serious injury. Refer all servicing not specified in this manual to a Toshiba Authorized Service Provider.

- 46) If you have the TV serviced:
 - Ask the service technician to use only replacement parts specified by the manufacturer.
 - Upon completion of service, ask the service technician to perform routine safety checks to determine that the TV is in safe operating condition.

Choosing a location for your LED TV

To Display your LED TV on the included Pedestal Stand:

Observe the following safety precautions:

 Read and follow the Pedestal Stand Assemblyinstructions included with the pedestal.

58L9300UC/65L9300UC Series:

CAUTION: Leave the TV standing in its packaging box until you have attached the support column and the stand. If the TV is laid down, it may become damaged.

CAUTION: Two or more people are required for installation to avoid injury or damage to the TV.

84L9300UC Series:

CAUTION: Attach the stand while the TV is still in its packaging. Do not lay the TV down to attach the stand. Attaching the stand while the TV is laid down may damage the TV.

CAUTION: Four or more people are required for installation to avoid injury or damage to the TV.

Note: Extreme care should always be used when attaching the pedestal stand to avoid damage to the LCD panel.

- Place the TV on a sturdy, level surface that can support the weight of the TV.
- Be sure to secure the TV to a wall, pillar, surface, or other immovable structure see item 26) page 4 for additional details.

CAUTION: Always place the TV on the floor or a sturdy, level, stable surface that can support the weight of the unit. Secure the TV as described in item 26) of the Important Safety Instructions in this document.

To Display your LED TV using a Wall Bracket:

If you decide to wall mount your LED TV, always use a wall bracket Listed by an independent laboratory (such as UL, CSA, ETL) that is appropriate for the size and weight of the TV (see page 3):

- CAUTION: Two or more people are required for installation (for 58"/65").
 - **CAUTION:** Four or more people are required for installation (for 84").
- Unplug and remove any cables and/or other component connectors from the rear of the TV.
- Remove the screws of the VESA Mounting Pattern show in the table if applicable (for 84").
 CAUTION: Do not use the screws removed from the back cover to attach the wall mount bracket to the TV
- Always use the screws supplied or recommended by the wall mount manufacturer.
- 5) Follow the instructions provided with your wall bracket. Before proceeding, make sure the appropriate bracket(s) are attached to the wall and the back of the TV as described in the instructions provided with the wall bracket.
- After attaching the appropriate bracket(s) to the wall and the back of the TV, remove the pedestal stand from the TV, as described below.
- 7) VESA Mounting Pattern

TV Size	Hole Pattern (HxV)	Screw Size
58"	400x400 mm	M6
65"	400x400 mm	M6
84"	600x400 mm	M8


Removing the Pedestal Stand

Note: Extreme care should always be used when attaching the pedestal stand to avoid damage to the LCD panel.

58L9300UC/65L9300UC Series:

- This process will require 2 or more people.
 Toshiba recommends using 3 people for this process. One person on each side of the TV and one person to remove the stand screws.
- Place the TV on a supporting surface around waist height. This will make it easier to lift the TV.
 Ensure the supporting surface can support the weight of the TV.
- 3) With one person on each side of the TV,


- a.the third person removes the four stand screws shown in the diagram below, then
- b.Two people lift the TV straight up off of the stand support to remove the pedestal stand from the TV.

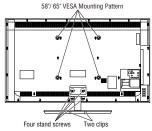

(Sample Illustration)

84L9300UC Series:

- This process will require 4 or more people.
 Toshiba recommends using 5 people for this process. Two people on each side of the TV and one person to remove the stand screws.
- Place the TV on a supporting surface around waist height. This will make it easier to lift the TV. Ensure the supporting surface can support the weight of the TV.
- With two people on each side of the TV, a.the fifth person removes the four stand screws shown in the diagram below, then
 - b. Four people lift the TV straight up off of the stand support to remove the pedestal stand from the TV.

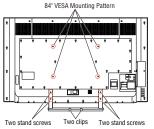

(Sample Illustration)

Safety Precautions for 3D glasses Available 3D glasses

58": Toshiba FPT-AG03 (supplied)

65"/84": Toshiba FPT-P100 (supplied)

- The 3D function has been designed for private use only. Please note that any commercial use of the 3D function or content provided on your TV could lead to copyright infringement of authors' rights.
- Viewing of 3D content requires compatible 3D glasses, compatible 3D display, compatible 3D playback device or 3D source and/or 3D capable HDMI™ cable.
- Carefully read instructions provided with your display and/or 3D glasses before 3D viewing.

Warning

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD. (For 58L9300UC only)

- This product contains a coin/button cell battery.
 If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
 If the battery compartment does not close securely, stop using the product and keep it away from children
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

About handling the 3D glasses

Do not leave the 3D glasses or the accessories within the reach of small children.

 The literature of the state o

Inhaling or swallowing them may cause suffocation or lesions in the stomach wall.

If swallowed, consult a doctor immediately.

 Do not repair, modify, or disassemble the 3D glasses by yourself.
 Doing so may cause a fire or cause you to become

indisposed while viewing 3D images.

• Do not expose the glasses to excessive heat

 Do not expose the glasses to excessive near such as sunshine or fire.

Caution

About the 3D glasses

- Do not use the 3D glasses if they are cracked, broken, or not working properly.
 - Continuing to use them in such a state may cause injury, eye strain, or minor discomfort..
- Do not stand or walk while wearing 3D glasses.
 You may lose your balance which could result in falls or other accidents.
- Do not wear the 3D glasses for any purpose other than viewing 3D programming.
 3D glasses do not function as sunglasses.
- Do not drop, exert pressure on, or step on the 3D glasses.

3D glasses.Doing so may damage the glass section, which may result in injury.

Exposing the 3D glasses to liquid or excessive heat may damage the function.

- If your nose or temple turns red, or you feel any pain or discomfort, stop using the 3D glasses.
 Such symptoms may occur when wearing 3D glasses for long periods of time.
- Be careful not to pinch your fingers in the hinge of the 3D glasses.

Cautions on watching the 3D images

 Some viewers may experience a seizure or blackout when exposed to certain flashing images or lights contained in certain 3D television pictures or video games.

Anyone who has had a seizure, loss of awareness, or other symptoms linked to an epileptic condition, or has a family history of epilepsy, should contact a health care provider before using the 3D function.

 Due to the possible impact on vision development, viewers of 3D video images should be age 6 or above.

Children and teenagers may be more susceptible to health issues associated with viewing in 3D and should be closely supervised to avoid prolonged viewing without rest.

- Avoid using the 3D function when under the influence of alcohol.
- If you are ill or feel ill, you should refrain from viewing 3D images, and consult your health care provider as may be appropriate.
- If you experience any of the following symptoms when viewing 3D video images, stop viewing and contact your health care provider:
 Convulsions, eye or muscle twitching, loss of awareness, altered vision, involuntary movements, disorientation, eye strain, nausea/vomiting, dizziness, headaches.
- If you feel eye fatigue or other discomfort from viewing 3D video images, remove the 3D glasses and discontinue use until the condition is eliminated.
- Viewing in 3D may cause dizziness and/or disorientation for some viewers.

Therefore, to avoid injury do not place your TV near open stairwells, balconies, or wires. Also do not sit near objects that could be broken if accidentally hit.

When viewing 3D images, always wear 3D glasses.

Watching 3D images without 3D glasses may cause eye strain.

 
Use specified 3D glasses.

- When watching 3D images, do not wear 3D glasses at an angle and do not lie down.
 If you watch while lying down or with the glasses tilted, the 3D effect is lost and it may cause eye strain.
- It is recommended that the viewer's eyes and 3D glasses are level with the screen.
- If you have prescription eye glasses or contact lenses, wear the 3D glasses over them.
 Watching 3D images without appropriate eyewear may cause eye strain.
- If 3D images often appear in double or if you cannot see the images in 3D, stop viewing.
 Continuous viewing may cause eye strain.
- Due to the possible impact on vision development, viewers of 3D video images should be age 6 or above.

Children and teenagers may be more susceptible to health issues associated with viewing in 3D and should be closely supervised to avoid prolonged viewing without rest.

 Watching TV while sitting too close to the screen for an extended period of time may cause eye strain.


The ideal viewing distance should be at least three times the screen height.




 For 58L9300UC Series: Use the 3D glasses in the following viewing angle.

Otherwise, you may not see the correct 3D image. Effective viewing angle:

 - Within 30° horizontal, 20° vertical



• For 65L9300UC/84L9300UC Series: For optimal 3D effect and to avoid eye fatigue it is important that you properly select your viewing position. The best viewing position is at the indicated viewing distance with your eyes at the same level as the center of the display as shown below. The center of the optimum viewing area varies from set to set. The usable viewing area is generally over the range shown in the table below (actual angle not depicted in drawing).

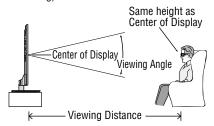

TV Size	Viewing angle	Viewing distance
65"	Approx. 16 deg.	Over 2.4 m
84"	Approx. 30 deg.	Over 3.1 m

IMPORTANT:

If you see a double image, your eyes are either too high or too low in relation to the horizontal center of the screen. Adjust your position so that it is closer to the center to avoid eye fatigue and to enjoy optimum 3D effects.

Notes on handling the 3D glasses:

- When cleaning the 3D glasses, gently wipe with a dry, soft cloth.
 - First, remove any dirt or dust from the 3D glasses.
- Harsh rubbing or use of a dirty or coarse cloth will scratch the 3D glasses.

- Do not use benzene, paint thinner, alcohol, water, or abrasive cleaners, which may damage the 3D glasses.
- When not using the 3D glasses, put them in the supplied glasses pouch and store them away from high temperatures and humidity.
- Do not store the 3D glasses in areas of extreme heat or cold, as deformation can occur. If deformation occurs, replace the 3D glasses.
- The lenses of the 3D glasses are different from those of ordinary glasses, and are very thin. Be very careful in handling the 3D glasses as the lens can pop out easily.
- · Do not put excessive force on the lenses.
- Do not scratch the surface of the lenses with sharp objects.
- · Do not drop or bend the 3D glasses.

Notes on IR communication (for 58L9300 Series):

- Do not block the IR sensor for 3D glasses on the TV by placing objects in front of it.
- Do not cover the IR sensor on the 3D glasses with stickers or labels.
- · Keep the IR sensor on the 3D glasses clean.
- The use of 3D glasses could interfere with other IR communication devices. Other IR communication devices may cause the 3D glasses not to work correctly.

Use the TV and 3D glasses in a place where they will not interfere with other devices or products.

Notes on watching the TV:

- Proper 3D effects or 3D-to-2D conversion results may not be obtained depending on the received 3D content.
- 3D effect and image quality may vary depending upon content quality and display device capability/functionality/settings.
- (For 58L9300UC Series) If you use any device, such as a mobile phone or mobile wireless device, near the 3D glasses, the 3D glasses may not work correctly.
- (For 58L9300UC Series) Use the product in the following temperature range; otherwise, the quality of the 3D image or the reliability of the product cannot be guaranteed.
 - 3D glasses: 0° C 40° C (32° F 104° F)
- (For 58L9300UC Series) If there is fluorescent lighting in the viewing area, it may flicker depending on the frequency of the light. In this case, reduce the brightness of the fluorescent light, or use another light. (It is not recommended to watch the TV in a dark room, especially for children.)
- Wear the 3D glasses properly, otherwise you may not see the correct 3D images.
- (For 58L9300UC Series) When not viewing 3D images, take off the 3D glasses; otherwise, it may be difficult to see the display on other products such as PC, digital clock, or calculator, etc.

- The 2D to 3D conversion function is activated and controlled by you according to your personal preferences.
- The 2D to 3D conversion function is meant for enjoyment of 2D home video, and other 2D content you create, in 3D according to your personal preferences.
- The 2D to 3D conversion function is not intended for use with pre-recorded 2D copyrighted content owned by a third-party unless the copyright owner has given direct or indirect permission, or unless applicable law permits such use.

FCC Caution

To assure continued compliance, follow the attached installation instructions. Any changes or modifications not expressly approved by Toshiba America Information Systems, Inc. could void the user's authority to operate this device. Service Center or an experienced radio/TV technician for help.

FCC Declaration of Conformity Compliance Statement (Part 15):

Toshiba television models 58L9300 Series, 65L9300 Series, and 84L9300 Series comply with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation. The party responsible for compliance to these rules is: Toshiba America Information Systems, Inc. 9740 Irvine Blvd., Irvine, CA 92618. Phone: 800-631-3811

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by removing and applying power to the equipment, the user is encouraged to try to correct the interference by one of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications to this equipment not expressly approved by Toshiba could void the user's authority to operate this equipment.

Wireless Radio

For product available in the USA/Canada market, only channel 1-11 can be operated. Selection of other channels is not possible. The device could automatically discontinue transmission in case of absence of information to transmit, or operational failure. Note that this is not intended to prohibit transmission of control or signaling information or the use of repetitive codes where required by the technology. If this device is going to be operated in 5.15-5.25GHz frequency range, then it is restricted to an indoor environment only.

Important: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Canada - Industry Canada Statement

This device complies with RSS-210.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation of the device

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter

Wireless Radio

For product available in the USA/Canada market, only channel 1–11 can be operated. Selection of other channels

The device could automatically discontinue transmission in case of absence of information to transmit, or operational failure. Note that this is not intended to prohibit transmission of control or signaling information or the use of repetitive codes where required by the technology.

Important: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

IC Radiation Exposure Statement: This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & vour body.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

Important notes about your TV

The following symptoms are technical limitations of LCD Display technology and are not an indication of malfunction; therefore, Toshiba is not responsible for perceived issues resulting from these symptoms.

- 1) An afterimage (ghost) may appear on the screen if a fixed, non-moving image appears for a long period of time. The afterimage is not permanent and will disappear in a short period of time.
- 2) The LCD panel contained in this TV is manufactured using an extremely high level of precision technology; however, there may be an occasional pixel (dot of light) that does not operate properly (does not light, remains constantly lit, etc.). This is a structural property of LCD technology, is not a sign of malfunction, and is not covered under your warranty. Such pixels are not visible when the picture is viewed from a normal viewing distance.

Note: Interactive video games that involve shooting a "gun" type of joystick at an on-screen target may not work with this TV.

Trademark Information

- · AutoView, Cinema Series, ClearScan, ColorMaster, ColorStream, CQ Engine, DynaLight, GameTimer, Native Mode, TriVector and Resolution+ are trademarks or registered trademarks of Toshiba America Information Systems, Inc.
- · ActiveX is a registered trademark of the Microsoft Corporation.
- · Android is a trademark of Google Inc.



- Manufactured under license from Audvssev Laboratories, Inc. U.S. and foreign patents pending. Audyssey Premium Television™ is a trademark of Audyssey Laboratories, Inc. Audvssev Premium Television™ is a suite of technologies that remove the acoustical problems caused by small
 - speakers and drivers. Working together these technologies deliver a better translation of the audio content and make the television experience sound closer to the original.
- Blu-ray Disc™. Blu-ray™. and the logos are trademarks of the Blu-ray Disc Association
- · CinemaNow is a registered trademark of BBY Solutions, Inc.

 DivX®, DivX Certified®, DivX Plus® HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DIGITAL PLUS
PULSE

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- Intel and the Intel logo are trademarks of Intel Corporation in the U.S. and/or other countries.
- iTunes Store is a trademark of Apple Inc., registered in the U.S. and other countries.
- MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.
- · Netflix is a registered trademark of Netflix, Inc.
- Skype, the Skype logo and the "S" logo are trademarks of Skype and are used with the permission of Skype.
- VUDU, Vudu Apps, and Vudu HD Movies are trademarks or registered trademarks of VUDU, Inc
- Designed with UEI Technology™. Under License from Universal Electronics Inc.
 Portions © UEI 2000-2012.
- · Wi-Fi is a registered mark of the Wi-Fi Alliance.
- All other brand and product names are trademarks or registered trademarks of their respective companies.
- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM
- THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS

- GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/ OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG powered LA.LLC. SEE HTTP:// WWW.MPEGLA.COM

Copyright

This guide is copyrighted by Toshiba America Information Systems, Inc. with all rights reserved. Under the copyright laws, this guide cannot be reproduced in any form without the prior written permission of Toshiba. No patent liability is assumed, however, with respect to the use of the information contained herein.

@2013 by Toshiba America Information Systems, Inc. All rights reserved.

Notice

The information contained in this manual, including but not limited to any product specifications, is subject to change without notice

TOSHIBA CORPORATION AND TOSHIBA AMERICA INFORMATION SYSTEMS, INC. (TOSHIBA) PROVIDES NO WARRANTY WITH REGARD TO THIS MANUAL OR ANY OTHER INFORMATION CONTAINED HEREIN AND HEREBY EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE WITH REGARD TO ANY OF THE FOREGOING. TOSHIBA ASSUMES NO LIABILITY FOR ANY DAMAGES INCURRED DIRECTLY OR INDIRECTLY FROM ANY TECHNICAL OR TYPOGRAPHICAL ERRORS OR OMISSIONS CONTAINED HEREIN OR FOR DISCREPANCIES BETWEEN THE PRODUCT AND THE MANUAL. IN NO EVENT SHALL TOSHIBA BE LIABLE FOR ANY INCIDENTAL. CONSEQUENTIAL, SPECIAL, OR EXEMPLARY DAMAGES, WHETHER BASED ON TORT, CONTRACT OR OTHERWISE, ARISING OUT OF OR IN CONNECTION WITH THIS MANUAL OR ANY OTHER INFORMATION CONTAINED HEREIN OR THE USE THEREOF.

Contents

Chapter 1:	Introduction	20
	Safety icons	
	Features	
	Overview of installation, setup, and use	
	TV front and side panel controls and connections	
	Front panel	
	Left side	
	TV back panel controls and connections	
	Back panel controls	
	•	
	Back panel connections	20
Chapter 2:	Connecting Your TV	29
•	Overview of cable types	
	Coaxial cable (F-type)	
	Standard AV cables (red/white/yellow)	
	Component video cables (red/green/blue)	
	HDMI [™] cable (with HDMI Logo)	
	Dual-wand IR blaster cable	
	Optical audio cable	
	Analog RGB (15-pin) computer cable	
	3.5mm Stereo to RCA Y-cable	
	LAN cable	
	L, 114 00010	JL

	About the connection illustrations	. 32
	Connecting an antenna, satellite receiver, and/or	
	cable TV box	. 32
	Connecting DVD to ColorStream® or VCR to	
	composite video	. 34
	Connecting remote IR devices	. 35
	Using the IR blaster OUT terminal	. 35
	Connecting a digital audio system Connecting an HDMI [™] or DVI device to the HDMI [™]	. 38
	Connecting an HDMI [™] or DVI device to the HDMI [™]	
	input Using the TV remote and HDMI [™] CEC Control to	. 39
	Using the TV remote and HDMI [™] CEC Control to	
	control other devices	. 41
	Connecting an HDMI [™] audio system	. 42
	Connecting a computer	. 43
	Connecting a computer to the TV's PC IN	
	terminal Connect a computer to the TV's HDMI [™]	. 43
	Connect a computer to the TV's HDMI [™]	
	terminal	. 44
	Connecting to a home network	. 45
	Connecting the TV directly to a computer	
	without an Internet connection	. 45
	Connecting the TV to a home network	
	without an Internet connection	. 46
	Connecting the TV to a home network with an	
	Internet connection - wired	. 47
	Connecting the TV to a home network with an	
	Internet connection - wireless	. 48
	Connecting the AC cord on your TV	
	(for 84L9300UC Series)	. 49
Chanter 3	Using the Remote Control	
onaptor o.		
	Controlling other devices	
	Installing batteries	
	Remote control effective range	
	Learning about the remote control	. აა

Chapter 4:	Initial Setup and Menu	
	Initial setup	
	Performing the initial setup	56
	Navigating the menu system	65
	Quick Menu	66
Chapter 5:	Setting up your TV	67
	How to navigate the menu	
	Changing initial settings	
	Individual settings	67
	Storing channels in memory (optional)	
	Skipping channels	70
	Skipping video inputs	71
	Labeling analog TV channels	71
	Labeling video inputs	
	Configuring shared input	72
Chapter 6:	Basic features	73
-	Using 3D functions	
	Viewing 3D images	
	Setting the 3D PIN code	
	Displaying 3D Important Information	83
	Adjusting 2D to 3D depth	
	Switching left and right images	
	Adjusting your viewing position	
	(for 65/84L9300UC only)	84
	Tuning Channels	85
	Tuning to the next programmed channel	85
	Tuning to a specific channel (programmed or	
	unprogrammed)	85
	Using Channel Return	85
	Selecting the video input to view	85
	Using closed captions	86
	Analog CC mode	87
	Digital CC settings	88
	Setting the PIN code	89

	Entering a new PIN code	89
	Changing or deleting your PIN code	
	Forgotten PIN code	90
	Locking specific channels	
	Locking video inputs	90
	Setting a time limit for games	
	Locking the control panel	91
	Using HDMI [™] CEC Control	92
	Controlling HDMI [™] CEC playback devices	93
	HDMI [™] CEC Control input source selection	
	Adjusting the amplifier's audio	
	Other HĎMI™ CEĆ Control functions	
	Viewing the HDMI [™] signal information	95
	Using your computer with the TV	
	Adjusting the image	
	Setting the computer audio	
	Setting the timer to turn on the TV	
	Setting the sleep timer	
	Setting No Signal Power Down	
	Setting TV Power On Control	
	Displaying TV status information	
	Viewing support information	
	Resetting to Factory Defaults	101
	Power failure	
Chanter 7:	Picture and Sound Controls	
onaptor 7.	Selecting the picture size	
	• .	
	Scrolling the picture	
	Using the 4:3 Stretch	
	Adjusting the picture	100
	Selecting the picture mode	
	Adjusting the picture quality	
	Using the advanced picture settings features	
	Resolution+	
	Dynamic Contrast	110

	DynaLight®	11	0
	ClearScan®	11	1
	MPEG NR	11	2
	DNR		
	Ambient Light Sensor	11	2
	ColorMaster™		
	Base Color Adjustment		
	Color temperature		
	Fine Texture Restoration	11	4
	Brilliance Restoration		
	3D Judder Cancellation	11	5
	Resetting to the factory default	11	5
	Setting the expert picture settings	11	5
	Test Pattern	11	5
	RGB Filter	11	6
	White Balance	11	6
٩dj	usting the audio	11	8
	Muting the sound		
	Selecting stereo/SAP broadcasts	11	8
	Adjusting the audio balance	11	8
	Adjusting the range	11	8
	TV Speakers On/Off	11	9
	Setting the Primary Audio Language	11	9
	Selecting the optical audio output format	11	9
	Using the Dolby® Digital Dynamic Range		
	Control feature	12	0
	Audyssey Premium Television™	12	1
	Using Audyssey EQ [®] for Wall Mounted or		
	Table-top TVs	12	1
	Using Audyssey Dynamic Volume ®	12	2
	Audyssey ABX™		
	Using the surround sound feature	12	2

Chapter 8:	Advanced features	123
-	Using your home network	123
	When using a Wireless network connection.	
	Setting up the Network	
	Wireless Setup	125
	Advanced Network Setup	130
	Network Connection Test	
	Using the software keyboard	
	Enter text using the software keyboard	
	Performing a Software Upgrade	
	Viewing the Software Licenses	
	Using Intel® WiDi	
	Changing the Intel® WiDi Device Name	137
	Device List	
	Using the Cloud Service	
	Using the Cloud Service TV features	138
	eMANUAL	138
	Feature apps	138
	Netflix [®]	
	Internet	140
	Using Skype™	
	MediaShare (Videos, Music, and Photos)	152
	MediaShare specifications	152
	Basic operation	153
	Viewing movie files	156
	Playing music files	161
	Viewing photo files	163
	Search	165
	Network Device Setup	166
	External Control Setup	166
	Setting up the Media Renderer feature	167
Chapter 9:	Cloud Service TV Companion Apps	168
	Using Apps on a Tablet or Smart phone	
	Apps Control Profile	169
	Pairing	170

Chapter 10:	Troubleshooting	.171
•	General troubleshooting	
	Picture problems	
	Sound problems	
	Remote control problems	
	Channel tuning problems	
	Closed caption problems	
	HDMI [™] CEC Control operation	
	HDMI [™] problems	
	Network problems	
	Wireless network problems	
	MediaShare problems	
	Cloud Service TV	
	Light Indicator	
	Power On/Standby light	
	If the problem persists after trying the solutions	
Appendix A:	Specifications	.180
	Television system	. 180
	Channel coverage	. 180
	Power source	. 180
	Power consumption	. 181
	Audio power	. 181
	Speaker type	. 181
	Video/audio terminals	. 181
	Video/audio input	
	ColorStream® (component video) HD input	
	HDMI [™] input	
	Digital audio output	. 182
	PC input	
	Wireless connection	
	Ethernet	
	USB	
	SD card	
	Dimensions with table stand	
	Weight (mass) with stand	. 183

Operating conditions	
Supplied accessoriesAcceptable signal formats for PC IN, and HDMI [™] ,	
and 3D	184
PC IN signal formats	184
HDMI [™] signal formats	185
3D Signal formats*	186
4K Video Support formats	186
Operating the TV with combination buttons	187
Appendix B: Wireless QWERTY keyboard with touchpad	188
International Key table	191
Index	192

Chapter 1

Introduction

Safety icons

This manual contains safety instructions that must be observed to avoid potential hazards that could result in personal injuries, damage to your equipment, or loss of data. These safety cautions have been classified according to the seriousness of the risk, and icons highlight these instructions as follows:

A	ю.	м.		^	-	ю.
		Δ.	ти.	О		156

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

AWARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

ACAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in property damage.

NOTE

Provides important information.

Features

- Integrated digital tuning (8VSB ATSC and QAM) Eliminates the need for a separate digital converter set-top box (in most cases).
- 3840 x 2160 display resolution.
- ❖ Quad FHD— Allows you to enjoy high quality full HD pictures using the 4K panel and the limited 4K extended definition function.
- Four HDMI[™]—Digital, High-Definition Multimedia Interfaces with 1080p and 4K input support. See "3D Signal formats*" on page 186.
- ❖ HDMI[™] capabilities ARC (Audio Return Channel)—Enables the audio signal of the TV to be sent to an AV amplifier via an HDMI[™] cable. See "HDMI[™] ARC (Audio Return Channel) feature" on page 42.
- **♦ HDMI**[™] **CEC Control**—Allows control of external devices from the TV remote via HDMI[™] connection. See "Using the TV remote and HDMITM CEC Control to control other devices" on page 41.
- **♦ ColorStream® HD**—High-resolution component video input.
- Digital Audio Out—Optical audio connection with Dolby[®] Digital optical output format, see "Connecting a digital audio system" on page 38.
- ❖ CQ Engine[™]—A powerful video processing engine with an array of advanced technology including Edge Enhancement, Dynamic Gamma, ColorMaster, Expert Mode and new DNR that creates superior picture quality.
- DNR—New Dynamic Noise Reduction technology that filters out video noise without decreasing picture sharpness for clean, crystalclear images, see "DNR" on page 112.
- ❖ PC IN (Analog RGB)—Computer Input terminal, see "Connecting a computer" on page 43.
- ❖ IR Blaster Out— Controls infrared remote controlled devices from the TV.
- Built-in WLAN—Allows the television to access your home wireless network.
- Intel® WiDi—Technology allows direct wireless connection between the TV and Intel® WiDi equipped computers or mobile devices.

- ❖ ColorMaster™—Technology allows you to adjust the TV's standard colors, see "ColorMaster™" on page 113.
- ClearScan® —Technology uses both frame interpolation technology and advanced backlight control with image synchronization to quadruple the TV refresh rate for an even clearer fast motion video. See "ClearScan®" on page 111.
- ❖ DynaLight®—Backlight control monitors the brightness of each video frame and automatically adjusts backlight intensity based on the content to create higher dynamic contrast, for deeper blacks and increased depth. See "DynaLight®" on page 110.
- AutoView®—Allows you to automatically adjust picture settings including Brightness, Contrast, Gamma, and Sharpness based on ambient room light conditions and incoming picture content to create the best possible picture settings without any manual adjustment.
- Audyssey Premium Television[™]—Includes innovative audio enhancement technologies that create clear, rich, and natural sound. These technologies include EQ[®], ABX[™], Dynamic Volume[®], Volume Extension[™], and Day/Night and Wall/Table Modes. See "Audyssey Premium TelevisionTM" on page 121.
- MediaShare—Allows you to view photo files and play music or movie files, see "MediaShare (Videos, Music, and Photos)" on page 152.
- Cloud Service TV—Enhanced content discovery includes real time streaming news, true social interaction features, and mobile device interaction. See "Using the Cloud Service TV features" on page 138.
- **❖** Wireless QWERTY keyboard with built-in touchpad.
- ❖ 3D capability —Allows you to view and experience 3D content on the television while using special glasses.

Overview of installation, setup, and use

Follow these steps to set up your TV and begin using its many exciting features.

- 1 Carefully read the important safety, installation, care, and service information. Keep this manual for future reference.
- 2 To choose a location for the TV:
 - Read "Important notes about your TV" on page 10.
 - Place the TV on the floor or a sturdy, level, stable surface that


- can support the weight of the unit. Secure the TV to a wall, pillar, or other immovable structure, see 24) on page 4.
- Place the TV in a location where light does not reflect on the screen.
- Place the TV far enough from walls and other objects to allow proper ventilation. Inadequate ventilation may cause overheating, which will damage the TV. THIS TYPE OF DAMAGE IS NOT COVERED UNDER THE TOSHIBA LIMITED WARRANTY.
- 3 Do not plug in any power cords until after you have connected all cables and devices to your TV.
- 4 Before connecting cables or devices to the TV, review the functions of the TV's connections and controls, see "Overview of cable types" on page 29.
- 5 Connect your other electronic device(s) to the TV, see "Connecting Your TV" on page 29.
- 6 Install the batteries in the remote control, see "Installing batteries" on page 50.
- 7 See "Using the Remote Control" on page 50 for an overview of the buttons on the remote control.
- 8 After connecting all cables and devices, plug in the power cords for your TV and other devices. Then press the **POWER** button on the TV control panel or remote control to turn on the TV.

NOTE

If the TV stops responding to the buttons on the remote control or TV control panel and you cannot turn the TV off or on, unplug the power cords for a few seconds and then plug them in and try again.

- 9 See "Navigating the menu system" on page 65 for a quick overview of navigating the TV's menu system.
- 10 Program channels into the TV's channel memory, see "Auto Tuning" on page 69.
- 11 For details on using the TV's features, see chapters 6, 7, and 8.
- 12 For help, refer to "Troubleshooting" on page 171.
- 13 For technical specifications, see "Specifications" on page 180.

TV front and side panel controls and connections

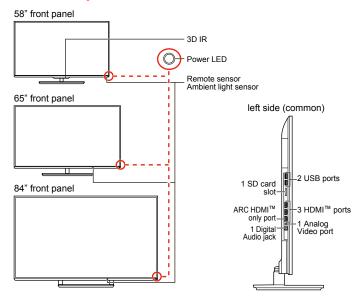

(Sample Illustration) Front and side panel controls and connections


Front panel


- 1 **Power On/Standby LED**—Power indicator light, (glows green when the TV power is On).
- 2 Ambient light sensor—This sensor detects the ambient light conditions to optimize the backlighting levels, see "Ambient Light Sensor" on page 112.
- 3 Remote Sensor—Point the remote control toward this remote sensor, see "Remote control effective range" on page 52.
- **3D IR**—This sensor detects the 3D IR (for 58L9300UC model only).


Left side

- 5 Analog Video Port—Analog Video input. Connect using a commercially available conversion cable.
- 3 HDMI[™] Ports—High-Definition Multimedia Interface input receives digital audio and uncompressed digital video from an HDMI[™] device or uncompressed digital video from a DVI device. HDMI[™] connection is necessary to receive 1080p and 4K signals.
- 7 ARC HDMI[™] only port—Audio Return Channel (ARC) enables the audio signal of the TV to be sent to an AV amplifier via the HDMI cable.
- 8 Digital Audio Jack—Optical audio output in Dolby® Digital or PCM (pulse-code modulation) format for connecting an external Dolby® Digital decoder, amplifier, A/V receiver, or home theater system with optical audio input.
- **9 2 USB Ports**—Used to access video, music, or photo files with USB device. Works with the wireless keyboard.
- 10 SD card slot—Used to access video, music, or photo files with SD card.

TV back panel controls and connections

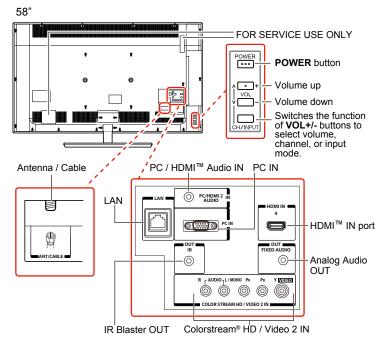

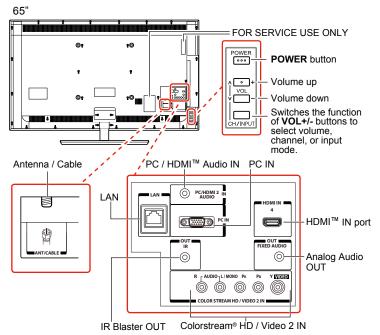

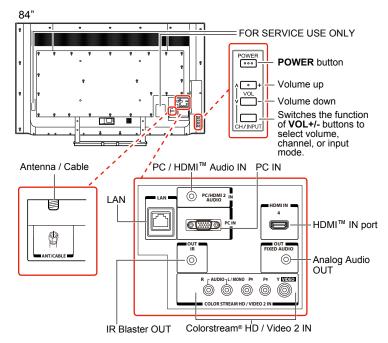

(Sample Illustration) L9300UC Series back panel controls and connections

For explanations of cable types and connections, see "Connecting Your TV" on page 29.

Back panel controls

- 1 **POWER**—Turns the TV On and Off.
- 2 VOL +/- —Adjust the volume level, change the channel, or change the input or source you are viewing, depending on the mode, which is selected by the CH/INPUT button.
- 3 CH / INPUT Switches the function of the VOL +/- buttons to select the volume, channel, or input mode.
 - In Volume mode, the arrow buttons increase or decrease the volume.
 - In Channel mode, the arrow buttons change the channel up or down
 - In Source mode, the arrow buttons toggle the input from one source to the next.

The mode of the **VOL** +/– buttons change in the following order

TV back panel controls and connections

each time the button is pressed:

 \rightarrow Channel \rightarrow Input \rightarrow Volume \rightarrow

Back panel connections

- **4 LAN IN**—Connects the TV to your home network.
- 5 HDMI[™] IN—High-Definition Multimedia Interface input receives digital audio and uncompressed digital video from an HDMI[™] device or uncompressed digital video from a DVI device. HDMI[™] connection is necessary to receive 1080p and 4K signals.
- 6 Analog Audio Port—Analog audio outputs for connecting an audio amplifier.
- **7 PC IN**—For use when connecting a personal computer.
- 8 ANT/CABLE—Antenna input that supports analog (NTSC) and digital (ATSC) off-air antenna signals and analog and digital Cable TV (QAM) signals.
- 9 ColorStream® HD/ Video 2 IN—These include standard A/V connections, see "Connecting DVD to ColorStream® or VCR to composite video" on page 34.
- **10 PC/HDMI**[™] **Audio IN**—PC audio input terminals are shared with HDMI [™]-2 analog audio input terminals, and their use can be configured in the Configuring shared inputs menu, see "Configuring shared input" on page 72.
- 11 IR Blaster OUT—Used to connect and control infrared remotecontrolled devices.
- **12 FOR SERVICE USE ONLY**—Connectors for service use only.

NOTE

Component/Standard (composite) video cables carry only video information; separate audio cables are required.

Chapter 2

Connecting Your TV

Overview of cable types

Before purchasing cables, know the connector types your devices require. You can purchase cables from most stores that sell audio/video devices.

Coaxial cable (F-type)



(Sample Illustration) Coaxial cable

Coaxial (F-type) cable connects your antenna, cable TV service, and/or cable converter box to the ANT/CABLE input on your TV.

NOTE

Please tighten this connection by hand. Using tools may damage the connection

Standard AV cables (red/white/yellow)



(Sample Illustration) Standard A/V cables

Standard A/V cables (composite video) usually come in sets of three, and connect to video devices with analog audio and composite video output. These cables (and the related inputs on your TV) are typically color-coded according to use: yellow for video, red for stereo right audio, and white for stereo left (or mono) audio.

Component video cables (red/green/blue)



(Sample Illustration) Component video cables

Component video cables come in sets of three and are for use with video devices with component video output. (ColorStream® is Toshiba's brand of component video.) These cables are typically color-coded red, green, and blue. Separate audio cables are required for a complete connection.

NOTE

Component video cables provide better picture quality than composite video cables.

HDMI[™] cable (with HDMI Logo)



(Sample Illustration) HDMI[™] cable

 $HDMI^{TM}$ (High-Definition Multimedia Interface) cable connects to devices that have an $HDMI^{TM}$ output. An $HDMI^{TM}$ cable delivers digital audio and video in its native format. Separate audio cables are not required, see "Connect a computer to the TV's $HDMI^{TM}$ terminal" on page 44.

NOTE

HDMI[™] cables provide the best audio and picture quality.

Dual-wand IR blaster cable

 
Connect the dual-wand IR blaster cable to the IR blaster terminal to control infrared remote controlled devices from the TV.

Optical audio cable



Optical audio cable connects receivers with Dolby[®] Digital or PCM (pulse-code modulation) optical audio input to the TV's Digital Audio Out terminal, see "Connecting a digital audio system" on page 38.

Analog RGB (15-pin) computer cable



(Sample Illustration) Analog RGB (15-pin) computer cable

Analog RGB (15-pin) computer cable connects a computer to the TV's **PC IN** terminal, see "Connecting a computer to the TV's PC IN terminal" on page 43.

NOTE

Separate audio cables are required.

3.5mm Stereo to RCA Y-cable



(Sample Illustration) 3.5mm Stereo to RCA Y- cable

3.5mm Stereo to RCA Y-cable connects an audio signal from DVI device to TV.

LAN cable



(Sample Illustration) LAN cable


Standard LAN cable connects the TV to your home network, see "Connecting the TV to a home network with an Internet connection - wired" on page 47.

Crossover LAN cable connects the TV directly to a computer, see "Connecting the TV directly to a computer without an Internet connection" on page 45.

About the connection illustrations

You can connect different types and brands of devices to your TV in several different configurations. The connection illustrations in this manual are representative of typical device connections only. The input/output terminals on your devices may differ from those illustrated. For details on connecting and using your specific devices, refer to each device's owner's manual.

Connecting an antenna, satellite receiver, and/or cable TV box

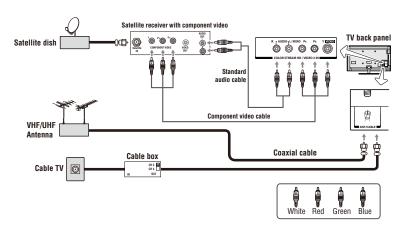

(Sample Illustration) L9300UC Series—Connecting to an antenna, satellite receiver, and/or cable TV box

Items needed:

- Coaxial cables
- Standard AV cables
- Component video cables (red/green/blue)

NOTE

When you use a cable box, you may not be able to use the remote control to program or access certain features on the TV.

To view the antenna or cable signal:

Select ANT/CABLE video input source on the TV.*

To view basic and premium cable channels:

Select the ANT/CABLE video input source on the TV.* Tune the TV to channel 3 or 4 (whichever channel the cable box output is set to). Use the cable box controls to change channels.

To view the VCR or camcorder video:


Turn On the VCR or camcorder video. Select VIDEO input source on the TV.*

*To select the video input source, press the **INPUT** button on the remote control, see "Selecting the video input to view" on page 85.

NOTE

The unauthorized recording, use, distribution, or revision of television programs, videotapes, DVDs, and other materials is prohibited under the Copyright Laws of the United States and other countries, and may subject you to civil and criminal liability.

Connecting DVD to ColorStream® or VCR to composite video

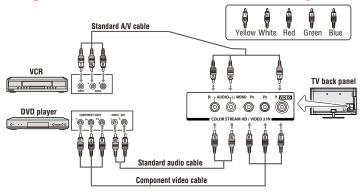

(Sample Illustration) L9300UC Series—Connecting a DVD with ColorStream® or a VCR with composite video

Items needed:

- Coaxial cables
- Standard AV cables
- Standard audio cables
- Composite or component video cables
 - You can connect the component video cables (plus audio cables) from the DVD player or satellite receiver to the COLOR STREAM HD terminal in the TV. The COLOR STREAM HD terminal can be used to display Progressive (480p, 720p, 1080p) and Interlaced (480i, 1080i) scan systems. If your DVD player or satellite receiver does not have component video, connect a standard A/V cable to the AUDIO/VIDEO terminal. If your DVD player has HDMI™ video, see "Connecting an HDMI™ or DVI device to the HDMI™ input" on page 39.

NOTE

When you use $\mathsf{ColorStream}^{\otimes}\,\mathsf{HD}$ or $\mathsf{Video},\,\mathsf{please}\,\mathsf{switch}$ to the appropriate $\mathsf{AV}\,\mathsf{mode}.$

To view antenna or Cable channels:

Select the ANT/CABLE video input source on the TV.*

To view the DVD player:

Turn ON the DVD player. Select the ColorStream® HD video input source on the TV.*

To view satellite programs using the component video connections:

Turn ON the satellite receiver. Select the ColorStream® HD video input source on the TV.*

To view the VCR or view and record antenna channels:

Turn ON the VCR. Tune the VCR to the channel you want to watch. Select the VIDEO video input source on the TV.*

To record a TV program while watching a DVD:

Turn ON the VCR. Tune the VCR to the channel to record. Select the ColorStream® HD video input source on the TV* to view the DVD.

*To select the video input source, press the **INPUT** button on the remote control, see "Selecting the video input to view" on page 85.

NOTE

The unauthorized recording, use, distribution, or revision of television programs, videotapes, DVDs, and other materials is prohibited under the Copyright Laws of the United States and other countries, and may subject you to civil and criminal liability.

Connecting remote IR devices

Using the IR blaster OUT terminal

You can use the TV's IR OUT terminal to remotely operate many infrared remote-controlled devices enclosed in an entertainment center or similar cabinet.

Items needed:

- Dual-wand IR blaster cable (see "Dual-wand IR blaster cable" on page 30)
- ♦ Other cables as required to connect the device(s) to the TV (see "Overview of cable types" on page 29)

See the remote IR blaster setup section (see page 61).


To connect the IR blaster cable:

- 1 Locate the infrared sensor on the front of your device. This sensor is marked on some devices. If you are having issues locating the device's infrared sensor, see "If you cannot locate the device's infrared sensor:" on page 37.
- 2 Align one of the IR blaster cable's wands approximately 1 inch away from the infrared sensor on the front of the device and attach it using double-sided mounting tape. If you have a second device, attach the second wand in a similar manner.

NOTE

If you do not have a second device, coil the second wand with a rubber band and leave it behind the TV.


3 Plug the IR blaster cable's plug into the TV's IR Blaster Out terminal.

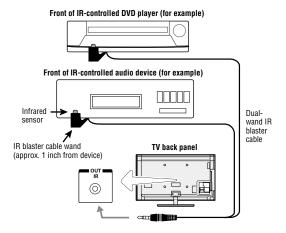

(Sample Illustration) L9300UC Series—Using the IR blaster OUT terminal

To control the device(s):

Point the TV remote control toward the front of the TV and press the button for the desired function. The signal passes from the remote control through the TV to the device via the IR Blaster cable. For more information, see "Setting the IR Blaster" on page 61.

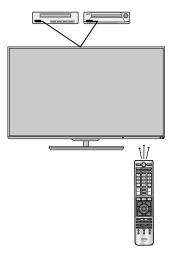

(Sample Illustration) Controlling the device(s) - remote control

NOTE

The IR pass-through feature does not support all IR controlled devices. Satisfactory quality may not be attainable with certain devices.

 
If you cannot locate the device's infrared sensor:

- 1 Turn off the device.
- 2 Starting at the device's lower-left corner, place the end of the device's remote control (with the infrared emitter) so it touches the front of the device. Press the **POWER** button. (Do not use the TV's remote control for this step.)
- 3 If the device turns on, the sensor is located where the remote control touched the device
- 4 If the device does not turn on, move the remote control slightly to the right and press the **POWER** button again.
- 5 Repeat the previous steps if necessary.

Connecting a digital audio system

The TV's Digital Audio Out terminal outputs a Dolby® Digital or 2-channel down-mixed PCM (pulse-code modulation) signal for using with an external Dolby® Digital decoder or other external audio systems with optical audio input.

You will need an Optical audio cable (Use an optical audio cable that has the larger "TosLink" connector and not the smaller "mini-optical" connector.)



(Sample Illustration) L9300UC Series—Connecting a digital audio system

Before controlling the audio, see "Selecting the optical audio output format" on page 119.

NOTE

Some audio systems may not be compatible with Dolby® Digital bitstream signals. Older audio systems that are not compatible with standard optical out signals may not work properly, creating a high noise level that may damage speakers or headphones. THIS DAMAGE IS NOT COVERED BY YOUR WARRANTY. The DIGITAL AUDIO OUT terminal may not output some digital audio sources because of copy restrictions.

- The Dolby[®] Digital format is available in the following situations:
 - When tuned to a digital RF channel
 - When an HDMI™ input is used
 - When network devices are used

Connecting an HDMI™ or DVI device to the HDMI™ input

The HDMI[™] input on your TV receives digital audio and uncompressed digital video from an HDMI[™] source device, or uncompressed digital video from a DVI (Digital Visual Interface) source device.

This input is designed to accept HDCP (High- Bandwidth Digital-Content Protection) program material in digital form from EIA/CEA-861-D—compliant[1] consumer electronic devices (such as a set-top box or DVD player with HDMITM or DVI output).

The HDMI[™] input can accept and display VGA, SVGA, XGA, WXGA, SXGA, 480i (60Hz), 480p (60Hz), 720p (60Hz), 1080i (60Hz), 1080p (24Hz/30Hz/60Hz), and 4K video signal formats. For detailed signal specifications, see "HDMI[™] signal formats" on page 185 and "4K Video Support formats" on page 186.

The supported Audio formats are Linear PCM and Dolby[®] Digital, sampling rate 32/44.1/48 kHz.


NOTE

To connect a PC to the HDMI™ input, see "Connect a computer to the TV's HDMI™ terminal" on page 44.

We cannot guarantee that all 4K video input through HDMI terminals will be displayed.

To connect an $HDMI^{TM}$ device, you will need one $HDMI^{TM}$ cable (type A connector) per $HDMI^{TM}$ device:

- For proper operation, it is recommended that you use an HDMI[™] cable with the HDMI[™] Logo (H□III).
- To display an 1080p/60Hz and 4K signal format, you will need a High Speed HDMI[™] cable. A conventional HDMI[™]/DVI cable may not work properly.
- ♦ HDMI[™] cables transfer both video and audio. Separate analog audio cables are not required (see illustration).

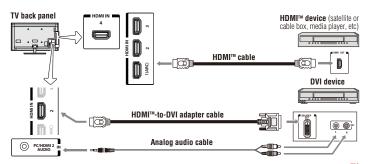

(Sample Illustration) L9300UC Series—Connecting an HDMITM or DVI device to the HDMITM Input

To view the HDMI[™] device video:

Select **HDMI 1**, **HDMI 2**, **HDMI 3** or **HDMI 4** video input source on the TV. (Press the **INPUT** button on the remote control. For more information, see "Selecting the video input to view" on page 85.

To connect a DVI device, you will need:

- ♦ HDMI[™] to DVI adapter cable For proper operation, the length of an HDMI[™] to DVI adapter cable should not exceed 9.8 ft (3m). The recommended length is 6.6 ft (2m).
- ❖ 3.5mm Stereo to RCA Y-cable
 An HDMI[™] to DVI adapter cable transfers video only. Separate analog audio cables are required (see illustration).

NOTE

To ensure that the HDMI[™] or DVI device is reset properly:


- ♦ When turning on your electronic components, turn on the TV first, and then the HDMI™ or DVI device.
- ♦ When turning off your electronic components, turn off the HDMI™ or DVI device first, and then the TV.

NOTE

[1] EIA/CEA-861-D compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being standardized for reception of high definition video signals. Because this is an evolving technology, it is possible that some devices may not operate properly with the TV.

Using the TV remote and HDMI[™] CEC Control to control other devices

To control the basic functions of connected audio/video devices using the TV's remote control, connect an $HDMI^{\mathsf{TM}}$ CEC compatible audio system or playback device. The $HDMI^{\mathsf{TM}}$ CEC Control feature uses CEC technology as regulated by the $HDMI^{\mathsf{TM}}$ standard.

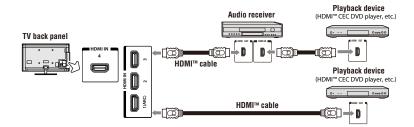

(Sample Illustration) L9300UC Series—Connecting an HDMI[™] CEC compatible audio system and playback device

To connect an audio system and playback devices, you will need HDMI[™] cables, see "HDMI™ cable (with HDMI Logo)" on page 30.

NOTE

- If several devices are connected, HDMI[™] CEC Control feature may not operate properly, see "HDMI[™] CEC Control input source selection" on page 94.
 - For proper operation, it is recommended that you use $HDMI^{\mathbb{N}}$ cables with the $HDMI^{\mathbb{N}}$ Logo (**Hami**).
- DDMI[™] CEC devices can be controlled by TV remote only when it is the TV mode.

Before controlling the devices:

- ❖ For an explanation of setup and operations, see "Other HDMI™ CEC Control functions" on page 94.
- Configure the connected devices. See each device's operation manual.

NOTE

This feature is limited to models incorporating Toshiba's HDMI™ CEC Control feature. However, Toshiba is not liable for those operations. See the individual instruction manuals for compatibility information.

When using an external AV amplifier the picture and sound may not be properly synchronized. In this case, adjust the delay time of the sound on the AV amplifier.


NOTE

The control range of the delay time differs according to the device you use.

Connecting an HDMI[™] audio system

If your $HDMI^{\mathsf{TM}}$ audio system supports ARC, audio from the TV can be sent to the audio system via an existing $HDMI^{\mathsf{TM}}$ cable.

You will need an HDMI[™] cable.

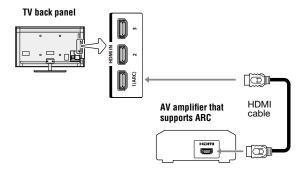

(Sample Illustration) L9300UC Series— Connecting to HDMI™ ARC

HDMI[™] **ARC** (Audio Return Channel) feature


This feature enables the audio signal of the TV to be sent to an audio system via the $HDMI^{\mathsf{TM}}$ cable. It will not be necessary to connect a cable from the audio output of the TV to the audio input of the audio system to reproduce the audio received from the tuner of the TV through the audio system.

Connecting a computer

With either the PC IN or HDMI[™] connection, you can view your computer's display on the TV and hear the sound from the TV's speakers.

Connecting a computer to the TV's PC IN terminal

When connecting a computer to the PC IN terminal on the TV, use an analog RGB (15-pin) computer cable and a PC audio cable. For more information, see "Overview of cable types" on page 29.

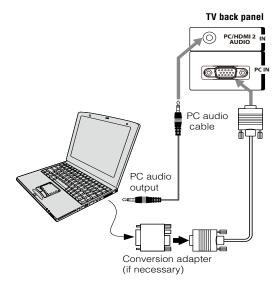

(Sample Illustration) L9300UC Series—Connecting to a computer through analog RGB cable

To use a computer, set the monitor output resolution on the computer before connecting it to the TV. The supported signal formats are VGA, SVGA, XGA, WXGA and SXGA. For detailed signal specifications, see "Acceptable signal formats for PC IN, and HDMITM, and 3D" on page 184.

Other formats or non-standard signals will not be displayed correctly. To display the optimum picture, use the computer setting feature, see "Using your computer with the TV" on page 95.

NOTE

- The PC audio input terminal on the TV is shared with the HDMI 2 terminal. For configuration information, see "Setting the computer audio" on page 96.
- Some computer models cannot be connected to this TV.

- If the computer has a compatible mini D-sub15-pin terminal, an adapter is not required.
- Depending on the content's title and the computer's specifications, some scenes may be skipped or you may not be able to pause during multi-angle scenes.

Signal names for mini D-sub 15-pin connector:

Pin		Pin No.:	Signal	Pin No.:	Signal
<i>No.:</i>	Name:		Name:		Name:
1	R	6	Ground	11	NC
2	G	7	Ground	12	SDA
3	В	8	Ground	13	H-sync
4	NC*	9	5V	14	V-sync
5	Ground	10	Ground	15	SCL


^{*}NC=Not connected

Connect a computer to the TV's HDMI[™] terminal

When connecting a computer with a DVI port to the HDMITM terminal on the TV, use an HDMITM to DVI adapter cable and analog audio cables.

When connecting a computer with an $HDMI^{\mathsf{TM}}$ port, use an $HDMI^{\mathsf{TM}}$ cable (type A connector). Separate analog audio cables may not be necessary, depending on computer hardware and setup.

For more information, see "Overview of cable types" on page 29.

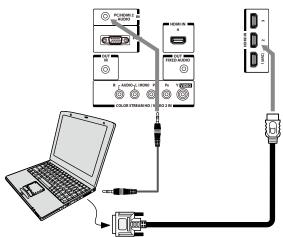

(Sample Illustration) L9300UC Series—Connecting to an HDMI[™] terminal

The supported signal formats are VGA, SVGA, XGA, WXGA, SXGA, 480i (60Hz), 480p (60Hz), 720p (60Hz), 1080i (60Hz), 1080p (24Hz/30Hz/60Hz) and 4K formats. For signal specifications, see "Acceptable signal formats for PC IN, and HDMITM, and 3D" on page 184.

NOTE


- The edges of the picture may be hidden.
- If receiving a 480i (HDMI), 480p (HDMI), 720p, 1080i, or 1080p signal program, Native mode scales the video to display the entire picture within the borders of the screen (i.e. no overscanning).

Connecting to a home network

The LAN port allows your Toshiba TV to connect to your home network. You can use this home network to access photos, movies, and music files that are stored on a connected media server and play them on your TV.

Connecting the TV directly to a computer without an Internet connection

You will need a Crossover LAN cable.

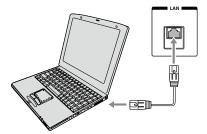


(Sample Illustration) L9300UC Series—Connecting a computer without Internet connection

Connecting the TV to a home network without an Internet connection

Items needed:

- Standard LAN cables
- Router with a hub

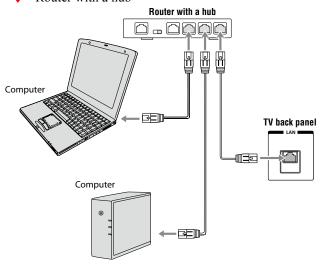


(Sample Illustration) L9300UC Series—Connecting a network without Internet connection

Connecting the TV to a home network with an Internet connection - wired

Items needed:

- Coaxial or telephone cable (depending on your modem type)
- Standard LAN cables
- Router with Hub
- Modem (DSL or cable)

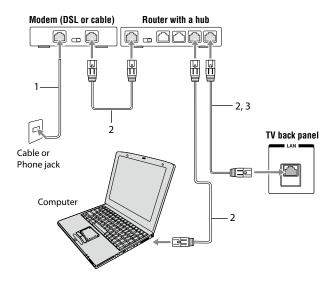


(Sample Illustration) L9300UC Series—Connecting with Internet connection - wired

Item:	Description:
1	Coaxial or telephone cable (depending on your modem type)
2	Standard LAN cable
3	Do NOT connect a phone jack directly to the TV's LAN
	port.

Connecting the TV to a home network with an Internet connection - wireless

Items needed:

- Coaxial or telephone cable (depending on your modem type)
- Standard LAN cables
- Wireless LAN access point or wireless router
- Modem (DSL or cable)

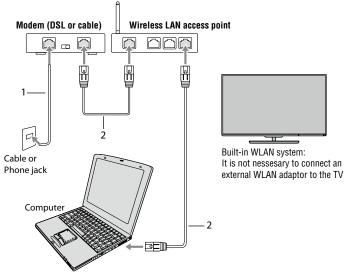

(Sample Illustration) L9300UC Series—Connecting with Internet connection - wireless

Item:	Description:
1	Coaxial or telephone cable (depending on your modem
	type)
2	Standard LAN cable

 
The transmission speed over the wireless LAN and the distance over which wireless LAN can reach may vary depending on surrounding electromagnetic environment, obstacles, access point design and configuration, and client design and software/hardware configurations. The actual transmission speed will be lower than the theoretical maximum speed.

NOTE

The Built-in WLAN Adapter is based on the IEEE 802.11n specification and may not be fully compatible with, or support some features (e.g., security) of certain Wi-Fi equipment that are based on the draft version of IEEE 802.11n.

Connecting the AC cord on your TV (for 84L9300UC Series)

1 Place the ferrite core attachment around the AC cord near the connection end.



(Sample Illustration) Ferrite core attachment

2 Snap the ferrite core attachment closed, around the AC cord.



 
(Sample Illustration) Ferrite core attachment - closed

AWARNING

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm.

Wash hands after handling.

3 Make sure to connect the AC cord plug into the AC IN terminal firmly.



Chapter 3

Using the Remote Control


Controlling other devices

The TV's remote control can operate other devices as described in "Setting the IR Blaster" on page 61.

Installing batteries

To install batteries:

1 Slide back and pull up to open the cover.

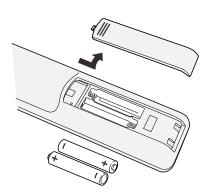


(Sample Illustration) Removing the battery cover

2 Install two AAA size batteries.

NOTE

Use carbon zinc batteries or alkaline batteries.

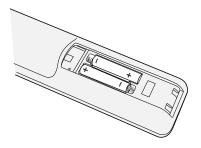

(Sample Illustration) installing the batteries

3 Slide on the cover.

CAUTION


Do not expose batteries to excessive heat such as sunshine, fire, etc.

NOTE

- Dispose of batteries in a designated disposal area.
- Always consider the environment when disposing of batteries.
- Always follow applicable laws and regulations.
- If the remote does not operate correctly, or if the operating range is reduced, replace the batteries.
- Always replace both batteries with new ones. Never mix battery types or use new and used batteries together.
- Always remove batteries from the remote if they are dead or if the remote control is not to be used for an extended period of time. This prevents battery acid from leaking into the battery compartment.

Remote control effective range


1 For optimum performance, aim the remote control directly at the TV and make sure there are no obstructions between the remote control and the TV.

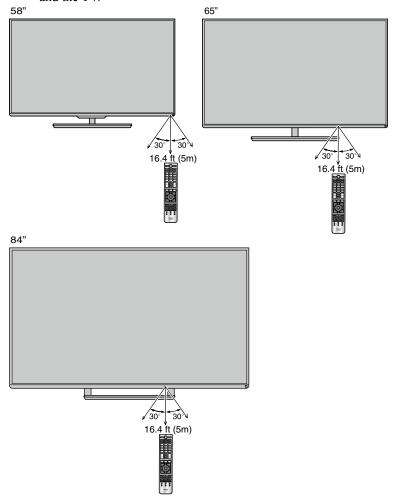

(Sample Illustration) Remote control effective range

Learning about the remote control

Only the buttons used to operate the TV are described in this section. For the HDMI[™] CEC Control functions, see "Using HDMI[™] CEC Control" on page 92.

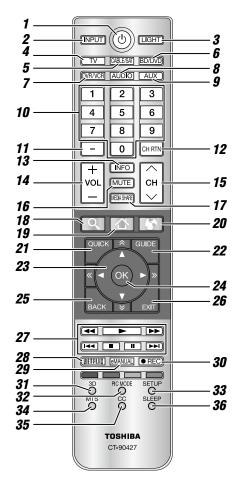

(Sample Illustration) Remote control overview

NOTE

The error message "Not Available" may appear if you press a button for a function that is not available.

Item:	Description:	Function:	Item:	Description:	Function:
1	POWER button	Turns the TV On and Off. When	21	QUICK button	Launches the Quick menu.
		the TV is on, the power LED indicator on the TV front glows	22	GUIDE button	Launches the MediaGuide application on-screen.
2	INPUT button Light button	green. Selects the video input source. Illuminates the keypad for five	23	(▲/▼/◄/▶)	Selects or adjusts programming buttons menus when a menu is on-screen.
	•	seconds.		(≈/≈/≪/≫)	Scrolls the page up, down, left,
4	TV button			(((((((((((((((((((and right.
5	Cable/Satellite button	Sets the remote control mode to	24	OK button	Selects the highlighted items on the screen.
6	BD/DVD button	control the device: TV, CABLE/	25	BACK button	Returns to the previous screen.
7	DVR/VCR button	SAT, BD/DVD, DVR/VCR,	26	EXIT button	Closes on-screen menus.
8	Audio button	AUDIO, or AUX.	27	(▶/◀◀/▶▶/₩/	: PLAY button
9	Auxillary button			→ / = /II)	■ : REWIND button
10	Channel Number	Directly tunes channels.			▶▶ : FAST FORWARD button
	buttons (0-9)				SKIP-BACK button SKIP-BACK button
11	(–) button	Enters 2-part channel numbers.			► : SKIP-FORWARD button
12	CH RTN button	Returns to the last viewed			■ : STOP button
		channel or source.			■: PAUSE button
13	INFO button	Displays TV status information	28	NETFLIX button	Launches the Netflix®
		as well as program details, when			application on-screen.
		available.	29	eMANUAL button	Launches the eManual
14	VOL (+ / -) buttons	Adjusts the volume level.			application on-screen.
15	CH (▲/▼) buttons	Cycles through programmed		DE0.1	Internet connection required.
		channels.	30	REC button	Used for TV, Cable/Sat, BD/
16	MUTE button	Reduces or turns off the sound.	0.4	001 11	DVD, Aux devices
17	MEDIA SHARE	Accesses the MediaShare	31	3D button	Accesses the 3D options.
	button	Service.	32	PIC MODE button	Selects the picture mode.
18	SEARCH button	Accesses the SearchAll function.	33	SETUP button	Accesses the main TV menu
19	HOME button	Accesses the Cloud Service TV			system.
		Portal pages.	34	MTS button	Accesses the MTS options.
20	INTERNET button	Launches the web browser on-	35	CC button	Accesses the closed-caption
		screen.	00	OLEED L. III	feature.
			36	SLEEP button	Accesses the sleep timer.

Chapter 4

Initial Setup and Menu

Initial setup

When you first turn on or reset the TV, the **Menu Language** screen appears.

NOTE

- You can stop initial setup by pressing the EXIT button. However, if you do not finish Channel Tuning setting, the Quick Setup screen will appear every time you turn on your TV.
- The EXIT button does not work until after you have set the Store/ Home Mode setting.

Performing the initial setup

1 Menu Language

Select a language and press the **OK** button.



(Sample Illustration) Selecting Menu Language

Quick Setup screen will appear.

About the Quick Setup screen

The Quick Setup screen is divided into the progress window and setup window.

- The progress window shows the Quick Setup items being set up. The finished items are dark, and the finish mark (✓) appears by them.
- The setup window shows the settings.



(Sample Illustration) Quick Setup and Welcome window

Basic Operations in Quick Setup


- 1 Use the the \triangle/∇ (arrow) buttons to select an item on the setup window, and press the **OK** button.
- 2 Select **Next** and press the **OK** button. The next item will appear.
- Some items have sub menus, which appear when the **OK** button is pressed.

Use the \triangle/∇ (arrow) buttons to select an item on the sub menu, and press the **OK** button.



(Sample Illustration) Quick Setup and Welcome window

- ♦ Alternatively, press the ► (arrow) button to show the submenu.
- When the ◀ (arrow) button is pressed on the setup window, the focus moves to the progress window. On the progress window, you can select a finished item using the the ▲/▼ (arrow) buttons.

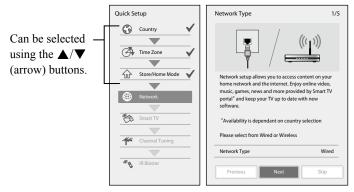

(Sample Illustration) Quick Setup and Welcome window

Repeat the above procedure to continue setting up.

Performing the Quick Setup

1 Country

Select a country then press the **OK** button.

2 Time Zone

Select **Time Zone**, and select a time zone from the submenu. Select **Daylight Saving Time**, and select **On** or **Off** from the submenu

Select Next

3 Store / Home Mode

Select **Store / Home Mode**, and select **Home** or **Store** from the submenu.

To use at home, select **Home**.

Select Next.

NOTE

Store Mode is only available if the TV is set to Store Mode at initial setup. This option is hidden in the Home Mode.

4 Network

To make full use of the functions, it is recommended that you set up a network and connect to the Internet.

To start the Network Setup, select **Next** on the screen or to skip the setup, select **Skip**. If you skip this setup, you can setup the Network at any time through the **Network** menu.

Network setup

1 Select Network Type, and select Wired or Wireless from the sub menu.

Select Next.

- If you select Wired, proceed to the Network Connection Test (Step 3). If you selected Wireless, please proceed to the following step.
- 2 Select Wireless Setup, and select Easy Setup, Assisted Setup, or Manual Setup from the sub menu.

Select Next.

NOTE

- **Easy Setup**. If your Access Point (AP) supports WPS, this method can be used. WPS is a standard designed to simplify the connection of wireless LAN equipment and the setup of network security features.
- **Assisted Setup** (setup using the AP's notification information). The Network Name, Authentication, and Encryption are decided based on information from the AP. You need to manually set the Security Key for this method
- Manual Setup (to input all settings manually).
- Once your wired or wireless network has been configured. 3 perform a Network Connection Test.

A network connection test screen will appear while the test is being performed. If the test was successful, the successful connection screen will appear.

If the network connection test failed, the connection failure screen will appear.

For more information, see "Setting up the Network" on page 125.

Press the **OK** button.

When the network can be accessed, **Software Upgrade** availability check starts automatically. When Software **Upgrade** is completed, proceed to the next step.

NOTE

In order to secure your home network, it is strongly recommended that you use a wireless access point with encryption.

5 Smart TV

Select TV Power On Control, and select Enabled or Disabled from the sub menu.

If you select **Enabled**, you can turn on or off the television from the companion devices such as Tablet or Smartphone.

- Select Next.
- When **Enabled** is selected, perform the following procedure:
 - Select **Enable Control**, and select **On** or **Off** from the sub menu.

When **On** is selected, you can control the TV power and off using companion devices such as a tablet or smartphone.

Performing the initial setup

2 Select Media Renderer, and select On or Off from the sub menu.

When **On** is selected, the Media Renderer function can be used.

3 Select Next.

6 Channel Tuning

Select Antenna or Cable, and select Start Scan.

Auto Tuning will start.

While scanning is in progress, the **Auto Tuning Progress** screen appears.

NOTE

If you do not want to scan channels, you do not need to make a selection for **Channel Tuning**. Select **Skip** to skip this step.

NOTE

If you want to stop scanning, pressing the **EXIT** button while scanning is in process.

While scanning is in progress, the **Auto Tuning Progress** screen appears.

After scanning is complete, the auto tuning results screen (such as the one below) will appear.



(Sample Illustration) Auto Tuning Results screen

Press the **OK** button

NOTE

The encrypted channels are not listed on the auto tuning result screen.

If some channels are not found after scanning:

- Check the antenna/cable connections, and scan again.
- Connect the TV to the antenna or cable box directly and scan again.
 - 1 Press the **SETUP** button. Select **Installation** > **Quick Setup** and press the **OK** button.
 - A confirmation message appears.
 - 2 Select **Yes** then press the **OK** button.
 - 3 Repeat setup to step 6 (Channel Tuning).
 - If you selected Antenna previously, selecting Cable might be effective.
 - If you selected Cable previously, selecting Antenna might be effective.
 - 4 Select Start Scan.

7 IR Blaster

Select Next or Skip.

❖ To start the IR Blaster setup, select Next on the screen, or to skip the setup, select Skip. If you skip this setup, you can setup the IR Blaster at any time through the Installation > IR Blaster Setup menu.

NOTE

The IR Blaster may not work with some devices, and it may not control certain features on your external devices.

Setting the IR Blaster

IR Blaster Setup

Select Add on the screen.
 Device Type screen will appear.

Device Type

- 1 Select **Device Type**, and use the **◄/▶** (arrow) buttons to select a device type from the following:
 - Cable Box
 - Satellite Box
 - VCR
 - Blu-ray, DVD Player
 - Receiver, Misc Audio
 - Amplifier

- CD Player
- Video Accessory
- 2 Press the ▼ button then press the GREEN button. The Brand screen will appear.
- 3 Use the ▲/▼ (arrow) buttons to select the brand name then press the **OK** button.
 - Select a field and press the **OK** button to show the software keyboard. Enter the first few characters of the brand name and press the **Green** button. The brand name starting with the entered characters will appear on the **Brand** screen
- 4 Press the OK button.Model Name screen will appear.

Model Name

- 1 Press the GREEN button.
 The Model Name screen will appear.
- 2 Use the \triangle/∇ (arrow) buttons to select the model name then press the **OK** button.
 - Select a field and press the OK button to show the software keyboard. Enter the first few characters of the model name and press the GREEN button. The model name starting with the entered characters will appear on the Model Name screen.
- 3 Press the ▼ (arrow) button to select Code Set then press the OK button.

Code Set screen will appear.

Code Set

- 1 Use the \triangleleft / \triangleright (arrow) buttons to select the code.
 - After the code is selected, press the **RED** button to show the **Test** screen. The test will start automatically.

NOTE

If a model has more than one Code Set, a message will appear stating "This model has more than one Code Set. Please select and test your preferred Code Set." You will need to choose a code set using the ▲/▼ (arrow) buttons and perform the Test option to ensure the correct Code Set has been selected.

2 Press the OK button.
Input & Mode Key screen will appear.

Input & Mode Key

- 1 Use the **◄/▶** (arrow) buttons to select the TV input to which the IR device is connected.
 - --- (Appears when Device Type is set to Receiver, Misc Audio or Amplifier)
 - ♦ ANT/CABLE
 - Video1
 - Video2
 - ColorStream HD
 - HDMI 1
 - HDMI 2
 - HDMI 3
 - HDMI 4
 - PC
- 2 Press the ∇ (arrow) button.
- 3 Use the $\triangleleft / \triangleright$ (arrow) buttons to select device mode key.
 - CABLE/SAT
 - ♦ BD/DVD
 - ♦ DVR/VCR
 - AUDIO
 - AUX
- 4 Press the **OK** button.
 - When Device Type is set to Receiver, Misc Audio or Amplifier, the Volume Control screen will appear.
 - When Device Type is set to Cable Box, Satellite Box, Blu-ray or DVD Player, the Guide Preferences screen will appear.
 - When Device Type is set to VCR, CD Player or Video Accessory, press the OK button on the IR Blaster Setup complete screen.
 - Support Information screen will appear.

Volume Control

- 1 Use the ◀/► (arrow) buttons to set up the Volume control to select:
 - TV (this is the default)
 - **External**

The **Volume** + **or** – and **MUTE** buttons will control the External equipment through the IR blaster.

2 Press the **OK** button.

Press the **OK** button on the IR Blaster Setup complete screen. **Support Information** screen will appear.

Guide Preferences

- 1 Use the **◄**/► (arrow) buttons to set up the Guide preferences to select:
 - * TV MediaGuide
 - External Device Guide
- 2 Press the ∇ (arrow) button to select **Interval Time**.
 - ♦ 0.125 sec
 - ❖ 0.25 sec
 - ♦ 0.375 sec
 - ♦ 0.5 sec
 - ♦ 0.625 sec
 - ♦ 0.75 sec
 - ♦ 0.875 sec
 - ♣ 1 sec
- ❖ After the interval time is selected, press the **RED** button to show the **Test** screen. The test will start automatically.
- 3 Press the OK button.
 Press the OK button on the IR Blaster Setup complete screen.
 Support Information screen will appear.

8 Support Information

Read through the information, and press the $\mathbf{O}\mathbf{K}$ button.

The initial setup is completed.

NOTE

Refer to this information if there is a problem and you need to contact Customer Support. To find help, the following operation can be performed at any time. **SETUP** button > **Get Help** > **System Information** > **OK** button.

Navigating the menu system

To open the menu system, press the SETUP button on the remote control.



(Sample Illustration) Main menu

- ♦ When a menu is open, press the $\triangle/\nabla/\blacktriangleleft/\triangleright$ (arrow) buttons on the remote control to move in the corresponding direction.
 - To show the setup items or sub menus, press the ▶ (arrow) button (or the **OK** button).
 - To select a highlighted item or save your menu settings, press the **OK** button. (A highlighted menu item appears in a different color in the menu.)
- ♦ All menus close automatically if no selection is made within approximately 60 seconds.
- To close a menu instantly, press the **EXIT** button.

Quick Menu

Quick menu helps you access some options more quickly.

Press the **QUICK** button to display the Quick menu and press the \triangle/∇ (arrow) buttons to select an option.

NOTE Quick menu items differ depending on the current mode.

Quick Menu	Item Page
Intel [®] WiDi	page 136
Picture Mode	page 108
Picture Size	page 102
3D Settings	page 78
Sleep Timer	page 98
HDMI CEC Device Control	page 93
Speakers	page 119
Device Information	page 155
Wireless Information	page 129
Interval Time	page 164
Repeat	page 157
Sound	page 117
Picture	page 108
Background Music	page 164
Play List	page 157

Chapter 5

Setting up your TV

How to navigate the menu

Press the SETUP button. Select Installation, Main menu, Submenu, and then press the OK or EXIT button.

Changing initial settings

From Quick Setup:

- 1 Press the **SETUP** button.
- 2 Select Installation > Quick Setup, and press the OK button. A confirmation message appears.
- 3 Press the $\triangleleft/\triangleright$ (arrow) buttons to select Yes.
- 4 Press the **OK** button.

 To change settings, see "Initial setup" on page 55.

Individual settings

Menu Language

You can choose from three different menu language settings (English, Français, and Español). The TV displays menus and messages in your preferred language.

- 1 Press the **SETUP** button.
- 2 Select Installation > Menu Language and press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select your preferred language.
- 4 Press the **OK** button.

Country

You can select the country in which you reside.

- 1 Press the **SETUP** button.
- 2 Select **Installation** > **Country** and press the **OK** button.
- 3 Press the \triangle/∇ (arrow) buttons to select the country.
- 4 Press the **OK** button.

Time Zone

This setting allows you to specify the correct time zone for your region.

- 1 Press the **SETUP** button.
- 2 Select **Installation** > **Time Zone** and press the **OK** button.
- 3 Press the \triangle/∇ (arrow) buttons to select your time zone.
- 4 Press the **OK** button.

Daylight Saving Time

- 1 Press the **SETUP** button.
- 2 Select Installation > Daylight Saving Time and press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select **On** or **Off**.
- 4 Press the **OK** button.

Store / Home Mode

You can select **Store** or **Home** to designate the TV location. Select **Home** for normal home use.

- 1 Press the **SETUP** button.
- 2 Select Installation > Store / Home Mode and press the OK button.
- 3 Press the \blacktriangle /**▼** (arrow) buttons to select **Home** or **Store**.
- 4 Press the **OK** button.

NOTE

Store Mode is only available if the TV is set to Store Mode at initial setup.

ANT/CABLE In

This setting configures the antenna input source for the ANT/CABLE terminal.

- 1 Press the **SETUP** button
- 2 Select Installation > Channel Tuning > ANT/CABLE In and press the OK button.

- 3 Press the \triangle/∇ (arrow) buttons to select **Antenna** or **Cable**.
- 4 Press the **OK** button.
- 5 Select Start Scan. After scanning is complete, the auto tuning results screen will appear.
- 6 Press the **OK** or **EXIT** button.

Storing channels in memory (optional)

To make sure your TV stops only on the channels you want when you press the $CH \triangle / \nabla$ buttons on the remote control or the control panel, store those channels in the TV's memory.

Auto Tuning

NOTE

You must set up the antenna/cable input source first. See "Initial setup" on page 55.

You can set up the TV to detect all active channels in your area and store them in its memory. Then you can manually store or skip individual channels from memory.

Option:	Description:
Cable	Note: If you select Cable, auto tuning deletes previously stored channels from memory. This setup requires some time, but you do not need to repeat the setup unless your cable TV service's lineup changes significantly.
Antenna	To skip an antenna source channel and remove it from memory, set the channel to be skipped. See "Skipping channels" on page 70.

NOTE

To tune to channels not stored in memory, use buttons 0–9 and the **DASH** button on the remote control.

- 1 Press the **SETUP** button.
- 2 Select Installation > Channel Tuning > Auto Tuning, and then press the OK button.

A confirmation screen appears.

- 3 Press the **OK** button to start Auto Tuning or press the **EXIT** button to abort
 - The TV cycles through the channels and stores all active channels in memory.
- 4 To view the programmed channels, press the CH ▲/▼ buttons.

Manual Tuning

After storing channels in memory, you can manually enter channels if the channel number is known.


- 1 Press the **SETUP** button
- 2 Select Installation > Channel Tuning > Manual Tuning, and then press the OK button.
- 3 Use buttons 0–9 on the remote control to enter the channel number (for example, 56).
- 4 Press the **OK** button.
- 5 Press the **OK** button again to begin Manual Tuning.
 The channels found are listed at the bottom of the screen.

Option:	Description:	
ATV	Analog channel	
DTV	Digital channel	

Skipping channels

To prevent a channel from being viewed, you can set it to be skipped.

- 1 Press the **SETUP** button.
- 2 Select Options > Channel Options and then press the OK button. The list of channels appears.

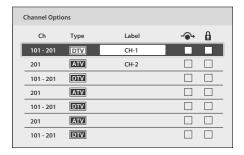

(Sample Image) Channel options

- 3 Press the \blacktriangleleft /▶ (arrow) buttons to select the Skip column (♠) and press the \blacktriangle /▼ (arrow) buttons to select a channel to skip.
- 4 Press the **OK** button. The box is selected.
- 5 To clear the selection, press the **OK** button.

NOTE

You cannot tune skipped channels using the $\mathbf{CH} \wedge \mathbf{or} \vee \mathbf{buttons}$. Use buttons 0–9 and the \mathbf{DASH} button on the remote control.

Skipping video inputs

You can set video inputs to be skipped when selecting inputs in the Input selection screen.

To turn on skip


- 1 Press the **SETUP** button.
- 2 Select Options > Input Option > Input Labeling and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select the item you wish to skip. Then press the **RED** button to turn on **Skip**.

To turn off skip

Press the **RED** button again to turn off **Skip**.

Labeling analog TV channels

- 1 Press the **SETUP** button.
- 2 Select Options > Channel Options, and then press the OK button. The list of channels appears.

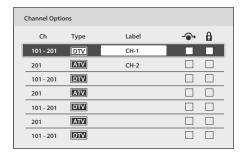

(Sample Image) Channel options

- 3 Press the \blacktriangle /**▼** (arrow) buttons to select a channel to label.
- 4 Press the **OK** button.

 The Software Keyboard window appears.
- 5 Input a name using the Software Keyboard, see "Using the software keyboard" on page 133.
- 6 Press the GREEN button.

Labeling video inputs

The input labels are shown in the input selector and banner displays. You can label video inputs according to the devices you have connected to the TV.

- 1 Press the **SETUP** button.
- 2 Select Options > Input Option > Input Labeling and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select the item you wish to label. Press the ◄/► (arrow) buttons to select Receiver, Cable, DVD, Game, PC, Recorder, Satellite, VCR or Blu-ray TM.
 - When entering arbitrary characters, press the GREEN button. The Software Keyboard window appears. Input a name using the Software Keyboard, see "Using the software keyboard" on page 133.
- 4 Repeat Step 3 for other video inputs.

Configuring shared input

To set Shared PC Audio

- 1 Press the **SETUP** button.
- 2 Select Options > Input Option > PC/HDMI 2 Audio and press the OK button.
- 3 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **PC** or **HDMI 2**.

NOTE

To apply the setting, switch the input to PC or HDMI 2.

Chapter 6

Basic features

Using 3D functions

Before using the 3D function, note the following:

In addition to compatible 3D glasses, viewing 3D programming requires the following (not included):

- ❖ Available 3D glasses :
 - For 58L9300UC Series: Toshiba FPT-AG03 (supplied)
 - For 65L9300UC/84L9300UC Series: Toshiba FPT-P100 (supplied)
- Compatible 3D playback device or 3D source.
- **♦** 3D capable HDMI[™] cable.

If you wish to obtain extra 3D glasses:

Toshiba provides 3D glasses for this television as an option.

To obtain them visit:

US: http://ceaccessories.toshiba.com/

Canada: http://www.shoptoshiba.ca/

NOTE

Use the type of 3D glasses that are compatible with to your TV.

A CAUTION

Health precautions:

- Due to the possible impact on vision development, viewers of 3D programming should be age 6 or above. Children may be more susceptible to health effects from viewing 3D images and should be closely supervised.
- Some viewers may experience a seizure or blackout when exposed to certain flashing images or lights contained in certain 3D television pictures or video games. Anyone who has had a seizure, loss of awareness, or other symptoms linked to an epileptic condition, or has a family history of epilepsy, should contact a health care provider before using the 3D function.

CAUTION

Handling the 3D glasses:

- When cleaning the 3D glasses, gently wipe with a dry, soft cloth.
- First, remove any dirt or dust from the 3D Glasses.
- Harsh rubbing or use of a dirty or coarse cloth will scratch the 3D Glasses. Do not use benzene, paint thinner, alcohol, water, or abrasive cleaners, which may damage the 3D glasses.
- When not using the 3D glasses, store them away from high temperatures and humidity.
- Do not store the 3D glasses in areas of extreme heat or cold, as deformation can occur. If deformation occurs, replace the 3D glasses.
- The lenses of the 3D glasses are different from those of ordinary glasses, and are very thin. Be very careful in handling the 3D glasses as the lens can pop out easily.
- Do not put excessive force on the lenses.
- Do not scratch the surface of the lenses with sharp objects.
- Do not drop or bend the 3D glasses.
- Do not use benzene, paint thinner, alcohol, water, or abrasive cleaners, which may damage the 3D glasses.
- The 3D glasses are not subject to repair. If the glasses are broken or scratched, purchase a new pair of 3D glasses.
- The 3D glasses are not subject to repair, but can be replaced if a problem occurs due to an initial fault with the glasses.
- Be careful not to pinch your fingers in the hinge of the 3D glasses.

NOTE Watching the TV:

- Proper 3D effects or 3D-to-2D conversion results may not be obtained depending on the received 3D content.
- 3D effect and image quality may vary depending upon content quality and display device capability/ functionality/settings.
- Wear the 3D glasses properly, otherwise you may not see the correct 3D images.
- When not viewing 3D images, take off the 3D glasses; otherwise, it may be difficult to see the display on other products such as your computer, digital clock, or calculator, etc.
- Use the 3D glasses at the proper viewing angle and distance, see "Safety Precautions for 3D glasses" on page 7.

NOTE

Use a high-speed HDMI[™] cable when you connect a device such as a 3D compatible Blu-ray Disc[™] player or computer to the TV. When you use a standard HDMI[™] cable, 3D images may not display correctly.

Some functions cannot be shown in 3D mode.

Viewing 3D images

Incoming video signals can either be in 2D or 3D format. A 2D signal can be viewed in either 2D or 3D, and 3D can be viewed in either 2D or 3D. If the TV can detect the fact that a signal is 3D, it can change to 3D mode automatically – see "Setting the auto start mode" on page 81.

Otherwise you can change the viewing mode using the 3D button. Finally, the format of the 3D signal can be either Side by Side (SBS) or Top and Bottom (TAB). You may have to choose the correct format if the TV can not detect it automatically – see "Switching display mode or selecting 3D format", below.

Moreover, you can change 2D images to 3D images by pressing the 3D button when viewing in 2D.

NOTE

- ❖ In order to switch to 3D, the TV must be receiving a 3D signal.
- If appropriate mode and format are not selected, 3D image will not be correctly displayed.
- If the appropriate 3D mode and format are not selected, the 3D image will not display correctly.
- There are individual differences in perception of 3D images.

- When viewing 3D images, wear the 3D glasses.
- The 2D to 3D conversion function is activated and controlled by you according to your personal preferences.
- The 2D to 3D conversion function is meant for enjoyment of 2D home video, and other 2D content you create, in 3D according to your personal preferences.
- It is not intended for unauthorized use of copyrighted works. To the extent that you need to obtain permission from a copyright holder to view copyrighted works, it is your responsibility to obtain such permission.
- The 2D to 3D conversion function is not intended for use with prerecorded 2D copyrighted content owned by a third-party unless the copyright owner has given direct or indirect permission, or unless applicable law permits such use. To the extent you need to obtain permission from a copyright holder to view copyrighted works, it is your responsibility to obtain such permission.

Switching display mode or selecting 3D format

There are four TV viewing modes:

Mode:	Description:
3D	Displays 3D images.
2D	Displays 2D images by changing 3D images to 2D.
2D to 3D	Displays 3D images by changing 2D images to 3D.
Native	Displays a received signal format as it is.

3D signals can be sent in one of three formats:

3D Forme	at:	Description:
	Side by Side (SBS)	Images for the left and right eyes are positioned side- by-side.
	Top and Bottom (TAB)	Images for the left and right eyes are positioned at the top and bottom of the screen
	Frame Packing (FP)*	Images for the left and right eyes are positioned at the top and bottom of the screen.

- * This format cannot be selected manually.
 - ❖ If the right and left images are the same in Native mode, select SBS.
 - If the top and bottom images are the same in Native mode, select TAB.

The 3D button operation

Depending on the input mode, the **3D** button function may be different when viewing Native mode.

Function:
Changes the viewing mode to 2D to 3D mode.
Displays the selection window.
Changes the viewing mode to 2D to 3D mode.
Displays the selection window.
Changes the viewing mode to 3D mode.
Displays the selection window.
Changes the viewing mode to 3D mode.
Changes the viewing mode to 3D mode.
Displays the selection window.

NOTE

- When viewing 3D mode or 2D to 3D mode, pressing the 3D button changes the viewing mode to Native mode.
- Operation may not be recognized depending on the status of the TV.
- When the TV is being used as a Media Renderer, operation is not recognized.
- The 3D function and 2D to 3D conversion function may not be supported depending on the VOD Service.
- The 3D function and 2D to 3D conversion function does not support all content depending on its input source format.
- 4K Video images cannot be displayed in 3D.

Switching to 3D mode

- Set 3D Auto Start to 3D.
- ❖ Press the **3D** button and select **3D** while viewing 2D mode or Native mode.

Input Signal/Switching Display Mode Trigger Press 3D Button					Button
Туре	Additional Information	Format	Source Signal	Select 3D	Select 2D to 3D
	With 3D Auto Detect Information Without 3D Auto Detect Information	FP	3D 3D	*1	3D
3D Format Signal		SBS	3D 3D	* 3D	
		TAB	30 30	*1	3D
		SBS	SD SD	* 3D	10 10
		TAB	80 40	D 3	30
2D Format Signal			3D	D 3	* 3D

^{*} Correct 3D image.

Selecting 3D format from the Quick menu in 3D mode

- 1 Press the **QUICK** button.
- 2 Select 3D Settings > 3D Format Select.
- **3** Press the **OK** button.
- 4 Press the **◄/▶** (arrow) buttons to select **Side by Side** or **Top and Bottom**.

Input Signal/Switching Display Mode Trigger				Quick menu/ 3D Format Select	
Туре	Additional Information	Format	Source Signal	SBS	TAB
3D Format Signal	With 3D Auto Detect Information	FP	3D 3D		
		SBS	3D 3D		
		TAB	3D 3D		
	Without 3D Auto Detect Information	SBS	0 0	* 3D	SU SU
		TAB	3D 3D	D 3	* 3D
2D Format S	Signal		30	D 3	รบ

^{*} Correct 3D image.

Switching to 2D mode

- ❖ Set 3D Auto Start to 2D.
- ❖ Press the **3D** button while viewing **3D** mode.

Input Sign	nal/Switching Displa	rigger	Press 3D Button	
Туре	Additional Information	Format	Source Signal	
3D Format Signal	With 3D Auto Detect Information Without 3D Auto Detect Information	FP	SD	* 3D
		SBS	50 50	* 3D
		TAB	(1)	* 3D
		SBS	30 30	50 80
		TAB	(D)	
2D Format Signal			3D	* 3D

^{*} Correct 2D image.

Using 3D functions

- 1 Press the **QUICK** button.
- 2 Select 3D Settings > 2D Format Select.
- **3** Press the **OK** button.
- 4 Press the **◄/▶** (arrow) buttons to select **Side by Side** or **Top and Bottom**.

Selecting 2D format from the Quick menu in 2D mode

Input Signal/Switching Display Mode Trigger				Quick med 2D Forma		
Туре	Additional Information	Format	Source Signal	SBS	TAB	Native
3D Format Signal	With 3D Auto Detect Information Without 3D Auto Detect Information	FP	SD SD			
		SBS	3D 3D	* 3D		3D 3D
		TAB	30		* 3D	30 30
		SBS	SD SD	* 3D	חכ חכ	3D 3D
		TAB	3D 3D	3	* 3D	3D 3D
2D Format S	Signal		30	3	30	* 3D

^{*} Correct 2D image.

NOTE

Take off the 3D glasses in 2D mode

Switching to Native mode

Press the **3D** button while viewing 3D mode.

Press the **3D** button while viewing 2D to 3D mode.

NOTE

When 3D format signal with 3D Auto Detect Information is received, it is not possible to switch to Native.

Quick menu in 2D mode

- 1 Press the **QUICK** button.
- 2 Select **3D Settings** > **2D Format Select** and press the **OK** button.
- **3** Press $\blacktriangleleft/\triangleright$ (arrow) buttons to select **Native**.

To switch 2D to 3D mode

Press the 3D button and select 2D to 3D while viewing 2D or Native mode.

NOTE

When using ATV, Video, ColorStream HD, VOD Services, MediaShare Photo or PC, the viewing mode can be changed to 2D to 3D mode by pressing 3D.

Setting the auto start mode

This controls what the TV does when it detects a 3D format signal with 3D Auto Detect Information.

- 1 Press the **SETUP** button.
- 2 Select 3D > 3D Auto Start and press the OK button.
- 3 Press the \triangle /∇ (arrow) buttons to select 3D, 2D, or Off.

Option:	Description:
3D	Displays in 3D mode automatically when 3D format signal with 3D Auto Detect Information is received.
2D	Displays in 2D mode automatically when 3D format signal with 3D Auto Detect Information is received.
Off	Displays a screen that allows you to select 3D or 2D when 3D format signal with 3D Auto Detect Information is received.

Setting the 3D PIN code

A 3D PIN code is necessary for using 3D Safety Settings.

Enter a new PIN code

- 1 Press the **SETUP** button.
- 2 Select 3D > 3D PIN.
- 3 Press the **OK** button.
- 4 Press the number buttons to enter a 4-digit number, and then confirm the code

NOTE

The PIN code cannot be set to "0000."

Change or delete your PIN code

- 1 Press the **SETUP** button.
- 2 Select 3D > 3D PIN.
- 3 Press the **OK** button.
- 4 Press the number buttons to enter your 4-digit PIN code.
- 5 Select Change PIN or Delete PIN, and then press the OK button.

NOTE

- The PIN code cannot be set to "0000."
- If PIN is deleted, 3D Safety Settings are grayed out, and the settings are reset to the factory default.

Forgotten PIN codes

- 1 Press the **SETUP** button.
- 2 Select 3D > 3D PIN
- 3 Press the **OK** button.
- 4 Press the **INFO** button 4 times quickly.
- 5 Select Change PIN and press the OK button.
- 6 Enter a new PIN code

Setting the 3D start message

When this feature is set to On, a message displays on the screen when a 3D signal is received.

- 1 Press the **SETUP** button.
- 2 Select 3D > 3D Safety Settings.
- 3 Press the OK button.
- 4 Enter your 4-digit 3D PIN code.
- 5 Press the **△**/**▼** (arrow) buttons to select **3D Start Message** and press the **OK** button.
- 6 Press the \triangle/∇ (arrow) buttons to select **On** or **Off**.

Setting the 3D Lock

When this feature is set to On, you must enter your 3D PIN code to change the display mode to 3D mode or 2D to 3D mode.

- 1 Press the **SETUP** button.
- 2 Select 3D > 3D Safety Settings.
- 3 Press the **OK** button.

- 4 Enter your 4-digit 3D PIN code.
- 5 Press the ▲/▼ (arrow) buttons to select 3D Lock and press the OK button.
- 6 Press the \triangle/∇ (arrow) buttons to select **On**.

Setting the 3D Timer Lock

When the 3D Timer Lock feature is set to On, the PIN input window and the 3D start message will not appear while the 3D Enable timer is active, even if you switch to 3D Mode. This prevents it from asking for the 3D Lock PIN, and will not display the 3D start message every you switch to 3D.

- 1 Press the **SETUP** button.
- 2 Select 3D > 3D Safety Settings.
- **3** Press the **OK** button.
- 4 Enter your 4-digit 3D PIN code.
- 5 Press the **△**/**▼** (arrow) buttons to select **3D Timer Lock** and press the **OK** button.
- 6 Press the \triangle/∇ (arrow) buttons to select **On**.

NOTE

The PIN input window appears when "continue" is selected in the reminder dialogue box for Enable 3D Timer even if 3D Timer Lock is activated.

Setting the Enable 3D Timer

This feature allows you to set a reminder to not watch a 3D video for an extended period of time. Once a set period of time has passed, a dialogue box appear asking if you wish to continue viewing.

- 1 Press the **SETUP** button.
- 2 Select 3D > 3D Safety Settings.
- 3 Press the OK button.
- 4 Enter your 4-digit 3D PIN code.
- 5 Press the ▲/▼ (arrow) buttons to select **Enable 3D Timer** and press the **OK** button.
- 6 Press the \triangle/∇ (arrow) buttons to select 30, 60, 90, or 120 minutes.
- 7 To cancel the timer, select **Off**.

Displaying 3D Important Information

Press the SETUP button.

- 2 Select **3D** > **3D Important Info**. Read through the information.
- 3 Press the **◄/▶** (arrow) buttons to select **Yes** or **No** and press the **OK** button.

Adjusting 2D to 3D depth

With this feature, you can adjust the level of 3D depth.

Within the Menu:

- 1 Press the **SETUP** button.
- 2 Select 3D > 2D to 3D Depth and press the OK button.
- 3 Press the **◄/▶** (arrow) buttons to select either 1, 2, 3, 4, or 5, and press the **OK** button.

Within the Quick menu:

- 1 Press the **QUICK** button in 2D to 3D mode.
- 2 Select 3D Settings > 2D to 3D Depth.
- 3 Press the $\blacktriangleleft/\triangleright$ (arrow) buttons to select either 1, 2, 3, 4, or 5, and then press the **OK** button.

Switching left and right images

The left and right images of the glasses can be swapped. If 3D images look blurred, switch the left and right sides of the 3D image.

- 1 Press the **QUICK** button to open the Quick menu.
- 2 Select 3D Settings > Left and Right Image and press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select **Swapped**.

Adjusting your viewing position (for 65/84L9300UC only)

If you experience a double image when viewing 3D content, adjust your viewing position.

- 1 Press the **SETUP** button.
- 2 Select 3D > 3D Test Pattern and press OK. The 3D Test Pattern is displayed.
- **3** Put on the 3D glasses (supplied).
- 4 Adjust your viewing position so that there is no double image effect. For the correct position for viewing 3D content, see page 8.

Tuning Channels

Tuning to the next programmed channel

Press the **CH** ▲/▼ buttons on the remote control or TV control panel.

Tuning to a specific channel (programmed or unprogrammed)

Channel:	Description:
Analog	Use the 0–9 buttons on the remote control. (For example, to select channel
	125, press 1, 2, 5.), and then press the OK button.
Digital	Use the 0–9 buttons on the remote control to enter the major channel
	number. (and press the DASH button if needed, (For example, to select
	digital channel 125- 1, press 1, 2, 5, $-$, 1.)), and then press the OK button.

Using Channel Return

You can switch between two channels without entering a channel number each time. This feature also works for external inputs.

- 1 Select the first channel you want to view.
- 2 Select a second channel using the Channel Number buttons (and press the **DASH** button if needed).
- 3 Each time you press the **CH RTN** button, the TV switches between the last two channels that were tuned.

Selecting the video input to view

To select the video input to view:

- 1 Press the **INPUT** button.
- **2** Change the input:
 - ❖ Press 0–7.
 - Repeatedly press the ▲/▼ (arrow) buttons and then press the OK button.
 - Repeatedly press the **INPUT** button.

Inputs	
0	ANT/CABLE
1	Video 1
2	Video 2 / ColorStream HD
3	HDMI 1
4	HDMI 2
2 3 4 5 6	HDMI 3
6	HDMI 4
7	PC

Using closed captions

NOTE

- You can label the video input sources according to the specific devices you have connected to the TV, see "Labeling video inputs" on page 72.
- You can skip sources, see "Skipping video inputs" on page 71.
- Inputs that are set to be skipped will be skipped when selecting by repeatedly pressing the INPUT button or the ▲/▼ (arrow) buttons.
- You can select inputs that are set to be skipped using the number buttons.
- If one or more HDMI™ CEC devices are connected to an HDMI™ input, the icon appears in the input selector. In this case, the label, see "Labeling video inputs" on page 72 will not appear in the input selector.

To select an $HDMI^{TM}$ CEC device:

- 1 Press the \triangle/∇ (arrow) buttons to select an HDMITM input.
- 2 Press the ▶ (arrow) button. The list of HDMI[™] CEC devices for that input appears.
- 3 If the input has multiple HDMI[™] CEC devices, press the ▲/▼ (arrow) buttons to select a device.
- 4 Press the **OK** button.

Using closed captions

To turn on the closed caption mode:

- 1 Press the **SETUP** button.
- **2** Select **Options** > **Closed Captions**.
- **3** Press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select Closed Captions Display and press the OK button.
- 5 Press the \triangle/∇ (arrow) buttons to select **On** or **Off**.

NOTE

If Closed Captions Display is set to Off, Analog CC Mode and Digital CC Settings will be not available.

Analog CC mode

The closed caption mode has two options:

Mode:	Description:
Captions	Displays the dialogue, narration, and sound effects of TV programs and videos that are closed captioned (usually marked "CC" in program guides).
Text	Displays information not related to the current program, such as weather or stock data (when provided by individual stations).

To view captions or text:

- 1 Press the **SETUP** button.
- 2 Select Options > Closed Captions.
- **3** Press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select **Analog CC Mode** and press the **OK** button.

To view captions:

Press the \triangle/∇ (arrow) buttons to highlight CC1, CC2, CC3, or CC4.



 
(Sample Illustration) Captions

NOTE

If the program or video you have selected is not closed captioned, no captions will be displayed.

To view text:

Press the \triangle/∇ (arrow) buttons to highlight T1, T2, T3, or T4.



(Sample Illustration) Captions - text

Using closed captions

NOTE

If text is not available in your area, a black rectangle may appear on the screen. You can remove this rectangle by setting Closed Captions Display to Off.

NOTE

A closed caption signal may not be displayed when a videotape is dubbed, signal reception is weak, or signal reception is non-standard.

Digital CC settings

You can customize the closed caption display characteristics.

NOTE

- These settings are available for digital channels only.
- You cannot set Caption Text and Background as the same color.

Mode:	Description:
Caption Size	Auto, Small, Standard, Large
Caption Text Type	Auto, Default, Mono (with Serif), Prop. (with Serif), Mono (without Serif), Prop. (without Serif), Casual, Cursive, Small Capitals
Caption Text Edge	Auto, None, Raised, Depressed, Uniform, Left Drop Shadow, Right Drop Shadow
Caption Text Color	Auto, Black, White, Red, Green, Blue, Yellow, Magenta, Cyan
Text Foreground Opacity	Auto, Transparent, Translucent, Flashing, Solid
Background Color	Auto, Black, White, Red, Green, Blue, Yellow, Magenta, Cyan
Text Background Opacity	Auto, Transparent, Translucent, Flashing, Solid
Caption Text Edge Color	Auto, Black, White, Red, Green, Blue, Yellow, Magenta, Cyan

To customize the closed captions:

- 1 Press the **SETUP** button.
- **2** Select **Options** > **Closed Captions**.
- **3** Press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select **Digital CC Settings**.and then press the **OK** button.
- 5 Press the ▲/▼ (arrow) buttons to select a characteristic and then press the **OK** button.
 - Press the \triangle/∇ (arrow) buttons to select the format for that characteristic.

Using the Closed Caption button

If you press the CC button when an analog channel is tuned or from an external input (480i signal from the video input):

❖ The CC bar will appear and will display the options, CC1-4, T1-4.

If you press the **CC** button when a digital channel is tuned:

The CC bar will appear and will display the available caption options for that channel or service.

Setting the PIN code

A PIN code is necessary for some menus.

NOTE The Parental Control and Locks menu is grayed out if no PIN has been set.

Entering a new PIN code

- 1 Press the **SETUP** button.
- **2** Select **Options** > **Parental PIN Setup**.
- **3** Press the **OK** button.
- 4 Use the number buttons to enter a 4-digit number, and then confirm the code.

NOTE

The PIN code cannot be set to "0000".

Changing or deleting your PIN code

- 1 Press the **SETUP** button.
- 2 Select Options > Parental PIN Setup.
- 3 Press the **OK** button.
- 4 Use the number buttons to enter your 4-digit PIN code.
- 5 Select Change PIN or Delete PIN, and then press the OK button.

NOTE

- The PIN code cannot be set to "0000".
- If you delete the PIN code, the settings of Parental Controls and Locks are reset.

Forgotten PIN code


- 1 Press the **SETUP** button.
- 2 Select Options > Parental PIN Setup.
- 3 Press the OK button.
- 4 Press the **INFO** button 4 times quickly.
- 5 Select **Change PIN** and press the **OK** button.
- 6 Enter a new PIN code.

Locking specific channels

A channel that is configured as Locked cannot be viewed unless the PIN code is entered first, see "Setting the PIN code" on page 89.

- 1 Press the **SETUP** button.
- 2 Select Options > Channel Options.
- **3** Press the **OK** button.

The list of channels appears.

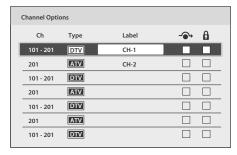

(Sample Illustration) Channel options

- 4 Press the ► (arrow) button and then press the ▲/▼ (arrow) buttons to select a channel in the lock column, and then press the OK button.
- 5 You must enter your PIN code to lock channels.

NOTE If no PIN code has been set, a warning appears. See, "Setting the PIN code" on page 89.

6 The box is selected. To clear the selection, press the **OK** button.

Locking video inputs

You can lock video inputs. You cannot view the input sources until you unlock the inputs by entering the PIN code.

- 1 Press the **SETUP** button.
- **2** Select Options > Parental Control and Locks.
- 3 Press the **OK** button.
- 4 Enter your 4-digit PIN code.
- 5 Press the ▲/▼ (arrow) buttons to select **Input Lock** and press the **OK** button
- 6 Press the \triangle/∇ (arrow) buttons to select **Video** or **Off**.

Mode:	Description:
Video	Locks Video 1, Video 2, ColorStream HD, HDMI 1, HDMI 2, HDMI 3, HDMI 4, and PC.
Off	Unlocks all video inputs.

Setting a time limit for games

You can use the GameTimer® to set a time limit for playing a video game. When the time expires, the TV locks all external inputs.

- 1 Press the **SETUP** button.
- **2** Select Timers > GameTimer.
- **3** Press the **OK** button.
- 4 Enter your 4-digit PIN code.
- 5 Press the \triangle/∇ (arrow) buttons to select 30, 60, 90, or 120 minutes.
- 6 To cancel the timer, select **Off**.

To deactivate the Input Lock once the GameTimer® has activated it:

❖ Set the Input Lock to Off, see "Locking video inputs" on page 90.

NOTE

- A message appears when 10 minutes, 3 minutes, and 1 minute are remaining.
- If the TV loses power with time remaining, the TV will enter Input Lock mode when power is restored (as if the GameTimer had been activated). You must deactivate the Input Lock, see "Locking video inputs" on page 90.

Locking the control panel

You can lock the control panel to prevent your settings from being changed accidentally (by children, for example). When Panel Lock is set to **On**, none of the controls on the control panel operate except **POWER**.

1 Press the **SETUP** button.

Using parental controls

- 2 Select **Options** > **Panel Lock** and press the **OK** button.
- 3 Press the \triangle/∇ (arrow) buttons to select **On**.

NOTE

When **Panel Lock** is set to **On**, "Panel Lock" appears on screen when the buttons on the TV control panel are pressed. Unless the TV is in "Active Standby", then control panel **POWER** button can turn on the TV.

To unlock the control panel:

Select **Off** in Step 3 above.

Using HDMI[™] **CEC Control**

This feature uses CEC technology and allows you to control Toshiba $\mathrm{HDMI}^{^{\mathrm{TM}}}$ CEC compatible devices from the TV remote control via $\mathrm{HDMI}^{^{\mathrm{TM}}}$ connection

When Enable $HDMI^{TM}$ CEC Control in the $HDMI^{TM}$ CEC Control Setup menu is set to On, the following $HDMI^{TM}$ CEC Control functions are enabled.

To set HDMI™ CEC Control Setup

- 1 Press the **SETUP** button.
- 2 Select Options > HDMI CEC Control Setup and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select **Enable HDMI CEC** Control and press the **OK** button.
- 4 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **On**.

NOTE

If you set **Enable HDMI CEC Control** to **Off**, the other items under **HDMI CEC Control Setup** will be grayed out.

5 Press the ▲/▼ (arrow) buttons to select an item and press the **OK** button.

Press the \triangle/∇ (arrow) buttons to select **On** or the desired mode:

- TV Auto Power: On/Off
- Auto Standby: On/Off
- Amplifier Control: On/Off
- ❖ Initial Speaker Setting: TV Speakers/Amplifier

NOTE

These functions depend on the connected devices.

Controlling HDMI™ CEC playback devices

With your TV's remote control, you can control the connected HDMI[™] CEC playback device (DVD player, etc.) you are watching.

Description:	
Begins playback	
Stops playback	
Pauses the picture during play or record mode	
Skips forward.	
Skips backward.	
Fast forward	
Rewind/reverse	
Menu navigation, etc.	
Enters content with a menu	
Controls various operation	
Controls various operation, e.g. tuning to a specific channel for the	
tuner device	
Changes to the next available channel up or down in the sequence	

NOTE

These functions depend on the connected devices.

HDMI[™] CEC Player Control menu functions

- 1 Press the **QUICK** button to open the Quick menu.
- 2 Select **HDMI CEC Device Control**, and then press the **OK** button.
- 3 Press the \triangle/∇ (arrow) buttons to select the item you want to control, and then press the **OK** button.

Item:	Description:
Power	Turns the selected device On and Off
Root Menu	Accesses the selected device's top menu
Contents Menu	Accesses the content list when the OK button is pressed
Setup Menu	Accesses the device's setup menu
Audio	Selects the device's sound
Eject	Ejects the device's media

NOTE

These functions depend on the connected devices.

The HDMI[™] CEC Device Control item is not available under the following conditions:

Locking specific channels

- A non-HDMI[™] input is selected
- ❖ The Enable HDMI CEC Control item is set to Off
- The connected HDMI™ CEC device is not a playback, recording or tuner device

HDMI[™] **CEC** Control input source selection

If an $HDMI^{^{\text{TM}}}$ CEC device with $HDMI^{^{\text{TM}}}$ switching capability (e.g. an amplifier) is connected to the $HDMI^{^{\text{TM}}}$ input, you can select another $HDMI^{^{\text{TM}}}$ CEC device that is connected to the master $HDMI^{^{\text{TM}}}$ device.

Use the **INPUT** button on the remote control or the control panel, see "Learning about the remote control" on page 53.

Adjusting the amplifier's audio

Using the TV's remote control, you can adjust or mute the sound volume of your audio system.

- ❖ The **VOL** (+ -) buttons adjust the volume level.
- ❖ The **MUTE** button turns off the sound.
- 1 Press the **SETUP** button.
- 2 Select Options > HDMI CEC Control Setup and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select **Initial Speaker Setting** and press the **OK** button.
- **4** Press the \blacktriangle / \blacktriangledown (arrow) buttons to select **Amplifier**.

NOTE

Confirm that a connected HDMI^m CEC device (such as DVD player, etc.) is selected for the Amplifier input source.

NOTE

- You can also use this function when the audio system is connected to the TV's DIGITAL AUDIO OUT terminal (not HDMI™ connection). Select a digital audio input mode on the amplifier.
- These functions depend on the device connected.

Other HDMI™ CEC Control functions

When **Enable HDMI CEC Control** and all items in the $HDMI^{TM}$ CEC Control Setup menu are set to **On**, the following functions will be enabled:

Item:	Description:	
TV Auto Power	If an HDMI [™] CEC device is turned on, the TV turns on automatically.	
Auto Standby	If the TV is turned off, it will send a message to turn off all of the HDMI [™] CEC devices connected to the TV.	
Amplifier Control	If Amplifier Control is set to On , you can adjust the sound volume or turn off the sound using the remote control.	
Initial Speaker Setting	With this item, you can set your audio output preference to the TV Speakers or the Amplifier. When this item is set to Amplifier, the remo control can be used to adjust or mute the volume of the audio. This item will not be available and set to TV Speakers automatically unless an HDMI™ CEC compatible audio system is connected.	

NOTE

When you turn on the audio system, change its input source, or adjust the sound volume, the sound will be output from the audio system's speakers even if TV Speakers has been selected. Turn the TV off and on again to output the sound from the TV speakers.

Viewing the HDMI[™] signal information

- 1 Press the **SETUP** button.
- 2 Select Options > HDMI Information Display and press the OK button
- 3 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **On**.
- Press the INFO button. HDMI[™] Information is shown (Resolution, Scan Type, Frame Rate, Aspect, Bit Depth, Color Space, RGB/YUV, Chroma Format), and the normal banner and signal information banner appear.

NOTE

- The signal information banner will appear when this feature is set to On and you watch an HDMI[™] input and press the **INFO** button. The signal information will disappear after 60 seconds.
- If you press the INFO button when this feature is set to Off, only the normal banner will appear.

Using your computer with the TV

Adjusting the image

If the edges of the picture are hidden, readjust Horizontal Position and

Vertical Position. If the picture is affected by interference, readjust Clock Phase and Sampling Clock.

- 1 Select **PC input mode**, see "Selecting the video input to view" on page 85.
- 2 Press the **SETUP** button.
- 3 Select **Picture** > **Display Settings** and press the **OK** button.
- 4 Press the **OK** button.
- Press the ▲/▼ (arrow) buttons to select PC Settings, and then press the OK button.

NOTE

If a computer is not connected or there is no PC input signal, this menu will not be available.

- 6 Press the ▲/▼ (arrow) buttons to select an item and press the OK button.
- 7 Press the $\triangleleft/\triangleright$ (arrow) buttons to make adjustments.

NOTE

The screen is disrupted momentarily when adjusting the PC settings. This is not a sign of malfunction.

Mode:	Description:	Adjustment Range
Horizontal Position	Moves the picture left/right	Within ±10 from center*
Vertical Position	Moves the picture up/down	Within ±10 from center*
Clock Phase	Helps to reduce noise and sharpen the picture	Within ±32 from center*
Sampling Clocks	Helps to reduce noise and minimize periodic vertical stripes on the screen	Within ±5 from center*

^{*}The default settings and/or adjustment ranges vary depending on the input signal format

To reset the PC Settings:

Select **Reset**, and then press the **OK** button.

Setting the computer audio

You can output sound from your computer when connecting it to your TV, using the AUDIO IN terminal and PC audio cable.

- 1 Press the **SETUP** button.
- 2 Select **Options** > **Input Options** and press the **OK** button.

- 3 Press the ▲/▼ (arrow) buttons to select PC/HDMI 2 Audio and press the OK button.
- 4 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **PC**.

NOTE To apply the setting, switch the input to PC or HDMI 2.

Setting the timer to turn on the TV

You can set the on timer to turn on the TV to a preset channel or input at a preset time.

To activate the timer:

- 1 Press the **SETUP** button
- 2 Select Timers > On Timer.
- **3** Press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select **Enable On Timer** and press the **OK** button.
- 5 Press the $\blacktriangleleft/\triangleright$ (arrow) buttons to select **On**.

NOTE

If the **Enable On Timer** is set to **Off**, other menus under **On Timer** cannot be changed.

It can take the TV approximately 60 seconds to turn on through the **On Timer** feature.

To set the timer:

- 1 Press the **SETUP** button.
- **2** Select **Timers** > **On Timer**.
- **3** Press the **OK** button.
- 4 Set these options to your preference:

Item:	Description:
Input	Video input source
Channel	Channel to view
Volume	Volume level
Time until Power On	Desired length of time until the TV turns on: minimum=00:10, maximum=12:00
	Press the ◄/▶ (arrow) buttons
	Use the number buttons

5 Select **Done**, and then press the **OK** button.

NOTE

If you do not operate the TV for 1 hour after it is powered on by the On Timer feature, it turns off.

To cancel the timer:

- 1 Press the **SETUP** button
- 2 Select Timers > On Timer
- 3 Press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select **Enable On Timer** and press the **OK** button.
- 5 Press the $\blacktriangleleft/\triangleright$ (arrow) buttons to select **Off**.

Setting the sleep timer

You can set the TV to turn off after a specific amount of time (maximum = 12 hours).

Using the remote control:

- 1 Press the **SLEEP** button.
- 2 Set the amount of time until the TV turns off.
 - Repeatedly press the **SLEEP** button to increase the time.
 - Press the \triangle/∇ (arrow) buttons to increase or decrease the time.

Using the on-screen menus:

- 1 Press the **SETUP** button.
- **2** Select **Timers** > **Sleep Timer**.
- 3 Press the OK button.
- 4 Select the amount of time until the TV turns off.
 - Use the number buttons.
 - ❖ Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to increase or decrease the time.

NOTE

If a power failure occurs, the sleep timer setting may be cleared.

To display the time remaining until the TV turns off, press the **SLEEP** button

To cancel the sleep timer, press the **SLEEP** button repeatedly or press the \triangle/∇ (arrow) buttons until it is set to 0 minutes.

NOTE

When the following features are set, the feature that is set for the nearest time will function.

- Sleep Timer
- Auto shutdown after 1 hour of inactivity (after powering on by On Timer)
- No signal auto power off (after approximately 15 minutes of no signal)

Setting No Signal Power Down

When an input's setting in this feature is set to On, The TV will automatically turn itself off after about 15 minutes if no signal is detected.

You can change each input's setting to Off: ANT/CABLE, Video 1, Video 2, ColorStream HD, HDMI 1, HDMI 2, HDMI 3, HDMI 4, or PC.

- 1 Press the **SETUP** button.
- 2 Select Options > Power Management > No Signal Power Down, and then press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select the item you want to change and press the **OK** button.
- 4 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **On** or **Off**.
- 5 Press the EXIT button.

NOTE

- Default setting for each input is On.
- ♦ A warning message will appear 1 minute before turning off.

Setting TV Power On Control

When the TV is connected to the home network via Wireless LAN with the TV Power On Control in Enabled, your TV can be turned on by control from Apps.

- 1 Press the **SETUP** button.
- 2 Select Options > Power Management > TV Power On Control and press the OK button.
- 3 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **Enabled** (Active Standby).

NOTE

- Depending on the device connected to the home network, it may take a while for the TV to turn on.
- Depending on the device connected to the home network, this feature may not work.
- If the unencrypted Wireless Setup is done, this feature can not be used.

Setting the timer to turn on the TV

- The power consumption during Active Standby is more than it during Normal Standby.
- After the change from Power On state to Active Standby, there may be a period of several seconds when the TV does not receive the operation from a remote control or external apparatus.

Displaying TV status information

To display TV status information, press **INFO**.

The following information will be displayed (if applicable):

- Current input (ANT/CABLE, Video, etc.)
- Either "CABLE" (for cable TV) or "ANT" (for over-the-air broadcasts), if ANT/CABLE is the current input
- Channel number (if in ANT/CABLE mode)
- Input label (if set)
- Digital signal strength indicator (for ATSC/QAM signals only)
- Stereo, Mono, or SAP audio status (when in HDMI[™] input mode, PCM)
- Video resolution
- ❖ Aspect ratio of incoming video signal (4:3 or 16:9)
- GameTimer (if set)
- Channel Label (if set or received)
- Current display mode (Side by Side, Top and Bottom, or Frame Packing)
- Current display format (3D, 2D to 3D, or 3D to 2D)
- Input video format (3D appears when video format is 3D)

To close the screen, press the **INFO** button again.

The following additional information (only available for ANT/CABLE input) will display for digital channels (if applicable):

- Title
- Duration
- Detailed description
- Next program's information

Viewing support information

- 1 Press the **SETUP** button
- 2 Select Get Help > System Information.
- 3 Press the **OK** button to display support information containing Web/Customer service numbers for US, Canada, and Mexico.

Resetting to Factory Defaults

You can reset all settings and channels to Factory Defaults.

- 1 Press the **SETUP** button.
- 2 Select Installation > Reset TV.
- 3 Enter your PIN code (if a PIN code has been set). A confirmation screen appears.
- 4 Select **Yes**, and then press the **OK** button. The TV will turn off automatically.

To cancel the reset:

◆ Press the ◄/► (arrow) buttons to select No, and then press the OK button.

Power failure

If power is lost while you are watching the TV, the Last Mode Memory feature automatically turns on the TV when power is restored.

Chapter 7

Picture and Sound Controls

Selecting the picture size

You can view many program formats in several picture sizes—Native, 4:3, Full, TheaterWide 1, TheaterWide 2, TheaterWide 3, Normal, Quad FHD, 4K Native, 4K Normal, and 4K Full.

NOTE

- The picture size illustrations are examples only. The format of the image (in any of the picture sizes) depends on the format of the signal you are currently watching. Select the picture size that displays the current program in the way that looks best to you.
- Using these functions to change the picture size (i.e., changing the height/width ratio) for any purpose other than your private viewing may be prohibited under the Copyright Laws of the United States and other countries, and may subject you to civil and criminal liability.
- Some picture sizes may not be available depending on the format of the signal being received.
- If you select a TheaterWide® picture size, the top and bottom edges of the picture (including subtitles or captions) may be hidden. To view these edges, adjust the Picture Position or try viewing the program in 4:3 or Full, see "Scrolling the picture" on page 107.

You can save separate picture size preferences for each input on your TV.

To select the picture size using the Quick menu:


- 1 Press the **QUICK** button to open the Quick menu.
- 2 Select **Picture Size**, and then press the **OK** button.
- 3 Press the ▲/▼ (arrow) buttons to select the **Picture Size**, and then press the **OK** button.

NOTE

When in 2D to 3D mode, 3D mode, or 2D mode, **Picture Size** does not appear in the Quick menu.

Native Mode™

This applies pixel-for-pixel image reproductions of Full HD content and eliminating overscanning; you see all of the original picture within the screen and eliminate scaling artifacts for a more accurate image. These settings are for viewing in $480i \text{ (HDMI}^{\text{TM}})$, $480p \text{ (HDMI}^{\text{TM}})$, 720p, 1080i, and 1080p signal programs.

 


(Sample Illustration) Picture size - Native ModeTM

- If receiving a 1080i, 1080p, 720p, 480i (HDMI[™]), or 480p (HDMI[™]) signal program, the video is scaled to display the entire picture within the borders of the screen (i.e. no overscanning).
- This is especially useful for external HD sources such as DVHS movies, video games, or computer graphics.
- None of the picture is hidden.

NOTE

- This mode is supported only for HDMI[™] (1080i, 1080p, 720p, 480i, and 480p), ColorStream[®] (1080i and 720p), and ANT/CABLE (digital) inputs (1080i, 1080p, and 720p).
- Depending on the input signal, the picture's border may be hidden, displayed in black, or noisy.

4:3

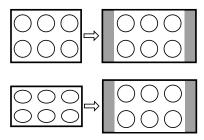


(Sample Illustration) Picture size - 4:3

Some program formats will display with sidebars and/or bars at the top and bottom.

Full

 
This setting is for viewing in the 16:9 (480i, 480p) source programs only.



(Sample Illustration) Picture size - Full 16:9

If receiving a squeezed 4:3 format program, the picture is stretched horizontally to fill the width of the screen but not stretched vertically.

 This setting is for viewing in the 1080i, 1080p, and 720p program source.




(Sample Illustration) Picture size - Full

The edges of the picture may be hidden.

TheaterWide1

 This setting is for viewing in 4:3 format programs.




(Sample Illustration) Picture size - TheaterWide1

The center of the picture remains close to its original proportions, but the left and right edges are stretched horizontally to fill the screen.

TheaterWide2

 This setting is for viewing letter box programs.




(Sample Illustration) Picture size - TheaterWide2, letter box

The picture's top and bottom edges may be hidden*.

TheaterWide3

 This setting is for viewing letter box programs with subtitles.




(Sample Illustration) Picture size - TheaterWide 3, letter box with subtitles

The picture's top and bottom edges are hidden*.

Normal

 This setting is for viewing SVGA, XGA, WXGA, and SXGA sources.



(Sample Illustration) Picture size - Normal

This size is a non-stretched display. Some input signal formats will display with sidebars and/or bars at the top and bottom.

Quad FHD

This setting will show the input signal dot in four dots, two vertical and two horizontal



 
(Sample Illustration) Picture size - Quad FHD

"Quad FHD" is a non-scaling display. Depending on the input signal format, the picture appears with sidebars and/or bars at the top and bottom, for example, SVGA input source.

* To view the hidden areas (such as subtitles or captions), see "Scrolling the picture" on page 107.

4K Native

This setting will show the picture (3840 pixel x 2160 pixel) without overscan, i.e. WYSIWYG.



(Sample Illustration) Picture size - 4K Native

This option is only available when watching a 4K signal source via HDMI terminal.

4K Normal

This setting will show whole picture (4096 pixel x 2160 pixel) with the same proportion as original image. The picture will be shown with 15/16 scaling.

 


(Sample Illustration) Picture size - 4K Normal

This option is only available when watching a 4K signal source via HDMI[™] terminal.

4K Full

This setting will show the picture (4096 pixel x 2160 picel) with the original size.



(Sample Illustration) Picture size - 4K Full

This option is only available when watching a 4K signal source via HDMITM terminal

NOTE

In this picture size, the left and right sides are clipped by 128 pixels each, preventing any scaling.

Scrolling the picture

If the edges of the picture are hidden, you can adjust the image's position.

NOTE

- You can adjust the picture position when the picture size is set to TheaterWide2 or TheaterWide3.
- When viewing Cloud Service TV, MediaShare or Internet content this feature is not available.
- 1 Press the **SETUP** button.
- 2 Select Picture > Display Settings > Picture Position and press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select **Vertical Position** and press the **OK** button.
- 4 Press the $\blacktriangleleft/\triangleright$ (arrow) buttons to make the appropriate adjustments. The adjustment range is from -5 to +10.

Using the Auto Aspect feature

When this feature is set to On, the TV will automatically select the picture size when one of the following input sources is received:

- ♦ 480i, 480p, 720p, 1080i digital signal from the ANT/CABLE input
- 480i, 480p, 720p, 1080i, 1080p, or VGA (60/72/75 Hz) signal from the HDMI[™] 1/2/3/4 input

NOTE

The auto aspect ratio feature is not applicable to the PC input.

- 1 Press the **SETUP** button.
- 2 Select Picture > Display Settings > Auto Aspect and press the OK button.
- 3 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **On**.
- 4 Press the **EXIT** button.

Using the 4:3 Stretch

When 4:3 Stretch is activated, the TV displays 4:3 programs as a full-screen picture.

NOTE

This feature is available when Auto Aspect is set to On.

- 1 Press the **SETUP** button.
- 2 Select Picture > Display Settings > 4:3 Stretch and press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select **On**.
- 4 Press the **EXIT** button.

Adjusting the picture

Selecting the picture mode

You can select your desired picture settings from the modes described below.

Mode:	Description:
AutoView [®]	Automatically adjusts multiple picture settings including Brightness, Contrast, Gamma, and Sharpness based on ambient room light conditions and incoming picture content to create the best possible picture settings without any manual adjustment.
Dynamic	Maximizes Contrast, Color Saturation, Sharpness, Gray Scale and Brightness to create more vivid and dynamic images
Standard	Standard picture settings
Movie	Lower contrast for a darkened room
Game	Optimized for playing video games by displaying the images in their purest form (4:4:4) without the loss of color information. The result is superior image quality and shorter signal to screen time for a faster gaming experience.
PC	Optimized for viewing your personal computer.

NOTE

- PC mode is available for HDMI[™] and PC inputs only (not displayed for other input sources).
- Game Mode is not available in ANT/CABLE input.
- 1 Press the **SETUP** button.
- 2 Select **Picture** > **Picture Mode** and press the **OK** button.
- 3 Press the \triangle/∇ (arrow) buttons to select a mode.
- 4 Press the **EXIT** button.
- The picture mode can also be changed by pressing the **PIC MODE** button on the remote control.

NOTE

The picture mode you select affects the current input only. You can select a different picture mode for each input.

Adjusting the picture quality

The adjustments you make to picture quality under a picture mode are saved to that picture mode.

Selection	Press (◀)	Press (>)	
Backlight*	Darker	Lighter	
Contrast	Lower	Higher	
Brightness	Darker	Lighter	
Color	Paler	Deeper	
Tint	Reddish	Greenish	
Sharpness	Softer	Sharper	

^{*}Backlight: Adjusts the brightness of the entire screen. When in video mode and no signal is input, this selection is set to 0. (Settings are stored in memory.)

NOTE

Some settings cannot be adjusted when the picture mode is set to AutoView.

To adjust the picture quality:

- 1 Press the **SETUP** button
- 2 Select **Picture** and press the **OK** button.
- 3 Press the ▲/▼ (arrow) buttons to select the setting you would like to adjust (Backlight, Contrast, Brightness, Color, Tint, or Sharpness).
- 4 Press the ▶ (arrow) button.
- 5 Press the $\blacktriangleleft/\triangleright$ (arrow) buttons to adjust the setting.
- 6 Press the **EXIT** button.

NOTE

- Any picture settings that you adjust affect the current input only. You can adjust the picture quality separately for each input.
- Depending on a Sharpness value, the Resolution+ effect may be reduced.

To reset to the factory defaults:

- 1 Press the **SETUP** button.
- 2 Select Picture > Reset.

Using the advanced picture settings features

- 3 Press the OK button.
 A confirmation screen appears.
- 4 Press the $\blacktriangleleft/\triangleright$ (arrow) buttons to select **Yes**, and then press **OK**.

Using the advanced picture settings features

NOTE

Some of the Advanced Picture Settings features will not be available for adjustment when the picture mode is set to AutoView.

Resolution+

If the **Resolution**+ set to **On** (this is the default), the clarity levels can be adjusted automatically.

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > Resolution+ and press the OK button.
- 3 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **On**.
- 4 Press the **EXIT** button.

NOTE

- If the picture mode is set to AutoView, Resolution+ is not available.
- This feature may not work properly depending on the content.
- Noise may appear on the image depending on the device connected to the TV (e.g. a device with a specific enhancer function).

Dynamic Contrast

Dynamic Contrast detects changes in picture quality that affect the appearance of your contrast settings and then automatically adjusts the video.

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > Dynamic Contrast and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select **High**, **Middle**, **Low**, or **Off**
- 4 Press the **EXIT** button.

DynaLight®

The DynaLight® dynamic backlight control monitors the brightness of each video frame and automatically adjusts backlight intensity based on the content to create higher dynamic contrast, for deeper blacks and

increased depth.

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > DynaLight and press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select **On** or **Off**.
- 4 Press the **EXIT** button.

ClearScan®

ClearScan® 240Hz uses both frame interpolation technology and advanced backlight control with image synchronization to quadruple the TV refresh rate for an even clearer fast motion video.

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > ClearScan and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select Cinema, Smooth, Standard, or Off.
- 4 Press the **EXIT** button.

NOTE

If the picture mode is set to **Game** or **PC** mode, this feature is automatically not available.

MPEG NR

The MPEG noise reduction feature allows you to reduce visible interference caused by MPEG compression.

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > Noise Reduction and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select MPEG NR and press the OK button.
- 4 Press the ▲/▼ (arrow) buttons to select Low, Middle, High, or Off.
- 5 Press the **EXIT** button.

NOTE If the picture mode is set to **Game** or **PC**, this feature is not available.

DNR

DNR is a Dynamic Noise Reduction technology that filters out video noise without decreasing picture sharpness for clean, crystal-clear images.

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > Noise Reduction and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select **DNR** and press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select Low, Middle, High, Auto, or Off.
- 5 Press the **EXIT** button

NOTE

The differences may not always be noticeable. For the best results, use lower settings, as picture quality may be greatly reduced if the setting is too high.

If the picture mode is set to **Game** or **PC**, this feature is not available.

Ambient Light Sensor

When the ambient light function of **Auto Brightness Sensor** is set to **On**, the TV optimizes the backlighting levels to suit ambient light conditions.

- 1 Press the **SETUP** button
- 2 Select Picture > Advanced Picture Settings > Auto Brightness Sensor Settings and press the OK button.

- 3 Press the \triangle/∇ (arrow) buttons to select **On** or **Off**.
- 4 Press the **EXIT** button.

When the picture mode is set to **AutoView**®, this feature is automatically set to **On**.

ColorMaster™

The ColorMasterTM feature allows you to adjust standard colors.

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > ColorMaster and press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select **On** or **Off**.
- 4 Press the **EXIT** button.

Base Color Adjustment

When ColorMasterTM is set to On, the list of base colors appears.

You can select a base color to adjust.

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > Base Color Adjustment.
- 3 Press the **OK** button. The **Base Color Adjustment** screen appears.
- 4 Press the ▲/▼ (arrow) buttons to select a color. Press the ▶ (arrow) button.
- 5 Press the ◀/▶ (arrow) buttons to select Hue, Saturation, or Brightness.
- 6 Press the \triangle/∇ (arrow) buttons to adjust the setting.
- 7 Repeat Steps 4 through 6 to adjust other colors. To reset the adjustments to the factory defaults, select **Reset** on the screen, and then press the **OK** button. (A confirmation screen appears. Press the ◀/▶ (arrow) buttons to select **Yes**, and then press the **OK** button.)

Color temperature

- 1 Press the SETUP button.
- 2 Select Picture > Advanced Picture Settings > Color Temperature and press the OK button.
- 3 Select Color Temperature and press the OK button. Press the ▲/
 ▼ (arrow) buttons to select Cool, Medium, or Warm.

Using the advanced picture settings features

- 4 Press the **OK** button.
- Select Color Temperature and press the OK button. Press the ▲/
 ▼ (arrow) buttons to select the Red Level, Green Level, or Blue Level.
- 6 Press the ▶ (arrow) button.
- 7 Press the **◄**/**▶** (arrow) buttons to adjust the level. The adjustment range is -10 (less of selected color) to +10 (more of selected color).
- 8 Press the **EXIT** button

NOTE

This feature is not available in Standard and Movie mode.

Fine Texture Restoration

This feature allows you to adjust fine texture of the picture.

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > Fine Texture Restoration.
- 3 Press the **OK** button. **Fine Texture Restoration** screen appears.
- 4 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **Auto** or the picture texture level (1 to 10).
- 5 Press the **EXIT** button

NOTE

This feature should normally be set to Auto.

Brilliance Restoration

This feature allows you to adjust the picture brilliance.

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > Brilliance Restoration.
- 3 Press the **OK** button. **Brilliance Restoration** screen appears.
- 4 Press the ▲/▼ (arrow) buttons to select Auto or the picture brilliance level (1 to 10).
- 5 Press the **EXIT** button

NOTE

This feature should normally be set to Auto.

3D Judder Cancellation

This feature will reduce 3D images blur without adding flicker.

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > 3D Judder Cancellation.
- 3 Press the **OK** button. **3D Judder Cancellation** screen appears.
- 4 Press the \triangle/∇ (arrow) buttons to select **Auto** or **Off**.
- 5 Press the **EXIT** button.

NOTE

When Picture Mode is set to Game, this feature will be grayed out and automatically set to Off.

Resetting to the factory default

- 1 Press the **SETUP** button.
- 2 Select Picture > Advanced Picture Settings > Reset.
- 3 Press the **OK** button.A confirmation screen appears.
- 4 Select **Yes**, and then press the **OK** button.

Setting the expert picture settings

NOTE

This feature is only available in Standard and Movie mode.

Test Pattern

When the test pattern is on screen, you can navigate the Picture submenus without removing the image. When you move to a non-Picture menu, or close the menus, regular video will be restored.

- 1 Press the **SETUP** button.
- 2 Select Picture > Expert Picture Settings > Test Pattern and press the OK button.
- 3 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **On**.
- 4 Adjust picture settings.

NOTE

When the TV is in 2D to 3D mode or 3D mode, this feature is not available.

RGB Filter

This feature individually enables or disables the red, green, and blue components of the picture to allow for more accurate adjustment of each color.

- 1 Press the **SETUP** button.
- 2 Select Picture > Expert Picture Settings > RGB Filter and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select Red, Green, or Blue to adjust.
- 4 Press the ► (arrow) button.
- 5 Press the ▲/▼ (arrow) buttons to select **On**, and then press the **OK** button.
- 6 Press the ▼ (arrow) button to select Color or Tint, press the ◄/▶ (arrow) buttons to adjust.
- 7 Press the **EXIT** button.

NOTE It is not possible to turn off all three colors simultaneously.

White Balance

Window Display

This feature displays the Window Pattern to adjust the white balance.

- 1 Press the **SETUP** button.
- 2 Select Picture > Expert Picture Settings > White Balance and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select **Window Display** and press the **OK** button.
- 4 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **On**.
- 5 Adjust the picture settings.

Setting Type

You can adjust the white balance setting.

2P White Balance:

- 1 Press the **SETUP** button.
- 2 Select Picture > Expert Picture Settings > White Balance > Setting Type and press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select **2P** and the press the **OK**

button.

- Press the ▲/▼ (arrow) buttons to select **2P White Balance** and press the **OK** button.
- 5 Press the ▲/▼ (arrow) buttons to select Red-Offset, Green-Offset, Blue-Offset, Red-Gain, Green-Gain, or Blue-Gain.
- 6 Press the ▶ (arrow) button.
- 7 Press the **◄/▶** (arrow) buttons to adjust.

10P White Balance:

- 1 Press the **SETUP** button.
- 2 Select Picture > Expert Picture Settings > White Balance > Setting Type and press the OK button.
- 3 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select 10P and the press the OK button.
- 4 Press the ▲/▼ (arrow) buttons to select 10P White Balance and press the OK button.
- 5 Press the \triangle/∇ (arrow) buttons to select IRE, Red, Green, or Blue.
- 6 Press the ▶ (arrow) button.
- 7 Press the $\triangleleft/\triangleright$ (arrow) buttons to adjust.

Adjusting the audio

Muting the sound

Press the **MUTE** button to partially reduce (1/2 Mute) or turn off (Mute) the sound. Each time you press the **MUTE** button, the mute mode changes in the following order: 1/2 Mute, Mute, Volume, 1/2 Mute, etc.

NOTE

If you modify items in the **Sound** menu while Mute is active, Mute is cancelled.

Selecting stereo/SAP broadcasts

The MTS (multi-channel TV sound) feature is only available for analog signals on the ANT/CABLE input. When the TV receives a stereo or **SAP** (second audio program) broadcast, the icon **STEREO** or **SAP** appears on screen when the **INFO** button is pressed.

To listen in stereo sound:

- 1 Press the **SETUP** button.
- 2 Select **Sound** > **MTS** and press the **OK** button.
- 3 Press the \triangle/∇ (arrow) buttons to select **Stereo**.
- 4 Press the **EXIT** button.

NOTE

- You can typically leave the TV in Stereo mode because it outputs the type of sound being broadcast (stereo or monaural).
- ❖ If the sound is noisy, select **Mono**.
- If there is no sound in SAP mode, select Stereo.

Adjusting the audio balance

You can adjust the audio balance.

- 1 Press the **SETUP** button.
- 2 Select **Sound** > **Balance** and press the **OK** button.
- 3 Press the $\blacktriangleleft / \triangleright$ (arrow) buttons to adjust the balance.
- 4 Press the **EXIT** button.

Adjusting the range

You can adjust bass and treble.

- 1 Press the **SETUP** button.
- 2 Select Sound > Bass or Treble.

- **3** Press the **OK** button.
- 4 Press the $\triangleleft/\triangleright$ (arrow) buttons to adjust the range.
- 5 Press the **EXIT** button.

TV Speakers On/Off

This feature allows you to turn the TV speakers off when connecting the audio system.

- 1 Press the **SETUP** button.
- 2 Select **Sound** > **TV Speakers** and press the **OK** button.
- 3 Press the \triangle/∇ (arrow) buttons to select **On** or **Off**.

To turn on the built-in speakers:

1 Choose **On** in step 3 above.

Setting the Primary Audio Language

You can set the Primary Audio Language of the digital broadcast.

- 1 Press the **SETUP** button.
- Select Sound > Primary Audio Language and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select English, Français, or Español.
- 4 Press the **EXIT** button.

Selecting the optical audio output format

You can select the optical audio output format when you connect a Dolby[®] Digital decoder or other digital audio systems to the TV's DIGITAL AUDIO OUT terminal.

Audio Format

- 1 Press the **SETUP** button.
- 2 Select **Sound** > **Digital Audio Output** > **Audio Format** and press the **OK** button
- 3 Press the \triangle/∇ (arrow) buttons to select **Auto** or **PCM**.
- 4 Press the **EXIT** button.

Audio Delay

- 1 Press the **SETUP** button.
- 2 Select Sound > Digital Audio Output > Audio Delay and press the OK button.

Adjusting the audio

3 Press the \triangle/∇ (arrow) buttons to select **Auto** or **Manual**.

Auto: This mode automatically adjusts the audio timing to meet the video timing.

The time lag might be large between the image and sound depending on the connected equipment (amplifier etc.). In that case, select Manual.

Manual: You can manually adjust the audio signal timing to meet the video signal timing.

4 Press the **EXIT** button.

Delay Adjustment

- 1 Press the **SETUP** button.
- 2 Select Sound > Digital Audio Output > Delay Adjustment and press the OK button.
- 3 Press the $\blacktriangleleft/\triangleright$ (arrow) buttons to adjust the audio signal timing (0 250ms) to meet the video signal timing.
- 4 Press the **EXIT** button.

NOTE

- This feature is grayed out when **Audio Delay** is in **Auto**.
- A time lag will occur when the video signal or audio signal is changed. Adjust the timing accordingly.
- When adjusting the timing, turn down the volume of the AV equipment used as far as possible.
 Depending on the equipment, noise etc. may occur when the signal is changed.
- Depending on the connected equipment (amplifier, etc.), adjustment may not be possible.
- ♦ When the optical audio output setting (Auto ← PCM) is changed, it may be necessary to adjust the timing again.
- Do not use other than for audio output from the AV amplifier, etc.
 (Malfunction may occur)

Using the Dolby® Digital Dynamic Range Control feature

You can further compress Dolby[®] Digital and Dolby[®] Digital Plus dynamic range so you can switch from digital to analog broadcasts at the same dynamic range.

- 1 Press the **SETUP** button
- 2 Select Sound > Dynamic Range Control and press the OK button.
- 3 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **On**.

NOTE

This feature is available when Dolby[®] Digital or Dolby[®] Digital Plus is input to the TV in the following situations:

- When tuned to a digital RF channel
- ♦ When an HDMI[™] input is used

This feature is automatically set to **Off** when **Dynamic Volume** (Audyssey Dynamic Volume[®]) is set to **Day** or **Night**.

This feature will also affect **Digital Audio Output** when the optical audio output format is set to **PCM**.

Audyssey Premium Television™

These televisions use a suite of technologies for better sound including:

- Audyssey EQ®—provides clear, accurate and natural sound right out of the box. This technology ensures you enjoy your audio experience as much as your video.
- ❖ Audyssey ABX[™]—technology uses sophisticated driver analysis and low frequency monitoring to extend the range and bass of small speakers. This enables the system to produce lower frequencies than would be possible with a traditional system of the same size.
- Audyssey Dynamic Volume®—automatically adjusts volume to provide a consistent sound level between television programs, commercials, and between the loud and soft passages of movies.
- Audyssey Volume Extension®—doubles the volume capability in small speakers while blocking distortion so your TV gets loud and still sounds great.
- Day/Night Modes—automatically keeps the volume of the TV at the perfect level for day or night.
- ❖ Wall/Table Modes—automatically keeps the volume at the perfect level for television mounted on a wall or located on a table-top.

Using Audyssey EQ® for Wall Mounted or Table-top TVs

This feature automatically keeps the volume at the perfect level for television mounted on a wall or located on a table-top.

- 1 Press the **SETUP** button.
- 2 Select Sound > Audyssey Premium Television > TV Mounting and press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select **Wall** or **Table**.

Using Audyssey Dynamic Volume®

This feature provides a consistent sound volume between television programs, commercials, and between the loud and soft passages of movies.

- 1 Press the **SETUP** button.
- 2 Select Sound > Audyssey Premium Television > Dynamic Volume and press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select **Night**, **Day**, or **Off**.

NOTE

- If Dynamic Range Control is set to On, this feature is automatically set to Off.
- This feature does not affect the audio signal output from the DIGITAL AUDIO OUT terminal.

Audyssey ABX™

Audyssey ABX[™] technology uses sophisticated driver analysis and low frequency monitoring to extend the range and bass of small speakers.

To turn on Audyssey ABXTM:

- 1 Press the **SETUP** button.
- 2 Select Sound > Audyssey Premium Television > Audyssey ABX and press the OK button.
- 3 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **Off**, **Low**, or **High**.

Audyssey EQ $^{\$}$ and Audyssey Volume Extension $^{\$}$ are default settings that are set to \mathbf{On}

Using the surround sound feature

Surround settings help to create a thrilling surround sound experience with deep, rich bass from stereo sound sources. Your TV's audio will sound fuller, richer, and wider.

Press the SETUP button. Select Sound > Surround, and then select On or Off.

Chapter 8

Advanced features

Using your home network

- This TV can share videos, music, and photos across your home network and other connected products through the MediaShare feature. In order to do this, you will have to configure the network settings on your TV, see "MediaShare (Videos, Music, and Photos)" on page 152.
- If you want to use your home network with an Internet connection, you will have to configure the network settings on your TV. If necessary, change the network settings, see "Setting up the Network" on page 125.

If you use Internet services, see the following note before use.

NOTE

Third party Internet services are not provided by Toshiba, may change or be discontinued at any time, and may be subject to third party restrictions. Toshiba makes no warranties, representations, or assurances about the content, availability, or functionality of third party content or services. Third party Internet services may require the creation of a separate account through a computer with Internet access, and payment of one-time and/or recurring charges.

Certain features currently not available in Mexico.

When using a Wireless network connection

Wireless LAN and your Health:

Wireless LAN products, like other radio devices, emit radio frequency electromagnetic energy. However, the level of energy emitted by Wireless LAN devices is much less than the electromagnetic energy emitted by wireless devices like mobile phones.

Because Wireless LAN products operate within the guidelines found in radio frequency safety standards and recommendations, Toshiba believes Wireless LAN is safe for use by consumers. These standards and recommendations reflect the consensus of the scientific community and result from deliberations of panels and committees of scientists who continually review and interpret the extensive research literature.

In some situations or environments, the use of Wireless LAN may be restricted by the proprietor of the building or responsible representatives of the organization. Such restrictions may apply in environments where the risk of interference to other devices or services is perceived or identified as harmful.

If you are uncertain of the policy that applies to the use of wireless devices in a specific organization or environment, you are encouraged to ask for authorization to use the Wireless LAN device prior to turning on the equipment.

Using the TV in a wireless LAN environment:

- ❖ It is recommended to use IEEE 802.11a or IEEE 802.11n on 5 GHz for audio and SD video streaming.
- It is recommended to use IEEE 802.11n on 5 GHz for HD video streaming.
- It is recommended that the encoding rate of video content be 20 Mbps or less.
- It is not recommended to use 2.4 GHz for audio and video streaming.
- Content playback may be interrupted by surrounding interference.

Setting up the Network

You can select the Network Type.

- 1 Press the **SETUP** button.
- 2 Select Network > Network Setup > Connection Type and press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select Wired or Wireless.
- 4 Press the **OK** button.
 - ❖ If you select Wired, see "Advanced Network Setup" on page 130.

If you select Wireless, see the next section.

Wireless Setup

NOTE

Continued AP (Access Point) connection is not guaranteed. Connection may be lost while watching TV.

There are three methods for wireless setup:

- Easy Setup (WPS or PIN)
 - If AP supports WPS, this can be used.
 - WPS is a standard designed to simplify the connection of wireless LAN equipment and the setup of network security features.
- Assisted Setup (setup using the AP's notification information) Network Name, Authentication, and Encryption are decided based on information from the AP. You need to manually set the Security Key.
- Manual Setup Requires manually entering all settings.

NOTE

- In order to secure your home network, it is strongly recommended that you use a wireless access point with encryption.
- When Encryption is set to "None", data transmitted over a wireless LAN is not securely protected. Unauthorized users may access your data and network without appropriate security measures. Selecting an encryption setting from your Toshiba TV and using a secure network for wireless LAN transmissions may help avoid unauthorized access to your important data and/or TV. Toshiba disclaims any and all responsibility or liability resulting from any wireless transmissions over the Internet through your Toshiba TV.

Easy Setup using PBC (Push button configuration)

- 1 Press the **SETUP** button.
- 2 Select Network > Network Setup > Wireless Setup and press the OK button
- 3 Press the ▲/▼ (arrow) buttons to select Easy Setup and press the OK button.
- 4 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **PBC**.
- 5 Press the ▼ (arrow) button to select **Start Scan**, and then press the **OK** button
- 6 Following the on-screen instructions, push the appropriate button on your AP.
- 7 When a screen reporting that "the setup has succeeded" appears, press the **OK** button.

To cancel searching for the AP:

❖ Press the BACK button while searching for the AP. A message appears. Press the ◀/▶ (arrow) buttons to select Yes, and then press the OK button.

Easy Setup using PIN (Personal Identification Number)

- 1 Press the **SETUP** button.
- 2 Select **Network > Network Setup > Wireless Setup** and press the **OK** button.
- 3 Press the ▲/▼ (arrow) buttons to select Easy Setup and press the OK button.
- 4 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select PIN.
- 5 Press the ▼ (arrow) button to select **Start Scan**, and then press the **OK** button.
 - The Scan screen appears.
- 6 Enter the PIN displayed on this screen into your computer or AP.
- 7 Press the ▲/▼ (arrow) buttons to select the desired AP, and then press the **OK** button.

NOTE Check the MAC address on the label or in the manual of the AP and select an AP.

8 When a screen reporting that "the setup succeeded" appears, press the **OK** button

To cancel searching for the AP:

❖ Press the BACK button while searching for the AP. A message appears. Press the ◀/▶ (arrow) buttons to select Yes, and then press the OK button.

Assisted Setup

- 1 Press the **SETUP** button.
- 2 Select Network > Network Setup > Wireless Setup and press the OK button.
- 3 Press the **△**/**▼** (arrow) buttons to select **Assisted Setup** and press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select the desired AP, and then press the **OK** button.

NOTE Check the MAC address on the label or in the manual of the AP and select an AP.

- 5 Select Security Key, and then press the **OK** button. The Software Keyboard appears.
- 6 Input the Security Key using the Software Keyboard. For more information, see "Using the software keyboard" on page 133.
- 7 To save your settings, press the **GREEN** button.

NOTE The Security Key must adhere to the following conditions:

- TKIP/AES: 8-63 ASCII or 64 Hex characters
- WEP: 5 or 13 ASCII or 10 or 26 Hex characters
- 8 Select **Done**, and then press the **OK** button.

NOTE Settings are not saved if the **BACK** button is pressed before Done is selected.

Manual Setup

- 1 Press the **SETUP** button.
- 2 Select Network > Network Setup > Wireless Setup and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select Manual Setup, and then press the OK button.

Setting up the Network

- 4 Press the ▲/▼ (arrow) buttons to select Network Name, and then press the OK button.
 The Software Keyboard window appears.
- 5 Input the Network Name using the Software Keyboard. For more information, see "Using the software keyboard" on page 133.
- **6** To save your settings, press the **GREEN** button.
- 7 Press the **△**/**▼** (arrow) buttons to select **Authentication** and press the **OK** button.
 - Press the ▲/▼ (arrow) buttons to select **Open System, Shared Key**, **WPA-PSK**, or **WPA2-PSK**.
- 8 Press the ▲/▼ (arrow) buttons to select **Encryption** and press the **OK** button.
 - Press the **◄/▶** (arrow) buttons to select **None**, **WEP**, **TKIP**, or **AES**.

NOTE

Certain encryption types are only compatible with specific authentication types.

- When Authentication is Open System and Shared Key, only WEP or None are compatible.
- When Authentication is WPA-PSK or WPA2-PSK, only TKIP or AES are compatible.

When incompatible Authentication/Encryption pairings are attempted, a warning message will be displayed, and no connection attempt will be made until the incompatibility is resolved.

- 9 Press the ▲/▼ (arrow) buttons to select Security Key, and then press the OK button.
 The Software Keyboard window appears.
- 10 Input the Security Key using the Software Keyboard. For more information, see "Using the software keyboard" on page 133.
- 11 To save your settings, press the **GREEN** button.

NOTE

This item is grayed out when Encryption is set to None.

- 12 Select **Done**, and then press the **OK** button. When Encryption is set to **None**, a message appears.
- 13 Press the ◀/► (arrow) buttons to select Yes, and then press the OK button.

NOTE

Settings are not saved if the **BACK** button is pressed before Done is selected.

Wireless Information

The settings configured in Wireless Setup can be confirmed.

- 1 Press the **QUICK** button.
- 2 Select **Wireless Information**, and then press the **OK** button.
- 3 Press the RED button to check the availability of surrounding APs. A Wireless Information screen appears when a connection is successfully made.

Item:	Description:
Status	The message, "Connected" appears when the TV is connected to
	the AP
	The message, "Disconnected" appears when the TV is disconnected
	from the AP
Signal	Connection signal strength with the AP (STRONG/MEDIUM/WEAK)
Speed	The link speed with the AP
Mode	Working mode (11a, 11b, 11g, 11n)
Channel	The channel in use (1-165)
Network name	SSID set
Authentication	Authentication set
Encryption	Encryption set
Security key	Security Key set
AP MAC address	The AP's MAC address appears when the TV is connected to the AP
TV MAC address	The TV's MAC address
DHCP	The message, "Enabled" appears when you use DHCP.
	The message, "Disabled" appears when you do not use DHCP.
IP address	The TV's IP address
Subnet Mask	Value of the Subnet Mask
Default Gateway	Default GATEWAY's address
DNS	DNS's address

NOTE

Even if an AP for IEEE 802.11n is used when Encryption is set to WEP or TKIP, the Speed value might be low. We recommend that the Encryption setting are changed to AES (Under manual setup).

Advanced Network Setup

NOTE

When manually setting the IP Address, set **Auto Setup** to **Off**.

IP Address Setup

NOTE

The settings in Auto Setup are linked to those selected in the DNS Setup menu. If Auto Setup is set to On, then Auto Setup in the DNS Setup menu will also be set to On.

Auto Setup:

- 1 Press the **SETUP** button.
- 2 Select Network > Network Setup > Advanced Network Setup and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select **IP Address Setup**, and then press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select Auto Setup and press the OK button.
- 5 Press the \triangle/∇ (arrow) buttons to select **On**.

NOTE

Other items are grayed out when **Auto Setup** is set to **On**.

Manual Setup:

- 1 Press the **SETUP** button.
- 2 Select Network > Network Setup > Advanced Network Setup and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select **IP Address Setup**, and then press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select Auto Setup and press the OK button.
- 5 Press the \triangle/∇ (arrow) buttons to select **Off**.
- 6 Press the ▲/▼ (arrow) buttons to select **IP Address**.
- 7 Press the **◄/▶** (arrow) buttons to select the **IP Address** field and use the 0-9 buttons to enter in a digit. Press the **▶** (arrow) button to select the subsequent fields. To save the setting, press the **OK** button.

NOTE

IP address field numbers must be between 0 and 255. If you input an incompatible number and press the **OK** button, the field number will be reset to the previous value.

- 8 Press the ▲/▼ (arrow) buttons to highlight **Subnet Mask**, and edit in the same way as IP Address.
- 9 Press the ▲/▼ (arrow) buttons to highlight **Default Gateway**, and edit in the same way as IP Address.

NOTE

If you manually set the IP address, you must not use the same IP address with any other device. The IP address you use should be a private address. If you do not know the correct values to use, contact your network administrator or internet service provider.

DNS Setup

NOTE

- When the DHCP function of the router connected to this TV is Off, set Auto Setup to Off, and manually set the DNS address(es). Your Internet Service Provider should have provided these to you.
- The settings in Auto Setup are linked to those selected in the IP Address Setup menu. If Auto Setup is set to On, then Auto Setup in the IP Address Setup menu will also be set to On.

Auto setup:

- 1 Press the **SETUP** button.
- 2 Select Network > Network Setup > Advanced Network Setup and press the OK button.
- 3 Press the **△**/**▼** (arrow) buttons to select **DNS Setup**, and then press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select Auto Setup and press the OK button.
- 5 Press the \triangle/∇ (arrow) buttons to select **On**.

NOTE Other items are grayed out when **Auto Setup** is set to **On**.

Manual setup:

- 1 Press the **SETUP** button.
- 2 Select Network > Network Setup > Advanced Network Setup and press the OK button.

Setting up the Network

- 3 Press the \triangle/∇ (arrow) buttons to select **DNS Setup**, and then press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select Auto Setup and press the OK button.
- 5 Press the \triangle/∇ (arrow) buttons to select **Off**.
- 6 Press the \triangle/∇ (arrow) buttons to select **Primary DNS Address**.
- 7 Press the ◀/▶ (arrow) buttons to select the field you want to change, and then use the number buttons to input the Primary DNS Address. To save the setting, press the **OK** button.

NOTE

DNS address field numbers must be between 0 and 255. If you input an incompatible number and press the **OK** button, the field number will be reset to the previous value.

8 Press the ▲/▼ (arrow) buttons to select **Secondary DNS Address**, and edit in the same way as Primary DNS Address.

MAC Address

You can view the fixed MAC address for the TV.

- 1 Press the **SETUP** button.
- 2 Select Network > Network Setup > Advanced Network Setup and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select MAC Address, and then press the OK button.

Network Connection Test

This function checks Internet connectivity.

1 Press the **SETUP** button.

successful or not.

Select Network > Network Setup > Network Connection Test, and then press the OK button.
A message appears to indicate whether the connection was

NOTE

Favorable Network Connection Test results do not guarantee an Internet Connection. Depending on the situation, some Internet features may not be available.

To cancel Network Connection Test, press the **EXIT** button while searching for the Internet connection.


Using the software keyboard

You can enter text using the Software Keyboard.

The Software Keyboard window will appear when you press the **OK** button on a field that accepts character input.

NOTE

When using the SmartTV features, software keyboard availability depends on the Internet service being accessed.

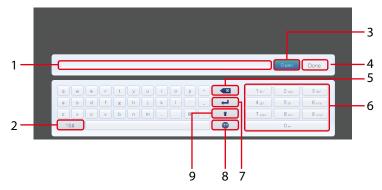

(Sample Illustration) Software keyboard

	Item:	Description:
1	Text entry field	Press the OK button on this field, caret moving.
2	Symbol	Switches to Symbol characters
3	Open	Displays the Multi Line Input field. If it does not work,the button will be grayed out.
4	Done	Saves whatever text was entered, exits the software keyboard and enters that text into the appropriate text field on the previous screen.
5	Delete	Deletes one character to the left of the cursor
6	Number pad	Inputs numbers. In keypad, these keys are used to select a character for entry.
7	Line Break	Enters the Line Break.
8	Switch Language	Displays the Switch Keyboard Language Popup.
9	Shift	Switches the keyboard layout to capital letters and other symbols.

Enter text using the software keyboard

- 1 Highlight the desired character on the on-screen software keyboard.
- 2 Press the **OK** button.
- 3 Repeat Step 1 and 2 until you have entered all desired text.
- 4 Select **Done** or press the **GREEN** button to save your settings and return to the previous screen.

NOTE

If the **BACK** button is pressed, changes are not saved and the software keyboard window is closed.

Input operation on the remote control:

Item:	Description:	
OK	Inputs the selected character	
0-9	These keys are used to select a character for entry.	
▲/▼/∢/▶	Moves the character highlight	
RED	Deletes one character to the left of the cursor	
GREEN	Done	
YELLOW	Shortcut key for Shift	
BLUE	To display the help	
BACK	Closes the Software Keyboard window without saving changes	

Performing a Software Upgrade

TOSHIBA may offer upgrades for the TV's software in the future.

The TV's software is upgraded via the Network.

NOTE

An Internet connection is required.

Before downloading software:

1 Configure your TV to connect to the Internet.

NOTE

- ❖ You will not be able to use the TV set while performing the upgrade.
- Do not turn off the TV during the upgrade.
- By upgrading, the factory default values may be changed.
- 2 Press the **SETUP** button.
- 3 Select Get Help > Software Upgrade.
- 4 Press the **OK** button. The Network Upgrade screen appears.
- 5 Press the **OK** button.

NOTE

If the network is not available, a warning message appears.

6 After a successful download, the TV software upgrade will start automatically.

Viewing the Software Licenses

The Licenses for the software used in this TV are available for viewing.

- 1 Press the **SETUP** button.
- **2** Select **Get Help > Software Licenses**.
- 3 Press the OK button.
 A screen appears displaying all the licensing information required for the television's software.

Using Intel® WiDi

Intel® Wireless Display (Intel® WiDi) is supported on this TV. Toshiba has also included peer-to-peer wireless technologies to allow direct wireless connection between the TV and Intel® WiDi equipped PC or mobile device. If your PC or mobile device has Intel® WiDi, the Toshiba Cloud Service TV will allow you to display the small screen content on the big screen quickly and easily.

- 1 Press the QUICK button to open the Quick Menu.
- 2 Press the \triangle/∇ (arrow) buttons to select **Intel**® **WiDi** and then press the **OK** button.
 - A prompt will appear on the screen when **Connection Type** is set to **Wireless**. Select **Yes**.
- 3 Launch the Intel[®] WiDi software on your device and select "scan for available adaptors".
 - Intel[®] WiDi device name and ID list will then be displayed on the device screen.
 - Select the TV which you wish to connect to.
 - "Connecting" will be shown on the TV.

4 Connecting your PC to the TV the first time

When selecting the Toshiba TV for the first time, a 4-digit or 8-digit code will appear on your TV screen. This code needs to be inputted into your computer to authenticate the connection.

If authentication has already taken place

- "Please Wait" will appear on screen.
- 5 After the Intel® WiDi connection is complete, the TV screen will mirror the content shown on the device screen.

NOTE

- ♦ When connecting Intel® WiDi, device must have power turned on.
- When the TV Network Settings are set to Wireless and Intel®WiDi software is starting up, other TV applications cannot be used.
- Intel[®] WiDi device name of the TV can be changed from the Intel[®] WiDi software.

To exit Intel® WiDi:

Exit Intel® Wireless Display by pushing the disconnect button on Intel® WiDi software on the device or by pressing the **EXIT** button on the TV remote control.

NOTE

If the device has been inactive for some time, the Intel® WiDi connection will be disconnected automatically.

Changing the Intel® WiDi Device Name

The TV's Intel® WiDi device name can be changed.

- 1 Press the **SETUP** button.
- 2 Select Network > Network Device Setup > Intel[®] WiDi Setup and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select Intel® WiDi Device Name and press the OK button.
- 4 Select the Intel® WiDi Device Name and press the OK button. The Software Keyboard window will appear.
- 5 Input the Intel[®] WiDi device name by using the software keyboard. Press the **GREEN** button.
- 6 Select **Done** and press the **OK** button to save your setting.

Device List

Device List displays a list of MAC addresses for previously connected device that have been connected before. The maximum number that can be stored is 20

If the list run out of space, the least-recently-used MAC address will be deleted and the new MAC address added automatically.

- 1 Press the **SETUP** button.
- 2 Select Network > Network Device Setup > Intel® WiDi Setup and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select **Device List** and press the **OK** button.

Device List will appear.

The registered device can be deleted one by one by pressing the **Red** button in the List.

When doing so the following text can be seen "**Do you want to unregister this device? Yes/No**" (default cursor is "No").

Using the Cloud Service

Toshiba's universal portal for Internet content and services. (Services are dependent on country).

NOTE

You need to connect to the Internet before using this feature, see "Setting up the Network" on page 125.

Using the Cloud Service TV Service

- 1 Press the △ button.

 The menu screen of the Cloud service is displayed.
- 2 Press the ▲/▼/◄/► to select a Cloud service, and press the OK button.

Using the Cloud Service TV features

NOTE

- You need to connect to the Internet before using this feature, see "Setting up the Network" on page 125.
- Certain services may not be currently available in your area.
- User registration or login may be required to use some services.
- Third party Internet services are not provided by Toshiba, may change or be discontinued at any time and may be subject to Internet service provider restrictions. Toshiba makes no warranties, representations, or assurances about the content, availability or functionality of thirdparty content or services. Use of third party Internet services may require the creation of a separate account through a computer with Internet access and/or payment of one-time and/or recurring charges and membership. Not all third party services may be available on or compatible with this product. In order to experience the full suggested capabilities of this product, fully-compatible devices may be required.

NOTE

- If the display of the date and time is wrong, try to turn off the TV, and turn it on again.
- The menu items for features like the Apps may change in the upgrade process.

eMANUAL

The eMANUAL provides on-screen, context-sensitive, instructions that describe the TV features.

To access the eManual, press the **eMANUAL** button on the remote control and select "**eManual**". Or you can access the eManual through the icon on the Cloud Service TV Portal pages.

NOTE

A active Internet connection is required to use the eMANUAL feature.

Feature apps

With easier content discovery, Cloud Service TV puts you closer than

ever to the things you love—like Netflix® and Hulu Plus®, along with video on demand, broadcast programming, the Web, even music, photos and videos on your home network.

NOTE

Apps will vary by country and availability may change in the future with respect to current apps.

Netflix®

Watching movies with Netflix®

- 1 Press the NETFLIX on the remote control and select the Netflix[®] icon
- **2** Follow the on-screen instructions.

After having activated Netflix® player and prepared an Instant Queue, movies and TV episodes in your Instant Queue will appear on the TV screen. Select the desired content using the remote control.

NOTE

- The resolution of video content streamed from Netflix® varies depending on the communication speed and bit-rate and is controlled by Netflix®.
- Future upgrades can change the screens and messages displayed in the Netflix® feature.
- Netflix[®] is supported in the U.S. and Canada, and may not be available in other countries or regions.

To close Netflix[®], press the **EXIT** button.

To confirm the Netflix ESN (Electronic Serial Number):

- 1 Press the **SETUP** button.
- 2 Select Network > Smart Apps Setup > Netflix Setup and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select ESN, and then press the OK button.

The Netflix ESN screen appears.

To deactivate your device:

- 1 Press the **SETUP** button.
- 2 Select Network > Smart Apps Setup > Netflix Setup and press the OK button
- 3 Press the ▲/▼ (arrow) buttons to select **Deactivation**, and then press the **OK** button.

4 Press the ◀/► (arrow) buttons to select Yes, and then press the OK button.

Internet

Open Web Browser

The open/web browser with HTML5 video and audio codecs which allow you to explore the web the way you want. Search for, bookmark, and browse your favorite sites to enjoy the content you want, with simple, intuitive navigation.

The web browser on this device:

- ♦ does not support platform-dependent technologies such as ActiveX[®].
- only supports preinstalled plug-ins.
- may not support media formats other than the following: JPEG / PNG / GIF.
- uses a single built-in font. Some text may not be displayed as intended.
- does not support downloading of files or fonts.
- is a TV browser. It may work differently than PC browsers.
- does not support parental control or locks in the content, and it is the responsibility of the user to monitor browser usage by minors.

NOTE

Some pages may not be displayed correctly or may display differently on different devices.

Using the web browser

- 1 Connect to the network.
- Press the button on the remote control to access the web browser page.
- 3 Use the $\triangle/\nabla/\triangle/\triangleright$ (arrow) buttons to select to the URL Address Bar and press the **OK** button.
- 4 Enter the desired URL address by using the software keyboard, see "Using the software keyboard" on page 133.
 Press the GREEN button when finished.
- 5 You can now browse websites on your TV using the $\triangle/\nabla/\blacktriangleleft/\triangleright$ (arrow) buttons on the remote control

NOTE

♦ When you press the GREEN button while browsing web content, you can use the ▲/▼/◄/► (arrow) buttons on the remote control in mouse control mode.

You can use the Wireless QWERTY keyboard in addition to the software keyboard.

Browsing favorite websites

- Connect to the network.
- 2 Press the \ button on the remote control to access the web browser page.
- 3 Use the $\triangle/\nabla/\blacktriangleleft/\triangleright$ (arrow) buttons to select the Favorites **STAR** icon on the browser menu bar and press the **OK** button.

NOTE

By adding frequently visited websites to Favorites, you can browse them easily.

You can view the addresses of the websites you visited previously.

4 Select the item or folders to move to the desired URL address and press the **OK** button.

NOTE

You can press the **GREEN** button on the remote for thumbnail view of all your favorites.

You can now browse websites on your TV using the $\triangle/\nabla/\blacktriangleleft/\triangleright$ (arrow) buttons on the remote control.

NOTE

When you press the **GREEN** button while browsing web content, you can use the $\triangle/\nabla/\blacktriangleleft/\triangleright$ (arrow) buttons on the remote control in mouse control mode.

Adding favorite websites

- 1 Connect to the network.
- Press the button on the remote control to access the web browser page.
- 3 Follow "Using the web browser" on page 140 to display your desired website.
- 4 Press the Navigation buttons to scroll to Favorites STAR on the Browser Menu Bar and press the **OK** button.

NOTE

By adding frequently visited websites to Favorites, you can browse them easily.

You can view the addresses of the websites you visited previously.

Using the Cloud Service TV features

5 Press the **OK** button to save the desired website to your favorites.

NOTE

The desired website is highlighted and displayed on the top row with the + (Add) icon.

The + (Add) icon will change to a page icon after the website has been saved to favorites.

6 Press the **BACK** button on the remote to return to browsing your website.

PIP (Picture-in-picture) function

When viewing the web browser page, currently airing programs or images from external inputs can be displayed in a PIP window (sub-screen).

- Press the **RED** button while viewing the web browser page. The currently airing program or images from external inputs are displayed in a PIP window.
 - The position of the PIP window, and whether it is displayed or not can be set in the web browser Settings.

NOTE

4k content cannot be displayed in the PIP window.

To stop displaying the PIP window:

Press the **RED** button when the PIP window is displayed.

NOTE

- The CH ▲/▼ buttons cannot be used when the PIP window is displayed.
- Images in the PIP window cannot be displayed in 3D.
- Images from 3D signals will not be displayed in the PIP window.

Using Skype™

SkypeTM-ready Toshiba TVs bring your family and friends closer to your home. SkypeTM on your Toshiba TV allows you to share special moments no matter the distance.

Before using Skype™ - Preparation

- ❖ Connect the FREETALK HD Camera: TALK-7291 to the TV's USB port. Do not use a USB hub. For a Skype[™]-ready Toshiba TV compatible camera, please visit the following website: http://shop. skype.com
- Arrange the HD camera on top of the TV, ensuring it's in the center.

Connect to the network.

NOTE

- The HD camera is sold separately.
- ❖ Do not connect a camera other than the recommended HD camera.
- Using a wireless network may result in degraded call quality.
- Some of the features available on other versions of Skype™ are not available on the television.
- ♦ When using Skype™, some functions of the TV will not be available.
- ❖ The sound settings are switched to Skype™ mode.
- If you cannot hear the person you're speaking with, check your TV volume.
- When Optical Digital output or Analog output is used and you are signed in, the ring tone may not sound.
- The volume level on Skype[™] may differ from other features on your TV.
- ♦ When the Reset TV feature is used from the TV Menu, Skype™ information is reset to factory default settings.
- Screenshots used in this manual may differ from the TV Menu, Skype™ will be reset to its factory default settings.

A WARNING

No emergency calls with SkypeTM


Skype $\mbox{^{TM}}$ cannot be used for emergency calls.

Attaching the HD camera on your TV (for 65L9300UC/84L9300UC Series only)

When attaching the camera to the TV, use the two sponges (supplied).

NOTE

Peel off the stickers from the adhesive surfaces of the sponges, and then attach them to the TV.

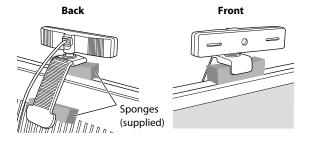

Getting started

- 1 Press the △ button on the remote control.
- 2 Select Skype and press the OK button. "Welcome to Skype" screen appears.



(Sample Image) Welcome Skype screen

3 Select **Sign** in or **Create Account**.

To create a new account:

If you do not already have a Skype $^{\text{TM}}$ account, you can create a new one from your TV.

1 Select **Create Account** in the **Welcome to Skype** screen and press the **OK** button.



(Sample Image) Create Account screen

- 2 Enter your Full Name, Skype Name, Password, Repeat password, and Email.
 - ❖ If you want to receive Skype[™] news and special offers, check the selection box. Skype[™] will inform users about new products, features and special offers by email.
- 3 Select "I agree create an account" and press the OK button.

4 You'll now be signed into your new account.

NOTE

- Please ensure that you have entered your email address correctly. It is required in case you lose or forget your password.
- If you forget your password, visit skype.com to retrieve it.
- If a message appears informing you that the entered Skype™ name is already registered, please choose a different name.

To Sign into Skype™:

If you have a SkypeTM account, sign into SkypeTM in the **Welcome to Skype** screen.

- 1 Enter your Skype Name and Password.
- 2 Select **Sign in** and press the **OK** button.
 - ❖ If "Sign in when Skype starts" is checked, your account will sign in automatically when you launch Skype™ from the menu.
 - If "Start Skype when TV starts" is checked, your account will sign in automatically when you turn on the TV.

Basic Operation

Press the \triangle/∇ (arrow) buttons to select a tab (Contacts/People, Recent, Dialer, or Settings). Press the $\triangleright/\triangle/\nabla$ (arrow) buttons to select a contact from the list.

Your contact list will contain the following information:

Contact name / Current online status / Profile picture / Mood message Your profile picture, status, Skype Name, mood message and available Skype Credit.



Contacts/People 🖪

Press the \triangle/∇ (arrow) buttons to select **Contacts** tab. Press the $\triangleright/\triangle/\nabla$ (arrow) buttons to select a contact.

After pressing the \mathbf{OK} button on each contact, the following functions will be displayed:




(Sample Image) SkypeTM contact list - select menu

Video or Voice call

Press the $\triangle/\nabla/\triangle/\triangleright$ (arrow) buttons to select Video call or Voice call, your screen will now display your call as shown below.

Video call

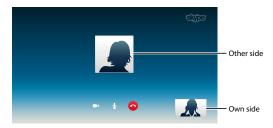

Voice call



(Sample Image) SkypeTM video/voice call screen

Below is all icon pictures in conversation window.

- Start video
- Stop video
- Resume the call
- Unmute the webcam mic
- Mute the webcam mic
- Normal size video
- Full screen video
- Open dial pad
- End call (Hang up the call)

Group calls

Using your Toshiba TV, you can join Skype™ group voice and video calls. However, you can only send and receive audio while on these calls.

NOTE You must be invited on to a group call, you cannot initiate it from the TV.

Incoming call

Incoming calls on SkypeTM will be displayed on the bottom right hand corner of your TV screen. You'll also hear a ring tone which can be adjusted using the **Volume** buttons on your remote control.



(Sample Image) SkypeTM incoming call menu

You are given three options when an incoming call arrives:

- ❖ Video: Answer by video call.
- **❖ Voice :** Answer by voice call.
- Decline : Decline the incoming call.

NOTE

If other applications are active or recording, you'll only get an "Incoming call notification" until the application or recording has stopped.

Status

When pressing the **GREEN** button, the change status window is displayed as below. You can change your status by pressing the \triangle/∇ (arrow) buttons and then pressing the **OK** button. Exit by pressing the **BACK** button.



(Sample Image) SkypeTM status menu

Add Contact

You can add contacts to your contact list.

When you press the **YELLOW** button on the remote control, the **Add Contact Type** menu window will appear on the screen.



SkypeTM Add Contact Type menu

Two sub-functions are supported.

Press the \triangle/∇ (arrow) buttons to select **Skype Contact** or **Phone Number** and press the **OK** button.

Skype Contact

Enter the SkypeTM Name of the person you're looking for. The search result will show up after get response from SkypeTM server.

Phone Number

You can also enter a phone number in the search window.

Contact Search Results



(Sample Image) SkypeTM contact search results screen

You can send a contact request to a person displayed in the search results. Press the \triangle/∇ (arrow) buttons to select a person and press the **OK** button

Notification of authorization request



SkypeTM notification of authorization request screen

When you receive a contact request, a pop-up menu will appear where you can choose to **Accept**, **Block** or **Decline** the request.

Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select and press the OK button.



(Sample Image) SkypeTM request form screen

Press the $\blacktriangleleft/\triangleright$ (arrow) to select and press the **OK** button.



(Sample Image) SkypeTM request form screen

Recent ()

You can see a list of past events in "Recent".

Press the \triangle/∇ (arrow) buttons to select the **Recent** tab. Press the $\triangleright/\triangle/\nabla$ (arrow) buttons to select an item and press the **OK** button.



(Sample Image) SkypeTM history screen

Press the **◄/▶** (arrow) buttons to select **Video call** or **Voice call**.

Each call has an icon with it. The meaning of each icon is as follows:

Icons	Description
6R	Incoming call
65	Outgoing call
~	Missed call
φ. *	Unread voice message
σъ	Voice Message

Dialer 😭

You can call mobiles and landlines from this screen.

Press the \triangle/∇ (arrow) buttons to select the **Dialer** tab. Press the $\triangleright/\triangle/\nabla$ (arrow) buttons to navigate this screen.



(Sample Image) SkypeTM dialer screen

Select the country or region first, and then enter the phone number with area code. You'll need a little SkypeTM Credit in your account to call mobiles or landlines using SkypeTM.

Emergency calls over SkypeTM are not supported.

AWARNING

Emergency calls over Skype[™] are not supported.

Settings 🌣

Press the \triangle/∇ to select the **Settings** tab and press the **OK** button.

The Settings page will appear.



(Sample Image) SkypeTM options screen.

You can change the following settings:

- User Profile Add or change your personal information e.g. birth date, country/ region or phone number.
- Change Password You can change your password by entering your existing password and new password twice.
- ❖ General Settings Select whether Skype[™] should automatically start when turning on the TV

Advanced features Using the Cloud Service TV features

- ❖ Audio Settings Adjust the speaker / ringtone volume manually. The volume of your speakers will be different on Skype[™] compared to your normal TV volume level. The speaker volume range is 0 -100% by 1 steps, and ringtone volume is 0 - 100% by 25 steps.
- Privacy Settings Set who you allow calls from, whether it's Anyone or People in my Contact list only.
- ❖ Blocked Contacts

 If you do not want someone to reach you, simply block them by entering their Skype™ Name or phone number from this menu. Successfully blocked contacts are displayed in this window.
- ❖ Call Settings
 If you're not signed into Skype[™], you can forward incoming calls to another phone number, Skype[™] name or choose to accept voice messages. However you'll need to have Skype[™] Credit to turn this feature on.
- ♦ About Skype Displays information about Skype™.

MediaShare (Videos, Music, and Photos)

MediaShare provides a simple graphic interface to quickly access and share videos, music, and image files across your home network and the other connected devices.

To access the MediaShare Service, press the **MEDIA SHARE** button on the remote or select the MediaShare tab from the Cloud Service TV Portal pages.

NOTE

- To use MediaShare please configure the network settings on your TV. For more information, see "Connecting to a home network" on page 45.
- Do not insert/remove USB device or SD card while in use.
- The SETUP button is not available while using the MediaShare feature.

MediaShare specifications

Devices:

- USB device: USB Mass Storage Class devices (MSC)
- SD, SDHC and SDXC memory card

Connected Media Server:
 Your computer (for example)
 SD slot/card reader

NOTE

- Connectivity is not guaranteed for all devices.
- Some functionality may be lost with a USB HUB connection.

Supported file system:

- FAT16 and FAT32 (USB device, SD and SDHC memory card)
- ❖ FAT16, FAT32 and exFAT (SDXC memory card)

NOTE

You must obtain any required permission from copyright owners to download or use copyrighted content. Toshiba cannot and does not grant such permission.

Basic operation

Using MediaShare with a USB or SD card

When Auto Start is enabled, you will be asked if you want to start the MediaShare whenever a USB device or SD card is inserted. If Auto Start is disabled (or if you want to connect to a media server on the network), you must manually start the MediaShare from the Cloud Service TV Portal pages or press the **MEDIA SHARE** buton on the remote control.

To change the Auto Start setting

- 1 Press the **SETUP** button.
- 2 Select Options > MediaShare Setup > USB/SD Card Auto Start and press the OK button.
- 3 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **On** or **Off**.

Auto Start

- 1 Insert a USB device into the USB port, or insert an SD card into the SD card slot. A prompt appears.
- 2 Press the ◀/► (arrow) buttons to select Yes, and then press the OK button.
- 3 Press the \triangle/∇ (arrow) buttons to select Videos, Music, or Photos, and then press the OK button.
- 4 To change the device, press the $\triangle/\nabla/\blacktriangleleft/\triangleright$ (arrow) buttons to select the devices on the screen, and then press the **OK** button.

Using the Cloud Service TV features

- 5 Press the ▲/▼ (arrow) buttons to select the device and then press the **OK** button.
- 6 Press the ▲/▼ (arrow) buttons to select OK and then press the OK button.

NOTE

If Auto Start is set to Off, you can start the MediaShare (Media Player) manually.

Manual Start

- 1 Insert a USB device into the USB port, or insert an SD card into the SD card slot.
- 2 Press the MEDIA SHARE button.
- To change the device, press the $\triangle/\nabla/\blacktriangleleft/\triangleright$ (arrow) buttons to select the devices on the screen, and then press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select the device and then press the OK button.
- 5 Press the ▲/▼ (arrow) buttons to select OK and then press the OK button.

To select a file in the list of contents

1 Press the $\triangle/\nabla/\blacktriangleleft/\triangleright$ (arrow) buttons to select a file or folder.

File.

Press the **OK** button to play or view.

Folder:

Press the **OK** button to move to the next layer, or press the **BACK** button to return to the previous layer.

Sort

- 1 Select the **Sort** and press the **OK** button.
- 2 Press the ▲/▼ (arrow) buttons to select the sorting rule (File Name, New or Old) and press the OK button.
- 3 Select **OK** and press the **OK** button.

NOTE

Sorting may take a little time.

To close the MediaShare

- 1 Press the **EXIT** button.
- 2 Press the ◀/► (arrow) buttons to select Yes and then press the OK button.

The TV will return to the last-viewed channel or video input.

Using MediaShare with a Media Server

You need to configure a home network before using this feature, see "Setting up the Network" on page 125.

- Press the MEDIA SHARE button.
- 2 To change the device press the $\triangle/\nabla/\blacktriangleleft/\triangleright$ (arrow) buttons to select the **Device Name** button on the screen, and then press the **OK** button.
- 3 Press the ▲/▼ (arrow) buttons to select the device and then press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select OK and then press the OK button.

To select a file in the list of contents

1 Press the $\triangle/\nabla/\triangle$ (arrow) buttons to select a file or folder.

File:

Press the **OK** button to play or view.

Folder:

Press the **OK** button to move to the next layer, or press the **BACK** button to return to the previous layer.

Sort

- 1 Select the **Sort** and press the **OK** button.
- 2 Press the ▲/▼ (arrow) buttons to select the sorting rule (Title, New or Old) and press the OK button.
- 3 Select **OK** and press the **OK** button.

NOTE

- Sorting may take a little time.
- Depending on the Media server, this function may not be usable.

To close the MediaShare

- 1 Press the **EXIT** button.
- 2 Press the ◄/► (arrow) buttons to select Yes and then press the OK button.

The TV will return to the last-viewed channel or video input.

To display the device information

- Press the QUICK button to open the Quick menu in list mode or Multi View mode.
- 2 Press the \triangle/∇ (arrow) buttons to select **Device Information**.

Viewing movie files

Basic Playback

- 1 Select a file, see "To select a file in the list of contents" on page 154.
- 2 Press the **OK** button or **PLAY** button to begin playback.

NOTE

- Depending on the file size, it may take some time to start playback.
- Depending on the images, the 3D function may turn on when the 3D button is pressed. Refer to "Using 3D functions" on page 73 for information about operation and settings.
- 3 Press the STOP button to stop playback.
 The screen returns to the list.
 If playback finishes before the STOP button is pressed, the screen returns to the list

NOTE

When the repeat mode is set to All, the next file will start playing automatically.

Resume Playback

You can resume playback from where it was last stopped.

Press the STOP button while playing the movie to memorize the stopped position.

If the same file is selected and played, playback will resume from the last stopped position.

NOTE

- If you play different content or exit MediaShare, the memorized stopped position will be deleted.
- This function may not be available depending on the content.

To pause playback

- Press the PAUSE button during playback.
- ❖ To resume normal playback, press the **PLAY** button.

NOTE

The PAUSE button or operations during Pause may not be functional depending on content or media server.

To locate a specific file

- Press the Skip Reverse or Skip Forward button repeatedly to access the desired file.
 - ♦ (◄): Playback starts from the beginning of the current file or previous file.
 - ♦ (►►): To locate subsequent files.

To play in fast reverse or fast forward directions

Press the ◀◀ or ▶▶ button during playback. Each time you press the ◀◀ or ▶▶ button, the playback speed will change.

NOTE

These features may not be operable depending on the content or media server.

To set the repeat mode

- 1 Press the **QUICK** button.
- 2 Press the ▲/▼ (arrow) buttons to select **Repeat**. The current repeat setting appears.
- 3 Press the $\triangleleft/\triangleright$ (arrow) buttons to select **Off**, **All**, or 1.
- 4 Press the BACK button.
 The setting is effective until the TV is turned off.

Mode:	Description:
Off	The content is played back only once
All	All contents in the same folder are repeatedly played back
1	The same content is repeatedly played back

To select a movie from Play List (except for Media Renderer function)

While playing a movie, you can select a different movie from the Play List.

- 1 Press the **QUICK** button to open the Quick Menu.
- Press the ▲/▼ (arrow) buttons to select Play List and press the OK button.
 The Movie List will appear.
- 3 Press the \triangle/∇ (arrow) buttons to select a file name.

To display the file status information

1 Press the **INFO** button during playback.
The information will be displayed at the bottom of the screen.

2 Press the **INFO** button again to hide the information.

NOTE

The information may not correctly display depending on the content or media server.

To register your TV to a DivX® account:

This TV allows you to play back files purchased or rented from DivX[®] Video-On Demand (VOD) services. When you purchase or rent DivX[®] VOD files on the internet, you will be asked to enter a registration code.

- 1 Press the **SETUP** button.
- 2 Select **Options** > **MediaShare Setup** > **DivX**® **VOD** and press the **OK** button.
- 3 Press the $\blacktriangle/\blacktriangledown$ (arrow) buttons to select **DivX**[®] **VOD Registration**, and then press the **OK** button.
- 4 The **DivX**® **VOD** window will appear and you will see the registration code. For details on registration, please visit the DivX® website at http://vod.divx.com
- 5 Copy the activation file to a memory device and play it on the TV.

To unregister your device:

- 1 Press the **SETUP** button
- 2 Select **Options** > **MediaShare Setup** > **DivX**® **VOD** and press the **OK** button.
- 3 Press the ▲/▼ (arrow) buttons to select **DivX**[®] **VOD Deregistration**, and then press the **OK** button.
- 4 A confirmation message will appear. Select **Yes** and press the **OK** button.
- 5 The **DivX**® **VOD** window will appear and you will see the deregistration code. For details on registration, please visit the DivX® website at http://vod.divx.com

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device

must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified $^{\otimes}$ to play DivX $^{\otimes}$ and DivX Plus $^{\otimes}$ HD (H.264/MKV) video up to 1080p HD including premium content.

To playback DivX Plus® HD content:

- ❖ To play in fast reverse or fast forward directions, press the ◄ or ► button during playback. Each time you press the ◄ or ► button, the playback speed will change.
- If the content contains no chapter, this TV generates original chapter point in 10% increments for 10 chapters in total, that are accessible by using the Number buttons on the remote control.

During playback, press the button to skip to the beginning of the next chapter. When the button is pressed twice in succession, it will repeat two times of above. If the button is pressed at the last chapter, the confirmation message will appear. If Yes is selected, playback will skip to the beginning of the next content.

When the button is pressed twice in succession, it will skip to the beginning of the previous chapter. If the button is pressed twice continuously at the first chapter, playback of the current content will stop and the confirmation message will appear. If Yes is selected, playback will skip to the beginning of the previous content.

❖ Press the ▲ (arrow) button to skip to the beginning of the previous content.

Press the ∇ (arrow) button to skip to the beginning of the next content.

The Number button is used for direct jump.

For example: If you press the 3 button and then press the **OK** button, playback will jump to the beginning of 3rd chapter.

NOTE

- Depending on the content data will not be operated.
- ◆ The playback speed (◄◄/►►) may not change depending on the stream.

Using Multi Title and Alternative Timelines Multi Title

DivX Plus® HD files may contain up to 100 titles.

You can change the title (It contains same video file) by pressing the **RED** button.

When the **RED** button is pressed, it will display the title change window at the bottom on the screen (same as Subtitle or Audio change window).

The title is changed cyclically each time the **RED** button is pressed. Playback starts from the beginning of the title, which is selected by the \blacktriangle or \blacktriangledown (arrow) buttons.

ightharpoonup Pressing the ightharpoonup (arrow) buttons also changes the multi title.

NOTE

Depending on the content data will not be operated.

File specifications:

USB/SD card use:

- File format: MPEG2 PS, MPEG2 TS, MPEG-2 VOB, AVI, MOV, MP4, ASF, DivX, Xvid, MKV, Flash Video (FLV1), 3GPP, Motion JPEG
- Video: MPEG2, H.264, MPEG-4 part2, DivX, Xvid, VC-1(WMV9), RealVideo 8,9,10, Sorenson H.263(FLV1), JPEG
- Audio: MPEG1-Layer2/MPEG1-Layer3/Dolby® Digital (AC3)/ LPCM, AAC, WMA7/8/9, ADPCM
- **♦ Maximum number of files:** 1000 per folder
- Maximum video resolution: 640x480(Motion JPEG), 1920 x 1080(other)
- Include SD card: SD, SDHC and SDXC are supported.
 SD: 128MB-2GB / SDHC: 4GB-32GB / SDXC: 32GB-2TB
 Speed/Class: 2,4,6,10
 File system: FAT 12, FAT16, FAT32, NTFS and exFAT

Content on a connected Media Server:

- **♦ File format:** MPEG2 PS, MPEG2 TS, MP4(Low resolution)
- ❖ Video: MPEG2(PS), H.264
- ❖ Audio: LPCM/MPEG1-Layer2/MPEG2-Layer2/Dolby Digital (AC3)/AAC
- **♦ Maximum number of files:** 1000 per folder
- **♦ Maximum video resolution:** 1920 x 1080

NOTE

It may not be possible to use certain playback or display some files. In some cases certain files and servers may not support playback features, such as pause.

Playing music files

Basic Playback

1 Select a file, see "To select a file in the list of contents" on page 154. Press the **OK** button or **PLAY** button to begin playback.

NOTE

Depending on the file size, it may take some time to start playback.

2 Press the **STOP** button to stop playback.

The screen returns to the list.

If playback finishes before the **STOP** button is pressed, the screen returns to the list.

To pause playback

- 1 Press the **PAUSE** button during playback.
- **2** To resume normal playback, press the **PLAY** button.

NOTE

The **PAUSE** button or operations during Pause may not be functional depending on content or media server. Certain processes may take some time to complete.

To locate a specific file

- Press the SKIP REVERSE or SKIP FORWARD button repeatedly to access the desired file.
 - ♦ (◄): Playback starts from the beginning of the current file or previous file.
 - ♦ (►►): To locate subsequent files.

To play in fast reverse or fast forward directions

Press the ◀◀ or ▶▶ button during playback. Each time you press the ◀◀ or ▶▶ button, the playback speed will change.

NOTE

These features may not be operable depending on the content or media server.

To set the repeat mode

- 1 Press the **QUICK** button.
- Press the ▲/▼ (arrow) buttons to select the Repeat. The current repeat setting appears.
- 3 Press the $\triangleleft/\triangleright$ (arrow) buttons to select **Off**, **All**, or 1.
- 4 Press the **BACK** button.

 The setting is effective until the TV is turned off.

Mode:	Description:
Off	The content is played back only once
All	All contents in the same folder are repeatedly played back
1	The same content is repeatedly played back

To select a music from Play List (except for Media Renderer function)

While playing a music file, you can select a different music file from the Play List.

- 1 Press the **QUICK** button to open the Quick Menu.
- 2 Press the ▲/▼ (arrow) buttons to select Play List and press the OK button.

The Music List will appear.

3 Press the \triangle/∇ (arrow) buttons to select a file name.

To display the file status information:

- 1 Press the **INFO** button during playback. The information appears at the bottom of the screen.
- 2 Press the **INFO** button again to hide the information.

NOTE

The information may not correctly display depending on the content or media server.

File specifications:

USB/SD card use:

- **❖ File format:** MP3, MP4 (AAC), WMA7/8/9, WAV(LPCM)
- Sampling frequency: 32 kHz, 44.1 kHz, 48 kHz
- ❖ **Bit rate:** From 32 to 320 kbps
- **❖ Maximum number of files:** 1000 per folder

Content on a connected Media Server:

- ❖ File format: MP3, MP4 (AAC), WMA9 std, LPCM
- Sampling frequency: 32 kHz, 44.1 kHz, 48 kHz
- ❖ **Bit rate:** From 32 to 320 kbps
- **❖ Maximum number of files:** 1000 per folder

NOTE

It may not be possible to use certain playback features or display some files. In some cases certain files and servers may not support playback features, such as fast-forward.

Viewing photo files

Multi View mode

This view mode allows you to search for photos in a grid format.

These pictures are displayed using thumbnail data in each image file.

- 1 Press the ▲/▼/◄/► (arrow) buttons to move the highlight by one window.
 - If all of the photos will not fit in one screen, when pressing the \triangle (arrow) button at the top thumbnail, the screen will scroll up one by one. Similarly, when pressing the \blacktriangledown (arrow) button at the bottom thumbnail, the screen will scroll down one by one.
- When you select a folder, press the **OK** button to move to the next layer.
 - Press the **BACK** button to move back to the previous layer.
- 3 Press the OK button to view the selected photo in Single View mode.

NOTE

- Displaying thumbnail data may take time.
- In order to use the ▲/▼ (arrow) buttons to scroll the screen, there must be enough content to take up two screens.

Single View mode

In this view mode, only files located in the selected directory are displayed. When moving from Multi View mode to Single View mode, the currently selected photo appears.

- On Multi view mode, press the $\triangle/\nabla/\blacktriangleleft/\triangleright$ (arrow) buttons to select a file, and then press the **OK** button.
- 2 Press the $\blacktriangleleft / \triangleright$ (arrow) buttons to view the next or previous file.

NOTE

Single view mode is changed to Multi View mode when the **BACK** button is pressed.

Slide Show mode

This view allows you to watch a slide show of the photos. In this mode, only files located in the selected directory appear.

- 1 To switch to Slide Show mode, press the **OK** button while in Single View mode.
 - To return to Single View mode, press the **OK** button again.
- 2 Press the $\blacktriangleleft/\triangleright$ (arrow) buttons to view the next or previous file.

Mode settings

- 1 Press the QUICK button to open the Quick menu while in Single View mode or Slide Show mode.
- 2 Press the ▲/▼ (arrow) buttons to select the item (Interval Time or Repeat).
- 3 Press the $\blacktriangleleft/\triangleright$ (arrow) buttons to adjust the setting.
- 4 Press the **BACK** button to return to Single View mode or Slide Show mode.

Mode:	Description:
Interval Time	Sets a time interval at which to view photos
Repeat	Displays photos in the same directory repeatedly (On/Off)

To set Background Music

- 1 Press the **QUICK** button to open the Quick Menu while in the Slide Show mode or Single View mode.
- 2 Select **Background Music** and press the **OK** button.
- 3 Press the ▲/▼ (arrow) buttons to select **On**. The music file in the same folder as the displayed photo will start playing.

NOTE

- ♦ When the music file repeat mode is set to **All**, all the music files in the same folder as the photo will be played repeatedly.
- To stop music file playback, select Off in Background Music

Rotate the image

While viewing the image in Single View mode or Slide Show mode, press the △/▼ (arrow) buttons to rotate the image 90 degrees.

To select a photo from Play List (except for Media Renderer function)

While in the Single View mode or Slide Show mode, you can select a different photo from the Play List.

- 1 Press the QUICK button to open the Quick Menu from Single View mode or Slide Show mode.
- 2 Press the ▲/▼ (arrow) buttons to select Play List and press the OK button.
 - The Photo List will appear.
- 3 Press the \triangle/∇ (arrow) buttons to select a file name.

Display file status information

- 1 Press the **INFO** button.

 The information appears at the bottom of the screen.
- 2 Press the **INFO** button again to hide the information.

NOTE

The information may not correctly display depending on the content or media server. Certain processes may take some time to complete.

File specifications:

USB/SD card use:

- **♦ Data compatibility:** JPEG Exif ver 2.2
- File format: JPEG
- **Maximum viewable resolution:** 12000 × 9000 (JPEG:Base-line), 1024 × 768 (JPEG:Progressive)
- **❖ Maximum number of files:** 1000 per folder

Content on a connected Media:

- **❖ Data compatibility:** JPEG Exif ver 2.2
- **❖** File format: JPEG
- **♦ Maximum photo resolution:** 4096 x 4096
- **Maximum number of files:** 1000 per folder.

Search

To search for content,

- 1 Select the search.
- 2 Enter in keyword and the search will search for:
 - Media Server

Using the Cloud Service TV features

Videos; Title name

Music; Title name/Artist name/ Album name

Photos; Title name

USB/SD card

 
Videos/Music/Photos; File name

NOTE Folders are not subject to the search function.

- 3 The retrieval result is displayed.
- 4 Select one of the search results.
- 5 The selected content will play.

NOTE The search retrieval stops when content is being played.

The results screen shows different categories of media; Videos, Music and Photos. Select the ▼ below a category and press the OK button to display results only for that category of media on the screen.



 \diamond To return to the previous display, select \triangle and press the **OK** button.

Network Device Setup

In order to set the access the External Control Setup, Media Renderer Setup, or Device Name Setup, you must use the Network Device Setup menu.

External Control Setup

- 1 Press the **SETUP** button.
- 2 Select Network > Network Device Setup > External Control Setup and press the OK button.
- 3 Use the ▲/▼ (arrow) buttons to select and set Enable Control to On or Off.

To access the Home Control Profile:

- 1 Press the **SETUP** button
- 2 Select Network > Network Device Setup > External Control Setup and press the OK button.
- 3 Use the ▲/▼ (arrow) buttons to select and set Enable Control to On or Off.

- 4 Use the ▲/▼ (arrow) buttons to select **Home Control Profile** and press the **OK** button.
 - The Home Control Profile window will appear.
- 5 Use the ▲/▼/◄/▶ (arrow) buttons to navigate to the User Name or Password field. Input the user name and password using the Software Keyboard or Wireless QWERTY keyboard.
- For more information, see "Using the software keyboard" on page 133.

NOTE

Only the 0-9 and capital/lowercase A-Z characters may be used for the user name and password.

Setting up the Media Renderer feature

The TV can be configured as a Media Renderer. When operating as a Media Renderer, the TV displays content provided by mobile devices or PCs. The selection of the media is done by the media controller.

The TV can play photo, movie, or audio files when operating as a Media Renderer.

- 1 Press the **SETUP** button.
- 2 Select Network > Network Device Setup > Media Renderer and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select **On** or **Off**, and then press the **OK** button.

Device Name setup

The device name as a Media Renderer can be changed.

- 1 Press the **SETUP** button.
- 2 Select Network > Network Device Setup > Device Name Setup and press the OK button.
- 3 Select the **Device Name** field. Press the **OK** button. The Software Keyboard screen appears.
- 4 Input the device name by using the Software Keyboard. To save your setting, press the **GREEN** button.
- 5 Select **Done** Press the **OK** button

NOTE

The maximum number of characters allowed for the device name is 15. Only 0-9, A - Z (upper case only), "-" can be used in the device name.

Chapter 9

Cloud Service TV Companion Apps

Using Apps on a Tablet or Smart phone

Toshiba provides apps for tablets and smart phones. The apps will vary by country and availability may change in the future with respect to current apps.

NOTE

Apps will vary by country and availability may change in the future on current apps.

These apps are available for compatible Toshiba equipment using compatible tablets and smart phones powered by AndroidTM or iOS. You can download these apps through the Google PlayTM or the iTunes Store. In order to use these apps, you must configure the settings through the Apps Control Profile.

NOTE

Third party Internet services are not provided by Toshiba, may change or be discontinued at any time, and may be subject to Internet service provider restrictions. Toshiba makes no warranties, representations, or assurances about the content, availability, or functionality of thirdparty content or services. Use of third-party Internet services may require the creation of a separate account through a computer with Internet access and/or payment of one-time and/or recurring charges and membership. Not all third-party services may be available on or compatible with this product. In order to experience the full suggested capabilities of this product, fully-compatible devices may be required.

- Apps can only be used when your TV and your tablet or smart phone are connected to the Internet.
- Some app features may require the TV and smart phone/tablet to be on the same home network connection.
- Starting and operation of this service may take several minutes.
- Software updates may be needed in order to use this service.
- In order to experience the full suggested capabilities of this product, fully-compatible devices may be required.
- Certain features may not be available in all countries.
- Companion Apps available through the Cloud may be changed or removed at any time. Not all operating system Apps may be compatible with the Cloud. Services depicted in this document and provided through the Cloud may not be available in your region and may not be available to you. Please check your individual device for app compatibility.
- As soon as the application is deployed, this feature can be used.

Apps Control Profile

To select the Apps Control Profile

- 1 Press the **SETUP** button.
- 2 Select Network > Network Device Setup > External Control Setup and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select and set Apps Control Profile and press the OK button.
 The Apps Control Profile window will appear.
- 4 Press the ▲/▼ (arrow) buttons to select **Device Registration Setup** and press the **OK** button.
 - The Device Registration Setup window will appear.
- 5 Use the \triangle/∇ (arrow) buttons to select the **Companion Device ID**.
- 6 Select the Cancel, All, or Delete buttons.

NOTE

- If the maximum number of registered devices (20) is exceeded, no additional devices can be registered. Delete unnecessary devices before registering a new device.
- When re-registering a device which has been deleted from the list, pairing must be carried out again.

To enable the New Device Detection:

- 1 Press the **SETUP** button.
- 2 Select Network > Network Device Setup > External Control Setup and press the OK button.
- 3 Press the ▲/▼ (arrow) buttons to select and set Apps Control Profile and press the OK button.
 The Apps Control Profile window will appear.
- 4 Press the **△**/**▼** (arrow) buttons to select **New Device Detection** and press the **OK** button.
- 5 Use the **◄/▶** (arrow) buttons to select **Enable** or **Disable**.
- 6 Press the **OK** button to submit.

Pairing

To use Apps, it is necessary to connect a compatible tablet or smart phone and this TV to your home network, and carry out pairing (using a 4 or 8 digit password to authenticate the device).

Refer to the Apps manual for more details about pairing.

NOTE

- Pairing with external devices cannot be carried out when the TV is connected to an unencrypted wireless LAN access point. Activate the encryption settings for the wireless LAN access point before carrying out Pairing.
- When the Enable Control is not set to ON in External Control Setup, Apps functions including Pairing cannot be used.

Chapter 10

Troubleshooting

General troubleshooting

Before calling a service technician, review this chapter or visit the Toshiba Technical Support Website at "www.toshiba.ca/support/ceg" for possible causes/solutions for the problem you are experiencing.

Before you begin to troubleshoot any problem, first unplug the TV from the AC wall outlet, wait approximately one minute, and then plug the TV back into the AC wall outlet. If the problem still exists attempt to troubleshoot the problem.

Black box on screen.

The closed caption feature is set to one of the Text modes (T1, T2, T3, or T4). Set the closed caption feature to Off, see "Using closed captions" on page 86.

TV stops responding to controls.

If the TV stops responding to the buttons on the remote control or TV control panel and you cannot turn off the TV, unplug the TV from the AC wall outlet and plug it back in.

If you cause a static discharge when touching the TV and the TV fails to function, simply unplug the TV from the AC outlet and plug it back in. The TV should return to normal operation.

Other problems.

If your TV's problem is not addressed in this Troubleshooting chapter or the recommended solution has not worked, use the Reset Factory Defaults procedure, see "Resetting to Factory Defaults" on page 101.

TV will not turn on.

Check the AC wall outlet by trying another device in the AC wall outlet.

Ensure the power cord is plugged in properly, and then press the **POWER** button.

Replace the batteries in the remote control, see "Installing batteries" on page 50.

Try the control panel buttons on the TV.

3D problems.

Watch the TV at a proper viewing angle and distance, see "Safety Precautions for 3D glasses" on page 7.

If 3D images are not correct, the 3D format may be different.

Change the 3D format in the Quick menu, see "Selecting 3D format from the Quick menu in 3D mode" on page 78.

The left and right sides of 3D images may be reversed. Switch the left and right, see "Switching left and right images" on page 84.

If 2D images are not correct, the 2D format may be different.

Change the 2D format in the Quick menu, see "Selecting 2D format from the Quick menu in 2D mode" on page 80.

Picture problems

General picture problems.

Check the antenna/cable connections, see "Connecting Your TV" on page 29.

Press **INPUT** on the remote control or on the TV and select a valid video input source, see "Selecting the video input to view" on page 85. If you have no picture after selecting a Input source, check the device connected to that input for proper operation. For device connection details, see "Connecting Your TV" on page 29.

Antenna reception may be poor. Use a highly directional outdoor antenna (if applicable).

The station may be having broadcast difficulties. Try another channel.

Adjust the picture quality, see "Using the advanced picture settings features" on page 110.

If Resolution+ does not achieve a sharper picture, change the Sharpness value to increase the sharpness level, see "Resolution+" on page 110.

Video Input Selection problems.

If the Input Selection window does not appear when you press **INPUT** on the remote control or the TV control panel, press **INPUT** a second time. The TV displays the next video input source and the Input Selection screen.

Cannot view external signals.

If you cannot view signals from external devices connected to VIDEO 1, VIDEO 2, ColorStream HD, HDMI 1, HDMI 2, HDMI 3, HDMI 4 or PC, ensure that the Input Lock is set to Off, see "Locking video inputs" on page 90.

Poor display color or no color.

Check for proper hookup connections between your devices.

The station may be having broadcast difficulties. Try another channel.

Adjust the Tint and/or Color, see "ColorMasterTM" on page 113.

Poor composite picture.

If the TV is connected to an external A/V device (e.g. DVD player, video game system, set-top box, etc.) try using a ColorStream or HDMITM video connection instead

Picture and sound are out of sync.

As with all products that contain a digital display, this may occur in rare instances, when viewing certain content (e.g. television broadcasts, video games, DVDs). The cause may include, without limitation, video processing within the TV, video processing in an attached gaming system, and video processing or different compression rates used by broadcasters in their programming.

Try the following:

- ❖ If the TV is connected to an A/V receiver that has a programmable audio delay feature, use this feature to help synchronize the sound to the picture.
- If the problem occurs only on certain TV channels, inform your local broadcast, cable, or satellite provider.
- ❖ The settings of PC/HDMI 2 Audio may be not correct. Check the connections, see "Connecting a computer" on page 43.
- Turn off and unplug the TV from the AC wall outlet for a few seconds and plug it back in.

Sound problems

Check the antenna/cable connections, see "Connecting a digital audio system" on page 38.

The station may be having broadcast difficulties. Try another channel.

The sound may be muted. Press the **VOL** (+ -) buttons or **MUTE** button.

If you are connected to a computer using either the PC IN terminal or an HDMI[™] terminal, make sure that the Rear Shared Audio setting is properly set, see "Connecting a digital audio system" on page 38.

Remote control problems

Remove all obstructions between the remote control and the TV.

Replace the remote control's batteries, see "Installing batteries" on page 50.

Your TV's remote control may not operate certain features on your external device. Refer to the owner's manual for your other device to determine its available features. If your TV remote control does not operate a specific feature on another device, use the remote control that came with the device, see "Learning about the remote control" on page 53.

If the TV still does not act as expected, perform the Reset Factory Defaults procedure, see "Resetting to Factory Defaults" on page 101.

Channel tuning problems

Ensure that the remote control is set to the correct device mode, see "Learning about the remote control" on page 53.

The Auto Tuning feature may have erased the channel from memory. To add the channel to the channel memory, see "Manual Tuning" on page 70.

If you cannot tune digital channels, check the antenna configuration, see "Initial setup" on page 55. If the problem persists, clear all channels from the channel list and reprogram channels into memory, see "Storing channels in memory (optional)" on page 69. For additional information, see "TV stops responding to controls." on page 171. If the problem persists, use the Reset Factory Defaults procedure, see "Resetting to Factory Defaults" on page 101.

Closed caption problems

If the program or video you have selected is not closed captioned, no captions appear on the screen.

If text is not available, a black rectangle may appear. If this happens, turn off the closed caption feature, see "Using closed captions" on page 86.

A closed caption signal may not display correctly under the following circumstances:

- The recording is dubbed
- The signal reception is weak
- The signal reception is nonstandard

For additional information, see "Using closed captions" on page 86.

HDMI[™] **CEC** Control operation

 $\mathrm{HDMI}^{\mathsf{TM}}$ CEC Control feature is available for Toshiba $\mathrm{HDMI^{\mathsf{TM}}}$ CEC compatible devices.

$\mathbf{HDMI}^{^{\mathsf{TM}}}$ cables.

Ensure that HDMI[™] cables with the (H□III) Logo are used.

The HDMI[™] CEC operation is not working correctly.

When the connected $HDMI^{\mathsf{TM}}$ CEC device does not work correctly after you have changed the device's settings, turn off the TV and unplug the power cord. After approximately one minute, plug the power cord in and turn on the TV. You may also try using a different $HDMI^{\mathsf{TM}}$ cable.

If several devices are connected, the $HDMI^{TM}$ CEC Control feature may not operate properly. Make sure the CEC function is set to \mathbf{On} in the TV settings and that the controlling device(s) you support CEC.

Read the instruction manual of the connected $HDMI^{TM}$ CEC device.

HDMI[™] problems

HDMI[™] cables.

Ensure that HDMI[™] cables with the (H□III) Logo are used, see "Connecting an HDMI[™] or DVI device to the HDMI[™] input" on page 39.

Network problems

Cannot connect to the Internet.

Check the modem and its incoming cable/telephone connections, see "Connecting to a home network" on page 45.

Confirm your modem's operation.

Ensure that your IP address is set up correctly, see "IP Address Setup" on page 130.

No network connection.

If using a wired network connection, check to ensure that the LAN cables are connected properly, see "Connecting the TV to a home network with an Internet connection - wired" on page 47.

Ensure that the modem and router power cords are plugged in and the devices are operating properly.

Ensure that your IP address is set up correctly, see "IP Address Setup" on page 130.

Check to ensure proper operation of other network connected devices.

Network Setup fails (Auto).

Check to ensure that the LAN cables are connected properly, see "Connecting the TV to a home network with an Internet connection - wired" on page 47.

DHCP is not enabled on the router, or no router is present. Refer to your router's documentation for instructions on enabling DHCP. If your router does not support DHCP, you must manually set up the IP address.

Internet service is not available. Check your cable/DSL modem or contact your ISP for Internet service issues.

Network Setup fails (Manual).

Ensure that the TV IP address is not the same as any other device on the network

❖ Example: IP address 192.168.0.100 and IP address 192.168.0.101 are different addresses on the same network.

Make sure the TV IP address is on the same subnet as the networked computer.

❖ Example of proper setup: The computer has the IP address 192.168.0.100 with the Subnet mask 255.255.255.0, the TV has the IP address 192.168.0.101 with the Subnet mask 255.255.255.0; both are on the same subnet

❖ Example of improper setup: The computer has the IP address 192.168.1.100 with the Subnet mask 255.255.255.0, the TV has the IP address 192.168.0.101 with the Subnet mask 255.255.253.0; they are on different subnets.

Unstable network connection.

When using a wired home network connection, unplug the LAN cables, and then reconnect them.

When using a wireless home network connection:

- Reboot the router:
 - 1 Remove AC power from the router and the television for approximately one minute.
 - 2 Reconnect AC power to the router.
 - **3** Reconnect AC power to the television and turn it On.
 - 4 After approximately two minutes, check connection stability.
- Connect with LAN cables, if possible, and check connection stability.
- Repeat the wireless network setup procedure and check connection stability.

The media server name is not displayed.

The LAN cables, if used, are not connected properly, see "Connecting the TV to a home network with an Internet connection - wired" on page 47.

The WLAN, if used, is not configured properly.

The network setup on the Server is incorrect. Make sure both the media server and TV are using the same network type (DHCP/manual) and have compatible network settings.

Too many devices are connected. You cannot connect more than 32 sharing devices at one time.

The media server is not turned On.

The "server" is not a media server device.

Check the firewall and streaming settings on the media server.

Wireless network problems

Check that the router/AP (Access point) power is On.

After starting wireless network setup, confirm that the network is configured properly by performing the network connection test, see "Network Connection Test" on page 132.

Check the router/AP's connection status.

If the router/AP does not support PBC or WPS, Easy Setup (PBC) will not work even if the push-button is pressed, see "Wireless Setup" on page 125.

If the available router/AP list is not displayed in Easy Setup (PBC) or Assisted Setup, the power of the router/AP may be Off. Check that it is On, and then try restarting the scan for available routers/APs, see "Easy Setup using PBC (Push button configuration)" on page 126.

Refer to the router/AP's instruction manual.

MediaShare problems

Ensure that the devices (TV and Server) are connected correctly.

Incorrect functionality may occur when using a USB HUB connection.

Photo files that were processed and edited using the computer's application software may not be viewable.

When viewing content that supports two or more formats the TV may select one format automatically.

Copyright protected content stored on the media server may not be playable on the TV.

Content playback stability may be affected by heavy network traffic.

Content originally recorded on a computer may not play correctly.

Set the media sharing of the media server to the correct settings, according to the media server instruction manual.

Confirm that the contents of either the media server, the USB storage device, or the SD card are in formats that are supported by this TV, see "MediaShare specifications" on page 152.

Depending on the media server, access may be limited by the MAC address. Set the server according to the media server's instruction manual. This TV's MAC Address can be confirmed in the Network Setup portion of the User Menu, see "MAC Address" on page 132.

For Connected MediaShare

Depending on the media server, it may take time to display the list.

Media Renderer

Depending on the state of this TV, the Media Controller may not be able to control a Media Renderer playback.

If Media Renderer playback starts regardless of the user's intention, set Media Renderer to Off.

Cloud Service TV

Cloud Service TV Freezes on the TV screen.

Power off or unplug the Television to reset the TV and turn the TV back on. Then try the Cloud Service TV again

Pause or delay while navigating Cloud Service TV features and apps.

Check the Internet connection to the Cloud Service TV for speed and stability

Cloud Service TV wireless keyboard becomes unresponsive

Check wireless keyboard batteries

Ensure the power switch on the keyboard is turned ON

Light Indicator

The Power light on the front of the TV indicates the TV's status, as described below.

Power On/Standby light

Green:

❖ The TV is On and operating properly.

Red:

The power is Off or in Standby.

If the problem persists after trying the solutions

In the U.S., visit Toshiba Customer Support Center on the web at "support.toshiba.com" or call 800-631-3811.

From outside the United States, call (949) 583-3050.

In Canada, locate the nearest Toshiba authorized service depot. or Visit www.toshiba.ca, click "Home Entertainment," and then click "Support."

Appendix A

Specifications

NOTE

- This model complies with the specifications listed below.
- Designs and specifications are subject to change without notice.
- This model may not be compatible with features and/or specifications that may be added in the future.

Television system

NTSC standard	
ATSC standard	8VSB
Digital Cable	64 QAM, 256 QAM; in-the-clear, unencrypted

Channel coverage

VHF	2 through 13
UHF	14 through 69
	Mid band (A-8 through A-1, A through I)
Cable TV	Super band (J through W)
Cable I V	Hyper band (AA through ZZ, AAA, BBB)
	Ultra band (65 through 94, 100 through 135)

Power source

120 V AC, 60 Hz

Power consumption

58L9300UC	2.1 A (maximum current)
	0.2 W in Standby mode
65L9300UC	3.2 A (maximum current)
	0.2 W in Standby mode
84L9300UC	5.3 A (maximum current)
	0.2 W in Standby mode

Audio power

58L9300UC	10 W + 10 W
65L9300UC	10 W x 2 + 10 W x 2
84L9300UC	10 W x 2 + 10 W x 2

Speaker type

58L9300UC	3.5cm(1 2/5 inch) x 7.5cm(2 19/20 inch) x 2pcs
65L9300UC	3.5cm(1 2/5 inch) x 7.5cm(2 19/20 inch) x 4pcs
84L9300UC	3.5cm(1 2/5 inch) x 7.5cm(2 19/20 inch) x 4pcs

Video/audio terminals

Video/audio input

Video	1 V (p-p), 75 ohm, negative sync, NTSC.
Audio	200 mV (rms) (-20dBFS)

ColorStream® (component video) HD input

	Y: 1V (p-p), 75 ohm
	PR: 0.7V (p-p), 75 ohm
Video	PB: 0.7V (p-p), 75 ohm
	Suggested formats: 1080p (60Hz), 1080i (60Hz), 720p
	(60Hz), 480p, 480i
Audio	200 mV (rms) 22 k ohm or greater

HDMI[™] input

HDMI [™] compliant	
HDCP compliant	
Suggested formats	See table on page 185
	Dolby® Digital and 2-channel Linear-PCM; 32/44.1/48
	kHz sampling frequency; 16/20/24 bits per sample

Digital audio output

Optical type

PC input

15-Pin D-sub Analog RGB

Wireless connection

Standard	IEEE 802.11a/b/g/n/
Frequency Range	5.15-5.35 GHz, 5.47-5.725 GHz, 5.725-5.850 GHz, 2.400–2.473 GHz
Security	WEP 64/128, TKIP, AES, WPA/WPA2-PSK, WPS, None

Ethernet

IEEE 802.3.

USB

Universal Serial Bus Specification, Revison 1.1.

Universal Serial Bus Specification, Revison 2.0.

SD card

SD, SDHC and SDXC memory card

Dimensions with table stand

	Width 51.4" (1306 mm)
58L9300UC	Height 33.7" (857 mm)
	Depth 14.7" (374 mm)
65L9300UC	Width 57.6" (1463 mm)
	Height 37.0" (940 mm)
	Depth 14.7" (374 mm)
84L9300UC	Width 75.4" (1916 mm)
	Height 47.0" (1195 mm)
	Depth 17.7" (450 mm)

Weight (mass) with stand

58L9300UC	78.3 lbs (35.5 kg)
65L9300UC	108.0 lbs (49.0 kg)
84L9300UC	169.7 lbs (77.0 kg)

Operating conditions

Temperature	32° - 95° F (0° - 35° C)
Humidity	20 - 80% (no moisture condensation)

Supplied accessories

- Universal remote control (2x AAA batteries)
 - CT-90427
- Resource Guide
- Pedestal and hardware
- Pedestal Stand Assembly instructions
- Warranty information
- ❖ Wireless QWERTY keyboard with touchpad (2x AA batteries)
- IR blaster cable
- Toshiba 3D glasses
 - For 58L9300UC: FPT-AG03 (1x CR2032 battery) x 2
 - ❖ For 65L9300UC/84L9300UC: FPT-P100 x 4
- For 84L9300UC:
 - ❖ AC power cord
 - Ferrite core attachment
 - ❖ Ferrite Core Attachment document

NOTE

The Wireless QWERTY keyboard supplied with this TV is a standard U.S. layout keyboard. The accented characters for French and Spanish may not be available in certain cases.

Acceptable signal formats for PC IN, and HDMI[™], and 3D PC IN signal formats

NOTE

- The PC IN on this TV only accepts signal formats which are compliant with VESA-DMT as in the table below. Since some PCs input signals are different from the resolution and frequency described in the table below, the following problems may occur: incorrect display, false format detection, picture position failure, blur, or judder. In these cases, set the monitor output format on your computer to conform to any of the signals in the table below.
- ❖ The signals whose vertical frequency is 56 Hz, 70 Hz, 72 Hz, or 75 Hz are converted to a 60 Hz signal.
- When you connect a computer to this TV, it is recommended that you set the refresh rate of your computer to 60 Hz.
- The PC IN on this TV does not accept the Sync on Green, Composite Sync, and Interlace signals.

Format	Resolution	V. Frequency	H. Frequency	Pixel Clock Frequency	VESA Standard (DMT)
VGA	640 x 480	59.940/60 Hz	31.469/31.500 kHz	25.175/25.200 MHz	•
		72.809 Hz	37.861 kHz	31.500 MHz	•
		75.000 Hz	37.500 kHz	31.500 MHz	•
SVGA	800 x 600	56.250 Hz	35.156 kHz	36.000 MHz	•
		60.317 Hz	37.879 kHz	40.000 MHz	•
		72.188 Hz	48.077 kHz	50.000 MHz	•
		75.000 Hz	46.875 kHz	49.500 MHz	•
XGA	1024 x 768	60.004 Hz	48.363 kHz	65.000 MHz	•
		70.069 Hz	56.476 kHz	75.000 MHz	•
		75.029 Hz	60.023 kHz	78.750 MHz	•
WXGA	1280 x 768	59.995 Hz	47.396 kHz	68.250 MHz	•
		59.870 Hz	47.776 kHz	79.500 MHz	•
		74.893 Hz	60.289 kHz	102.250 MHz	•
	1360 x 768	60.015 Hz	47.712 kHz	85.500 MHz	•
SXGA	1280 x 1024	60.020 Hz	63.981 kHz	108.000 MHz	•
		75.025 Hz	79.976 kHz	135.000 MHz	•
WXGA1280	1280x800	59.810 Hz	49.702 kHz	83.500 MHz	•
		74.934 Hz	62.795 kHz	106.500 MHz	
WXGA+	1440x900	59.887 Hz	55.935 kHz	106.500 MHz	

HDMI[™] signal formats

NOTE

- The HDMI™ inputs on this TV only accept VGA, SVGA, XGA, WXGA, and SXGA signal formats which are compliant with VESA-DMT as in the table below. Since some computer, HDMI™, or DVI device input signals are different from the resolution and frequency described in the table below, the following problems may occur: incorrect display, false format detection, picture position failure, blur, or judder. In these cases, set the monitor output format on your computer, HDMI™, or DVI device to conform to any of the signals in the table below.
- The signals whose vertical frequency is 24 Hz, 56 Hz, 70 Hz, 72 Hz, or 75 Hz are converted to a 60 Hz signal.
- When you connect a computer to this TV, it is recommended that you set the refresh rate of your computer to 60 Hz.

Format	Resolution	V. Frequency	H. Frequency	Pixel Clock Frequency	VESA Standard (DMT)
VGA	640 x 480	59.940 Hz	31.469 kHz	25.175 MHz	•
		72.809 Hz	37.861 kHz	31.500 MHz	•
		75.000 Hz	37.500 kHz	31.500 MHz	•
SVGA	800 x 600	56.250 Hz	35.156 kHz	36.000 MHz	•
		60.317 Hz	37.879 kHz	40.000 MHz	•
		72.188 Hz	48.077 kHz	50.000 MHz	•
		75.000 Hz	46.875 kHz	49.500 MHz	•
XGA	1024 x 768	60.004 Hz	48.363 kHz	65.000 MHz	•
		70.069 Hz	56.476 kHz	75.000 MHz	•
		75.029 Hz	60.023 kHz	78.750 MHz	•
WXGA	1280 x 768	59.995 Hz	47.396 kHz	68.250 MHz	•
		59.870 Hz	47.776 kHz	79.500 MHz	•
		74.893 Hz	60.289 kHz	102.250 MHz	•
	1360 x 768	60.015 Hz	47.712 kHz	85.500 MHz	•
SXGA	1280 x 1024	60.020 Hz	63.981 kHz	108.000 MHz	•
		75.000 Hz	79.976 kHz	135.000 MHz	•
480i	720 x 480i	59.940/60 Hz	15.734/15.750 kHz	27.000/27.027 MHz	
480p	720 x 480p	59.940/60 Hz	31.469/31.500 kHz	27.000/27.027 MHz	
720p	1280 x 720p	59.940/60 Hz	44.955/45.000 kHz	74.176/74.250 MHz	
1080i	1920 x 1080i	59.940/60 Hz	33.716/33.750 kHz	74.176/74.250 MHz	
1080p	1920 x 1080p	23.976/24 Hz	26.973/27.000 kHz	74.176/74.250 MHz	
		29.970/30 Hz	33.720/33.750 kHz	74.176/74.250 MHz	
		59.940/60 Hz	67.433/67.500 kHz	148.352/148.500 MHz	

3D Signal formats*

Resolution	Aspect ratio	V. Frequency	H. Frequency	Pixel Clock Frequency	3D Structure		
720 x 480p	16:9	59.940/60 Hz	31.469/31.500 kHz	54.000/54.054 MHz	Side by Side (full)		
				27.000/27.027	Side by Side (half)		
				MHz	Top and Bottom		
1280 x 720p	16:9	59.940/60 Hz	90.0/89.91 kHz	148.352/148.500 MHz	Frame Packing		
			44.955/45.000 kHz	•	Side by Side (half)		
				MHz	Top and Bottom		
1920 x 1080i	16:9	59.940/60 Hz	33.716/33.750 kHz	74.176/74.250	Side by Side (half)		
				MHz	Top and Bottom		
1920 x 1080p	16:9	23.976/24 Hz	54/53.94 kHz	148.352/148.500 MHz	Frame Packing		
			26.973 kHz	74.176/74.250	Side by Side (half)		
				MHz	Top and Bottom		
		29.97/30 Hz	67.5/67.43 kHz	148.352/148.500 MHz	Frame Packing		
			33.716/33.75 kHz	74.176/74.250	Side by Side (half)		
				MHz	Top and Bottom		
		59.940/60 Hz	67.433/67.500 kHz	148.352/148.500	Side by Side (half)		
				MHz	Top and Bottom		

^{*}Some content may not be supported depending on the input source format.

4K Video Support formats

Resolution	Format	Compatible HDMI
3840 x 2160	24/30Hz (4:4:4/4:2:2)	HDMI1.4
4096 x 2160	24Hz (4:4:4/4:2:2)	HDMI1.4

Because "4K" is a new format that makes use of new technologies, certain compatibility and/or performance issues are possible. Currently, no "4K" video content or standards, including, but not limited to, broadcasting or streaming, exists for "4K" televisions in general. This TV may not be compatible with such content and/or standards, if and when developed. Certain HDMI formats or still images exceeding "4K" resolution may not be supported. May require purchase of additional external hardware, software and/or services. Toshiba makes no representation or warranties about any future "4K" content, standards or services.

^{*}In the 2D to 3D mode, the PC format resolution is only available at 60Hz.

^{*}The 3D function and 2D to 3D conversion function does not support all content depending on its input source format.

Operating the TV with combination buttons

You can directly operate the TV power, input, picture size, and picture mode by pressing a combination button while holding down a color button.

Full (picture size) Normal (picture size) Ruda FHD (picture size) MUTE 1/2 Mute On AutoView (picture mode) Dynamic (picture mode) Standard (picture mode) Movie (picture mode)	Button Color	Combination Button	Behavior/Mode
Input 1		INPUT	Power Off
RED 2 Input 2 3 Input 3 Input 4 5 Input 5 Input 6 7 Input 7 8 Input 8 Input 8 Input 9		POWER	Power On
Section Sect		1	Input 1
A		2	Input 2
FRED 5		3	Input 3
Solution of the state of the st	DED	4	Input 4
7 Input 7 8 Input 8 0 ANT/CABLE MUTE Mute On 1 Native (picture size) 2 4:3 (picture size) 3 TheaterWide 1 (picture size) 4 TheaterWide 2 (picture size) 5 TheaterWide 3 (picture size) 6 Full (picture size) 7 Normal (picture size) 8 Quad FHD (picture size) MUTE 1/2 Mute On 1 AutoView (picture mode) 2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) 4 Movie (picture mode) 5 - (picture mode) 7 Game (picture mode) 8 PC (picture mode)	עבט	5	Input 5
B Input 8 O ANT/CABLE MUTE Mute On I Native (picture size) 2 4:3 (picture size) 3 TheaterWide 1 (picture size) 4 TheaterWide 2 (picture size) 5 TheaterWide 3 (picture size) 6 Full (picture size) 7 Normal (picture size) 8 Quad FHD (picture size) MUTE 1/2 Mute On I AutoView (picture mode) 2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) YELLOW 5 - (picture mode) 6 Store (picture mode) 7 Game (picture mode) 8 PC (picture mode)		6	Input 6
MUTE Mute On 1 Native (picture size) 2 4:3 (picture size) 3 TheaterWide 1 (picture size) 4 TheaterWide 2 (picture size) 5 TheaterWide 3 (picture size) 6 Full (picture size) 7 Normal (picture size) 8 Quad FHD (picture size) MUTE 1/2 Mute On 1 AutoView (picture mode) 2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) YELLOW 5 - (picture mode) 7 Game (picture mode) 8 PC (picture mode)		7	Input 7
MUTE Mute On 1 Native (picture size) 2 4:3 (picture size) 3 TheaterWide 1 (picture size) 4 TheaterWide 2 (picture size) 5 TheaterWide 3 (picture size) 6 Full (picture size) 7 Normal (picture size) 8 Quad FHD (picture size) MUTE 1/2 Mute On 1 AutoView (picture mode) 2 Dynamic (picture mode) 2 Dynamic (picture mode) 4 Movie (picture mode) YELLOW 5 - (picture mode) 6 Store (picture mode) 7 Game (picture mode) 8 PC (picture mode)		8	Input 8
1 Native (picture size) 2 4:3 (picture size) 3 TheaterWide 1 (picture size) 4 TheaterWide 2 (picture size) 5 TheaterWide 3 (picture size) 6 Full (picture size) 7 Normal (picture size) 8 Quad FHD (picture size) MUTE 1/2 Mute On 1 AutoView (picture mode) 2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) YELLOW 5 - (picture mode) 7 Game (picture mode) 8 PC (picture mode)		0	ANT/CABLE
2		MUTE	Mute On
TheaterWide 1 (picture size) 4 TheaterWide 2 (picture size) 5 TheaterWide 3 (picture size) 6 Full (picture size) 7 Normal (picture size) 8 Quad FHD (picture size) MUTE 1/2 Mute On 1 AutoView (picture mode) 2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) YELLOW 5 - (picture mode) 6 Store (picture mode) 7 Game (picture mode) 8 PC (picture mode)		1	Native (picture size)
GREEN 5 TheaterWide 2 (picture size) 6 Full (picture size) 7 Normal (picture size) 8 Quad FHD (picture size) MUTE 1/2 Mute On 1 AutoView (picture mode) 2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) YELLOW 5 - (picture mode) 7 Game (picture mode) 8 PC (picture mode)			4:3 (picture size)
GREEN 5 TheaterWide 3 (picture size) 6 Full (picture size) 7 Normal (picture size) 8 Quad FHD (picture size) MUTE 1/2 Mute On 1 AutoView (picture mode) 2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) YELLOW 5 - (picture mode) 7 Game (picture mode) 8 PC (picture mode)		3	TheaterWide 1 (picture size)
Full (picture size) Normal (picture size) Ruda FHD (picture size) MUTE 1/2 Mute On 1 AutoView (picture mode) 2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) YELLOW 5 - (picture mode) 7 Game (picture mode) 8 PC (picture mode)		4	TheaterWide 2 (picture size)
7 Normal (picture size) 8 Quad FHD (picture size) MUTE 1/2 Mute On 1 AutoView (picture mode) 2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) 4 Movie (picture mode) 5 - (picture mode) 6 Store (picture mode) 7 Game (picture mode) 8 PC (picture mode)	GREEN	5	TheaterWide 3 (picture size)
8 Quad FHD (picture size) MUTE 1/2 Mute On 1 AutoView (picture mode) 2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) 5 - (picture mode) 6 Store (picture mode) 7 Game (picture mode) 8 PC (picture mode)		6	Full (picture size)
MUTE 1/2 Mute On 1 AutoView (picture mode) 2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) 5 - (picture mode) 6 Store (picture mode) 7 Game (picture mode) 8 PC (picture mode)		7	Normal (picture size)
AutoView (picture mode) Dynamic (picture mode) Standard (picture mode) Movie (picture mode) For the product of the picture mode) Store (picture mode) Game (picture mode) PC (picture mode)		8	Quad FHD (picture size)
2 Dynamic (picture mode) 3 Standard (picture mode) 4 Movie (picture mode) 5 - (picture mode) 6 Store (picture mode) 7 Game (picture mode) 8 PC (picture mode)		MUTE	1/2 Mute On
Standard (picture mode) 4 Movie (picture mode) 5 - (picture mode) 6 Store (picture mode) 7 Game (picture mode) 8 PC (picture mode)		1	AutoView (picture mode)
YELLOW 5 - (picture mode) 6 Store (picture mode) 7 Game (picture mode) 8 PC (picture mode)		2	Dynamic (picture mode)
YELLOW 5 - (picture mode) 6 Store (picture mode) 7 Game (picture mode) 8 PC (picture mode)		3	Standard (picture mode)
6 Store (picture mode) 7 Game (picture mode) 8 PC (picture mode)		4	Movie (picture mode)
7 Game (picture mode) 8 PC (picture mode)	YELLOW	5	- (picture mode)
8 PC (picture mode)			Store (picture mode)
		7	Game (picture mode)
MUTE Mute Off		8	PC (picture mode)
		MUTE	Mute Off

Appendix B

Wireless QWERTY keyboard with touchpad

- How to enter French or Spanish characters using the Wireless QWERTY keyboard with touchpad
 - For how to use the Wireless QWERTY keyboard with touchpad, refer to the User's Guide that comes with the keyboard.

Setting the keyboard layout

Before entering French or Spanish characters, configure the following setting on the TV:

- 1 Press the SETUP button.
- **2** Select **Options** > **USB Keyboard Layout**.
- 3 Press the **OK** button.
- 4 Press the ▲/▼ (arrow) buttons to select U.S. International Layout and press the OK button.
 - For how to enter characters, refer to the table below:

NOTE

The input characters may be different from the table below depending on the situation you are entering characters.

Printing\Simultaneous Key	normal	Shift	Right Alt(Alt Gr)	Shift + Right Alt
a and A	a or	A *1	á oi	: Á *1
b and B	b or	B *1		
c and C	c or	C *1	©	¢
d and D		D *1	Đ	ð
e and E	e or	E *1	é o	r É *1
f and F	f or	F *1		
g and G	g or	G *1		
h and H	h or	H *1		
i and I	i or	· I *1	í o	r Í *¹
j and J	j or	· J *1		
k and K	k or	K *1	œ o	r Œ *1
l and L	l or	L *1	Ø O	r Ø *1
m and M	m or	· M *1		μ
n and N	n or	N *1	ñ oi	ſ Ñ *¹
o and O	o or	O *1	Ó 01	r Ó *1
p and P	p or	· P *1	Ö Ol	r Ö *1
q and Q	q or	Q *1	ä oı	∴Ä * 1
r and R	r or	R *1		R
s and S	s or	S *1	В	§
t and T	t or	T *1	þo	r Þ *1
u and U	u or	U *1	ú o	ſÚ *¹
v and V	v or	V *1		
w and W	w or	W *1	å o	Å *1
x and X		X *1		
y and Y	y or	Y *1	ü oı	r Ü *1
z and Z	z or	Z *1	æ oi	rÆ *¹
1 and !	1	!	i	
2 and @	2	<u>@</u>	2	
3 and #	3	#	3	
4 and \$	4	\$	¤	£
5 and %	5	%	€	
6 and ^	6		1/4	
7 and &	7	&	1/2	
8 and *	8	*	3/4	
9 and (9	(۲	
0 and)	0)	,	
Spacebar	Space	Space		
- and _ (underscore)	-	_	¥	
		(underscore)		
= and +	=	+	×	÷
[and {	[{	«	

190

Printing\Simultaneous Key	normal	Shift	Right Alt(Alt Gr)	Shift + Right Alt
] and }]	}	»	"
\backslash and	\		_	
; and :	;	:	¶	0
' and "			,	
Grave Accent(`) and Tilde(~)				
, and <	,	<	ç or	Ç *1
. and >		>		
/ and ?	/	?	i	
Keypad /	/	/		
Keypad *	*	*		
Keypad -	-	-		
Keypad +	+	+		
Keypad 1	1			
Keypad 2	2			
Keypad 3	3			
Keypad 4	4			
Keypad 5	5			
Keypad 6	6			
Keypad 7	7			
Keypad 8	8			
Keypad 9	9			
Keypad 0	0			
Keypad.				

^{*1:} Character is Depends on CapsLock On/Off

International Key table

To enter special characters, follow the table below:

Diacritic	press first																	
	(Dead key)	Space	E	e	A	a	0	0	U	u	Y	у	I	i	Z	z	R	r
Acute	' or '	'	É	é	Á	á	Ó	ó	Ú	ú	Ý	ý	Í	í	Ź	ź	Ŕ	ŕ
Grave	`	`	È	è	À	à	Ò	ò	Ù	ù	Ŷ	ỳ	Ì	ì				
Umlaut	Shift + ' (")		Ë	ë	Ä	ä	Ö	ö	Ü	ü	Ÿ	ÿ	Ϊ	ï				
Tilde	Shift + ` (~)	~	Ĕ	ẽ	Ã	ã	Õ	õ	Ũ	ũ	Ŷ	ỹ	Ĩ	ĩ				
Circumflex	Shift + 6 (^)	^	Ê	ê	Â	â	Ô	ô	Û	û	Ŷ	ŷ	Î	î	Ż	â		
Breve	Alt Gr + Shift + 9	ŭ	Ĕ	ĕ	Ă	ă	Ŏ	ŏ	Ŭ	ŭ			Ĭ	ĭ				
Háček	Alt Gr + Shift + . (>)	v	Ě	ě	Ă	ă	Ŏ	ŏ	Ŭ	ŭ			Ĭ	ĭ	ž	ž	Ř	ř
Double acute	Alt Gr + Shift + 2	"					Ő	ő	Ű	ű								
Ogonek	Alt Gr + Shift + 8	ć	Ę	ę	Ą	ą	Q	Q	Ų	ų			Į	į				
Macron	Alt Gr + Shift + 3	-	Ē	ē	Ā	ā	Ō	ō	Ū	ū	Ÿ	ÿ	Ī	ī				
Overdot	Alt Gr + .		Ė	ė	À	à	Ò	ò			Ý	ý	İ	1	Ż	ż	Ŕ	ŕ
Underdot	Alt Gr + Shift + -		Ė	ę	Ą	ą	Ò	Ģ	Ų	ų	Y	у.	İ	į	Ż	ŗ.	Ŗ	ŗ
Ring	Alt Gr + Shift + 0	0			Å	å			Ů	ů		ŷ						

Diacritic	F CONTROL F CONTROL CO																			
	(Dead key)	Space	M	m	N	n	P	р	W	w	S	s	G	g	K	k	L	l	C	с
Acute	' or '	'	M	ḿ	Ń	ń	Ý	ģ	Ŵ	ŵ	Ś	ś	Ġ	ģ	K	k	Ĺ	ĺ	Ć	ć
Grave	`	,			Ň	'n			Ŵ	ŵ										
Umlaut	Shift + ' (")	-							W	ÿ										
Tilde	Shift + ` (~)	~			Ñ	ñ														
Circumflex	Shift + 6 (^)	^							Ŵ	ŵ	Ŝ	ŝ	Ĝ	ĝ					Ĉ	ĉ
Breve	Alt Gr + Shift + 9	ŭ											Ğ	ğ						
Háček	Alt Gr + Shift + . (>)	·			Ň	ň					Š	š	Ğ	ğ	K	Ř	Ľ	ľ	Č	č
Double acute	Alt Gr + Shift + 2	"																		
Ogonek	Alt Gr + Shift + 8	د																		
Macron	Alt Gr + Shift + 3	-																		
Overdot	Alt Gr + .		M	ṁ	Ň	'n	Þ	ġ	Ŵ	ŵ	Ś	Ġ	Ġ	ġ					Ċ	ċ
Underdot	Alt Gr + Shift + -		M	m	Ņ	ņ			Ņ	Ņ	Ş	ş			Ķ	ķ	Ļ	ļ		
Ring	Alt Gr + Shift + 0	0								w										

Index

Numerics	A
3D	advanced picture settings
2D from Quick menu 80	3D Judder Cancellation 115
3D from Quick menu 78	Ambient Light Sensor 112
3D lock 82	Base Color Adjustment 113
3D timer lock 83	Brilliance Restoration 114
adjusting 2D to 3D depth 84	ClearScan® 111
auto start mode 81	Color temperature 113
button operation 77	ColorMaster™ 113
change pin code 82	DNR 112
delete pin code 82	DynaLight® 110
enable 3D timer 83	Dynamic Contrast 110
enter new pin code 81	Fine Texture Restoration 114
forgotten pin code 82	Resolution+ 110
functions 73	MPEG NR 111
Native mode 80	resetting to factory default 115
selecting format 76	using 110
setting 3D pin code 81	audio
start message 82	adjusting balance 118
switch left right images 84	adjusting range 118
switching display mode 76	Audyssey Dynamic Volume®
switching to 2D mode 79	122
switching to 3D mode 78	bass/treble 126
viewing images 75	Dolby® Digital Dynamic Range
4/3 stretch	Control 120
using 107	muting sound 118
192	

	optical audio output format 119	connecting
Auto	Aspect	a computer 43
	using 107	audio system 38
C		cable TV 32
cable	a c	camcorder 32
Caulc	3.5mm to RCA Y-cable 31	computer to TV's PC IN 43
	analog RGB (15-pin) 31	DVD player with ColorStream®
	coaxial (F-type) 29	34
	component video (red/green/blue)	DVI device to HDMI [™] input
	30	39
	Dual-wand IR blaster cable 30	HDMI [™] audio system 42
	HDMI [™] 30	HDMI [™] device to HDMI [™] input
	LAN 32	39
	optical audio 31	IR devices 35
	overview of cables 29	satellite receiver 32
	standard A/V (red/white/yellow)	to a computer (no Internet
	29	connection) 45
chan	nel return 85	to a home network 45
chan		to a home network (no Internet
Ciidii	auto tuning 69	connection) 46
	labeling analog TV channels	to a home network (wired Internet
	71	connection) 47
	labeling video inputs 72	to a home network (wireless
	locking specific channels 90	Internet connection) 48
	manual tuning 70	TV's HDMI [™] 44
	next programmed channel 85	VCR 34
	skipping 70	VCR and antenna 32
	skipping video inputs 71	control other devices
	specific channel 85	HDMI [™] -CEC Control 40
	storing in memory 69	control panel
close	ed captions	lock 91
	Analog CC mode 86	controlling other devices
	button 89	TV remote 40
	Digital CC settings 88	E
	using 86	expert picture settings
comp	_	RGB Filter 116
1	adjusting image 95	setting 115
	setting the audio 96	Test Pattern 115
	to the TV's HDMI [™] 44	White Balance 116
	using with the TV 95	External Control Setup 166

F	N
Factory Defaults reset 101	network advanced setup 130
favorites adding 141	DNS setup 131
browsing 141 features 21	quick setup 58 setup 125
H HDMI [™] viewing signal information 95	wireless setup 125 Network Device Setup 166 no signal power down
HDMI [™] CEC	set 99
adjusting amplifier's audio 94 controlling playback devices 93 input source selection 94	overview installation 22 setup 22
other functions 94 HDMI [™] CEC Control	use 20
HDMI CEC Control using 92 HDMI [™] settings feature using 94 home network using 123 I icon safety 20 IR Blaster Out terminal using 35 IR Blaster setup 61 M Media Renderer device name setup 167 setup 167	picture adjusting 108 adjusting quality 109 picture mode selecting 108 picture size 4/3 104 4K Full 106 4K Native 106 4K Normal 106 Full 104 Native 103 Normal 105 Quad FHD 105 selecting 102
MediaShare (Media Player) basic operation 153 playing music files 161 specifications 152 viewing movie files 156 viewing photo files 163	TheaterWide 1 104 TheaterWide 2 105 TheaterWide 3 105 pin code changing 82 deleting 82 entering new pin code 81

forgotten 82	operating conditions 183
setting pin code 81	PC IN signal formats 184
power failure 101	PC input 182
0	power consumption 181
	power source 180
quick setup	remote, combination buttons
channel tuning 60	187
country 58	speaker type 181
IR Blaster 61	supplied accessories 183
network 58	TV system 180
smart TV 59	USB 182
store / home mode 58	video/audio terminals 181
time zone 58	wireless connection 182
\$	support information
safety	show 101
icons 20	T
scrolling the picture 107	•
shared inputs	time limit
configuring 72	set for games 91
SmartTV	timer
using 138	sleep timer 98
SmartTV TM	turn on TV 97
Netflix® 139	troubleshooting 171
software keyboard	channel tuning problems 174
using 133	closed caption problems 175
software licenses	contact Toshiba 179
show 135	HDMI [™] 175
software upgrade	HDMI [™] CEC Control problems
performing 135	175
specifications	light indicator 179
3D Signal formats 186	light indicator functions 179
acceptable signal formats 184	MediaShare (Media Player)
audio power 181	problems 178
channel coverage 180	network problems 175
ColorStream® HD input 181	picture problems 172
Digital audio output 182	remote control problems 174
ethernet 182	sound problems 174
HDMI [™] input 181	wireless network problems 177
HDMI [™] signal formats 185	TV connections
mass (weight) 183	front 24
<i>() ,</i>	side 24

TV panel connections
back 26
TV panel controls
front 24
left side 24
side 24
TV remote
control other devices 50
effective range 52
functionality 53
install batteries 50
TV status information
show 100
V
Video
video input
locking 90
selecting 85
W
web browser 140
access web page 140
adding favorites 141
browsing favorites 141