

SONY

2-345-596-11(1)

Rechargeable Battery Pack

Operating Instructions

For Customers in the U.S.A

Owner's Record

The model name is shown below. Refer to this whenever you call upon your Sony dealer regarding this product.

Model No. NP-FX101

For Customers in Canada

If this product is not working properly, please call 1-877-602-2008 for Peace of Mind Warranty Replacement service. For other product related questions please contact our Customer Information Service Centre at 1-877-899-7669 or write to us at: Customer Information Service 115 Gordon Baker Road, Toronto, Ontario, M2H 3R6

NP-FX101

© 2004 Sony Corporation

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

PRECAUTIONS

The Nameplate is located on the top.

RECYCLING LITHIUM-ION BATTERIES

Lithium-Ion batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbrc.org/>

Caution:

Do not handle damaged or leaking Lithium-Ion batteries.



RECYCLAGE DES ACCUMULATEURS AUX IONS DE LITHIUM

Les accumulateurs aux ions de lithium sont recyclables. Vous pouvez contribuer à préserver l'environnement en rapportant les piles usées dans un point de collection et recyclage le plus proche.

Pour plus d'informations sur le recyclage des accumulateurs, téléphonez le numéro gratuit 1-800-822-8837 (Etats-Unis et Canada uniquement), ou visitez <http://www.rbrc.org/>

Avertissement:

Ne pas utiliser des accumulateurs aux ions de lithium qui sont endommagés ou qui fuient.



CAUTION

Never expose the battery pack to temperatures above 140° F (60° C) such as in a car parked in the sun or under direct sunlight.

■ On the rechargeable battery

- Charge the rechargeable battery before you start using it.
- Do not allow dust to come into contact with the battery terminals of the player and rechargeable battery.
- Do not short the terminals.
- Keep the battery dry.
- Use this rechargeable battery to Sony DVD Player DVP-FX700/DVP-FX701 only.
- Do not disassemble.
- Do not incinerate.
- Dispose of used batteries promptly.

■ To dispose of the rechargeable battery

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

■ To store the rechargeable battery

The rechargeable battery is consumed gradually as time elapses even if is not used. In order to prevent the battery from deteriorating, store the rechargeable battery as follows:

- Remove the rechargeable battery from the player after use.
(Even if the player is off, it still uses some power.)
- Use up the battery completely on the player before storing it.
- Keep the rechargeable battery in a cool location to prevent it from deteriorating.
- Charge and use the rechargeable battery at least once in 6 months.

■ On charging the rechargeable battery

- Heat may build up in the rechargeable battery while charging. This is not a malfunction.
- When the battery life of a fully charged rechargeable battery becomes about half the normal life, you may need to replace the battery with a new one.
- Disconnect the rechargeable battery from the player as soon as the battery has been charged. Leaving it connected may result in reduced battery performance.

Specifications

Output voltage

DC 7.4V

Capacity

4800mAh

Operating temperature (Cell temperature)

Charge: 0°C to 45°C (32°F to 113°F)

Discharge: 0°C to 60°C (32°F to 140°F)

Dimensions

Approx. 7 3/8 x 5 3/4 x 15/16 inches (w/d/h)
(186 x 144 x 23.6 mm)

Mass

Approx. 13.1 oz (370g)

Design and specifications are subject to change without notice.

<http://www.sony.net/>