

SAMSUNG

SAMSUNG

ELECTRONICS

DVD

VIDEO

DVD PLAYER

DVD-S224

DVD-S225

DVD-S324

DVD-S325

DVD-S425

UK

AH68-01039C

Precautions

1. Setting up

Ensure that the mains supply in your house complies with that indicated on the identification sticker located at the back of your play. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (7-10cm). Make sure the ventilation slots are not covered. Do not stack other, or heavy devices on top over the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player ensure the disc tray is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electricity supply. In order to separate the player completely from the mains, it has to be disconnected by unplugging the main plug, especially when left unused for a long period of time.

2. Caution

Protect the player from moisture (dripping or splashing) and that no objects filled with liquids, such as vases, shall be placed on the player, and excess heat (e.g. fireplace) or equipment creating strong magnetic or electric fields (i.e. speakers...) disconnect the power cable from the mains electricity supply if the player malfunctions. Your player is not intended for industrial use but for domestic purposes only. Use of this product is for personal use only. Condensation If your player or disc have been stored in a cold atmosphere, as for example during transportation in the winter, wait for approximately 2 hours until they have reached room temperature.

3. For your safety

Never open the player or any of its components. It can be dangerous for you or certain fragile components. You could receive an electric shock or touch the laser beam. Do not place your eyes close to the opening of the disc tray or any other opening to look inside the player.

4. Disc

Be careful handle your discs with care. Hold a disc with finger on the border or hole. Always place disc with the label facing upward (in case of a single side disc). Always use a soft cloth to clean disc if necessary, wipe from the centre to the border. Always put disc back into their cases after playing and store in vertical position. Always place the disc properly into the tray using the proper guide area. Never use record cleaning sprays, benzene, static electricity liquids or any other solvent, if the disc surface is dirty. Wipe gently with a soft damp (water only) cloth, never wipe the disc in a circular motion, since circular scratches are likely to occur and could cause noise during playback.

5. Battery

The battery used in this product contains the chemicals that are harmful to the environment. Do not dispose of batteries in the general household waste. It is recommended that the replacement of the battery should be done by technician.





6. Maintenance of cabinet

For safety reasons, be sure to disconnect the AC power cord from the AC outlet.


- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

Precautions


1

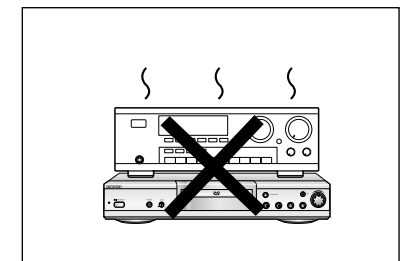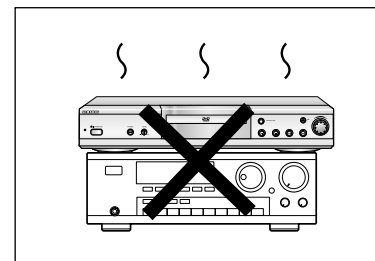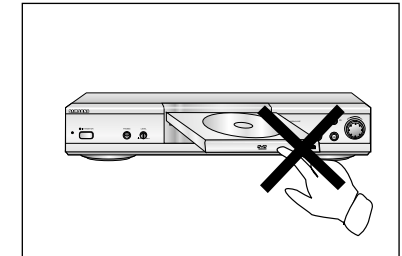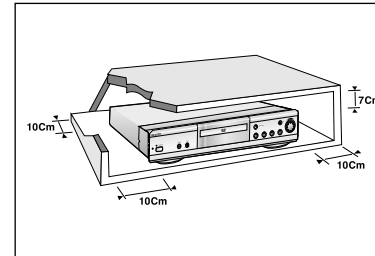


2

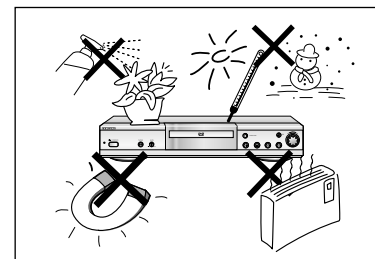


3

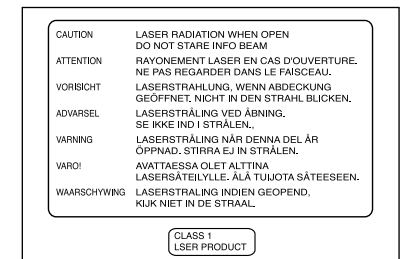

4

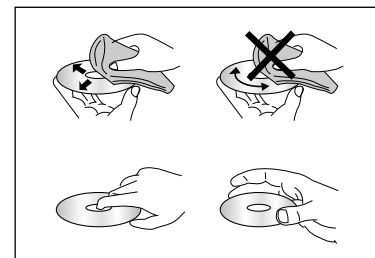

5

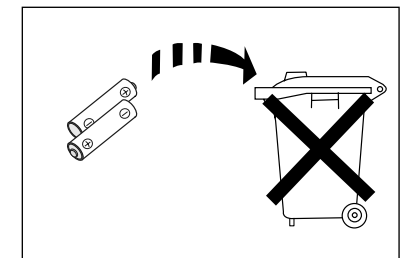

Before You Start

Accessories




Remote Control



Batteries for Remote Control (AA Size)



User's Manual

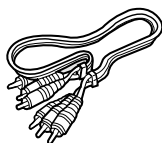

Video/Audio Cable

Install Batteries in the Remote

- 1 Open the battery cover on the back of the remote.
- 2 Insert two AA batteries. Make sure that the polarities (+ and -) are aligned correctly.
- 3 Replace the battery cover.

If remote doesn't operate properly:

- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

TABLE OF CONTENTS

| | |
|---|----|
| General Features | 6 |
| Disc Type and Characteristics | 7 |
| Description-Front Panel | 8 |
| Display Indicators | 10 |
| Description-Rear Panel | 11 |
| Tour of the Remote Control..... | 14 |
| | |
| Choosing a Connection | 20 |
| | |
| Playing a Disc..... | 22 |
| Using the Search & Skip Functions | 24 |
| Using the Display Function..... | 25 |
| Repeat Play | 26 |
| Program Play & Random Play | 27 |
| | |
| S.FIT Play | 28 |
| Digest Play | 29 |
| Using the Disc View Function | 30 |
| Slow Repeat play | 31 |
| Selecting the Audio Language | 32 |
| Selecting the Subtitle Language | 33 |
| Changing the Camera Angle | 34 |
| Using the Instant Replay Function | 35 |
| Using the Bookmark Function..... | 36 |
| Using the Zoom & 3D Sound Functions | 37 |
| MP3 Play | 38 |
| | |
| Using the Setup Menu | 40 |
| Setting Up the Language Features | 41 |
| Setting Up the Parental Control | 43 |
| Setting Up the Audio Options | 44 |
| Surround Sound Speaker Setup | 45 |
| Setting Up the Display Options | 46 |
| | |
| Controlling a TV with the Remote | 47 |
| Troubleshooting..... | 48 |
| Specifications | 49 |
| Warranty | 50 |

General Features

Excellent Sound

Dolby Digital, a technology developed by Dolby Laboratories provides crystal clear sound reproduction.

Screen

Video with MPEG-2 compression technology. Both regular and widescreen(16:9) pictures can be viewed.

Slow Motion

An important scene can be viewed in slow motion.

Programmed Play

You can program tracks to play in desired order.

Parental Control

The parental control allows users to set the level necessary to prohibit children from viewing harmful movies such as those with violence, adult subject matter, etc.

Various On-Screen Menu Functions

You can select various languages(Audio/Subtitle) and screen angles while enjoying movies.

Repeat

You can repeat a song or movie simply by pressing the REPEAT button.

MP3

You can also reproduce the discs with MP3 files.

Instant Replay

This function is used to replay the previous 10 seconds of the movie from the current position.

Easy Remocon

You can easily operate this player by combining only the functions that are frequently used.

NOTE




* Discs which cannot be played with this player.

- DVD-ROM
- DVD-RAM
- CD-ROM
- CDV
- CDI
- HD layer of super Audio CD
- CDGs play audio only, not graphics.

* Ability to play back may depend on recording conditions.

Disc Type and Characteristics

This DVD player is capable of playing the following types of discs with the corresponding logos:

| Disc Types (Logos) | Recording Types | Disc Size | Max. Playing Time | Characteristics |
|---|-----------------|-----------|--|---|
| DVD  | Audio + Video | 12 Cm | Single-sided 240 min. Double-sided 480 min. | <ul style="list-style-type: none"> • DVD contains excellent sound and video due to Dolby Digital and MPEG-2 system. • Various screen and audio functions can be easily selected through the on-screen menu. |
| | | 8 Cm | Single-sided 80 min. Double-sided 160 min. | |
| VIDEO-CD  | Audio + Video | 12 Cm | 74 min. | <ul style="list-style-type: none"> • Video with CD sound, VHS quality & MPEG-1 compression technology. |
| | | 8 Cm | 20 min. | |
| AUDIO-CD  | Audio | 12 Cm | 74 min. | <ul style="list-style-type: none"> • CD is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time. |
| | | 8 Cm | 20 min. | |

COPY PROTECTION

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Disc Markings



- Play Region Number
- PAL broadcast system in U.K, France, Germany, etc.
- Dolby Digital disc
- Stereo disc
- Digital Audio disc
- DTS disc
- MP3 disc


Play Region Number

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.


The Region Number for this player is described on the rear panel of the player.

Description-Front Panel


DVD-S224

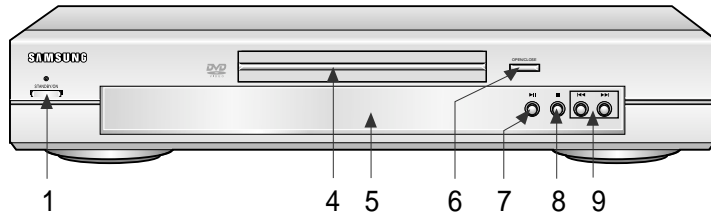


DVD-S225

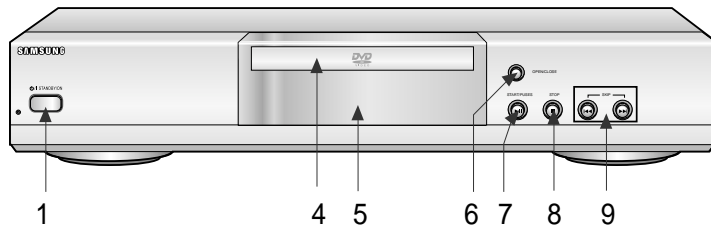

DVD-S324

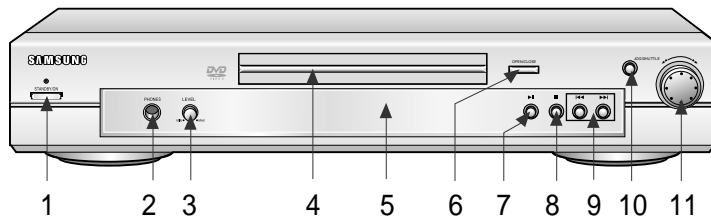

DVD-S325/DVD-S425

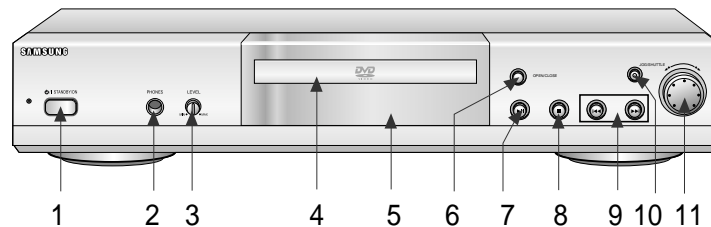


Description-Front Panel

Front Panel Controls

1. **STANDBY / ON**
 - When the unit is first plugged in, the indicator lights. When STANDBY/ON is pressed on again, the light goes out and the player is turned on.
2. **HEADPHONES JACK**
 - You can attach headphones here for private listening.
3. **HEADPHONES VOLUME**
 - Use to adjust headphones volume level.
4. **DISC TRAY**
 - Load the disc here.
5. **DISPLAY**
 - Operation indicators are displayed here.
6. **OPEN/CLOSE**
 - Press to open and close the disc tray.
7. **PLAY/PAUSE**
 - Begin or pause disc play.
8. **STOP**
 - Stops disc play.
9. **SKIP**
 - Use to skip a scene or music.
10. **JOG**
 - Use to access certain Shuttle features with the Shuttle dial : When JOG is pressed, indicator lights up.
11. **SHUTTLE**
 - Use during DVD and CD play to fast forward or reverse. In JOG mode(JOG button pressed), used for frame advance/CD track selection.

Display Indicators

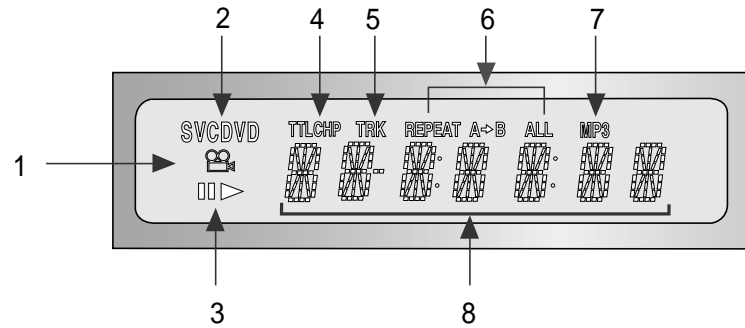


Front Panel Display

1. Angle indicator. You can select multiple angles of a scene recorded by different cameras.
2. Disc type indicators
3. Play / Pause / Forward play
4. DVD : Title, Chapter number.
5. Video/Audio CD : Track number
6. Repeat play mode
7. MP3 indicators
8. Displays various messages concerning operations such as PLAY, STOP, LOAD, ...
 - no DISC** : No disc loaded.
 - OPEN** : The disc tray is open.
 - LOAD** : Player is loading disc information.

Description-Rear Panel

(DVD-S425)

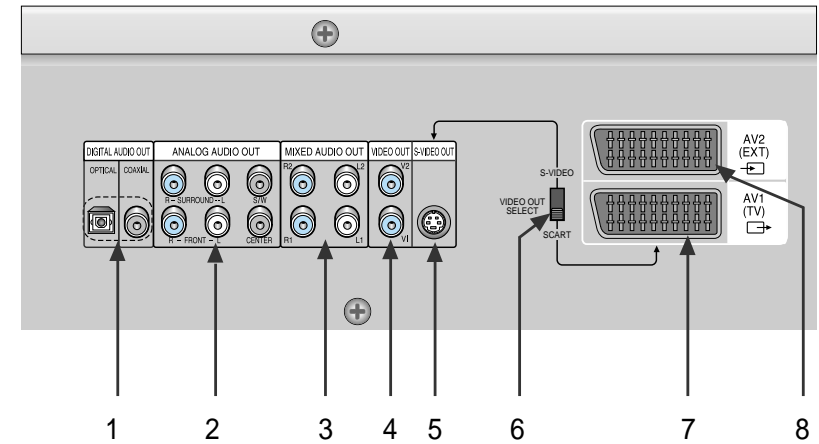

Rear Panel

1. DIGITAL AUDIO OUT JACKS
 - Use either an optical or coaxial digital cable to connect to a compatible Dolby Digital receiver. Use to connect to an A/V Amplifier that contains a Dolby Digital or DTS decoder.
2. 5.1CH ANALOG AUDIO OUT JACKS
 - Connect to an amplifier with 5.1ch analog input jacks.
3. MIXED AUDIO OUT JACKS
 - Connect to the Audio input jacks of your television, audio/video receiver, or VCR.
4. VIDEO OUT JACKS
 - Use a video cable to connect to the Video input jack on your television.
5. S-VIDEO OUT JACK
 - Use the S-Video cable to connect this jack to the S-Video jack on your television for a higher quality picture. The S-Video must be selected in the VIDEO OUT SELECT.
6. VIDEO OUT SELECT SWITCH
 - Use the switch to set video out. If Scart jack is selected, S-Video may not work. If S-Video is selected, Scart jack may not work.
7. SCART AV1 JACK
 - Connect to a TV with scart input jack.
8. SCART AV2 JACK
 - Connect to a video recorder or other equipment.


NOTE

* Select the VIDEO OUT SELECT switch in the Stop or Power Off mode.


Description-Rear Panel

Description-Rear Panel

DVD-S224/DVD-S225

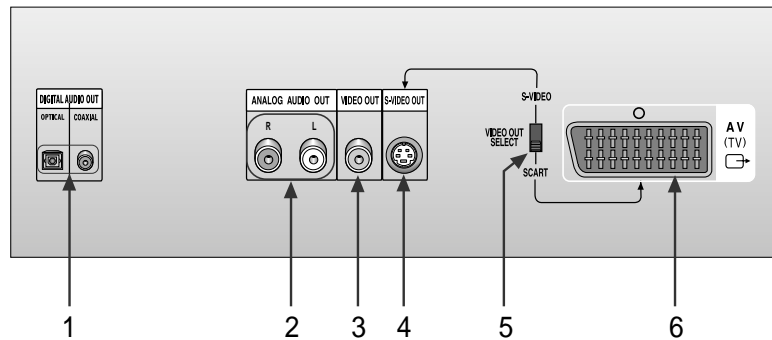

DVD-S324/DVD-S325

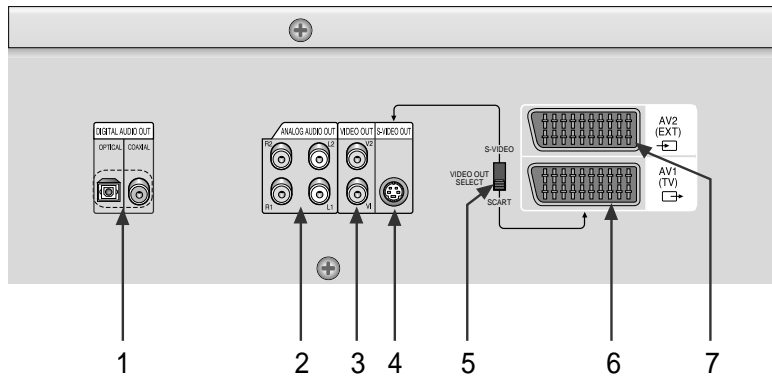

Rear Panel


1. DIGITAL AUDIO OUT JACKS
 - Use either an optical or coaxial digital cable to connect to a compatible Dolby Digital receiver. Use to connect to an A/V Amplifier that contains a Dolby Digital or DTS decoder.
2. ANALOG AUDIO OUT JACKS
 - Connect to the Audio input jacks of your television, audio/video receiver, or VCR.
3. VIDEO OUT JACKS
 - Use a video cable to connect to the Video input jack on your television.
4. S-VIDEO OUT JACK
 - Use the S-Video cable to connect this jack to the S-Video jack on your television for a higher quality picture. The S-Video must be selected in the VIDEO OUT SELECT.
5. VIDEO OUT SELECT SWITCH
 - Use the switch to set video out. If Scart jack is selected, S-Video may not work. If S-Video is selected, Scart jack may not work.
6. SCART AV1 JACK
 - Connect to a TV with scart input jack.
7. SCART AV2 JACK
 - Connect to a video recorder or other equipment.

NOTE

* Select the VIDEO OUT SELECT switch in the Stop or Power Off mode.

Tour of the Remote Control

(DVD-S224/DVD-S225)

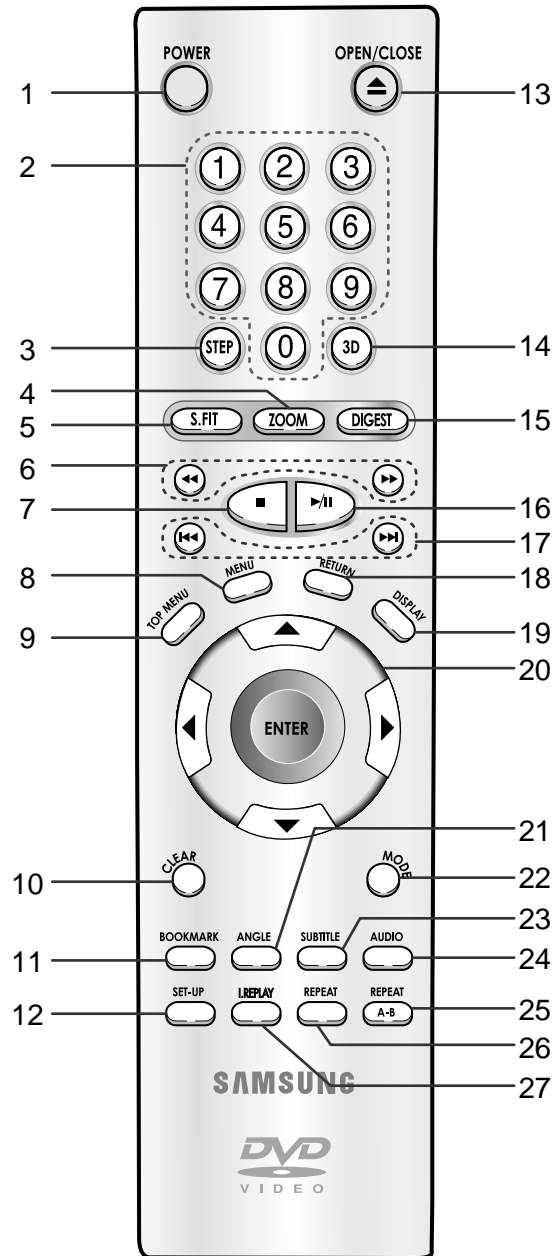

Tour of the Remote Control


DVD Function Buttons

SETUP

1. DVD POWER Button
2. NUMBER Buttons
3. STEP Button
 - Advances play one frame at a time.
4. ZOOM Button
5. S.FIT Button
6. SEARCH Buttons
 - Allows you to search forward/backward through a disc.
7. STOP Button
8. MENU Button
 - Brings up the Disc menu.
9. TOP MENU Button
10. CLEAR Button
 - Use to remove menus or status displays from the screen.
11. BOOKMARK Button
12. SETUP Button
 - Brings up the DVD player's Setup menu.
13. OPEN/CLOSE Button
14. 3D Button
15. DIGEST Button
16. PLAY/PAUSE Button
 - Begin/Pause disc play.
17. SKIP Buttons
 - Use to skip the title, chapter, or track.
18. RETURN Button
 - Returns to a previous menu.
19. DISPLAY Button
 - Displays the current disc mode.
20. ENTER/DIRECTION Button (UP/DOWN or LEFT/RIGHT Buttons)
 - This button functions as a toggle switch.
21. ANGLE Button
 - Use to access various camera angles on a DVD.
22. MODE Button
 - Allows you to program a specific order.
23. SUBTITLE Button
24. AUDIO Button
 - Use this button to access various audio functions on a disc.
25. A-B REPEAT Button
 - Use to mark a segment to repeat between A and B.
26. REPEAT Button
 - Allows you to repeat play a title, chapter, track, or disc.
27. I.REPLAY Button
 - This function is used to replay the previous 10 seconds of the movie from the current position.

Tour of the Remote Control

(DVD-S324/DVD-S325)

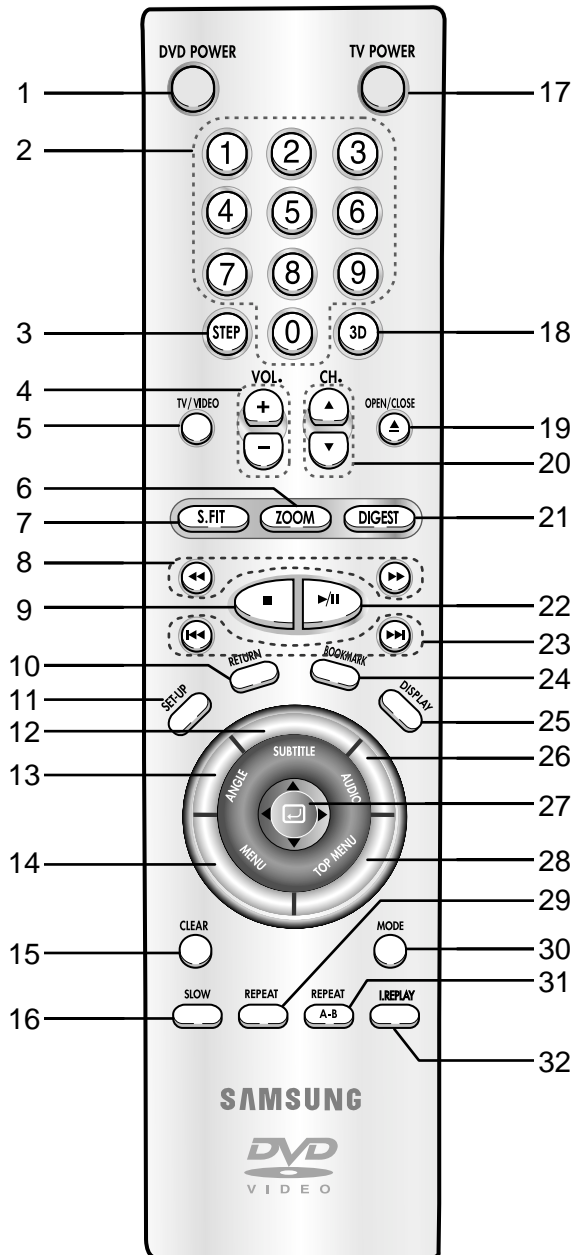


Tour of the Remote Control

DVD Function Buttons

1. DVD POWER Button
2. NUMBER Buttons
3. STEP Button
4. VOLUME Buttons
5. TV/VIDEO Button
6. ZOOM Button
7. S.FIT Button
8. SEARCH Buttons
 - Allows you to search forward/backward through a disc.
9. STOP Button
10. RETURN Button
 - Returns to a previous menu.
11. SETUP Button
 - Brings up the DVD player's Setup menu.
12. SUBTITLE Button
13. ANGLE Button
 - Use to access various camera angles on a DVD.
14. MENU Button
 - Brings up the Disc menu.
15. CLEAR Button
 - Use to remove menus or status displays from the screen.
16. SLOW Button
17. TV POWER Button
18. 3D Button
19. OPEN/CLOSE Button
20. CHANNEL Buttons
21. DIGEST Button
22. PLAY/PAUSE Button
 - Begin/Pause disc play.
23. SKIP Buttons
 - Use to skip the title, chapter, or track.
24. BOOKMARK Button
25. DISPLAY Button
 - Displays the current disc mode.
26. AUDIO Button
 - Use this button to access various audio functions on a disc.
27. ENTER/DIRECTION Button (UP/DOWN or LEFT/RIGHT Button)
 - This button functions as a toggle switch.
28. TOP MENU Button
29. REPEAT Button
 - Allows you to repeat play a title, chapter, track, or disc.
30. MODE Button
 - Allows you to program a specific order.
31. A-B REPEAT Button
 - Use to mark a segment to repeat between A and B.
32. I.REPLAY Button
 - This function is used to replay the previous 10 seconds of the movie from the current position.

Tour of the Remote Control

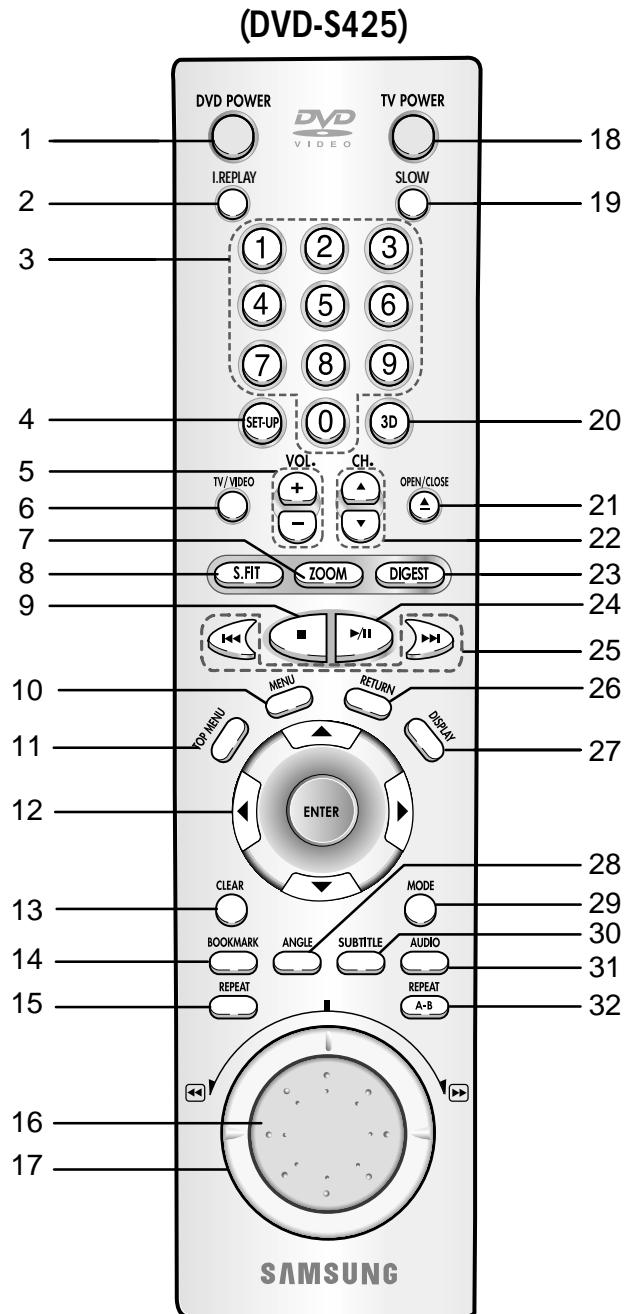

Tour of the Remote Control

DVD Function Buttons

- DVD POWER Button**
- I.REPLAY Button**
 - This function is used to replay the previous 10 seconds of the movie from the current position.
- NUMBER Buttons**
- SETUP Button**
 - Brings up the DVD player's Setup menu.
- VOLUME Buttons**
- TV/VIDEO Button**
- ZOOM Button**
- S.FIT Button**
- STOP Button**
- MENU Button**
 - Brings up the Disc menu.
- TOP MENU Button**
- ENTER/DIRECTION Button (UP/DOWN or LEFT/RIGHT buttons)**
 - This button functions as a toggle switch.
- CLEAR Button**
 - Use to remove menus or status displays from the screen.
- BOOKMARK Button**
- REPEAT Button**
 - Allows you to repeat play a title, chapter, track, or disc.
- JOG DIAL**
 - Operates frame by frame play. In CD mode, performs track search.
- SHUTTLE DIAL**
 - Performs fast or slow motion play.
- TV POWER Button**
- SLOW Button**
- 3D Button**
- OPEN/CLOSE Button**
- CHANNEL Buttons**
- DIGEST Button**
- PLAY/PAUSE Button**
 - Begin/Pause disc play.
- SKIP Buttons**
 - Use to skip the title, chapter, or track.
- RETURN Button**
 - Returns to a previous menu.
- DISPLAY Button**
 - Displays the current disc mode.
- ANGLE Button**
 - Use to access various camera angles on a DVD.
- MODE Button**
 - Allows you to program a specific order.
- SUBTITLE Button**
- AUDIO Button**
 - Use this button to access various audio functions on a disc.
- A-B REPEAT Button**
 - Use to mark a segment to repeat between A and B.


Choosing a Connection

The following show examples of connections commonly used to connect the DVD player with a TV and other components.

Before Connecting the DVD Player


- Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.
- Refer to the owner's manual of the additional components you are connecting for more information on those particular components.

Connection to an Audio System

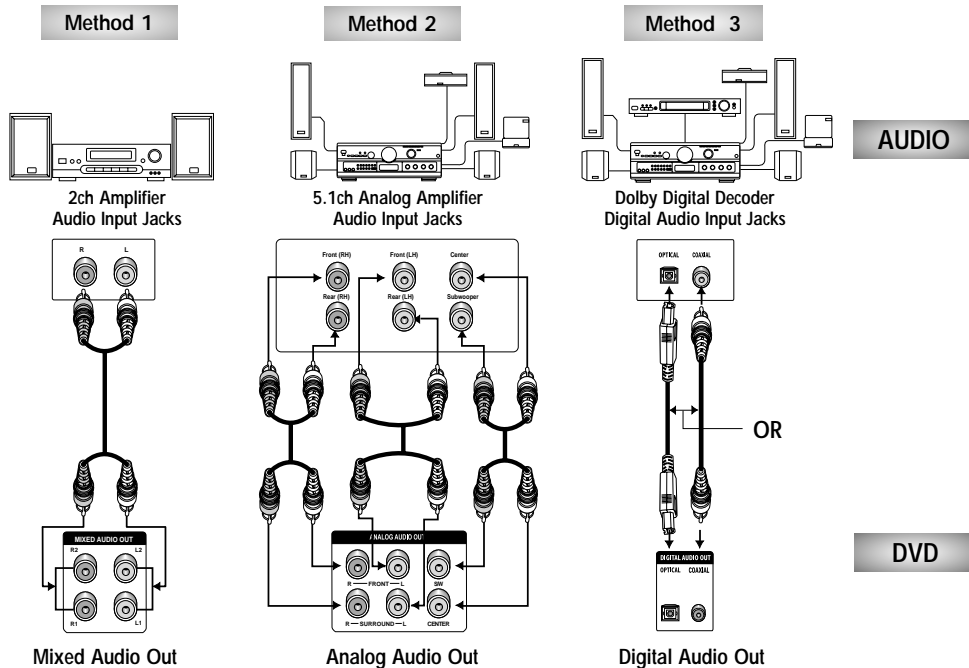

An Example of Connecting DVD with Other Equipment

- **Method 1** DVD Player + 2ch Stereo Amplifier or Dolby Pro Logic Decoder
- **Method 2** DVD Player + Amplifier with 5.1ch Analog Input Jacks
- **Method 3** DVD Player + Amplifier with Dolby Digital Decoder/DTS Decoder

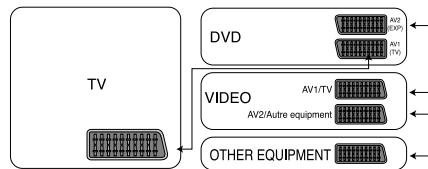


(DVD-S324/DVD-S325/DVD-S425 only)

Choosing a Connection

Connection to a TV (For Video)

TV (Normal, Widescreen, Projection, etc..)

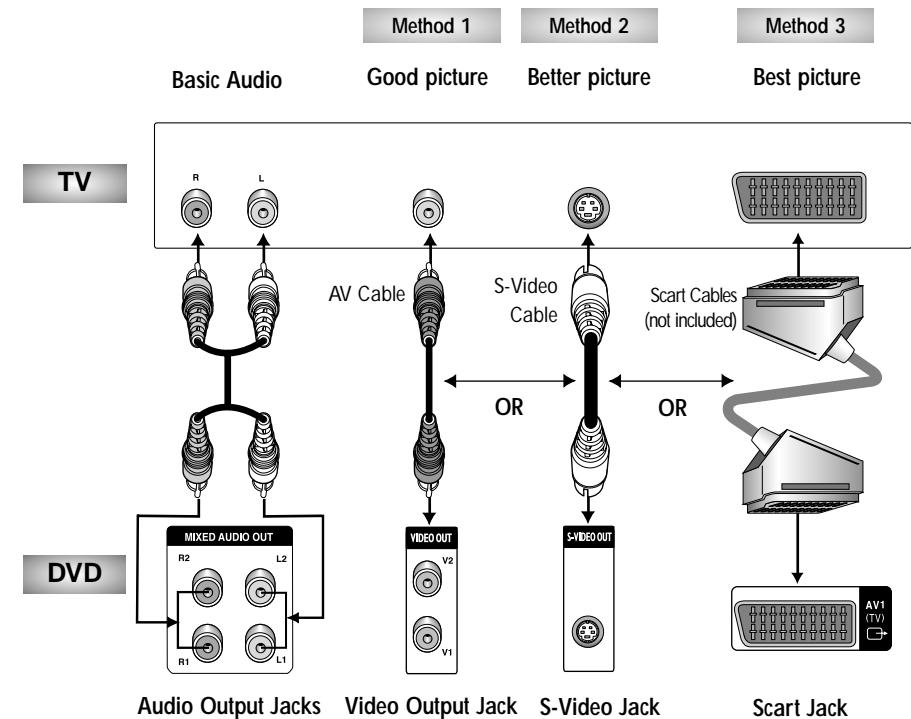

- **Method 1** DVD Player + TV with Video Input Jack
- **Method 2** DVD Player + TV with S-Video Input Jack (If S-Video is selected in the VIDEO OUT SELECT.)
- **Method 3** DVD Player + TV with Scart Input Jack (Audio & Video) (If Scart jack is selected in the VIDEO OUT SELECT.)

NOTE

- If Scart Jack is selected, S-Video will not work.
- If S-Video is selected, Scart Jack will not work.

Playing a Disc

Before Play

- Turn on your TV and press the TV/VIDEO button to select the video mode.
- Turn on your Audio System and select AUX, CD or DVD.

After plugging in the player, the first time you press the DVD POWER button, this screen comes up :

If you want to select the language, press a NUMBER button. (This screen will only appear the very first time you plug in the player.)

SELECT MENU LANGUAGE

| | | |
|---------|---|-----------------|
| Press | 1 | for English |
| Touche | 2 | pour Français |
| Drücke | 3 | für Deutsch |
| Pulsar | 4 | para Español |
| Premere | 5 | per Italiano |
| Toets | 6 | voor Nederlands |

Play

- 1** Press the OPEN/CLOSE button.
The STANDBY indicator light goes out and the tray opens.
- 2** Place a disc gently into the tray with the disc's label facing up.
- 3** Press the PLAY/PAUSE button or OPEN/CLOSE button to close the disc tray.
- 4** Stopping Play
Press the STOP button during play.
- 5** Removing Disc
Press the OPEN/CLOSE button.
- 6** Pausing Play
Press the PLAY/PAUSE or STEP button on the remote during play.
 - Screen stops, no sound.
 - To resume again, press PLAY/PAUSE button once again.

Playing a Disc

7 Step Motion Play. (Except CD)

- If turning JOG DIAL, you can view one by one.
- No sound is heard during STEP mode.
 - Press PLAY/PAUSE to resume normal play.
(You can only perform step motion play in the forward direction.)


8 Slow Motion Play. (Except CD)

- Press the FWD SEARCH(▶▶) or REV SEARCH(◀◀) button on the remote during PAUSE or STEP mode.
- By pressing the FWD or REV SEARCH button, you can select slow motion play for 1/8, 1/4 or 1/2 of normal speed.
 - No sound is heard during slow mode.
 - Press PLAY/PAUSE to resume normal play.
 - When playing a VCD, the reverse slow motion play will not work.

RESUME function

When you stop disc play, the player remembers where you stopped, so when you press PLAY again, it will pick up where you left off (unless the disc is removed, the STOP button is pressed twice or the player is unplugged.).

NOTE

- If the player is left for 5 minutes in pause mode, it will stop.
- If the player is left in the stop mode for more than one minute without any user interaction, a screen saver will be activated, and the TV screen will fade in and out repeatedly. Press the PLAY button to resume normal play.
- This  icon indicates an invalid button press.

Using the Search & Skip Functions

During play, you can search quickly through a chapter or track or use the skip function to jump to the next selection.

Searching through a Chapter or Track

1 During play, press the FWD or REV SEARCH button on the remote.

- Press the REVERSE or FORWARD SEARCH button on the remote and press again to search at a faster speed on the DVD, VCD, CD.

| | |
|-----|----------------------------|
| DVD | 2X, 4X, 8X, 16X, 32X, 128X |
| VCD | 4X, 8X |
| CD | 2X, 4X, 8X |

- Depending on the disc, audio may not be heard when a disc is in 2X play mode.

Skipping Tracks

1 During play, press the NEXT SKIP or BACK SKIP button.

- When playing a DVD, if you press the NEXT SKIP button, it moves to the next chapter. If you press the BACK SKIP button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.
- When playing a VCD 2.0 in MENU OFF mode, a VCD 1.1 or a CD, if you press the NEXT SKIP button, it moves to next track. If you press the BACK SKIP button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.
- If a track exceeds 15 minutes when playing a VCD and you press the NEXT SKIP button, it moves forward 5 minutes. If you press the BACK SKIP button, it moves backward 5 minutes.
- When playing a VCD 2.0 in the MENU OFF or Track View function, if you press the NEXT SKIP button, it moves to the next MENU or the next Track View display.


If you press the BACK SKIP button, it moves to the previous MENU or the previous Track View display. (See page 30.)

Using the Display Function

When Playing a DVD

1 During play, press the DISPLAY button on the remote.



- Current title, chapter number, elapsed time, audio, subtitle and volume control will be displayed.
- Use the NUMBER buttons to enter a different title, then press the ENTER button.
- Use the LEFT/RIGHT or NUMBER buttons enter a chapter number, then press the ENTER button.
- To enter the time from which you want to start, use the UP/DOWN buttons to select, then use the NUMBER buttons to enter the time. Then press the ENTER button.
- Use the LEFT/RIGHT buttons to change the values of the current audio, subtitle and volume.
- To make the screen disappear, press the DISPLAY button again.

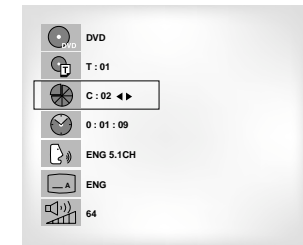

When Playing a CD/VCD

1 During play, press the DISPLAY button on the remote.

- Current track NUMBER, elapsed time and volume control will be displayed.
- Use the UP/DOWN buttons to select a track. Use the LEFT/RIGHT buttons or NUMBER buttons to enter a different track number, then press the ENTER button.
- To enter the time from which you want to start, use the UP/DOWN buttons to select, then use the NUMBER buttons to enter the time. Press the ENTER button.
- To change the value of the volume, use the LEFT/RIGHT buttons.
- To make the screen disappear, press the DISPLAY button again.
- * In VCD 2.0 mode (MENU ON mode), only the volume control will appear on screen.

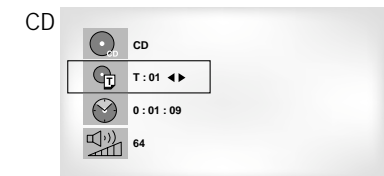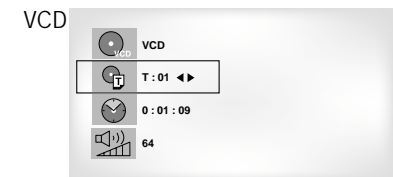

NOTE

What is a Chapter?

Each Title on a DVD is usually divided into chapters (similar to tracks on an audio CD).

What is a Title?



A DVD may contain several different titles. For example, if a disc contains four different movies, each might be considered a title.

Repeat Play

Repeat the current track, chapter, title, a chosen section (A-B), or all of the disc.

When playing a DVD

- 1 Press the REPEAT button on the remote. Repeat screen appears.
- 2 Select Chapter, Title or A-B using the LEFT/RIGHT buttons.
 - A-B Repeat
 - Press the REPEAT button. Select A-B on screen with the LEFT/RIGHT buttons or press the A-B button on the remote.
 - Press ENTER at the point where you want the repeat play to start (A). The B is automatically highlighted.
 - Press ENTER at the point where you want the repeat play to stop (B).
- 3 Press ENTER.
- 4 To return to normal play, press REPEAT again, then press the LEFT/RIGHT buttons to select Off and press ENTER.

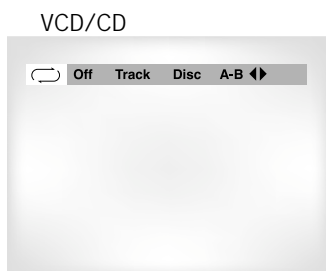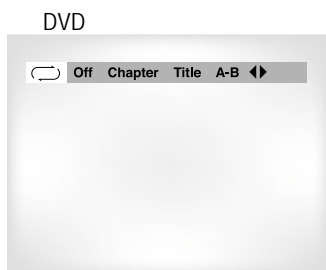



NOTE

- DVD repeats play by chapter or title, CD and VCD repeat play by disc or track.
- Depending on the disc, the Repeat function may not work.
- If the title or track is completed before marking the end (B), the end of title or track becomes B automatically.
- When in VCD 2.0 mode (MENU ON mode), this function does not work.

Program Play & Random Play

Program Play (DVD/VCD/CD/MP3)

- 1 Press the MODE button.
- 2 Use the LEFT/RIGHT buttons to select PROGRAM. Press the ENTER button.
- 3 Use the LEFT/RIGHT buttons to select the first chapter (or track) to add to the program. Press the ENTER button. The selection numbers appear in the Program Order box.
- 4 Press the PLAY/PAUSE button. The disc will be played in programmed order.

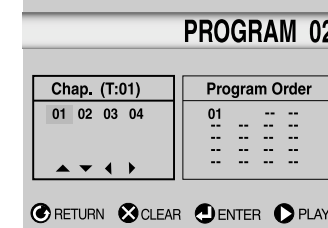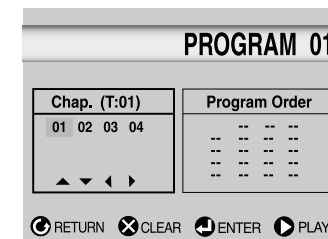

Random Play (DVD/VCD/CD/MP3)

- 1 Press the MODE button.
- 2 Use the LEFT/RIGHT buttons to select RANDOM. Press the ENTER button. The disc will be played in random order.




NOTE

- Depending on the disc, the Program and Random Play function may not work.
- When in VCD 2.0 mode (MENU ON mode), these functions do not work.
- To resume normal play, press the CLEAR button.

S.FIT Play

Screen Fit Play

- 1 During play, press S.FIT button on remote control.
 - Allows you to eliminate the black bars in the top and bottom of the screen when a movie is playing in the Widescreen format(16:9).
 - Screen Fit will not work when the Zoom mode is active. (you can not remove the black bars on the screen)
However, Zoom mode will work when Screen Fit is active.

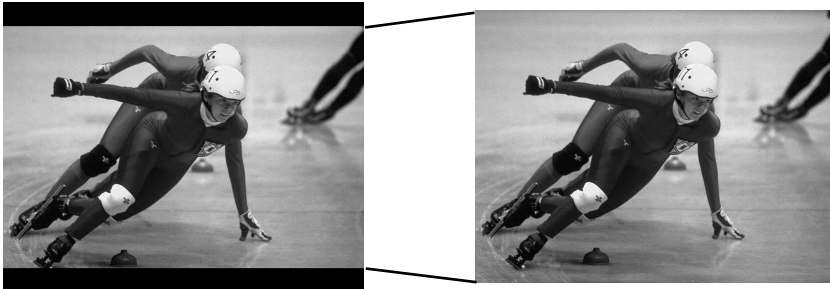

NOTE

- Various aspect ratios are available only in multiple screen format discs.
- This function does not work when a DVD has been recorded with a multi-camera angle format.
- On some DVDs, the black bars cannot be eliminated due to their aspect ratio.

Digest Play

Digest Play

- 1 During play, press the DIGEST button.
 - You'll see the 9 individual windows representing each of the chapters on the TV screen.
 - When each window is displayed, the first 3 seconds of the chapter will be played.
- 2 Press UP/DOWN/LEFT/RIGHT buttons or NUMBER button to select the window you'd like to see, and press the ENTER button.
 - Up to 9 windows(chapters) can be displayed on the screen at a time. Press the 'Skip' button for the next 9 chapters if the movie has more than 9.

DIGEST

| | | |
|----|----|----|
| 01 | 02 | 03 |
| 04 | 05 | 06 |
| 07 | 08 | 09 |

SKIP button

DIGEST

| | | |
|----|----|----|
| 10 | 11 | 12 |
| 13 | 14 | |

NOTE



- You can play the DVD player starting with the desired chapter after directly moving to the scene you want.
- 'DIGEST' may not operate depending on the disc in use.

Using the Disc View Function

Track View (VCD)

Displays the beginning view of each track and the track number.


- 1 During play, press the TOP MENU button.
- 2 Press the UP/DOWN buttons to select TRACK VIEW. Press the ENTER button.
- 3 Select the desired view by pressing the UP/DOWN or LEFT/RIGHT buttons. Press the SKIP button for the next 9 tracks if the movie has more than 9.
- 4 Press the ENTER button.

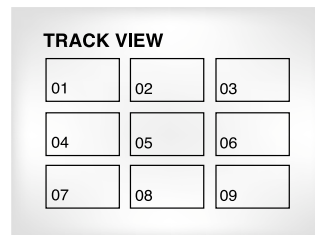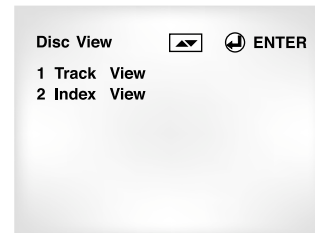

Index View (VCD)

Displays the equally divided 9 views of the current playing track.

- 1 During play, press the TOP MENU button.
- 2 Press UP/DOWN buttons to select INDEX VIEW. Press the ENTER button.
- 3 Select the desired view by pressing UP/DOWN or LEFT/RIGHT buttons.
- 4 Press the ENTER button.

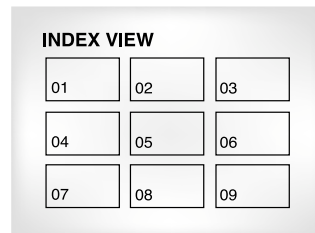

NOTE

- When pressing the TOP MENU button with a DVD; the disc's TITLE MENU function comes up. A disc must have at least two titles for the TITLE MENU function to work.
- When pressing the TOP MENU button with a CD; the unit enters the INTRO mode. INTRO lets you listen to the beginning of each track for about 10 seconds.
- You can also operate it using the DIGEST button.

Slow Repeat play

This feature allows you slowly repeat scenes containing sports, dancing, musical instruments being played etc. so you can study them more closely.

When playing a DVD

- 1 Press the PLAY/PAUSE button.
- 2 Press and hold the SKIP button to choose the play speed between 1/8X, 1/4X, and 1/2X of normal. (DVD-S425 only)
Press the F/SEARCH button to choose the play speed between 1/8X, 1/4X, and 1/2X of normal. (DVD-S224, DVD-S225, DVD-S324, DVD-S325 only)
- 3 Press the "Repeat A->B" of the remote control once at the first section to repeat while the multiple-speed is selected (A-point selection).
- 4 Press the "Repeat A->B" button again (B-point selection).

NOTE


- The disc will play from A to B repeatedly at the speed you chose.
- To terminate the function, press the 'CLEAR' button or the 'REPEAT (A-B)' button again. Then press play to resume normal playback.
- A-B REPEAT does not allow you to set point (B) until at least 5 seconds has elapsed after point (A) has been set.

Selecting the Audio Language

You can select a desired language quickly and easily with the AUDIO button.

Using the AUDIO button

- 1 Press the AUDIO button.
- 2 Use the UP/DOWN buttons to select the desired language on a DVD.
 - The audio languages are represented by abbreviations.
- 3 Use the UP/DOWN buttons to select Stereo, Right or Left. (On VCD/CD)

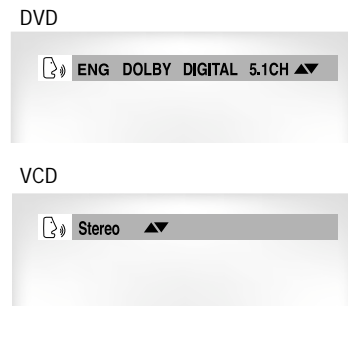

NOTE


- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 8 audio languages.
- **How to have the same audio language come up whenever you play a DVD;**
Refer to "Setting Up the Language Features" on page 41.

Selecting the Subtitle Language

You can select a desired subtitle quickly and easily with the SUBTITLE button.

Using the SUBTITLE button

- 1 Press the SUBTITLE button.
- 2 Use the UP/DOWN buttons to select the desired subtitle language.
- 3 Use the LEFT/RIGHT buttons to determine whether or not the subtitle will be displayed.
 - Initially, the subtitling will not appear on screen.
 - The subtitle languages are represented by abbreviations.

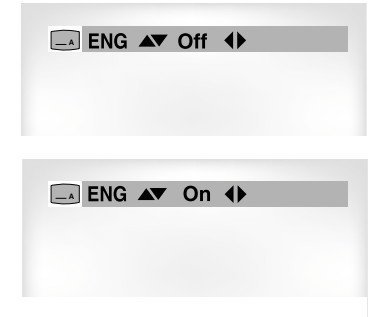


NOTE

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 32 subtitle languages.
- **How to have the same subtitle language come up whenever you play a DVD;**
Refer to "Setting Up the Language Features" on page 41.

Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can select the Angle function.

Using the ANGLE button

Press the ANGLE button to see if an ANGLE () mark is present at the upper right hand corner of the screen.

- 1 When an ANGLE mark is shown, press the ANGLE button, then an ANGLE select icon will appear at the upper left hand corner of the screen.
- 2 Use the UP/DOWN buttons to select the desired screen angle.
- 3 To turn off the display, press the ANGLE button again.




Using the Instant Replay Function

Using the instant replay function (DVD)

If you miss a scene, you can see it again using this function.

- 1 If you press the instant I.REPLAY button, the current scene moves backward about 10 seconds, and plays back.

Instant Play

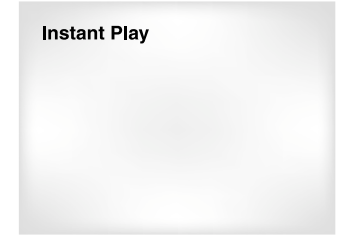


Using the Bookmark Function

The Bookmark function lets you select parts of a DVD or VCD (MENU OFF mode) so that you can quickly find the section at a later time.

Using the Bookmark Function (DVD/VCD)

- 1 During play, press the BOOKMARK button on the remote. The Bookmark icons will be displayed.
- 2 Use the LEFT/RIGHT buttons to move to the desired bookmark icon.
- 3 When you reach the scene you want to mark, press the ENTER button. The icon will change to a number (1, 2, or 3).
- 4 Press the BOOKMARK button to turn off the display.

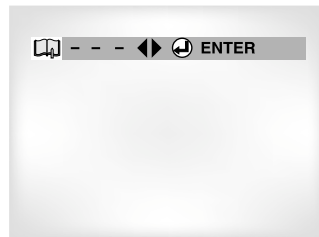

Recalling a Marked Scene

- 1 During play, press the BOOKMARK button on the remote.
- 2 Use the LEFT/RIGHT buttons to select a marked scene.
- 3 Press the PLAY/PAUSE button to skip to the marked scene.



Clearing a Bookmark

- 1 During play, press the BOOKMARK button on the remote.
- 2 Use the LEFT/RIGHT buttons to select the bookmark number you want to delete.
- 3 Press the CLEAR button to delete a bookmark number. Press the BOOKMARK button to turn off display.


NOTE

- Up to three scenes may be marked at a time.
- When in VCD 2.0 mode (MENU ON mode), this function does not work.
- Depending on the disc, the Bookmark function may not work.

Using the Zoom & 3D Sound Functions

Using the Zoom Function (DVD/VCD)

- 1 During play or pause mode, press the ZOOM button on the remote. A square will be displayed on screen.
- 2 Use the UP/DOWN or LEFT/RIGHT button to select the part of the screen you want to zoom in on.
- 3 Press the ENTER button.
 - During DVD play, press ENTER to zoom in 2X/4X/2X/Normal in order.
 - During VCD play, press ENTER to zoom in 2X/normal in order.

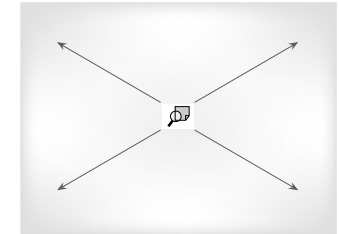


Using the 3D Sound Function

The simulated surround effect (PHANTOM SURROUND) depends on the disc contents. If you connect the unit to your stereo system, you can enhance sound quality and produce a greater surround effect. This feature is useful when you are using the DVD player with a two channel stereo through the analog outputs. (Discs which are recorded with LPCM or DTS will not work. When the DIGITAL OUTPUT is set to BIT STREAM in the SETUP MENU, the 3D Sound function will not work.)

- 1 During play, press the 3D SOUND button. The 3D SOUND mark will be displayed on screen. (Be sure the DIGITAL OUTPUT is set to PCM.)
- 2 Press the UP/DOWN buttons to turn the 3D Sound feature on or off.

NOTE

- 3D Sound is possible only on discs recorded using DOLBY SURROUND or DOLBY DIGITAL. However, some of these discs do not contain rear channel sound signals.
- Depending on the disc, the Zoom and 3D Sound function may not work.

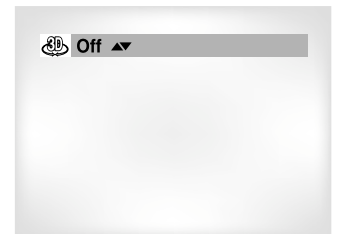


MP3 Play

When an MP3 Disc is inserted into the DVD PLAYER, the first song file of the first folder plays.

MP3 Play Function

1 Press STOP to stop playback of the first song file, then press RETURN to display the music folder menu on the right side of the screen. Up to 8 music folders can be displayed at a time. If you have more than 8 folders on a disc, press the LEFT/RIGHT buttons to bring them up on the screen.

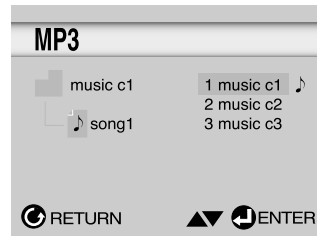

2 Use the UP/DOWN buttons to select the desired music folder, then press ENTER. Use the UP/DOWN buttons again to select a song file. Press ENTER to begin playback of the song file.



Program/Random playback

Press the MODE button to switch between the RANDOM and PROGRAM modes. See page 27 for more information on these modes.

NOTE

- A musical note is displayed next to the file currently playing.
- Press the REPEAT button to hear only music continuously and press it once again to release.

MP3 Play

CD-R MP3 discs

In the case of CD-R MP3 discs, please follow all the recommendations for CD-R above, plus the comments below:

- **Your MP3 files should be ISO 9660 or JOLIET format.**
ISO 9660 format and Joliet MP3 files are compatible with Microsoft's DOS and Windows, and with Apple's Mac. These two formats are the most widely used.
- **When naming your MP3 files do not exceed 8 characters, and place ".mp3" as the file extension.**
General name format of: Title.mp3. When composing your title, make sure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including: (.,/, \, =, +).
- **Use a decompression transfer rate of at least 128 kb/sec (kilobytes/second) when recording MP3 files.**
Sound quality with MP3 files basically depends on the rate of compression/decompression you choose. Getting audio CD quality sound requires an analog/digital sampling rate, that is conversion to MP3 format, of at least 128 kb/sec and up to 160 kb/sec. However, choosing higher rates, like 192 kb/sec or more, only rarely give better sound quality. Conversely, files with sampling rates below 128 kb/sec will not be played properly.
- **Do not try recording copyright protected MP3 files.**
Certain "securized" files are encrypted and code protected to prevent illegal copying. These files are of the following types: Windows Media™ (registered trade mark of Microsoft Inc) and SDMI™ (registered trade mark of The SDMI Foundation). You cannot copy such files.
- **Your DVD player only accepts one level of file directory.**
Consequently you must choose:
 - either to save all your MP3 recording files at the root of the disc;
 - and/or create folders in the directory for each artist or music type (e.g.classical, rock, jazz, etc)
- **Important:** The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality.
You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (degraded sound quality and in some cases, inability of the player to read the files).

Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

1 With the unit in Stop mode, press the SETUP button on the remote.

- 1 Player Menu** : Setup of the Display Language
Use the Player preference menu to select the language for the player's on-screen displays.
- 2 Disc Menu** : Setup of the Menu Language
Use the Menu preference menu to select the language you want a DVD's disc menu to be displayed in.
- 3 Audio** : Setup of the Audio Language
Use the Audio preference menu to select the soundtrack language.
- 4 Subtitle** : Setup of the Subtitle Language
Use the Subtitle preference menu to select the language the disc's subtitles are to be displayed in.
- 5 Parental** : Setup of the Parental Level
Allows users to set the level necessary to prevent children from viewing unsuitable movies such as those with violence, adult subject matter, etc.
- 6 Audio Options** : Setup of the Audio Options
- 7 Display Options** : Setup of the Display Options
Use to select which type of screen you want to watch and several display options.

2 Use the UP/DOWN buttons on the remote to access the different features.

3 Press the ENTER button to access the sub features.

To make the setup screen disappear after setting up, press the SETUP button again.



NOTE

Depending on the disc, some Setup Menu selections may not work.

Setting Up the Language Features

If you set the player menu, disc menu, audio and subtitle language in advance, they will come up automatically every time you watch a movie.

Using the Player Menu Language


- 1** With the unit in Stop mode, press the SETUP button.
- 2** Use the UP/DOWN buttons to select the PLAYER MENU.
- 3** Press the ENTER button.
- 4** Use the UP/DOWN buttons to select 'English'.
- 5** Press the ENTER button.
 - English is selected and the screen returns to SETUP MENU.
 - To make the SETUP MENU disappear, press the RETURN button.

Using the Disc Menu Language

This function changes the text language only on the disc menu screens.

- 1** With the unit in Stop mode, press the SETUP button.
- 2** Use the UP/DOWN buttons to select DISC MENU.
- 3** Press the ENTER button.
- 4** Use the UP/DOWN buttons to select 'English'.
 - Select "Others" if the language you want is not listed.
- 5** Press the ENTER button.
 - English is selected and the screen returns to SETUP MENU.

e.g Setting up in English.

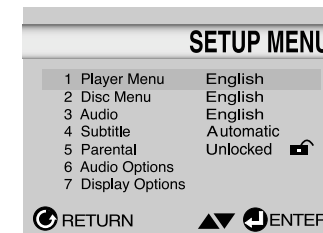

e.g Setting up in English.



Setting Up the Language Features

Setting Up the Parental Control


Using the Audio Language

- 1 With the unit in Stop mode, press the SETUP button.
- 2 Press the UP/DOWN buttons to move to AUDIO.
- 3 Press the ENTER button.
- 4 Press the UP/DOWN buttons to select 'English' .
 - Select "Original" if you want the default soundtrack language to be the original language the disc is recorded in.
 - Select "Others" if the language you want is not listed.
- 5 Press the ENTER button.
 - English is selected and the screen returns to SETUP MENU.



Using the Subtitle Language

- 1 With the unit in Stop mode, press the SETUP button.
- 2 Use the UP/DOWN buttons to select SUBTITLE.
- 3 Press the ENTER button.
- 4 Use the UP/DOWN buttons to select 'English' .
 - Select "Automatic" if you want the subtitle language to be the same as the language selected as the audio preference.
 - Select "Others" if the language you want is not listed. Some discs may not contain the language you select as your initial language; in that case the disc will use its original language setting.
- 5 Press the ENTER button.
 - English is selected and the screen returns to SETUP MENU.

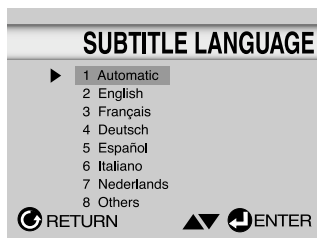

NOTE

- If the selected language is not recorded on the disc, the original pre-recorded language is selected.
- How to make the SETUP MENU disappear or return to menu screen during set up; Press RETURN button.

The Parental Control function works in conjunction with DVDs that have been assigned a rating - which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.

- 1 With the unit in Stop mode, press SETUP button. The Setup Menu screen appears.
- 2 Use UP/DOWN to select Parental. Press ENTER. The Parental Control screen appears.
- 3 Use LEFT/RIGHT to select Yes if you want to use a password. Press ENTER. The Enter Password screen appears.
- 4 Enter your password. The Re-enter Password screen appears to confirm the password. Enter your password again. The Parental Control screen appears.
- 5 **About the Rating Level ;**
The Rating Level will work only when Use Password is set to Yes. To unlock the player, use LEFT/RIGHT to select No. Use UP/DOWN to select Rating level. Press ENTER.



- Use UP/DOWN to select the level(e.g. Level 6) and press ENTER. Discs that contain Level 7 will now not play.
- To cancel the rating level, use LEFT/RIGHT to select No in Use Password.

- 6 **About the Change Password ;**

- Use UP/DOWN to select Change Password. The Change Password screen appears.
- Enter your new password. Re-enter the new password again.

NOTE

- How to make the SETUP MENU disappear or return to menu screen during set up; Press RETURN button.
- If you have forgotten your password, see Forget Password in the Troubleshooting Guide.

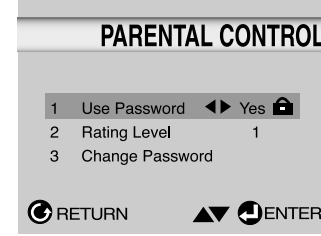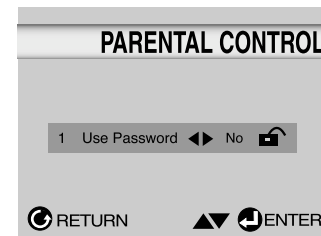


e.g Setting up in LEVEL6.



Setting Up the Audio Options

- 1 With the unit in Stop mode, press the SETUP button.
- 2 Use the UP/DOWN buttons to select AUDIO OPTIONS. Then press the ENTER button.
- 3 Use the UP/DOWN buttons to select the desired item. Then press the LEFT/RIGHT buttons.

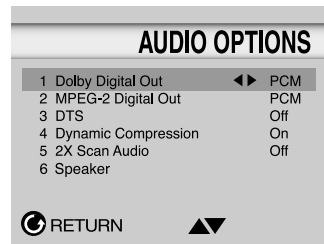

1 Dolby Digital Out

1. PCM :
Converts to PCM(2CH) audio.
Select PCM when using the Analog Audio Outputs.
2. Bitstream :
Converts to Dolby Digital Bitstream (5.1CH).
Select Bitstream when using the Digital Audio Output.

NOTE : Be sure to select the correct Digital Output or no audio will be heard.

DTS

- 3 1. Off : Doesn't output digital signal.
2. On : Outputs DTS Bitstream via digital output only.
Select DTS when connecting to a DTS Decoder.

2X Scan Audio

- 5 1. Off : Turns 2X audio off.
Though 2X Scan Audio is ON in the SETUP MENU, no sound will be heard on discs which are recorded with LPCM, DTS or MPEG-2 Audio.
2. On : Turns 2X audio on.

NOTE

- How to make the SETUP MENU disappear or return to menu screen during set up; Press RETURN button.
- "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

2 MPEG-2 Digital Out

1. PCM :
Converts to PCM(2CH) audio.
Select PCM when using the Analog Audio Outputs.
2. Bitstream :
Converts to MPEG-2 Digital Bitstream (5.1CH or 7.1CH).
Select Bitstream when using the Digital Audio Output.


4 Dynamic Compression

1. On : To select dynamic compression.
2. Off : To select the standard range.

6 Speaker (DVD-S425 only)

Surround Sound Speaker Setup (DVD-S425 only)

- 1 Press the SETUP button in play or stop mode.
- 2 Press the UP/DOWN buttons to select AUDIO OPTIONS. Then press the ENTER button.
- 3 Use the UP/DOWN buttons to select SPEAKER SETUP. Then press the ENTER button.
- 4 Use the UP/DOWN or LEFT/RIGHT buttons to select the desired item. Then press the ENTER button.

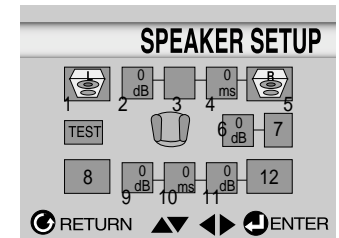

1. Speaker Mode(Front L)
2. Channel Balance(Center)OdB
3. Speaker Mode(Center)
4. Delay Time(Center)Oms
5. Speaker Mode(Front R)
6. Channel Balance(Subwoofer)OdB
7. Speaker Mode(Subwoofer)
8. Speaker Mode(Surround L)
9. Channel Balance(Surround L)OdB
10. Delay Time(Surround L/R)Oms
11. Channel Balance(Surround R)OdB
12. Speaker Mode(Surround R)

Setting up SPEAKER MODE

- If you have connected the system to a speaker with low frequencies of 100Hz or below, select 'Found (Large illustration)'.
- If you have connected the system to a speaker without low frequencies of 100Hz or below, select 'Found(Small illustration)'. If you don't connect a subwoofer, always select 'Found(Large illustration)' for the Front Speakers(L/R).
- When you don't have a particular speaker connected, select 'Not found (No illustration visible)'.

Setting up DELAY TIME

- When 5.1CH Surround Sound is played, you can enjoy the best sound if the distance between you and each speaker is the same. You can set Delay Time in the Center/Surround Speaker to customize the sound to the acoustic of your room.

Setting CENTER SPEAKER

- If the distance of Dc is equal to or longer than the distance of Df in the left figure, set the mode as Oms. Otherwise, change the setting according to the table below.

$$(A) = Df - Dc$$

| Distance of (A)(in) | Setting(ms) |
|---------------------|-------------|
| 0.00 | 0 |
| 0.34 | 1 |
| 0.68 | 2 |
| 1.02 | 3 |
| 1.36 | 4 |
| 1.70 | 5 |

Setting SURROUND SPEAKERS


- If the distance of Df is equal to the distance of Ds in the above, set the mode as Oms. Otherwise, change the setting according to the table on the right.

$$(B) = Df - Ds$$

| Distance of (B)(in) | Setting(ms) |
|---------------------|-------------|
| 0.00 | 0 |
| 1.02 | 3 |
| 2.04 | 6 |
| 3.06 | 9 |
| 4.08 | 12 |
| 5.10 | 15 |

Setting up TEST

The test output signals come clockwise starting from the Front Speaker(L). Adjust Channel Balance to match to the volume of test signals memorized in the system.

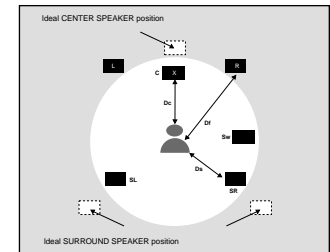


NOTE

- How to make the SETUP MENU disappear or return to menu screen during set up. Press RETURN button.
- The subwoofer test output signal is lower than the other speakers.
- The MPEG Multichannel logo is a trademark registered by PHILIPS Corporation.

Setting Up the Display Options

- 1 With the unit in Stop mode, press the SETUP button.
- 2 Use the UP/DOWN buttons to select DISPLAY OPTIONS. Then press the ENTER button.
- 3 Use the UP/DOWN buttons to select the desired item. Then press the LEFT/RIGHT buttons.

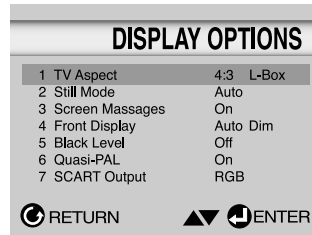

1 TV Aspect
Depending on the type of television you have, you may want to adjust the screen setting (aspect ratio).

1. 4:3 Letter Box :
Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.
2. 4:3 Pan-Scan :
Select this for conventional size TVs when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)
3. 16:9 Wide :
You can view the full 16:9 picture on your widescreen TV.

2 Still Mode
These options will help prevent picture shake in still mode and display small text clearer.

1. Auto : When selecting Auto, Field/Frame mode will be automatically converted.
2. Field : Select this feature when the screen shakes in the Auto mode.
3. Frame : Select this feature when you want to see small letters more clearly in the Auto mode.

3 Screen Messages
Use to turn on-screen messages On or Off.

4 Front Display
Adjust the brightness of the unit's front panel display.

1. Auto Dim : Makes the Front Panel Display dim automatically when playing a DVD.
2. Bright : Makes the Front Panel Display bright.
3. Dim : Makes the Front Panel Display dim.

5 Black Level
Adjusts the brightness of the screen.(On/Off)

6 Quasi-PAL
Depending on a disc, you can play a NTSC DVD disc by Quasi-PAL mode.

7 SCART Output

1. RGB : Sends RGB signal from the AV JACK(SCART terminal).
2. VIDEO : Sends COMPOSITE VIDEO signal from the AV JACK (SCART terminal).
3. S-VIDEO : Sends S-VIDEO signal from the AV JACK (SCART terminal).

NOTE

- How to make the SETUP MENU disappear or return to menu screen during set up; Press the RETURN button.

Controlling a TV with the Remote (DVD-S324/DVD-S325/DVD-S425 only)

The remote can also be set up to control most TVs. To program the remote, use the code that corresponds to your brand.

| TV Codes | |
|----------|---|
| CODE | BRAND |
| 01 | SAMSUNG_4 |
| 02 | SAMSUNG_6, LG, LOEWE, PHILIPS, FINLUX, YOKO, LOEWE OPTA, MITSUBISHI, PHONOLA, RADIOLA, SCHNEIDER |
| 03 | SAMSUNG_1 |
| 04 | SAMSUNG_2 |
| 05 | SAMSUNG_3 |
| 06 | SAMSUNG_5 |
| 07 | TOSHIBA |
| 08 | PANASONIC_4 |
| 09 | GRUNDIG, BLAUPUNKT, SIEMENS |
| 10 | SHARP |
| 11 | HITACHI |
| 12 | SANYO, AKAL, FISHER |
| 13 | HITACHI, SABA, THOMSON, NORDMENDE |
| 14 | HITACHI, NORDMENDE, SABA, TELEFUNKEN, THOMSON, BRANDT, FERGUSON, PIONEER, TELEAVA |
| 15 | SONY |
| 16 | TOSHIBA, SANYO, SHARP, SONY, MITSUBISHI |
| 17 | TOSHIBA, GRUNDIG, FINLUX |
| 18 | TOSHIBA |
| 19 | TOSHIBA |
| 20 | PHILIPS, PHONOLA, RADIOLA |
| 21 | TOSHIBA, GRUNDIG, CGE, IMPERIAL, MIVAR |
| 22 | PHILIPS, SABA, BANG&OLUFSEN, BRIONVEGA, FINLUX, FORMENTI, LOEWE OPTA, METZ, WEGA, PHONOLA, RADIOMARELLI, SINGER, SINUDYNE |
| 23 | NOKIA, PANASONIC, SABA, PIONEER, REZ, SELECO, SALORA |
| 24 | HITACHI, NORDMENDE, PANASONIC, SABA, TELEFUNKEN, THOMSON, CONTINENTAL, EDISON |
| 25 | PANASONIC_2 |
| 26 | PANASONIC_3 |
| 27 | PANASONIC_6 |
| 28 | TELEFUNKEN |
| 29 | MIVAL |
| 30 | LG_2 |
| 31 | SHARP_2 |
| 32 | JVC |
| 33 | THOMSON ASIA |
| 34 | THOMSON ASIA |

- 1 Turn on the TV.
- 2 Point the DVD's remote at the TV.
- 3 While holding the TV POWER button down, enter the code for your brand.
- 4 If the TV turns off, setup is complete.
- 5 Enter other codes of the same brand if the first code does not work.
- 5 To operate the TV, use the "TV Function Buttons" described on page 11.

e.g For SAMSUNG 4 TVs

While holding down the TV POWER button, enter 0 and then 1.


NOTE

The remote may not be able to control every model TV of the brands listed.

Troubleshooting

Specifications

Before requesting service (troubleshooting), please check the following.

| Problem | Action | Page |
|---|---|----------------|
| No operations can be performed with remote. | <ul style="list-style-type: none"> Check the batteries in the remote. May need replacing. Operate the remote control at a distance of no more than 20 feet. Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote to reset it. Reinstall batteries and try remote again. | P4 |
| Disc does not play. | <ul style="list-style-type: none"> Ensure that the disc is installed with the label side facing up. Check the region number of the DVD. | P 7 |
| 5.1 channel sound is not being reproduced. | <ul style="list-style-type: none"> 5.1 channel sound is reproduced only when the following conditions are met. : <ol style="list-style-type: none"> The DVD player is connected with the proper amplifier The disc is recorded with 5.1 channel sound. Check whether the disc being played has the "Dolby 5.1 ch" mark on the outside. Check if your audio system is connected and working properly. In a SETUP Menu, is the Audio Output set to Bitstream? | P 20, 44-45 |
| The  icon appears on screen. | <ul style="list-style-type: none"> The features or action cannot be completed at this time because: <ol style="list-style-type: none"> The DVD's software restricts it. The DVD's software doesn't support the feature (e.g., angles). The feature is not available at the moment. You've requested a title or chapter number or search time that is out of range. | P 23 |
| Disc Menu doesn't appear. | <ul style="list-style-type: none"> Check if the disc has a Menu. | P 40-41 |
| Play mode differs from the Setup Menu selection. | <ul style="list-style-type: none"> Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function. | P 40-46 |
| The screen ratio cannot be changed. | <ul style="list-style-type: none"> The Screen Ratio is fixed on your DVDs. | P 46 |
| No audio. | <ul style="list-style-type: none"> Make sure you have selected the correct Digital Output in the Audio Options Menu. | P 44, 45 |
| Forgot password | <ul style="list-style-type: none"> Press power on from a cold start with no disc in the unit. Press the STOP and PLAY buttons simultaneously on the front panel for three seconds. The Select Menu Language display will appear. Select the desired language button. Press the SETUP button on the remote control to select the Parental Mode. The Parental Mode is now unlocked as indicated on the display. Press the DOWN button to select Parental. Press ENTER and the Create Password display will appear. You can now set your rating level and change your password to a new number. | P 43 |
| If you experience other problems. | <ul style="list-style-type: none"> Go to the contents and find the section of the instruction book that contains the explanations regarding the current problem, and follow the procedure once again. If the problem still cannot be solved, please contact your nearest authorized service center. | |

| | | |
|--------------|---------------------------------|--|
| General | Power Requirements | AC 230 V, 50 Hz |
| | Power Consumption | 13 W |
| | Weight | 2.8 Kg |
| | Dimensions | 430mm X 240mm X 79mm |
| | Operating Temperature Range | +3°F to +35°F |
| | Operating Humidity Range | 10 % to 75 % |
| Disc | DVD (DIGITAL VERSATILE DISC) | Reading Speed : 3.49 ft/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min. |
| | CD : 12Cm (COMPACT DISC) | Reading Speed : 1.2 to 1.4 ft/sec. Maximum Play Time : 74 min. |
| | CD : 8Cm (COMPACT DISC) | Reading Speed : 1.2 to 1.4ft/sec. Maximum Play Time : 20 min. |
| | VCD : 12Cm | Reading Speed : 1.2 to 1.4 ft/sec. Maximum Play Time : 74 min. (Video + Audio) |
| Video Output | Composite Video | 2 channel : 1.0 Vp-p (75 Ω load) |
| | SCART Jack | R(Red) : 0.714 Vp-p (75 Ω load) G(Green) : 0.714 Vp-p (75 Ω load) B(Blue) : 0.714 Vp-p (75 Ω load) Composite Video : 1.0 Vp-p (75 Ω load) Luminance Signal : 1.0 Vp-p (75 Ω load) Color Signal : 0.286 Vp-p (75 Ω load) |
| | S-VIDEO | Luminance Signal : 1.0 Vp-p (75 Ω load) Chrominance Signal : 0.286 Vp-p (75 Ω load) |
| Audio Output | SCART Jack | 2 Channel : L(1/L), R(2/R) |
| | 2 channel | L(1/L), R(2/R) |
| | *Frequency Response | 48 kHz Sampling : 4 Hz to 22 kHz 96 kHz Sampling : 4 Hz to 44 kHz |
| | *S/N Ratio | 110 dB |
| | *Dynamic Range | 100 dB |
| | *Total Harmonic Distortion | 0.004 % |

*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.



 
UNITED KINGDOM

This Samsung product is warranted for the period of twelve (12) months from the original date of purchase, against defective materials and workmanship. In the event that warranty service is required, you should return the product to the retailer from whom it was purchased. However, Samsung Authorised Dealers and Authorised Service Centres in other EC Countries will comply with the warranty on the terms issued to purchasers in the country concerned. In case of difficulty, details of our Authorised Service Centres are available from:

**Samsung Electronics (U.K.) Ltd.,
Euro Service Centre, Stafford Park 12,
TELFORD, Shropshire TF3 3BJ,
Tel: 0870) 242 0303, Fax: 01952) 207 117**

■ WARRANTY CONDITIONS

1. The warranty is only valid if, when warranty service is required, the warranty card is fully and properly completed and is presented with the original invoice or sales slip or confirmation, and the serial number on the product has not been defaced.
2. Samsung's obligations are limited to the repair or, at its discretion, replacement of the product or the defective part.
3. Warranty repairs must be carried out by Authorised Samsung Dealers or Authorised Service Centres. No re-imburement will be made for repairs carried out by non Samsung Dealers and, any such repair work and damage to the products caused by such repair work will not be covered by this warranty.
4. This product is not considered to be defective in materials nor workmanship by reason that it requires adaptation in order to conform to national or local technical or safety standards in force in any Country other than the one for which the product was originally designed and manufactured. This warranty will not cover, and no re-imburement will be made for such adaptation nor any damage which may result.



REPUBLIC OF IRELAND

5. This warranty covers none of the following:
 - a) Periodic check ups, maintenance and repair or replacement of parts due to normal wear and tear.
 - b) Cost relating to transport, removal or installation of the product.
 - c) Misuse, including the failure to use this product for its normal purposes or incorrect installation.
 - d) Damage caused by Lightning, Water, Fire, Acts of God, War, Public Disturbances, incorrect mains voltage, improper ventilation or any other cause beyond the control of Samsung.
6. This warranty is valid for any person who legally acquired possession of the product during the warranty period.
7. The consumers statutory rights in any applicable national legislation whether against the retailer arising from the purchase contract or otherwise are not affected by this warranty. Unless there is national legislation to the contrary, the rights under this warranty are the consumers sole rights and Samsung, its subsidiaries and distributors shall not be liable for indirect or consequential loss or any damage to records, compact discs, videos or audio taper or any other related equipment or material.

SAMSUNG ELECTRONICS (U.K.) LTD.