


MODELING SIGNAL PROCESSOR

AX100G

REMS

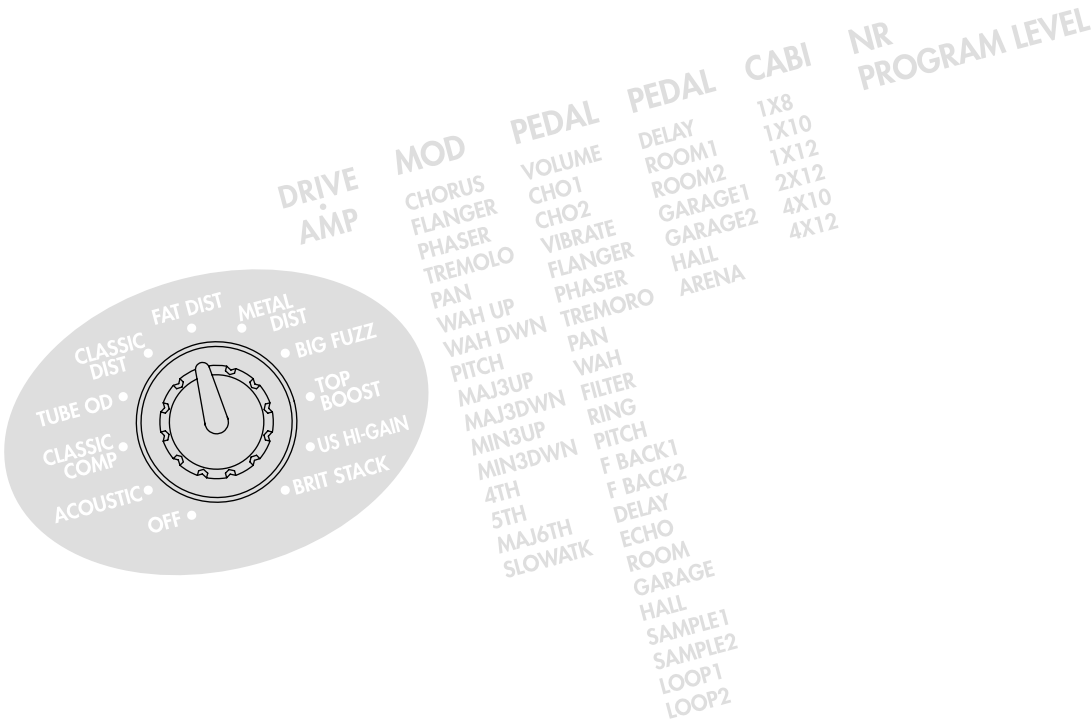

OWNER'S MANUAL P.2

Precautions

Location

Using the unit in the following locations can result in a malfunction.

- In direct sunlight
- Locations of extreme temperature or humidity
- Excessively dusty or dirty locations
- Locations of excessive vibration

Power supply

Please connect the designated AC adaptor to an AC outlet of the correct voltage. Do not connect it to an AC outlet of voltage other than that for which your unit is intended.

Interference with other electrical devices

This product contains a microcomputer. Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Handling

To avoid breakage, do not apply excessive force to the switches or controls.

Care

If the exterior becomes dirty, wipe it with a clean, dry cloth. Do not use liquid cleaners such as benzene or thinner, or cleaning compounds or flammable polishes.

Keep this manual

After reading this manual, please keep it for later reference.

Keeping foreign matter out of your equipment

- Never set any container with liquid in it near this equipment. If liquid gets into the equipment, it could cause a breakdown, fire, or electrical shock.
- Be careful not to let metal objects get into the equipment. If something does slip into the equipment, unplug the AC adaptor from the wall outlet. Then contact your nearest Korg dealer or the store where the equipment was purchased.

THE FCC REGULATION WARNING (for U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

CE mark for European Harmonized Standards

CE mark which is attached to our company's products of AC mains operated apparatus until December 31, 1996 means it conforms to EMC Directive (89/336/EEC) and CE mark Directive (93/68/EEC). And, CE mark which is attached after January 1, 1997 means it conforms to EMC Directive (89/336/EEC), CE mark Directive (93/68/EEC) and Low Voltage Directive (73/23/EEC).

Also, CE mark which is attached to our company's products of Battery operated apparatus means it conforms to EMC Directive (89/336/EEC) and CE mark Directive (93/68/EEC).

Printing conventions in this manual



marks a point of caution.

LCD screens printed in this manual are only for purposes of illustration, and may not match the actual display on your **AX100G**.

Contents

1. Introduction	3
Main features	3
Front and rear panel	4
Front panel	4
Rear panel	4
The modes of the AX100G	5
Installing the batteries	5
2. Playing the AX100G	5
Example connections	5
Turn on the power	5
Program mode	6
Input level switch setting	6
Adjusting the volume (master volume)	6
Selecting a program	6
Checking the effects used by a program	6
Bypass, Mute	6
Auto tuner	6
Rhythm	7
AUX IN	7
Expression pedal	7
Effect Select mode	7
Entering Effect Select mode	7
Exiting Effect Select mode	7
Phrase Trainer mode	8
3. Editing	9
Editing the effects	9
Drive Amp effect Quick Edit function	9
Editing the Drive Amp effect (example)	9
Editing other effects	10
Modifying the program name	10
Writing programs	10
4. Appendices	11
Adjusting the expression pedal (Calibration)	11
Restoring the user programs	
to the factory settings (Reload)	11
Troubleshooting	11
Main specifications	12
Effect parameters	12
DRIVE-AMP (Drive Amp effects)	12
MOD (Modulation effects)	13
PEDAL (Pedal effect)	14
AMB(Ambience effect)	15
CABI (Cabinet effect)	16
NR LEV	
(Noise Reduction, Program Level)	16
Rhythm Pattern List	16
Preset Program Parameter List	17

1. Introduction

Thank you for purchasing the **ToneWorks AX100G Modeling Signal Processor**.

In order to enjoy your **AX100G** to the fullest, please read this manual carefully, and use the unit correctly. Please keep this manual for future reference.

Main features


- Korg's **BEEMS** modeling technology provides detailed and powerful modeling sounds.
- 63 modeling effect variations are built-in, and up to 7 effects and rhythm sounds sources can be used simultaneously.
- Forty preset programs (4 x 10 banks) and forty rewritable user programs (4 x 10 banks) are built-in.
- In Effect Select mode you can use a foot switch to change the drive amp channel or turn the Modulation effect or Ambience effect on / off.
- Virtual Feedbacker lets you sustain a note on your guitar and generate feedback with vibrato
- You can use the expression pedal to control 23 types of Pedal effect in realtime.
- When using the delay effect, you can automatically set the delay time by pressing the TAP switch to the rhythm of the song you are playing.
- The Phrase Trainer function lets you record up to 8 seconds of sound from an audio device, and play it back at a slower speed without changing the pitch.
- The Sample & Play function lets you record a phrase for a maximum of 6 seconds, and use the expression pedal for phrase play back.
- 7 point LED pedal indicator
- 50 different rhythm patterns and a metronome are built-in for convenient practicing.
- Built in tuner mute function for on stage silent tuning.
- An AUX IN jack is provided allowing for connection to an external audio source (CD player, cassette tape deck, etc) for play along purposes.
- Use the auto chromatic tuner to tune your instrument when the **AX100G** is bypassed or muted.
- The LCD (multi-display) features an intuitive visual interface.
- The LCD is backlit for easy visibility even in dark locations.

What is **BEEMS**?

BEEMS (Resonant structure and Electronic circuit Modeling System) is KORG's proprietary sound modeling technology which precisely reproduces the complex character and nature of both acoustic and electric instruments as well as electronic circuits in real world environments. **BEEMS** emulates a wide variety of sound generation characteristics including instrument bodies, speakers & cabinets, acoustic fields, microphones, vacuum tubes, transistors, etc.

Front and rear panel

Front panel

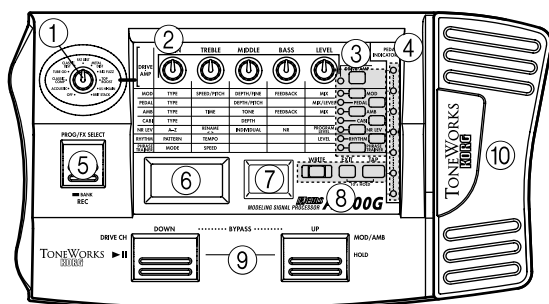

① Type knob

This knob selects the type of Drive Amp effect that will be used.

② Value knobs

For each effect, these knobs adjust the values of the parameters assigned to the knobs. From the left, these are referred to as value knobs 1—5.

When you are not editing an effect, parameters of the drive amp effect used by the selected program are assigned to these knobs. (Refer to p.9 "Drive Amp effect Quick Edit function.")

③ Select switches

Each time you press the **DRIVE AMP** switch, the drive amp channels A and B will alternate, and will be in Edit mode. At this time, the LED beside the switch will change between blinking green (channel A) and blinking red (channel B).

Each time you press the **MOD**, **PEDAL**, **AMB**, or **CABI** switch, the corresponding effect will be in edit mode (on) or off. The LED beside the corresponding switch will also change between blinking (lit) and dark.

Each time you press the **NR LEV** switch, you will alternate between editing and on. The LED beside the switch will change between blinking and dark.

Each time you press the **RHYTHM** or **PHRASE TRAINER** switch, the corresponding function will be switched on/off. The LED beside the corresponding switch will light or go dark.

④ Pedal indicator

This shows the state of the pedal effect (the depth to which it is pressed). When the tuner is operating, this shows the amount of pitch deviation. In Phrase Trainer mode, this shows the recording/playback time.

⑤ PROG/FX SELECT switch

Each time you press this switch, you will alternate between Program mode and Effect Select mode.

⑥ Multi-display

This displays information such as program names, parameter names and values, and editing icons.

⑦ Number LED

This displays the program bank and program number. While the Tuner is operating, it displays the note name.

⑧ WRITE, EXIT, TAP switches

The **WRITE** switch is used to write an edited program.

By pressing the **EXIT** switch, you can return to Program mode at any time.

When using a delay effect, you can press the **TAP** switch at the tempo of the song to set the delay time automatically.


⑨ DOWN, UP switches

These switches are used to select programs, bypass or mute, or to switch the drive amp channel.

⑩ Expression pedal

This controls the effect that is selected as the Pedal effect. After advancing the pedal all the way, you can press the pedal more firmly to switch the Pedal effect on/off.

Rear panel

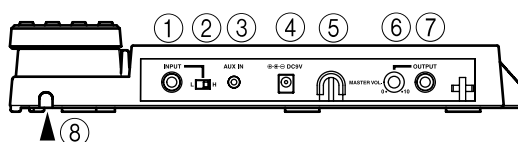

① INPUT jack

If you are using batteries, this jack acts as a power switch. When a cable is connected, the power will be turned on.

⚠ Before turning the power on or off, be sure to turn down the volume of any equipment that is connected.

② Input level switch

Set this switch according to the output of your instrument.

③ AUX IN jack (stereo mini)


Connect the output (AUX OUT: analog) of your audio device to this jack.

④ DC9V

The separately sold AC adapter (DC9V $\oplus \ominus$) can be connected here. When this is connected, the power will be turned on automatically.

⑤ Cable hook

If the separately sold AC adapter is connected, hook the cable of the AC adapter around this hook as shown below. When removing the cable from the hook, do not apply tension.

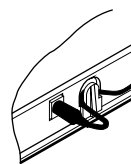

⑥ MASTER VOL. (Master volume)

This adjusts the volume of the OUTPUT jack.


⑦ OUTPUT jack

This also functions as the headphone jack.

⑧ Cable guide

This prevents the cable that connects the guitar to the **AX100G** from interfering with the operation of the pedal. Pass the cable through the guide as shown in the diagram below.

⚠ When using the cable guide, please use a cable whose diameter is 8 mm or less.

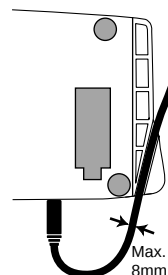

The modes of the AX100G

The **AX100G** is divided into three modes: **Program mode**, **Effect Select mode**, and **Phrase Trainer mode**.

Program mode

In this mode you can select programs and use the **AX100G** for normal performance.

Use the foot switches (**UP**, **DOWN**) to select programs.

Immediately after the power is turned on, the **AX100G** will always be in this mode. With the factory settings, the User programs contain the same programs as the Preset programs.

Effect Select mode

In this mode you can use the foot switches **UP** or **DOWN** to switch the drive amp channel*1, Modulation effect or Ambience effect on/off.

Programs cannot be selected in this mode. Use Program mode to select programs.

*1 The **AX100G** provides two (A and B) Drive (distortion) Amp Effects so that you can switch between settings such as backing and solo without having to change programs.

Phrase Trainer mode

This mode allows you to record a phrase from a CD or MD connected to the AUX IN jack, and play it back as a repeated loop that you can practice along with.


Since you can slow down the playback speed without affecting the pitch, this is a convenient way to learn or practice difficult phrases.

 When you enter **Phrase Trainer mode**, the Modulation, Pedal, and Ambience effects will be turned off automatically.

In **Program mode** and **Effect Select mode**, you can use the various knobs to edit the effect, adjust noise reduction, adjust the program level, and change the program name.

Installing the batteries

1. Lightly press on arrow A of the battery case, and slide the lid upward in the direction of the arrow to open the case.
2. Insert four AA alkaline batteries (sold separately) as shown in the diagram. Be careful to observe the correct polarity (+ and -) of the batteries.
3. Close the lid of the battery case.

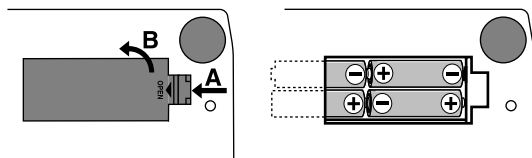


 If you will not be using the unit for an extended period of time, remove the batteries to prevent them from leaking.

 When the multi-display blinks "**BATTERY**," it is time to replace the batteries. Please install new batteries as soon as possible.

2. Playing the AX100G

Example connections

 The power must be off when making connections. Otherwise, damage to your speaker system, or other malfunctions may occur. Connecting cables are sold separately.

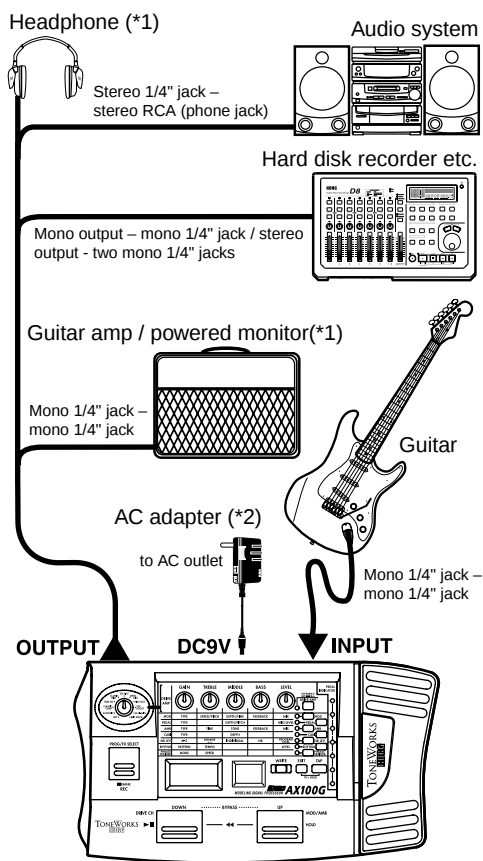

*1: The OUTPUT jack is a stereo output. If you use a mono cable to connect the **AX100G** to a guitar amp, only the L (left) side signal will be output to the amp.

*2: If you use batteries, the AC adapter is not necessary. If you use an AC adapter, be sure to use only the specified model (DC 9V ).

Turn on the power

The **AX100G** does not have a power switch.

The power will be turned on when one of the following occurs.

- ◆ If you are using batteries, the power will be turned on when you connect a mono cable to the INPUT jack. To maximize the battery life, disconnect the cable from the INPUT jack when you are not using the **AX100G**.

 If you connect a stereo cable, the power will not be turned on.

- ◆ If you are using the AC adapter (sold separately), the power will be turned on when you connect the AC adapter to a **DC 9V**.

Before you turn off the power of the **AX100G**, turn off the power of the other connected equipment.

Rhythm

Press the **RHYTHM** switch (the LED will light) and the rhythm will begin playing. Use value knob 1 to select the rhythm pattern (50 types), use value knob 2 to adjust the tempo (range: 40—208), and use value knob 3 to adjust the rhythm level (range: 0—30). To stop the rhythm, press the **RHYTHM** switch while the rhythm is playing.

 The rhythm will stop when you enter Bypass, Mute, or Edit modes.

AUX IN

Sound from an audio device (e.g. CD or MD) connected to the AUX IN jack can be mixed with the effect sound for listening, which is a convenient way to practice along with a song.

 The AUX input and the effect output will automatically be mixed and output from the OUT PUT jack except when you are in **Phrase Trainer mode**.

Use the controls on your audio device to adjust the AUX IN volume.

Expression pedal

You can use the expression pedal to control 23 types of Pedal effect in realtime.

If a program uses a Pedal effect, the pedal indicator LED's will light to indicate the Min-Max value of the effect when you press up and down on the pedal. Operation for the **SAMPLE1—LOOP2** pedal effects is different from the other effects (see p.14).

Using the expression pedal as you play

1. In **Program mode**, select a program that uses the expression pedal.
2. Make sure that the pedal indicator is lit. If it is not lit, advance the expression pedal once as far as it will go, making the top pedal indicator light (the pedal will be on)
3. Operate the expression pedal while playing your guitar. As you raise and lower the pedal, the output sound will change correspondingly.

 If **VOLUME** is selected in the Pedal effect, it will not be possible to turn the expression pedal on/off. The pedal indicator will remain lit.

 The on/off status of the expression pedal is not memorized by each program.


 Do not apply excessive force to the expression pedal. Before operating the expression pedal, verify the amount of force that is required to make the pedal indicator light and to apply the effect.

Effect Select mode

In this mode, you can press the **DOWN** switch to switch the drive channel while you perform. You can press the **UP** switch to turn the Modulation and Ambience effects on / off.

As in **Program mode**, you can edit the settings, use the metronome, and write a program.

 In this mode it is not possible to switch programs or to select bypass or mute.

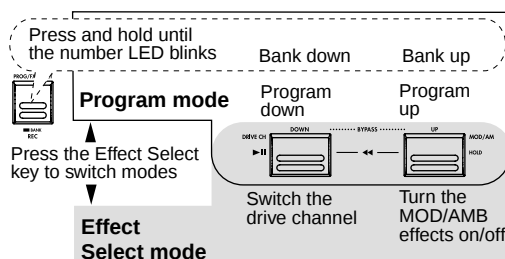

Entering Effect Select mode

In Program mode, press the **PROG/FX SELECT** switch to enter Effect Select mode. The multi-display will indicate "FX SEL," and the number LED will indicate "≡ ≡ ≡."

Switching the drive amp channel

Since each program contains two separate Drive Amp effect settings, you can switch between backing and solo sounds without changing programs.

Each time you press the **DOWN** switch, the Drive Amp effect settings will switch between channels A and B. When channel A is selected the LED beside the **DRIVE-AMP** switch will light green, and when channel B is selected the LED will light red.

Turning the Modulation and Ambience effects on/off (INDIVIDUAL)

Each time you press the **UP** switch, the Modulation effect or Ambience effect will be turned on / off.

The effects that are turned on / off when you press the **UP** switch can be specified beforehand in the settings of the program, as follows.

Procedure

1. Press the **NR LEV** switch.
2. Rotate value knob 3 to change the indication in the multi-display to the desired setting.

MOD: Only the Modulation effect will be turned on / off

AMB: Only the Ambience effect will be turned on / off

M+A: Both the modulation and ambience effects will be turned on / off

 For some effects, it is not possible for the Modulation and Pedal effects or the Pedal and Ambience effects to be used simultaneously. For such combinations, attempting to turn on both effects will cause the previously-on effect to be turned off automatically.

Exiting Effect Select mode

To return to **Program mode**, press either the **PROG/FX SELECT** switch or the **EXIT** switch.


Phrase Trainer mode

In this mode, you can record a phrase from an audio device (CD or MD) connected to the AUX IN jack, and play it back repeatedly as a loop. Then you can practice a phrase on your guitar while playing to the repeating phrase.

Since you can slow down the playback speed without affecting the pitch, this is a convenient way to learn or practice phrases from recordings that are difficult to play.

In Phrase Trainer mode, the expression pedal will automatically function as the volume control of your guitar.

 When you enter this mode, the Modulation, Pedal, and Ambience effects will automatically be turned off. (When you exit Phrase Trainer mode, the previous settings will be restored.)

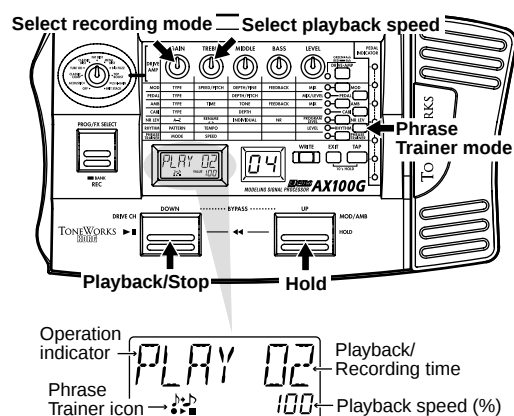

1. Enter Phrase Trainer mode

Press the **PHRASE TRAINER** switch located at the right of the panel. (The corresponding LED will light.)

The Phrase Trainer icon will blink in the multi-display, and the selected recording mode will be displayed.

 You cannot edit the sound of the guitar in **Phrase Trainer mode**.
You must select the desired sound before entering this mode.

2. Select the recording mode

Rotate value knob 1 to select the recording mode.

AUX IN: Record up to 8 seconds of the AUX sound

GTR IN: Record up to 8 seconds of the guitar sound

3. Begin recording

Start the connected device, and at the moment that you wish to begin recording, press the **PROG/FX SELECT** switch (REC) to begin recording. The multi-display will indicate **"REC"** and the number of seconds of recording, and the pedal indicator will show the recording time.

 Once you record a phrase, it is not possible to change the recording mode. If you wish to change the recording mode, you must return to **Program mode**, and once again enter **Phrase Trainer mode**.

4. Stop recording

At the point that you want to stop recording, press the **PROG/**
FX SELECT switch (REC). Recording will end when the maxi-
mum recording time (8 seconds) has elapsed. The multi-dis-
play will indicate **"PLAY,"** and loop (repeated) playback will
begin automatically.

 Depending on the volume of the connected audio device, the sound may be distorted. If this occurs, adjust the volume on the audio device.

To re-do the recording

Press the **DOWN** switch (▶/II) to stop playback. Then continue with step “3. Begin recording” and step “4. Stop recording.”

To erase the recorded phrase

Press the **EXIT** switch to delete the phrase. You can now record a new phrase to overwrite the previously-recorded phrase.

5. Stop/Playback

When you press the **DOWN** switch (▶/||), playback will stop. Press the **DOWN** switch (▶/||) once again, and playback will resume from where you stopped.

- While the sound is being held, you can press the **UP** and **DOWN** switches simultaneously, to return to the beginning of the recorded phrase.
- During playback, you can press the **UP** and **DOWN** switches simultaneously to rewind.
- During playback, you can press the **UP** switch (HOLD) to hold the sound at that moment. Press the switch once again to defeat this.

Changing the playback speed

You can slow down the playback speed without changing the pitch of the recorded phrase.

Rotate value knob 2 to slow down the playback in 5% steps:
100%, 95%, 90%, 85%, ... 25%.

Exiting Phrase Trainer mode

To return to **Program mode**, you can press the **PHRASE TRAINER** switch or **EXIT** switch.


 When you exit **Phrase Trainer mode** or turn off the power, the recorded phrase will be erased.

3. Editing

In Program mode and Effect Select mode, you can edit each effect, adjust the noise reduction and program level, and modify the program name.

During editing, the edit icons in the multi-display and the LEDs beside the select switches for each effect will blink.

 If you wish to save the effects you edited, you must use the "Program Write" operation. If you turn off the power or switch to another effect without performing "Program Write," the previous settings will reappear.

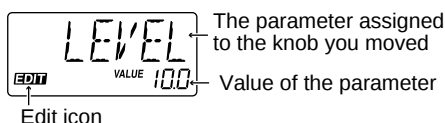

Editing the effects

The drive amp effect can be edited immediately by turning the value knobs or type knob; you do not have to press the **DRIVE-AMP** switch. (Refer to the section below, "Drive Amp effect Quick Edit function.")

To edit other effects, press the corresponding select switch to put that effect in Edit mode (the LED will blink).

Drive Amp effect Quick Edit function

You can edit the Drive Amp effect (unless the effect is turned off) by using the Type knob to re-select the effect, or by rotating the five value knobs to modify the parameter values. When you do so, the multi-display will show the effect name or parameter name assigned to the corresponding knob, and its current value.

Even when another effect such as Modulation or Pedal is in edit mode, you can still turn the type knob to edit the drive amp effect.

 Editing is not possible if other functions are assigned to the value knobs, nor in Bypass, Mute, or **Phrase Trainer** modes.

Drive amp channel


For each program, the Drive Amp effect has settings for two channels, A and B.

Press the **DRIVE-AMP** switch located at the right of the panel to select the channel you will edit. Each time you press the switch, the LED will change between green (channel A) and red (channel B).

Editing the Drive Amp effect (example)

As an example, here's how to set channel B of the Drive Amp effect to **TUBE OD**.

1. Press the **DRIVE-AMP** switch several times to select channel B (red LED).
2. If the multi-display reads "**TUBE OD**," no change is necessary. Otherwise, rotate the Type knob to select **TUBE OD**. If the Type knob is already located at the **TUBE OD** position, turn it first to another effect type, and then turn it back to **TUBE OD**.
3. The multi-display will indicate "**TUBE OD**" as the effect name. If you selected the effect that had been programmed, the Original icon in the multi-display will light.
4. The five value knobs will be assigned to **GAIN**, **TREBLE**, **MIDDLE**, **BASS**, and **LEVEL** respectively, and will adjust the value of the corresponding parameter. (See p.12, "Effect parameters.")
5. As you rotate the knobs, the sound will change and the multi-display will show the parameter name assigned to that knob and the current value. If you rotate the knob to adjust the value to the value it had before you began editing the original parameter value icon in the multi-display will light.

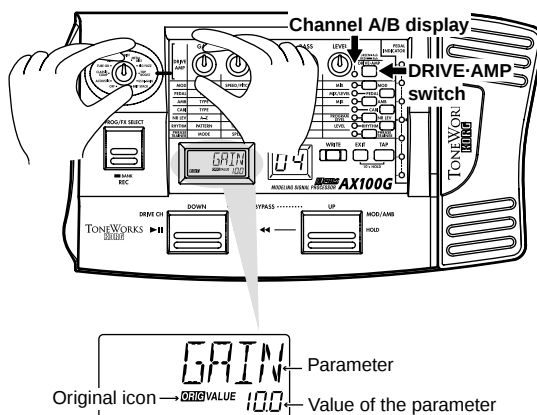

If you do not wish to use the Drive Amp effect, use the Type knob to select **OFF** so that the Drive Amp effect will be bypassed, and the multi-display will indicate "**DRV OFF**." In this case, the LED beside the **DRIVE-AMP** switch will go dark.

Editing other effects

Press the select switch for the desired effect to be edited.

MOD: Edits the Modulation effect (e.g., chorus)

PEDAL: Edits the Pedal effect (e.g., wah)

AMB: Edits the Ambience effect (e.g., delay)

CABI: Edits the Cabinet effect which models the cabinet resonances of a guitar amp


NR LEV: Edits the noise reduction and program level (volume)

 For some effects, the Modulation and Pedal effects, or the Pedal and Ambience effects cannot be used simultaneously. In the case of such a combination of effects, attempting to turn on both simultaneously will automatically turn off the previously-on effect.

As an example, here's how to select **CHORUS** as the Modulation effect.

1. Press the **MOD** switch. The LED beside it will blink, indicating that the Modulation effect is selected.
Even if the Modulation effect has been turned off within the program, it will be turned on at this point.
2. Rotate value knob 1 (**TYPE**) to select **CHORUS**. The type name will appear in the multi-display. If you select the effect that had originally been selected, the Original icon will appear in the multi-display.
3. Value knobs 2, 3, 4 and 5 will adjust the chorus speed (**SPEED**), chorus depth (**DEPTH**), chorus feedback amount (**FEEDBACK**), and the mix balance between the chorus sound and the direct sound (**MIX**). If the adjusted value matches the unedited value (the original parameter value) as you rotate a knob, the Original icon will appear in the multi-display.

The value knobs that can be used and the parameters that are assigned will depend on the type of each effect. (See p.12 "Effect parameters.")

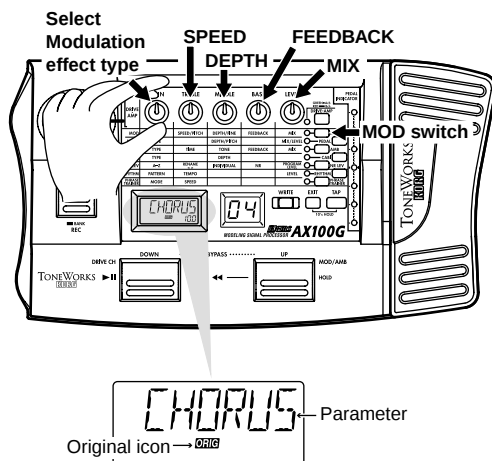


Using the TAP switch to edit the delay time

When using the Ambience or Pedal DELAY effect, press the **TAP** switch two times at the tempo of the song you are playing. The **AX100G** will detect the interval, and set the delay time automatically.

You can set the delay time in the same way even while you are not playing.

Modifying the program name

Press the **NR LEV** switch so that the LED beside the switch is blink. Use value knob 2 to select the character that you wish to change (the character will blink), and use value knob 1 to change the character. The available characters are shown below.

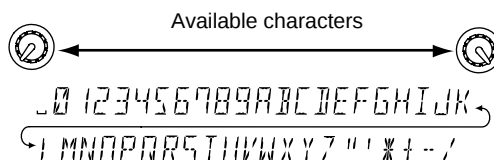

 If you wish to save the modified program name, you must perform the "Writing programs" operation. If you turn off the power or select a different program without writing the program, the program name you edited will revert to its previous setting.

Writing programs

Here's how to write an edited program.

1. Press the **WRITE** switch, and the Multi-display will indicate **"*WRITE*"**. The number LED will blink.
2. Use the **UP** and **DOWN** switches to select the destination for your program.
3. Press the **WRITE** switch once again, and the display will read **"COMPLT"** to indicate that the program has been written. You will then return to **Program mode**.

If you decide not to write, press the **EXIT** switch to cancel the Write operation.

 If you write an edited program to a different program number, the program that was overwritten will be lost.

 It is not possible to write to a preset program.

4. Appendices

Adjusting the expression pedal

(Calibration)

If you find the expression pedal difficult to use, perform this procedure so that the pedal will function optimally. For example if the effect does not reach maximum when the pedal is advanced all the way, or does not reach minimum when the pedal is returned all the way, use the following procedure to make the appropriate adjustments.


 When making adjustments, use your hand to move the pedal. Accurate calibration may not be possible if you use your foot to operate the pedal.

1. Turn on the power while simultaneously holding down the **EXIT** switch and the **PEDAL** switch. The Multi-display will show “**PEDAL**” for approximately one second, and will then indicate “**MIN**.”

2. Slowly return the pedal to the full back position. When it stops, release your hand and press the **WRITE** switch. The Multi-display will change from “**MIN**” to “**MAX**.”

 If you decide to halt the adjustment procedure, press the **EXIT** switch. The power-on display will appear, and you will enter **Program mode**.

3. Slowly advance the pedal. When it stops, release your hand and press the **WRITE** switch.

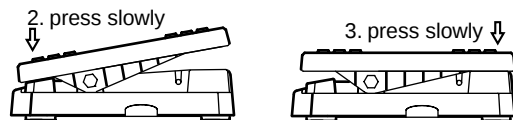

The Multi-display will indicate “**COMPLT**” for approximately one second. Then the power-on display will appear, and you will enter **Program mode**.

After the adjustment procedure has been completed, verify the operation of the pedal.

Select an effect that will make it easy to verify the adjustment. For example, set the Pedal effect to the **VOLUME** effect, set the value to **0**, and check the MIN level when the pedal is returned all the way.

 If you make a mistake during the calibration procedure, the Multi-display will indicate “**ERROR**,” and you will return to the screen before the adjustment (the “**MIN**” display). If the “**ERROR**” display appears for repeated attempts, a malfunction may have occurred. In this case, please contact your dealer.

Restoring the user programs to the factory settings (Reload)

1. Turn on the power while simultaneously holding down the **EXIT** switch and the **PROG/FX SELECT** switch. The Multi-display will indicate “**RELOAD?**”

2. Press the **WRITE** switch. The Multi-display will change to “**RELOAD**,” and the reload operation will begin. When the reload operation is completed, the display will indicate “**COMPLT**” for approximately one second. Then the power-on display will appear, and you will enter **Program mode**.

 Never turn off the power during the reload operation.

 When you perform the reload operation, all user programs will be rewritten. Rhythm settings will also be initialized.

Troubleshooting

If you suspect a malfunction, please check the following points first. If this does not resolve the problem, contact a nearby Korg dealer.

1. Power does not turn on

* Are batteries installed? Alternatively, is the AC adapter connected to an AC outlet? (☞p.5)

* Is a mono cable connected to the INPUT jack? (☞p.5)

2. No sound

* Are your guitar, amp, and headphones connected to the correct jack? (☞p.5)

* Is your amp turned on, and is it set accordingly?

* Is one of your connection cables broken?

* Has the **MASTER VOL** (master volume) of the **AX100G** been turned down? (☞p.6)

* Is the program level of the **AX100G** set to “**0**” or to a low value? (☞p.9, 16)

* Is the Level of the Drive Amp effects set to “**0**” or to a low value?

* Is the volume of your guitar turned down?

* Is the **AX100G** muted?

* If **VOLUME** is selected for the **PEDAL** effect, has the pedal been returned to the full back position?

3. Effects are not applied

* Is the **AX100G** bypassed? (☞p.6)

* Are the effects used by the program turned on? (☞p.6)

4. Rhythm does not function

* Are you in **Program mode** or in **Effect Select mode**? The rhythm will not function in **Phrase Trainer mode**.

* Is the rhythm output level set to “**0**”? (☞p.7)

5. Pedal does not function

* Have you selected a program that uses an effect in the **PEDAL** effect mode? (☞p.6)

* Is the pedal indicator lit? (☞p.4, 7)

* Try calibrating the expression pedal. (☞p.11)

6. Cannot write (the Multi-display indicates “ERROR”)

- * Did you turn the power off while the preset programs were being loaded?

Reload the preset programs. (p.11)

Main specifications

- ❑ **Number of effects:**
63 types
(maximum number of effects that can be used simultaneously: 7)
- ❑ **Number of programs:**
80 (40 preset, 40 user)
- ❑ **Inputs:**
Guitar input (mono)
AUX IN (stereo mini jack)
- ❑ **Outputs:**
Line / Headphone dual-purpose output
(stereo phone jack)
- ❑ **Tuner section**
Detection range: 27.5 Hz — 2,093 Hz (A0—C7)
Calibration: A=438—445 Hz
- ❑ **Rhythm section**
Pattern: 50 types
Tempo: bpm= 40—208
- ❑ **Power supply:**
four AA size (LR6) alkaline batteries
(battery life is 12 hours of continuous use)
or separately sold AC adapter (DC9V )
- ❑ **Dimensions:**
329.6(W) x 181.5 (D) x 57.5 (H) mm
- ❑ **Weight:**
1.05kg (not including batteries)
- ❑ **Included items:**
Owner’s manual

* Specifications and appearance are subject to change with out notice for improvement.

Effect parameters

DRIVE AMP (Drive Amp effects)

TYPE	Knob 1 GAIN	Knob 2 TREBLE	Knob 3 MIDDLE	Knob 4 BASS	Knob 5 LEVEL
OFF	—	—	—	—	—
ACOUSTIC	0...10.0	0...10.0	0...10.0	0...10.0	0...10.0
CLASSIC COMP	0...10.0	0...10.0	0...10.0	0...10.0	0...10.0
TUBE OD	0...10.0	0...10.0	0...10.0	0...10.0	0...10.0
CLASSIC DIST	0...10.0	0...10.0	0...10.0	0...10.0	0...10.0
FAT DIST	0...10.0	0...10.0	0...10.0	0...10.0	0...10.0
METAL DIST	0...10.0	0...10.0	0...10.0	0...10.0	0...10.0
BIG FUZZ	0...10.0	0...10.0	0...10.0	0...10.0	0...10.0
TOP BOOST	0...10.0	0...10.0	0...10.0	0...10.0	0...10.0
US HI-GAIN	0...10.0	0...10.0	0...10.0	0...10.0	0...10.0
BRIT STACK	0...10.0	0...10.0	0...10.0	0...10.0	0...10.0

These Drive Amp models combine sound processing effects such as compressor, overdrive, or distortion with a three-band equalizer to adjust the tone. The following parameters are assigned to each knob.

Type knob		Select the type of drive or amp
Knob 1	GAIN	Adjusts the amount of distortion.
Knob 2	TREBLE	Adjusts the treble (high-frequency range).
Knob 3	MIDDLE	Adjusts the mid (mid-frequency range).
Knob 4	BASS	Adjusts the bass (low-frequency range).
Knob 5	LEVEL	Adjusts the output level.

 If the sound distorts, slightly decrease the **LEVEL**, **TREBLE**, **MIDDLE**, and **BASS**.

OFF (off) **“DRV OFF”**
Turn off the Drive Amp effect.

ACOUSTIC (Acoustic) **“ACOUSTC”**
This effect model transforms the sound of an electric guitar into the sound of an acoustic guitar. A more realistic acoustic guitar simulation will be obtained if you use the pickup closest to the neck. A compressor with adjustable sensitivity (**GAIN**) is built-in.

CLASSIC COMP (Classic compressor) **“CL COMP”**
A compressor is an effect that boosts low-level sounds and turns down louder levels in order to compress differences in volume and make the sound more consistent. This model will make your picking more even, and will produce smooth sustain.

TUBE OD (Tube overdrive) **“TUBE OD”**
It simulates the overdriven sound of a popular tube overdrive pedal from the 70’s that responds well to the nuances of your picking.

CLASSIC DIST (Classic distortion) **“CL DIST”**
This model simulates a popular distortion pedal from the 70’s.

FAT DIST (fat sounding distortion) **“FAT DST”**
This model simulates a popular fat sounding distortion pedal from the 80’s.

METAL DIST (metallic distortion) **“METAL”**
This model simulates the metallic distortion of the 90’s.

BIG FUZZ (Big fuzz) **“BIGFUZZ”**
This model simulates a popular vintage fuzz unit.

TOP BOOST (Top boost) **“T-BOOST”**
This model simulates the sound of an AC30 overdriven by a popular 80’s OD pedal.

US HI-GAIN (U.S. High Gain)

This model simulates the distortion typical of a high-gain amp made in the USA.

BRIT STACK (British amp stack)

This model simulates the distortion typical of a British amp stack.

“US HI-G”

“BRITSTK”

WAH UP (Auto-wah filter up)

This is an auto-wah filter that automatically opens or closes according to how hard you pick the strings.

WAH DWN (Auto-wah filter down)

Auto wah in opposite direction from **WAH UP**

PITCH (Pitch)

This is a pitch shifter that can change the pitch in a +/- 2 octave range.

MOD (Modulation effects)

Knob 1 TYPE	Knob 2 SPEED/PITCH	Knob 3 DEPTH/FINE	Knob 4 FEEDBACK	Knob 5 MIX
CHORUS	0.1...10 [Hz]	0...10.0	0...10.0	0...10.0
FLANGER	0.1...10 [Hz]	0...10.0	-15...15	0...10.0
PHASER	0.1...10 [Hz]	0...10.0	0...10.0	—
TREMOLO	1...10 [Hz]	0...10.0	—	—
PAN	1...10 [Hz]	0...10.0	—	—
WAH UP	—	0...10.0	—	—
WAH DWN	—	0...10.0	—	—
PITCH	-24...24 [x100CENT]	-50...50 [CENT]	—	0...10.0
MAJ3UP	—	—	C...B	0...10.0
MAJ3DWN	—	—	C...B	0...10.0
MIN3UP	—	—	C...B	0...10.0
MIN3DWN	—	—	C...B	0...10.0
4TH	—	—	C...B	0...10.0
5TH	—	—	C...B	0...10.0
MAJ6TH	—	—	C...B	0...10.0
SLOWATK	0...10.0	0...10.0	—	—

Chorus and flanger are effects that delay the sound slightly to modulate the pitch, and combine the modulated sound with the original to produce a sensation of modulated spaciousness. The following parameters are assigned to each knob.

Knob 1	TYPE	Select the effect type
Knob 2	SPEED/PITCH	Adjusts the speed / Adjusts the pitch
Knob 3	DEPTH/FINE	Adjusts the depth / Adjusts the fine pitch
Knob 4	FEEDBACK	Adjust the strength of the tonal character.
Knob 5	MIX	Adjust the mix balance between the effect sound and the original sound

CHORUS (Chorus)

This chorus effect creates a sense of modulation, spaciousness, and vibrato by slightly delaying the sound, modulating its pitch, and combining it with the original sound. This is most effective when used in stereo.

FLANGER (Flanger)

This is a vintage flanger that produces modulation and a sense of pitch movement.

PHASER (Phaser)

This effect cyclically modifies the phase shift of the sound, and mixes the phase-shifted sound with the original sound to produce modulation.

TREMOLO (Tremolo)

This effect adds depth to the sound by modulating the volume.

PAN (Panpot)

This effect cyclically changes the pan of sound, when stereo playback is used.

Intelligent Pitch Shifter

MAJ3UP (3rd up in a major key)

MAJ3DWN (3rd down in a major key)

MIN3UP (3rd up in a minor key)

MIN3DWN (3rd down in a minor key)

 
4TH (4th up in a major key)

5TH (5th up in a major key)

MAJ6TH (6th up in a major key)

The Intelligent Pitch Shifter creates musically useful harmonies by varying the amount of pitch shift according to the note you play and the key in which you are playing. For example if you select a pitch shift of a 3rd upward in a major key (**MAJ3UP**), the amount of pitch shift will vary automatically between three semitones (a minor third) and four semitones (a major third).

- When **MAJ3UP** is used with a key setting of C



The pitch created by the intelligent pitch shifter is shown in parentheses ().

 If your instrument is not tuned correctly, the results may not be as you expect. In this case, re-tune your instrument.

 The intelligent pitch shifter will function when you play individual notes. It cannot produce the effect for chords.

 This effect cannot be used simultaneously with a Pedal effect (except for **VOLUME**) or with the **ROOM1—ARENA** Ambience effects. If you use the Intelligent Pitch Shifter in a program in which the Pedal effect or a **ROOM1—ARENA** Ambience effect is turned on, the pedal or **ROOM1—ARENA** Ambience effect will be turned off automatically.

SLOWATK (Slow Attack)

This effect gradually raises the volume each time you pick your guitar. Value knob 2 controls the speed of the attack, and value knob 3 controls the threshold level. As you raise the threshold level, you will need to pick more harder to produce the slow attack effect.

PEDAL (Pedal effect)

Knob 1 TYPE	Knob 2	Knob 3 DEPTH/PITCH	Knob 4	Knob 5 MIX/LEVEL	Pedal
VOLUME	---	---	---	0...10.0	Volume
CHO1	---	0...10.0	---	---	Depth
CHO2	---	0...10.0	---	---	Speed
VIBRATE	---	0...10.0	---	---	Speed
FLANGER	---	0...10.0	---	---	Modulation
PHASER	---	0...10.0	---	---	Speed
TREMOLO	---	0...10.0	---	---	Speed
PAN	---	0...10.0	---	---	Speed
WAH	---	---	---	---	Peak Fre.
FILTER	---	0...10.0	---	---	Peak Fre.
RING	---	0...10.0	---	---	Pitch
PITCH	---	-24...24 [CENT]	---	0...10.0	Pitch
F BACK1	---	0...10.0	---	---	Level+Reverb
F BACK2	---	0...10.0	---	---	Level+Reverb
DELAY	---	10[ms]...2[SEC]	---	0...10.0	Effect level
ECHO	---	10[ms]...2[SEC]	---	0...10.0	Delay time
ROOM	---	---	---	0...10.0	Reverb level
GARAGE	---	---	---	0...10.0	Reverb level
HALL	---	---	---	0...10.0	Reverb level
SAMPLE1	---	S/L	---	---	Playback
SAMPLE2	---	S/L	---	---	Play/reverse
LOOP1	---	S/L	---	---	Volume
LOOP2	---	S/L	---	---	Loop time

These effect models let you use the expression pedal to control the effect in realtime. The following parameters are assigned to each knob.

- Knob 1 **TYPE** Select the effect type
- Knob 3 **DEPTH/PITCH** Adjusts the depth / Adjusts the pitch
- Knob 5 **MIX/LEVEL** Adjusts the mix balance between the effect sound and original sound / Adjusts the level

 **CHO1—PITCH** cannot be used simultaneously with the Modulation effect. If you use this effect in a program where the Modulation effect is turned on, the Modulation effect will automatically be turned off.

 **F BACK 1 and 2** cannot be used simultaneously with the **ROOM1—ARENA** Ambience effects. If you use these effects in a program where **ROOM1—ARENA** are turned on, the **ROOM1—ARENA** effect will be turned off automatically.

 **DELAY—HALL** cannot be used simultaneously with the Ambience effect. If you use this effect in a program where the Ambience effect is turned on, the Ambience effect will automatically be turned off.

 **SAMPLE1—LOOP2** cannot be used simultaneously with a Modulation effect or Ambience effect. If you use the **SAMPLE1—LOOP2** effects in a program where a Modulation effect or Ambience effect are turned on, that effect will be turned off automatically.

VOLUME (Volume)

This is a volume pedal. Value knob 5 sets the minimum level.

CHO1 (Chorus1)

This is a chorus effect in which the pedal controls the depth of the pitch modulation.

CHO2 (Chorus2)

This is a chorus effect in which the pedal controls the speed of the pitch modulation.

VIBRATO (Vibrato)

This is a vibrato effect in which the pedal controls the speed of the pitch modulation.

FLANGER (Flanger)

This is a flanger in which the pedal controls the bandwidth (modulation) of the effect.

PHASER (Phaser)

This is a phaser in which the pedal controls the speed of the phase modulation.

TREMOLO (Tremolo)

This is a tremolo effect in which the pedal controls the speed of the volume change.

PAN (Panpot)

This is a pan effect in which the pedal controls the speed at which the position of the sound will change when stereo playback is used.

WAH (Wah)

This is a wah in which the pedal controls the peak frequency.

FILTER (Resonance Filter)

This is a resonance filter in which the pedal controls the peak frequency of the filter.

RING (Ring Modulator)

This effect creates a bell-like sound in which the pedal controls the pitch. To obtain the cleanest effect, use the pickup closes to the neck, turn down the tone of your guitar, and play near the 12th fret.

PITCH (pitch shifter)

The pedal will control the amount of pitch shift. When value knob 5 is at "0" only the original sound will be heard. At "5" the original sound and effect sound will be mixed equally, and at "10" only the effect sound will be heard.

Feed Back

In this effect, the pedal controls the vibrato that is applied to the feedback sound.

While sustaining a note on your guitar, advance the pedal to produce a feedback sound. The feedback sound will disappear when you return the pedal. Value knob 3 adjusts the speed of the vibrato.

 There will be no feedback effect if **OFF**, **ACOUSTIC**, or **CLASSIC COMP** is selected for the Drive Amp effect.

F BACK1 (Feed Back1)

A feedback sound will be generated to the pitch of your playing.

F BACK2 (Feed Back2)

A feedback sound will be generated one octave above your playing.

DELAY (Delay)

In this effect, you can use the pedal to control the input level of the delay.

By pressing the **TAP** switch two times, you can set the TIME of knob 2 to the corresponding tempo.

ECHO (Echo)

This is an echo in which the pedal controls the delay time. As on a tape echo unit, changing the delay time will also change the pitch. Value knob 3 adjusts the maximum delay time.

ROOM (Room Reverb)

This simulates the reverberation of a small room the size of a studio. The pedal will control the reverb level.

GARAGE (Garage Reverb)

This simulates the reverberation of a mid-size room such as a garage. The pedal will control the reverb level.

HALL (Hall Reverb)

This simulates the reverberation of a mid-size to large hall. The pedal will control the reverb level.

Sample and play

The **SAMPLE1** to **LOOP2** effects allow you to record a phrase up to 6 seconds, and then use the pedal to play it back.



The recorded phrase will be erased when you change the effect type or program, when you use the Phrase Trainer, or when you turn the power off.



The recorded phrase will be erased when you change the effect type or program, when you use the Phrase Trainer, or when you turn the power off.

SAMPLE1 (Sample1)

The recorded phrase will playback when you press the pedal.

SAMPLE2 (Sample2)

The recorded phrase will playback when you press the pedal, and will playback in reverse when you return the pedal.

Procedure for Sample 1 and 2

1. Select **SAMPLE 1** or **SAMPLE 2** for the Pedal effect, or choose a program that uses these effects.
2. Use value knob 3 to select the recording time (**S** is three seconds of high-quality recording, **L** is six seconds of extended recording).
3. Advance the expression pedal all the way until the pedal indicator blinks, to enter record-ready mode.
4. Begin playing a phrase. Recording will begin automatically when you start playing your guitar, and the pedal indicator will change from blinking to lit.
5. Recording will end when the recording time has elapsed. It is not possible to stop recording before this time. If you wish to re-do the recording, repeat the procedure from "3. Advance the expression pedal..."
6. Operate the expression pedal.

LOOP1 (Loop1)

As soon as you record a phrase, it will be played back as a loop (repeatedly). When you return the pedal (to minimum volume), the phrase will return to the beginning. When you advance the pedal, loop (repeated) playback will occur again. Use the pedal to adjust the playback volume.

LOOP2 (Loop2)

The pedal will control the length of the loop. The loop will become shorter as you return the pedal, and at the minimum length the loop will not playback at all.

Procedure for Loop 1 and 2

1. Select **LOOP 1** or **LOOP 2** for the Pedal effect, or choose a program that uses these effects.
2. Use value knob 3 to select the maximum recording time. (**S** is 3 seconds of high quality, **L** is 6 seconds of extended recording.)

3. Advance the expression pedal all the way until the pedal indicator blinks, to enter record-ready mode.
4. Begin playing a phrase. Recording will begin automatically when you start playing your guitar, and the pedal indicator will change from blinking to lit.
5. Recording will end when you record up to the maximum time, or when you once again advance the pedal all the way. When recording ends, the pedal indicator will go dark, and the recorded sound will be played back as a loop. If you wish to re-do the recording, repeat from step "3. Advance the expression pedal ..."
6. Operate the expression pedal.

AMB (Ambience effect)

Knob 1 TYPE	Knob 2 TIME	Knob 3 TONE	Knob 4 FEEDBACK	Knob 5 MIX
DELAY	10 [ms]...2 [SEC]	0...10.0	0...10.0	0...10.0
ROOM1	—	—	—	0...10.0
ROOM2	—	—	—	0...10.0
GARAGE1	—	—	—	0...10.0
GARAGE2	—	—	—	0...10.0
HALL	—	—	—	0...10.0
ARENA	—	—	—	0...10.0

These are reverberation-type effect models such as delay, reverb, and echo. The following parameters are assigned to each knob.

Knob 1	TYPE	Selects the effect type
Knob 2	TIME	Adjusts the delay time
Knob 3	TONE	Adjusts the tonal quality
Knob 4	FEEDBACK	Adjusts the delay repeats
Knob 5	MIX	Adjusts the mix amount

DELAY (Delay)

This adds spaciousness to the sound by using a stereo delay with a time difference between left and right.

By pressing the **TAP** switch two times, you can set the **TIME** of knob 2 to the corresponding tempo.

ROOM1 (Room 1)

Deep room type reverb

ROOM2 (Room 2)

Bright room type reverb

GARAGE1 (Garage 1)

Garage-type reverb1

GARAGE2 (Garage 2)

Garage-type reverb2

HALL (Hall)

Hall type reverb

ARENA (Arena)

Arena-type reverb

CABI (Cabinet effect)

Knob 1 TYPE	Knob 2	Knob 3 DEPTH	Knob 4	Knob 5
1×8		0...10.0		
1×10		0...10.0		
1×12		0...10.0		
2×12		0...10.0		
4×10		0...10.0		
4×12		0...10.0		

The cabinet resonator simulates the acoustical characteristics of a guitar amplifier cabinet. Although these models are especially effective when you are plugged in to a mixer etc. via a direct line connection, they are also effective when you are using a guitar amp. The following parameters are assigned to each knob.

Knob 1 **TYPE** Select the cabinet type
Knob 3 **DEPTH** Adjusts depth

- 1×8**
Simulation of a cabinet with a single 8-inch speaker
- 1×10**
Simulation of a cabinet with a single 10-inch speaker
- 1×12**
Simulation of a cabinet with a single 12-inch speaker
- 2×12**
Simulation of a cabinet with two 12-inch speakers
- 4×10**
Simulation of a cabinet with four 10-inch speakers
- 4×12**
Simulation of a cabinet with four 12-inch speakers

NR LEV

(Noise Reduction, Program Level)

Adjust the depth of noise reduction and the level for each program.

 Use value knobs 1 and 2 to modify the program name (see p.10), and use value knob 3 to turn the modulation and/or ambience effects on/off (see p.7).

NR (Noise Reduction) **“NR”**
This is adjusted by value knob 4. Depending on the guitar that you use, excessively high noise reduction settings may cause the sound to be interrupted. Set this accordingly.

PROGRAM LEVEL **“PROGLEV”**
This is adjusted by value knob 5. The volume of each program will change depending on your guitar. Adjust the program level as accordingly.

Rhythm Pattern List

No.	Name	No.	Name
1	8BEAT1	26	DISCO
2	8BEAT2	27	EURO
3	8BEAT3	28	FUNK
4	8BEAT4	29	JAZZ1
5	8BEAT5	30	JAZZ2
6	8BEAT6	31	MOTOWN
7	8SHFL	32	REGGAE 1
8	16BEAT1	33	REGGAE 2
9	16BEAT2	34	SURF
10	16BEAT3	35	COUNTRY
11	16BEAT4	36	BOSSA
12	16BEAT5	37	SAMBA
13	16SHFL1	38	PRACT0
14	16SHFL2	39	PRACT1
15	16SHFL3	40	PRACT2
16	16SHFL4	41	PRACT3
17	3/4	42	PRACT4
18	6/4	43	PRACT5
19	6/8	44	PRACT6
20	BALAD	45	PRACT7
21	BLUES	46	PRACT8
22	ROCK	47	PRACT9
23	THRASH	48	METRO1
24	DANCE1	49	METRO2
25	DANCE2	50	METRO3

Preset Program Parameter List

When an effect that was off is turned on, the effect model printed in a slanted typeface will be selected.
With the factory settings, the user programs have the same contents as the preset programs.

BANK	#	PROGRAM	DRIVE-AMP A	DRIVE-AMP B	MOD	PEDAL	AMB	CABI
0	1	STATIC	US HI-G	METAL	<i>PHASE</i>	VOLUME	ROOM2	4X12
	2	FILTER	ACOUSTIC	FAT DST	CHORUS	VOLUME	GARAGE2	4X12
	3	KIDROCK	US HI-G	BRITSTK	<i>FLANGER</i>	VOLUME	GARAGE2	4X10
	4	FREAK	TUBE OD	T-BOOST	CHORUS	VOLUME	DELAY	1X8
1	1	RAGE	BRITSTK	BRITSTK	<i>FLANGER</i>	<i>PITCH</i>	ROOM2	4X12
	2	TRASH	US HI-G	ACOUSTIC	<i>CHORUS</i>	VOLUME	ARENA	2X12
	3	NIN	CL DIST	METAL	<i>PHASER</i>	VOLUME	DELAY	1X8
	4	HOSTILE	METAL	METAL	<i>FLANGER</i>	WAH	HALL	4X12
2	1	PRIEST	BRITSTK	BRITSTK	<i>CHORUS</i>	VOLUME	ROOM1	4X12
	2	2112	CL COMP	CL DIST	PHASER	VOLUME	HALL	2X12
	3	R R	CL DIST	CL DIST	PITCH	GARAGE	GARAGE1	4X12
	4	SATCH	BRITSTK	BRITSTK	<i>CHORUS</i>	WAH	DELAY	4X10
3	1	J P	TUBE OD	BRITSTK	<i>CHORUS</i>	ECHO	GARAGE1	4X12
	2	CARLOS	US HI-G	US HI-G	WAH UP	VOLUME	DELAY	2X12
	3	DA'FUZZ	BIGFUZZ	BIGFUZZ	<i>PHASER</i>	FILTER	DELAY	1X8
	4	RINGMAN	FAT DST	T-BOOST	<i>CHORUS</i>	RING	HALL	4X12
4	1	JAZZ	OFF	BRITSTK	CHORUS	VOLUME	DELAY	2X12
	2	FUNKY	CL COMP	FAT DST	WAH UP	VOLUME	HALL	4X12
	3	SURF	CL COMP	T-BOOST	<i>CHORUS</i>	TREMOLO	GARAGE1	1X8
	4	FUSION	TUBE OD	BRITSTK	CHORUS	VOLUME	GARAGE2	2X12
5	1	ROCK	FAT DST	BRITSTK	<i>PHASER</i>	VOLUME	ARENA	4X10
	2	BLUES	TUBE OD	TUBE OD	<i>CHORUS</i>	VOLUME	ROOM1	2X12
	3	VINTAGE	T-BOOST	TUBE OD	<i>TREMOLO</i>	VOLUME	GARAGE2	4X12
	4	F BACK	FAT DST	FAT DST	<i>CHORUS</i>	F BACK2	DELAY	4X12
6	1	A MINOR	CL COMP	US HI-G	MIN3UP	VOLUME	DELAY	4X12
	2	A MAJOR	BRITSTK	BRITSTK	MAJ3DWN	VOLUME	DELAY	4X12
	3	LOOP	CL COMP	US HI-G	<i>CHORUS</i>	LOOP1	DELAY	2X12
	4	SAMPLE	US HI-G	METAL	<i>CHORUS</i>	SAMPLE2	DELAY	4X12
7	1	CHORUS	OFF	CL COMP	<i>CHORUS</i>	CHO2	HALL	4X10
	2	FLANGER	CL COMP	FAT DST	FLANGER	VOLUME	DELAY	4X12
	3	PHASER	OFF	BRITSTK	<i>PHASER</i>	PHASER	DELAY	4X10
	4	VIBRATO	TUBE OD	CL DIST	<i>TREMOLO</i>	VIBRATO	GARAGE1	1X12
8	1	ECHO	ACOUSTIC	TUBE OD	CHORUS	ECHO	ROOM1	2X12
	2	BENDER	US HI-G	ACOUSTIC	<i>CHORUS</i>	PITCH	DELAY	4X10
	3	SLOWATK	FAT DST	CL COMP	SLOWATK	VOLUME	ARENA	2X12
	4	VIOLIN	T-BOOST	CL COMP	SLOWATK	DELAY	GARAGE1	4X10
9	1	ACOU LN	ACOUSTIC	ACOUSTIC	CHORUS	VOLUME	ROOM1	1X10
	2	COMP LN	CL COMP	CL COMP	FLANGER	VOLUME	ROOM1	2X12
	3	OVRD LN	T-BOOST	T-BOOST	<i>FLANGER</i>	VOLUME	ROOM2	4X10
	4	DIST LN	BRITSTK	US HI-G	<i>CHORUS</i>	F BACK2	DELAY	4X12

NOTICE

KORG products are manufactured under strict specifications and voltages required by each country. These products are warranted by the KORG distributor only in each country. Any KORG product not sold with a warranty card or carrying a serial number disqualifies the product from the manufacturer's/distributor's warranty and liability. This requirement is for your own protection and safety.