



4 BOTTLE WINE COOLER/ PERSONAL FRIDGE

OWNER'S MANUAL
Model # JC-4



PLEASE SAVE THESE INSTRUCTIONS
WARNING: READ THIS OWNER'S MANUAL CAREFULLY BEFORE USE.

4 BOTTLE WINE COOLER/ PERSONAL FRIDGE

Thank you for choosing a Soleus Air wine cooler. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new wine cooler.

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location, date purchased, and serial number below:

Store Name: _____

Location: _____

Date Purchased: _____

Serial Number (located on back of unit): _____

WARNINGS

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- 1) Read all instructions before using this unit.
- 2) Do not clean your wine cooler with flammable fluids. The fumes can create a fire hazard or explosion.
- 3) Do not operate this or any appliance with a damaged cord. Connect to properly polarized outlets only.
- 4) Do not run cord over carpeting or other heat insulators. Do not cover cord. Keep cord away from high traffic areas, and do not submerge in water.
- 5) Unplug the wine cooler before cleaning or making repairs. NOTE: If for any reason this unit requires service, we strongly recommend that a certified technician perform the service.
- 6) Before switching between HOT and COLD modes, switch the wine cooler to OFF for at least 5 minutes.
- 7) Do not obstruct or block the backside of the unit. Keep at least 4 inches (10cm) from any surrounding objects for proper ventilation.
- 8) Do not operate the unit in direct sunlight.
- 9) Do not put ice or water inside the unit.

- 10) Unplug and clean the unit if not in use for an extended period of time.
- 11) When used in a car, the unit must be switched to OFF and unplugged if the car's engine is turned off. Otherwise, you may drain your car battery.

WARNING: This wine cooler is equipped with polarized plug (one blade is wider than the other). The plug is intended to fit into a power outlet only one way, with the wide blade in the wide slot. This is a safety feature; if you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician.

DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED PLUG.

Technical Specifications

Voltage Rating	12V, 4A
Power Consumption	Cooling: 50W; Heating: 45W
Temperature Range	Cooling: 39-82°F; Heating: 86-126°F
Volume	4 L
Unit Size	13“(W) x 10”(D) x 16“(H)
Unit Weight	10 lbs

NOTE:


For best results, leave out of direct sunlight. In the cooling mode, the wine cooler cools approximately 25°F (14°C) lower than the surrounding temperature.

The heating function can keep the unit as warm as 126°F (52°C), but the temperature would be 2-3F higher than what you set to get the best heating result.

NOTE:

The wine cooler fits four traditional size bottles, capacity may differ depending on bottle size.

Product Diagram

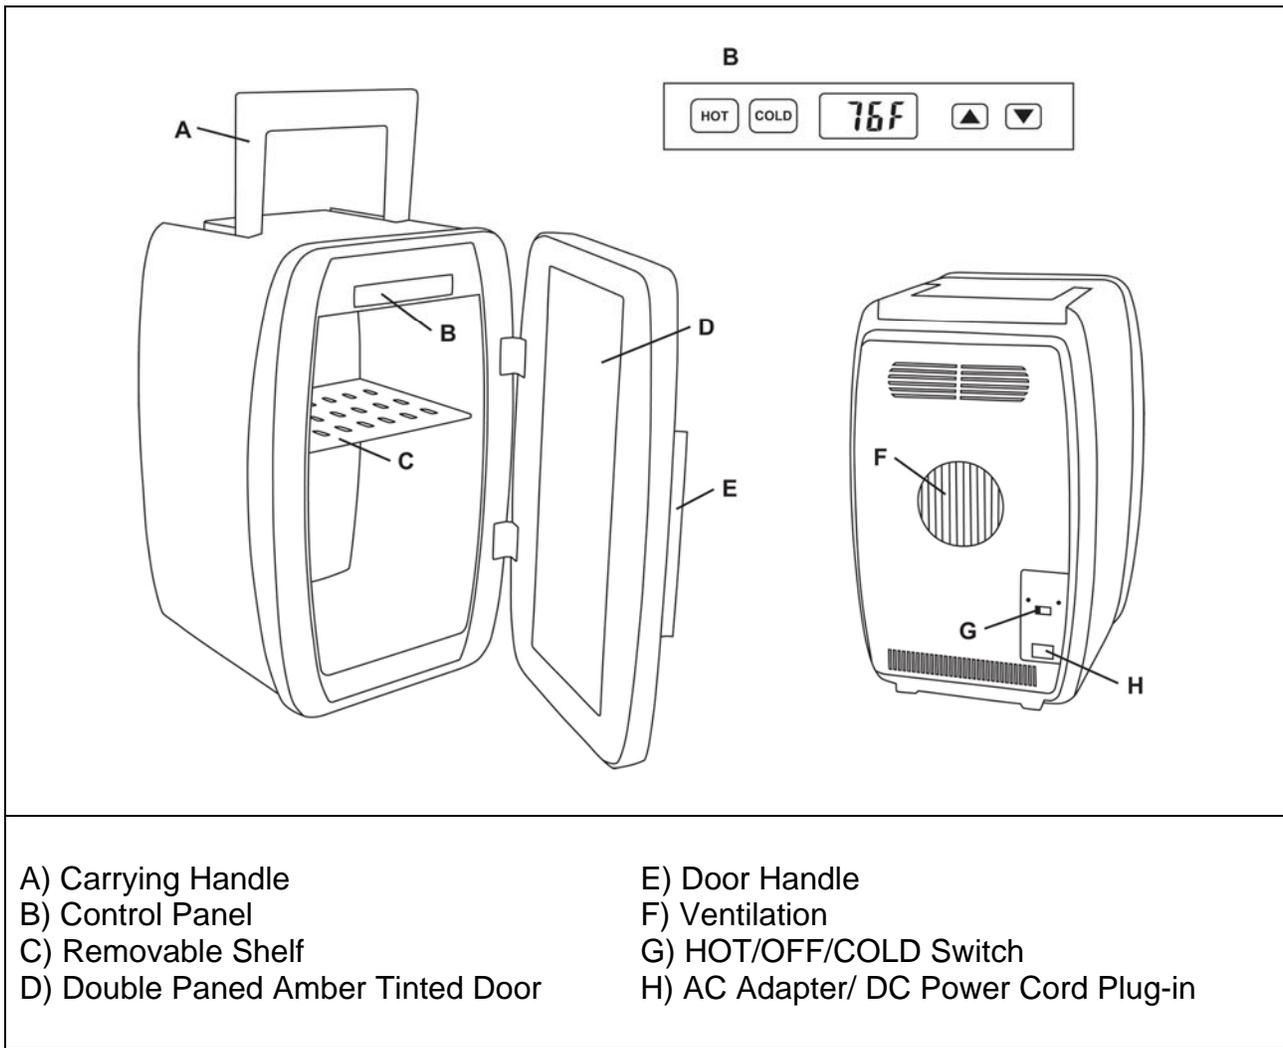

Includes 1 wine cooler, 1 flat shelf, 1 115V AC adapter, and 1 12V DC power cord

Operating Instructions

- 1) Clean the inside of the wine cooler with a soft, damp cloth and mild detergent.
- 2) Set the HOT/OFF/COLD switch on back to OFF.
- 3) Connect the AC adapter to the back of the unit, and then plug the AC adapter into a grounded 115V 60Hz power outlet. Or, if using in a vehicle, connect the DC power cord to the back of the unit and then plug into any standard vehicle cigarette lighter socket.
- 4) HOT/OFF/COLD switch operation:
 - a) When the switch is on COLD, the green light will turn on, indicating the unit is cooling.

b) When the switch is on HOT, the red light will turn on, indicating the unit is heating.

NOTE: When switching between COLD and HOT, set the unit at OFF for five minutes.

- 5) To set the temperature:
 - a) For cooling, press COLD once. The temperature range is 39-82°F. However, the unit can only cool 25°F below the surrounding temperature. For heating, press HOT once. The temperature range is 86-126°F.
 - b) When the temperature is blinking, press the up and down buttons to select the desired temperature.
 - c) The display shows the current temperature. Once selected, the wine cooler will begin cooling/heating to the set temperature.
- 6) To change the display from Celsius to Fahrenheit, or Fahrenheit to Celsius, hold the up button for 2 seconds.
- 7) Unplug the wine cooler when not in use.

Maintenance

- 1) Set the switch on back to OFF. Unplug the unit and let it cool completely.
- 2) To keep the wine cooler clean, the exterior may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. CAUTION: Do not let liquid enter the beverage center.
- 3) Do not use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the wine cooler. This may cause damage or deterioration to the surface of the unit.
- 4) Do not immerse the wine cooler in water.
- 5) Wait until the unit is completely dry before use.

Storage

Store the wine cooler in a cool, dry location when not in use. Preferably, to prevent dust and dirt build-up, use the old packaging to repack the unit.

Troubleshooting

WINE COOLER WILL NOT WORK

- 1) If using AC adapter, check if the power cord is plugged into an electrical outlet, if not, plug in. If using DC power cord, confirm that it is plugged into a cigarette lighter socket.
- 2) Check if electricity to the main fuse is working.
- 3) Check if the back switch is on COLD or HOT by confirming that one of the corresponding indicator lights is on. If back switch is on OFF, change to COLD or HOT.

WARRANTY

One Year Limited Warranty

Soleus International Inc. warrants the accompanying Soleus Air JC-4 to be free of defects in material and workmanship for the applications specified in its operation instruction for a period of ONE (1) year from the date of original retail purchase in the United States or Canada.

If the unit exhibits a defect in normal use, Soleus International Inc. will, at its option, either repair or replace it, free of charge within a reasonable time after the unit is returned during the warranty period.

As a condition to any warranty service obligation, the consumer must present this Warranty Certificate along with a copy of the original purchase invoice.

THIS WARRANTY DOES NOT COVER:

- 1) Damage, accidental or otherwise, to the unit while in the possession of a consumer not caused by a defect in material or workmanship.
- 2) Damage caused by consumer misuse, tampering, or failure to follow the care and special handling provisions in the instructions.
- 3) Damage to the finish of the case, or other appearance parts caused by wear.
- 4) Damage caused by repairs or alterations of the unit by anyone other than those authorized by Soleus International Inc.
- 5) Freight and Insurance cost for the warranty service.

ALL WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANT ABILITY ARE LIMITED TO ONE-YEAR DURATION OF THIS EXPRESS LIMITED WARRANTY. **SOLEUS INTERNATIONAL INC.** DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES AND IN NO EVENT SHALL SOLEUS INTERNATIONAL INC'S LIABILITY EXCEED THE RETAIL VALUE OF THE UNIT FOR BREACH OF ANY WRITTEN OR IMPLIED WARRANTY WITH RESPECT TO THIS UNIT.

As some states do not allow the limitation or exclusion of incidental or consequential damages, or do not allow limitation on implied warranties, the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

For Warranty, Technical Support, Customer Service, Missing or Defective Parts

Please Call (888) 876-5387

Or Write To:

Soleus International Inc.
9451 Telstar Ave.
El Monte, CA 91731 USA
www.soleusair.com