


## Setting Up Your MX360 or MX410 In Default Mode (Tel Priority Mode) Without An Answering Machine


# Connecting The Phone Lines

# Fax to Phone Line Connection

**Before**

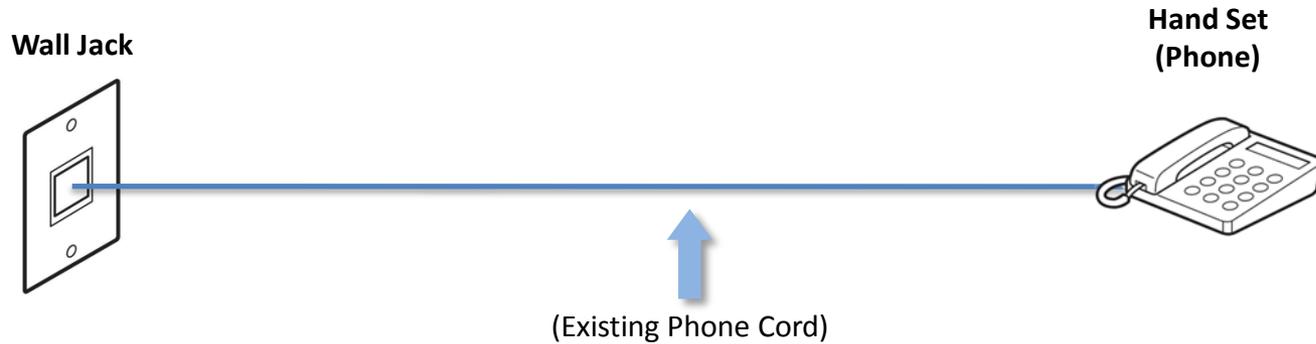


**After**

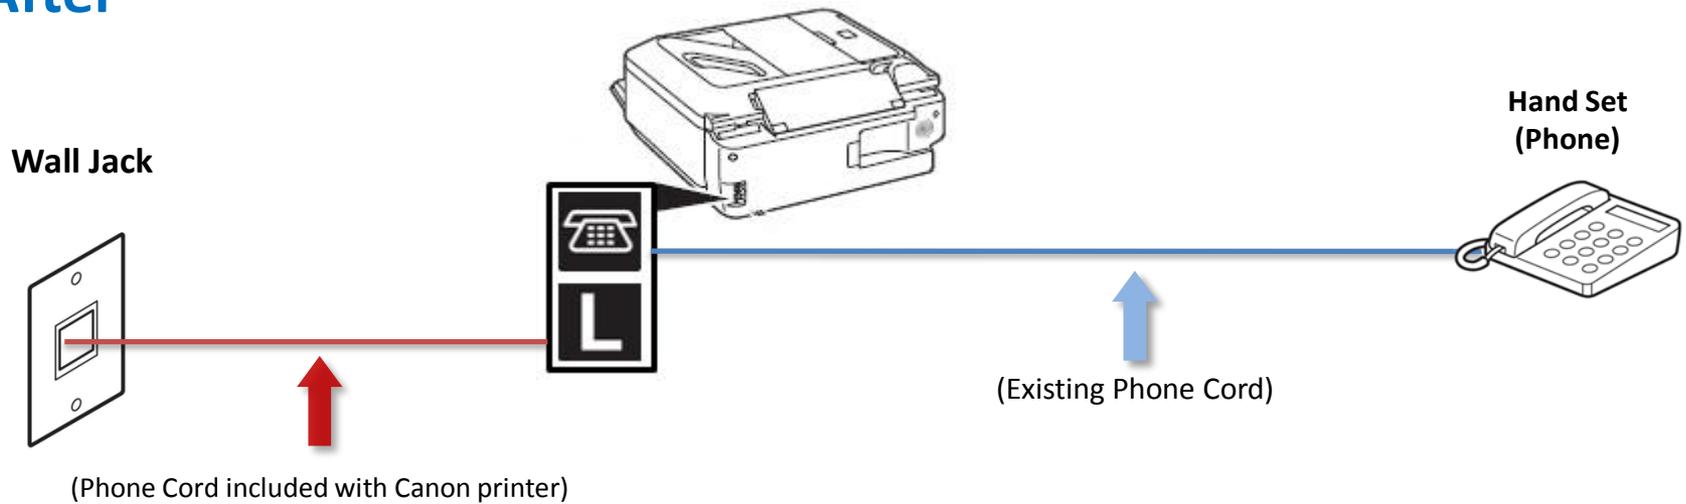


# Fax to Phone Line Connection

- Plug the provided phone cord into the wall jack

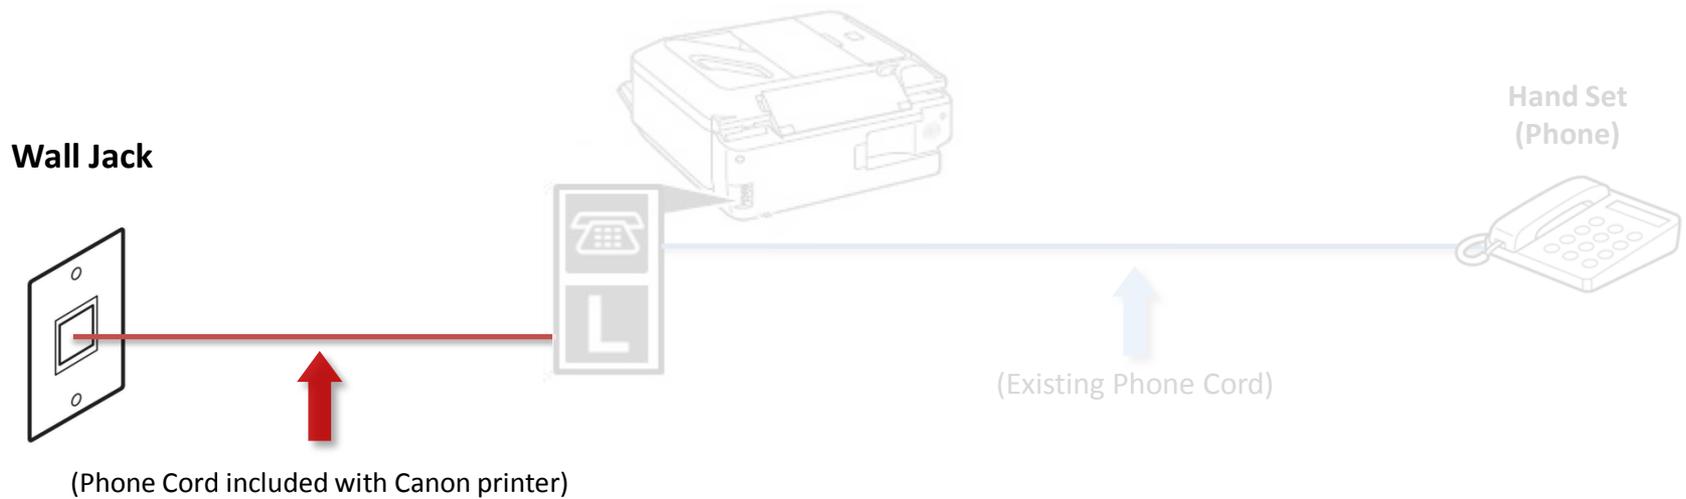


# Fax to Phone Line Connection

- Plug the provided phone cord into the “L” jack located on the rear of the multifunction

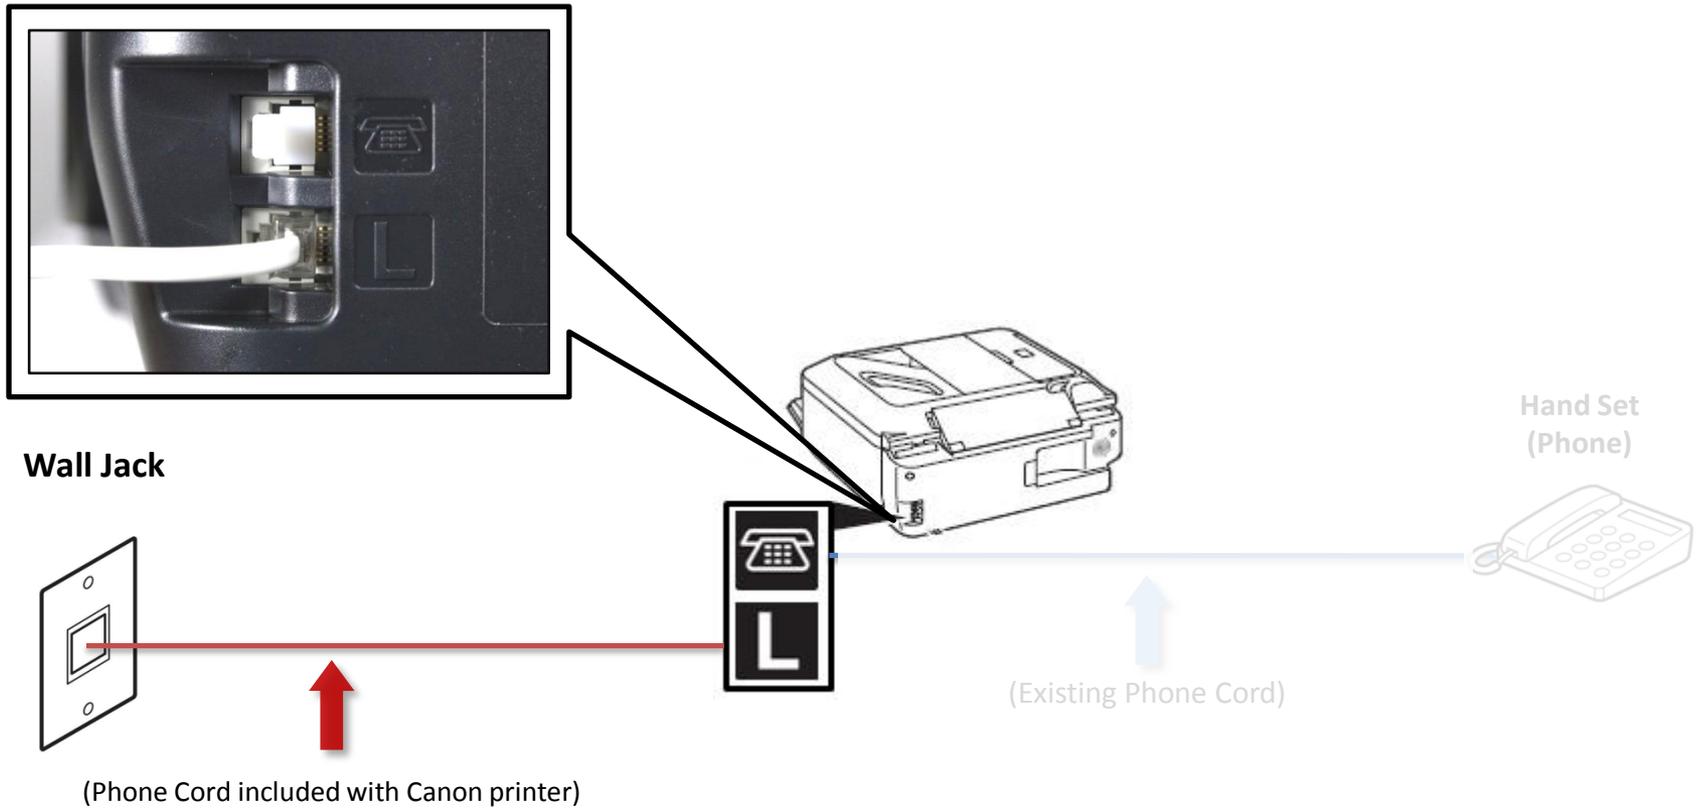


# Fax to Phone Line Connection

- Remove the white plug (D) from the upper jack.

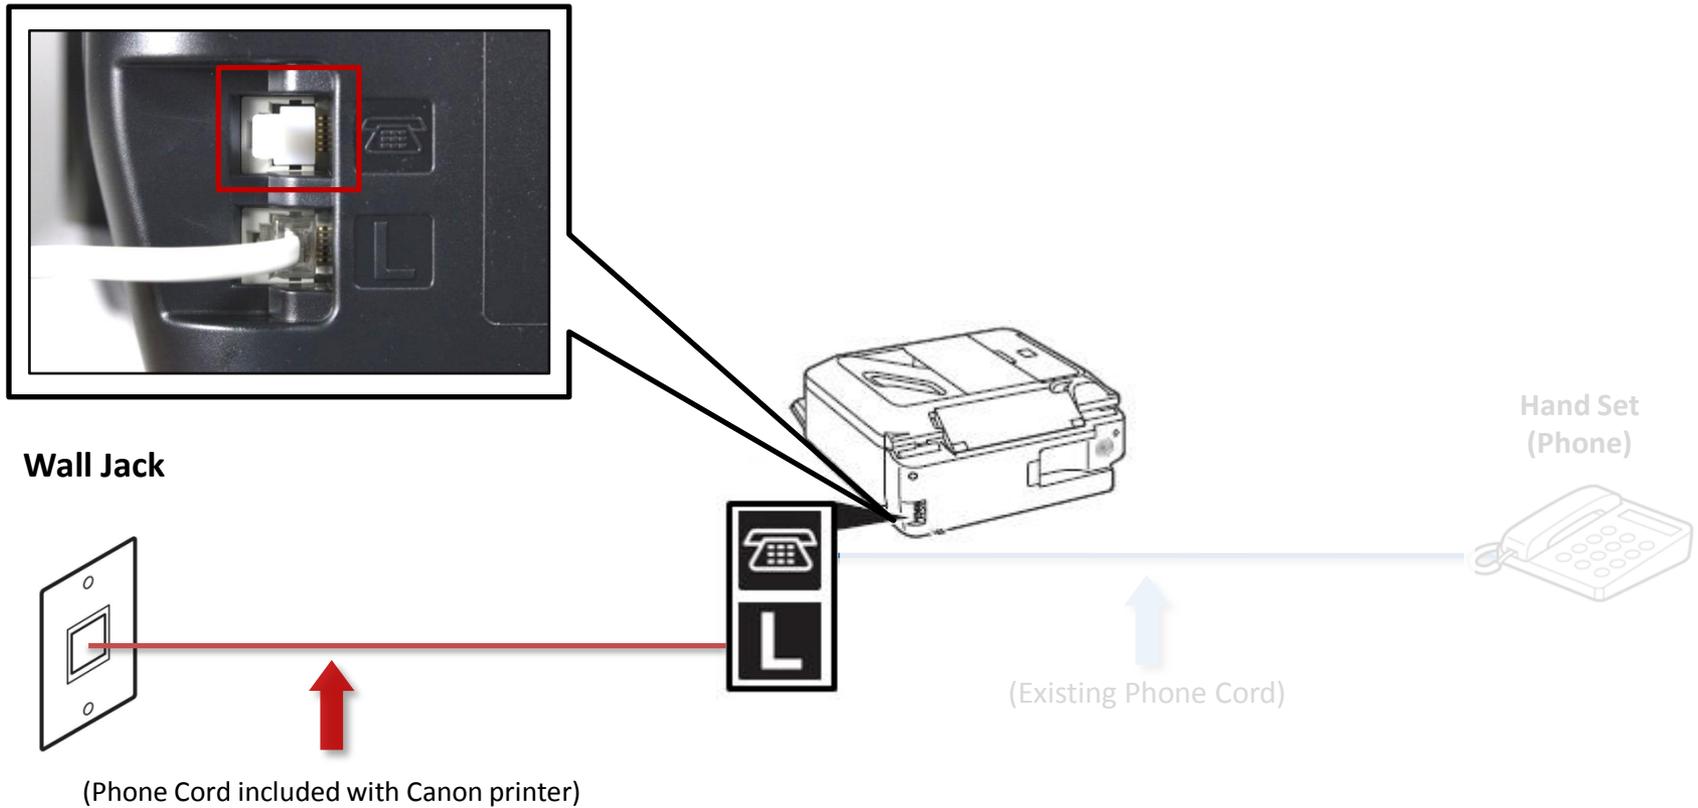


# Fax to Phone Line Connection

- Plug the second phone cord into the “telephone” jack located on the rear of the multifunction

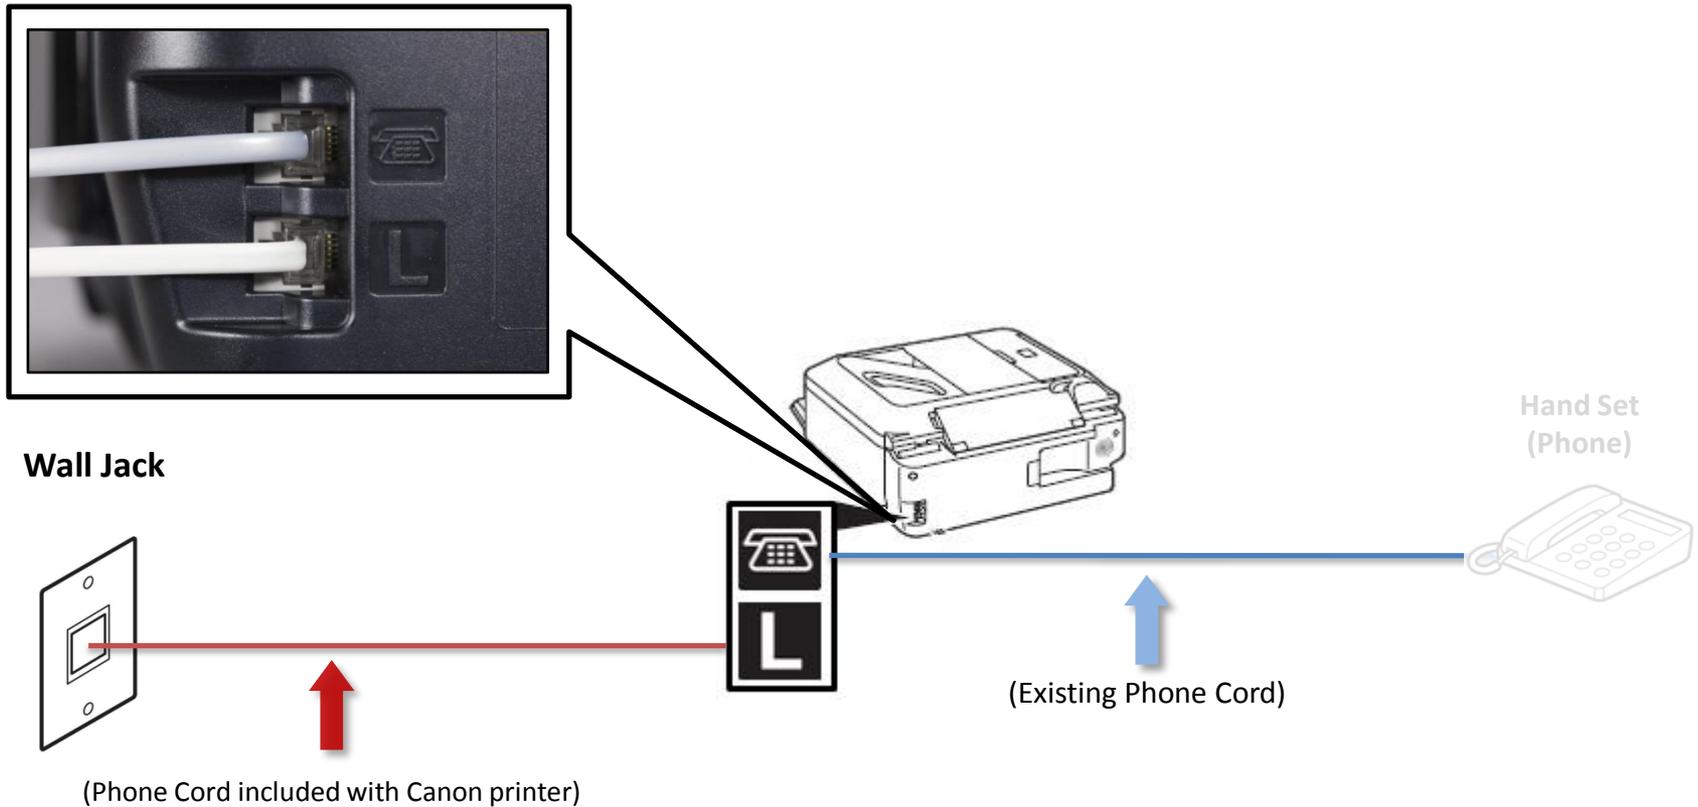

# Fax to Phone Line Connection


- Plug the second phone cord into the phone

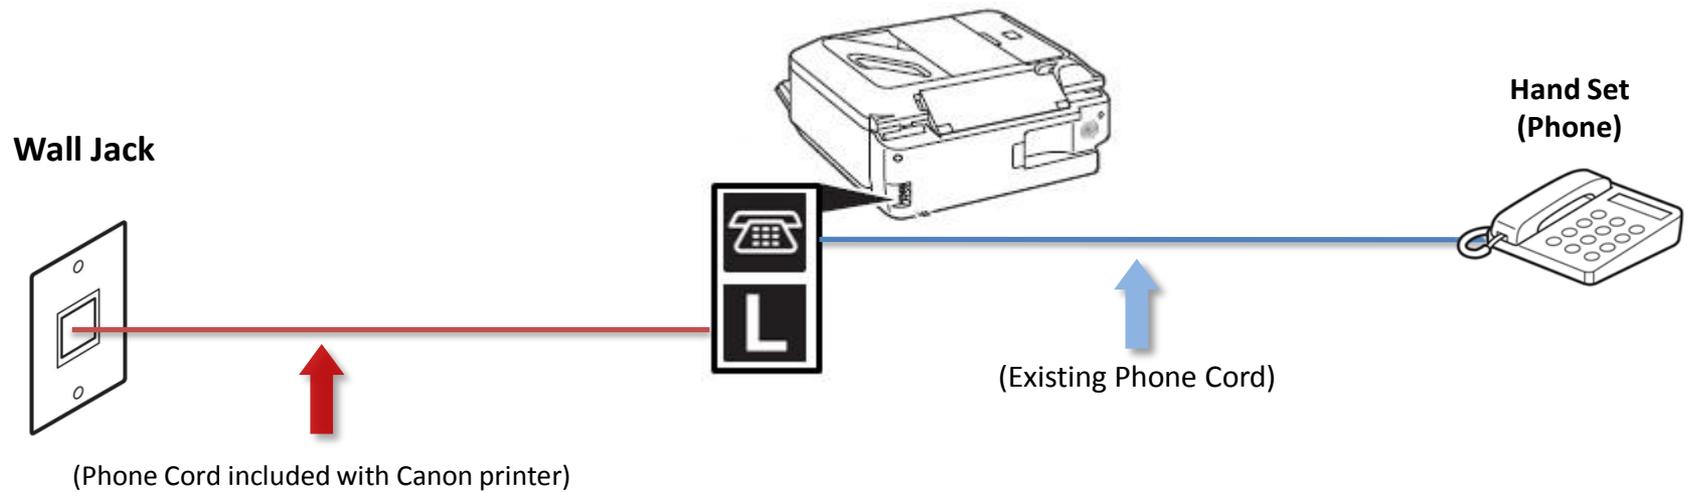

# Setting Up The Receive Mode

# Step 1

Turn on the MX360 or MX410 by pressing the **ON** button.

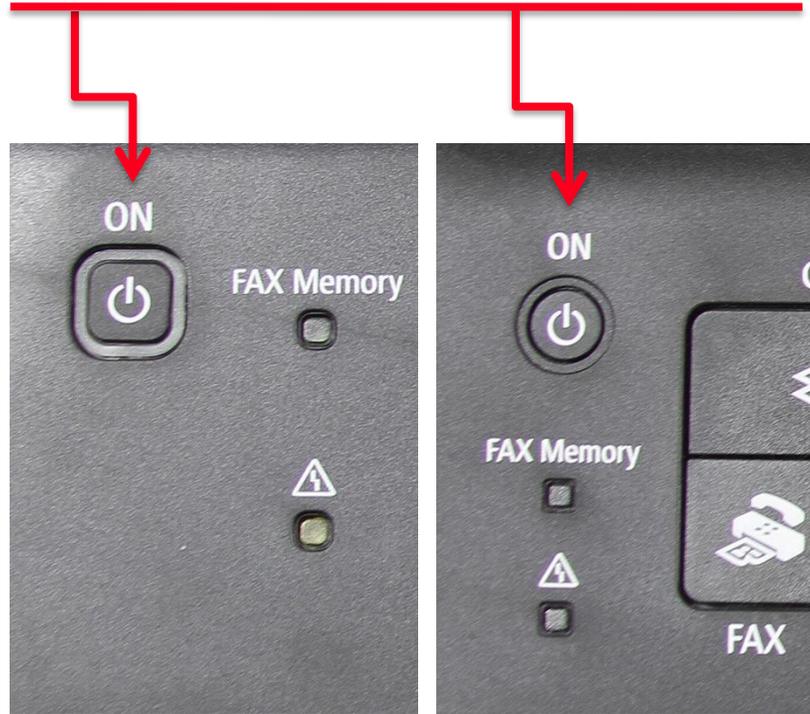


**MX360**

**MX410**


# Step 2

Press the **FAX** button.

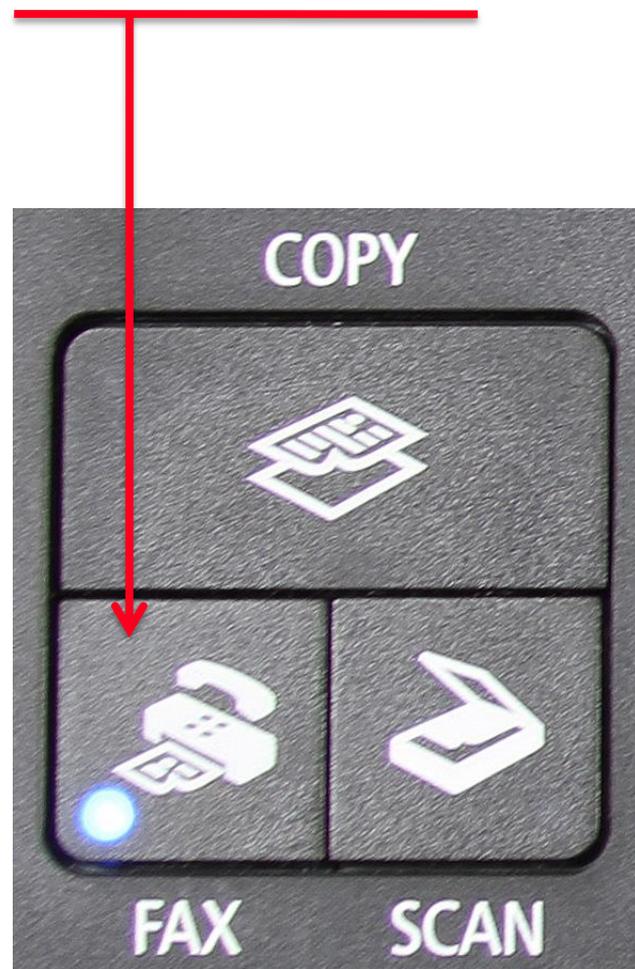


## Step 3

Press the **Menu** button

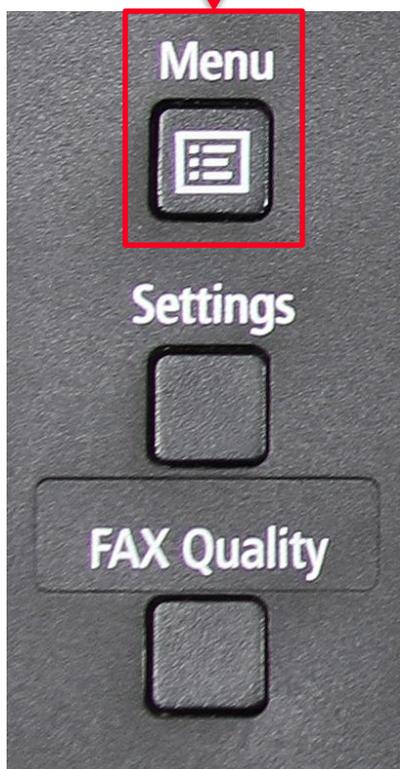

## Step 4

Use the **Left** or **Right** Arrow button to select "Receive mode set".

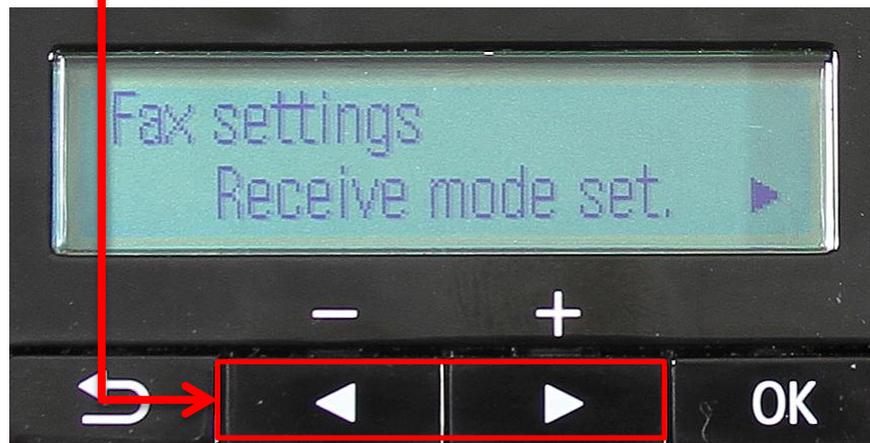


## Step 5

Press the **OK** button



## Step 6

The "Receive mode set" screen will appear

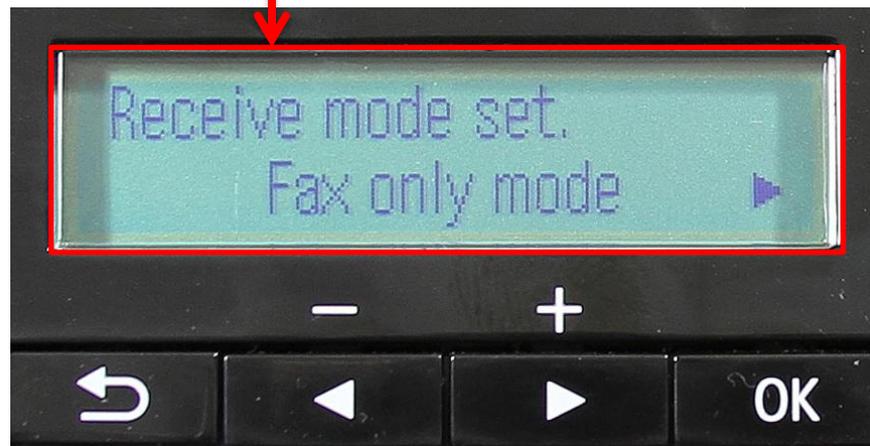

## Step 7

Use the **Left** or **Right** arrow button to select "TEL priority mode"




## Step 8

Ensure that "TEL priority mode" is displayed




## Step 9

Press the **OK** button

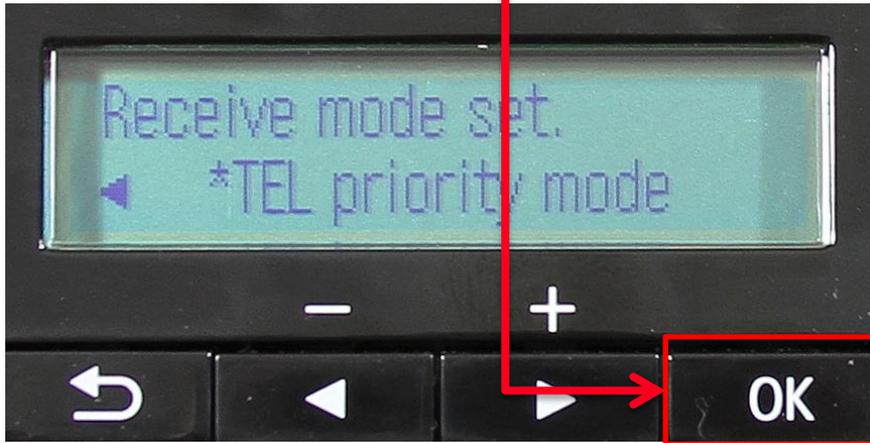


## Step 10

The "Make advanced settings?" screen will appear

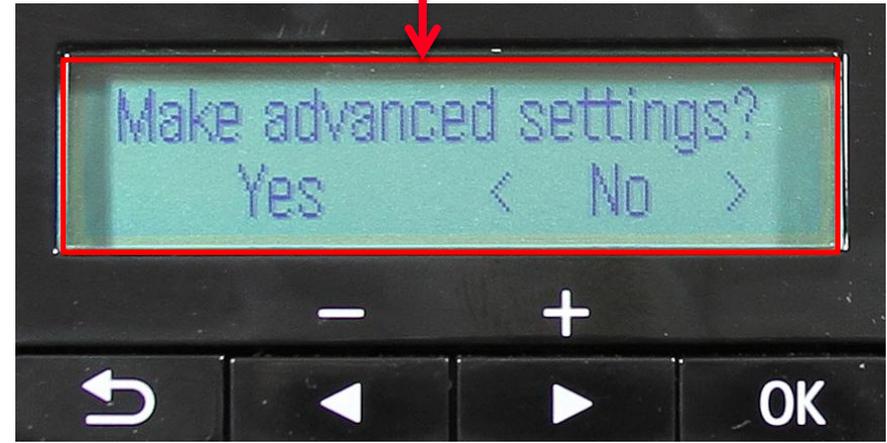

## Step 11

Use the **Left** or **Right** arrow button to select "Yes"

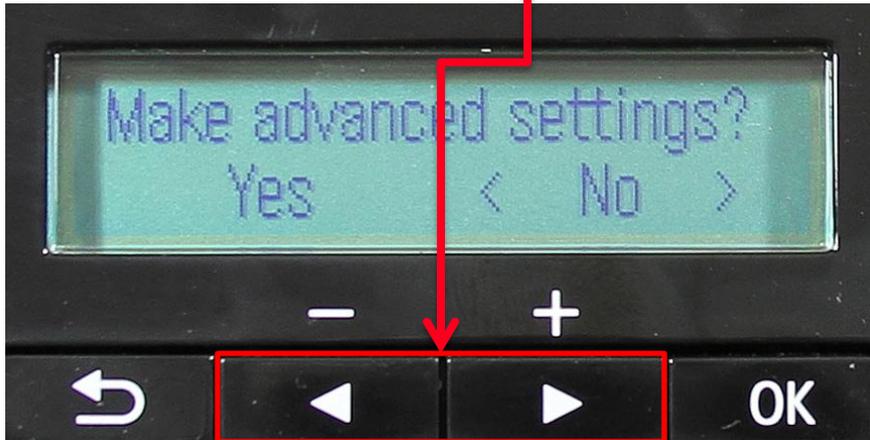


## Step 12

Ensure "Yes" is selected




## Step 13

Press the **OK** button

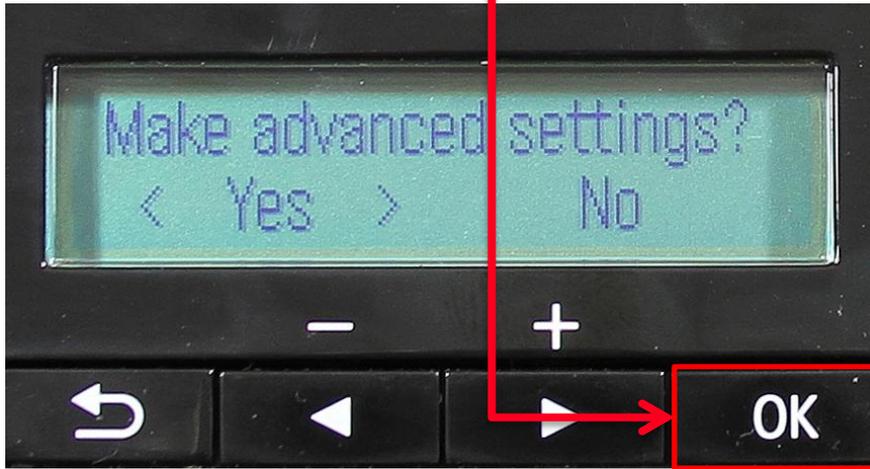


## Step 14

The "TEL priority mode screen will appear

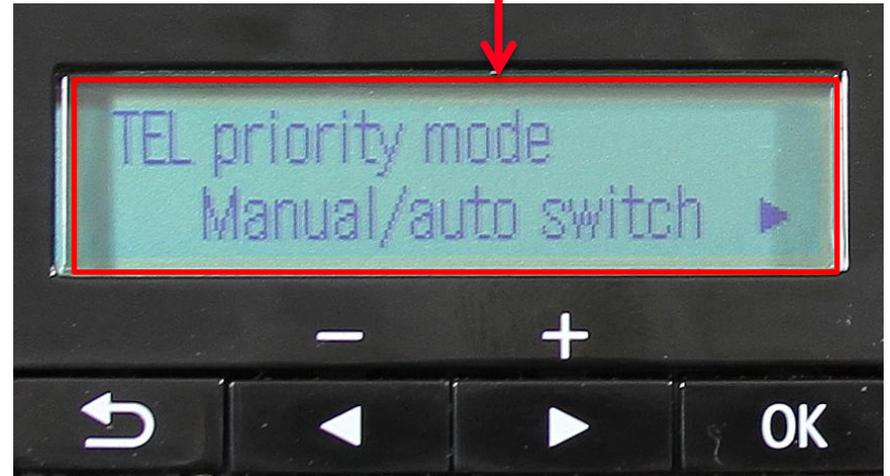


## Step 15

Use the **Left** or **Right** arrow button to select “User-friendly RX”

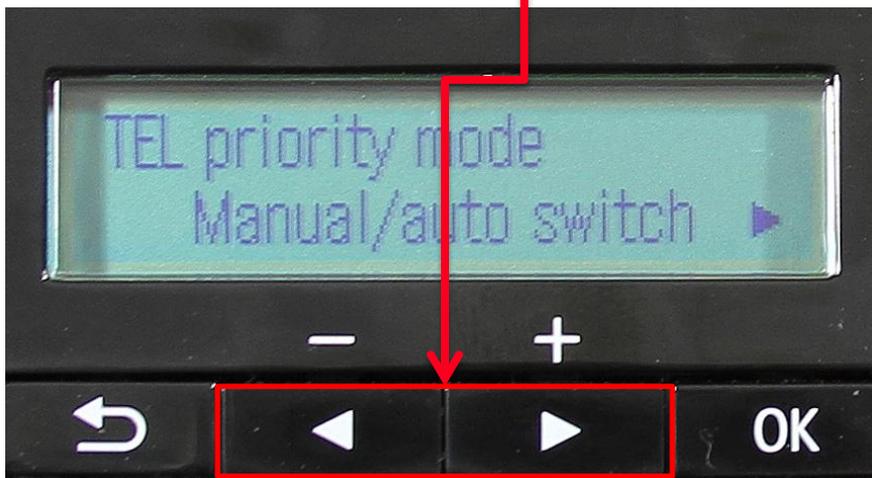


## Step 16

Confirm “User-friendly RX” is selected

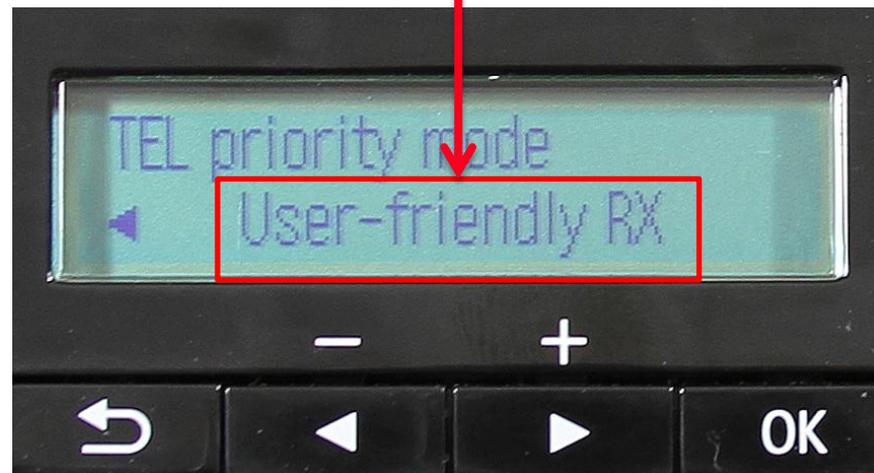

## Step 17

Press the **OK** button

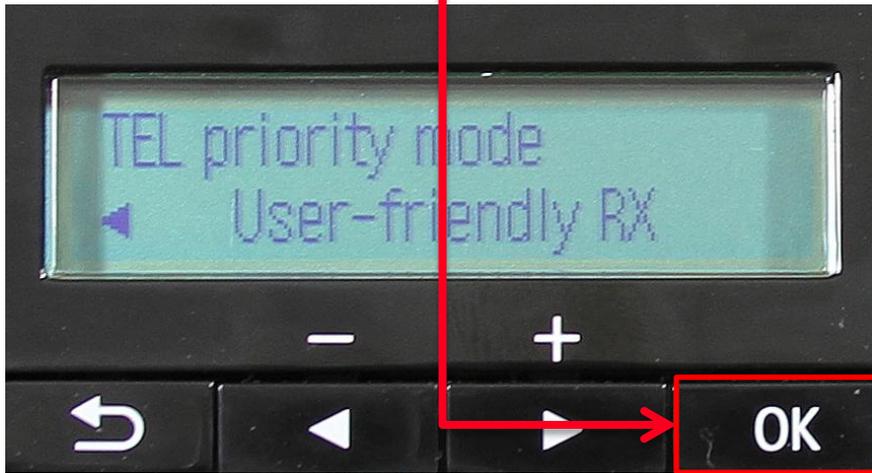

## Step 18

The "User-friendly RX" screen will appear




## Step 19

Use the **Left** or **Right** arrow button to select "ON"




## Step 20

Ensure "ON" is selected

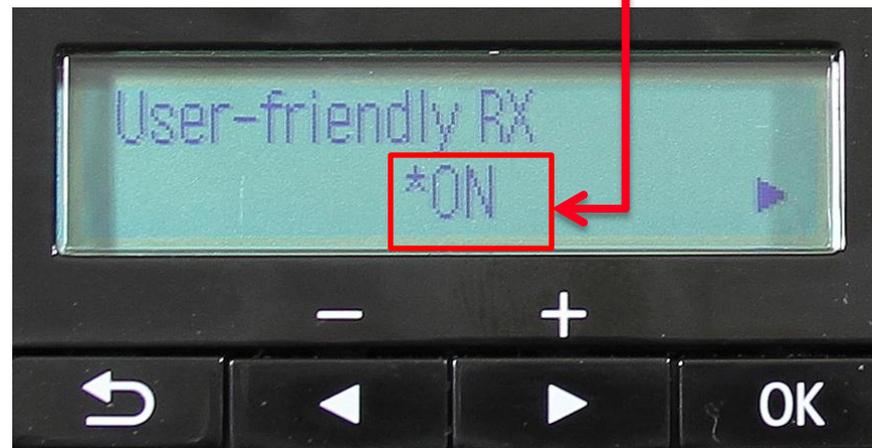

## Step 21

Press the **OK** button

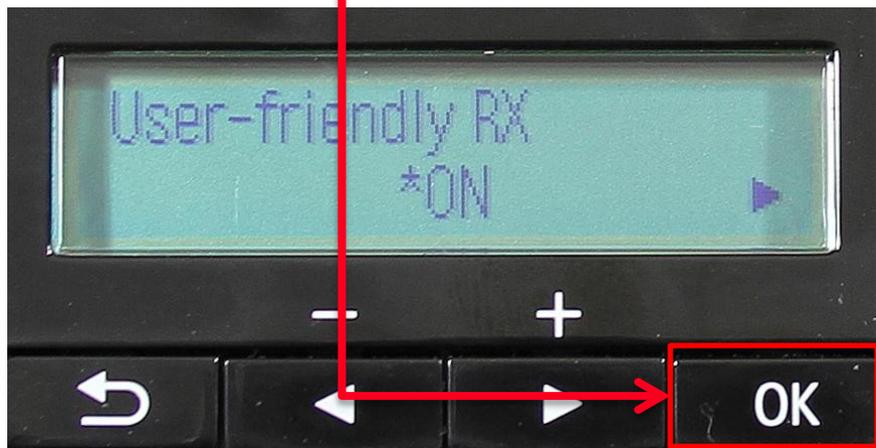

## Step 22

The screen will return to the fax standby screen. Your MX360 or MX410 is now ready to receive a fax



# Receiving A Fax

To receive a fax:

- Pick up the handset on the phone connected to the MX360 or MX410.
- Listen for fax tones.
- When the tones stop hang up the handset.
- The MX360 or MX410 will receive the fax document.

**IMPORTANT:** In order to receive a fax, you must pick up the handset on a phone that is connected to the multifunction.

