

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, unplug the appliance immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Do not use an extension cord to operate appliance.

5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

6. Keep the cord away from heated surfaces.

7. Do not pull, twist, or wrap line cord around appliance.

8. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

9. Never use while sleeping.

10. Never drop or insert any object into any opening.

11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

12. This appliance is hot when in use. Do not let heated surfaces touch eyes and bare skin.

13. Do not place the heated appliance directly on any surface or on the appliance power cord while it is hot or plugged in. Use the built-in counter rest.

14. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current (50/60 hertz) only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE

This appliance has dual voltage. It will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

GETTING STARTED

The appliance's 30 temperature settings and instant heat technology combine to provide styling versatility for all hair textures. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or coarse hair, keep the heat setting high. You can vary the appliance's temperature according to your particular need!

CURLING BASICS

1. Plug the curling iron cord into any household outlet (120/240V). Press ON button (indicator light will blink). The iron will heat up very quickly; when red light stops blinking the unit is ready. To turn off, press OFF button. **Never leave your curling iron on and unattended.** However, should you fail to turn the iron off, it will shut itself off automatically within 60 minutes.

2. Section dry hair evenly, and comb each section before winding. Pressing the automatic curl release, place curling iron midway up the hair section, then spread hair evenly between spoon and barrel. Release automatic curl release to hold hair in place. Gently slide curling iron down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl.

Remember, always place the spoon above the hair strand when making a curl you want rolled under; place the spoon under the hair strand when making a flip style.

3. Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp. Hold in place for 8 to 12 seconds depending on the texture and length of your hair. For tighter, bouncier curls, roll less hair. For looser, free flowing curls, roll more hair.

4. To remove curling iron, unwind the hair and press the automatic curl release. To set the curl, do not comb or brush hair until it cools.

 
5. To achieve faster styling results units feature a unique, optional Turbo Heat™ Burst. Press the Turbo button to deliver up to 20°C/36°F more heat for maximum styling performance.

STRAIGHTENING BASICS

Start with a hair section that is 2" wide and no more than 1/2" thick. While maintaining the tension, slowly pull the unit down along the hair section toward the end of hair. At the end of hair section, release the pressure on the handle and allow the hair section to slide out. Repeat process on additional sections of hair until you achieve the hair style you desire. It may be necessary to repeat process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this straightening comb. After using comb several times, you will learn the ideal way to straighten and style your hair easily.

NOTE: Please refer to the temperature setting guide for heat settings.


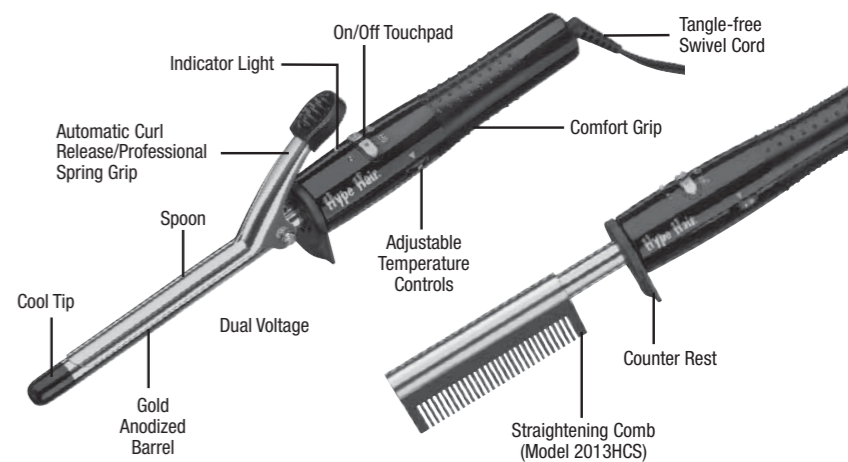


WARNING: The barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling iron is turned on. Always do a test curl before using the curling iron to ensure the proper setting for your hair type.

Temperature Setting Guide

Temp. Setting	Hair Type
Low 1-5	Delicate, thin, easy-to-style hair
Med. 6-10	Average to thick or treated hair
Med.- High 11-15	Thick or wavy hair
High 16-20	Hard-to-style hair
Maximum 21-30	Very resistant hair

  STYLING TOOLS ARE AVAILABLE
IN THE FOLLOWING SIZES:

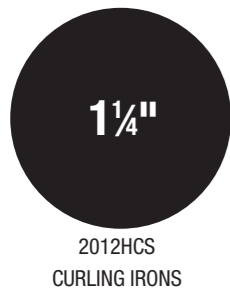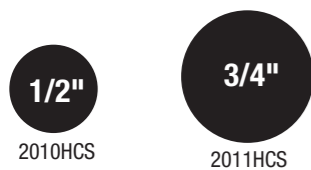

USER MAINTENANCE

Your styling tool is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the appliance from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug it, allow it to cool and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION

 
NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the appliance. Damage will occur at the high flex point of entry into the appliance causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your styling tool is easy to store. Allow it to cool, and store out of reach of children in safe, dry location. Do not jerk or strain cord at plug connections.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.



Service Center
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2008 CONAIR CORPORATION
150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd.,
Glendale, AZ 85307

08PC101

IB-8255

**Instant
Ultra-Hot
Styling Irons**

Models 2010, 2011,
2012, 2013



Hype Hair

Instruction & Styling Guide

For your safety and continued enjoyment
of this product, always read the instruction
booklet carefully before using.