


п о с у д о м о е ч н а я м а ш и н а
d i s h w a s h e r

РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ

INSTRUCTION BOOK

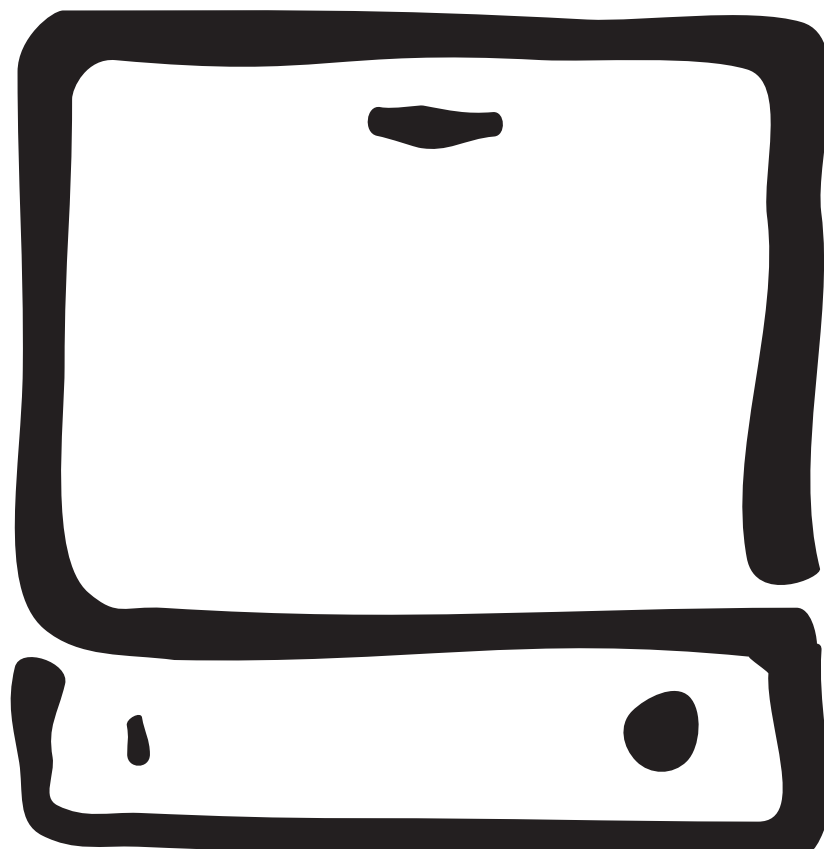

ESF 235

Contents

For the User

Safety information	14
The control panel and programme table	15
Description of the appliance	16-17
- Rinse conditioner dispenser	
- Spray arm	
- Coarse filter	
- Fine filter	
- Detergent dispenser	
- Water softener	
- Water softener plug	
Loading	18
- How to load the dishwasher	
- Instruction for verification tests	
Using the appliance	19
In the event of a fault	20
Service	21
- Service and spare parts	

For the Installer

Technical data	21
Unpacking	22
- Damages	
- Use	
- Building-in	
- Protecting the machine against freezing	
Installation	23
- Positioning	
- Water supply	
- Discharge connection	
- Electrical connection	

Guide to use the instruction book

The following symbols will be found in the text to guide you throughout the instructions:



Safety information



Step by step instructions



Hints and tips



Environmental information

Safety information

Before installing and first using the dishwasher, read this instruction booklet carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the dishwasher are thoroughly familiar with its operation and safety features. Save these instructions and make sure they remain with the dishwasher if it is moved or sold, so that everyone using it through its life can be properly informed on appliance use and safety.

Installation and servicing

- All installation and service work done on the product must be carried out by a qualified technician. Work performed by persons with inadequate knowledge may adversely affect the satisfactory functioning of the product and may cause personal injury or damage. Before any work is carried out on the dishwasher, it must be isolated from the electrical supply, by unplugging the power cord or removing the fuse.
- Water connection shall be made via an easily accessible stopcock.
- The power cord must be plugged into an earthed socket, which need to be easily accessible. Permanent installation must only be carried out by an authorized electrician.
- Make sure that the power cord is not nipped or otherwise damaged and that the hoses do not get crushed or kinked when moving the dishwasher in connection with installation or cleaning etc.
- If the power cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Our approved build-in kit must be used if the dishwasher is to be built into the kitchen furnishings.
- Servicing and possible repairs must be carried out by a service company authorized by the supplier. Use only spare parts supplied by these. Never try to repair the dishwasher yourself.

Child Safety

- Remember that the plastic bags included in the packaging can be fatal playthings for small children.
- The dishwasher should be used by adults only. Do not let children play with the controls or other parts of it.
- Keep all detergents in safe place out of children's reach.
- Prevent children from sitting, swinging or standing on the open door.

During Use

- This dishwasher is designed solely for washing household utensils suitable for machine washing. Using it for other purposes could lead to physical injury or damage to property and invalidate the guarantee.
- Only use detergent specifically designed for use in dishwashers.
- Do not place sharp knives with their points upwards. It is much safer to lay them horizontally in the basket.

- Ensure that the door of the dishwasher is always closed when it is not being loaded or unloaded. In this way you will avoid anybody tripping over the open door and hurting themselves, if the dishwasher is placed under the worktop.
- Avoid opening the door while the dishwasher is running, since hot steam may escape.
- If you take any dishes out of the dishwasher before the end of the dishwashing cycle, it is extremely important to rinse them thoroughly under running water to remove any remaining detergent.
- In the event of flooding or leakage, shut off the water supply immediately by closing the stopcock and disconnect the power supply by unplugging the power cord or removing the fuse. When removing the electrical plug, grip the plug, not the lead.
- There is always a certain risk of leakages in any machine connected to a water supply, no matter what water safety features it may have. Therefore it is advisable always to turn off the water supply tap when the machine is not in use.

Disposal


- packaging:

All materials used in packaging this appliance are environmentally-friendly. The various plastics used are identified and can be recycled:


- PE stands for polyethylene, which is used for the bag around the appliance and the bag in which these instructions were supplied.
- PS stands for polystyrene (moulded), which is used for the sections of packaging needed to cushion the appliance.

The cardboard components of the packaging are made from recyclable paper and should be taken to a collection point for recycling.


- old apparatus:

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

The control panel and programme table

SETTING		CONSUMPTION				
		Cold water supply 15°C		Hot water supply 60°C		
Cycle	Temp.selection °C	Energy/ kWh	Time/ min	Energy/ kWh	Time/ min	Water/ litres
	55	0,60	47	0,19	29	13
	65	0,75	55	0,28	33	13

- All figures are nominal and vary for example due to temperature variations on the inlet water.
- The figures apply to washing up 5 settings.

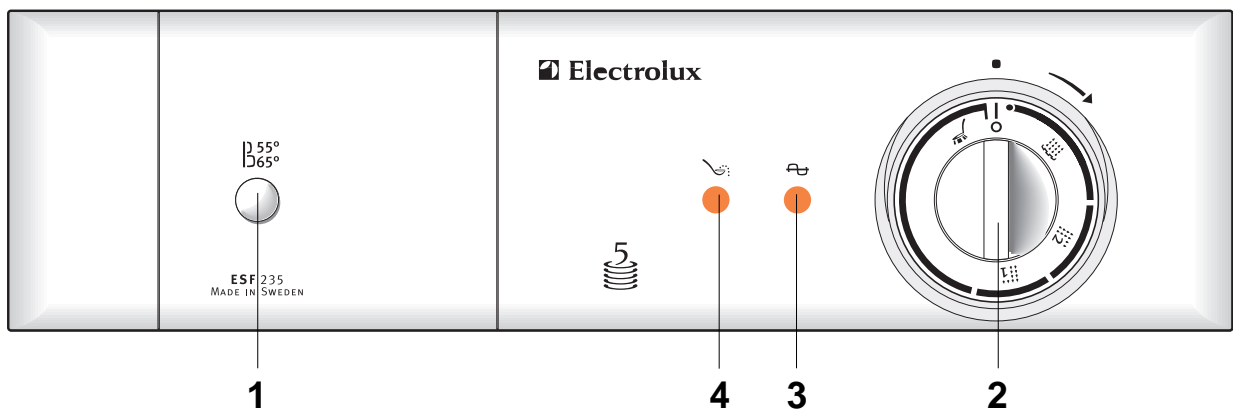

1 Temperature selector

55° - Button in
65° - Button out

2 Selector knob

To start the machine; turn the selector knob clockwise to the programme start. The ON/OFF switch is built into the programme selector. To isolate the dishwasher from the mains completely, unplug it from the wall socket.

i During the water heating process, the timer is standing still.

3 Cycle sequence lamp

While the programme is in progress, the operating lamp is lit and it goes out when the programme is ready.

4 Salt indicator lamp

The operating lamp indicates when the salt needs to be replenished. The lamp may remain lit for one or more programmes after replenishment, which is fully normal.

Door lock

Press the handle down and open the door. Avoid opening the door while the machine is running.

i If the door is opened and is put standing ajar after a completed programme, the dishes will dry faster.



Wash phase




Rinse phases



Rinse with heated water

Description of the appliance

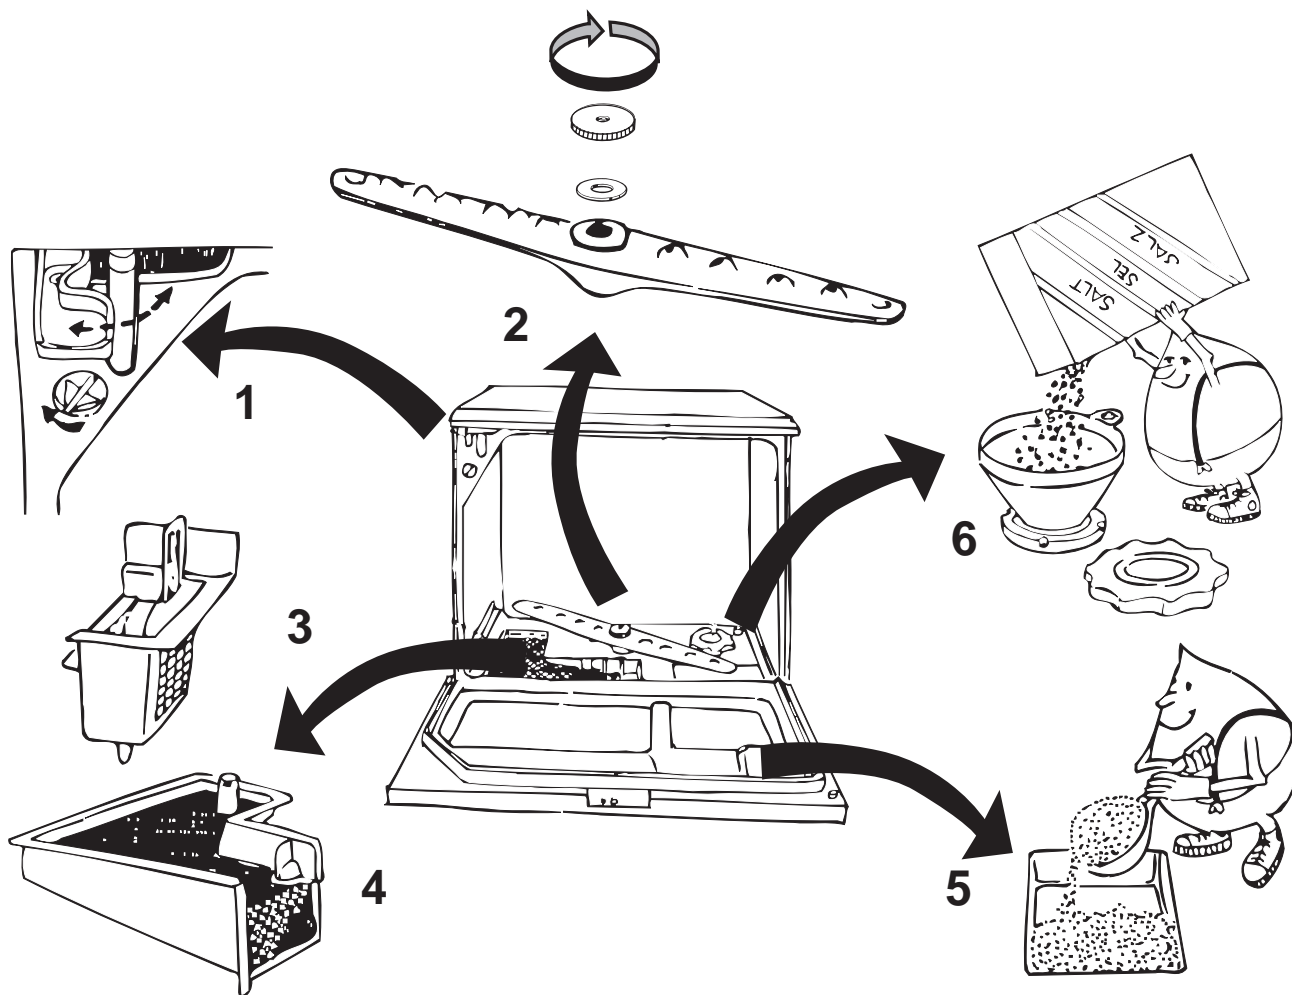

1 Rinse conditioner dispenser

2 Spray arm

3 Coarse filter


4 Fine filter

5 Detergent dispenser

6 Water softener

7 Water softener plug

7

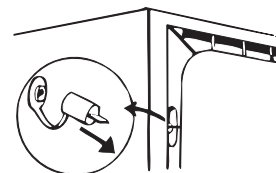

Description of the appliance

Rinse conditioner dispenser 1

Use of a rinse conditioner will result in cleaner and faster drying of the load, since it helps water and soil to run off. Too much conditioner may result in streakiness, too little may cause white spots. The dispenser holds about 140 ml. This is enough for 40-70 wash cycles, depending on the dosage setting. When the rinse conditioner level is approaching the bottom of the scale it is time to refill the dispenser.



Adjust the dosage setting according to the hardness of the water. Begin with the lowest dosage setting and increase as necessary by turning the arrow clockwise.



1. Swivel out the filler trough.
2. Fill up with rinse conditioner until the level reaches up to the red mark on the level indicator tube; do not overfill.
3. Wipe off any spillage carefully to prevent excessive foaming during the next wash programme.
4. Close the filler trough afterwards.



Do not fill the rinse conditioner dispenser with liquid detergent.

Spray arm 2

It is important to keep all the holes in the spray arm clear. A clogged hole can seriously affect washing efficiency. If the spray arm needs cleaning, unscrew the nut clockwise (left-hand thread) and lift off the spray arm. Clear the holes and shake out any food remnants.

Coarse filter 3

The purpose of the coarse filter is to catch large objects such as toothpicks and pieces of eggshell. Make sure that the filter is always clean. Lift it out and rinse it under running water whenever necessary.

Fine filter 4

It is just as important to keep this filter clean. A dirty or clogged filter will always impair washing efficiency. The fine filter can easily be lifted out for cleaning when you have removed the coarse filter.

Detergent dispenser 5

Consult the instructions on the detergent packet and fill the compartment with the detergent. Remember that the instructions usually refer to full-size dishwashers, for example when using detergent tablets, it is sufficient to use just half a tablet.




Only use detergents specially designed for dishwashers.

Water softener 6

This dishwasher is equipped with a water softener for hard water, therefore shall the rinse aid dispenser be set for a low dosage. The lime in hard water causes white deposits to occur on dishes and to the interior of the dishwasher. To prevent this, the water has to pass through a special container where the hardness is removed. Since the water softener uses coarse dishwasher salt, you will have to refill the salt container after a certain number of dishwashing cycles.



It is important to fill the compartment with coarse dishwasher salt before using the machine for the first time, if you live in an area where the water is calciferous.

The indicator light  on the control panel is lit when the container requires refilling.



1. Unscrew the filler cap to the salt container anti-clockwise.
2. Fill the salt container with water (only the first time).
3. Fill the container with coarse salt, using the funnel supplied.
4. Remove the funnel and wipe off any spillage around the filler opening.
5. Screw the filler cap back properly in place.

The water softener is now ready for the first load of dishes. Always make sure that there is coarse grained salt in the container, which holds about 1 litre, which is enough for about 20 - 30 dishwashing cycles.



Use only special salt for dishwashing machines, ordinary domestic salt can damage the water softener.

Water softener plug 7

As supplied from the factory, the water softener is set for a water hardness of up to 20°dH. If your water is harder than this, you can increase the capacity of the water softener by pulling out the rubber plug at the rear of the dishwasher on the right.

Loading

How to load the dishwasher


The illustration shows the machine loaded with five standard place settings. Your own dishes are not likely to be identical to this load, but if you follow the advice below we are sure you will be pleased with the results.

- Always place glasses, cups and bowls upside down.
- Incline deep dishes (soup plates etc.) so that the water can run off when drying.
- Make sure that the dishes do not rest against each other. This is particularly important in regard to the cutlery basket - nested spoons, etc. simply cannot be properly washed. The water must get at all the soiled surfaces.
- Make sure that cutlery with slender handles and other items do not protrude through the openings in the basket and prevent the spray arm from rotating.
- Never put silver and stainless steel objects together. When these metals come into contact with each other a chemical reaction occurs which stains the silver.
- China with a pattern applied on top of the glaze may not be suitable for machine washing as the colours may fade and lose their lustre. The same applies to cutlery with wooden or plastic handles.

i Make sure you always buy articles that are dishwasher safe.

- Aluminium becomes dull and tarnished when machine washed. The machine gets it clean, but at the expense of its appearance.
- When washing delicate items, select the lower wash temperature.

1

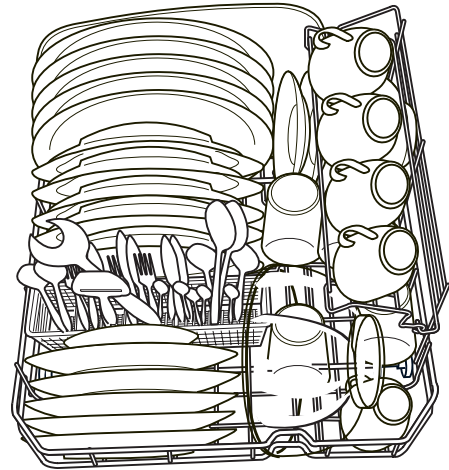


- Not all plastic articles are machine washable. If you are in doubt as to whether your plastic-ware can be washed in the machine, we suggest you check by washing a single item or else wash them by hand.
- Substances such as ketchup containing strong colouring agents can cause temporary discoloration in the machine.



Do not place sharp knives with their points upwards. It is much safer to lay them horizontally in the main basket.

2

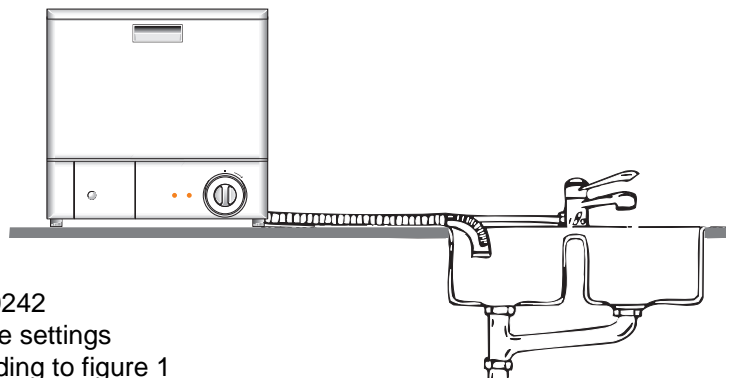

Instruction for verification tests

Test standard:

Rated capacity:

Loading of rack:

Test program:

Detergent (IEC type B):

Rinse aid (typ III):

Feed water pressure:

Waste water outlet:

EN 50242

5 place settings

According to figure 1

Normal 65° C

15 gram in the dispenser

Setting medium

Minimum 0,8 bar, maximum 10 bar


Install according to figure 2

The salt container and rinse aid dispenser shall be filled in accordance with the instruction manual.


Before conducting the measurements the dishwasher shall be operated for one or two complete cycles using detergent and a clean load.

Using the appliance


1

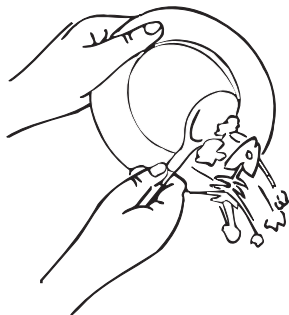

2

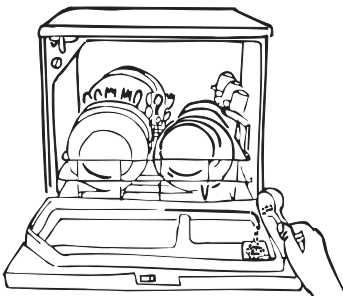

3

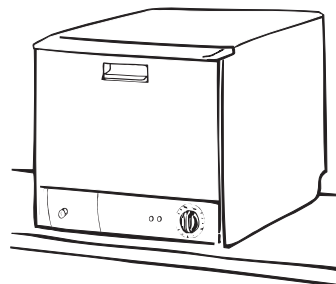


4



5



6

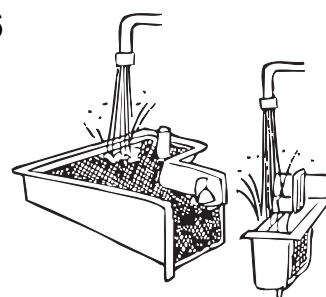

Starting the programme



1. Scrape or rinse off solid food remnants.
2. Load the dishwasher. (See the basket and loading).
For a normal load pour about 1-2 tablespoons of detergent into the detergent dispenser.
3. Close the door.
4. Select the required temperature.
5. Start the dishwasher by turning the programme knob to the start position.
6. Check the filters to see whether they need cleaning when the dishwasher has finished the wash.

In the event of a fault

Before calling out an engineer, please check through the details below because some faults can be rectified easily without the need to call out an engineer. If an engineer is called to resolve a problem listed below or to repair a fault caused by incorrect installation or mis-use a charge will be made, even if the appliance is under guarantee.

Fault	Check
The programme will not start.	<ul style="list-style-type: none"> • Is the door closed properly? • Have you set the programme control knob properly? • Is the water tap turned on? • Is the dishwasher plugged in? • Has the fuse blown?
The dishwasher is not filling with water.	<ul style="list-style-type: none"> • Is the water tap turned on? • Has your domestic water supply been cut off temporarily? • Is the water inlet hose kinked or nipped? • Is the filter inside the inlet hose blocked? • Is the water pressure too low?
Water not discharged at end of cycle.	<ul style="list-style-type: none"> • Did you open the door before the light went out and the programme cycle finished? • Are the filters clogged?
Dishes not washed satisfactorily.	<ul style="list-style-type: none"> • Has anything prevented the spray arm from rotating? • Are the spray arm holes clogged? • Were the dishes packed too close together? • Are the filters clogged? • Are the filters fitted correctly in place? • Did you use enough detergent? • Is the salt container cap properly closed? • Is the rinse aid dispenser empty?
Visible lime deposits or white film on the dishes.	<ul style="list-style-type: none"> • Is the salt container empty? • Is the rinse aid dispenser adjusted to too low dosage?
The dishwasher is noisy.	<ul style="list-style-type: none"> • Are the dishes rattling against each other? • Is the spray arm knocking against the dishes?
The dishes are not quite dry and are not shiny.	<ul style="list-style-type: none"> • Is the rinse aid dispenser empty or adjusted to too low dosage? • Have the dishes been left too long inside the dishwasher?
The door is difficult to close.	<ul style="list-style-type: none"> • Is the dishwasher level?



Never attempt to repair the dishwasher yourself. Repairs carried out by unauthorised or inexperienced persons can cause injury or other machine faults.



This appliance complies with the following E.E.C. directives:

- 73/23/EEC, dated 19.02.1973 – low-voltage directive.
- 89/336/EEC, dated 03.05.1989 (incl. amendment)
- 92/31/EEC) – directive on electromagnetic compatibility.

Service

Service and spare parts

Servicing and possible repairs must be carried out by a service company authorised by the supplier. Use only spare parts supplied by these.

Before calling service, use the trouble shooting table "In the event of a fault" to try to attend to the fault yourself. Note that electrical faults shall always be rectified by a certified electrician.


State the appliance's model designation, product- and serial numbers according to the data plate affixed to the rear of the dishwasher.


You can record these details here:

TYPE.
MOD.
PROD.NO.
SER.NO.
Purchase date.....

Under what circumstances does the fault occur?

Installation instructions

 **Any electrical work required to install this appliance, should be carried out by a qualified electrician or competent person.**

 **Any plumbing work required to install this appliance, should be carried out by a qualified plumber or competent person.**

Technical specifications

Capacity:	5 place settings accordance EN 50242	
Dimensions:	Height	460 mm
	Width	450 mm
	Depth	480 mm
Weight:	Net	17 kg
Water pressures:	Minimum	50 kPa (0,5 bar)
	Maximum	1000 kPa (10 bar)
Water temperature:	Maximum	65° C
Electrical data:	Power supply	230 V - 50 Hz
	Fuse	10 A
	Heating element	1200 W
	Power rating	1280 W

Unpacking

Damages

If the dishwasher has been damaged during transport, you should immediately notify the company responsible for delivering it.


Check that the dishwasher is undamaged. If you discover any damage, faults or that anything is missing, you should notify the dealer immediately.



Never leave packaging material in a place where children may play with it.

Check that the following accessories are supplied with the dishwasher when you unpack it:

- A funnel for filling salt (1)
- Elbow for discharge hose (2)
- Rubber seal (3)
- Restrictor 1/2" (4)

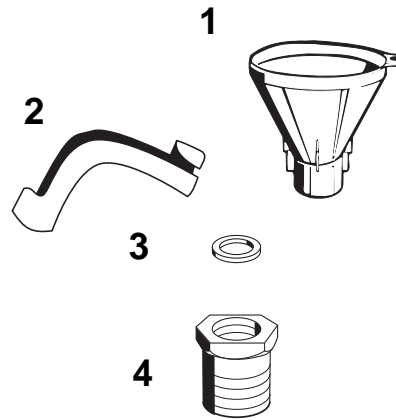


Use

This dishwasher is designed solely for washing household utensils suitable for washing in a dishwasher. Using it for other purposes may damage it and invalidate the guarantee.

Building-in

If you want to build the dishwasher into your kitchen furniture, it is important to use our approved build-in kit. This comes with the correct instructions needed to observe all the relevant regulations. You can obtain the build-in kit from the same place where you bought the dishwasher.

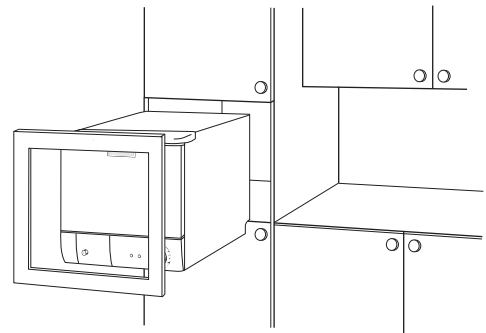

Protecting the dishwasher against freezing



If the dishwasher is placed in an environment where the temperature sometimes falls below 0° C, there is a risk that the small amount of water which remains inside the parts of the dishwasher will freeze and damage it.



1. Turn off the water supply to the dishwasher.
2. Remove the water inlet and discharge hoses.
3. Select a wash programme, start the machine and let the programme run for a short time.
4. Make sure that there is coarse-grained salt in the salt container for the water softener.



The appliance is only to be used and stored indoors at normal room temperature. The manufacture is not responsible for any frost damage.

Installation


Positioning


In its standard version the machine is intended for installation on a kitchen sink or worktop. To function properly the machine must be fully level. Its height can be adjusted with the adjustable feet (8 mm each).

Water supply

The temperature of the water supply should not exceed 65°C and the pressure should be between 50-1000 kPa (0.5-10 bar). It is important to have a tap or stopcock, positioned close to the machine and with easy access. Special mixer taps with dishwasher connections are available, as well as adaptors for older mixer taps. Connect the inlet hose to a tap with a 3/4" pipe thread. If necessary, use the restrictor (1/2") supplied.


The inlet hose must not be joined onto any form of extension hose. If it is too short, the entire hose must be replaced with a longer high-pressure hose, specially designed for the purpose. The machine end of this hose can be turned in any direction. Loosen the retaining nut, turn the hose, then retighten the nut.

 **Check that the nut and all other connections are tight before the machine is moved into position.**

 **Use only the inlet hose supplied to the dishwasher, do not reuse the old inlet hose.**

Discharge connection


Place the discharge hose over the sink as illustrated. It must not at any point be higher up than 75 cm over the surface which the dishwasher is standing on. If it runs higher, operation of the dishwasher might be impaired. It is also important to ensure that the inside diameter of the hose is not less than 13 mm at any point. If the discharge hose is too long it can easily be cut to the right length.






-  1. Cut the hose to a suitable length, using a sharp knife.
2. Fit the elbow supplied onto the end of the hose.

Electrical connection

The dishwasher must be connected to an earthed wall socket which must be easily accessible and protected by a 10 Amp fuse.

 **Permanent electrical installation must be carried out by an authorised electrician.**

 **Before any work is carried out on the machine it must be isolated from the electric mains supply, for example by removing the plug from the wall socket.**

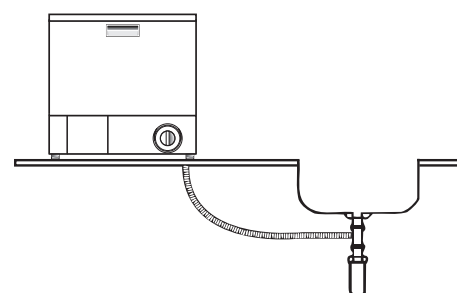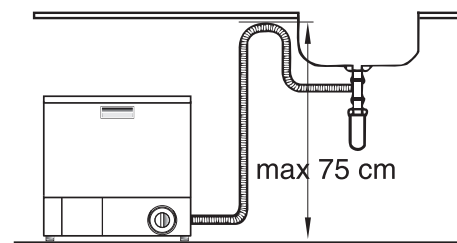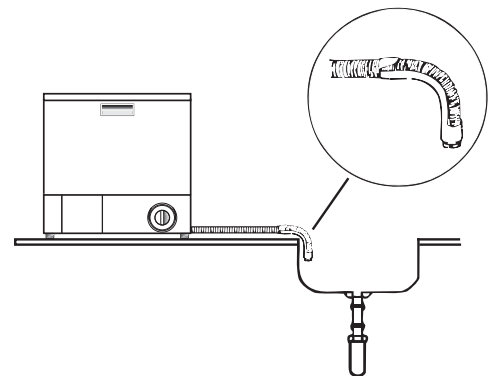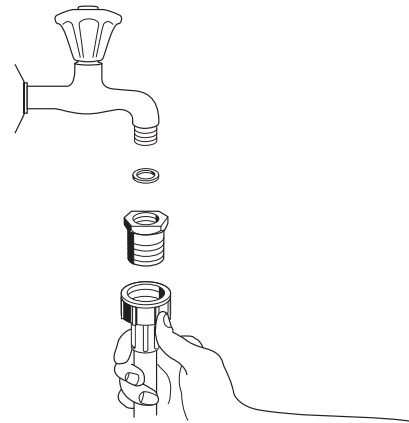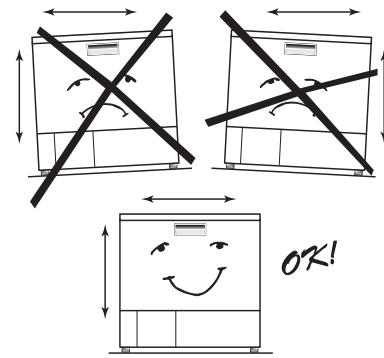

Electrolux

 **The Electrolux Group.** *The world's No.1 choice.*

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

Группа Электролюкс – крупнейший в мире производитель техники для кухни, работ по дому и вне дома. Ежегодно в более чем 150 странах мира продается более 55 миллионов изделий Электролюкс (таких как холодильники, кухонные плиты, стиральные машины, пылесосы, бензопилы и газонокосилки) на сумму около 14 миллиардов долларов США.

