
Lavavajillas Dishwasher Máquina de lavar loiça Lavastoviglie

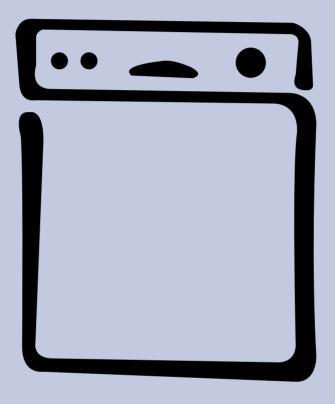


Model ESF 6100

E	Manual de instrucciones	(parte 2)	2
GB	Instruction book	(part 2)	7
P	Instruções de utilização	(parte 2)	12
	Libretto istruzioni	(parte 2)	17


Electrolux

Description of the appliance

- 1. Water hardness adjustment
- 2. Levelling spacers
- 3. Upper basket stop
- 4. Salt container
- 5. Large filter
- 6. Detergent dispenser
- 7. Control panel
- 8. Rating plate
- 9. Rinse aid dispenser
- 10. Central filter
- 11. Lower spray arm
- 12. Upper spray arm
- 13. Upper basket
- 14. Worktop

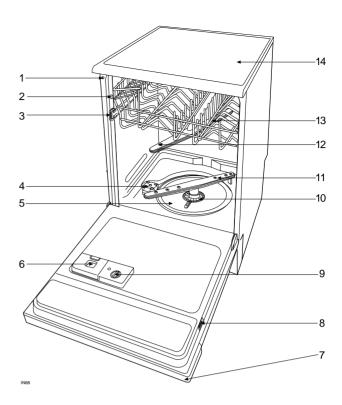

The control panel

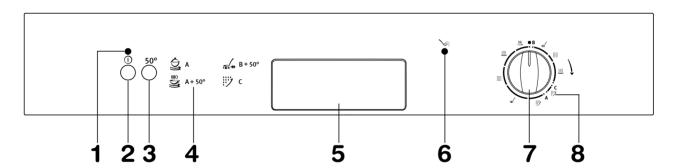

- 1. On/Off indicator light
- 2. On/Off push button
- 3. Main wash temperature push button (50°)
- 4. Programme guide
- 5. Door handle
- 6. Salt refilling indicator light (See "Instruction book" part 1)
- 7. Programme selector dial

8. Programme sequence indicator

As the programmes progresses, the programme dial turns, to show the phase in the wash programme the appliance has reached.

Prewash /Rinse and hold

⋌ Wash

Cold rinse

Hot rinse

∭ Drying

Washing programmes

Programme	Degree of soil and type of load	Starting position of the programme selector	Required push buttons	Recommended quantity of detergent		Cycle description
				wash	prewash	
Normal 65°C	Normal soil. Crockery and cutlery	Α	On/Off	25 g	5 g	Cold prewash Main wash up to 65°C 1 cold rinse 1 hot rinse Active drying
* Bio 50°C	Normal soil. Crockery and cutlery	А	On/Off + 50°	25 g	5 g	Cold prewash Main wash up to 50°C 1 cold rinse 1 hot rinse Active drying
** Quick 50°C	Light soil. Crockery and party crockery	В	On/Off + 50°	30 g	/	Main wash up to 50°C 1 cold rinse 1 hot rinse
Rinse and Hold	Any. Partial load (to be completed later in the day).	С	On/Off	/	1	1 cold rinse (to avoid food scraps from sticking together).

^{*} Testing programme for EN 50242. (see "Hints for test centres").

Operating sequence

1. Check the filters

Ensure that they are clean and properly positioned. (See "Maintenance and cleaning" - Instruction book - part 1)

2. Check that there is rinse aid and salt

(See "Instruction book" - part 1)

3. Load the dishes

Remove any scraps of food.

Pull the lower basket out and arrange the saucepans, plates and cutlery in it.

Pull the upper basket out and arrange the plates, saucers, glasses and cups etc. in it.

Slide the baskets back into the machine.

4. Ensure that the spray arms can rotate freely

5. Measure out detergent

Add the detergent into the dispenser according to the dosage quantity given in the "Washing programmes" chart.

Close the detergent dispenser lid.

6. Close the dishwasher door

7. Set the programme

Turn the programme selector dial clockwise until the letter of the programme you wish to select corresponds with the programme marker.

If necessary select the temperature of the main wash according to the instructions in the "Washing programmes" chart (see "Required push buttons").

8. Start the programme

Depress the On/Off push button.

The On/Off indicator light will come on and the machine will start.

If you wish to interrupt the washing programme at any time press this button again.

9. At the end of the washing programme

At the end of the programme the dishwasher will automatically stop.

The On/Off indicator light remains on until the On/Off push button is depressed.

10. Switch off the dishwasher

Switch off the dishwasher by pressing the On/Off push button

Open the door and wait a few minutes before removing the dishes; in this way they will be cooler and the drying will be improved.

Empty the lower basket first and then the upper one; this will avoid water dripping from the upper basket onto the dishes in the lower one.

When the washing programme has finished, it is recommended that the dishwasher is unplugged and the water tap turned off.

Attention!

In general it is not advisable to open the door while the machine is working; if the door is opened however, a safety device ensures that the machine stops.

Important!

Care must be taken if the door is opened during the hot phase or immediately after a programme has finished, as steam may escape.


^{**} This is a special programme for quick washing a full load of lightly soiled dishes, glasses and crockery (except pots) so that you may re-use them promptly.


Using your appliance

Loading your appliance

Before placing dishes in the machine, remove any scraps of food, to avoid clogging the filters and consequently reducing the performance.

Do not load very small items which can fall through the baskets.

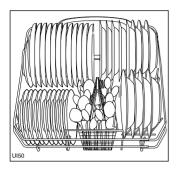

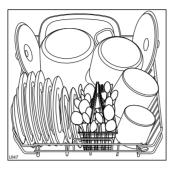


The lower basket


The lower basket is designed to take saucepans, lids, plates, salad bowls, cutlery etc.

Large dishes and lids should be arranged around the edge of the basket, ensuring that the upper spray arm can turn freely. The two rear rows of prongs on the lower basket can be easily lowered to allow you to load pots, pans and bowls.

To lower the prongs:

- Slightly pull them upwards and let them drop down (see picture).
- To bring them back to the standing position, just pull them up again.

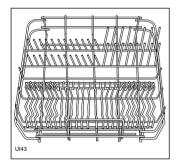

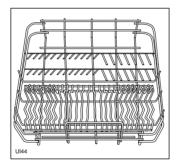

The cutlery basket

Long bladed knives stored in an upright position are a potential hazard.

Long and/or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket. Take care when loading or unloading sharp items such as knives.

Cutlery should be placed in the removable cutlery basket with the handles facing downwards.


If the handles protrude from the bottom of the basket, obstructing the lower spray arm, load the cutlery with the handles facing upwards.

Mix spoons with other cutlery to prevent them from sticking together.

Silver cutlery tends to go black if mixed with steel cutlery. Place it in the cutlery basket separate from the others.

For best results we recommend to use the cutlery grid provided (if the size and the dimensions of the cutlery allow it).

The cutlery basket can be placed either to the left or to the right of the lower basket.

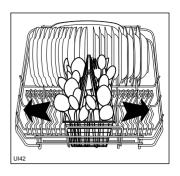


The upper basket

The upper basket is designed for plates (dessert plates, saucers, dinner plates of up to 25 cm in diameter), salad

bowls, cups and glasses.
Arrange items on and
underneath the cup racks so

that water can reach all surfaces. For taller items, the cup racks


can be folded upwards.
Light items (plastic bowls etc.) should be loaded in the upper basket and arranged so they do not move.

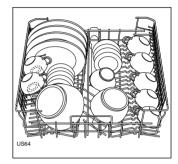

In case that plates are loaded in the upper basket:

load them starting from the rear positions of the basket; tilting them slightly forwards and avoiding the front positions near the door.

Before closing the door, ensure that the spray arms can rotate freely.

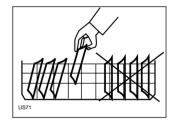


Adjusting the height of the upper basket

If washing very large plates (over 27 cm and up to 32 cm in diameter) you can load them in the lower basket after moving the upper basket to the higher position.

To move to the higher position proceed as follows:

- Move the front runner stops

 (A) of the upper basket outward and slide the basket out.
- Refit the basket in the higher position and replace the stops (A) in their original position.

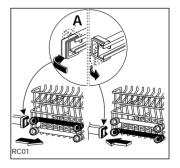

When the top basket is in

the higher position it will only take plates up to 20 cm in diameter and you will not be able to use the cup racks.

After loading your machine always close the door, as an open door can be a hazard.

Hints for test centres

Before starting any test it is necessary to fill completely with salt the salt container and with rinse aid the rinse aid dispenser.

Test standard:	EN 50242
Reference programme:	Bio 50°C
Load:	12 standard place settings
Rinse aid selector:	position 5
Detergent dosage:	25 g in the dispenser 5 g on the dispenser lid



Arrangement upper basket



Arrangement cutlery basket



Arrangement lower basket


Technical specifications

Dimensions	Width	60 cm
	Height with worktop	85 cm
	Height without worktop	82 cm
	Max depth	63.5 cm
	Max depth with open door	115.2 cm
Electrical connection	Voltage	230 V - 50 Hz
Motor rating during wash		200 W
Power of heating element		2100 W
Overall power		2300 W
Water supply pressure	Minimum	50 kPa (0.5 bar)
	Maximum	800 kPa (8 bar)
Water supply connection	Water cold/hot	max. 60°C
Capacity		12 place settings

Fitting under a counter

(kitchen worktop or sink)

By removing the machine's worktop, you can install it under a close fitting sink unit or a pre-existing top, providing the dimensions of the recess correspond to those shown in the picture.

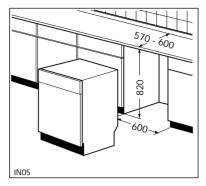

Proceed as follows:

 Remove the machine's worktop by unscrewing the two rear retaining screws, pull from the front and slide out the rear slots, lifting the worktop.

Insert the machine after adjusting height and levelling with the adjustable feet. When inserting the machine, ensure that the water inlet and drain hoses are not kinked or squashed.

Levelling

Good levelling is essential for correct closure and sealing of the door.

When the appliance is correctly levelled, the door will not catch on the levelling spacers on either side of the cabinet.

If the door does not close correctly, loosen or tighten the adjustable feet until the machine is perfectly level.

Protection against flooding

In order to prevent water floods, the machine has been provided with an additional device in the bottom of the machine to protect against flooding.

The device will operate if there are any water leaks in the machine, however it will only operate if the machine is on.

In case of malfunction to repair the dishwasher, turn off the water tap and call the Service Force Centre.

The products

In order to obtain a good wash, it is necessary to use detergents specially designed for dishwashers.

To ensure that your dishwasher functions perfectly, Zanussi recommends using Calgonit System, a unique and complete product, tested by millions of householders.

Calgonit System includes Calgonit detergent, rinse aid, salt, machine detergent and Citro-Fresh.

It is able to fulfil the main requirements for clearing both the crockery and the machine itself.



The Electrolux Group. The world's No.1 choice.

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. 14 billion USD in more than 150 countries around the world.



1 1 12/01 152976 95/1

