

# **TECHNICAL MANUAL**

**INSTALLATION MANUAL FOR EXPORT UNITS  
SERVICE MANUAL FOR DOMESTIC UNITS**

***ELECTRICALLY HEATED MODELS:***

**CREW 44**

**CREW 66**

**STEAM HEATED MODELS**

**CREW 44S**

**CREW 66S**





<b>Revision Letter</b>	<b>Revision Date</b>	<b>Made By</b>	<b>Applicable ECNs</b>	<b>Details</b>
A	07-27-10	CW/JC	N/A	Initial release of manual
B	02-25-11	JC	8183 8186 8187 8177	Transformer change for 208 Volt units. Drain handle operation & alignment change. Door splash shield addition. Rinse paddle switch operation. Initial release of 66" units, 44" Steam units & 66" Steam units
C	06-30-11	JC	N/A	Initial release of 23" & 30" unhooded side-loaders
D	03-28-13	JC		Changed Jackson Logo

## TABLE OF CONTENTS

### ***Specifications***

Machine Dimensions	Page 6
Side Loader Dimensions	Page 10
Steam Booster Heater Dimensions	Page 11
Operating Parameters	Page 12
Notes Regarding Electrical Requirements	Page 13
Electrical Requirements	Page 14

### ***Instructions***

Installation Instructions	Page 17
Curtain Installation Instructions	Page 22
Operating Instructions	Page 23
Delime Instructions	Page 25

### ***Maintenance***

Troubleshooting	Page 26
-----------------	---------

### ***Parts Section***

Control Box Components	Page 27
Overloads	Page 29
Miscellaneous Electrical Components	Page 30
Wash Heater and Heater Shroud Assemblies	Page 31
Pump Suction Assembly	Page 32
Wash Heaters	Page 33
Door Assembly	Page 34
Pre-Wash Door Assembly	Page 35
Wash Door Spring Assembly	Page 36
Plumbing Assembly, Main Water Inlet	Page 37
Wash Tank Fill Assembly	Page 38
Pre-Wash Tank Fill Assemblies	Page 39
Wash Manifold and Arm Assembly	Page 40
Pre-Wash Manifold and Arm Assemblies	Page 42
Rinse Assembly	Page 44
Pawl Bar Assembly	Page 46
Pawl Bar Bracket Assembly	Page 47
Pawl Bar Gutter Assembly	Page 48

## TABLE OF CONTENTS (CONTINUED)

### ***Parts Section (Continued)***

Rack Paddle Assembly	Page 49
Rinse Paddle Assemblies	Page 50
Drain Assembly Parts	Page 51
Covers, Guards and Panels	Page 52
Brackets	Page 53
Miscellaneous Parts	Page 54
Ventilation Cowl Parts	Page 55
Ventilation Cowl for Unhooded Side-Loader	Page 56
Drive Assembly	Page 57
Side-Loaders	Page 59
Side-Loader Drive Linkage	Page 62
Steam Heating Coil Assembly	Page 63
Booster Heater Option (Electric)	Page 64
Booster Heater Option (Steam)	Page 65

### ***Electrical Diagrams and Schematics***

Booster Heater Schematic (3 Phase)	Page 67
Booster Heater Schematic (1 Phase, 12 KW)	Page 68
Booster Heater Schematic (1 Phase, 18 KW)	Page 69
Steam Booster Heater Schematic	Page 70
Temperature Board	Page 71
Schematic, Photo-Cell Table Limit Switch	Page 72
Schematic, 44" (208-230-460/60/3 Phase)	Page 73
Schematic, 44" (208-230/60/1 Phase)	Page 74
Schematic, 44" Steam (208-230-460/60/3 Phase)	Page 75
Schematic, 44" Steam (208-230/60/1 Phase)	Page 76
Schematic, 66" (208-230-460/60/3 Phase)	Page 77
Schematic, 66" (208-230/60/1 Phase)	Page 78
Schematic, 66" Steam (208-230-460/60/3 Phase)	Page 79
Schematic, 66" Steam (208-230/60/1 Phase)	Page 80

### ***Maintenance & Repair Centers***

Page 81

# Technical Manual (07610-003-78-18)


## MACHINE DIMENSIONS ( 44" Left to Right)

**NOTE 1:**  
THE MAXIMUM DOOR HEIGHT MAY BE REDUCED BY THE ADDITION OF OPTIONAL DOOR BRACKETS. MAXIMUM HEIGHTS OF 91", 89" & 87" ARE AVAILABLE.

**NOTE 2:**  
VENTILATION DUCT ADAPTERS ARE ADJUSTABLE FROM 51-1/2" TO 54".

**NOTE 3:**  
THE DRIVE ASSEMBLY AND GUARD MAY BE INSTALLED ON EITHER END OF THE UNIT. INSTALLATION ON THE UNLOAD END IS STANDARD. IF INSTALLED ON THE LOAD END, PLEASE ENSURE ANY SCRAP SINKS IN THE TABLING ARE AT AN ADEQUATE DISTANCE TO PROVIDE FOR CLEARANCE OF THE DRIVE ASSEMBLY.

**NOTE 4:**  
ALL VERTICAL DIMENSIONS MAY VARY DUE TO THE ADJUSTABLE FEET.

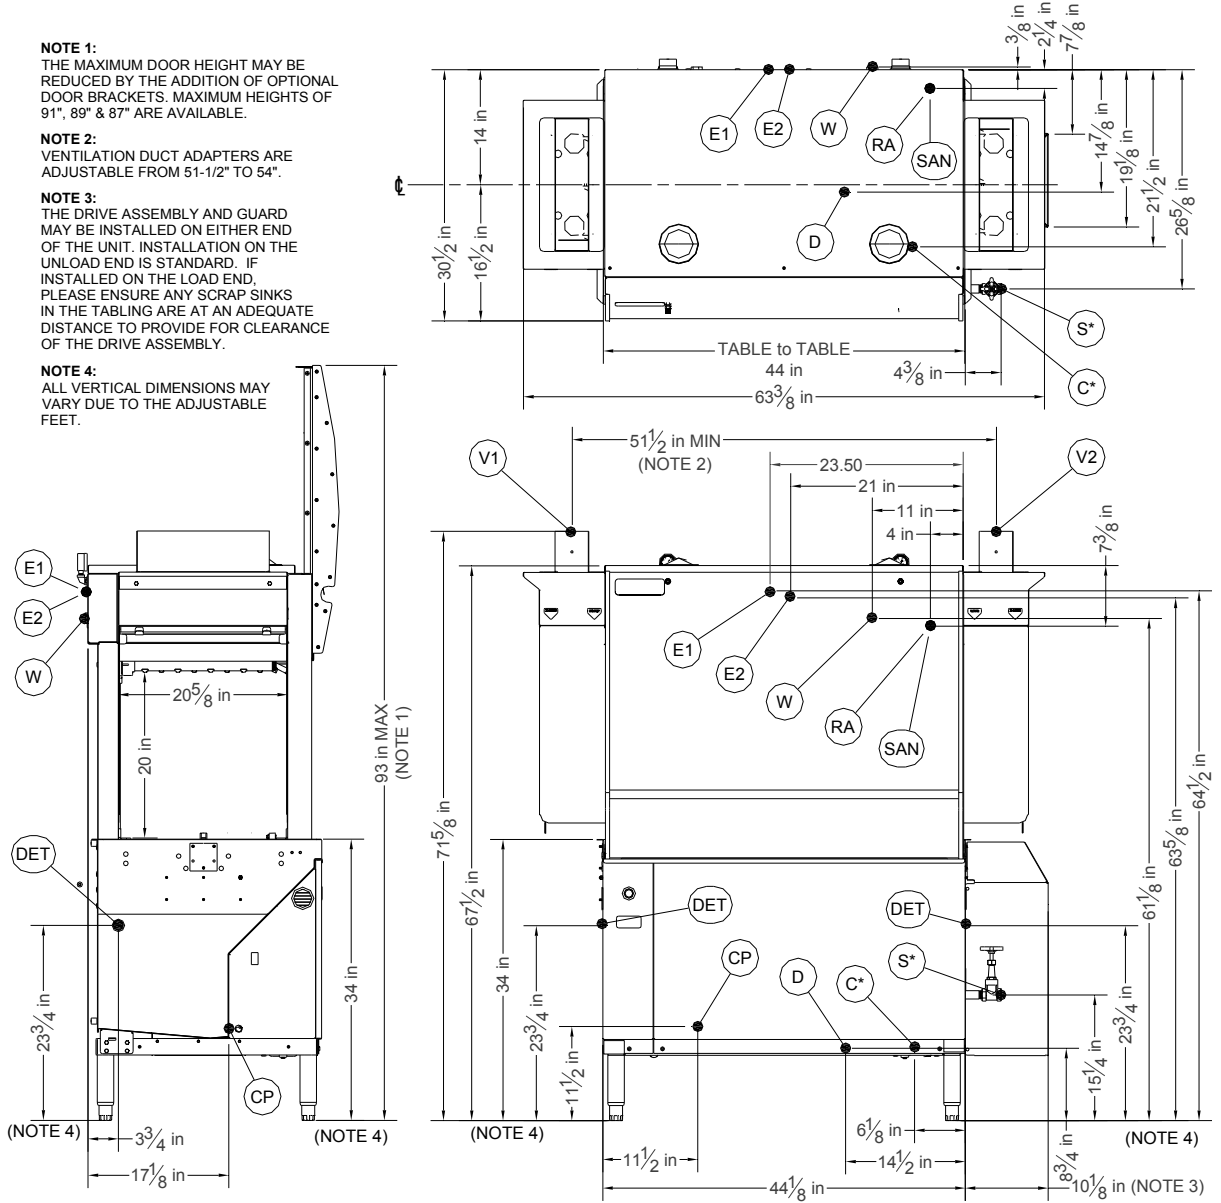


- \* APPLIES TO STEAM HEATED UNITS
- \*\* CHEMICAL SANITIZING UNITS ONLY

E1	MAIN ELECTRICAL CONNECTION (1.375" DIA HOLE)
E2	BOOSTER HEATER ELECT. CONNECTION (1.375" DIA)
W	MAIN INLET WATER CONNECTION (1/2 NPT-F)
D	DRAIN CONNECTION (1-1/2" NPT-F)
DET	DETERGENT BULKHEAD ACCESS (.875" DIA HOLE)
SAN**	SANITIZER INLET TO RINSE (1/8" NPT-F)

RA	RINSE AID CONNECTION TO RINSE (1/8" NPT-F)
CP	CONDUCTIVITY PROBE ACCESS (.875" DIA HOLE)
S*	STEAM TO WASH TUB HEATING COIL (3/4" NPT-F)
C*	CONDENSATE RETURN (3/4" NPT-F)
V1	VENTILATION DUCT CONN. (LOAD END) 4" x 16" ID
V2	VENTILATION DUCT CONN. (UNLOAD END) 4" x 16" ID

# Technical Manual (07610-003-78-18)

## MACHINE DIMENSIONS ( 44" Right to Left)

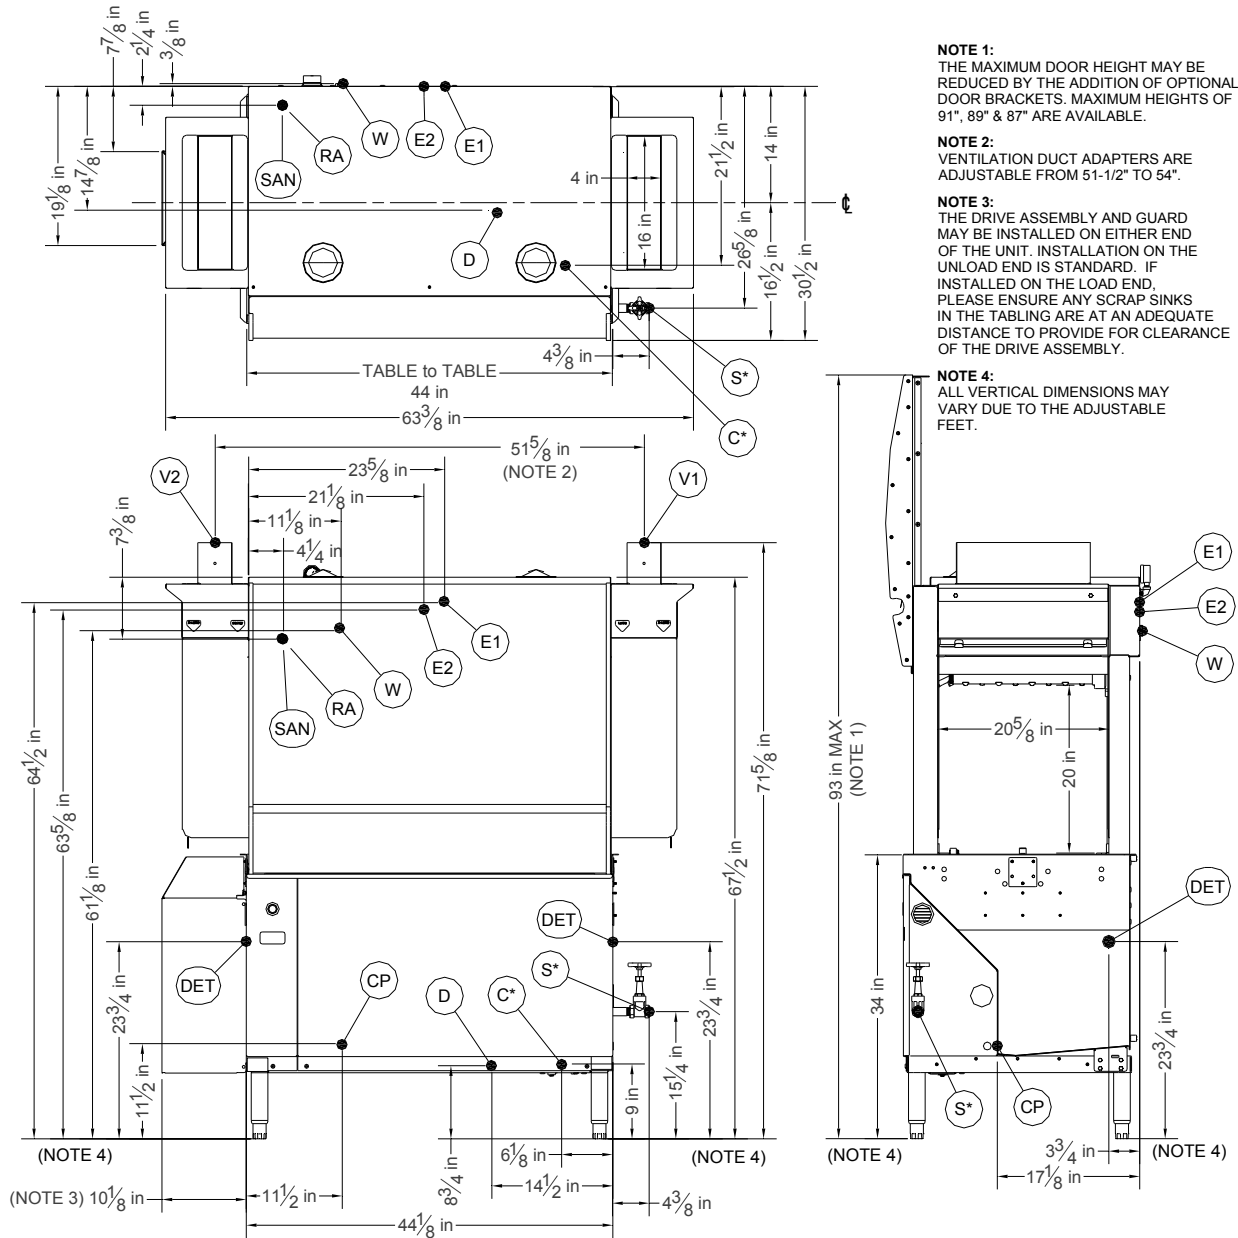

**NOTE 1:**  
THE MAXIMUM DOOR HEIGHT MAY BE REDUCED BY THE ADDITION OF OPTIONAL DOOR BRACKETS. MAXIMUM HEIGHTS OF 91", 89" & 87" ARE AVAILABLE.

**NOTE 2:**  
VENTILATION DUCT ADAPTERS ARE ADJUSTABLE FROM 51-1/2" TO 54".

**NOTE 3:**  
THE DRIVE ASSEMBLY AND GUARD MAY BE INSTALLED ON EITHER END OF THE UNIT. INSTALLATION ON THE UNLOAD END IS STANDARD. IF INSTALLED ON THE LOAD END, PLEASE ENSURE ANY SCRAP SINKS IN THE TABLING ARE AT AN ADEQUATE DISTANCE TO PROVIDE FOR CLEARANCE OF THE DRIVE ASSEMBLY.

**NOTE 4:**  
ALL VERTICAL DIMENSIONS MAY VARY DUE TO THE ADJUSTABLE FEET.

\* APPLIES TO STEAM HEATED UNITS

\*\* CHEMICAL SANITIZING UNITS ONLY

E1	MAIN ELECTRICAL CONNECTION (1.375" DIA HOLE)
E2	BOOSTER HEATER ELECT. CONNECTION (1.375" DIA)
W	MAIN INLET WATER CONNECTION (1/2 NPT-F)
D	DRAIN CONNECTION (1-1/2" NPT-F)
DET	DETERGENT BULKHEAD ACCESS (.875" DIA HOLE)
SAN**	SANITIZER INLET TO RINSE (1/8" NPT-F)

RA	RINSE AID CONNECTION TO RINSE (1/8" NPT-F)
CP	CONDUCTIVITY PROBE ACCESS (.875" DIA HOLE)
S*	STEAM TO WASH TUB HEATING COIL (3/4" NPT-F)
C*	CONDENSATE RETURN (3/4" NPT-F)
V1	VENTILATION DUCT CONN. (LOAD END) 4" x 16" ID
V2	VENTILATION DUCT CONN. (UNLOAD END) 4" x 16" ID

# Technical Manual (07610-003-78-18)


## MACHINE DIMENSION (66" Left to Right)

**NOTE 1:**  
THE MAXIMUM DOOR HEIGHT MAY BE REDUCED BY THE ADDITION OF OPTIONAL DOOR BRACKETS. MAXIMUM HEIGHTS OF 91", 89" & 87" ARE AVAILABLE.

**NOTE 2:**  
VENTILATION DUCT ADAPTERS ARE ADJUSTABLE FROM 73-1/2" TO 76".

**NOTE 3:**  
THE DRIVE ASSEMBLY AND GUARD MAY BE INSTALLED ON EITHER END OF THE UNIT. INSTALLATION ON THE UNLOAD END IS STANDARD. IF INSTALLED ON THE LOAD END, PLEASE ENSURE ANY SCRAP SINKS IN THE TABLING ARE AT AN ADEQUATE DISTANCE TO PROVIDE FOR CLEARANCE OF THE DRIVE ASSEMBLY.

**NOTE 4:**  
ALL VERTICAL DIMENSIONS MAY VARY DUE TO THE ADJUSTABLE FEET.

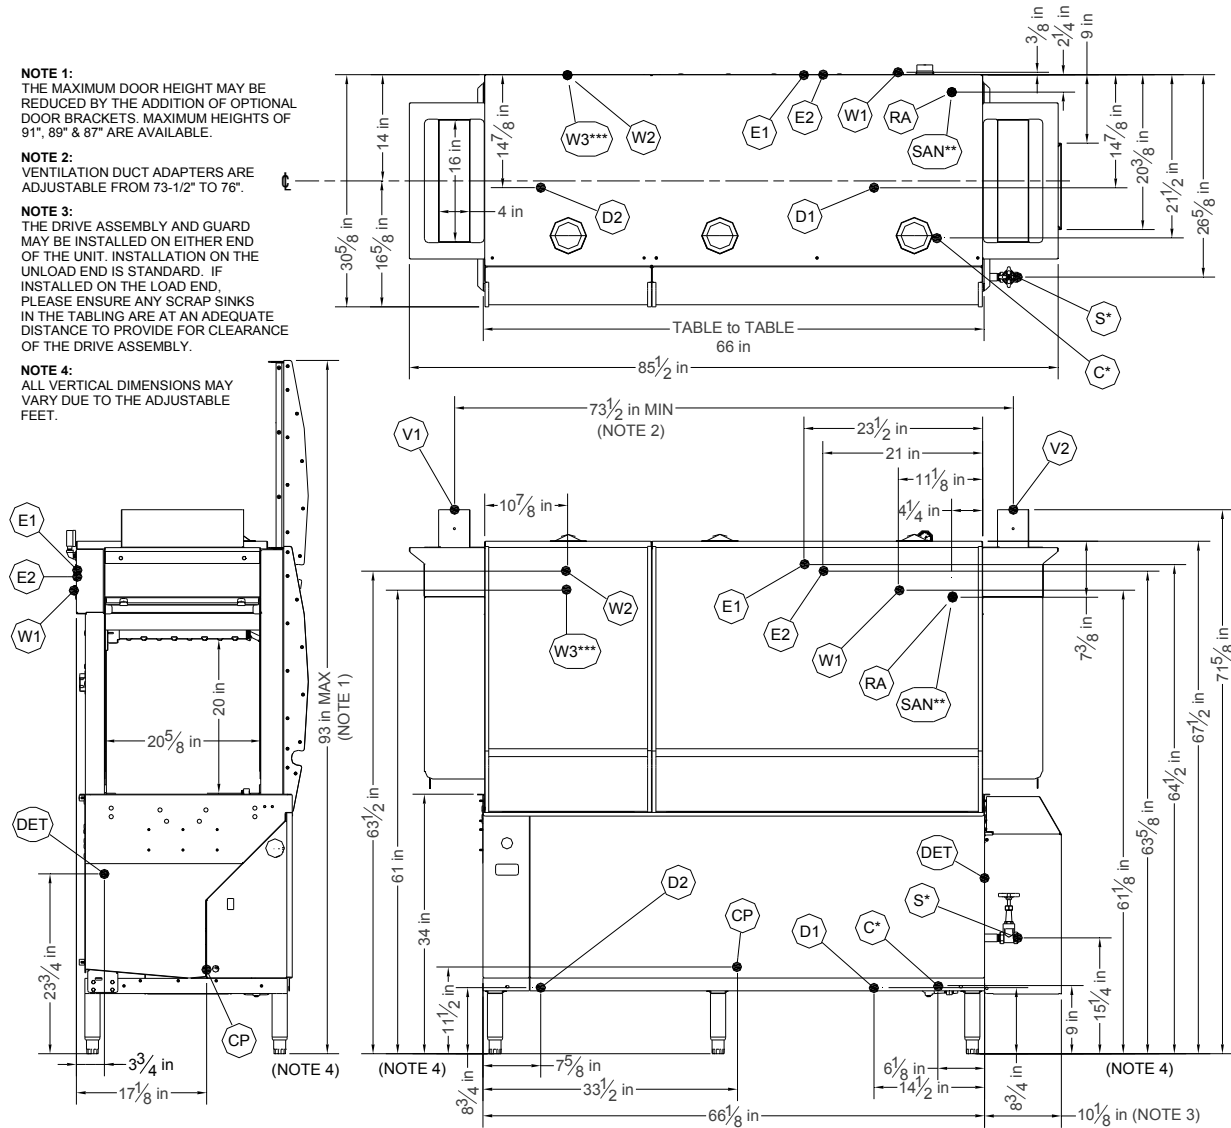

\* APPLIES TO STEAM HEATED UNITS

\*\* CHEMICAL SANITIZING UNITS ONLY


\*\*\* PRE-WASH COLD WATER THERMOSTAT OPTION ONLY

E1	MAIN ELECTRICAL CONNECTION (1.375" DIA HOLE)	SAN**	SANITIZER INLET TO RINSE (1/8" NPT-F)
E2	BOOSTER HEATER ELECT. CONNECTION (1.375" DIA)	RA	RINSE AID CONNECTION TO RINSE (1/8" NPT-F)
W1	MAIN INLET WATER CONNECTION (1/2 NPT-F)	CP	CONDUCTIVITY PROBE ACCESS (.875" DIA HOLE)
W2	PRE-WASH INLET WATER CONN. (1/2 NPT-F)	S*	STEAM TO WASH TUB HEATING COIL (3/4" NPT-F)
W3***	PRE-WASH COLD WATER CONN. (1/2 NPT-F)	C*	CONDENSATE RETURN (3/4" NPT-F)
D1	DRAIN CONNECTION, WASH (1-1/2" NPT-F)	V1	VENTILATION DUCT CONN. (LOAD END) 4" x 16" ID
D2	DRAIN CONNECTION, PRE-WASH (1-1/2" NPT-F)	V2	VENTILATION DUCT CONN. (UNLOAD END) 4" x 16" ID
DET	DETERGENT BULKHEAD ACCESS (.875" DIA HOLE)		



# Technical Manual (07610-003-78-18)


## MACHINE DIMENSION (66" Right to Left)

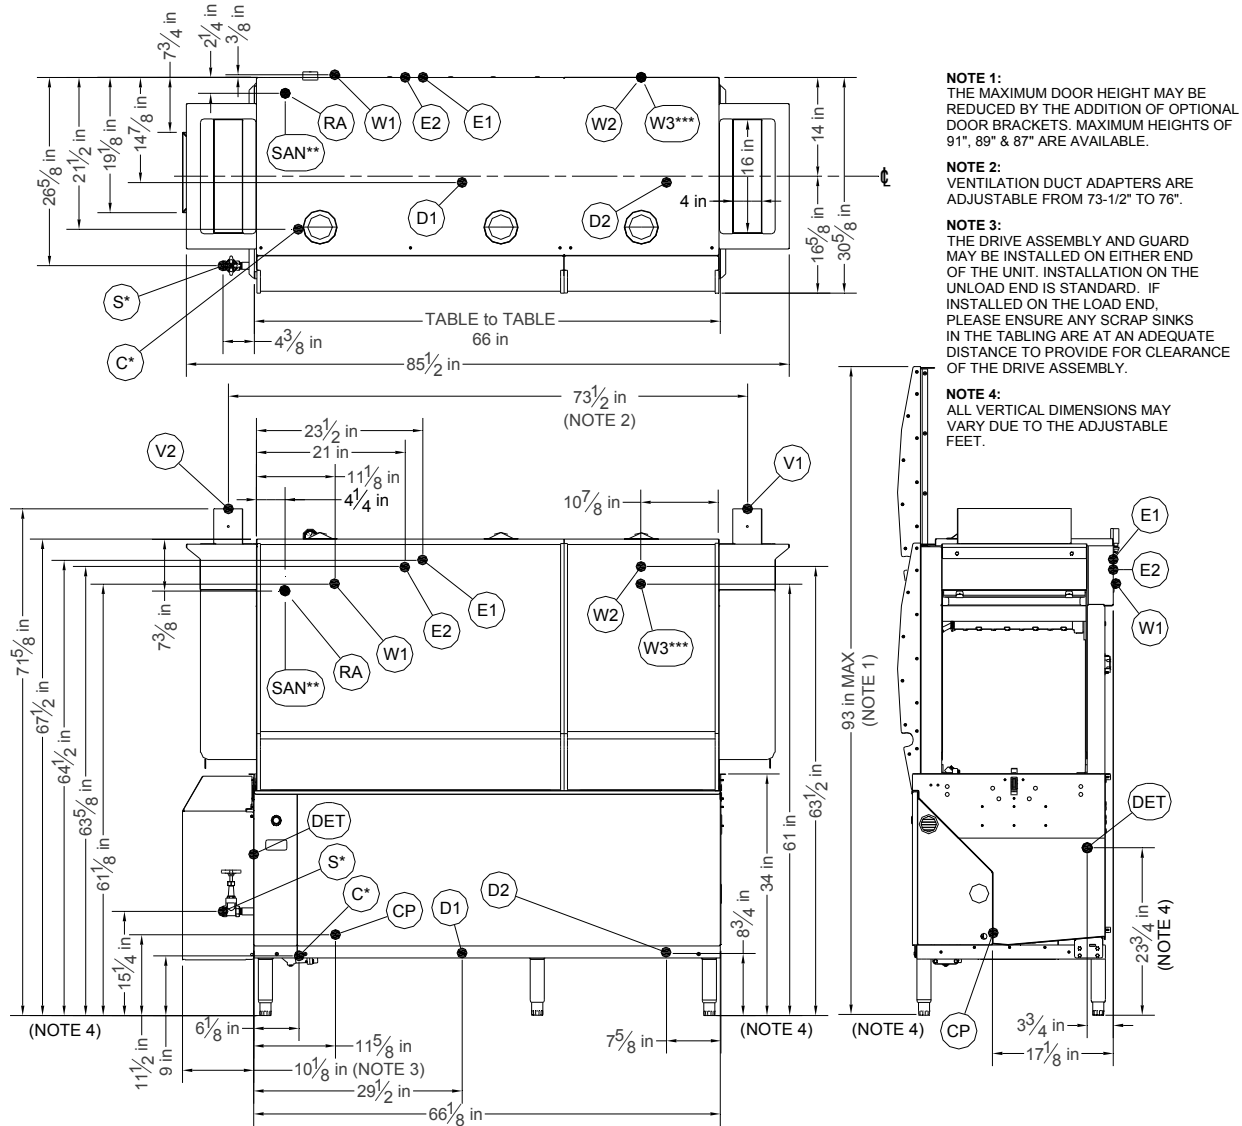


- \* APPLIES TO STEAM HEATED UNITS
- \*\* CHEMICAL SANITIZING UNITS ONLY
- \*\*\* PRE-WASH COLD WATER THERMOSTAT OPTION ONLY

E1	MAIN ELECTRICAL CONNECTION (1.375" DIA HOLE)	SAN**	SANITIZER INLET TO RINSE (1/8" NPT-F)
E2	BOOSTER HEATER ELECT. CONNECTION (1.375" DIA)	RA	RINSE AID CONNECTION TO RINSE (1/8" NPT-F)
W1	MAIN INLET WATER CONNECTION (1/2 NPT-F)	CP	CONDUCTIVITY PROBE ACCESS (.875" DIA HOLE)
W2	PRE-WASH INLET WATER CONN. (1/2 NPT-F)	S*	STEAM TO WASH TUB HEATING COIL (3/4" NPT-F)
W3***	PRE-WASH COLD WATER CONN. (1/2 NPT-F)	C*	CONDENSATE RETURN (3/4" NPT-F)
D1	DRAIN CONNECTION, WASH (1-1/2" NPT-F)	V1	VENTILATION DUCT CONN. (LOAD END) 4" x 16" ID
D2	DRAIN CONNECTION, PRE-WASH (1-1/2" NPT-F)	V2	VENTILATION DUCT CONN. (UNLOAD END) 4" x 16" ID
DET	DETERGENT BULKHEAD ACCESS (.875" DIA HOLE)		

SIDE LOADER DIMENSIONS

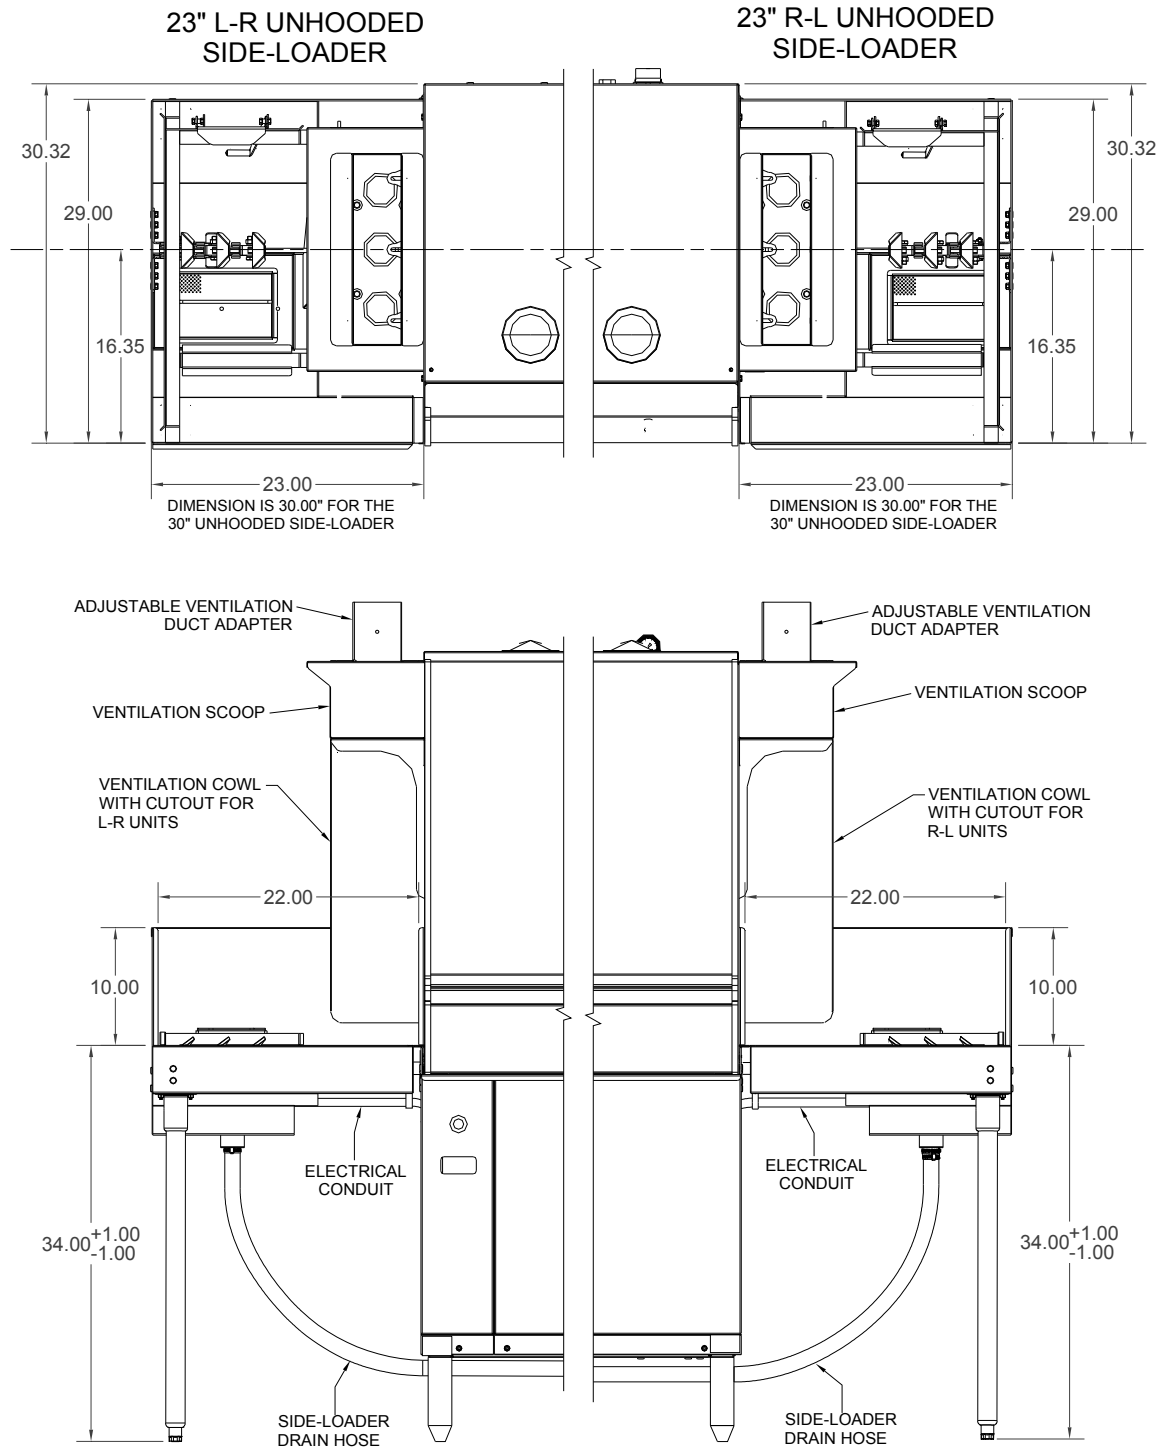


STEAM BOOSTER HEATER DIMENSIONS

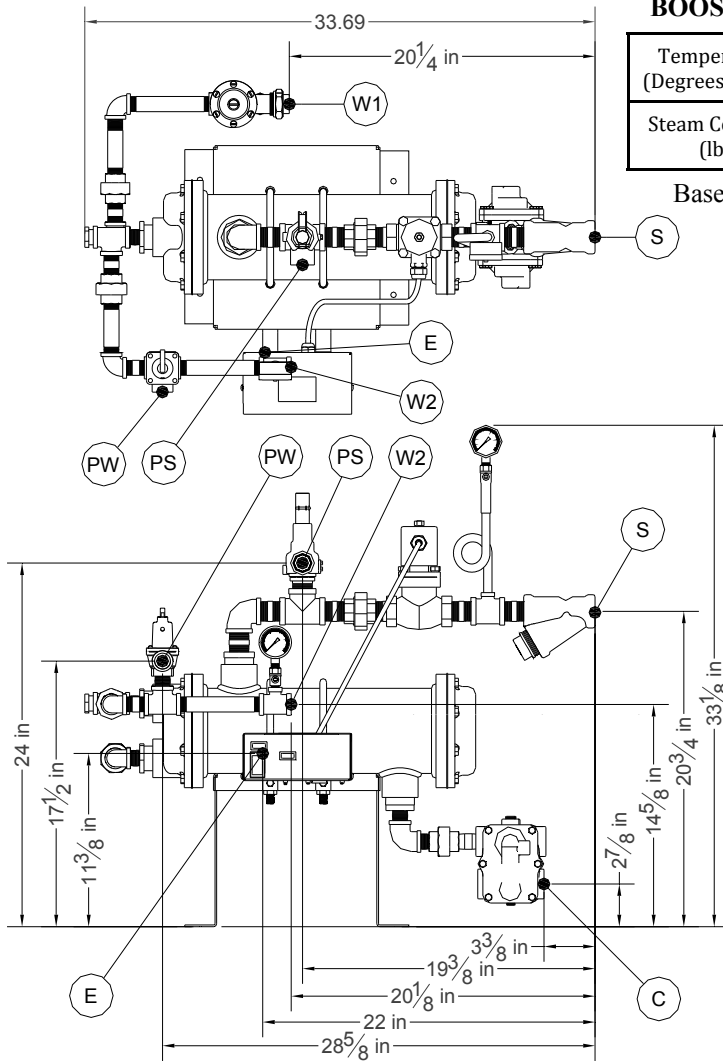

BOOSTER HEATER STEAM CONSUMPTION

Temperature Rise (Degrees Fahrenheit)	40	50	60	70	80
Steam Consumption (lbm/hr)	30	37	45	52	59

Based upon a Steam Inlet Pressure of 15-25psig

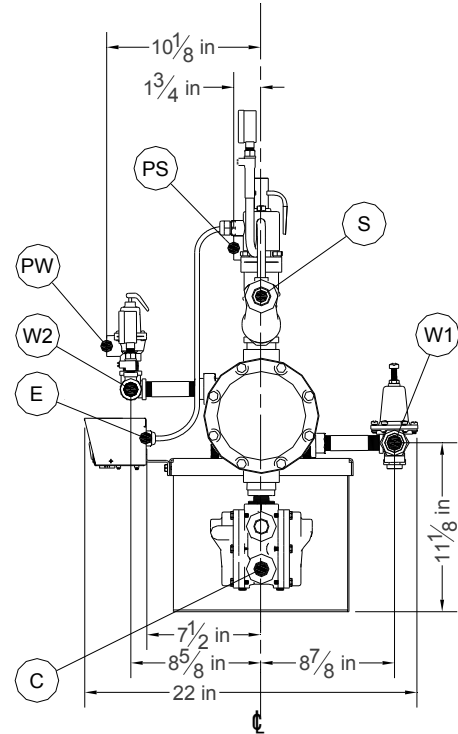

E	MAIN ELECTRICAL CONNECTION (7/8" DIA HOLE)
W1	MAIN INLET WATER CONNECTION (3/4 NPT-F)
W2	WATER OUTLET CONNECTION (3/4 NPT-F)
PW	WATER PRESSURE RELIEF OUTLET (3/4 NPT-F)
PS	STEAM PRESSURE RELIEF OUTLET (1" NPT-F)
S	STEAM SUPPLY TO BOOSTER (1" NPT-F)
C	STEAM CONDENSATE CONNECTION (3/4 NPT-F)

**Operating Parameters**

<b>Model Designation:</b>	<b>44"</b>	<b>66"</b>	<b>44"Steam</b>	<b>66"Steam</b>
<b>Operating Capacity:</b>				
<i>Racks per Hour</i>	218	218	218	218
<i>Dishes per Hour</i>	3488	3488	3488	3488
<i>Glasses per Hour</i>	7848	7848	7848	7848
<b>Tank Capacity (gallons):</b>				
<i>Wash Tank</i>	35.6	35.6	35.6	35.6
<i>Pre-Wash Tank</i>	N/A	15.8	N/A	15.8
<b>Electrical Loads (as applicable):</b>				
<i>Wash Motor HP</i>	3.0	3.0	3.0	3.0
<i>Drive Motor HP</i>	0.25	0.25	0.25	0.25
<i>Pre-Wash Motor HP</i>	N/A	2.0	N/A	2.0
<i>Wash Heater KW</i>	15 or 18	18	N/A	N/A

**NOTE:** Always refer to the machine data plate for specific electrical and water requirements. The material provided on this page is for reference only and is subject to change without notice.

**HOT WATER SANITIZING**

**Water Temperatures (Fahrenheit):**

<i>Pre-Wash Temperature (Recommended)</i>	N/A	110-140	N/A	110-140
<i>Minimum Wash Temperature</i>	160	160	160	160
<i>Minimum Rinse Temperature</i>	180	180	180	180
<i>Incoming Water Temperature</i>				
<i>12 KW Booster</i>	140	140	N/A	N/A
<i>18 KW Booster</i>	110	110	N/A	N/A
<i>No Booster</i>	180	180	180	180

**CHEMICAL SANITIZING**

**Water Temperatures (Fahrenheit):**

<i>Pre-Wash Temperature (Recommended)</i>	N/A	110-120	N/A	110-120
<i>Minimum Wash Temperature</i>	120	120	120	120
<i>Minimum Rinse Temperature</i>	120	120	120	120
<i>Incoming Water Temperature</i>				
<i>12 KW Booster</i>	80	80	N/A	N/A
<i>18 KW Booster</i>	50	50	N/A	N/A
<i>No Booster</i>	120	120	120	120

**Other Water Requirements:**

<i>Water Flow Pressure (PSIG)</i>	15	15	15	15
<i>Flow Rate Minimum (GPM)</i>	1.18	1.18	1.18	1.18
<i>Water Line Size (NPT)</i>	1/2"	1/2"	1/2"	1/2"
<i>Drain Line Size (NPT)</i>	1-1/2"	1-1/2"	1-1/2"	1-1/2"

**Steam Requirements**

<i>Steam Line for Wash Tank (NPT)</i>	N/A	N/A	3/4"	3/4"
<i>Steam Flow Pressure (PSIG)</i>	N/A	N/A	10-20	10-20
<i>Consumption @ 15 PSIG (lbm/hr)</i>	N/A	N/A	60	60

### Notes Regarding Electrical Requirements

All electrical ratings provided in this manual are for reference only. Always refer to the machine data plate to get the exact electrical information for your machine. **All electrical work performed on machines should be done in accordance with applicable local, state, territorial and national codes.** Work should only be performed by qualified electricians and authorized service agents. A list of authorized Service Agencies is located in the back of this manual.

Note that all electrical wiring used in the dish-machine must be rated, at a minimum, for 100C (212F). Furthermore, use copper conductors only.

Where applicable, heating element amperage draws have been adjusted for the assumed input voltage. Jackson assumes incoming voltages will be either 208, 230 or 460 volts. Some of the heating elements used in our machines are actually rated for other voltages, such as 240 or 480 volts. Always verify the amperage draw of the machine in operation when sizing circuit protection.

If your machine is equipped with the optional rinse heater, note the rinse heater has its own electrical connection and therefore requires a separate service. Amperage loads for motors and heaters are called out on the machine data plate for the installation/service technician.

The electrical configurations of the machines are as follows:

#### **Available Electrical Characteristics:**

- 208 volt, 60 Hz, single phase
- 230 volt, 60 Hz, single phase
- 208 volt, 60 Hz, three phase
- 230 volt, 60 Hz, three phase
- 460 volt, 60 Hz, three phase

#### **Available Wash Tank Heaters:**

- 15KW (standard for CREW 44)
- 18KW (optional for CREW 44, standard for CREW 66)

#### **Available Rinse Heaters (“Booster Heaters”):**

- None (standard)
- 12KW (40F rise in temperature)
- 18KW (70F rise in temperature)

Electrical Requirements for 44" Units

44" with 15 kW Wash Heater

Volts	Phase	Freq	Wash Motor Amps	Drive Motor Amps	Wash Heater Amps	FLA	MCA	MOP
208	1	60	10.0 A	1.8 A	72.1 A	83.9 A	86.4 A	96.4 A
230	1	60	10.0 A	1.8 A	*59.9 A	71.7 A	74.2 A	84.2 A
240	1	60	10.0 A	1.8 A	62.5 A	74.3 A	76.8 A	86.8 A
208	3	60	8.6 A	1.1 A	41.6 A	51.3 A	53.5 A	62.1 A
230	3	60	8.4 A	1.1 A	*34.6 A	44.1 A	46.2 A	54.6 A
240	3	60	8.4 A	1.1 A	36.1 A	45.6 A	47.7 A	56.1 A
460	3	60	4.2 A	0.6 A	**17.3 A	22.1 A	23.2 A	27.4 A
480	3	60	4.2 A	0.6 A	18.1 A	22.9 A	24.0 A	28.2 A

44" with 18 kW Wash Heater

Volts	Phase	Freq	Wash Motor Amps	Drive Motor Amps	Wash Heater Amps	FLA	MCA	MOP
208	1	60	10.0 A	1.8 A	86.5 A	98.3 A	100.8 A	110.8 A
230	1	60	10.0 A	1.8 A	*71.9 A	83.7 A	86.2 A	96.2 A
240	1	60	10.0 A	1.8 A	75.0 A	86.8 A	89.3 A	99.3 A
208	3	60	8.6 A	1.1 A	50.0 A	59.7 A	61.9 A	70.5 A
230	3	60	8.4 A	1.1 A	*41.5 A	51.0 A	53.1 A	61.5 A
240	3	60	8.4 A	1.1 A	43.4 A	52.9 A	55.0 A	63.4 A
460	3	60	4.2 A	0.6 A	**20.8 A	25.6 A	26.7 A	30.9 A
480	3	60	4.2 A	0.6 A	21.7 A	26.5 A	27.6 A	31.8 A

44" Steam

Volts	Phase	Freq	Wash Motor Amps	Drive Motor Amps	FLA	MCA	MOP
208	1	60	10.0 A	1.8 A	11.8 A	14.3 A	24.3 A
230	1	60	10.0 A	1.8 A	11.8 A	14.3 A	24.3 A
208	3	60	8.6 A	1.1 A	9.7 A	11.9 A	20.5 A
230	3	60	8.4 A	1.1 A	9.5 A	11.6 A	20.0 A
460	3	60	4.2 A	0.6 A	4.8 A	5.9 A	10.1 A

\* Denotes 240 Volt heating elements that have been down-rated when 230 Volts is applied.

\*\* Denotes 480 Volt heating elements that have been down-rated when 460 Volts is applied.

Technical Manual (07610-003-78-18)

Electrical Requirements for 66" Units

**66" with 18 kW Wash Heater**

Volts	Phase	Freq	Pre-Wash Motor Amps	Wash Motor Amps	Drive Motor Amps	Wash Heater Amps	FLA	MCA	MOP
208	1	60	10.2 A	10.0 A	1.8 A	86.5 A	108.5 A	111.1 A	121.3 A
230	1	60	9.4 A	10.0 A	1.8 A	*71.9 A	93.1 A	95.6 A	105.6 A
240	1	60	9.4 A	10.0 A	1.8 A	75.0 A	96.2 A	98.7 A	108.7 A
208	3	60	6.8 A	8.6 A	1.1 A	50.0 A	66.5 A	68.7 A	77.3 A
230	3	60	6.4 A	8.4 A	1.1 A	*41.5 A	57.4 A	59.5 A	67.9 A
240	3	60	6.4 A	8.4 A	1.1 A	43.4 A	59.3 A	61.4 A	69.8 A
460	3	60	3.2 A	4.2 A	0.6 A	**20.8 A	28.8 A	29.9 A	34.1 A
480	3	60	3.2 A	4.2 A	0.6 A	21.7 A	29.7 A	30.8 A	35.0 A

**66" Steam**

Volts	Phase	Freq	Pre-Wash Motor Amps	Wash Motor Amps	Drive Motor Amps	FLA	MCA	MOP
208	1	60	10.2 A	10.0 A	1.8 A	22.0 A	24.6 A	34.8 A
230	1	60	9.4 A	10.0 A	1.8 A	21.2 A	23.7 A	33.7 A
208	3	60	6.8 A	8.6 A	1.1 A	16.5 A	18.7 A	27.3 A
230	3	60	6.4 A	8.4 A	1.1 A	15.9 A	18.0 A	26.4 A
460	3	60	3.2 A	4.2 A	0.6 A	8.0 A	9.1 A	13.3 A

\* Denotes 240 Volt heating elements that have been down-rated when 230 Volts is applied.

\*\* Denotes 480 Volt heating elements that have been down-rated when 460 Volts is applied.

**Electrical Requirements for Booster Tanks**

**40° F Rise - 12 KW Booster**

Volts	Phase	Freq	Rinse Heater Amps	FLA
208	1	60	57.7 A	57.7 A
230	1	60	47.9 A	47.9 A
208	3	60	33.3 A	33.3 A
230	3	60	27.7 A	27.7 A
460	3	60	13.8 A	13.8 A

**70° F Rise - 18 KW Booster**

Volts	Phase	Freq	Rinse Heater Amps	FLA
208	1	60	82.7 A	82.7 A
230	1	60	71.9 A	71.9 A
208	3	60	47.7 A	47.7 A
230	3	60	41.5 A	41.5 A
460	3	60	20.7 A	20.7 A

Note: On the 208 volt machines, the rinse heater is actually rated at 17.2 KW



## INSTALLATION INSTRUCTIONS

**VISUAL INSPECTION:** Before installing the unit, check the container and the machine for damage. A damaged container may be an indication there is possible damage to the product. If there is any type of damage to both the container and the unit, **DO NOT THROW AWAY THE CONTAINER**. The dish-machine has been previously inspected at the factory and is expected to arrive to you in new, undamaged condition. However, rough handling by carriers or others may result in damage to the unit while it is in transit. If such a situation occurs, **DO NOT RETURN THE UNIT TO THE MANUFACTURER**. Instead, contact the carrier and ask them to send a representative to the site to inspect the damage. You should request that an inspection report be completed. You must contact the carrier within 48 hours of receiving the machine in order to report possible freight damage. You are also encouraged to contact the dealer through which you purchased the unit.

**UNPACKING THE MACHINE:** The machine should be unboxed and removed from the pallet prior to installing. Also remove the wooden lift beams and their associated brackets after the unit has been positioned. Open the front door and remove all of the materials from the inside. Once unpacked, verify there are no missing parts to the best of your ability. If you discover a part is missing, contact the manufacturer immediately.

**LEVEL THE DISHMACHINE:** The dish-machine is designed to operate while level. This is important to prevent any damage to the machine during operation and to ensure the best results possible. The unit comes equipped with adjustable bullet feet, which can be turned using a pair of pliers. Verify the unit is level from front to back and side to side prior to making any electrical or plumbing connections.

**PLUMBING THE MACHINE:** All plumbing connections must be made to adhere to local, state, territorial and national codes. The installing plumber is responsible for ensuring the incoming water lines are flushed of debris prior to connecting to the machine. Note that chips and materials from cutting processes can become lodged in the solenoid valves and prevent them from opening or closing. Any valves that are found to be fouled or defective because of foreign matter left in the water line, and any subsequent water damage, are not the responsibility of the manufacturer.

Water hardness should be a maximum of 6 grains per gallon. Hard water should be treated prior to be used by the machine. Iron in the water line can cause staining. A filter designed to remove iron from the water supply is highly recommended for supplies in excess of 0.1 ppm.

Your dish-machine comes with a Water Pressure Regulating Valve. The unit utilizes a flow pressure of 15 PSI for the incoming water line. Do not confuse static pressure with flow pressure. Static pressure is the pressure when there is no flow and the valves are closed; flow pressure is when the water is running into the machine. The WPRV should be adjusted to the proper flow pressure at a minimum.

The water supply line shall be 1/2" NPT minimum and must be able to provide water at the minimum temperature indicated on the machine data plate.

It is recommended a shut-off valve be installed to allow isolating the dish-machine from the water system in the event maintenance or other activities require it. Also, it is suggested that a shock absorber be in-

**INSTALLATION INSTRUCTIONS (CONTINUED)**

stalled on the incoming water line. This prevents water hammer (hydraulic shock), induced by the solenoid valve as it operates, from causing damage to the equipment.

**CONNECTING THE DRAIN LINE:** The drain for the unit is a gravity discharge drain. All piping to the machine drain must be a minimum 1-1/2" NPT AND SHALL NOT BE REDUCED. There must also be an air gap between the machine drain line and the floor sink or drain. If a grease trap is required by code, it should have a flow capacity of 30 gallons. 44" units have one drain connection point. 66" units have two points.

**STEAM LINE CONNECTIONS:** Some machines covered in this manual are designed to use low pressure steam as a source of heat for the wash tank. Those machines come with lines by which an outside source of steam (i.e. steam booster) is connected. Connect all steam lines from the booster to the machine in accordance with the booster manufacturer's instructions. Ensure that all applicable codes and regulations are adhered to. See the machine data plate for information related to steam flow requirements.

**ELECTRICAL POWER CONNECTIONS:** All electrical connections are to be made in accordance with applicable portions of local, state, territorial and national codes.

**DISCONNECT ELECTRICAL POWER SUPPLIES AND TAG OUT IN ACCORDANCE WITH APPROPRIATE PROCEDURES AND CODES AT THE DISCONNECT SWITCH TO INDICATE YOU ARE WORKING ON THAT CIRCUIT.**

This manual provides reference information regarding electrical requirements and loads, but that information may change without notice. Always refer to the machine data plate for voltage requirements, machine voltage, total amperage load and serial number. If you cannot read your data plate because it has been damaged, you should contact the manufacturer.

The main power terminal blocks (for the dish-machine and for the rinse booster heater, if applicable) are located at the top of the machine. You will have to remove the top cover to access these connections. Route incoming power lines within conduit that will connect via fittings to the pre-punched holes in the back of the unit. Install power and ground wires to lugs as indicated by the appropriate decals in the control box. Use copper conductors only. Use of an anti-oxidation agent is permissible on the power connections. Tighten all connections.

Verify the incoming voltage matches the voltage indicated on the decal next to the incoming power pre-punched hole.

Please note the dish-machine has a separate power connection from the rinse booster heater and the circuit protection requirements are different for each. Refer to the machine data plate for information on minimum circuit protection.

**DISHMACHINE VENTILATION:** The dish-machine should be located with provisions for venting into an adequate exhaust hood or ventilation system. This is essential to permit efficient removal of the condensation exhaust. Ensure the exhaust system is acceptable in accordance with applicable codes and standards.

**INSTALLATION INSTRUCTIONS (CONTINUED)**

**Note: any damage that is caused by steam and/or moisture due to improper ventilation is NOT covered under the warranty.**

The dish-machine has the following ventilation requirements:

- Load End: 200 CFM
- Unload End: 200 CFM

The exhaust system must be sized to handle this volume for the dish-machine to operate in the manner it was designed to.

**THERMOSTATS:** The thermostats on your unit have been set at the factory for the wash tank. They should only be adjusted by an authorized service agent.

**CHEMICAL FEEDER EQUIPMENT:** Your dish-machine DOES NOT COME WITH AN INTEGRAL CHEMICAL SUPPLY/FEEDER SYSTEM. You must connect the unit to a third party chemical dispenser that meets the requirements of NSF Standard 29 for the machine to operate correctly.


You should contact your chemical supplier about connecting a dispenser to your dish-machine. Chemical dispensers must be set for the type and concentration of chemicals being used and there are several factors that have to be taken into account.

Detergent usage and water hardness are two factors that contribute greatly to how efficiently your dish machine will operate. Using the proper amount of detergent can become, in time, a source of substantial savings. A qualified water treatment specialist can explain in detail to you what is needed to gain the maximum efficiency from your detergent.


The dish-machine is able to operate in either hot water sanitizing mode or chemical sanitizing mode. Your unit should be clearly marked above the data plate as to the mode it is in. If you cannot determine this, contact the manufacturer immediately for assistance.

It is important to remember that if you decide to operate the unit in chemical sanitizing mode, you must ensure an appropriate chlorine-based sanitizer is used in the final rinse line.

INSTALLATION INSTRUCTIONS (CONTINUED)

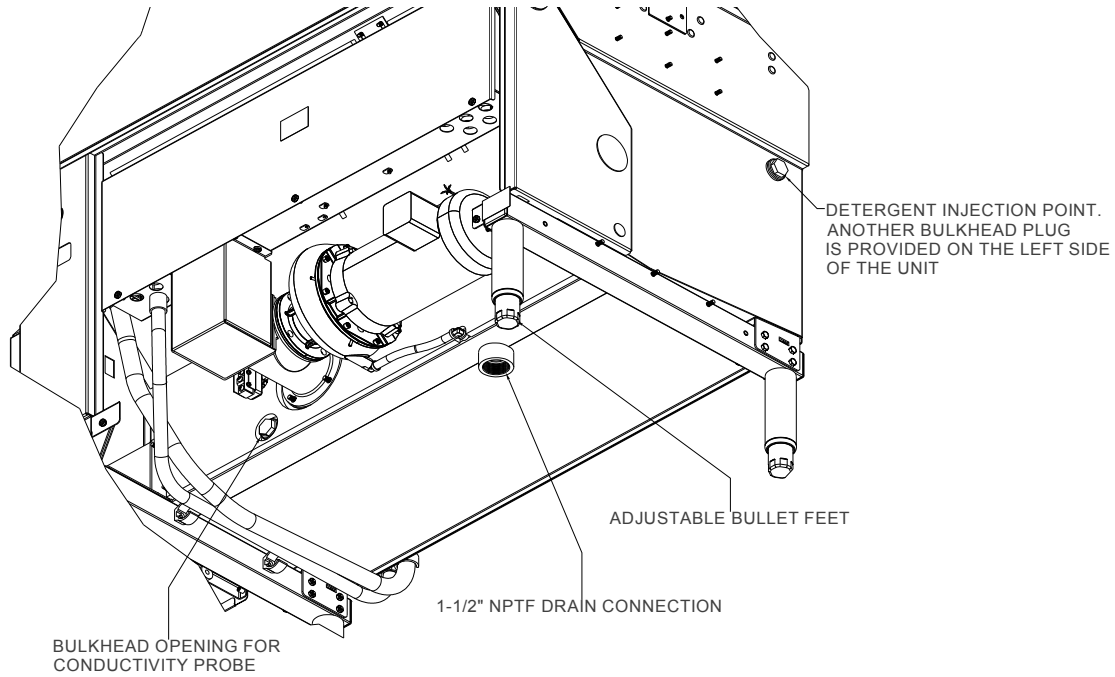


SHOWN FROM REAR OF LEFT TO RIGHT UNIT.  
RIGHT TO LEFT UNIT IS MIRRORED

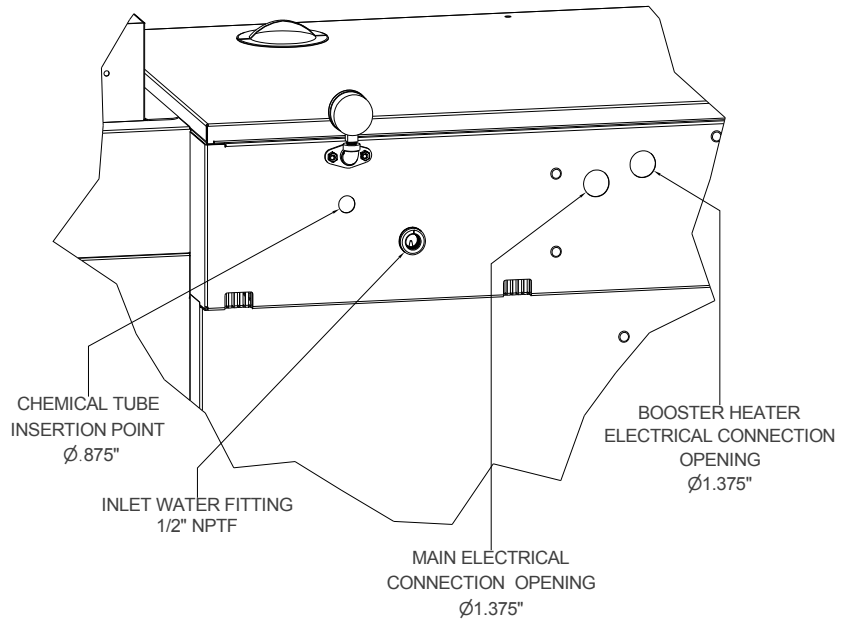


INSTALLATION INSTRUCTIONS (CONTINUED)

**ELECTRICAL CONNECTION POINTS FOR TABLE LIMIT SWITCH,  
VENTILATION FAN SIGNAL & CHEMICAL DISPENSING SYSTEMS**

SIGNAL BOARD IS LOCATED IN THE MAIN CONTROL  
BOX BEHIND THE LOWER DRESS PANEL

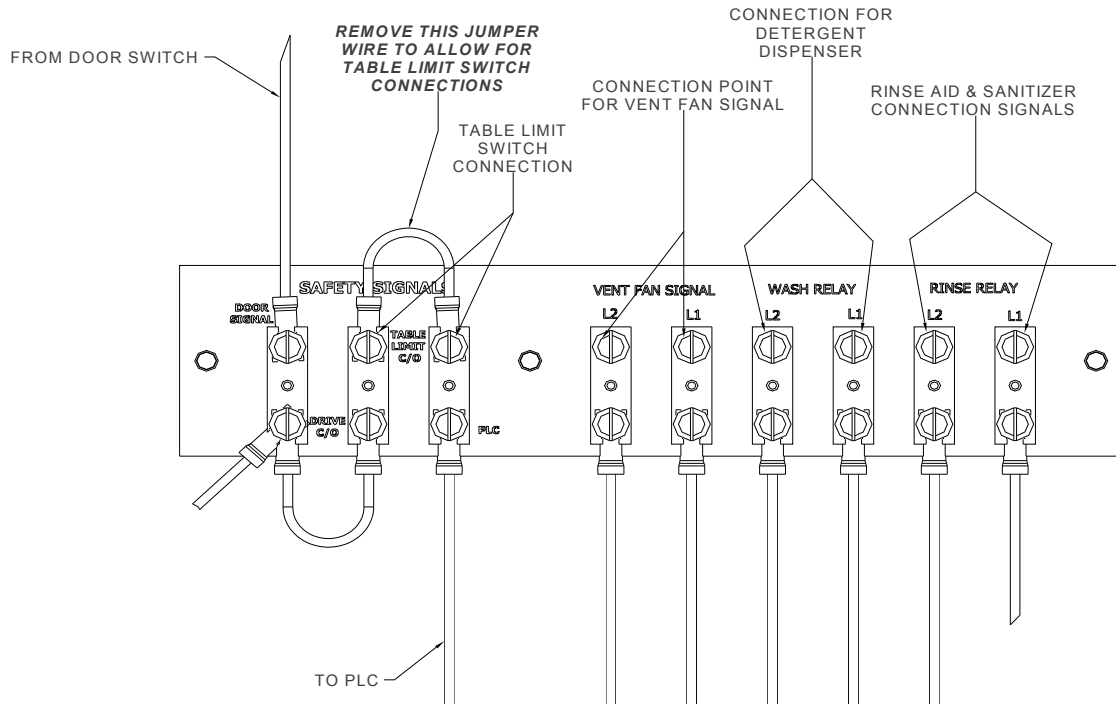

**CHEMICAL DISSIPER TUBE CONNECTION POINTS TO RINSE INJECTOR**

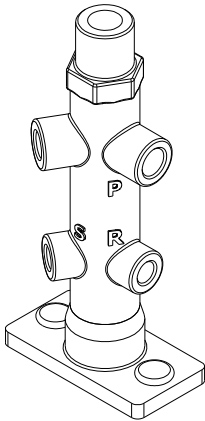

**P:** PRESSURE SWITCH (1/4" NPT)


**S:** SANITIZER (1/8" NPT)

**R:** RINSE AID (1/8" NPT)

**CURTAIN INSTALLATION INSTRUCTIONS**

You will find decals on the unit marking the locations for the placement of curtains inside the machine, starting from the load end and going all the way to the unload end. The illustrations below indicates the size of the curtain to be placed on the curtain hooks provided. If you are missing any of the curtain components, it is very important you obtain replacement parts in order to make sure your unit runs correctly. Curtains are used to control the air currents inside your unit and they greatly assist in maintaining the heat necessary to keep energy costs down.

**DETERMINING CONVEYOR DIRECTION:** Your dish-machine will be configured for either Left to Right or Right to Left operation. Direction is always from the Load End to the Unload End, as shown in the examples.

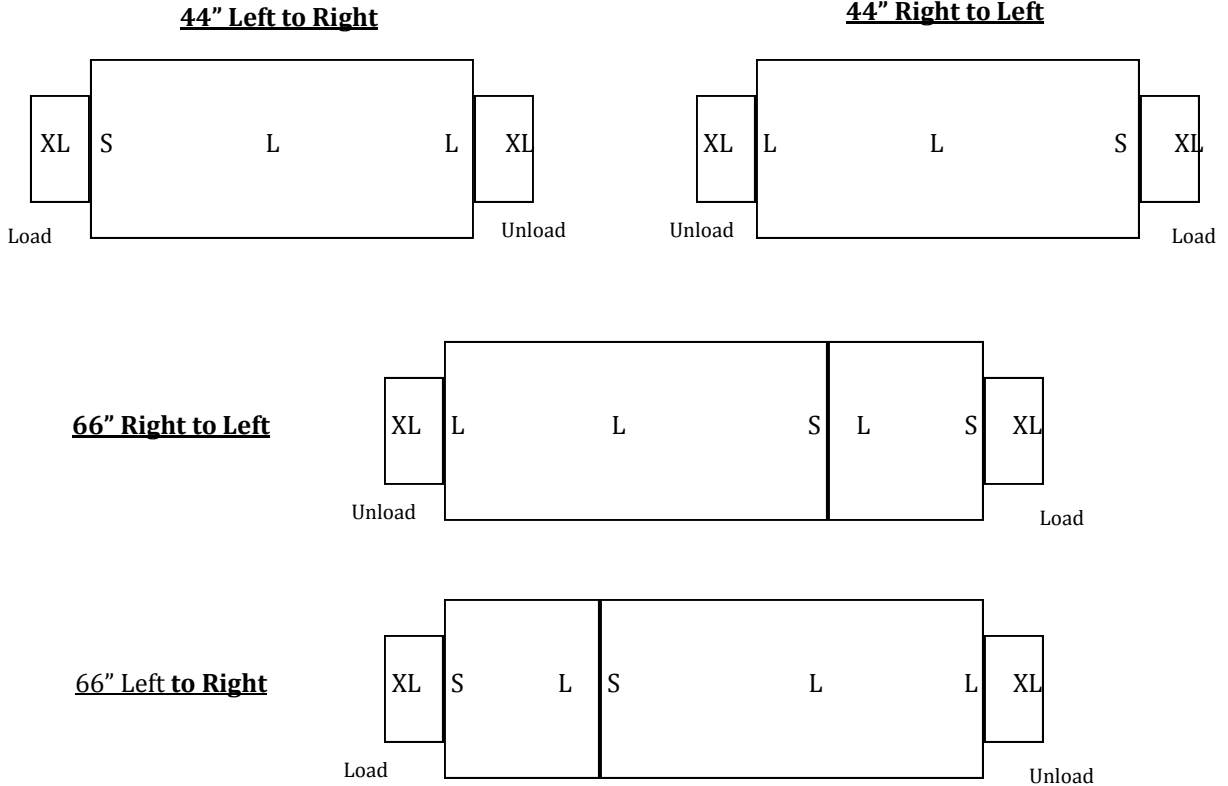

**IMPORTANCE OF PROPER CURTAIN PLACEMENT:** The curtains inside the dish-machine are required to be installed in a particular fashion. Note the approximate locations for each type of curtain in the above illustrations. **S=Short, L=Long & XL=Extra Long.** See the chart below for actual curtain lengths and part numbers. Note the XL Curtain and Curtain Rod difference for the Load End when a Side-Loader Option is present

Legend	Length	Part Number
S	12"	08415-131-73-44
L	19"	08415-002-14-41
XL	24.25"	08415-002-47-37
Curtain Rod	20.50"	05700-003-77-52

Side-Loader Option	Length	Part Number
XL (Load End Only)	24.25"	08415-003-84-88
Curtain Rod (Load End Only)		05700-003-84-57

## OPERATION INSTRUCTIONS

**PREPARATION:** Before proceeding with the start-up of the unit, verify the following:

- The drain stopper is installed;
- The strainers are installed;
- The pawl bar is installed and secure;
- The actuator switches move with relative freedom and do not bind;
- The curtains are installed correctly

**POWER UP:** To place the unit in standby, press the Start Button on the front of the machine.

- The unit will automatically determine if there is a proper water level in the wash tank. If not, the unit will begin to fill until the appropriate level is reached.
- If the wash tank temperature is not at the minimum level for the mode of operation, the wash heater will energize. Refer to the machine data plate for a better understanding of the minimum temperatures needed to operate the unit correctly. It may take several minutes for the wash tank to heat up, depending on the initial temperature of the water.
- If your machine is equipped with a rinse booster option, note the booster shall turn on when the unit turns on.
- If your machine is heated with a steam booster, then you will need to turn on the steam booster in accordance with the manufacturer's instructions.
- It is important that you do not attempt to start the unit until:
  - The unit stops filling;
  - The unit has reached the appropriate wash tank temperature.

**FIRST RACK:** The first rack of ware that you place into the unit usually has the effect of very quickly reducing the temperature of the wash tank. This is because you are introducing cold materials into the dish-machine environment and the unit has to circulate water to get the heating cycle going. You may have to run the first rack through the unit again. Any time the unit has not been operated for an extended period of time this is possible, but unlikely. This is usually dependent on the type of ware you are using, its temperature and the ambient temperature of the kitchen area. Always observe the temperatures of the wash and rinse when first starting the unit to ensure proper operation.

**WARE PREPARATION:** Proper preparation of ware is essential for the smooth, efficient operation of your dish-machine. If done properly, you can expect to have fewer re-washes and use substantially less detergent. Any ware placed inside the machine should have all solid food waste and scraps removed. It is recommended that ware also be sprayed down prior to entry into the dish-machine.

Place cups and glasses upside down in racks so they do not hold water during the cycle. Presoak flatware in warm water to assist in getting stuck-on material off. Load plates and saucers in the same direction (with the surface food is placed on facing towards the unload end of the machine).

**WASHING A RACK OF WARE:** The dish-machine is designed to wash ware placed in a rack. Under no circumstance should any materials be placed inside the unit that have not been properly secured into a dish rack.

To start the cycle, gently push the rack into the unit on the load end. Once the wash actuator has moved sufficiently, the unit will automatically begin to convey the dish rack through the unit. The entire cycle is automatic.

**OPERATION INSTRUCTIONS (CONTINUED)**

**OPERATIONAL INSPECTIONS:** It is recommended that operators periodically review the following items while the machine is operating. All of these items are important to operating the machine in an efficient manner.

- Review wash and rinse temperatures and compare to the minimums required by the data plate. Low temperatures can be an indication of a faulty thermostat, a thermostat that needs adjustment or some other condition that needs to be addressed.
- Verify the pan strainers are not becoming clogged. Keeping these free of soil and debris allows for much better flow of water through the machine and prevents any sort of redeposit issues.
- Water pressure. The dish-machine is designed to run at a minimum of **15 PSIG**; any lower than that and you won't have enough rinse water to properly remove detergent from your ware.
- Wash and rinse arm nozzles should be free of debris. Open nozzles are essential to the operation of the dish-machine.

**SHUTDOWN:** To shut the unit down, press the Start Switch on the front of the machine. To drain the machine, open the front door and pull up on the drain release inside the unit. If you have a steam booster for heating the dish-machine, shut it down in accordance with its manufacturer's instructions.

**CLEANING:** It is recommended the unit be cleaned at least once every 24 hours or at the end of the day. Cleaning assists in maintained the efficient operation of the unit by removing soil and debris that might otherwise become trapped in nozzles or get deposited onto ware.

- Curtains: should be removed and scrubbed with mild detergent/soap and a brush and allowed to air dry.
- Strainers: should be removed and have debris scooped out. Never hit strainers to remove debris; this can cause them to warp and not seat correctly. Rinse under water should remove the rest of any debris trapped in the part.
- Wash Arms: the wash arms can be removed using a 7/16" driver; however, the dish-machine is designed so the wash arms are self-cleaning. Operators have the ability to flush the arms by removing the plastic end caps and running a rack through the unit. This should only be done as a cleaning function with an empty rack and a tub that is filled with water.
- Internal Chamber: Mild detergent/soap and a dishrag should be all that is needed to clean the inside of the machine. Strainers and the pawl bar should be removed to provide as much room as possible.
- External Areas: The outside of the unit should be cleaned with a standard countertop or general cleaner. Never attempt to clean inside any compartments, boxes or chambers that are secured with a cover. These normally contain live electrical components.
- **DO NOT CLEAN THE UNIT WITH ANY TYPE OF METALLIC SCRUBBING SPONGE!**



### DELIME INSTRUCTIONS


To proceed with the delime operation, fill the dish-machine and the correct amount of delime solution as recommended by the manufacturer of the chemicals. The tank capacities of the machine can be found on the specifications page of this manual.

After the chemicals are added, perform the following steps:

1. Flip the NORMAL/DELIME Switch to DELIME.
2. Disconnect or turn off chemical feeder pumps.
3. Close all doors.
4. Press the Start Switch and run the machine for the length of time required by the chemical solution manufacturer.
5. Press the Start Switch to shut the unit off.
6. Open the door and step away for 5 minutes.
7. Inspect the inside of the unit to determine if your expectations have been met. If not, you may need to run the delime solution through the unit for more time.
8. Once clean, drain the machine completely.
9. Close the door.
10. Refill the unit.
11. Press the Start Switch and run the unit in Manual for 10 minutes.
12. Press the Start Switch to turn off the unit.
13. Open the front door.
14. Drain the unit.
15. Flip the NORMAL/DELIME Switch to NORMAL.
16. Your machine is ready to use.

**This equipment is not recommended for use with deionized water or other aggressive fluids. Use of deionized water or other aggressive fluids will result in corrosion and failure of materials and components. Use of deionized water or other aggressive fluids will void the manufacturer's warranty.**

**TROUBLESHOOTING**

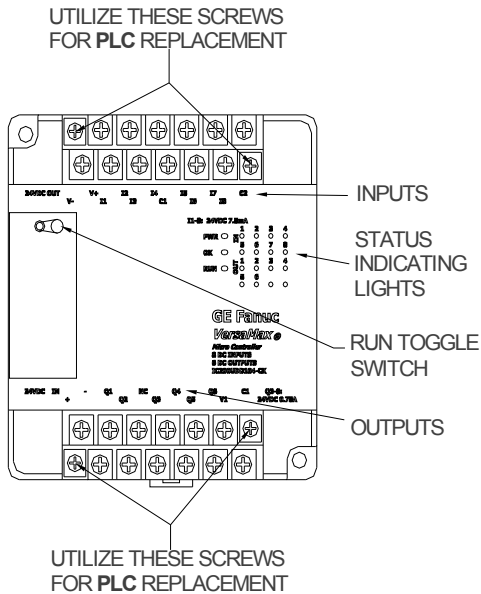


Green LED lights are illuminated on the PLC when in operation. The POWER, OK & RUN lights indicate that 24VDC power is available to the PLC and that it is functioning properly. If the RUN light is out, first check that the RUN toggle switch located behind the snap cover panel of the PLC is in the RUN position. Less likely is that the operational program of the PLC may have been corrupted or lost. Temporary power surges may have occurred. Secure all power to the machine, wait for 30 seconds and restore power. Verify that the Green light is illuminated to the 24vdc power supply immediately to the left of the PLC. If the RUN light is still off, replace the PLC.

Refer to the illustration below for the designation of each LED. PLC1 is used for the 44" Electric & Steam units. An expansion PLC (PLC2) is used in conjunction with PLC1 for 66" Electric & Steam units.

Inputs correspond to the connections behind the top flip up panel of the PLC and are marked I1 thru I8. Outputs correspond to the connections behind the bottom flip up panel of the PLC and are marked Q1 thru Q8.

Note: All outputs are fused. Q1 & Q2 outputs for both PLC's utilize 1.0 Amp fuses and Q3-Q8 outputs utilize 0.75 Amp fuses. When illuminated, the LED lights on the front of each PLC will show the input from and the outputs to various components as illustrated below. LED's that may illuminate on PLC2 that are marked "NOT USED" have no bearing on the operation of the current ware-washers.

**PLC1  
LIGHT CONFIGURATION**

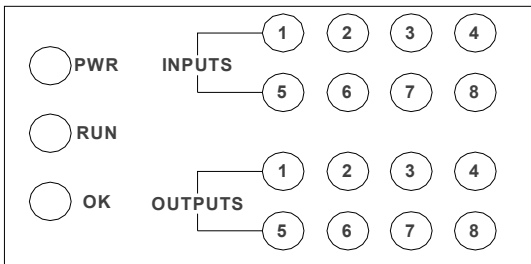


**INPUTS:**

1. ON/OFF SWITCH
2. DOOR SWITCH SAFETY INTERLOCKS
3. RACK INLET SWITCH
4. FINAL RINSE SWITCH
5. LOWER WASH FLOAT SWITCH
6. UPPER WASH FLOAT SWITCH
7. MANUAL / DELIME SWITCH
8. N/A

**OUTPUTS:**

1. RINSE SOLENOID / RINSE SIGNAL RELAY
2. WASH TANK FILL SOLENOID
3. DRIVE MOTOR CONTACTOR
4. WASH MOTOR CONTACTOR
5. WASH HEATER CONTACTOR or STEAM HEAT RELAY
6. VENTILATION FAN RELAY
7. N/A
8. SIDE-LOADER SWITCH (ON WITH NO RACK PRESENT)

**PLC2  
LIGHT CONFIGURATION**

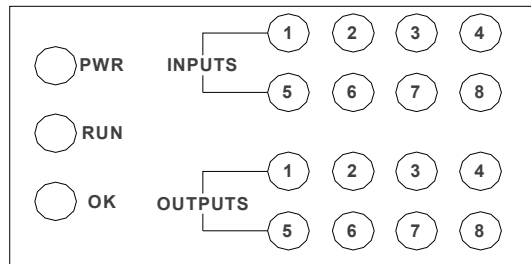

**INPUTS:**


1. LOWER PRE-WASH FLOAT SWITCH (66 UNITS ONLY)
2. UPPER PRE-WASH FLOAT SWITCH (66 UNITS ONLY)
3. N/A
4. N/A
5. N/A
6. N/A
7. N/A
8. N/A

**OUTPUTS:**


1. PRE-WASH TANK FILL SOLENOID (66 UNITS ONLY)
2. PRE-WASH MOTOR CONTACTOR (66 UNITS ONLY)
3. N/A
4. N/A
5. N/A
6. N/A
7. N/A
8. N/A

PARTS SECTION: CONTROL BOX COMPONENTS

All operational relays utilize green LED indicating lights to verify proper operation. These relays are mounted immediately to the right of the motor contactors. Please refer to the illustration to the right.

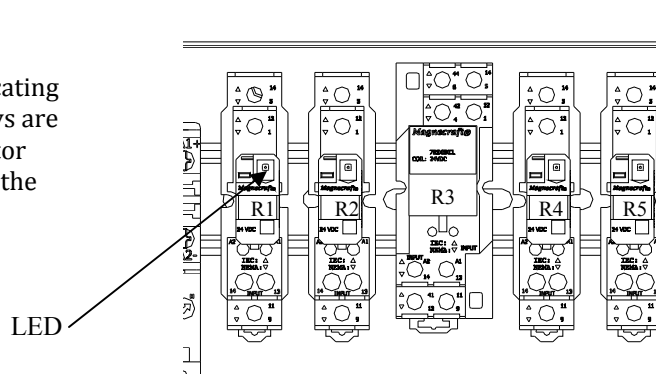

THE ILLUSTRATION BELOW DEPICTS THE COMPONENTS OF A 66" ELECTRICALLY HEATED UNIT WITH THE BOOSTER HEATER OPTION. COMPONENT QUANTITIES AND PART NUMBERS MAY VARY FOR DIFFERENT UNITS. PLEASE REFER TO THE NOTES WITHIN THE PARTS LIST ON THE NEXT PAGE TO VERIFY THAT THE REQUIRED PART NUMBER IS CORRECT.

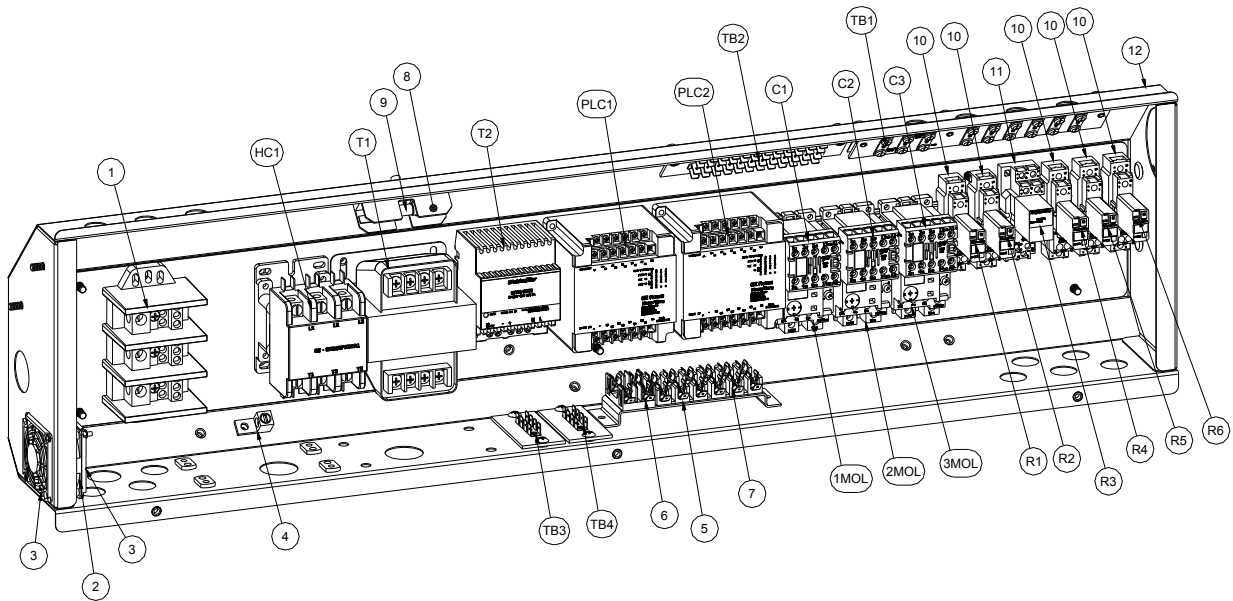

**PARTS SECTION: CONTROL BOX COMPONENTS (CONTINUED)**

<b>Item</b>	<b>QTY</b>	<b>Description</b>	<b>Part Number</b>
PLC1	1	PLC, 24VDC (IC200UDD104) <i>(PROGRAMED FOR 44" UNITS)</i> <i>(PROGRAMED FOR 66" UNITS)</i>	05945-003-92-50 05945-003-92-51
PLC2	1	PLC, 24VDC (IC200UEX014) <i>(66" UNITS ONLY)</i>	05945-003-82-47
T1	1	TRANSFORMER 208 TO 120VAC <i>(208 VOLT UNITS)</i> TRANSFORMER 230/460 TO 120VAC	05950-011-75-59 05950-011-68-35
T2	1	POWER SUPPLY 24VDC	05950-003-76-32
HC1	1	CONTACTOR, 24VDC 3 POLE <i>(USED ON 3-PHASE UNITS)</i> CONTACTOR, 24VDC 4 POLE <i>(USED ON 1-PHASE UNITS)</i>	05945-003-75-02 05945-003-73-22
C1	1	CONTACTOR, DRIVE MOTOR	05945-003-75-22
C2	1	CONTACTOR, WASH PUMP	05945-003-75-22
C3	1	CONTACTOR, PRE-WASH MOTOR <i>(66" UNITS ONLY)</i>	05945-003-75-22
R1	1	RELAY, VENT FAN	05945-003-76-34
R2	1	RELAY, RINSE SIGNAL	05945-003-76-34
R3	1	RELAY, TEMPERATURE BOARD	05945-003-79-57
R4	1	RELAY, BOOSTER HEATER <i>(OPTIONAL)</i>	05945-003-76-34
R5	1	RELAY, WASH TANK STEAM <i>(STEAM UNITS ONLY)</i>	05945-003-76-34
R6	1	RELAY, PHOTO CELL TABLE LIMIT <i>(OPTIONAL)</i>	05945-003-76-34
1MOL	1	OVERLOAD, DRIVE MOTOR <i>(USED ON 3-PHASE UNITS)</i>	SEE OVERLOAD PAGE
2MOL	1	OVERLOAD, WASH MOTOR <i>(USED ON 3-PHASE UNITS)</i>	SEE OVERLOAD PAGE
3MOL	1	OVERLOAD, PRE-WASH MOTOR <i>(USED ON 3-PHASE 66" UNITS)</i>	SEE OVERLOAD PAGE
TB1	1	TERMINAL BOARD, SIGNAL	05940-003-77-43
TB2	1	TERMINAL BOARD, DC	05940-003-77-65
TB3	1	TERMINAL BOARD, L1	05940-021-94-85
TB4	1	TERMINAL BOARD, L2	05940-021-94-85
1	1	TERMINAL BLOCK 3 POLE	05940-011-48-27
2	1	FAN, 24 VDC	05999-002-47-12
3	2	FAN FINGER GUARD	05999-003-12-92
4	1	GROUND LUG	05940-200-76-00
5	1	BRACKET, FUSE STRIP	05700-002-42-03
6	1	FUSE HOLDER	05920-401-03-14
7	1	FUSE HOLDER, 6 SLOT	05920-002-42-13
8	1	HOLDER, BUSSMAN FUSE	05920-011-72-89
9	1	FUSE, 1.0 AMP <i>(208 &amp; 230 VOLT UNITS)</i> FUSE, 0.5 AMP <i>(460 VOLT UNITS)</i>	05920-002-67-23 05920-011-72-88
10	5	RELAY SOCKET, 20A 300V <i>(USED FOR R1,R2, R4,R5 &amp; R6)</i>	05945-003-76-33
11	1	RELAY SOCKET, 16A 300V <i>(USED FOR R3)</i>	05945-003-79-58
12	1	CONTROL BOX WELDMENT <i>(44" UNITS)</i> CONTROL BOX WELDMENT <i>(66" UNITS)</i>	05700-003-82-04

**PARTS SECTION: OVERLOADS**

**WASH MOTORS:**

Overloads are specified for 3 phase units only.

For GE brand, MT03\* series overloads, the process for setting is as follows:

- Determine the Full Load Amps for the wash motor
- Set the overload at the closest setting without going over for the FLA of the motor.
- The overload already compensates for the FLA and will have a set point that is 125% of the FLA.

Example: Wash Motor is rated at 10.0 FLA on the data plate. The replacement MT03\* overload would be set at 10.0. It would actually trip at 12.5 Amps.

Wash Motor Voltage	Part Number	GE Part Number
208	05945-003-76-29	MT03N
230	05945-003-76-29	MT03N
460	05945-003-76-27	MT03L

**Blue Selector switch should be set to H for manual reset.**

**DRIVE MOTORS:**

Overloads are specified for 3 phase units only.

For GE brand, MT03\* series overloads, the process for setting is as follows:

- Determine the Full Load Amps for the drive motor.
- Set the overload at the closest setting without going over for the FLA of the motor.
- The overload already compensates for the FLA and will have a set point that is 125% of the FLA.

Example: Drive Motor is rated at 1.0 FLA on the data plate. The replacement MT03\* overload would be set at 1.0. It would actually trip at 1.25 Amps.

Drive Motor Voltage	Part Number	GE Part Number
208	05945-003-76-23	MT03F
230	05945-003-76-23	MT03F
460	05945-003-76-21	MT03D

**Blue Selector switch should be set to H for manual reset.**

**PRE-WASH MOTORS:**

Overloads are specified for 3 phase units only.

For GE brand, MT03\* series overloads, the process for setting is as follows:

- Determine the Full Load Amps for the drive motor.
- Set the overload at the closest setting without going over for the FLA of the motor.
- The overload already compensates for the FLA and will have a set point that is 125% of the FLA.

Example: Drive Motor is rated at 6.0 FLA on the data plate. The replacement MT03\* overload would be set at 6.0. It would actually trip at 7.5 Amps.


Pre-Wash Motor Voltage	Part Number	GE Part Number
208	05945-003-76-28	MT03M
230	05945-003-76-28	MT03M
460	05945-003-76-26	MT03K

**Blue Selector switch should be set to H for manual reset.**

**NOTE: Connections should be tightened to 7 in-lbs.**



**PARTS SECTION: MISCELLANEOUS ELECTRICAL COMPONENTS**

Description	Part Number
FITTING, 1", 90 DEGREE HUB (2 per 44" units, 1 per 66" units)	05975-003-77-44
FITTING, 1" STRAIGHT HUB (1 per 66" units)	05975-003-88-01
FITTING, 3/4" STR QT 8495 SNAP	05975-003-77-46
FITTING, 3/4" 90 DEGREE QT 8510 SNAP	05975-003-77-45
FITTING, 1/2" NPT 90 DEGREE 8507	05975-003-35-32
FITTING, 1/2" NPT STR 8490	05975-003-33-27
FITTING, .231 X .394, LIQUIDTITE	05975-011-49-03
CLAMP, 1" FLEX2 CONDUIT 1031	05975-003-77-88
CLAMP, 3/4" FLEX2 CONDUIT 1029	05975-003-77-89
PLUG, 2.5" HOLE, LOUVERED 2596	05975-003-77-39
PLUG, HEYCO 2700 G-875	05975-011-47-81
PLUG, HEYCO, 2723	05975-002-29-94
PLUG, HEYCO, 2683	05340-011-46-79
PLUG, HEYCO, 2790	05975-011-59-49
BUSHING, HEYCO, 2236	05975-003-10-46
GROMMET, 1.250 OD X 1.000 ID	05975-111-58-01
GROMMET, 7/8 SPLIT, HEYCO, 2119	05975-200-40-00

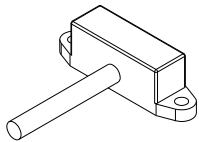



PROXIMITY SWITCH 24VDC  
P/N: 05930-003-76-51

TEMPERATURE RTD  
P/N: 06680-002-16-80

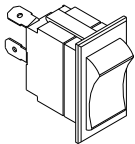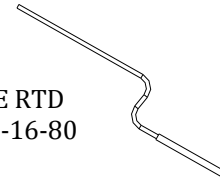


DELIME SWITCH  
P/N: 05930-301-46-00

THERMOSTAT  
P/N: 05930-510-02-79

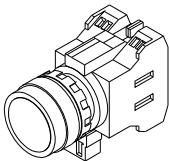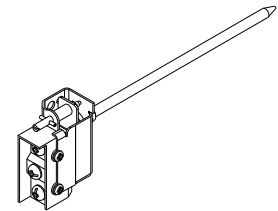


START SWITCH  
P/N: 05930-003-76-52

FLOAT SWITCH  
P/N: 06680-003-62-65

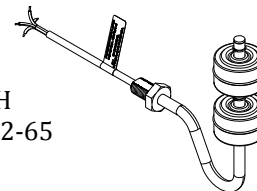


**PARTS SECTION: WASH HEATER & HEATER SHROUD ASSEMBLIES**

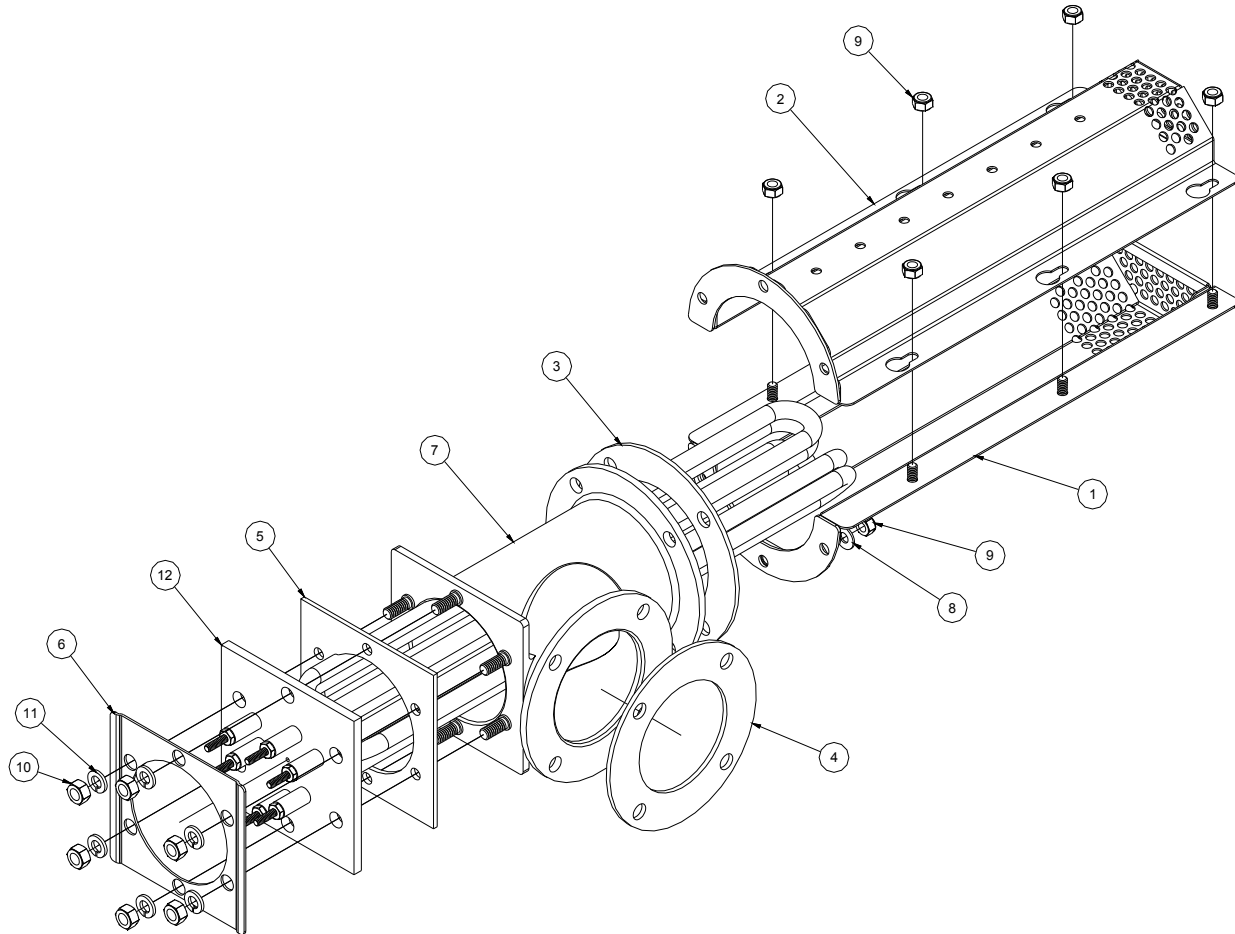

Item	QTY	Description	Part Number
1	1	HEATER SHROUD WELDMENT LOWER	05700-003-74-21
2	1	HEATER SHROUD WELDMENT UPPER	05700-003-74-24
3	1	GASKET, SUCTION CASTING	05330-003-75-89
4	1	GASKET, PUMP SUCTUON	05330-003-75-87
5	1	GASKET, HEATER	05330-200-02-70
6	1	HEATER BOX RAILS	05700-003-74-72
7	1	WASH PUMP SUCTION WELDMENT	05700-003-77-63
8	2	WASHER, S/S (NOT SHOWN)	05311-174-01-00
9	9	LOCKNUT, 1/4"-20 HEX W/NYLON INSERT	05310-374-01-00
10	6	NUT, HEX 5/16-18 S/S	05310-275-01-00
11	6	LOCKWASHER, 5/16" SPLIT S/S	05310-275-01-00
12	1	WASH HEATING ELEMENT (15kW / 18kW )	SEE HEATER CHART

PARTS SECTION: PUMP SUCTION ASSEMBLY

USED ON PRE-WASH TANKS  
AND ALL STEAM HEATED TANKS

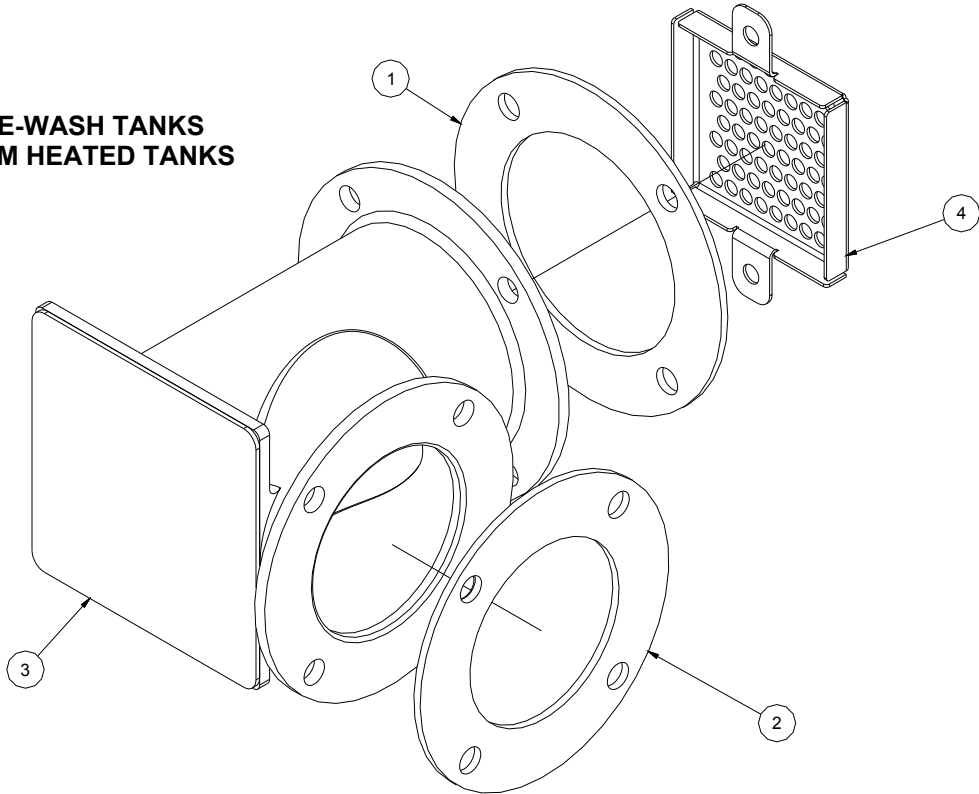

Item	QTY	Description	Part Number
1	1	GASKET, SUCTION CASTING	05330-003-75-89
2	1	GASKET, PUMP SUCTUON	05330-003-75-87
3	1	PRE-WASH PUMP SUCTION WELDMENT	05700-003-82-27
4	1	STRAINER, PRE-WASH PUMP	05700-003-81-28




**PARTS SECTION: WASH HEATERS**

<b>VOLTAGE</b>	<b>PHASE</b>	<b>KW</b>	<b>PART NUMBER</b>	<b>CONTACTOR</b>
208	1	15	04540-121-68-45	05945-003-73-22
230	1	15	04540-121-68-46	05945-003-73-22
208	3	15	04540-121-68-45	05945-003-75-02
230	3	15	04540-121-68-46	05945-003-75-02
460	3	15	04540-121-68-47	05945-003-75-02
208	1	18	04540-121-79-30	05945-003-73-22
230	1	18	04540-121-79-31	05945-003-73-22
208	3	18	04540-121-79-30	05945-003-75-02
230	3	18	04540-121-79-31	05945-003-75-02
460	3	18	04540-121-79-32	05945-003-75-02

SERVICE NOTES: when replacing wash heaters, it is highly recommended you also change out the gasket as well. Once installed, gaskets become compressed and are subject to extreme temperature changes. Replacing the gasket with a new one when replacing the heater may prevent future leaks.


The nuts used to secure the heater to the casting should be torque to 16 in-lbs. After tightening, the unit should be allowed to heat up and operate normally for approximately 30 minutes. Secure power to the machine and check the nuts once more to verify they are torque to 16 in-lbs.

PARTS SECTION: DOOR ASSEMBLY (44)

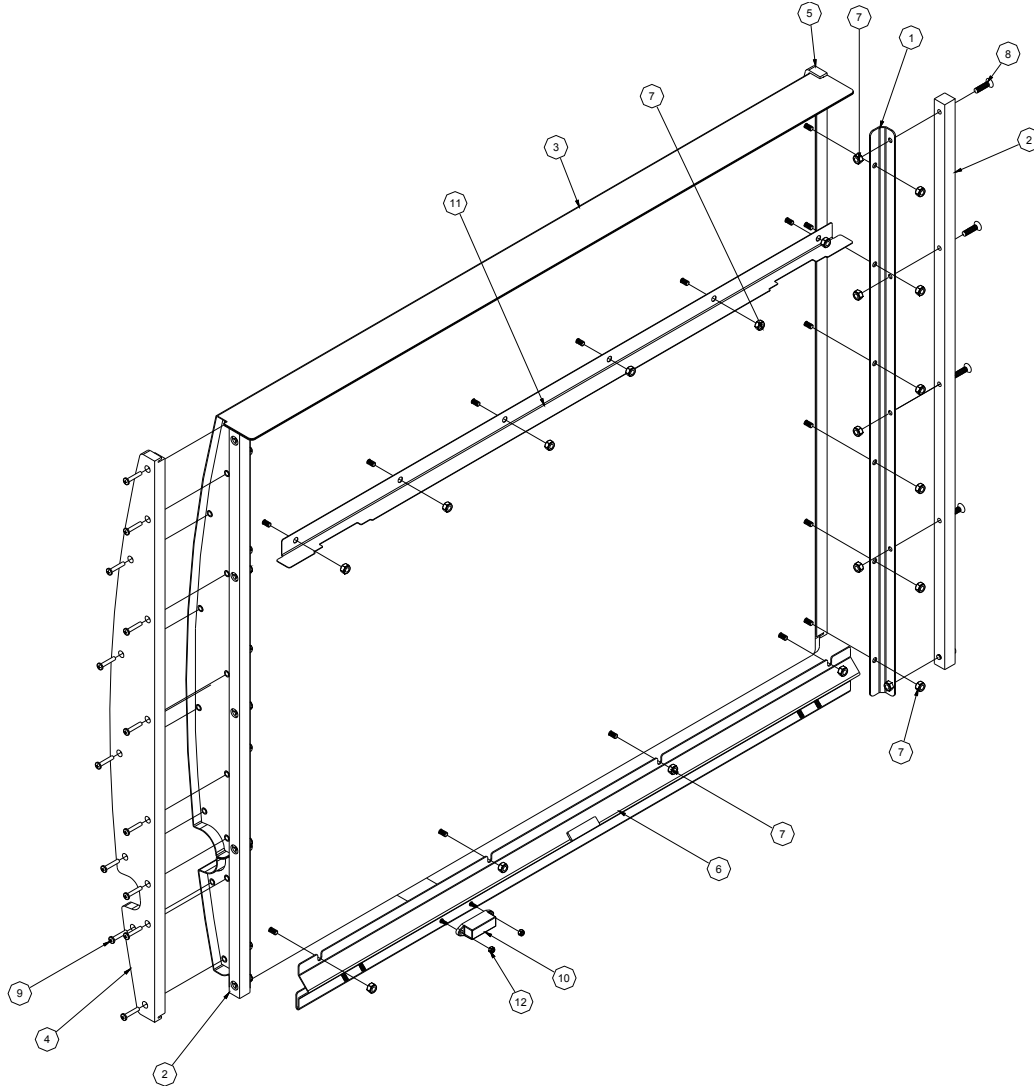


Item	QTY	Description	Part Number
1	2	DOOR GUIDE BRACKET	05700-003-72-32
2	2	DOOR GUIDE	09330-003-73-94
3	1	DOOR WELDMENT	05700-003-76-87
4	1	END PIECE, DOOR RIGHT SIDE	09330-003-73-83
5	1	END PIECE, DOOR LEFT SIDE	09330-003-73-84
6	1	DOOR STOP AND SUPPORT WELDMENT	05700-003-72-51
7	32	LOCKNUT, 1/4"-20 HEX W/NYLON INSERT	05310-374-01-00
8	10	SCREW, 1/4"-20 X 1", 82 COUNTERSINK, PHILLIPS	05305-011-81-58
9	26	SCREW, 10-32 X 1" PHILLIPS PAN HEAD	05305-002-19-42
10	1	MAGNET	05930-002-88-42
11	1	SPLASH SHIELD	05700-003-81-86
12	2	LOCKNUT, 6-31 HEX W/NYLON INSERT	05310-373-03-00

**PARTS SECTION: PRE-WASH DOOR ASSEMBLY (22")**

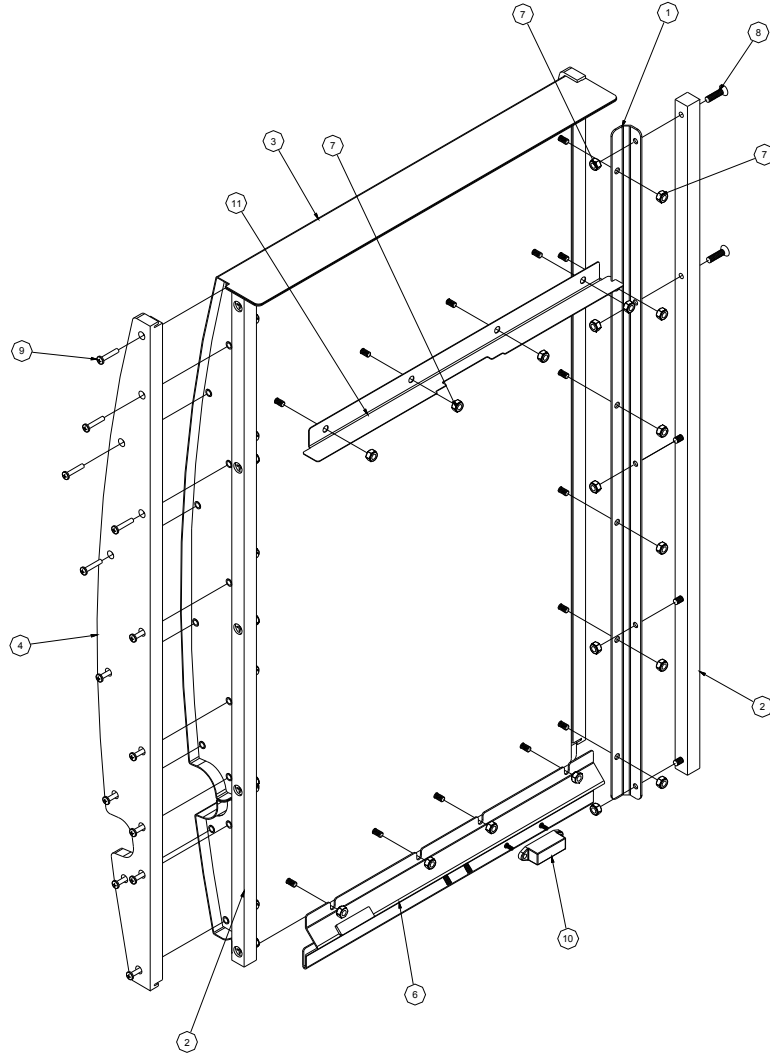


Item	QTY	Description	Part Number
1	2	DOOR GUIDE BRACKET	05700-003-72-32
2	2	DOOR GUIDE	09330-003-73-94
3	1	DOOR WELDMENT	05700-003-80-32
4	1	END PIECE, DOOR RIGHT SIDE	09330-003-73-83
5	1	END PIECE, DOOR LEFT SIDE	09330-003-73-84
6	1	DOOR STOP AND SUPPORT WELDMENT (L-R) DOOR STOP AND SUPPORT WELDMENT (R-L)	05700-003-80-27 05700-003-82-50
7	34	LOCKNUT, 1/4"-20 HEX W/NYLON INSERT	05310-374-01-00
8	10	SCREW, 1/4"-20 X 1", 82 COUNTERSINK, PHILLIPS	05305-011-81-58
9	26	SCREW, 10-32 X 1" PHILLIPS PAN HEAD	05305-002-19-42
10	1	MAGNET	05930-002-88-42
11	1	SPLASH SHIELD	05700-003-82-46
12	2	LOCKNUT, 6-32 HEX W/NYLON INSERT (NOT SHOWN)	05310-373-03-00

**PARTS SECTION: DOOR SPRING ASSEMBLY**

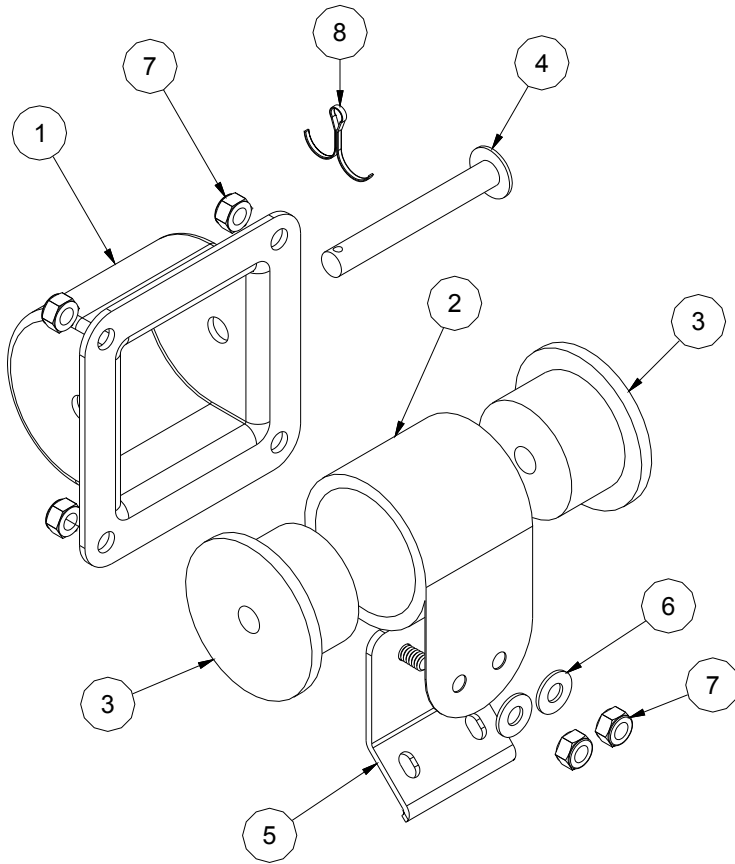


**OVERALL ASSEMBLY:  
05700-003-77-49**

44" Wash doors use 2 assemblies  
22" Pre-Wash doors use 1 assembly

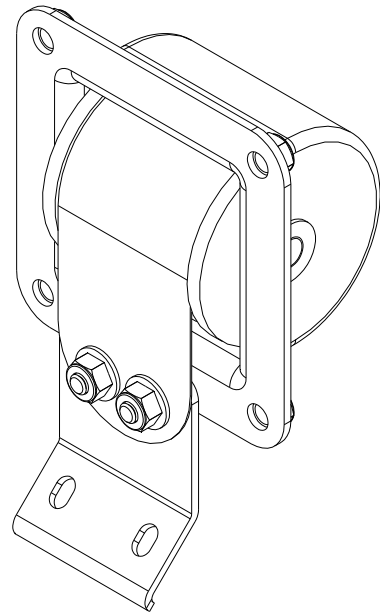

Item	QTY	Description	Part Number
1	1	CASTING, DOOR SPRING MOUNT	09515-003-73-78
2	1	SPRING, DOOR	05315-002-67-29
3	2	SPINDLE, DOOR SPRING	05700-002-67-28
4	1	PIN, DOOR SPRING	05700-002-83-55
5	1	DOOR SPRING BRACKET WELDMENT	05700-003-74-10
6	2	WASHER, 1/4" S/S	05311-174-01-00
7	6	LOCKNUT, 1/4"-20 HEX W/NYLON INSERT	05310-374-01-00
8	1	PIN, COTTER, 3/32" X 3/4"	05315-207-01-00

**PARTS SECTION: PLUMBING ASSEMBLY, MAIN WATER INLET**

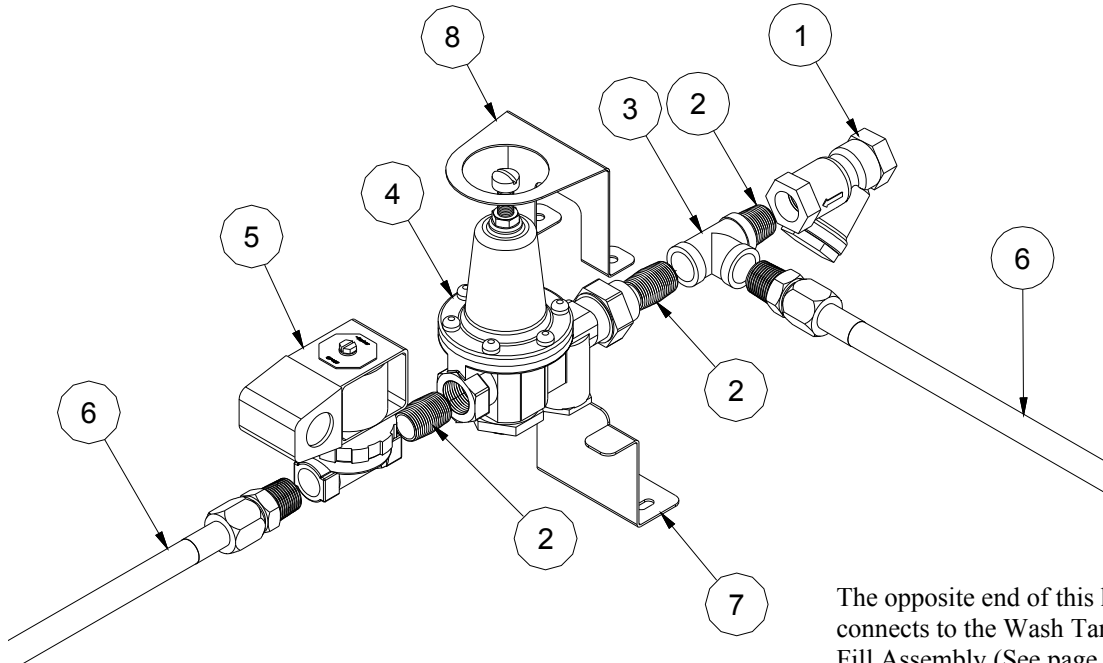


The opposite end of this hose connects to the Final Rinse Assembly (See page 44).  
 For units with the Booster Heater Option, this hose will connect to the booster heater inlet. (See page 64)

The opposite end of this hose connects to the Wash Tank Fill Assembly (See page 38)

Item	QTY	Description	Part Number
1	1	STRAINER, INLET, 1/2"	04730-217-01-10
2	3	NIPPLE, 1/2", CLOSE, BRASS	04730-207-15-00
3	1	TEE, BRASS, 1/2" X 1/2" X 1/2"	04730-211-27-00
4	1	REGULATOR, 1/2"	04820-100-04-07
5	1	VALVE, 1/2" NPT BRASS, 24VDC COIL	04810-003-75-16
6	2	HOSE, 1/2" X 42" S/S BRAIDED W/PTFE, MALE SWIVEL	04720-003-76-09
7	1	BRACKET, INLET PLUMBING SUPPORT	05700-003-74-42
8	1	BRACKET, UPPER INLET PLUMBING SUPPORT	05700-003-74-86


PARTS SECTION: WASH TANK FILL ASSEMBLY

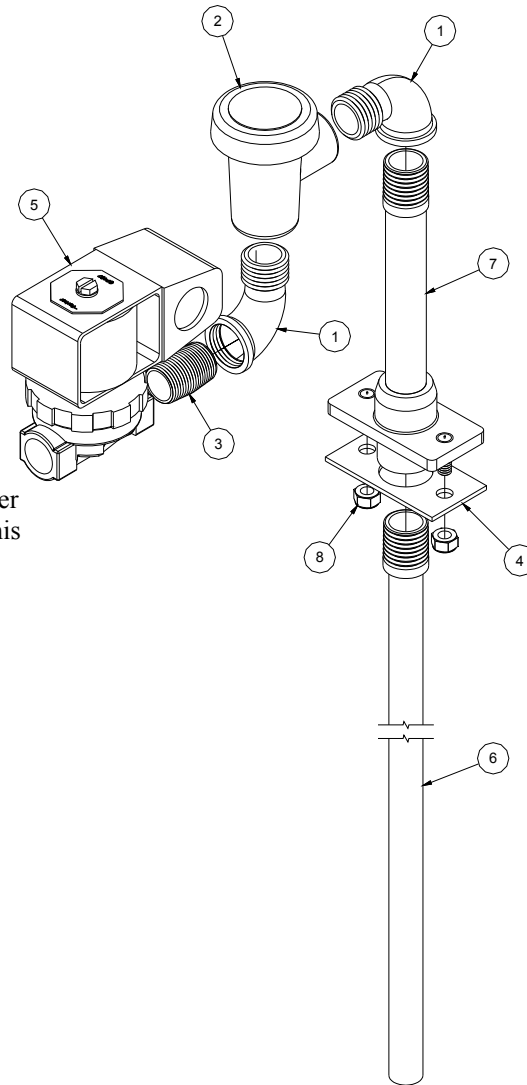

The hose from the Main Water Inlet Plumbing connects to this solenoid valve. (See page37)

Item	QTY	Description	Part Number
1	2	ELBOW, 90 DEGREE, 1/2" STREE, BRASS	04730-206-08-00
2	1	VACUUM BREAKER, 1/2" VACUUM BREAKER REPAIR KIT	04820-003-06-13 06401-003-06-23
3	1	NIPPLE, 1/2" CLOSE, BRASS	04730-207-15-00
4	1	GASKET, RINSE MANIFOLD	05330-003-75-91
5	1	VALVE, 1/2" NPT BRASS, 24VDC COIL	04810-003-75-16
6	1	TUBE WELDMENT, TANK FILL	05700-003-76-81
7	1	TANK FILL INJECTOR WELDMENT	05700-003-76-84
8	2	LOCKNUT, 1/4"-20 HEX WITH NYLON INSERT (NOT SHOWN)	05310-374-01-00


PARTS SECTION: PRE-WASH TANK FILL ASSEMBLIES

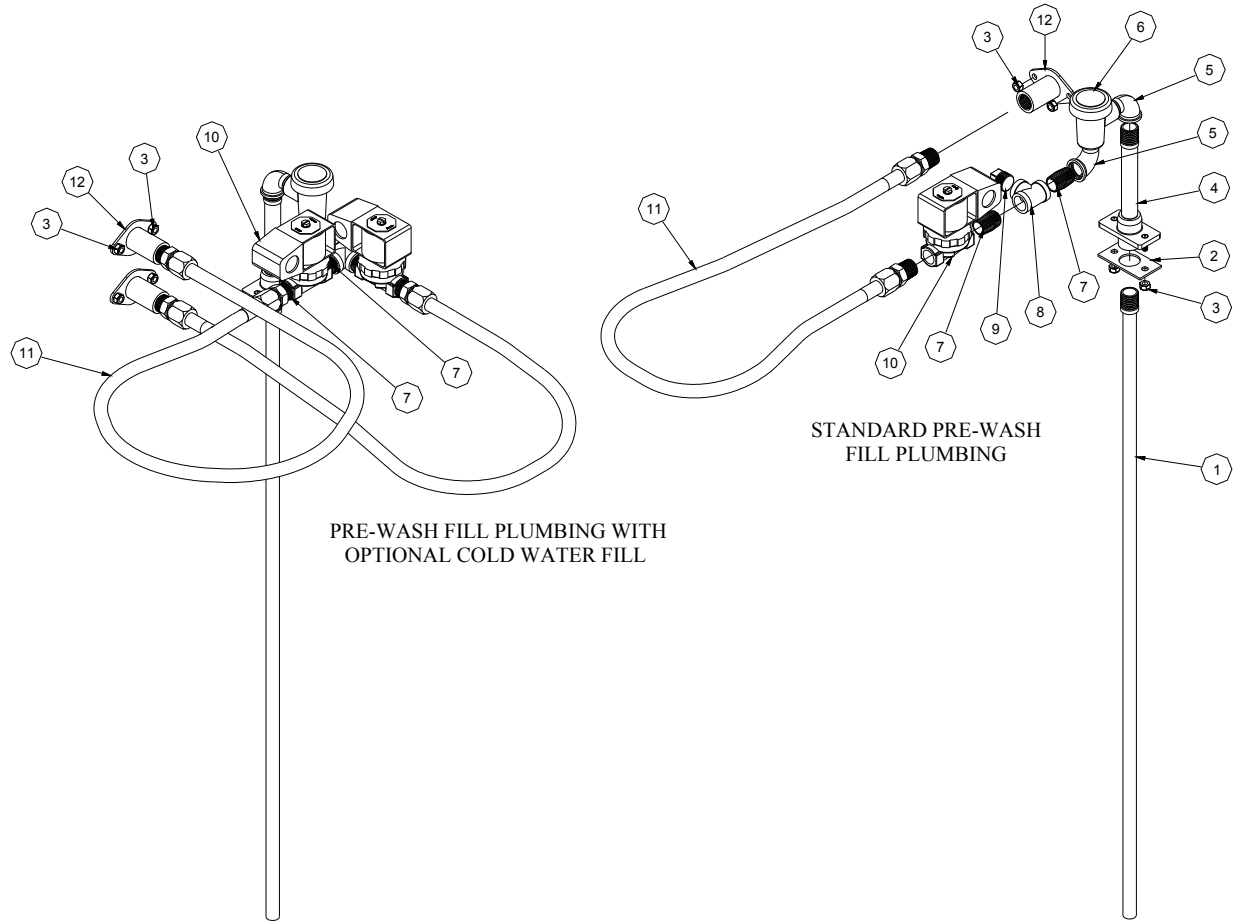

Item	QTY (*)	Description	Part Number
1	1	TUBE WELDMENT, TANK FILL	05700-003-76-81
2	1	GASKET, RINSE MANIFOLD	05330-003-75-91
3	4 (6)	LOCKNUT, 1/4"-20 HEX WITH NYLON INSERT (NOT SHOWN)	05310-374-01-00
4	1	TANK FILL INJECTOR WELDMENT	05700-003-76-84
5	2	ELBOW, 90 DEGREE, 1/2" STREET, BRASS	04730-206-08-00
6	1	VACUUM BREAKER, 1/2" <i>VACUUM BREAKER REPAIR KIT</i>	04820-003-06-13 <b>06401-003-06-23</b>
7	2 (3)	NIPPLE, 1/2" CLOSE, BRASS	04730-207-15-00
8	1	TEE, 1/2 x 1/2 x 1/2 NPT BRASS	04730-211-27-00
9	1 (0)	PLUG, 1/2 NPT BRASS <b>(REMOVED FOR COLD WATER FILL OPTION)</b>	04730-209-03-00
10	1 (2)	VALVE, 1/2" NPT BRASS, 24VDC COIL	04810-003-75-16
11	1 (2)	HOSE, 1/2" X 42" S/S BRAIDED W/PTFE, MALE SWIVEL	04720-003-76-09
12	1 (2)	WATER INLET FITTING	05700-003-81-98

\* NUMBERS IN PARENTHESIS DENOTE CHANGED QUANTITIES WHEN THE COLD WATER PRE-WASH FILL OPTION IS ADDED.

**PARTS SECTION: WASH MANIFOLD AND ARM ASSEMBLY**

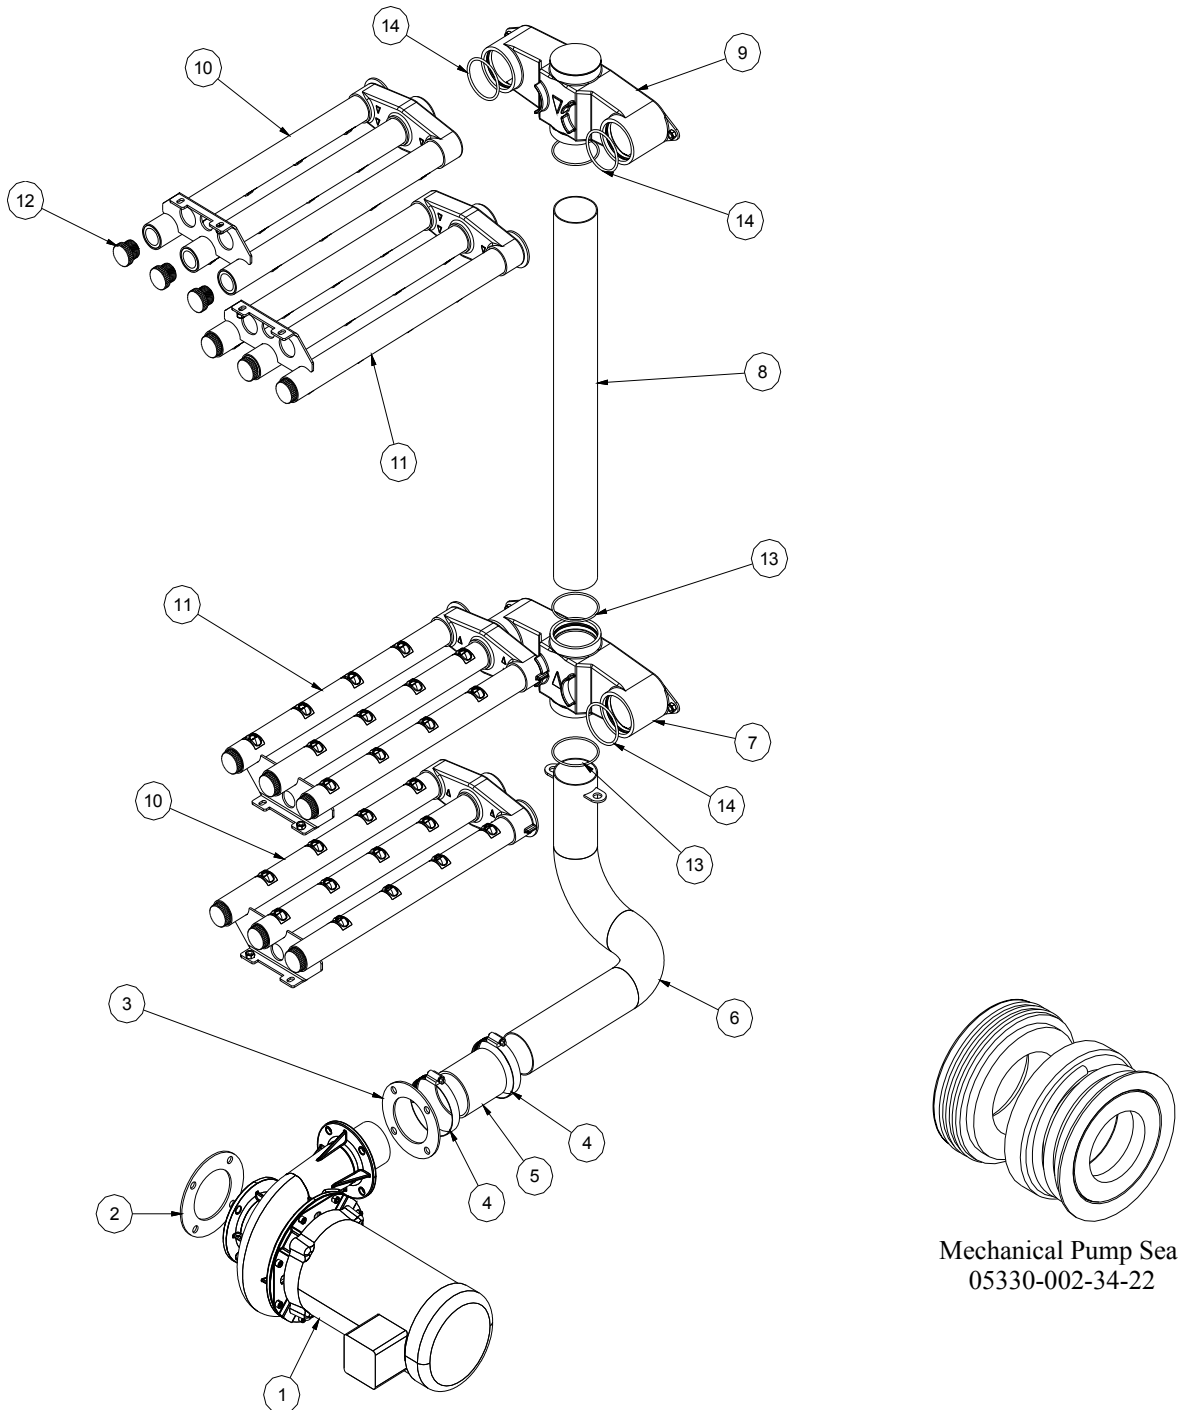




**Technical Manual (07610-003-78-18)**

**PARTS SECTION: WASH MANIFOLD AND ARM ASSEMBLY (CONTINUED)**

<b>Item</b>	<b>QTY</b>	<b>Description</b>	<b>Part Number</b>
1	1	PUMP & MOTOR ASSEMBLY	SEE TABLE BELOW
2	1	GASKET, PUMP SUCTION	05330-003-75-87
3	1	GASKET, PUMP DISCHARGE	05330-003-75-88
4	2	HOSE CLAMP, RANGE 2-9/16" TO 3-1/2"	04730-003-15-40
5	1	HOSE, WASH PUMP DISCHARGE	05700-003-77-62
6	1	(L-R MACHINES) LOWER MANIFOLD (R-L MACHINES) LOWER MANIFOLD	05700-003-74-29 05700-003-74-28
7	1	CASTING, WASH MANIFOLD	09515-003-71-50
8	1	TUBE, MANIFOLD RISER	05700-003-72-37
9	1	WASH MANIFOLD WELDMENT, UPPER	05700-003-73-66
10	2	WASH ARM WELDMENT, RIGHT	05700-003-75-80
11	2	WASH ARM WELDMENT, LEFT	05700-003-75-79
12	12	CAP, THREADED	04730-603-12-00
13	3	O-RING, SILICONE, .103 DIA., 2-1/2" X 2-11/16" OD	05330-003-73-71
14	4	O-RING, SILICONE, .139 DIA., 2-1/4" ID X 2-1/2" OD	05330-003-73-72

<b>PUMP &amp; MOTOR ASSEMBLY</b>	<b>Part Number</b>
WASH PUMP, 3HP 208V 60HZ 3-PHASE	06105-003-76-11
WASH PUMP, 3HP 230V 60HZ 3-PHASE	06105-003-76-11
WASH PUMP, 3HP 460V 60HZ 3-PHASE	06105-003-76-11
WASH PUMP, 3HP 208V 60HZ 1-PHASE	06105-003-76-13
WASH PUMP, 3HP 230V 60HZ 1-PHASE	06105-003-76-13


**PARTS SECTION: PRE-WASH MANIFOLD AND ARM ASSEMBLIES**

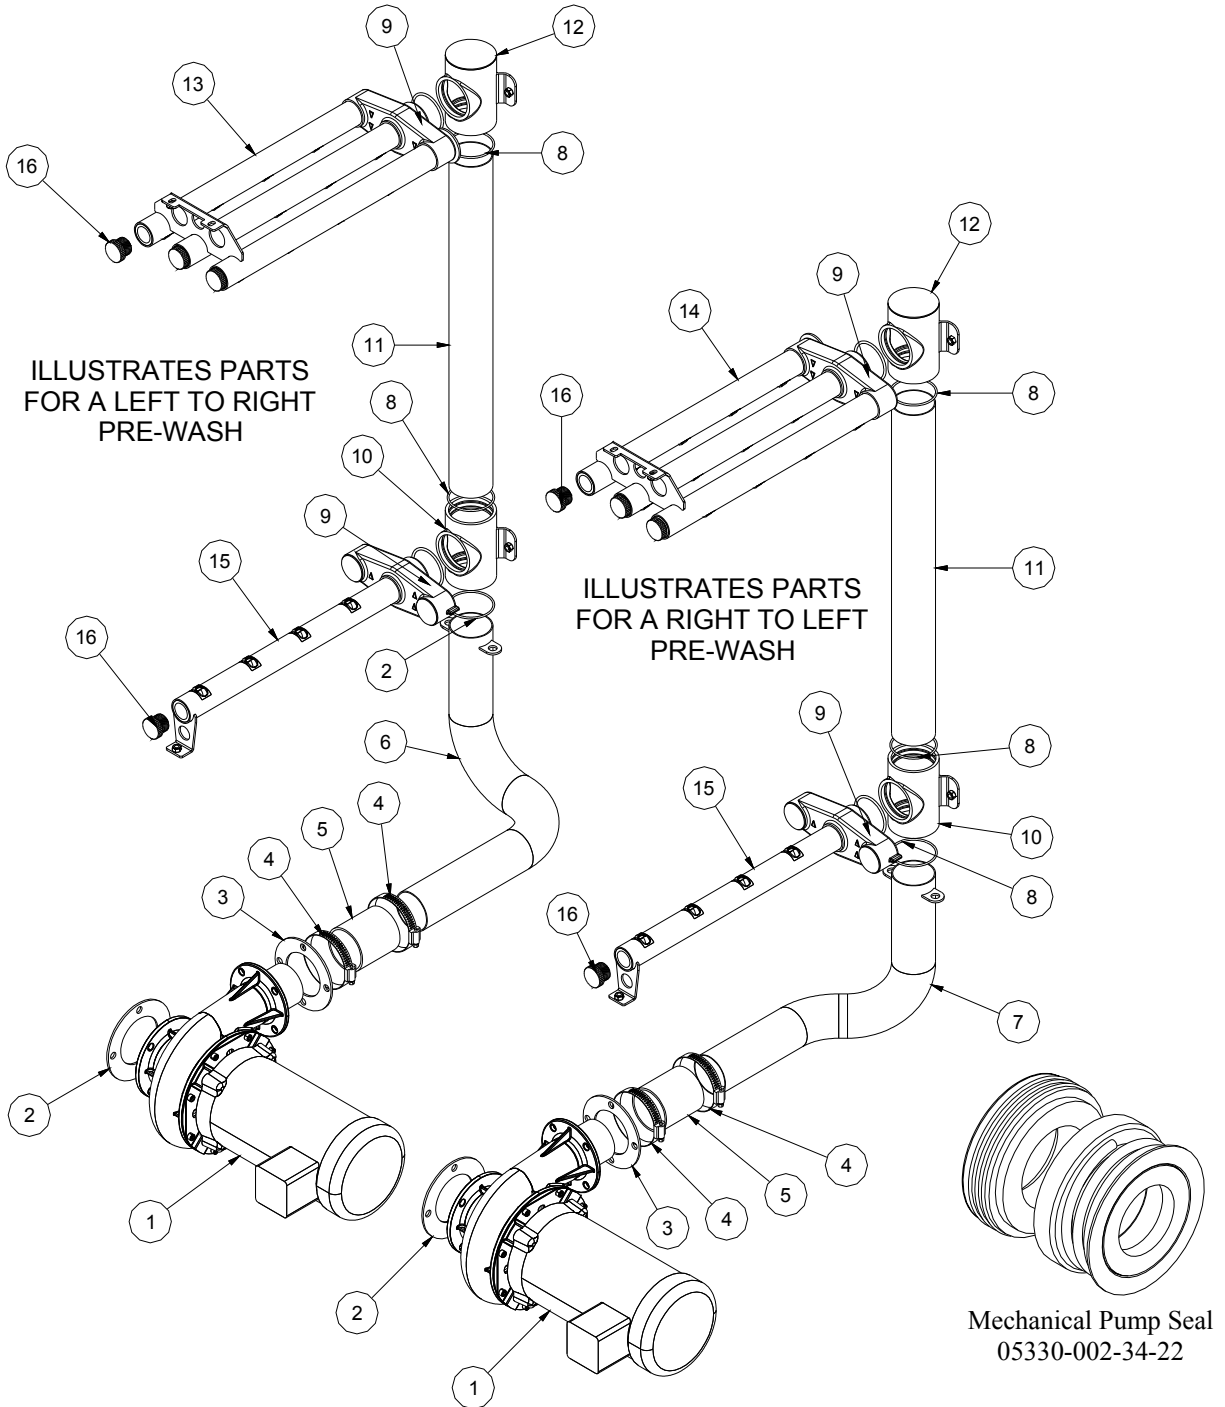

**PARTS SECTION: PRE-WASH MANIFOLD AND ARM ASSEMBLY (CONTINUED)**



Item	QTY	Description	Part Number
1	1	PUMP & MOTOR ASSEMBLY	SEE TABLE BELOW
2	1	GASKET, PUMP SUCTION	05330-003-75-87
3	1	GASKET, PUMP DISCHARGE	05330-003-75-88
4	2	HOSE CLAMP, RANGE 2-9/16" TO 3-1/2"	04730-003-15-40
5	1	HOSE, WASH PUMP DISCHARGE	05700-003-77-62
6	1	LOWER MANIFOLD (L-R UNITS)	05700-003-81-54
7	1	LOWER MANIFOLD (R-L UNITS)	05700-003-81-79
8	3	O-RING, SILICONE, .103 DIA., 2-1/2" X 2-11/16" OD	05330-003-73-71
9	2	O-RING, SILICONE, .139 DIA., 2-1/4" ID X 2-1/2" OD	05330-003-73-72
10	1	CASTING, PRE-WASH MANIFOLD	09515-003-77-22
11	1	TUBE, MANIFOLD RISER	05700-003-81-53
12	1	PRE-WASH MANIFOLD WELDMENT, UPPER	05700-003-81-76
13	1	WASH ARM WELDMENT, LEFT	05700-003-75-79
14	1	WASH ARM WELDMENT, RIGHT	05700-003-75-80
15	1	PRE-WASH ARM WELDMENT, LOWER	05700-003-80-96
16	4	CAP, THREADED	04730-603-12-00

PUMP & MOTOR ASSEMBLY	Part Number
PRE-WASH PUMP, 2HP 208V 60HZ 3-PHASE	06105-003-76-12
PRE-WASH PUMP, 2HP 230V 60HZ 3-PHASE	06105-003-76-12
PRE-WASH PUMP, 2HP 460V 60HZ 3-PHASE	06105-003-76-12
PRE-WASH PUMP, 2HP 208V 60HZ 1-PHASE	06105-003-76-14
PRE-WASH PUMP, 2HP 230V 60HZ 1-PHASE	06105-003-76-14

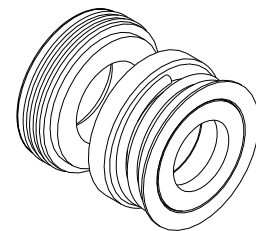

Mechanical Pump Seal  
05330-002-34-22

PARTS SECTION: RINSE ASSEMBLY

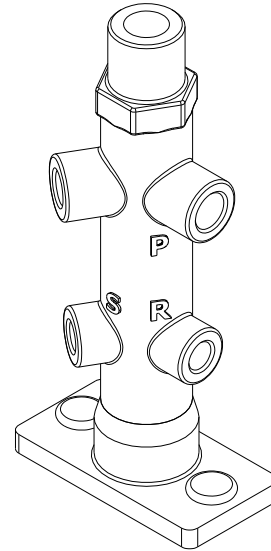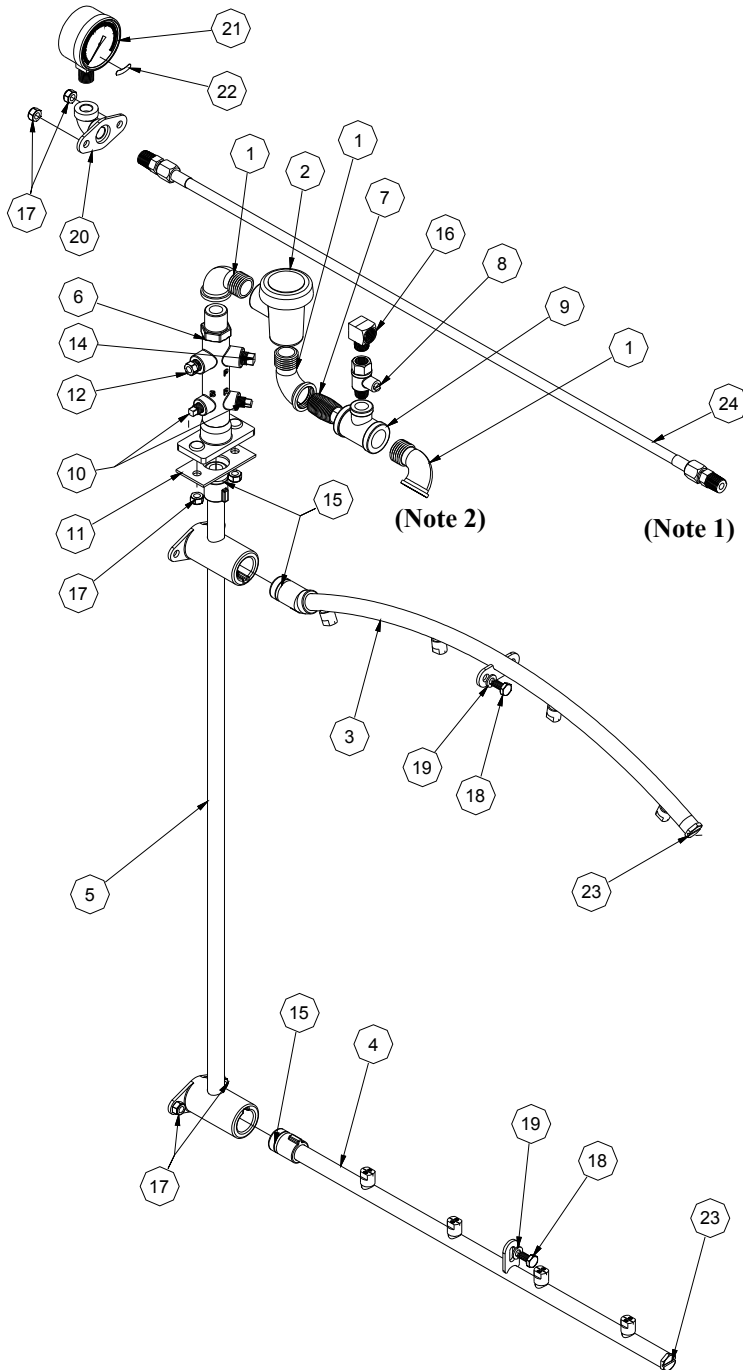

**RINSE INJECTOR CONNECTIONS**

P: PRESSURE SWITCH  
S: SANITIZER  
R: RINSE AID

**Note 1:**  
This hose connects to part #16 at one end and to part #20 at the opposite end.


**Note 2:**  
A hose from the Main Water Inlet Assembly connects to this elbow. (See page 37)  
For units with the Booster Heater Option, the hose will connect to the booster heater outlet. (See page 64)

Technical Manual (07610-003-78-18)

PARTS SECTION: RINSE ASSEMBLY (CONTINUED)


Item	QTY	Description	Part Number
1	3	ELBOW, 90 DEGREE 1/2 STREET BRASS	04730-206-08-00
2	1	VACUUM BREAKER 1/2"	04820-003-06-13
3	1	UPPER RINSE ARM	05700-003-76-02
4	1	LOWER RINSE ARM	05700-003-76-04
5	1	RINSE MANIFOLD	05700-003-76-79
6	1	RINSE INJECTOR (L-R UNITS) RINSE INJECTOR (R-L UNITS)	05700-003-76-82 05700-003-76-83
7	1	NIPPLE- 1/2 CLOSE BRASS	04730-207-15-00
8	1	VALVE, BALL TEST COCK 1/4" BRONZE	04810-011-72-67
9	1	TEE, 1/2 FNPT X 1/2 FNPT 1/4 FNPT	04730-002-22-56
10	2	PLUG, 1/8 N.P.T. BRASS	04730-209-07-37
11	1	GASKET, RINSE MANIFOLD	05330-003-75-91
12	1	FITTING, IMPERIAL BRASS	05310-924-02-05
14	1	PLUG, 1/4 211P-4	04730-209-01-00
15	3	O-RING, SILICON .103 DIA., 11/16 X 7/8 OD	05330-003-77-82
16	1	ELBOW, BRASS 90 DEGREE 1/4 NPTM x 1/4 NPTF	04730-003-77-83
17	6	LOCKNUT, 1/4-20 HEX W/NYLON INSERT	05310-374-01-00
18	2	BOLT, 1/4-20 X 1/2 LONG	05305-274-02-00
19	2	LOCKWASHER, SPRING 1/4	05311-274-01-00
20	1	ELBOW WELDMENT, TEMP GAUGE	05700-003-77-12
21	1	GAUGE, 0-100# PRESSURE	06685-111-88-34
22	1	DECAL 15-25 PSI	09905-002-97-74
23	2	END PLUG	05700-011-35-92
24	1	HOSE, 1/4x30" SS BRAIDED W/PTFE, MALE SWIVEL	04720-003-76-10

PARTS SECTION: PAWL BAR ASSEMBLIES

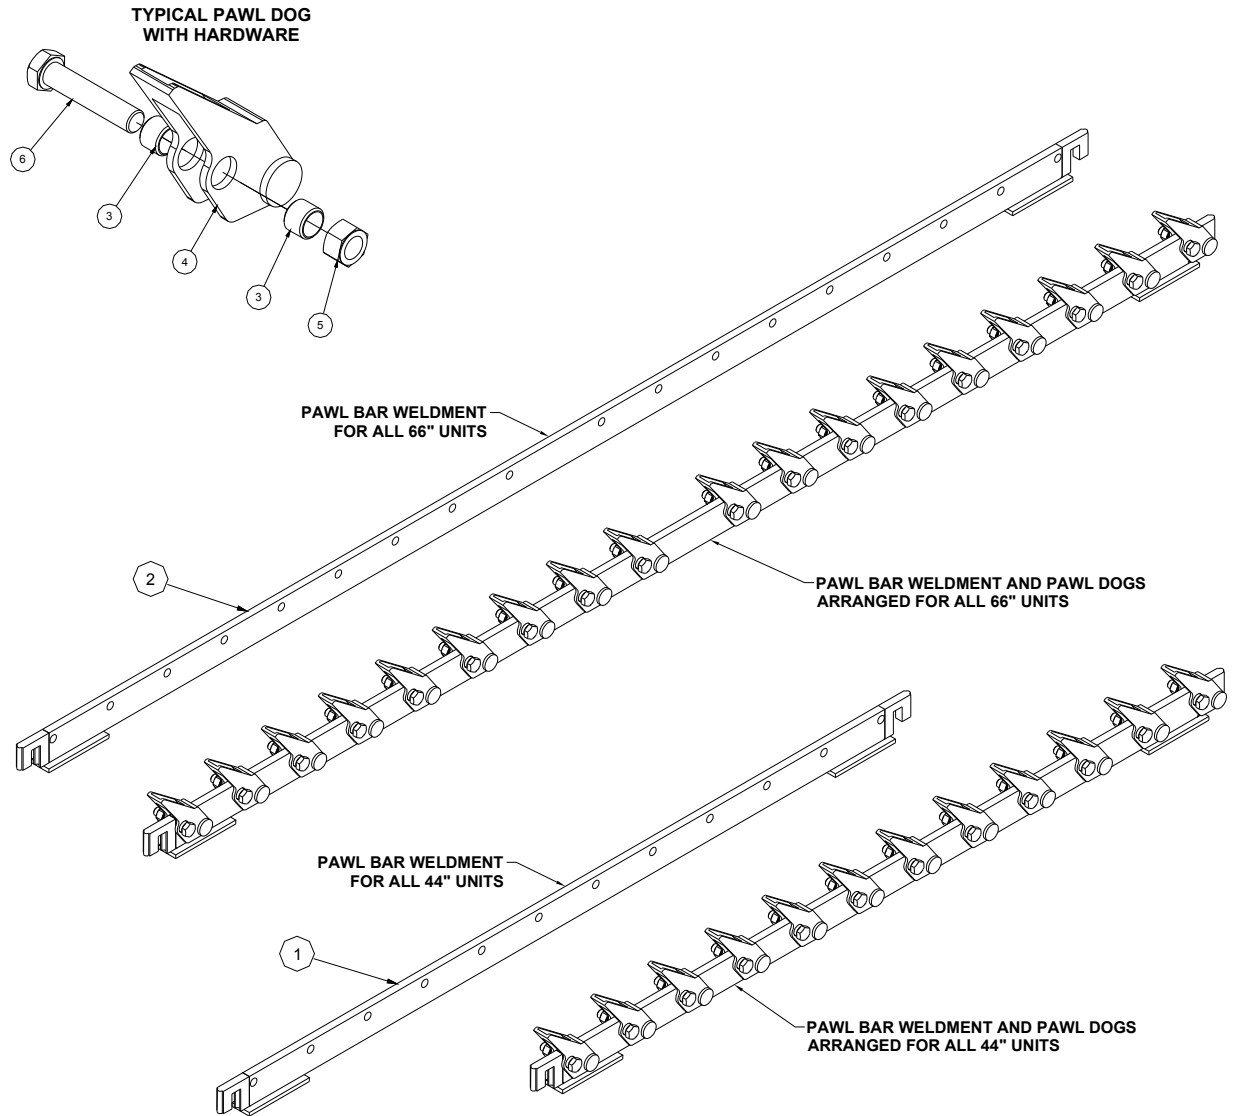

Item	QTY	Description	Part Number
1	1	PAWL BAR WELDMENT (44" Units)	05700-031-72-77
2	1	PAWL BAR WELDMENT (66" Units)	05700-003-89-34
3	24 (44" Units) 36 (66" Units)	SPACER, PAWL BAR DOG	05700-011-71-45
4	12 (44" Units) 18 (66" Units)	PAWL BAR DOG CASTING	09515-021-69-00
5	12 (44" Units) 18 (66" Units)	LOCKNUT, 3/8"-16 W/NYLON INSERT	05310-011-72-55
6	12 (44" Units) 18 (66" Units)	BOLT, 3/8"-16 X 1-3/4" LONG	05306-011-36-94



**PARTS SECTION: PAWL BAR BRACKET ASSEMBLY**

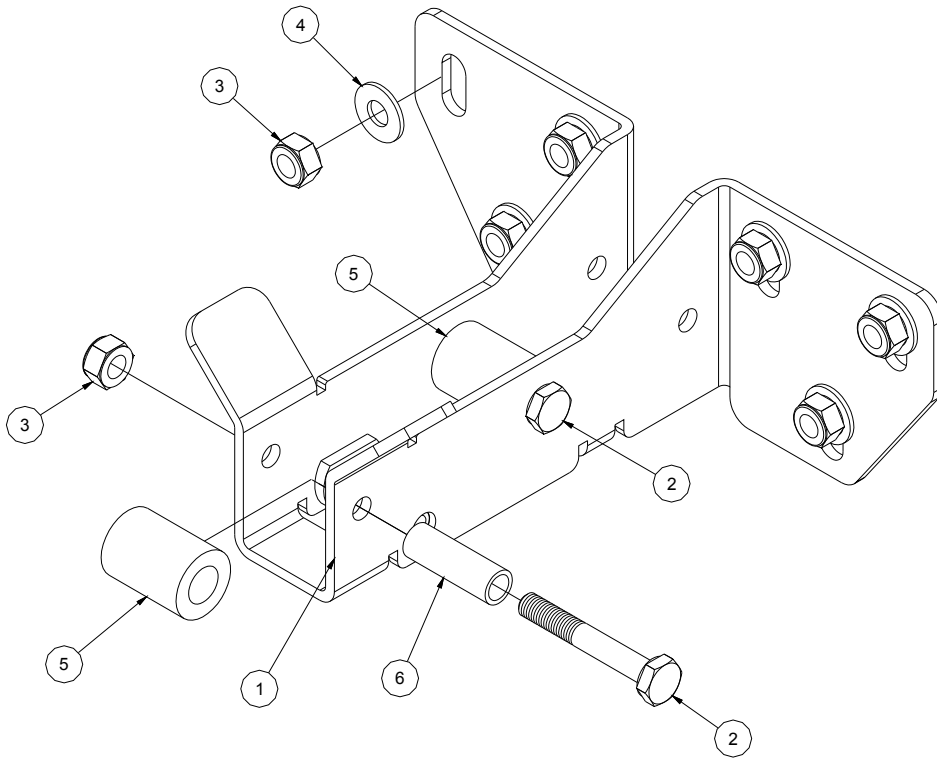


The PAWL BAR ROLLER REPLACEMENT KIT comes with items 2, 3, 5 and 6.

Item	QTY	Description	Part Number
1	1	PAWL BAR BRACKET WELDMENT	05700-003-74-39
2	2	SCREW, 1/4"-20 X 1-3/4" HEX HEAD	05305-274-10-00
3	8	LOCKNUT, 1/4"-20 HEX W/NYLON INSERT	05310-374-01-00
4	6	WASHER, S/S	05311-174-01-00
5	2	ROLLER, BRACKET ROD	05700-011-68-16
6	2	SHAFT, ROLLER, 3/8" X 1.13"	05700-011-68-14
		PAWL BAR ROLLER REPLACEMENT KIT	06401-003-11-80

**PARTS SECTION: PAWL BAR GUTTER ASSEMBLY**

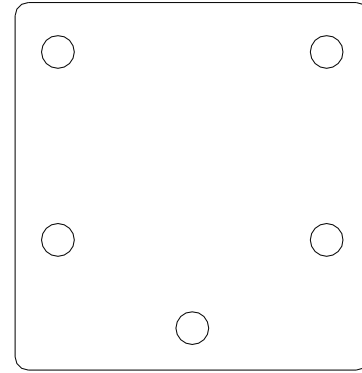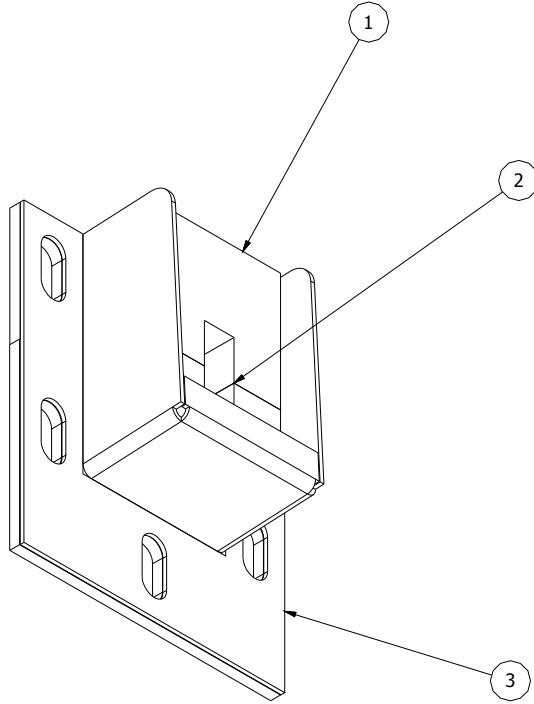

DRIVE ROD HOLE COVER  
P/N: 05700-003-75-68

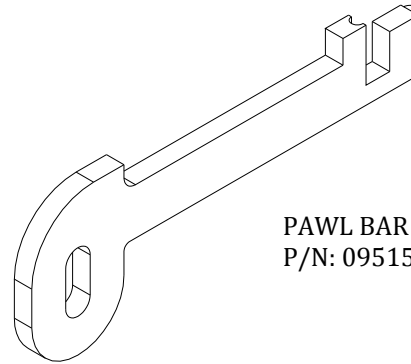


PAWL BAR DRIVE LINKAGE  
P/N: 09515-021-87-73

Item	QTY	Description	Part Number
1	1	TOP GUIDE BLOCK	05700-011-69-49
2	1	BOTTOM GUIDE BLOCK	05700-011-69-50
3	1	PAWL BAR GUTTER WELDMENT	05700-021-66-86
4	1	DRIVE GUTTER GASKET (NOT SHOWN)	05330-011-68-55
	1	GUTTER WELDMENT REPLACEMENT KIT (W/HARDWARE)	06401-003-09-95
	1	GUIDE BLOCK REPLACEMENT KIT	06401-003-10-15




**PARTS SECTION: RACK PADDLE ASSEMBLY**

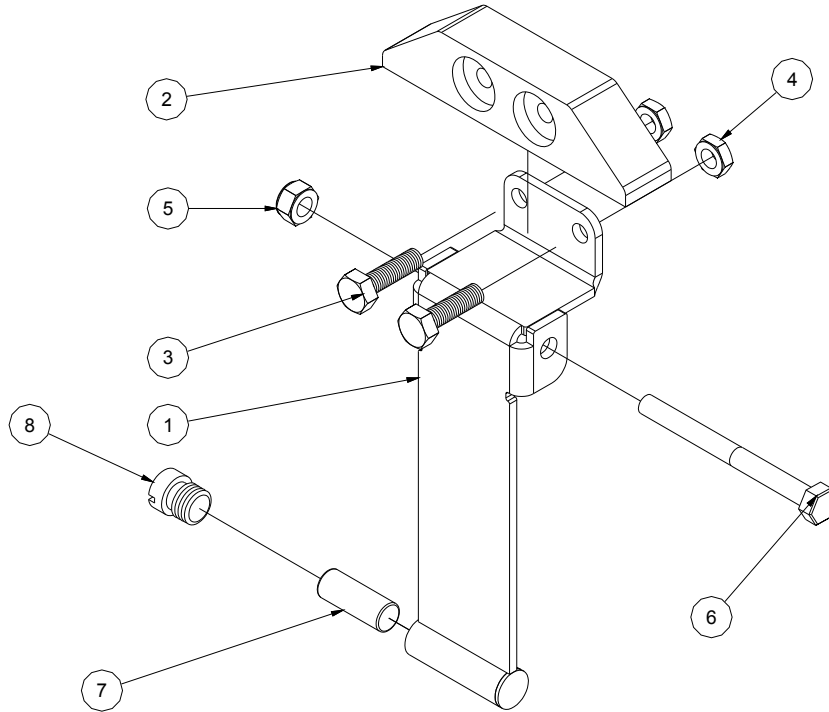


Item	QTY	Description	Part Number
1	1	RACK PADDLE WELDMENT	05700-003-76-71
2	1	BUMPER, RACK PADDLE	09330-003-74-82
3	2	SCREW, 1/4"-20 X 7/8" SS HH	05305-274-05-00
4	2	LOCKNUT, 1/4"-20 LOW PROFILE W/NYLON INSERT	05310-374-02-00
5	1	LOCKNUT, 1/4"-20 HEX W/NYLON INSERT	05310-374-01-00
6	1	SCREW, 1/4"-20 X 2-3/4" HEX HEAD	05305-003-31-63
7	1	MAGNET	05930-003-31-63
8	1	WASH/RINSE END CAP	05700-011-60-92
	1	<b>ENTIRE ASSEMBLY</b>	05700-003-76-74

**PARTS SECTION: RINSE PADDLE ASSEMBLIES**

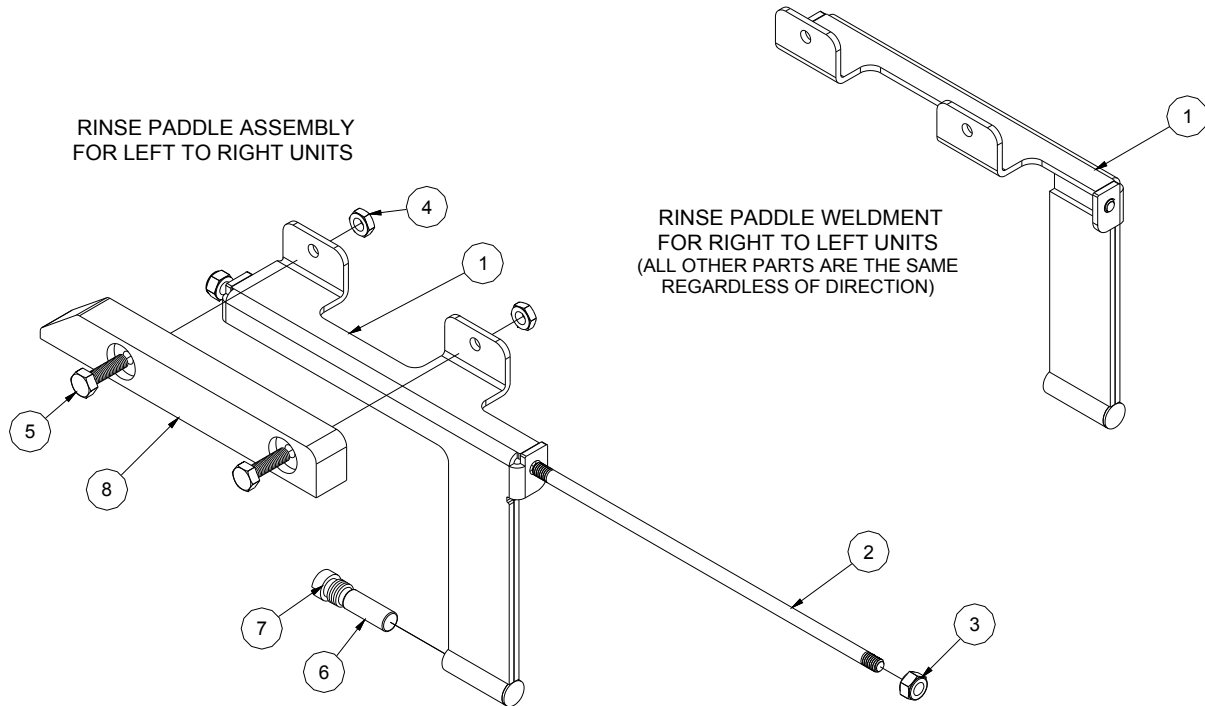


Item	QTY	Description	Part Number
1	1	RINSE PADDLE WELDMENT (L-R) RINSE PADDLE WELDMENT (R-L)	05700-003-81-91 05700-003-81-96
2	1	STUD, 1/4"-20 X 8.50" LONG, S/S, DOUBLE ENDED THREAD	05306-003-76-31
3	2	LOCKNUT, 1/4"-20 HEX W/NYLON INSERT	05310-374-01-00
4	2	LOCKNUT, 1/4"-20 LOW PROFILE W/NYLON INSERT	05310-374-02-00
5	4	SCREW, 1/4-20 x 7/8" HEX HEAD S/S	05305-274-05-00
6	4	MAGNET	05930-003-31-63
7	1	END CAP	05700-011-60-92
8	1	BUMPER, RINSE PADDLE	09330-003-81-04
	1	<b>ENTIRE ASSEMBLY (L-R)</b> <b>ENTIRE ASSEMBLY (R-L)</b>	05700-003-81-92 05700-003-81-95

**PARTS SECTION: DRAIN ASSEMBLY PARTS**

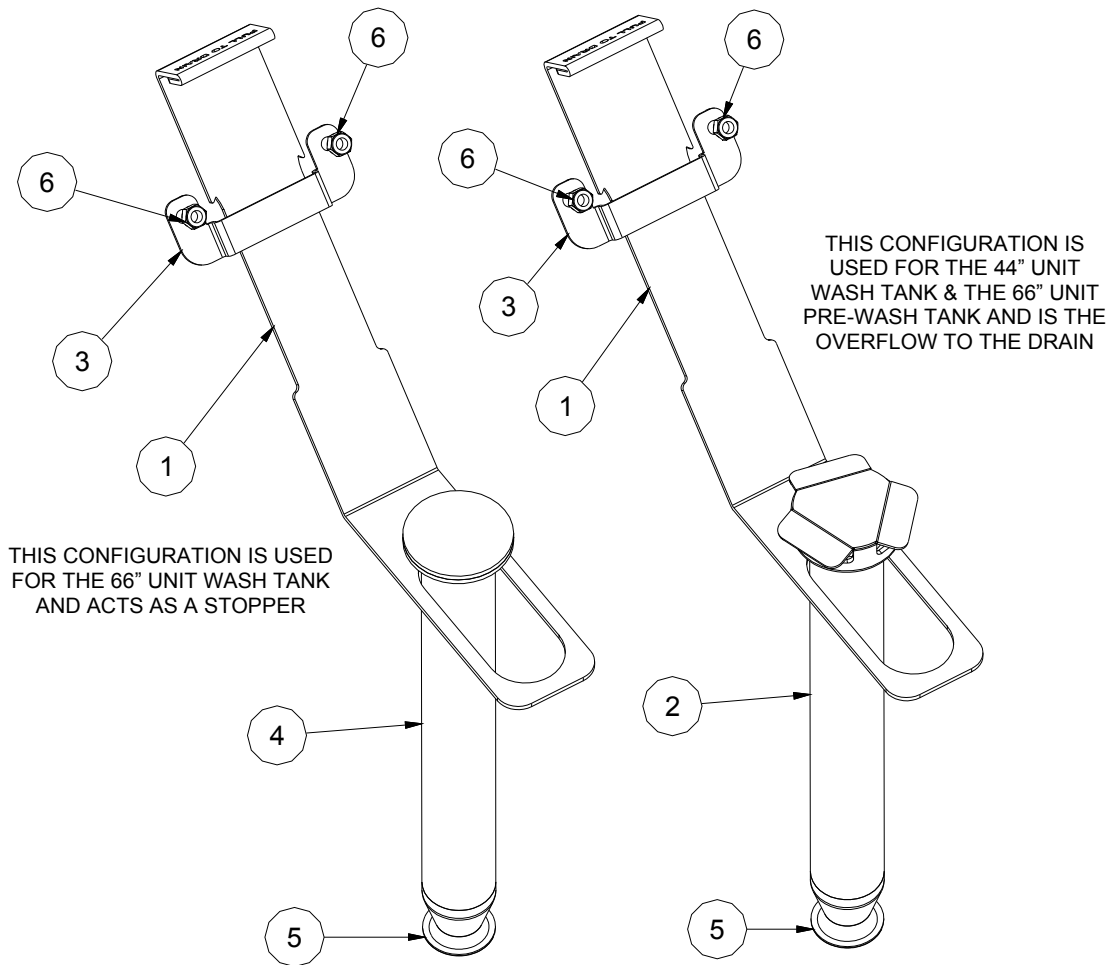


Item	QTY	Description	Part Number
1	1	DRAIN HANDLE	05700-003-83-66
2	1	DRAIN STANDPIPE (OVERFLOW)	05700-003-75-55
3	2	DRAIN HANDLE BRACKET	05700-003-83-67
4	2	DRAIN STANDPIPE	05700-003-82-76
5	1	O-RING, VITON	05330-400-05-00
6	2	LOCKNUT, 1/4-20 HEX W/NYLON INSERT	05310-374-01-00

**PARTS SECTION: COVERS, GUARDS AND PANELS**

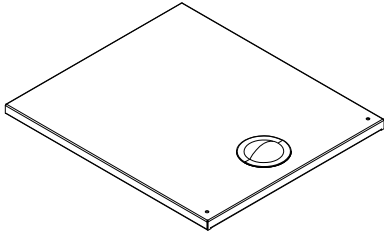


PRE-WASH TOP PANEL ASSEMBLY  
W/HANDLE: 05700-003-82-49

TOP PANEL ASSEMBLY  
05700-003-78-06  
(44" & 66" UNITS)

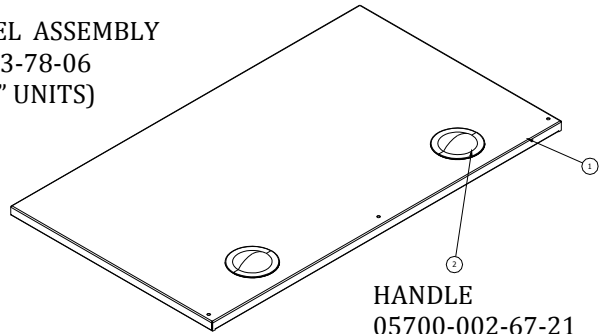


HANDLE  
05700-002-67-21

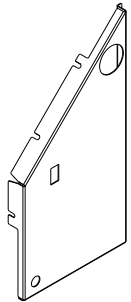


LEFT SIDE PANEL  
05700-003-73-82  
(Electric Units & Steam L-R)

 
05700-003-83-87  
(Steam R-L)



CONTROL DRESS PANEL  
05700-003-78-15

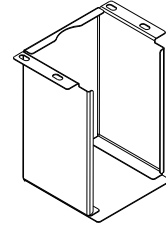


COVER, WASH HEATER  
05700-003-74-73  
(ELECTRICALLY HEATED  
UNITS ONLY)

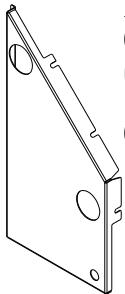


RIGHT SIDE PANEL  
05700-003-73-81  
(Electric Units & Steam R-L)

05700-003-83-71  
(Steam L-R Units)

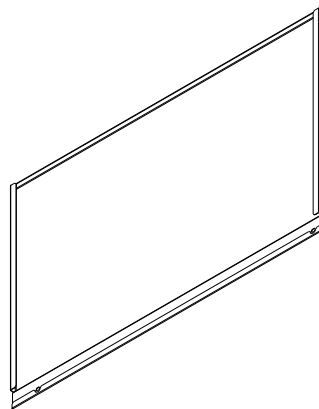


LOWER DRESS PANEL  
05700-003-72-81 (44" UNITS)  
05700-003-80-42 (66" UNITS)

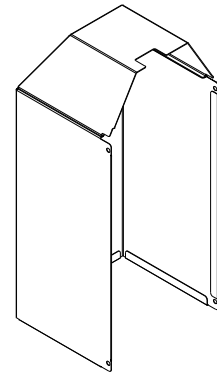


DRIVE MOTOR GUARD  
05700-003-79-45

**PARTS SECTION: BRACKETS**

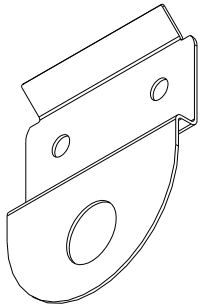


START SWITCH BRACKET  
05700-003-74-65


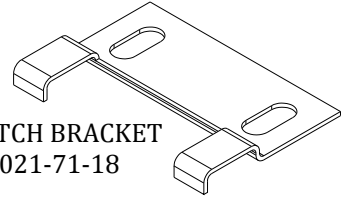


LIMIT SWITCH BRACKET  
05700-021-71-18

FILL TUBE BRACKET  
05700-003-79-55


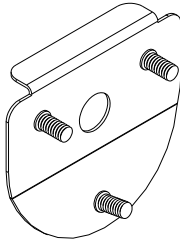


UPPER DRIVE  
SUPPORT BRACKET  
05700-003-77-18

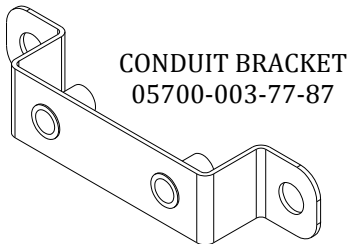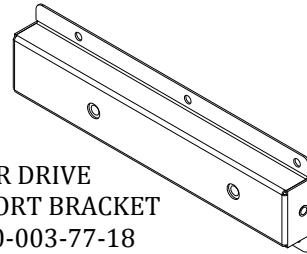


CONDUIT BRACKET  
05700-003-77-87

LOWER DRIVE  
SUPPORT BRACKET  
05700-003-77-19

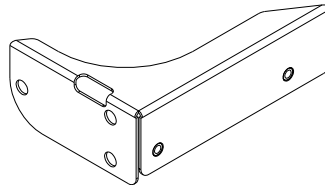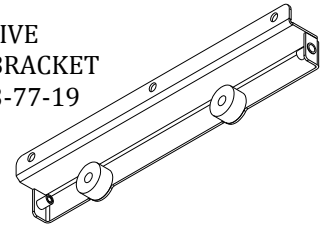


PANEL BRACKET, LEFT  
05700-003-78-13

 


PANEL BRACKET, RIGHT  
05700-003-78-14


FLOAT & STANDPIPE  
BRACKET ASSEMBLY  
05700-003-81-87

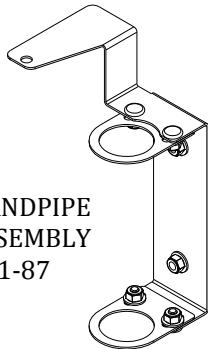


**PARTS SECTION: MISCELLANEOUS PARTS**

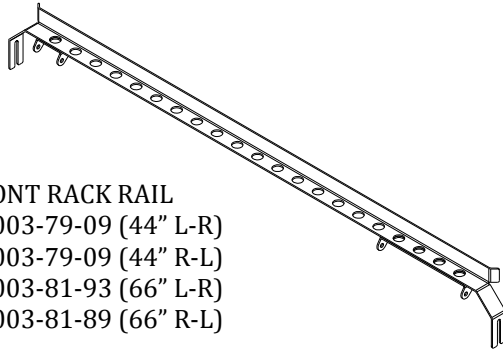


**FRONT RACK RAIL**  
05700-003-79-09 (44" L-R)  
05700-003-79-09 (44" R-L)  
05700-003-81-93 (66" L-R)  
05700-003-81-89 (66" R-L)

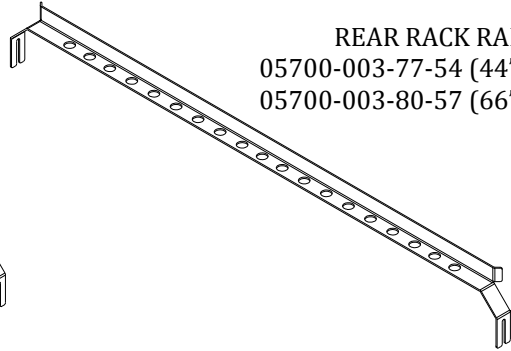


**REAR RACK RAIL**  
05700-003-77-54 (44" UNITS)  
05700-003-80-57 (66" UNITS)

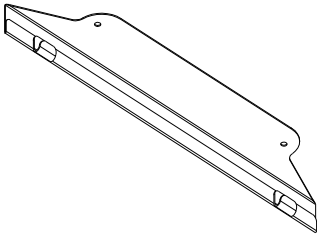


**CURTAIN BRACKET, MIDDLE**  
05700-003-77-61

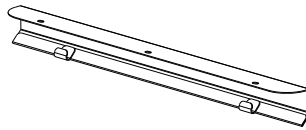


**CURTAIN BRACKET, END**  
05700-003-77-60

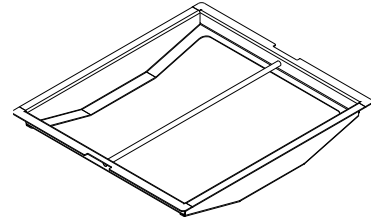

**STRAINER, WASH TANK**  
05700-003-74-31

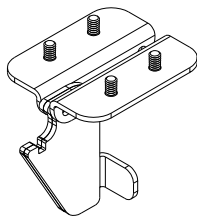


**DOOR LATCH ASSEMBLY**  
05700-003-75-76

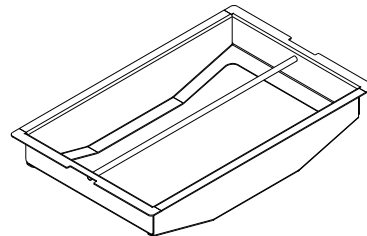


**STRAINER, PRE-WASH TANK**  
05700-003-80-75

PARTS SECTION: VENTILATION COWL PARTS

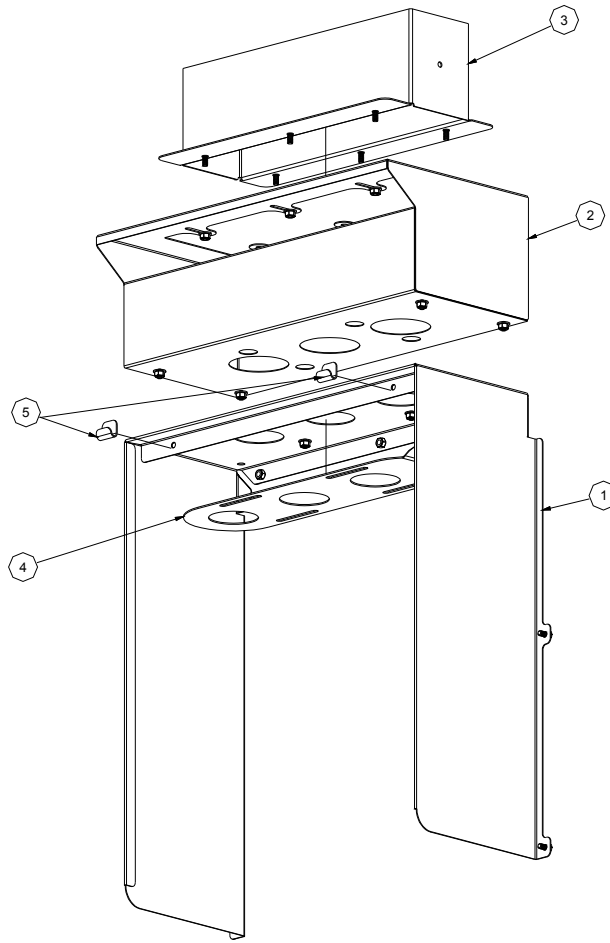

Item	QTY	Description	Part Number
1	2	VENTILATION COWL	05700-003-77-50
	1	VENTILATION COWL, LEFT SIDE ( FOR DOOR ACCENT PANEL OPTION)	05700-003-75-77
	1	VENTILATION COWL, RIGHT SIDE ( FOR DOOR ACCENT PANEL OPTION)	05700-003-75-78
2	2	VENTILATION SCOOP	05700-003-75-74
3	2	VENTILATION DUCT ADAPTER	05700-003-75-73
4	2	DAMPER, VENTILATION SCOOP	05700-003-74-76
5	4	CURTAIN HOOK	05700-003-17-98

**PARTS SECTION: VENTILATION COWL FOR UNHOODED SIDE-LOADER OPTION**


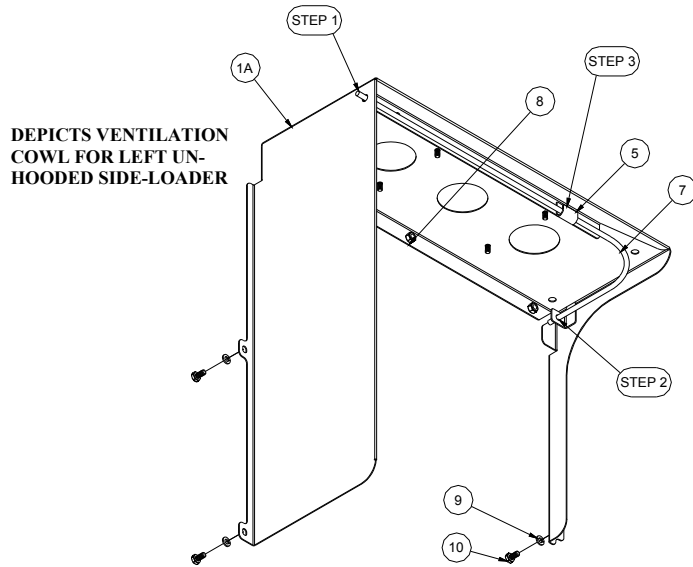


**TO ATTACH THE CURTAIN AND ROD TO VENTILATION COWL ENSURE THE CURTAIN IS ORIENTED AS DEPICTED AND FOLLOW THE STEPS BELOW.**

**STEP 1:** INSERT THE ROD INTO THE HOLE AT THE REAR OF THE VENTILATION COWL

**STEP 2:** INSERT THE ROD INTO THE BRACKET AT THE FRONT OF THE VENTILATION COWL


**STEP 3:** GENTLY LIFT THE ROD AT THE CURTAIN CUTOUT OVER AND ONTO THE CURTAIN HOOK ENSURING THAT THE ENDS OF THE ROD STAY INSERTED IN THE HOLES.

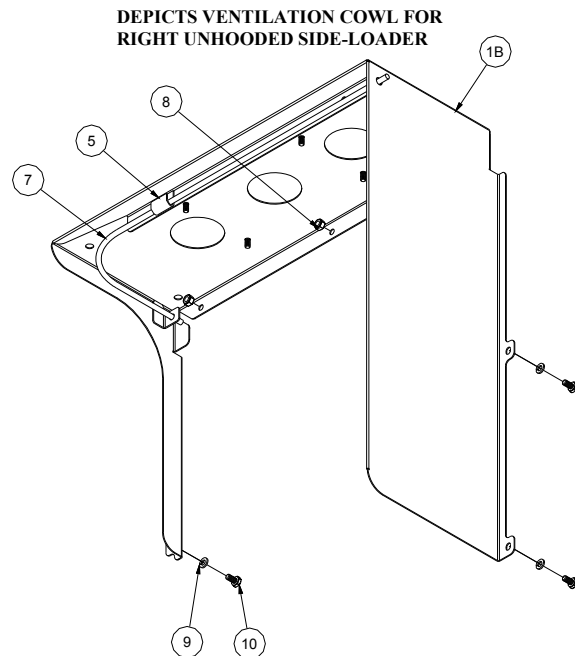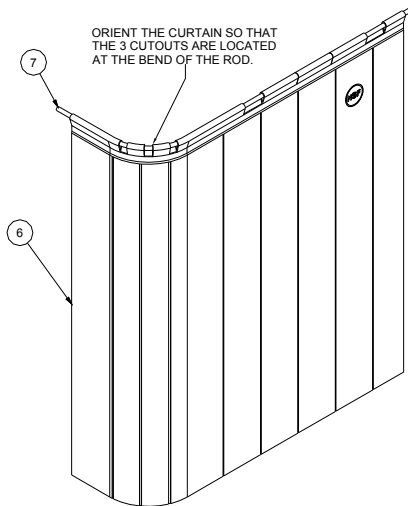

Item	QTY	Description	Part Number
1A	1	VENTILATION COWL w/CUTOUT FOR LEFT SIDE LOADER	05700-003-84-67
1B	1	VENTILATION COWL w/CUTOUT FOR RIGHT SIDE LOADER	05700-003-84-66
2	1	VENTILATION SCOOP (NOT SHOWN)	05700-003-75-74
3	1	VENTILATION DUCT ADAPTER (NOT SHOWN)	05700-003-75-73
4	1	DAMPER, VENTILATION SCOOP (NOT SHOWN)	05700-003-74-76
5	2	CURTAIN HOOK	05700-003-86-10
6	1	CURTAIN, XL FOR SIDE-LOADER	08415-003-84-88
7	1	CURTAIN ROD	05700-003-84-57
8	3	LOCKNUT, 1/4-20 HEX w/NYLON INSERT	05310-374-01-00
9	3	LOCKWASHER, 1/4 ID SPRING	05311-274-01-00
10	3	BOLT, 1/4-20 x 1/2" LONG	05305-274-02-00



PARTS SECTION: DRIVE ASSEMBLY

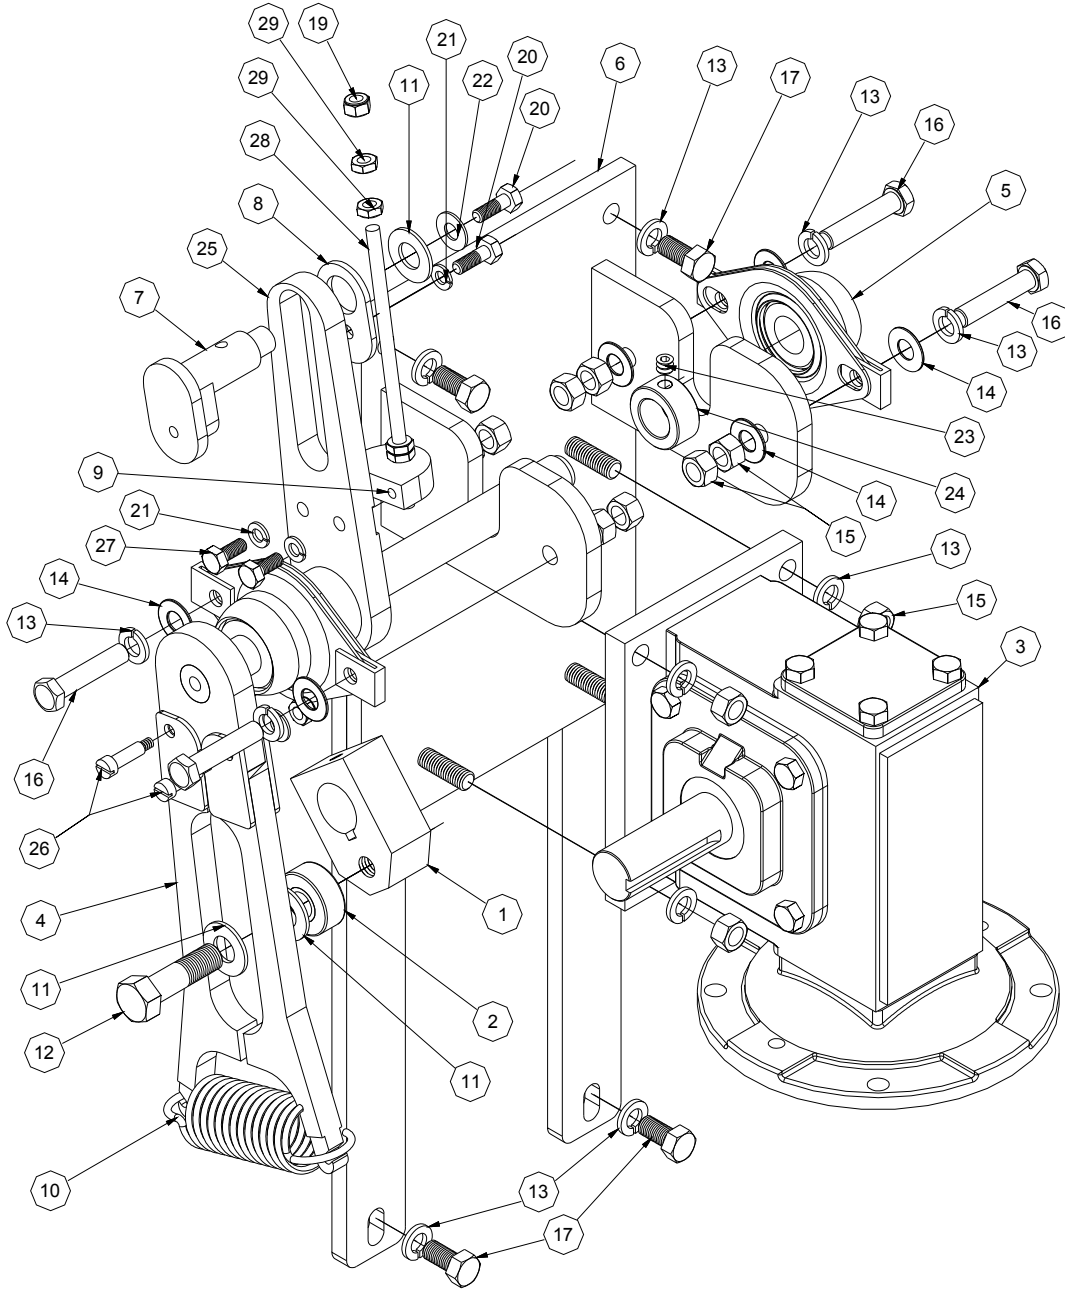


**Technical Manual (07610-003-78-18)**


**PARTS SECTION: DRIVE ASSEMBLY**

<b>Item</b>	<b>QTY</b>	<b>Description</b>	<b>Part Number</b>
1	1	HUB, DRIVE	05700-011-67-97
2	1	BEARING, ROLLER WC88013	03120-011-71-81
3	1	GEAR, 50/1 DRIVE MOTOR	06105-011-71-88
4	2	W-COUPLING & EXPANSION LEGS WELD	05700-021-67-50
5	1	BLOCK, PILLOW	03120-021-71-87
6	1	W-DRIVE SUPPORT WELDMENT	05700-003-75-61
7	1	F-SOCKET, DRIVE	05700-021-67-39
8	1	F-PLATE, SPACER	05700-011-67-58
9	1	PLATE, DRIVE ROD	05700-021-67-42
10	1	SPRING, DRIVE	05315-011-83-51
11	3	WASHER, 1/2 FLAT S/S	5311-011-71-93
12	1	BOLT, 1/2-13 X 1 3/4	05305-011-71-94
13	12	3/8 LOCKWASHER	05311-276-01-00
14	8	WASHER 3/8" FLAT S/S	05311-176-01-00
15	12	NUT, HEX 3/8-16 S/S	05310-276-01-00
16	4	BOLT, 3/8-16 X 1 3/4" LG	05306-011-36-94
17	4	3/8-16 X 3/4" LONG	05306-011-71-60
18	2	WASHER, S/S 1/4-20 I.D.	05311-174-01-00
19	4	LOCKNUT, 1/4-20 HEX W/NYLON INSERT	05310-374-01-00
20	2	BOLT, HEX HEAD 1/4 - 20 X 3/4	05305-274-04-00
21	3	LOCKWASHER, SPRING 1/4	05311-274-01-00
22	1	WASHER, 5/16 - 18 S/S	05311-175-01-00
23	1	SET SCREW, 5/16-18 X 1/4	05305-002-98-39
24	1	COLLAR, SHAFT CONVEYOR DRIVE	05700-011-89-18
25	1	W-DRIVE LEVER WELDMENT	05700-003-78-03
26	2	SCREW, 10-32 X .75 SHOULDER .25	05305-011-86-65
27	2	SCREW, 1/4-20 x 5/8 S/S HEX HEAD	05305-274-24-00
28	1	STUD, 1/4-20 x 5.75 ALL THREAD	05307-003-79-67
29	4	NUT, HEX 1/4 - 20	05310-274-01-00

PARTS SECTION: SIDE LOADERS

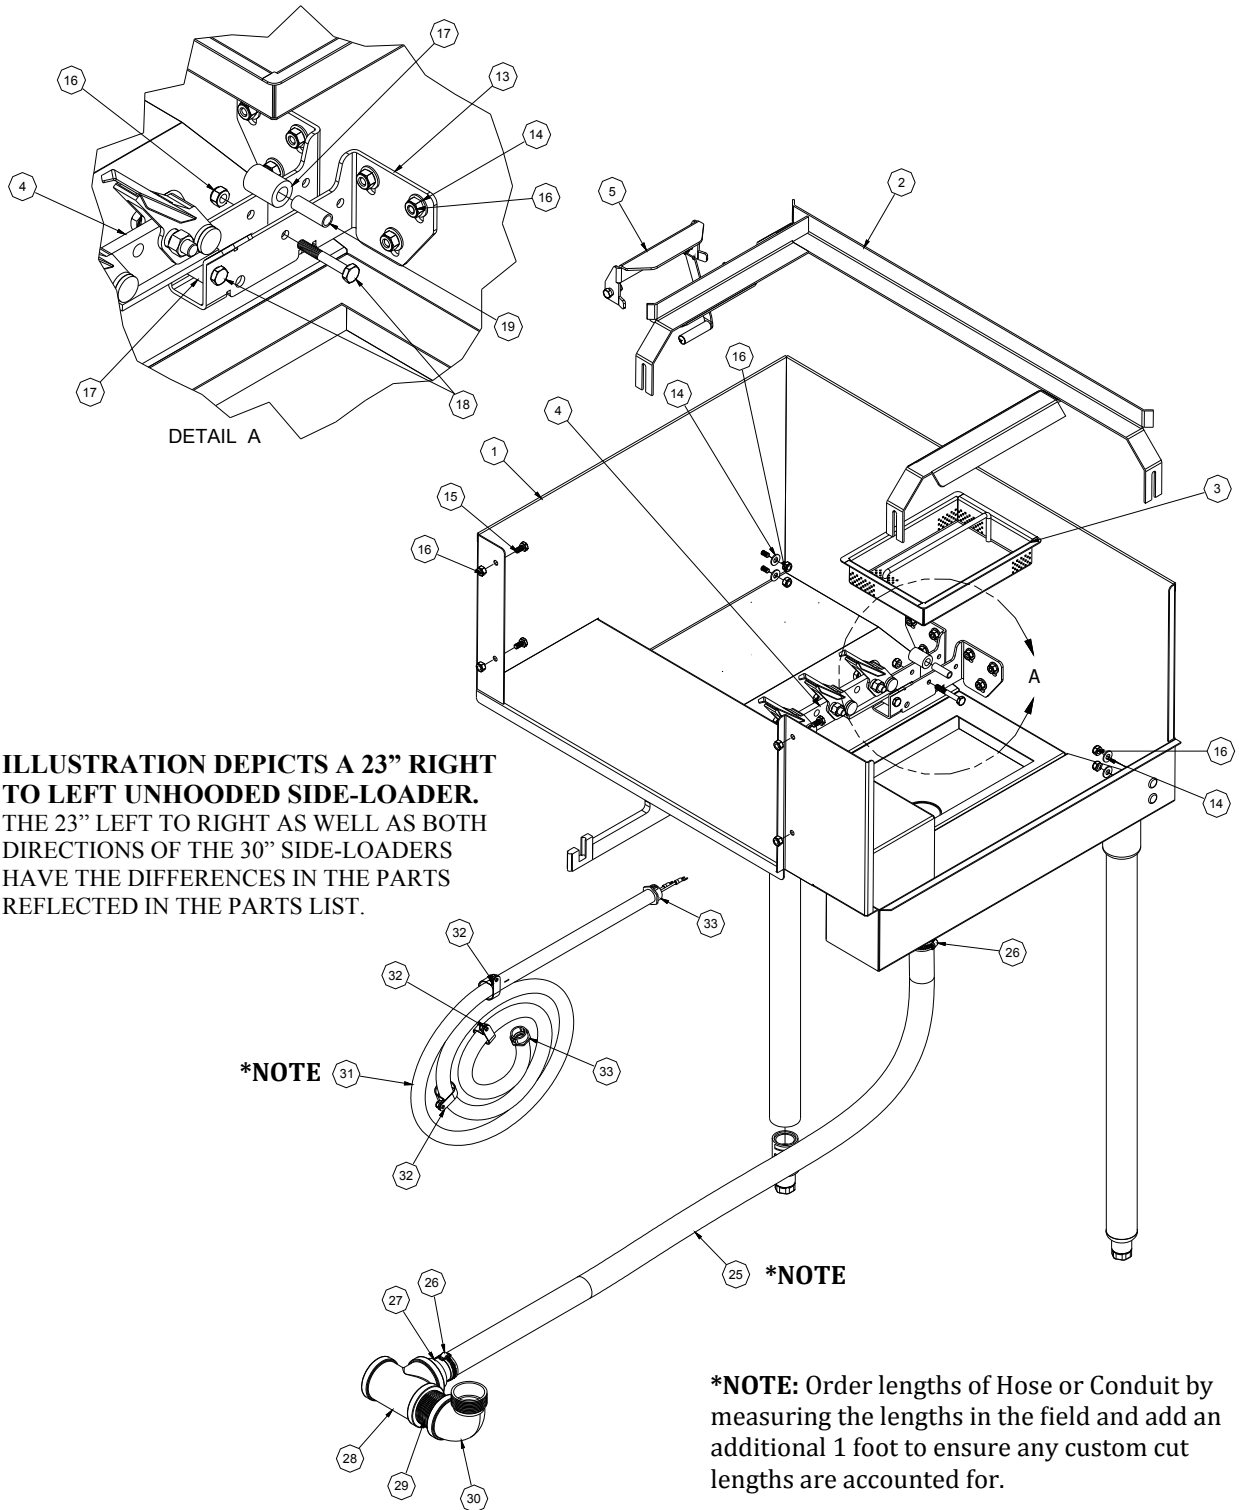

PARTS SECTION: SIDE LOADERS (CONTINUED)

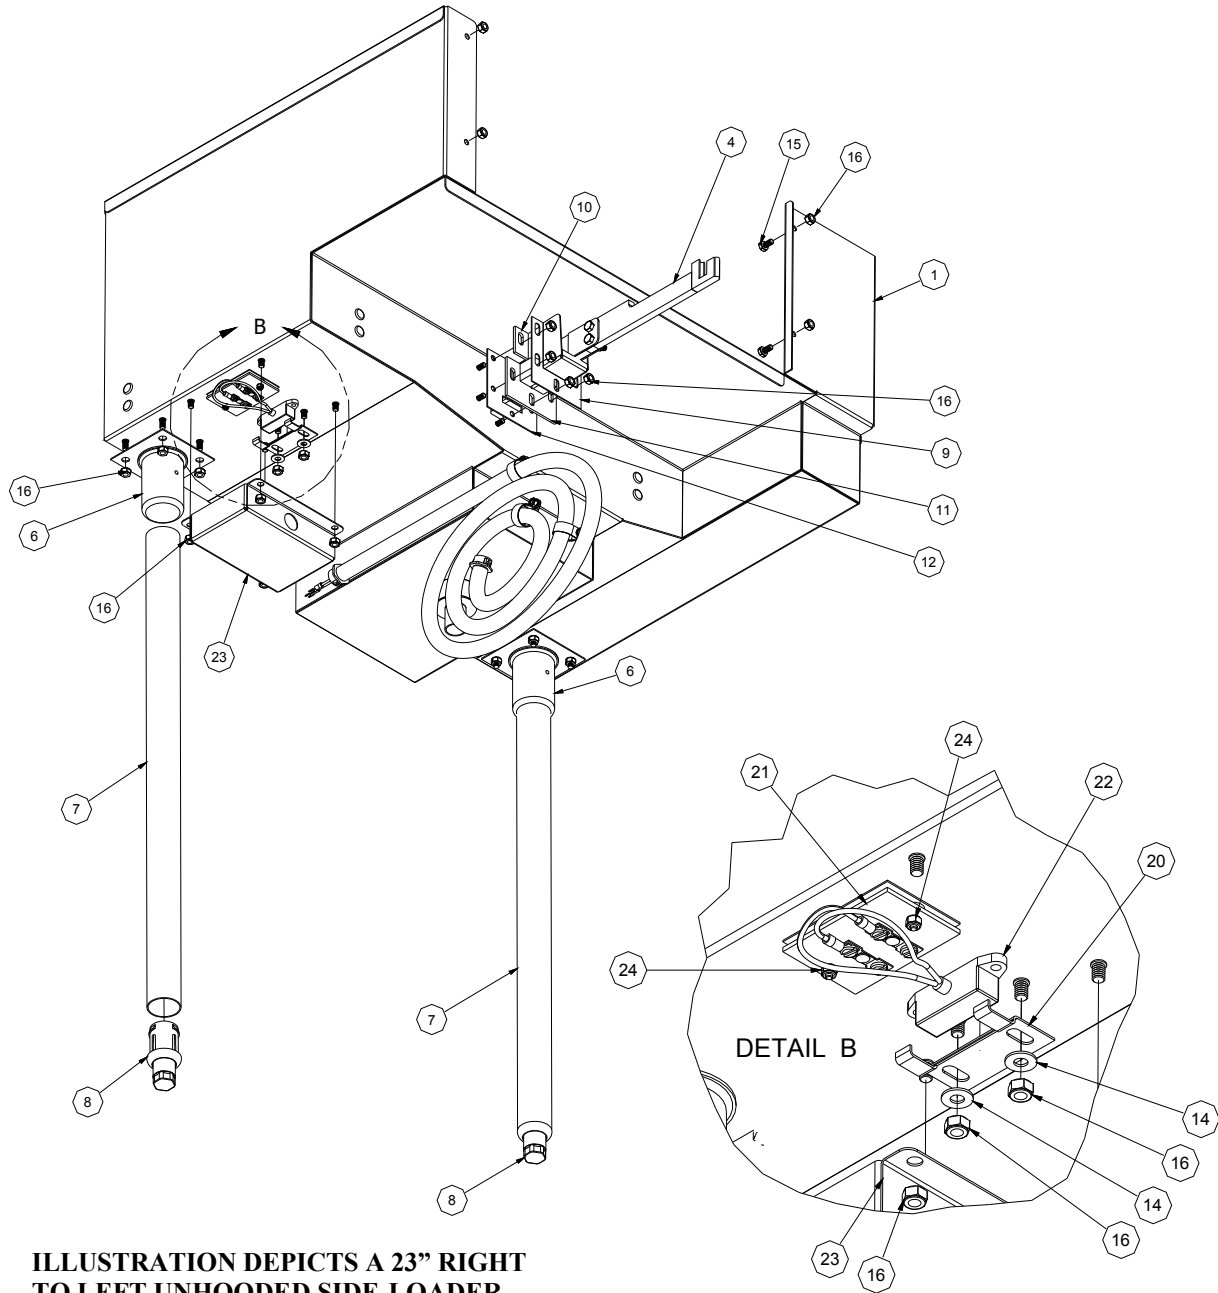


**ILLUSTRATION DEPICTS A 23" RIGHT TO LEFT UNHOODED SIDE-LOADER.**  
 THE 23" LEFT TO RIGHT AS WELL AS BOTH DIRECTIONS OF THE 30" SIDE-LOADERS HAVE THE DIFFERENCES IN THE PARTS REFLECTED IN THE PARTS LIST.

PARTS SECTION: SIDE LOADERS (CONTINUED)

Item	QTY	Description	Part Number
1	1	TUB WELDMENT, 23" SIDE-LOADER L-R	05700-003-84-59
	1	TUB WELDMNT, 23" SIDE-LOADER R-L	05700-003-84-58
	1	TUB WELDMNT, 30" SIDE-LOADER L-R	05700-003-88-46
	1	TUB WELDMNT, 30" SIDE-LOADER R-L	05700-003-88-39
2	1	RACK SUPPORT L-R	05700-003-90-00
	1	RACK SUPPORT R-L	05700-003-89-95
3	1	STRAINER	05700-021-85-10
4	1	PAWL BAR DRIVE LINKAGE (SEE SIDE-LOADER DRIVE LINKAGE PAGE)	05700-003-84-78
5	1	ACTUATOR SWITCH ASSEMBLY	06401-003-89-96
6	2	LEG SOCKET	05700-002-56-14
7	2	SUPPORT LEG	05700-021-87-59
8	2	FOOT, ADJUSTABLE	05340-108-01-03
9	1	GUTTER, PAWL BAR	05700-021-66-86
10	1	GUIDE BLOCK TOP-SLOTTED	05700-011-69-49
11	1	GUIDE BLOCK BOTTOM-SLOTTED	05700-011-69-50
12	1	GASKET, DRIVE GUTTER	05330-011-68-55
13	1	BRACKET, LOADER PAWL BAR SUPPORT	05700-003-87-39
14	16	WASHER, 1/4" ID STAINLESS STEEL	05311-174-01-00
15	4	BOLT, 1/4-20 x 1/2" LONG	05305-274-02-00
16	39	LOCKNUT, 1/4-20 HEX w/NYLON INSERT	05310-374-01-00
17	2	ROLLER	05700-011-68-16
18	2	SCREW, 1/4-20 x 1-3/4" LONG HEX HEAD	05305-274-10-00
19	2	ROLLER SHAFT	05700-011-68-14
20	1	BRACKET, LIMIT SWITCH	05700-021-71-18
21	1	TERMINAL BOARD	05940-011-84-41
22	1	SWITCH ASSEMBLY, SIDE-LOADER (24VDC)	05700-003-87-43
23	1	COVER, SIDE LOADER SWITCH	05700-003-87-41
24	2	LOCKNUT, 6-32 HEX w/NYLON INSERT	05310-373-03-00
25	NOTE*	DRAIN HOSE, POLYBRAID 1" ID (SEE NOTE)	*04720-011-69-16
26	2	HOSE CLAMP (RANGE: 13/16" TO 1-1/2")	04730-719-06-09
27	1	DRAIN FITTING WELDMNT	05700-021-84-61
28	1	TEE, 1-1/2" BRASS F-NPT	04730-011-69-93
29	1	NIPPLE, 1-1/2" CLOSE BRASS	04730-207-40-00
30	1	ELBOW, 90 DEG STREET, BRASS 1-1/2" NPT	04730-206-32-00
31	NOTE*	CONDUIT, 1/2" FLEX 2 (SEE NOTE)	*05975-003-33-36
32	3	CLAMP, 1" NYLON	04730-002-41-88
33	2	FITTING, 1/2" STRAIGHT TWIST / SNAP	05975-003-33-27


\*NOTE: Order lengths of Hose or Conduit by measuring the lengths in the field and add an additional 1 foot to ensure any custom cut lengths are accounted for.

**PARTS SECTION: SIDE LOADER DRIVE LINKAGE**

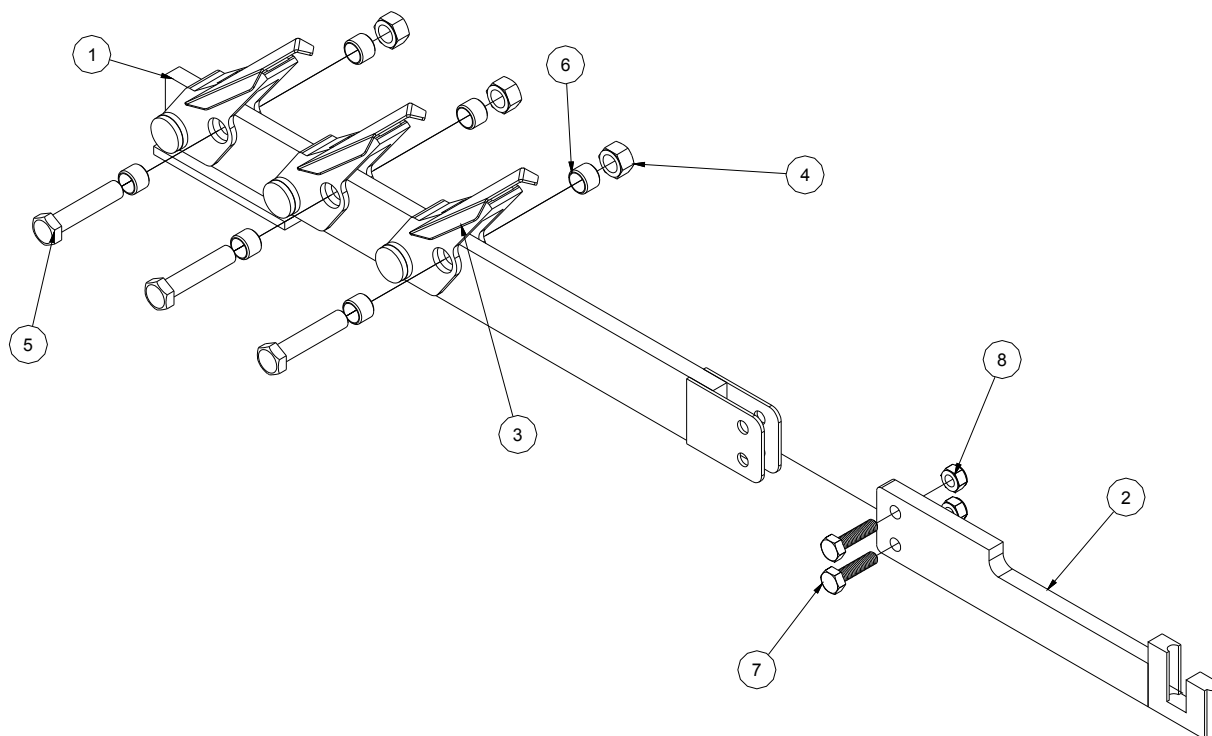

Item	QTY	Description	Part Number
1	1	PAWL BAR, SIDE LOADER	05700-021-86-88
2	1	DRIVE LINKAGE, SIDE LOADER	05700-001-99-16
3	3	PAWL DOG w/WING	05700-021-86-79
4	3	LOCKNUT, 3/8-16 w/NYLON INSERT	05310-011-72-55
5	3	BOLT, 3/8-16 x 1-3/4" LONG HEX HEAD	05306-011-36-94
6	6	SPACER, PAWL BAR DOG	05700-011-71-45
7	3	SCREW, 1/4-20 x 1" LONG HEX HEAD	05305-274-27-00
8	3	LOCKNUT, 1/4-20 HEX w/NYLON INSERT	05310-374-01-00

**PARTS SECTION: STEAM HEATING COIL ASSEMBLY**

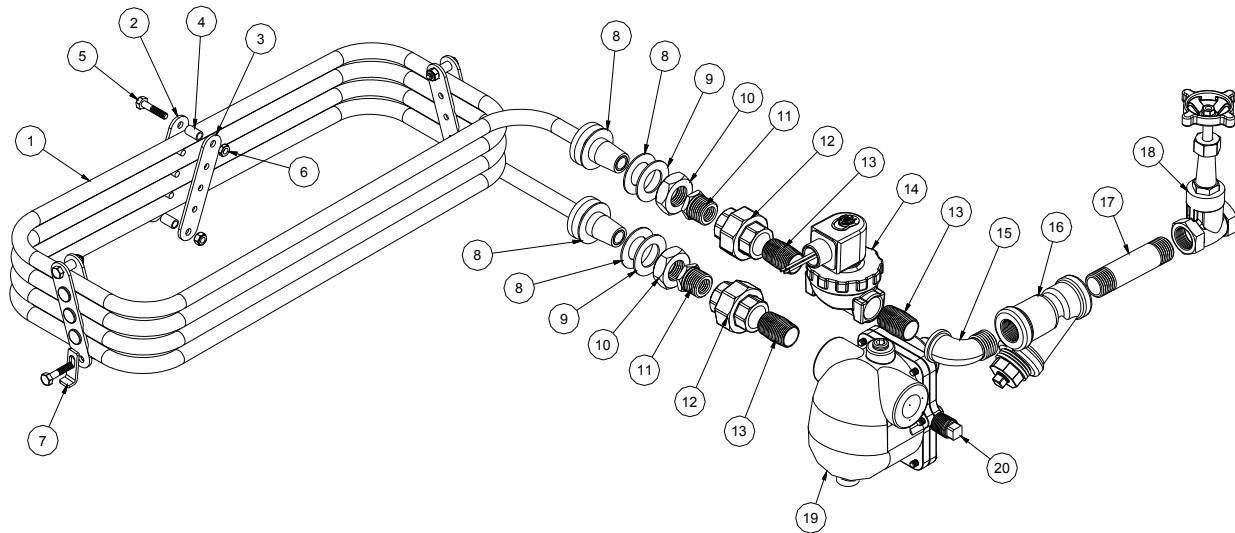


Item	QTY	Description	Part Number
1	1	STEAM COIL WELDMENT	05700-003-83-70
2	3	STEAM COIL SPACER WELDMENT	05700-003-83-33
3	3	PLATE, STEAM COIL SPACER	05700-003-83-32
4	6	SLEEVE, 1/4" ID x 5/8" LONG	05700-003-83-35
5	6	BOLT, 1/4-20 x 1-1/4 HEX HEAD	05305-274-22-00
6	6	LOCKNUT, 1/4-20 LOW PROFILE W/NYLON INSERT	05310-374-02-00
7	1	BRACKET, STEAM COIL ADJUSTMENT	05700-003-83-79
8	4	GASKET, STEAM COIL	05700-001-17-86
9	2	WASHER, STEAM COIL ADAPTER	05700-001-17-87
10	2	NUT, STEAM COIL ADAPTER	05310-011-17-85
11	2	REDUCER, 3/4 NPTM x 1/2 NPTF BLACK IRON	04730-911-02-34
12	2	UNION, 3/4 NPT BLACK IRON	04730-912-01-00
13	3	NIPPLE, CLOSE 3/4 NPT BLACK IRON	04730-907-01-00
14	1	VALVE, 3/4 STEAM 110VOLT COIL	04820-011-87-39
15	1	ELBOW, 3/4 NPT STREET, BLACK IRON	04730-011-87-37
16	1	Y-STRAINER, 3/4 NPT STEAM	04730-217-01-32
17	1	NIPPLE, 3/4 NPT x 4" LONG, BLACK IRON	04730-907-02-34
18	1	VALVE, GATE 3/4 NPT STEAM	04820-100-19-00
19	1	TRAP, STEAM 3/4 NPT	06680-500-02-77
20	1	PLUG, 3/4 NPT SQUARE HEAD, BLACK IRON	04730-002-86-59

**PARTS SECTION: BOOSTER HEATER OPTION (ELECTRIC)**

This hose connects to the Main Inlet Plumbing solenoid valve. (See page 37)

This hose connects to the Final Rinse Plumbing. (See page 44)

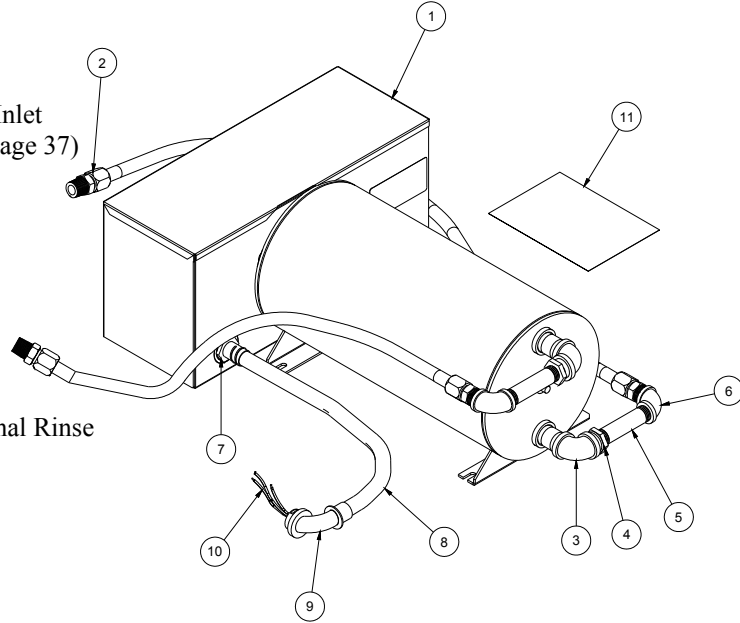


Item	QTY	Description	Part Number
1	1	BOOSTER HEATER	SEE CHART BELOW
2	2	HOSE, 1/2 x 42" SS BRAIDED W/PTFE, MALE SWIVEL	04720-003-76-09
3	2	ELBOW, 3/4 NPT 90 DEGREE BRASS	04730-206-13-00
4	2	BUSHING, 3/4 MNPT x 1/2 FNPT HEX BRASS	04730-002-56-27
5	2	NIPPLE, 1/2 NPT x 4" LONG BRASS	04730-207-04-00
6	2	ELBOW, 1/2 NPT 90 DEGREE BRASS	04730-011-42-96
7	1	FITTING, 3/4 STRAIGHT QT SNAP (HEYCO-8495)	05975-003-77-46
8	1	CONDUIT, FLEX2 1/2 x 24" LONG	05700-003-79-40
9	1	FITTING, 3/4 90 DEGREE QT SNAP (HEYCO-8510)	05975-003-77-45
10	3	WIRE, 10AWG BLK SRML FIBERGLASS (3 FEET)	06145-003-13-97
11	1	SCHEMATIC (REFER TO THE BOOSTER HEATER SCHEMATIC PAGES FOR PART NUMBER)	

BOOSTER HEATER	Part Number
12 kW (40 degree F Rise) 208V 3-PHASE	04540-003-76-58
12 kW (40 degree F Rise) 240V 3-PHASE	04540-003-76-60
12 kW (40 degree F Rise) 480V 3-PHASE	04540-003-76-62
12 kW (40 degree F Rise) 208V 1-PHASE	04540-003-76-57
12 kW (40 degree F Rise) 240V 1-PHASE	04540-003-76-59
17.3 kW (70 degree F Rise) 208V 3-PHASE	04540-003-76-64
18 kW (70 degree F Rise) 240V 3-PHASE	04540-003-76-66
18 kW (70 degree F Rise) 480V 3-PHASE	04540-003-76-68
18 kW (70 degree F Rise) 208V 1-PHASE	04540-003-76-63
18 kW (70 degree F Rise) 240V 1-PHASE	04540-003-76-64



**PARTS SECTION: STEAM BOOSTER HEATER OPTION**

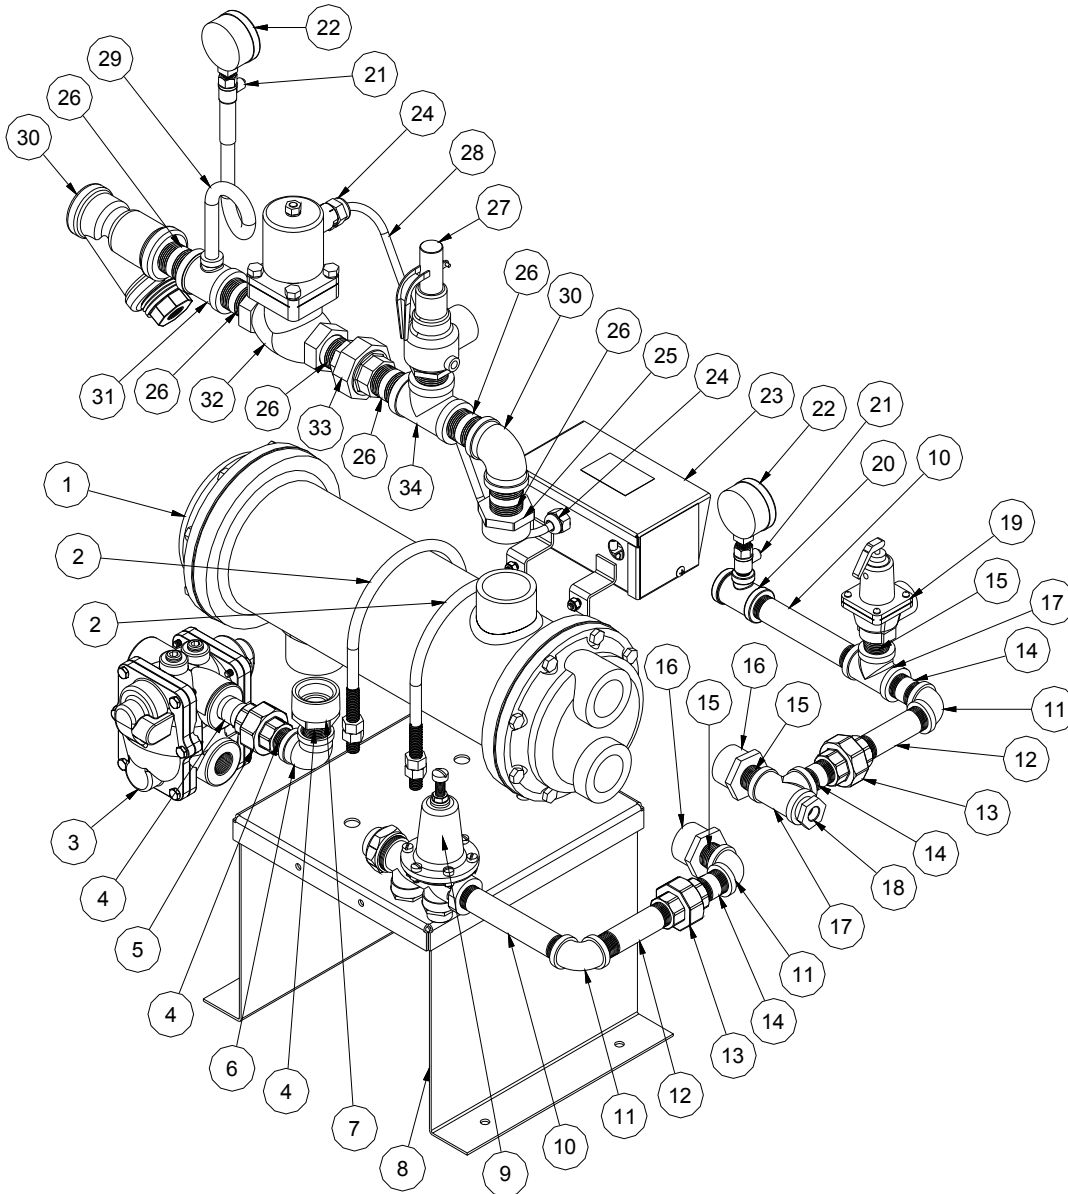

Item	QTY	Description	Part Number
1	1	STEAM BOOSTER HEATER, ST-T120	04420-002-43-94
2	2	U-BOLT, 1/2-13 THREAD, ZINC COATED	05306-002-89-27
3	1	STEAM TRAP, 3/4 NPT-F & T TYPE	06680-500-02-77
4	3	NIPPLE, CLOSE 3/4 NPT, BLACK IRON	04730-907-01-00
5	1	UNION, 3/4 NPT, BLACK IRON	04730-912-01-00
6	1	ELBOW, 90 DEG. 3/4 NPT, BLACK IRON	04730-906-10-34
7	1	REDUCER, 1-1/2 NPT-M x 3/4 NPT-F, BLACK IRON	04730-002-36-81

**Technical Manual (07610-003-78-18)**


**PARTS SECTION: STEAM BOOSTER HEATER OPTION (CONTINUED)**

<b>Item</b>	<b>QTY</b>	<b>Description</b>	<b>Part Number</b>
8	1	W-PLATFORM, J120 STEAM BOOSTER	05700-002-36-72
9	1	REGULATING VALVE, 3/4 NPT-F	04820-100-01-06
10	2	NIPPLE, 3/4 NPT x 6" LONG BRASS	05700-001-26-74
11	3	ELBOW, 90 DEG. 3/4 NPT BRASS	04730-206-13-00
12	2	NIPPLE, 3/4 NPT x 4" LONG BRASS	04730-207-05-00
13	2	UNION, 3/4 NPT BRASS	04730-212-05-00
14	3	NIPPLE, 3/4NPT x 2" LONG BRASS	04730-207-46-00
15	3	NIPPLE, CLOSE 3/4 NPT x 1-3/8 NPT BRASS	04730-207-34-00
16	2	BUSHING, HEX 1 1/4 X 3/4 REDUCER	04730-011-88-80
17	2	TEE, BRASS, 3/4 X 3/4 X 3/4	04730-211-01-34
18	1	ADAPTER, 3/8 FNPT X 3/4 NPT BRASS	04730-011-89-19
19	1	VALVE, STEAM RELIEF 3/4 EDP-0274751	04820-100-07-06
20	1	TEE, BRASS, 3/4 X 3/4 X 1/4	04730-211-04-00
21	2	VALVE, BALL TEST COCK 1/4 BRONZE	04810-011-72-67
22	2	PRESSURE GAUGE, 1/4 NPT-M 0-100 PSI	06685-111-88-34
23	1	A-CONTROL, J120 ASSEMBLY (MAJOR COMPONENTS ARE LISTED BELOW)	05700-002-98-95
23A	1	THERMOSTAT, CORKSCREW 351-254461	06680-500-01-77
23B	1	SWITCH, DPDT	05930-011-49-55
23C	1	LIGHT, SOLICO RED INDICATING	05945-111-21-57
23D	1	TERMINAL BLOCK, 2-POLE	05940-500-09-61
23F	1	GROUND LUG	05940-200-76-00
24	2	FITTING,3213 .231X.394 HEYCO	05975-011-49-03
25	1	REDUCER, 1-1/2 MNPT x 1 FNPT BLACK IRON	04730-002-36-79
26	6	NIPPLE, CLOSE 1 NPT X 2 BLACK IRON	04730-907-08-34
27	1	ELBOW, 1 NPT 90 DEG, BLACK IRON	04730-906-03-34
28	1	VALVE, SAFETY RELIEF 1 NPT	04820-100-01-35
29	1		05700-003-22-96
30	1	COUPLING, 1/4 NPT BLACK IRON	04730-904-01-04
31	1	SIPHON TUBE,PIGTAIL 1/4NPT BLACK IRON	04730-907-14-34
32	1	Y'STRAINER, 1 NPT STEAM BLACK IRON	04730-217-02-32
33	1	TEE, 1 X 1 X 1/4 NPT, BLACK IRON	04730-911-01-00
34	1	VALVE, 120V 1" NPT BRONZE STEAM	04810-002-92-23
35	1	UNION, 1 NPT BLACK IRON	04730-912-01-34
36	1	TEE, 1" NPT BLACK IRON	04730-911-01-34

**BOOSTER HEATER SCHEMATIC (3-PHASE)**

**USE THIS SCHEMATIC FOR THE FOLLOWING BOOSTER HEATER OPTIONS:**


- 208V 60HZ 3-PHASE 12kW (40° RISE)
- 230V 60HZ 3-PHASE 12kW (40° RISE)
- 460V 60HZ 3-PHASE 12kW (40° RISE)
  
- 208V 60HZ 3-PHASE 18kW (70° RISE)
- 230V 60HZ 3-PHASE 18kW (70° RISE)
- 460V 60HZ 3-PHASE 18kW (70° RISE)

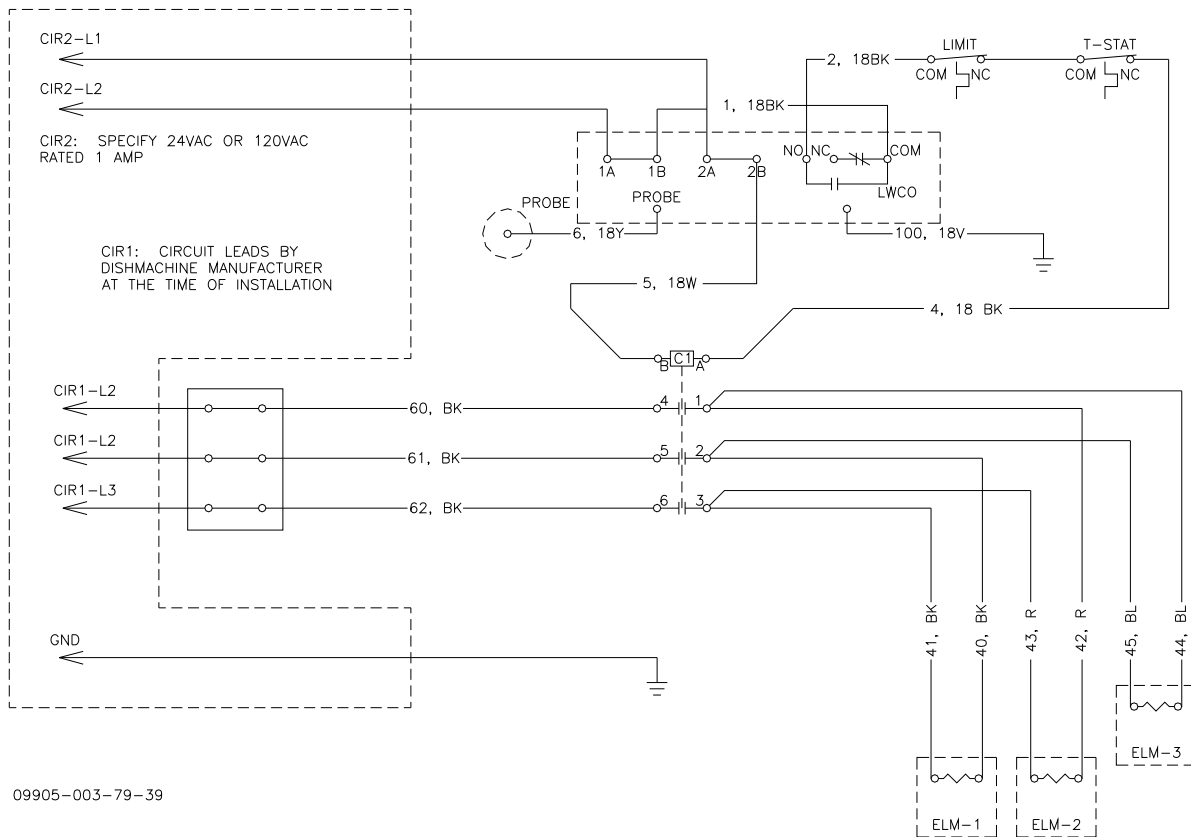

**BOOSTER HEATER SCHEMATIC (1-PHASE 12kW)**

**USE THIS SCHEMATIC FOR THE FOLLOWING BOOSTER HEATER OPTIONS:**


- 208V 60HZ 1-PHASE 12kW (40° RISE)
- 230V 60HZ 1-PHASE 12kW (40° RISE)

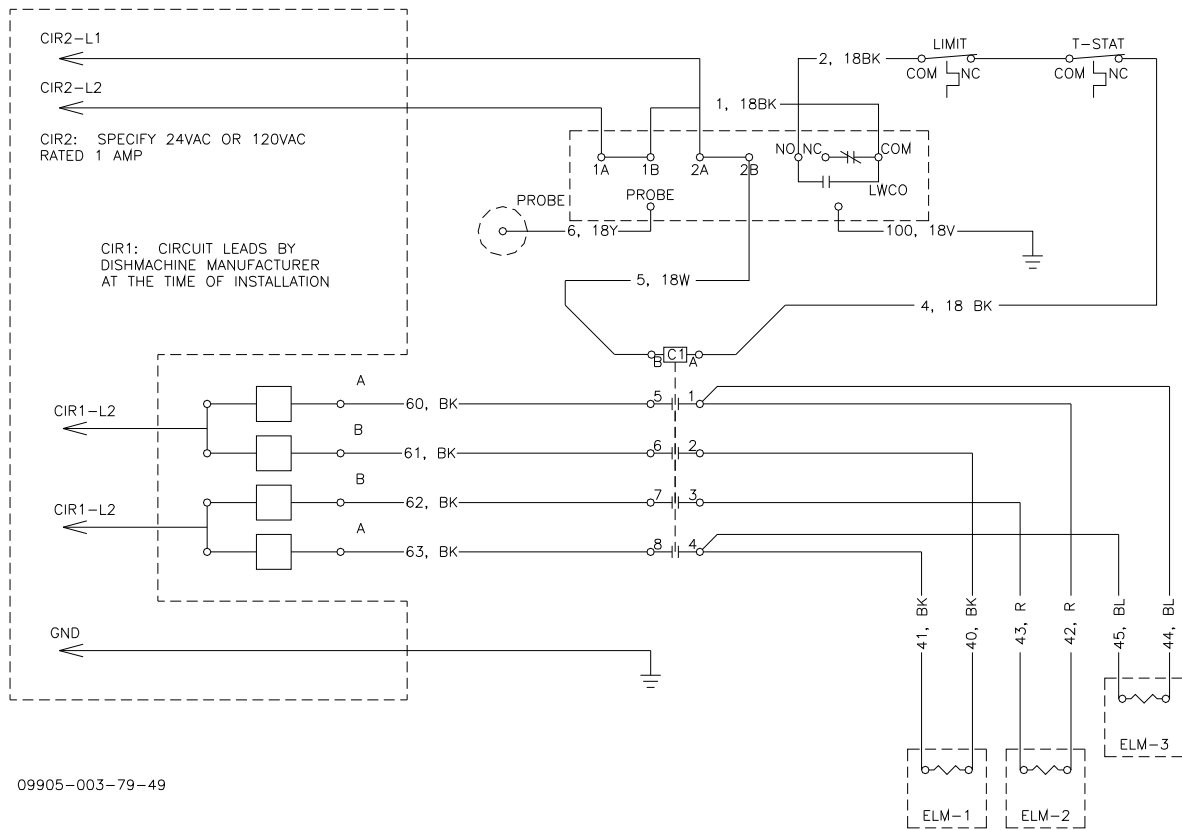


**BOOSTER HEATER SCHEMATIC (1-PHASE 18kW)**

**USE THIS SCHEMATIC FOR THE FOLLOWING BOOSTER HEATER OPTIONS:**


- 208V 60HZ 1-PHASE 18kW (70° RISE)
- 230V 60HZ 1-PHASE 18kW (70° RISE)

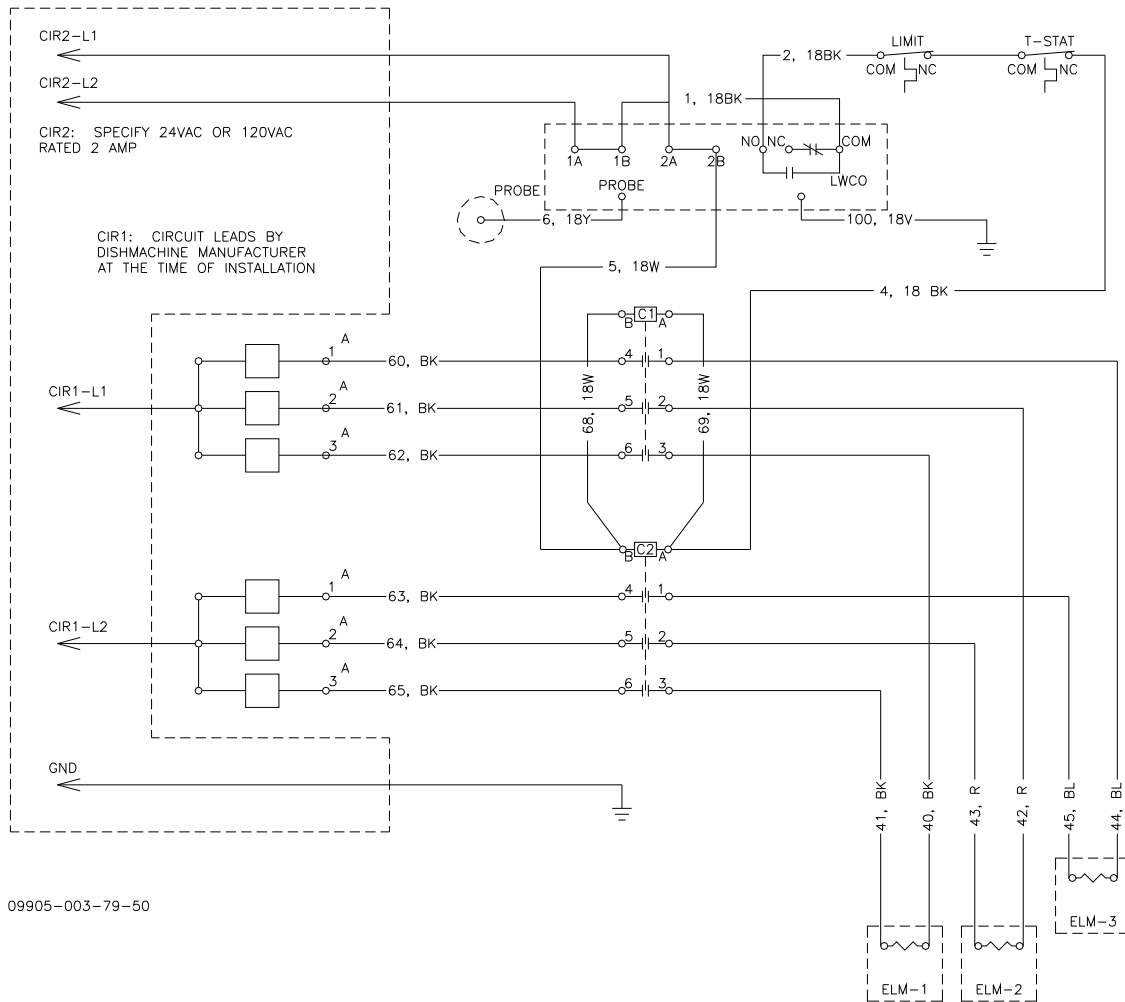

STEAM BOOSTER HEATER SCHEMATIC

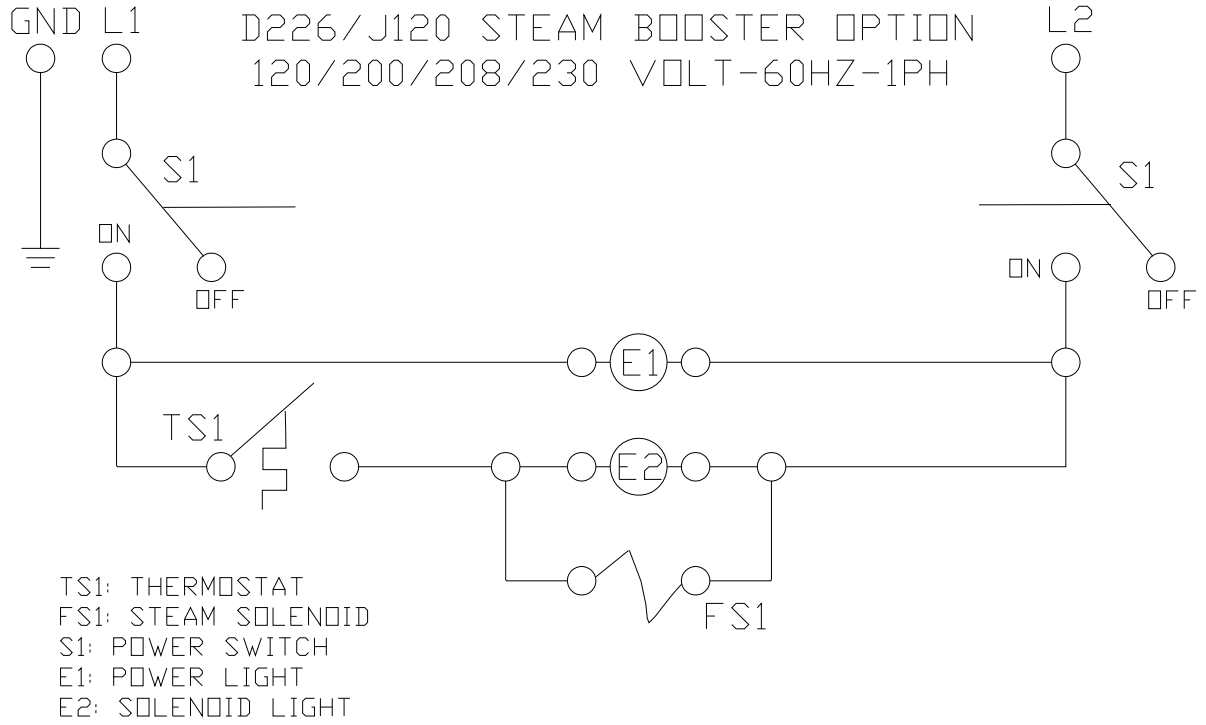


TEMPERATURE BOARD

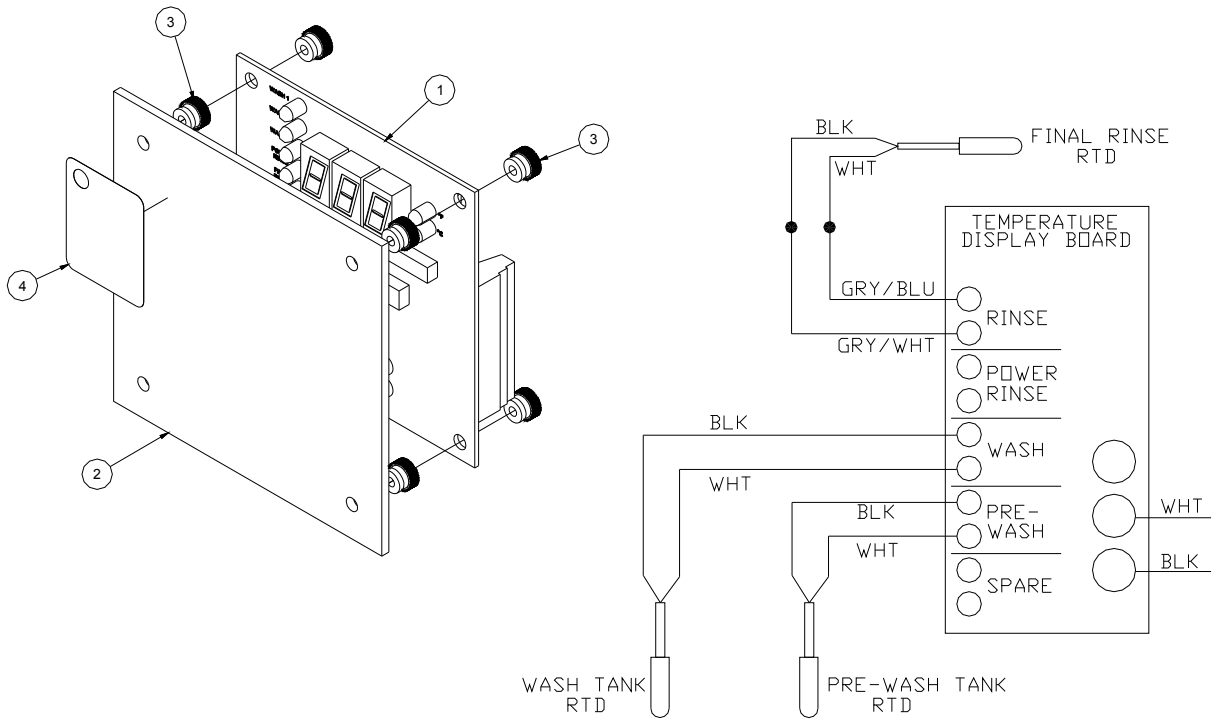

Item	QTY	Description	Part Number
1	1	CYCLIC TEMPERATURE BOARD	06685-002-74-86
2	1	GAUGE COVER, RED	05700-002-75-62
3	8	NUT, THUMB 6-32 NYLON	05310-002-83-12
4	1	DECAL, TEMPERATURE DISPLAY	09905-003-79-03
5	2 (44" Units) 3 (66" Units)	RTD TEMPERATURE PROBE (NOT SHOWN)	06680-002-16-80


**SCHEMATIC, PHOTOCELL TABLE LIMIT SWITCH OPTION**

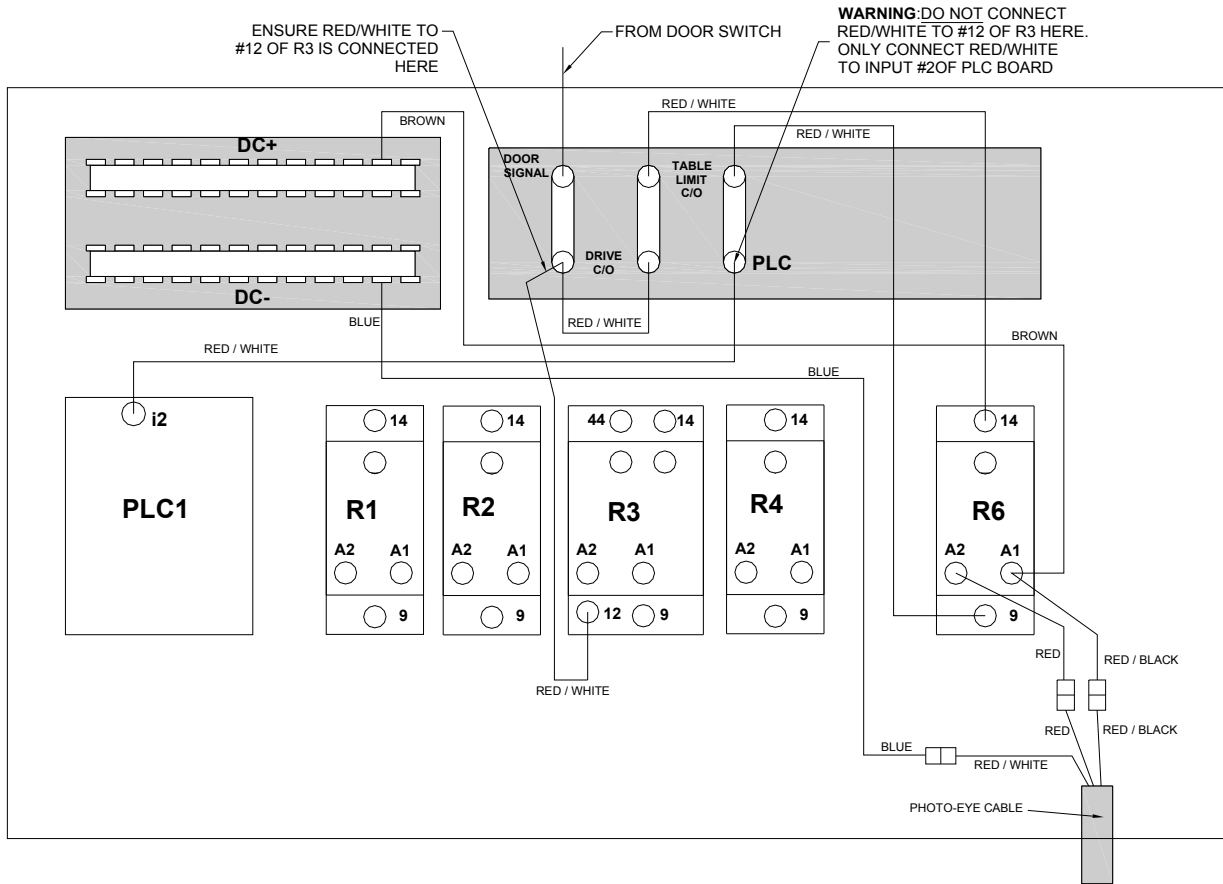




Technical Manual (07610-003-78-18)

**SCHEMATIC, 44" ELECTRICALLY HEATED (208/230/460 VOLT, 60 HZ, 3 PHASE)**

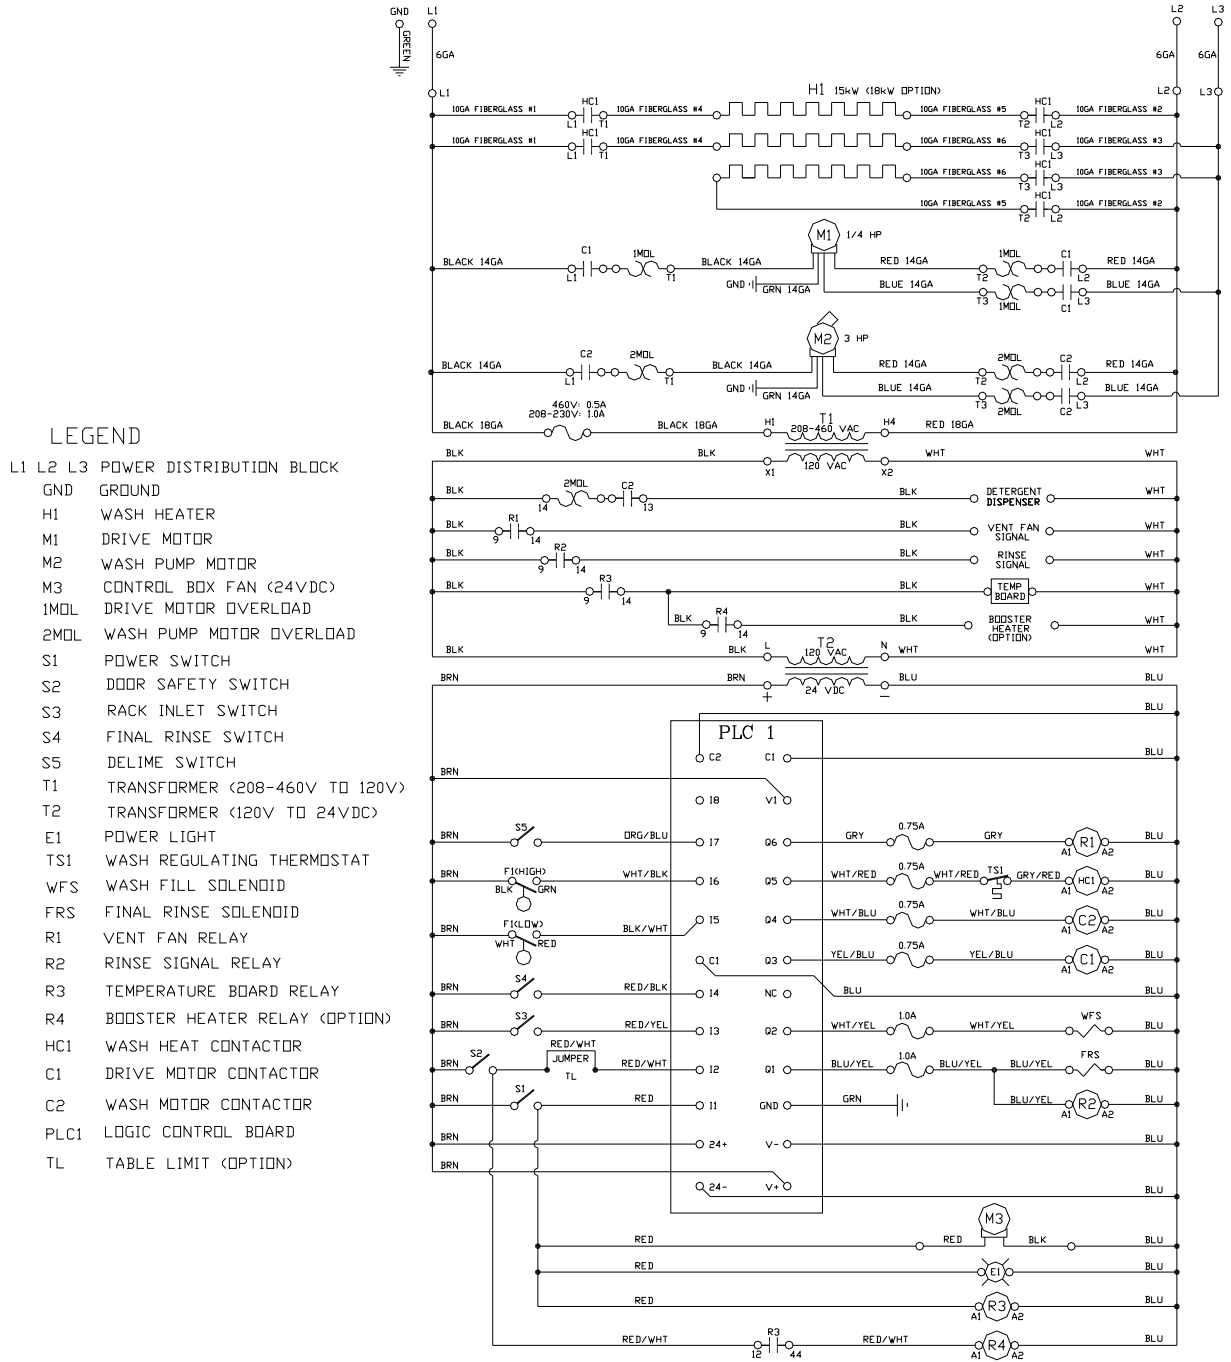

Technical Manual (07610-003-78-18)


**SCHEMATIC, 44" ELECTRICALLY HEATED (208/230 VOLT, 60 HZ, 1 PHASE)**

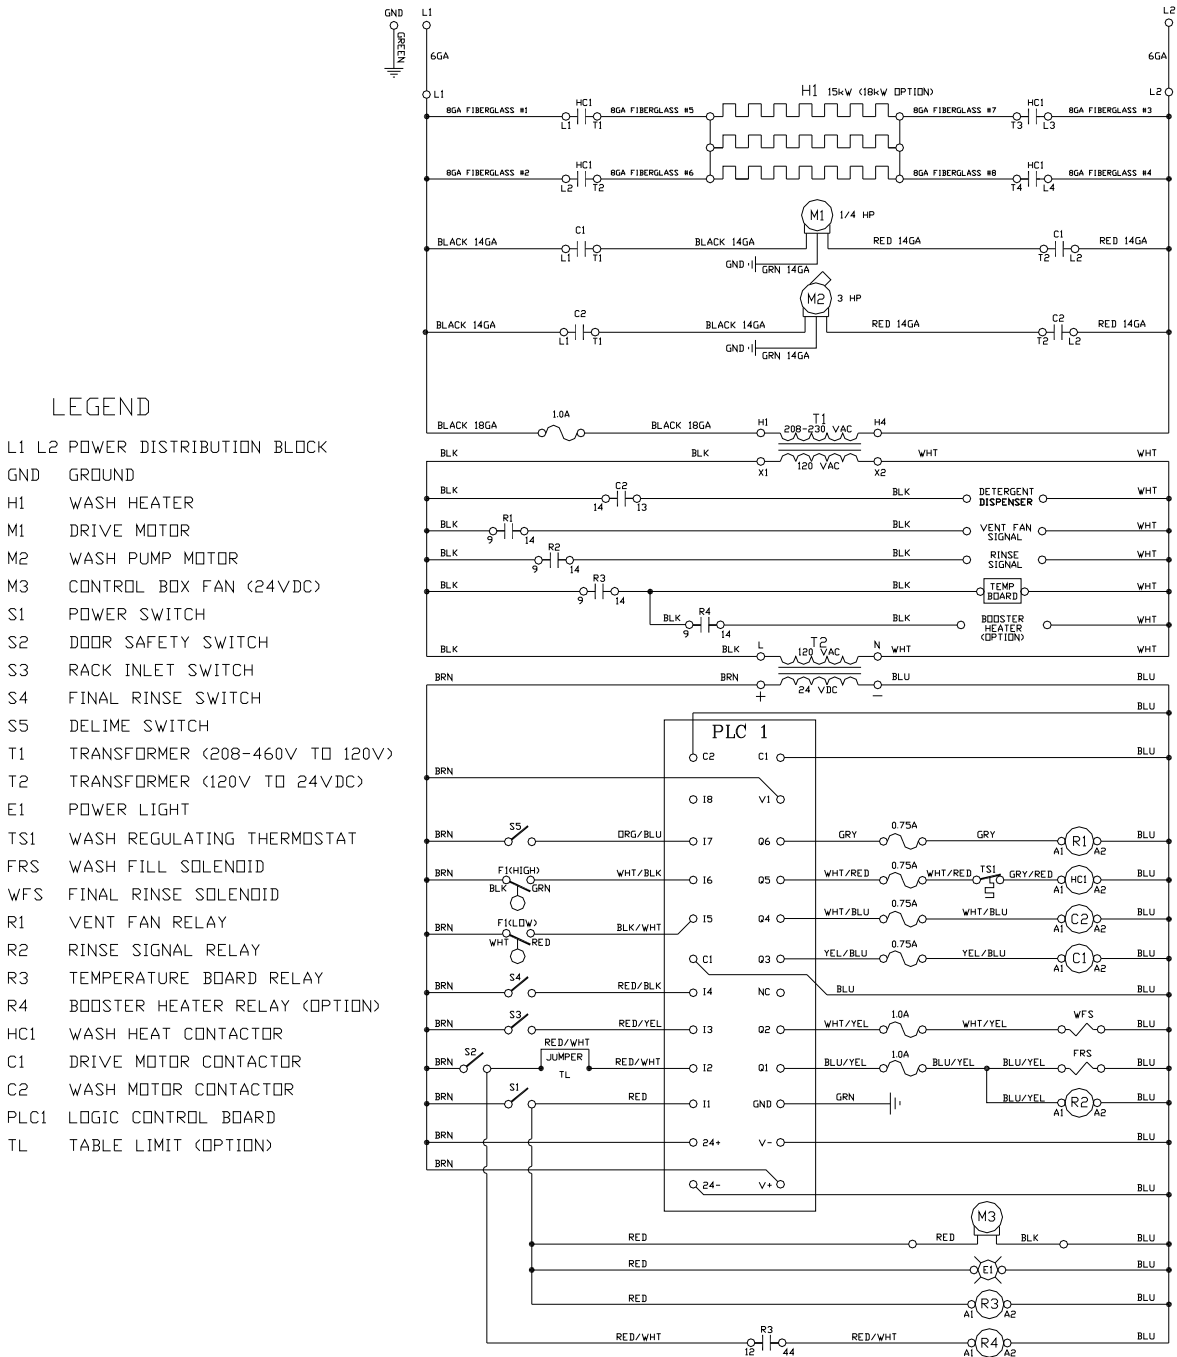

Technical Manual (07610-003-78-18)

SCHMATIC, 44" STEAM HEATED (208/230/460 VOLT, 60 HZ, 3 PHASE)

- LEGEND**
- L1 L2 L3 POWER DISTRIBUTION BLOCK
  - GND GROUND
  - M1 DRIVE MOTOR
  - M2 WASH PUMP MOTOR
  - M3 CONTROL BOX FAN (24VDC)
  - 1MOL DRIVE MOTOR OVERLOAD
  - 2MOL WASH PUMP MOTOR OVERLOAD
  - S1 POWER SWITCH
  - S2 DOOR SAFETY SWITCH
  - S3 RACK INLET SWITCH
  - S4 FINAL RINSE SWITCH
  - S5 DELIME SWITCH
  - T1 TRANSFORMER (208-460V TO 120V)
  - T2 TRANSFORMER (120V TO 24VDC)
  - E1 POWER LIGHT
  - TS1 WASH REGULATING THERMOSTAT
  - WSS WASH TANK STEAM SOLENOID
  - WFS WASH FILL SOLENOID
  - FRS FINAL RINSE SOLENOID
  - R1 VENT FAN RELAY
  - R2 RINSE SIGNAL RELAY
  - R3 TEMPERATURE BOARD RELAY
  - R4 BOOSTER HEATER RELAY (OPTION)
  - R5 WASH TANK STEAM RELAY
  - C1 DRIVE MOTOR CONTACTOR
  - C2 WASH MOTOR CONTACTOR
  - PLC1 LOGIC CONTROL BOARD
  - TL TABLE LIMIT (OPTION)

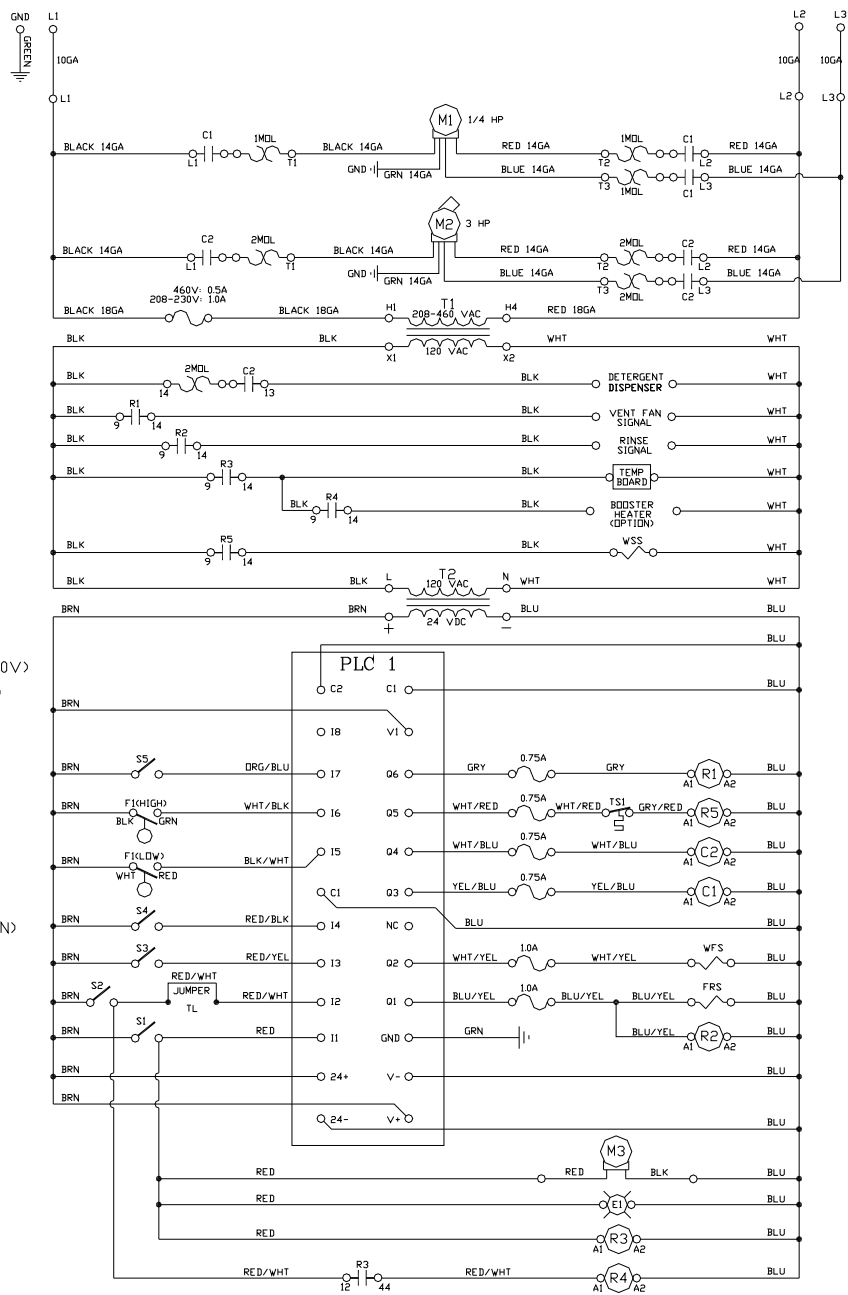


Technical Manual (07610-003-78-18)


**SCHEMATIC, 44" STEAM HEATED (208/230 VOLT, 60 HZ, 1 PHASE)**

LEGEND

- L1 L2 POWER DISTRIBUTION BLOCK
- GND GROUND
- M1 DRIVE MOTOR
- M2 WASH PUMP MOTOR
- M3 CONTROL BOX FAN (24VDC)
- S1 POWER SWITCH
- S2 DOOR SAFETY SWITCH
- S3 RACK INLET SWITCH
- S4 FINAL RINSE SWITCH
- S5 DELIME SWITCH
- T1 TRANSFORMER (208-460V TO 120V)
- T2 TRANSFORMER (120V TO 24VDC)
- E1 POWER LIGHT
- TS1 WASH REGULATING THERMOSTAT
- WSS WASH TANK STEAM SOLENOID
- WFS WASH FILL SOLENOID
- FRS FINAL RINSE SOLENOID
- R1 VENT FAN RELAY
- R2 RINSE SIGNAL RELAY
- R3 TEMPERATURE BOARD RELAY
- R4 BOOSTER HEATER RELAY (OPTION)
- R5 WASH TANK STEAM RELAY
- C1 DRIVE MOTOR CONTACTOR
- C2 WASH MOTOR CONTACTOR
- PLC1 LOGIC CONTROL BOARD
- TL TABLE LIMIT (OPTION)

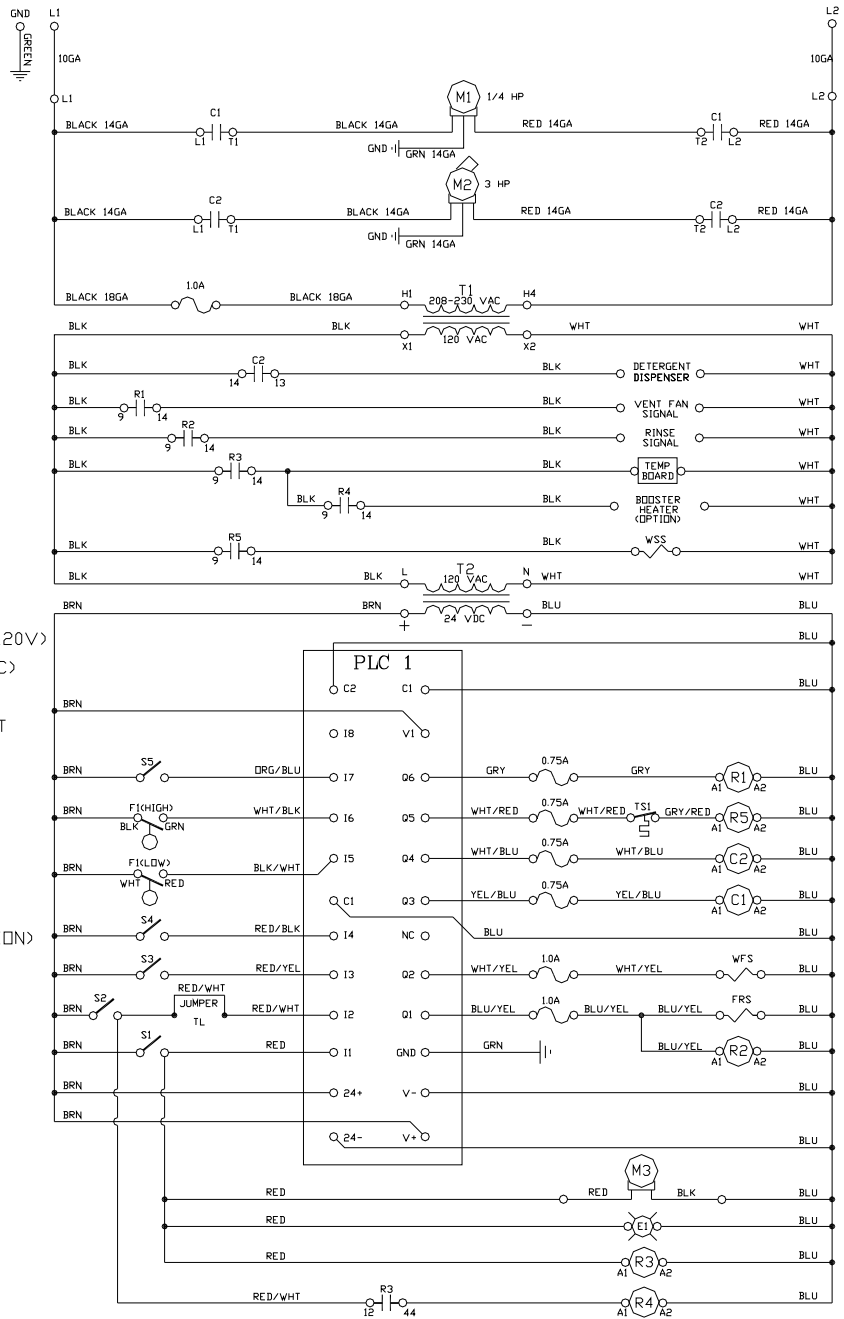


**SCHEMATIC, 66" ELECTRICALLY HEATED (208/230/460 VOLT, 60 HZ, 3 PHASE)**

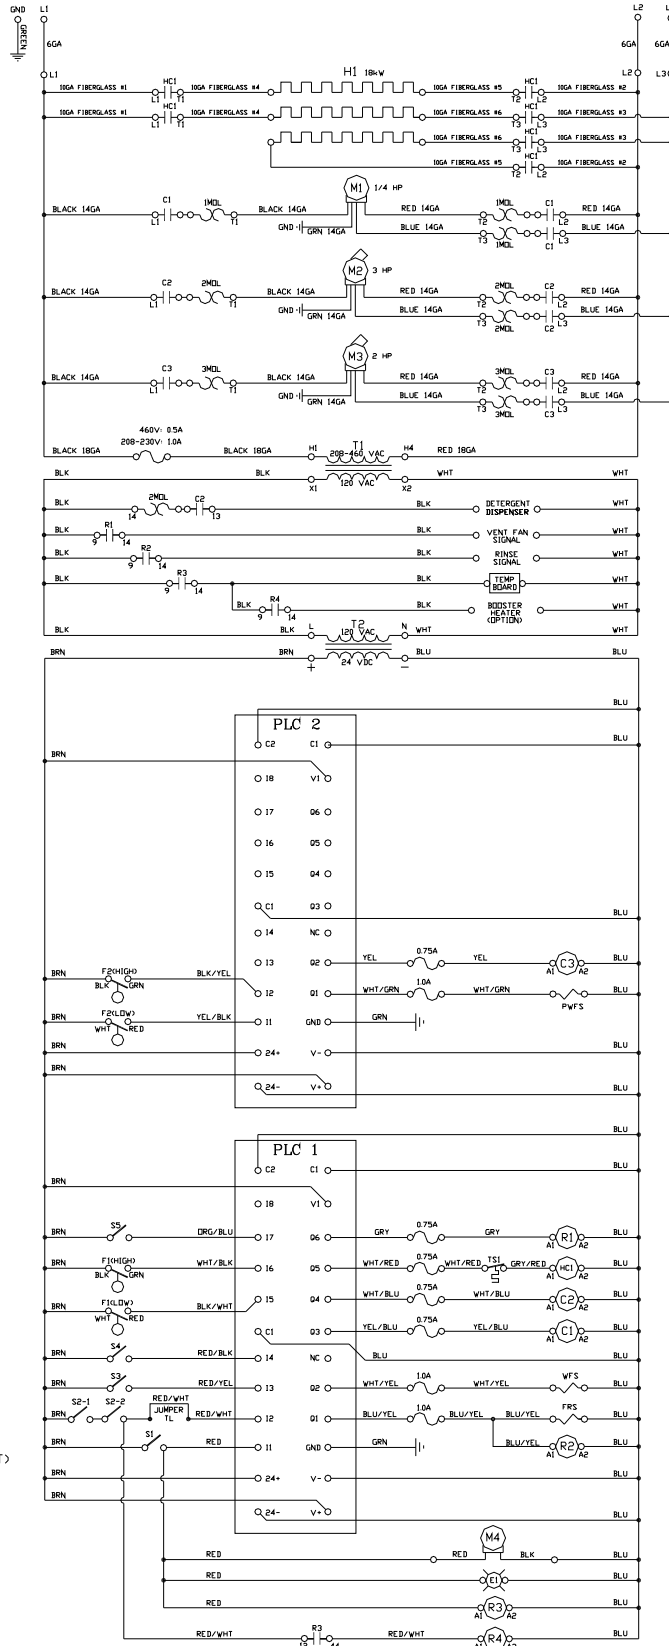

**LEGEND**

- L1 L2 L3 POWER DISTRIBUTION BLOCK
- GND GROUND
- H1 WASH HEATER
- M1 DRIVE MOTOR
- M2 WASH PUMP MOTOR
- M3 PRE-WASH PUMP MOTOR
- M4 CONTROL BOX FAN (24VDC)
- 1MDL DRIVE MOTOR OVERLOAD
- 2MDL WASH PUMP MOTOR OVERLOAD
- 3MDL PRE-WASH PUMP MOTOR OVERLOAD
- S1 POWER SWITCH
- S2-1 DOOR SAFETY SWITCH (WASH)
- S2-2 DOOR SAFETY SWITCH (PRE-WASH)
- S3 RACK INLET SWITCH
- S4 FINAL RINSE SWITCH
- S5 DELIME SWITCH
- T1 TRANSFORMER (208-460V TO 120V)
- T2 TRANSFORMER (120V TO 24VDC)
- F1 WASH TANK FLOAT
- F2 PRE-WASH TANK FLOAT
- E1 POWER LIGHT
- TS1 WASH REGULATING THERMOSTAT
- PWFS PRE-WASH FILL SOLENOID
- WFS WASH FILL SOLENOID
- FRS FINAL RINSE SOLENOID
- R1 VENT FAN RELAY
- R2 RINSE SIGNAL RELAY
- R3 TEMPERATURE BOARD RELAY
- R4 BOOSTER HEATER RELAY (OPTION)
- HC1 WASH HEAT CONTACTOR
- C1 DRIVE MOTOR CONTACTOR
- C2 WASH MOTOR CONTACTOR
- C3 PRE-WASH MOTOR CONTACTOR
- PLC1 LOGIC CONTROL BOARD
- PLC2 LOGIC CONTROL BOARD (EXPANSION UNIT)
- TL TABLE LIMIT (OPTION)


SCHEMATIC, 66" ELECTRICALLY HEATED (208/230 VOLT, 60 HZ, 1 PHASE)

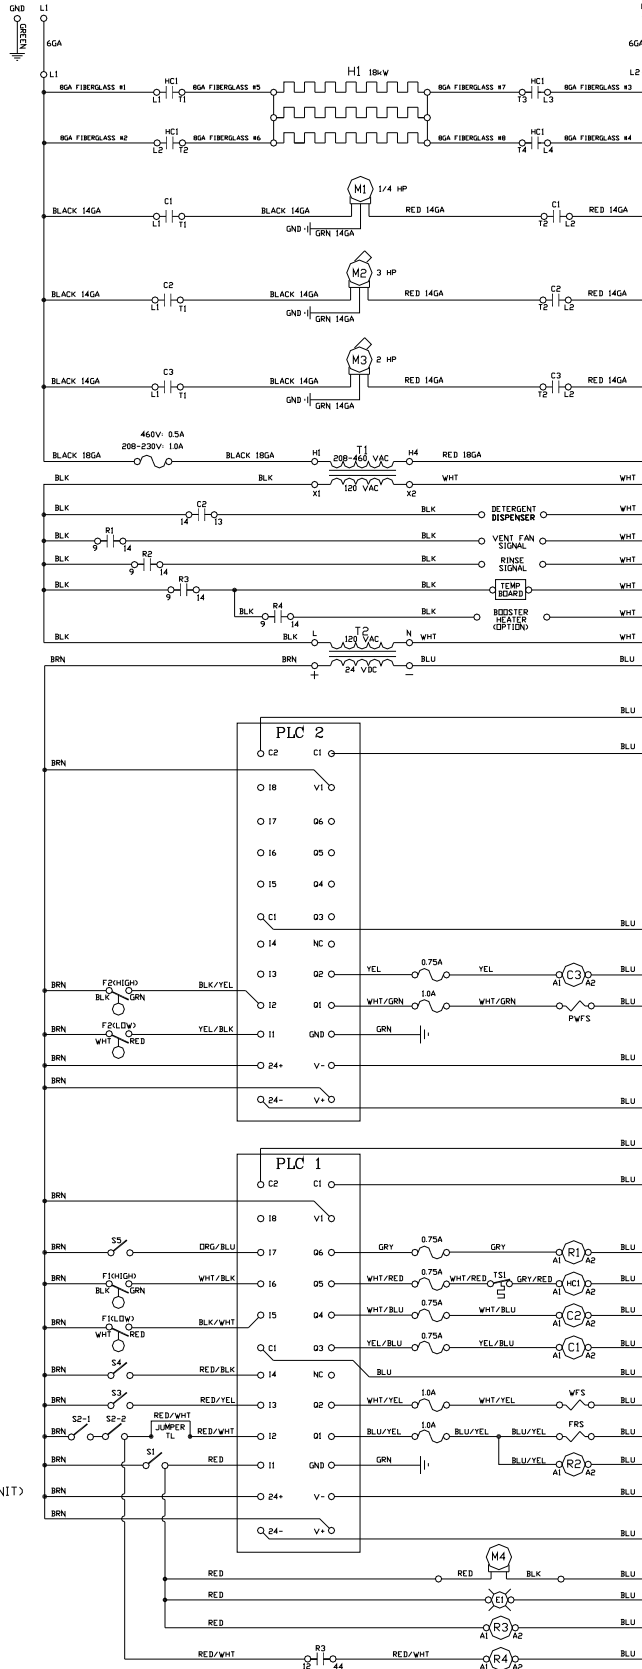

LEGEND

- L1 L2 L3 POWER DISTRIBUTION BLOCK
- GND GROUND
- H1 WASH HEATER
- M1 DRIVE MOTOR
- M2 WASH PUMP MOTOR
- M3 PRE-WASH PUMP MOTOR
- M4 CONTROL BDX FAN (24VDC)
- S1 POWER SWITCH
- S2-1 DOOR SAFETY SWITCH (WASH)
- S2-2 DOOR SAFETY SWITCH (PRE-WASH)
- S3 RACK INLET SWITCH
- S4 FINAL RINSE SWITCH
- S5 DELIME SWITCH
- T1 TRANSFORMER (208-460V TO 120V)
- T2 TRANSFORMER (120V TO 24VDC)
- F1 WASH TANK FLOAT
- F2 PRE-WASH TANK FLOAT
- E1 POWER LIGHT
- TS1 WASH REGULATING THERMOSTAT
- PWFS PRE-WASH FILL SOLENOID
- WFS WASH FILL SOLENOID
- FRS FINAL RINSE SOLENOID
- R1 VENT FAN RELAY
- R2 RINSE SIGNAL RELAY
- R3 TEMPERATURE BOARD RELAY
- R4 BOOSTER HEATER RELAY (OPTION)
- HC1 WASH HEAT CONTACTOR
- C1 DRIVE MOTOR CONTACTOR
- C2 WASH MOTOR CONTACTOR
- C3 PRE-WASH MOTOR CONTACTOR
- PLC1 LOGIC CONTROL BOARD
- PLC2 LOGIC CONTROL BOARD (EXPANSION UNIT)
- TL TABLE LIMIT (OPTION)

SCHMATIC, 66" STEAM HEATED (208/230/460 VOLT, 60 HZ, 3 PHASE)

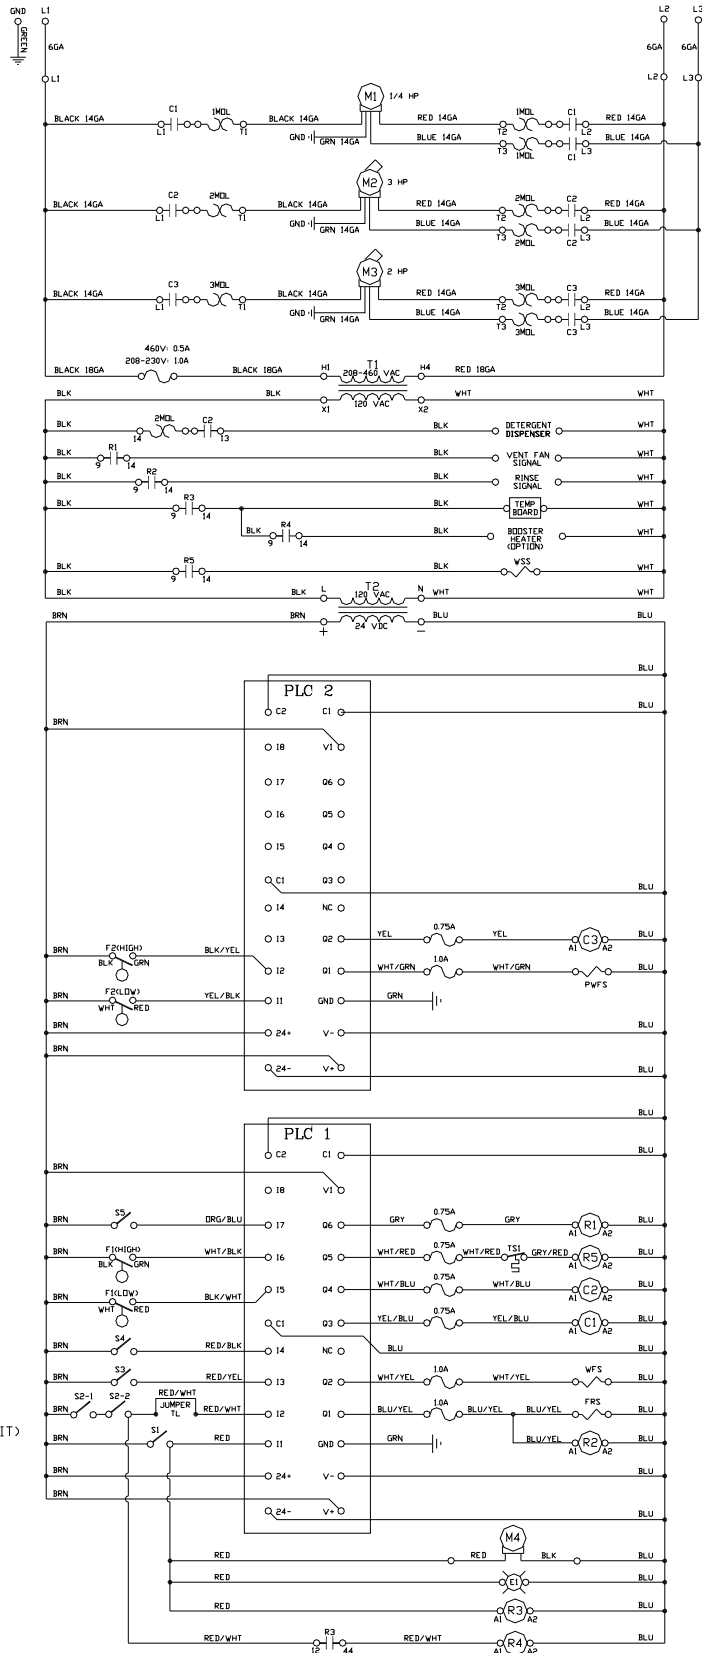


LEGEND

- L1 L2 L3 POWER DISTRIBUTION BLOCK
- GND GROUND
- M1 DRIVE MOTOR
- M2 WASH PUMP MOTOR
- M3 PRE-WASH PUMP MOTOR
- M4 CONTROL BOX FAN (24VDC)
- 1MDL DRIVE MOTOR OVERLOAD
- 2MDL WASH PUMP MOTOR OVERLOAD
- 3MDL PRE-WASH PUMP MOTOR OVERLOAD
- S1 POWER SWITCH
- S2-1 DOOR SAFETY SWITCH (WASH)
- S2-2 DOOR SAFETY SWITCH (PRE-WASH)
- S3 RACK INLET SWITCH
- S4 FINAL RINSE SWITCH
- S5 DELIME SWITCH
- T1 TRANSFORMER (208-460V TO 120V)
- T2 TRANSFORMER (120V TO 24VDC)
- F1 WASH TANK FLOAT
- F2 PRE-WASH TANK FLOAT
- E1 POWER LIGHT
- TS1 WASH REGULATING THERMOSTAT
- PWFS PRE-WASH FILL SOLENOID
- WFS WASH FILL SOLENOID
- FRS FINAL RINSE SOLENOID
- WSS WASH TANK STEAM SOLENOID
- R1 VENT FAN RELAY
- R2 RINSE SIGNAL RELAY
- R3 TEMPERATURE BOARD RELAY
- R4 BOOSTER HEATER RELAY (OPTION)
- R5 WASH TANK STEAM RELAY
- C1 DRIVE MOTOR CONTACTOR
- C2 WASH MOTOR CONTACTOR
- C3 PRE-WASH MOTOR CONTACTOR
- PLC1 LOGIC CONTROL BOARD
- PLC2 LOGIC CONTROL BOARD (EXPANSION UNIT)
- TL TABLE LIMIT (OPTION)

**SCHEMATIC, 66" STEAM HEATED (208/230 VOLT, 60 HZ, 1 PHASE)**

- LEGEND**
- L1 L2 L3 POWER DISTRIBUTION BLOCK
  - GND GROUND
  - M1 DRIVE MOTOR
  - M2 WASH PUMP MOTOR
  - M3 PRE-WASH PUMP MOTOR
  - M4 CONTROL BDX FAN (24VDC)
  - S1 POWER SWITCH
  - S2-1 DOOR SAFETY SWITCH (WASH)
  - S2-2 DOOR SAFETY SWITCH (PRE-WASH)
  - S3 RACK INLET SWITCH
  - S4 FINAL RINSE SWITCH
  - S5 DELIME SWITCH
  - T1 TRANSFORMER (208-460V TO 120V)
  - T2 TRANSFORMER (120V TO 24VDC)
  - C1 DRIVE MOTOR CONTACTOR
  - C2 WASH MOTOR CONTACTOR
  - C3 PRE-WASH MOTOR CONTACTOR
  - F1 WASH TANK FLOAT
  - F2 PRE-WASH TANK FLOAT
  - E1 POWER LIGHT
  - TS1 WASH REGULATING THERMOSTAT
  - PWFS PRE-WASH FILL SOLENOID
  - WFS WASH FILL SOLENOID
  - FRS FINAL RINSE SOLENOID
  - WSS WASH TANK STEAM SOLENOID
  - R1 VENT FAN RELAY
  - R2 RINSE SIGNAL RELAY
  - R3 TEMPERATURE BOARD RELAY
  - R4 BOOSTER HEATER RELAY (OPTION)
  - R5 WASH TANK STEAM RELAY
  - PLC1 LOGIC CONTROL BOARD
  - PLC2 LOGIC CONTROL BOARD (EXPANSION UNIT)
  - TL TABLE LIMIT (OPTION)

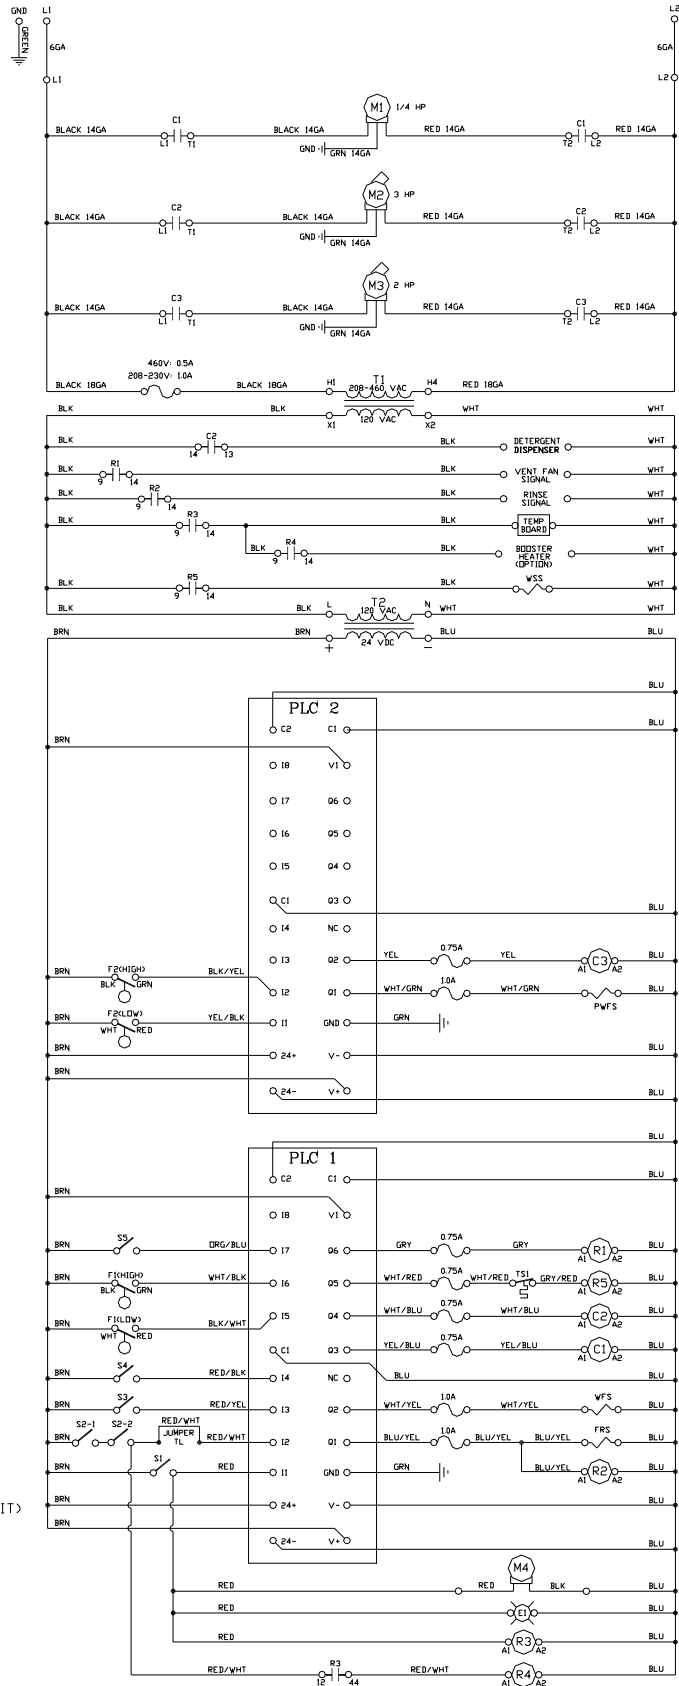



MAINTENANCE & REPAIR CENTERS

ALABAMA

**JONES-McLEOD APPLIANCE  
SVC**

1616 7TH AVE. NORTH  
BIRMINGHAM, AL 35203  
(205) 251-0159  
800-821-1150  
FAX: (205) 322-1440  
service@jones-mcleod.com

**JONES-McLEOD APPLIANCE  
SVC**

854 LAKESIDE DRIVE  
MOBILE, AL 36693  
(251) 666-7278  
800-237-9859  
FAX: (251) 661-0223

ALASKA

**RESTAURANT APPLIANCE  
SERVICE**

7219 ROOSEVELT WAY NE  
SEATTLE, WA 98115  
(206) 524-8200  
800-433-9390  
FAX: (206) 525-2890  
info@restappl.com

ARIZONA

**AUTHORIZED COMMERCIAL  
FOOD EQMT. SVC**

4832 SOUTH 35TH STREET  
PHOENIX, AZ 85040  
(602) 234-2443  
800-824-8875  
FAX: (602) 232-5862  
acsboss@aol.com

**GCS SERVICE INC.**

PHOENIX, AZ  
(602) 474-4510  
800-510-3497  
FAX: (602) 470-4511

ARKANSAS

**BROMLEY PARTS & SVC**

10TH AND RINGO  
P.O. BOX 1688  
LITTLE ROCK, AR 72202  
(501) 374-0281  
800-482-9269  
FAX: (501) 374-8352  
service@bromleyparts.com  
parts@bromleyparts.com

**GCS SERVICE, INC.**

3717 CHERRY ROAD  
MEMPHIS, TN 38118  
(901) 366-4587  
800-262-9155  
FAX: (901) 366-4588

CALIFORNIA

**BARKERS FOOD MACHINERY  
SERVICES**

5367 SECOND STREET  
IRWINDALE, CA 91706  
(626) 960-9390  
800-258-6999  
FAX: (626) 337-4541  
service@barkers.com

**GCS SERVICE INC.**

LOS ANGELES, CA  
(213) 683-2090  
800-327-1433  
FAX: (213) 683-2099

**GCS SERVICE INC.**

SANTA ANA, CA  
(714) 542-1798  
800-540-0719  
FAX: (714) 542-4787

**GCS SERVICE INC.**

S. SAN FRANCISCO, CA  
(650) 635-0720  
800-969-4427  
FAX: (650) 871-4019

**COMMERCIAL APPLIANCE  
SERVICE, INC.**

6507 PACIFIC AVENUE,  
Suite 102  
STOCKTON, CA 95207  
(916) 567-0203  
(800) 464-2222  
(916) 567-0266 FAX

**GCS SERVICE INC.**

SAN DIEGO, CA  
(858) 549-8411  
800-422-7278  
FAX: (858) 549-2323

**INDUSTRIAL ELECTRIC SVC.**

5662 ENGINEER DRIVE  
HUNTINGTON BEACH, CA  
92649  
(714) 379-7100  
(800) 457-3783  
FAX: (714) 379-7109

**P & D APPLIANCE SVC**

100 SOUTH LINDEN AVE.  
S. SAN FRANCISCO, CA 94080  
(650) 635-1900  
800-424-1414  
FAX: (650) 635-1919  
pndappl@aol.com

**P & D APPLIANCE**

4220-C ROSEVILLE ROAD  
NORTH HIGHLANDS, CA  
95660  
(916) 974-2772  
800-824-7219  
FAX:(916) 974-2774

**COMMERCIAL APPLIANCE  
SERVICE, INC.**

281 LATHROP WAY, #100  
SACRAMENTO, CA 95815  
(916) 567-0203  
(800) 464-2222  
(916) 567-0324 FAX

COLORADO

**GCS SERVICE INC.**

SHERIDAN, CO  
(303) 371-9054  
800-972-5314  
FAX: (303) 371-4754

**HAWKINS COMMERCIAL  
APPLIANCE SERVICE**

3000 S. WYANDOT ST.  
ENGLEWOOD, CO 80110  
(303) 781-5548  
(800) 624-2117  
FAX: (303) 761-5561  
johns@hawkinscommercial.com

**METRO APPLIANCE SERVICE**

1640 S BROADWAY  
DENVER, CO 80210  
(303) 778-1126  
800-525-3532  
FAX: (303) 778-0268  
metroappls@aol.com

CONNECTICUT

**GCS SERVICE INC.**

HARTFORD, CT  
(860) 549-5575  
800-423-1562  
FAX: (860) 527-6355

**SUPERIOR KITCHEN SERVICE INC.**

22 THOMPSON ROAD  
WINDSOR, CT 06088  
(888) 590-1899  
(888) 590-1996 FAX

DELAWARE

**FOOD SERVICE EQMT.**

2101 PARKWAY SOUTH  
BROOMALL, PA 19008  
(610) 356-6900  
FAX: (610) 356-2038  
dancerule@aol.com

**GCS SERVICE INC.**

PHILADELPHIA, PA  
(215)925-6217  
800-441-9115  
FAX: (215) 925-6208

**ELMER SCHULTZ SERVICE**

36 BELMONT AVE.  
WILLMINGTON, DE 19804  
(302) 655-8900  
800-225-0599  
FAX: (302) 656-3673  
elmer2@erols.com

**EMR SERVICE DIVISION**

106 WILLIAMSPORT CIRCLE  
SALISBURY, MD 21804  
(410) 543-8197  
FAX: (410) 548-4038

FLORIDA

**COMMERCIAL APPLIANCE  
SERVICE**

8416 LAUREL FAIR CIRCLE  
BLDG 6, SUITE 114  
TAMPA, FL 33610  
(813) 663-0313  
800-282-4718  
FAX: (813) 663-0212  
commercialappliance@world-  
net.att.net

**GCS SERVICE INC**

MIAMI, FL  
(305) 621-6666  
800-766-8966  
FAX: (305) 621-6656

**GCS SERVICE INC**

ORLANDO, FL  
(407) 841-2551  
800-338-7322  
FAX: (407) 423-8425

**NASS PARTS AND SERVICE, INC.**

1144 BELVILLE ROAD, UNIT 359  
DAYTONA BEACH, FL 32114  
(386) 226-2642  
(800) 432-2795  
(386) 736-7695 FAX

**GCS SERVICE INC**

TAMPA, FL  
(813) 626-6044  
800-282-3008  
FAX: (813) 621-1174

MAINTENANCE & REPAIR CENTERS

**JONES-MCLEOD APPLIANCE SVC**

854 LAKESIDE DRIVE  
MOBILE, AL 36693  
(251) 666-7278  
800-237-9859  
FAX: (251) 661-0223  
service@jones-mcleod.com

**NASS PARTS AND SERVICE, INC.**

1108 SOUTH WOODS AVENUE  
ORLANDO, FL 32805  
(407) 425-2681  
(800) 432-2795  
(407) 425-3463 FAX

**NASS PARTS AND SERVICE, INC.**

1376 HEIDE AVENUE  
PALM BAY, FL 32907  
(321) 952-2012  
(800) 432-2795  
(321) 953-0266 FAX

**GEORGIA**

**GCS SERVICE INC**

ATLANTA, GA  
(770) 452-7322  
800-334-3599  
FAX: (770) 452-7473

**HERITAGE FOODSERVICE GROUP  
OF ATLANTA**

2100 NORCROSS PKWY. SUITE 130  
NORCROSS, GA 30071  
(770) 368-1465  
866-388-9837  
FAX: (866) 388-9838

**WHALEY FOODSERVICE REPAIRS**

109-A OWENS INDUSTRIAL DRIVE  
SAVANNAH, GA 31405  
(912) 447-0827  
888-765-0036  
FAX: (912) 447-0826

**PIERCE PARTS & SERVICE**

2422 ALLEN ROAD  
MACON, GA 31216  
(478) 781-6003  
800-368-2512  
FAX: (478) 781-7186

**HAWAII**

**FOOD EQMT. PARTS &  
SERVICE CO.**

300 PUUHALE RD.  
HONOLULU, HI 96819  
(808) 847-4871

FAX: (808) 842-1560  
fepsco@hula.net

**IDAHO**

**RESTAURANT APPLIANCE SVC.**

7219 ROOSEVELT WAY NE

SEATTLE, WA 98115  
(206) 524-8200  
800-433-9390  
FAX: (206) 525-2890  
info@restappl.com

**RON'S SERVICE**

703 E 44TH STREET STE 10  
GARDEN CITY, ID 83714  
(208) 375-4073  
FAX: (208) 375-4402

**ILLINOIS**

**CONES REPAIR SVC.**

2408 40TH AVE.  
MOLINE, IL 61265  
(309) 797-5323  
800-716-7070  
FAX: (309)797-3631  
jackb@cones.com

**EICHENAUER SERVICES INC.**

130 S OAKLAND ST.  
DECATUR, IL 62522  
(217) 429-4229  
800-252-5892  
FAX: (217) 429-0226  
esi@esiquality.com

**GCS SERVICE INC.**

ELMHURST, IL  
(630) 941-7800  
800-942-9689  
FAX: (630) 941-6048

**GCS SERVICE INC.**

ST. LOUIS, MO  
(314) 683-7444  
800-284-4427  
FAX: (314) 638-0135

**GENERAL PARTS, INC.**

248 JAMES STREET  
BENSONVILLE, IL 60106  
(630) 595-3300  
(800) 880-3604  
FAX: (630)595-0006

**INDIANA**

**GCS SERVICE INC.**

INDIANAPOLIS, IN  
(317) 545-9655  
800-727-8710  
FAX: (317) 549-6286

**GCS SERVICE INC.**

8622 LA PAS TRAIL  
INDIANAPOLIS, IN 46268  
(317) 290-8060  
(800) 410-9794  
(317) 290-8085 FAX

**IOWA**

**GOODWIN TUCKER GROUP**

2900 DELAWARE AVENUE  
DES MOINES, IA 50317  
(515) 262-9308  
800-372-6066  
FAX: (515) 262-2936  
parts@goodwintucker.com

**CONES REPAIR SVC.**

1056 27TH AVENUE SW  
CEDAR RAPIDS, IA 52404  
(319) 365-3325

800-747-3326  
FAX: (319) 365-0885

**KANSAS**

**GCS SERVICE INC.**

KANSAS CITY, MO  
(816) 920-5999  
800-229-6477  
FAX: (816) 920-7387

**GENERAL PARTS, INC.**

1101 E. 13TH STREET  
KANSAS CITY, MO 64106  
(816) 421-5400  
(800) 279-9967  
(816) 421-1270 FAX

**KENTUCKY**

**CERTIFIED SERVICE CENTER**

127 DISHMAN LANE  
BOWLING GREEN, KY 42101  
(270) 783-0012  
(877) 907-0012  
FAX: (270) 783-0058

**CERTIFIED SERVICE CENTER**

RAMCO BUSINESS PARK  
4283 PRODUCE ROAD  
LOUISVILLE, KY 40218  
(502) 964-7007  
800-637-6350  
FAX: (502) 964-7202  
cwalker@certifiedsc.com  
droenigk@certifiedsc.com

**CERTIFIED SERVICE CENTER**

1051 GOODWIN DRIVE  
LEXINGTON, KY 40505  
(606) 254-8854  
800-432-9269  
FAX: (606) 231-7781  
jatkins@certifiedsc.com

**GCS SERVICE INC.**

LOUISVILLE, KY  
(502) 367-1788  
800-752-6160  
FAX: (502) 367-0400

**GCS SERVICE INC.**

LEXINGTON, KY  
(606) 255-0746  
800-432-9260  
FAX: (606) 255-0748

**LOUISIANA**

**HERITAGE SERVICE GROUP**

1532 RIVER OAKS WEST  
NEW ORLEANS, LA 70123  
(504) 734-8864  
(800) 499-2351  
(504) 733-2559 FAX

**MAINE**

**GCS SERVICE INC.**

CHELSEA, MA  
(617) 889-9393  
800-225-1155  
FAX: (617) 889-1222

**MASSACHUSETTS RESTAURANT  
SUPPLY**

34 SOUTH STREET  
SOMERVILLE, MA 02143  
(617) 868-1930  
800-338-6737  
FAX: (617) 686-5331

**PINE TREE FOOD EQUIPMENT**

175 LEWISTON ROAD  
GRAY, ME 04039  
(207) 657-6400  
(800) 540-5427  
(207) 657-5464 FAX

**MARYLAND**

**EMR SERVICE DIVISION**

700 EAST 25TH STREET  
BALTIMORE, MD 21218  
(410) 467-8080  
800-879-4994  
FAX: (410) 467-4191  
baltparts@emrco.com

MAINTENANCE & REPAIR CENTERS

**EMR SERVICE DIVISION**  
106 WILLIAMSPORT CIRCLE  
SALISBURY, MD 21804  
(410) 543-8197  
888-687-8080  
FAX: (410) 548-4038  
baltparts@emrco.com

**EMR SERVICE DIVISION**  
5316 Sunnyside Ave.  
Beltsville, MD 20715  
(301) 931-7000  
800-348-2365  
FAX: (301) 931-3060  
baltparts@emrco.com

**GCS SERVICE INC.**  
SILVER SPRING, MD  
(301) 585-7550 (DC)  
(410) 792-0338 (BALT)  
(800) 638-7278  
FAX: (301) 495-4410

**MASSACHUSETTS**

**ACE SERVICE CO.**  
95 HAMPTON AVE.  
NEEDHAM, MA 02494  
(781) 449-4220  
800-225-4510 MA & NH  
FAX: (781) 444-4789  
taceservice@aol.com

**MASSACHUSETTS RESTAURANT  
SUPPLY**  
34 SOUTH STREET  
SOMERVILLE, MA 02143  
(617) 868-1930  
800-338-6737  
FAX: (617) 868-5331

**GCS SERVICE INC.**  
CHELSEA, MA  
(617) 889-9393  
800-225-1155  
FAX: (617) 889-1222

**GCS SERVICE INC.**  
HARTFORD, CT  
(860) 549-5575  
800-723-1562  
FAX: (860) 527-6355

**SUPERIOR KITCHEN SERVICE INC.**  
399 FERRY STREET  
EVERETT, MA 02149  
(617) 389-1899  
(888) 590-1899  
(617) 389-1996 FAX

**MICHIGAN**

**GCS SERVICE INC.**  
LIVONIA, MI  
(248) 426-9500  
800-772-2936  
FAX: (248) 426-7555

**JACKSON SERVICE COMPANY**  
3980 BENSTEIN RD.  
COMMERCE TWSHP, MI 48382  
(248) 363-4159  
800-332-4053  
FAX: (248) 363-5448

**GCS SERVICE INC.**  
GRAND RAPIDS, MI  
(616) 241-0200  
800-823-4866  
FAX: (616) 241-0541

**MINNESOTA**

**GCS SERVICE INC.**  
MINNEAPOLIS, MN  
(612) 546-4221  
800-345-4221  
FAX: (612) 546-4286

**GENERAL PARTS, INC.**  
11311 HAMPSHIRE AVENUE SOUTH  
BLOOMINGTON, MN 55438-2456  
(952) 944-5800  
(800) 279-9980  
(800) 279-9980 FAX

**MISSISSIPPI**

**GCS SERVICE INC.**  
JACKSON, MS  
(601) 956-7800  
800-274-5954  
FAX: (601) 956-1200

**GCS SERVICE INC.**  
MEMPHIS, TN  
(901) 366-4587  
800-262-9155  
FAX: (901) 366-4588

**MISSOURI**

**GCS SERVICE INC.**  
KANSAS CITY, MO  
(816) 920-5999  
800-229-6477  
FAX: (816) 920-7387

**GCS SERVICE INC.**  
ST. LOUIS, MO  
(314) 638-7444  
800-284-4427  
FAX: (314) 638-0135

**KAEMMERLIN PARTS & SVC.**  
2728 LOCUST STREET  
ST. LOUIS, MO 63103  
(314) 535-2222  
FAX: (314) 535-6205  
petek@kps.stl.com

**GENERAL PARTS, INC.**  
1101 EAST 13TH STREET  
KANSAS CITY, MO 64106  
(816) 421-5400  
(800) 279-9967  
(816) 421-1270 FAX

**MONTANA**

**RESTAURANT APPLIANCE SVC.**  
7219 ROOSEVELT WAY NE  
SEATTLE, WA 98115  
(206) 524-8200  
800-433-9390  
FAX: (206) 525-2890  
info@restappl.com

**NEBRASKA**

**GOODWIN - TUCKER GROUP**  
7535 D STREET  
OMAHA, NE 68124  
(402) 397-2880  
800-228-0342  
FAX: (402) 397-2881  
askme@goodwintucker.com

**NEVADA**

**HI TECH COMMERCIAL SERVICE**  
1840 STELLA LAKE STREET  
NORTH LAS VEGAS, NV 89106  
(702) 649-4616  
(877) 924-4832  
FAX: (702) 649-4607  
larry@hitechnv.com

**HI TECH COMMERCIAL SERVICE**  
5454 LOUIE LANE  
RENO, NV 89511  
(775) 852-9696  
FAX: (775) 852-5104

**GCS SERVICE INC.**  
LAS VEGAS, NV  
(702) 450-3495  
800-500-9060  
FAX: (702) 450-3491

**NEW HAMPSHIRE**

**GCS SERVICE INC.**  
CHELSEA, MA  
(617)889-9393  
800-225-1155  
FAX: (617) 889-1222

**ACE SERVICE CO.**  
95 HAMPTON AVE.  
NEEDHAM, MA 02494  
(781) 449-4220  
800-225-4510 MA & NH  
FAX: (781) 444-4789  
taceservice@aol.com

**MASSACHUSETTS RESTAURANT  
SUPPLY**  
34 SOUTH STREET  
SOMERVILLE, MA 02143  
(617) 868-1930  
800-338-6737  
FAX: (617) 868-5331

**NEW JERSEY**

**JAY HILL REPAIRS**  
90 CLINTON RD.  
FAIRFIELD, NJ 07004  
(973) 575-9145  
800-836-0643  
FAX: (973) 575-5890  
jhrepair@aol.com

**GCS SERVICE INC.**  
EAST RUTHERFORD, NJ  
(973) 614-0003  
800-399-8294  
FAX: (973) 614-0230

**GCS SERVICE INC.**  
PHILADELPHIA, PA  
(215) 925-6217  
800-441-9115  
FAX: (215) 925-6208

**ELMER SCHULTZ SERVICES**  
201 W. WASHINGTON AVE.  
PLEASANTVILLE, NJ 08232  
(609) 641-0317  
800-378-1641  
FAX: (609) 641-8703  
elmer2@erols.com

**NEW YORK**

**APPLIANCE INSTALLATION  
AND SERVICE CORP.**  
1336 MAIN STREET  
BUFFALO, NY 14209  
(716) 884-7425  
800-722-1252  
FAX: (716) 884-0410  
ais@worldnet.att.net

MAINTENANCE & REPAIR CENTERS

**B.E.S.T. INC.**

3003 GENESEE STREET  
BUFFALO, NY 14225  
(716) 893-6464  
800-338-5011  
FAX: (716) 893-6466  
bestserv@aol.com

**DUFFY'S EQUIPMENT SVC.**

3138 ONEIDA STREET  
SAUQUOIT, NY 13456  
(315) 737-9401  
800-443-8339  
FAX: (315) 737-7132  
duffyequip@aol.com

**NORTHERN PARTS & SVC.**

21 NORTHERN AVENUE  
PLATTSBURGH, NY 12903  
(518) 563-3200  
800-634-5005  
FAX: (800) 782-5424  
info@northernparts.com

**GCS SERVICE INC.**

BROOKLYN, NY  
(718) 486-5220  
800-969-4271  
FAX: (718) 486-6772

**ALL SERVICE KITCHEN  
EQUIPMENT REPAIR**

10 CHARLES ST.  
NEW HYDE PARK, NY 11040  
(516) 378-1176  
FAX: (516) 378-1735

**ALL ISLAND REPAIRS**

40-9 BURT DRIVE  
DEER PARK, NY 11729  
(631) 242-5588  
FAX: (631) 242-6102

**NORTH CAROLINA**

**AUTHORIZED APPLIANCE**

**SERVICECENTER**  
1020 TUCKASEEGEE RD.  
CHARLOTTE, NC 28208  
(704) 377-4501  
(800) 532-6127  
FAX:(704) 377-4504

**AUTHORIZED APPLIANCE**

**SERVICECENTER**  
800 N. PERSON ST.  
RALEIGH, NC 27604  
(919) 834-3476  
FAX:(919) 834-3477

**AUTHORIZED APPLIANCE**

**SERVICECENTER**  
904 S. MARSHALL ST.  
WINSTON-SALEM, NC 27403  
(336) 725-5396  
FAX:(336) 721-1289

**AUTHORIZED APPLIANCE**

**SERVICECENTER**  
104 HINTON AVE.  
WILMINGTON, NC 28403  
(910) 313-1250  
FAX:(910) 313-6130

**WHALEY FOODSERVICE**

8334-K ARROWRIDGE BLVD  
CHARLOTTE, NC 28273  
(704) 529-6242  
FAX: (704) 529-1558  
info@whaleyfoodservice.com

**WHALEY FOODSERVICE REPAIRS**

203-D CREEK RIDGE RD.  
GREENSBORO, NC 27406  
(336) 333-2333  
FAX: (336) 333-2533  
info@whaleyfoodservice.com

**WHALEY FOODSERVICE REPAIRS**

335-105 SHERWEE DRIVE  
RALEIGH, NC 27603  
(919) 779-2266  
FAX: (919) 779-2224  
info@whaleyfoodservice.com

**WHALEY FOODSERVICE REPAIRS**

6418-101 AMSTERDAM WAY  
WILMINGTON, NC 28405  
(910) 791-0000  
FAX: (910) 791-6662  
info@whaleyfoodservice.com

**NORTH DAKOTA**

**GCS SERVICE INC.**

MINNEAPOLIS, MN  
(612) 546-4221  
800-345-4221  
FAX: (612) 546-4286

**GENERAL PARTS, INC.**

10 SOUTH 18TH STREET  
FARGO, ND 58103  
(701) 235-4161  
(800) 279-9987  
(701) 235-0539 FAX

**OHIO**

**CERTIFIED SERVICE CENTER**

890 REDNA TERRACE  
CINCINNATI, OH 45215  
(513) 772-6600  
800-543-2060  
FAX: (513) 612-6600  
sbarasch@certifiedsc.com

**CERTIFIED SERVICE CENTER**

171J-K NORTH HAMILTON RD.  
COLUMBUS, OH 43213  
(614) 751-3769  
(866) 862-1252  
FAX: (614) 751-5792  
jadkins@certifiedsc.com

**CERTIFIED SERVICE CENTER**

6025 N. DIXIE DRIVE  
DAYTON, OH 45414  
(937) 898-4040  
(800) 257-2611  
FAX: (937) 898-4177  
dharvey@certifiedsc.com

**COMMERCIAL PARTS & SVC.  
OF COLUMBUS**

5033 TRANSAMERICA DRIVE  
COLUMBUS, OH 43228  
(614) 221-0057  
800-837-8327  
FAX: (614) 221-3622

**GCS SERVICE INC.**

COLUMBUS, OH  
(614) 476-3225  
800-282-5406  
FAX: (614) 476-1196

**ELECTRICAL APPLIANCE  
REPAIR SVC.**

5805 VALLEY BELT ROAD  
CLEVELAND, OH 44131  
(216) 459-8700  
800-621-8259  
FAX: (216) 459-8707  
tomr@electappprep.com

**OKLAHOMA**

**HAGAR RESTAURANT EQMT.**

1229 W MAIN STREET  
OKLAHOMA CITY, OK 73106  
(405) 235-2184  
800-445-1791  
FAX: (405) 236-5592

**OREGON**

**RON'S SERVICE**

16364 SW 72ND AVE  
PORTLAND, OR 97224  
(503) 624-0890  
800-851-4118  
FAX: (503) 684-6107  
robinson@ronsservice.com

**PENNSYLVANIA**

**A.I.S. COMMERCIAL PARTS &  
SERVICE**

1816 WEST 26TH STREET  
ERIE, PA 16508  
(814) 456-3732  
800-332-3732  
FAX: (814) 452-4843  
aiserie@aol.com

**ELMER SCHULTZ SVC.**

540 NORTH 3RD STREET  
PHILADELPHIA, PA 19123  
(215) 627-5400  
FAX: (215) 627-5408  
elmer2@erols.com

**GCS SERVICE INC.**

PHILADELPHIA, PA  
(215) 925-6217  
800-441-9115  
FAX: (215) 925-6208

**GCS SERVICE INC.**

HARRISBURG, PA  
(717) 564-3282  
800-367-3225  
FAX: (717) 564-9286

**GCS SERVICE INC.**

PITTSBURGH, PA  
(412) 787-1970  
800-738-1221  
FAX: (412) 787-5005

**K & D PARTS AND SERVICE CO.**

1833-41 N CAMERON STREET  
HARRISBURG, PA 17103  
(717) 236-9039  
800-932-0503  
FAX: (717) 238-4367  
kdparts-service@paonline.com

**CLARK SERVICE & PARTS**

306 AIRPORT DRIVE  
BOX 10  
SMOKETOWN, PA 17576  
(717) 392-5590  
(717) 392-5735

MAINTENANCE & REPAIR CENTERS

RHODE ISLAND

**GCS SERVICE INC.**  
EAST PROVIDENCE, RI  
(401) 434-6803  
800-462-6012  
FAX: (401) 438-9400

**SUPERIOR KITCHEN SERVICE INC.**

669 ELMWOOD AVENUE  
PROVIDENCE, RI 02907  
(888) 590-1899  
(401) 781-1996 FAX

SOUTH CAROLINA

**AUTHORIZED APPLIANCE**

SERVICECENTER  
1811 TAYLOR ST.  
COLUMBIA, SC 29202  
(803) 254-8414  
FAX: (803) 254-5146

**AUTHORIZED APPLIANCE**

SERVICECENTER  
2249 AUGUSTA RD.  
GREENVILLE, SC 29605  
(864) 235-9616  
FAX: (864) 235-9623

**WHALEY FOODSERVICE REPAIRS**

I 26&US1  
P.O. BOX 4023  
WEST COLUMBIA, SC 29170  
(803) 791-4420  
800-877-2662  
FAX: (803) 794-4630  
info@whaleyfoodservice.com

**WHALEY FOODSERVICE REPAIRS**

748 CONGAREE ROAD  
GREENVILLE, SC 29607  
(864) 234-7011  
800-494-2539  
FAX: (864) 234-6662  
info@whaleyfoodservice.com

**WHALEY FOODSERVICE REPAIRS**

1406-C COMMERCE PL.  
MYRTLE BEACH, SC 29577  
(843) 626-1866  
FAX: (843) 626-2632  
info@whaleyfoodservice.com

**WHALEY FOODSERVICE REPAIRS**

4740-A FRANCHISE STREET  
N. CHARLESTON, SC 29418  
(843) 760-2110  
FAX: (843) 760-2255  
info@whaleyfoodservice.com

SOUTH DAKOTA

**GCS SERVICE INC.**

MINNEAPOLIS, MN  
(612) 546-4221  
800-345-4221  
FAX: (612) 546-4286

**GENERAL PARTS, INC.**

10 SOUTH 18TH STREET  
FARGO, ND 58103  
(701) 235-4161  
(800) 279-9987  
(701) 235-0539 FAX

TENNESSEE

**GCS SERVICE INC.**

MEMPHIS, TN  
(901) 366-4587  
800-262-9155  
FAX: (901) 366-4588

**GCS SERVICE INC.**

NASHVILLE, TN  
(615) 244-8050  
800-831-7174  
FAX: (615) 244-8885

TEXAS

**ARMSTRONG REPAIR CENTER**

5110 GLENMOUNT DRIVE  
HOUSTON, TX 77081  
(713) 666-7100  
800-392-5325  
FAX: (713) 661-0520  
gm@armstrongrepair.com

**COMMERCIAL KITCHEN REPAIR CO.**

1377 N BRAZOS  
P.O BOX 831128  
SAN ANTONIO, TX 78207  
(210) 735-2811  
800-292-2120  
FAX: (210) 735-7421  
brock@commercialkitchen.com

**GCS SERVICE INC.**

DALLAS, TX  
(972) 484-2954  
800-442-5026  
FAX: (972) 484-2531

**GCS SERVICE INC.**

HOUSTON, TX  
(713)785-9187  
800-868-6957  
FAX: (713) 785-3979

**GCS/STOVE PARTS**

2120 SOLANA STREET  
FORT WORTH, TX 76117  
(817) 831-0381  
800-433-1804  
FAX: (817) 834-7754  
bud@stoveparts.com

UTAH

**LA MONICA'S RESTAURANT**

**EQUIPMENT SVC.**  
6182 SOUTH STRATLER AVE.  
MURRAY, UT 84107  
(801) 263-3221  
800-527-2561  
FAX: (801) 263-3229  
lamonica81@aol.com

VERMONT

**NORTHERN PARTS & SVC.**

4874 S. CATHERINE STREET  
PLATTSBURGH, NY 12901  
(518) 563-3200  
800-634-5005  
FAX: (800) 782-5424  
info@northernparts.com

**GCS SERVICE INC.**

CHELSEA, MA  
(617)889-9393  
800-225-1155  
FAX: (617) 889-1222

VIRGINIA

**DAUBERS, INC.**

7645 DYNATECH COURT  
SPINGFIELD, VA 22153  
(703) 866-3600  
800-554-7788  
FAX: (703) 866-4071  
daubers@aol.com

**GCS SERVICE INC.**

SILVER SPRING, MD  
(301) 585-7550(DC)  
(410) 792-0388(BALT)  
800-638-7278  
FAX: (301)495-4410

**GCS SERVICE INC.**

RICHMOND, VA  
(804) 672-1700  
800-899-5949  
FAX: (804) 672-2888

**GCS SERVICE INC.**

VIRGINIA BEACH, VA  
(757) 464-3500  
800-476-4278  
FAX: (757) 464-4106

WASHINGTON

**GCS SERVICE INC.**

SEATTLE, WA  
(206) 763-0353  
800-211-4274  
FAX: (206) 763-5943

**RESTAURANT APPLIANCE**

**SERVICE**

7219 ROOSEVELT WAY, NE  
SEATTLE, WA 98115  
(206) 524-8200  
800-433-9390  
FAX: (206) 525-2890  
info@restappl.com

WEST VIRGINIA

**STATEWIDE SERVICE, INC.**

603 MAIN AVE.  
NITRO, WV 25143  
(304) 755-1811  
(800) 441-9739  
FAX: (304) 755-4001  
sws3182@aol.com

WISCONSIN

**APPLIANCE SERVICE**

**CENTER, INC.**

2439 ATWOOD AVE  
MADISON, WI 53704  
(608) 246-3160  
800-236-7440  
FAX: (608) 246-2721  
ascmad@execpc.com

**APPLIANCE SERVICE**

**CENTER, INC.**

6843 W. BELOIT RD.  
WEST ALLIS, WI 53219  
(414) 543-6460  
800-236-6460  
FAX: (414) 543-6480  
ascmil@execpc.com

**APPLIANCE SERVICE**

**CENTER**

786 MORRIS AVE  
GREEN BAY, WI 54304  
(920) 496-9993  
800-236-0871  
FAX: (920) 496-9927  
ascfox@execpc.com

**MAINTENANCE & REPAIR CENTERS**

**GENERAL PARTS, INC.**

W223 N735 SARATOGA DRIVE  
WAUKESHA, WI 53186  
(262) 650-6666  
(800) 279-9946  
(262) 650-6660 FAX

**WYOMING**

**HAWKINS COMMERCIAL**

**APPLIANCE SERVICE**

3000 S. WYANDOT ST.  
ENGLEWOOD, CO 80110  
(303) 781-5548  
(800) 624-2117  
FAX: (303) 761-5561  
johns@hawkinscommercial.com

**METRO APPLIANCE SERVICE**

1640 S BROADWAY  
DENVER, CO 80210  
(303) 778-1126  
800-525-3532  
FAX: (303) 778-0268  
metroappls@aol.com

**INTERNATIONAL**

**GLOBAL PARTS AND SUPPLY**

7758 NW 72ND ST  
MIAMI, FL 33166  
(305) 885-6353

**H.D. SHELDON AND CO**

19 UNION SQUARE, WEST  
NEW YORK, NY 10003  
(212) 627-1759  
(212) 924-6920

**CANADA**

**THE GARLAND GROUP**

1177 KAMATO ROAD  
MISSISSAUGA, ONTARIO L4W 1X4  
(905) 206-8380  
SALES  
(905) 624-1419  
FAX: (905) 624-1851  
SERVICE  
800-427-6668  
FAX: 800-361-7745

