


Lavastoviglie
Dishwasher
Lave-vaisselle
Geschirrspüler
Afwasautomaat
Lavavajillas
Máquina de lavar-louça

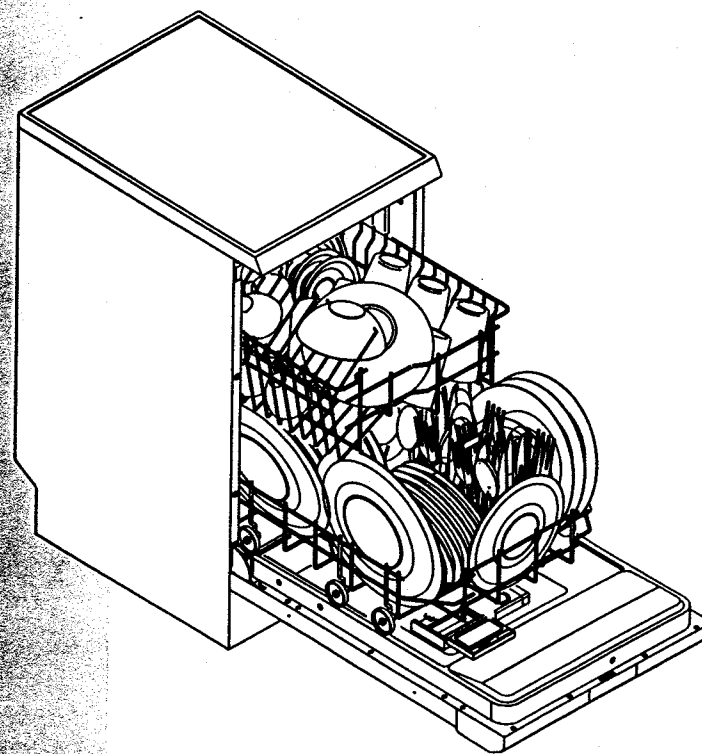

Istruzioni per l'installazione e l'uso
Instructions for installation and use
Instructions pour l'installation et l'emploi
Informationen für Installation und Gebrauch
Instructies voor installatie en gebruik
Instrucciones para la instalación y el uso
Instruções de utilização

ARTI GRAFICHE CHIRIBELLA - BOZZOLO (MN) - Via Arini, 36 — ☎ 0376/91155



Copertina: carta ecologica non riciclata
Pagine interne: carta riciclata al 100%

19590 0653 00

j) SOSTA PROLUNGATA

Se prevedet di non utilizzare la lavastoviglie per un lungo periodo di tempo è consigliabile prendere i seguenti provvedimenti:

- Effettuare per due volte consecutive il programma "ammollo".
- Pulire il filtro.
- Staccare la spina dalla presa di corrente.
- Lasciare leggermente aperta la porta, in modo che all'interno della lavastoviglie non si possano formare cattivi odori.
- Riempire il dosatore del brillantante per il risciacquo.
- Chiudere il rubinetto dell'acqua.

Prima di utilizzare nuovamente la lavastoviglie dopo tale sosta si dovrà:

- Controllare che nella tubazione di alimentazione dell'acqua non siano depositati fango o ruggine, a tale scopo staccare il tubo di alimentazione dell'acqua, lasciare scorrere liberamente l'acqua per alcuni minuti e poi riallacciare il tubo stesso.
- Inserire la spina nella presa di corrente.

k) SERVIZIO TECNICO ASSISTENZA CLIENTI

Nel caso in cui non sia possibile eliminare da soli i piccoli difetti (vedi punto "i") è necessario rivolgersi al servizio tecnico assistenza clienti).

Solo personale specializzato è autorizzato ad eseguire le operazioni di riparazione.

Riparazioni non appropriate possono mettere in pericolo l'utente. In caso di riparazioni rivolgersi al Servizio Tecnico assistenza clienti o al proprio rivenditore.

DISHWASHER

Instructions for installation and use

Dear Customer,

Thank you for choosing this fine dishwasher.

Before using the appliance **read the manual** carefully. The information in the manual is important in relation to safety, correct operation, installation and maintenance of the appliance.

- If you encounter problems with the appliance, read chapter i **"Troubleshooting"**. In most cases you will be able to solve the problem yourself, without incurring unnecessary expense by calling After Sales Service.
- Keep the manual safe for future consultation. In the event of change of ownership, make sure the manual accompanies the appliance.

Technical data

Width	45 cm
Depth	60 cm
Height (min.)	Free-standing 85 cm - Build-under 82 cm
Clearance with open door	116 cm
Capacity	9 standard place-settings
Water supply pressure	Min. 30-Max. 1000 Kpa (min. 0,3 max.10 bar)
Power supply voltage	see table of specifications
Heating element power	see table of specifications
Total power consumption	see table of specifications
Fuse	see table of specifications

This manual is printed on recycled paper.

CONTENTS

a)	Safety instructions and information	33
	Intended use	
	At the time of delivery	
	At the time of installation	
	Disposal	
	Disposing of packing materials	
	Disposing of obsolete appliances	
b)	Installation	36
	Water supply connection	
	Drain connection	
	Electrical connection	
c)	Description of the appliance	39
	Inside the tank	
	Rear panel	
	Front panel	
d)	Program Table	42
e)	Preparations before using the appliance for the first time	43
	Adjusting the water softener	
	Filling the salt container	
	Filling the rinse-aid dispenser	
	Rinse-aid dosage adjustment	
	Filling the detergent dispenser	
	Detergent dispenser	
f)	Loading the dishwasher	49
	Items that are not dishwasher-proof	
	Loading the bottom basket	
	Loading the top basket	
	Adjusting the top basket	
g)	Switching the dishwasher off and on	53
	Switching on	
	Changing program	
	Switching off	
	Removing the dishes	
h)	Cleaning and maintenance	54
	Cleaning the water intake strainer	
	Cleaning the spray arms	
	Cleaning the tank	
	Cleaning the filter unit	
i)	Troubleshooting	58
j)	Prolonged disuse	60
k)	After-sales service	60

a) SAFETY INSTRUCTIONS AND INFORMATION

This dishwasher complies with the latest technical requirements for safety in home appliances. Make sure you observe the following prescriptions.

Intended use

>The appliance must only be used for household purposes and for the functions for which it was designed. Do not attempt to wash items other than normal household utensils.

The manufacturer declines all liability for the consequences of incorrect or improper use of the appliance.

>The dishwasher must be installed and connected in accordance with the instructions provided by the manufacturer or by qualified technicians, who must also carry out any necessary modifications to your domestic electrical and water system.(See point "b" "Installation").

> For reasons of safety, this appliance must not be modified in any way.

At the time of delivery

> Do not use appliances damaged in transit. Never connect a damaged appliance to the electrical and/or water supplies. If in doubt, consult your dealer.

At the time of installation

> Before switching on the appliance make sure that the mains voltage and frequency in your home correspond to the values shown on the appliance rating plate.

(See point "c" in the tank).

> Do not use extension leads.

>If the power socket to which the appliance is to be connected is not compatible with the plug, replace the plug with another of suitable type rather than using adapters or multiple plugs, which might cause overheating or burns.

> Ensure that the appliance is not resting on the power cord or on the water supply and/or drain hoses.

a) SAFETY INSTRUCTION AND INFORMATION

Important notes

> Models with TOTAL AQUASTOP system:
if the appliance is leaking, this device shuts off the water supply and switches off the dishwasher. This system prevents the room from flooding. If the device is tripped you will need to call a qualified technician to find and repair the fault. In models with AQUASTOP the water intake hose features an enclosure containing two solenoid valves, while the hose itself contains electrical wiring. Do not cut the water intake hose or immerse the enclosure in water. If the hose is damaged, disconnect the appliance from the electrical power supply.

> In the event of malfunctions or maintenance work, turn off the water supply tap and then disconnect the appliance from the electrical power supply. To unplug the appliance grip the body of the plug and pull; do not unplug the appliance by pulling the power cord.

WARNING!

- The appliance must be used exclusively by adults.
- Detergents are harmful to the eyes, mouth and throat and can cause death through suffocation. Keep children away from detergents and the dishwasher; children must not be allowed to play with the appliance.
- Residual water in the dishwasher at the end of the washing program is not drinkable. Do not drink or use this water because it may contain traces of detergent.
- Leaning or sitting on the open door of the dishwasher may cause it to tip over; if the appliance is built-under a worktop, damage to the door and kitchen units will result.
- Do not introduce solvents such as alcohol or turpentine into the dishwasher tank: risk of explosion.
- Never place plastic dishes on the heating element, they might melt.
The heating element will remain hot for some time after the end of a wash cycle.
Do not touch the heating element!
Risk of burns.

a) SAFETY INSTRUCTION AND INFORMATION

Disposal

Disposing of packing materials

In line with our environmental policies, the packing materials are recyclable and have been limited to the absolute minimum; these materials (cardboard, plastic bags, polystyrene... etc.) must be kept out of reach of children as they are a potential source of danger. Recovery and recycling of packing materials helps to conserve natural resources and reduce waste.

Consign the packing materials to a sorted waste collection point. Your local town or city council offices will give you the address of your nearest collection centre.

Disposing of obsolete appliances

Once taken out of use, an obsolete appliance must be rendered unusable. Disconnect the plug from the socket and then cut off the mains power cord. Take measures on parts of the appliance such as locks, doors, etc. which might be dangerous for children if used during play, to eliminate any such risks. Plastic parts of the appliance are marked with special lettering to assist with sorted waste collection in line with environmental protection requirements.

Consign the obsolete appliance to your nearest recyclable material collection centre or to your dealer.

- Never touch or operate the appliance with wet hands or bare feet.
- Knives and cutlery receive a better wash if placed in the basket with their handles pointing down; however, handles may be left pointing upward to avoid injury by tips or blades.
- Do not leave the appliance door open unnecessarily - risk of tripping and falling.
- Built-under models must be installed in accordance with the relative instructions.

b) INSTALLATION

The dishwasher must be installed in a perfectly horizontal position on a structurally sound floor. The appliance is equipped with adjustable feet so that it can be made perfectly level and stable. Correct closing of the door is only assured if the appliance is perfectly level.

Warning!

If the appliance is to be installed on a carpeted floor, ensure that the ventilation openings in the base are not obstructed.

Some built-under models are equipped with just one foot at the rear (instead of two) which can be adjusted by means of a screw under the front of the appliance. This allows the position to be adjusted even after the appliance has been installed under the kitchen worktop.


- Make sure there are no kinks in the water supply and drain hoses and that the electrical power cord is not distorted.
- The sides and rear panel of the appliance may be placed in direct contact with adjacent units or walls.
- The water filler and drain hoses can be turned to the right or left in accordance with the installation requirements. After positioning the hoses make sure they are not leaking and that they are not crushed or kinked.
- For the maximum stability, install build-under appliances or integrated appliances exclusively under a continuous worktops that is fastened to the adjacent kitchen units.

- If the dishwasher is installed next to a gas or coal stove, interpose a heat insulating panel between the two appliances.

Connection to the water supply

The appliance can be supplied with cold water or hot water (60°C max.) from a centralised heating system. In the latter case, the washing program will be a few minutes shorter and the wash will be slightly less effective. The connection to the tap is made in exactly the same way as for the cold water supply.

Make sure that the water supply pressure is within the tolerance range shown in the technical data. If the water pipes are new or if they have been in disuse for a prolonged period, before making the connection allow the water to run into a container for a while to make sure it is clear and does not contain debris. If you do not take this precaution, sand or rust deposits may clog the water inlet and damage the appliance. Connect the water intake hose to a tap with a 3/4 gas thread, interposing the supplied strainer "A" (fig.1) from the accessories bag. Tighten the locking ring fully to prevent leaks. On models equipped with the AQUASTOP device the intake hose is already equipped with a filter. Do not kink or crush the hose or the water supply will be restricted with the risk of damage to the appliance.

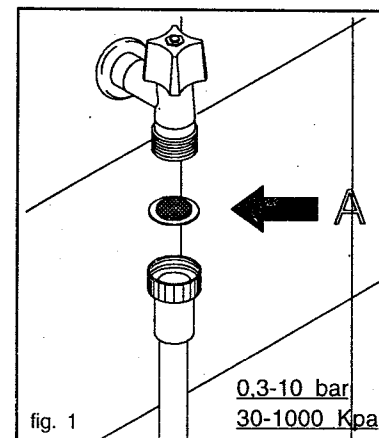

The connection at the appliance end of the water intake hose is adjustable; on models not equipped with AQUASTOP proceed as follows:

- loosen the locking ring,
- turn the hose in the direction you require,
- tighten the locking ring fully and check for leaks.

b) INSTALLATION


Drain connection

The drain connection can be made in various ways:

- to a sink drain siphon;
- to a drain pipe (with vent) of at least 4 cm in diameter;
- by fitting the drain hose in the plastic support and hooking it over the side of a sink. The plastic support serves to create a curved shape at the end of the hose so that it engages properly with the edge of the sink.


Warning!

Make sure the drain hose is properly secured to the sink to avoid the risk of it becoming disengaged and falling. The plastic curve features a hole for a cord so that it can be tied to the wall or to the tap etc. so that it cannot become accidentally detached from the sink (fig. 2).

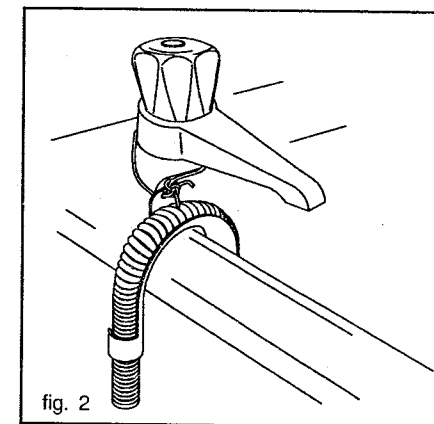

b) INSTALLATION

Irrespective of the solution you choose, make sure that the end of the drain hose is between 30cm and 100cm from the floor (fig. 2a).

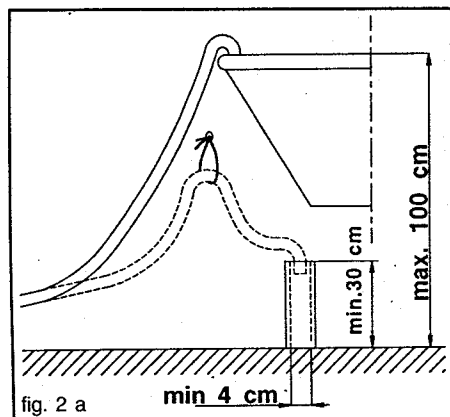

If necessary, you can use a drain extension hose of up to 3 metres in length. In this case the extension must be installed horizontally and the maximum permissible drain height is reduced from 100cm to 85cm.

Electrical connection

Before connecting the appliance to the electrical supply refer to the safety instructions and installation notes. (See Safety instructions and information, point "a").

Insert the appliance plug into an electrical socket with an earth connection (**earthing of the appliance is a safety precaution required by law**).

The manufacturer declines all liability for injury to persons or damage to property caused by failure to earth the appliance or faulty connection of the earth wire.

Before switching on the appliance make sure the rated voltage and current specified on the nameplate correspond to the mains voltage and current in your home. The type of electrical protection of the appliance is shown on the nameplate (the nameplate is affixed on the inside edge of the door).

For safety reasons, if the appliance is not connected by way of a plug and socket, it must be connected by way of an all-pole disconnect switch with contact opening gap of at least 3mm. The plug must be accessible after the appliance is installed.

If the power cord is damaged, it can be replaced only by After-Sales Service personnel or a technician with similar qualifications.


c) DESCRIPTION OF THE APPLIANCE

Tank (fig. 3)

- 1 Salt container
- 2 Rinse-aid dispenser
- 3 Detergent dispenser
- 4 Rating plate
- 5 Filters

- 6 Top basket
- 7 Bottom basket
- 8 Cutlery basket
- 9 Top spray arm
- 10 Bottom spray arm
- 11 Door spring adjustment device (*)
- 12 Water softener adjustment device


(*) Depending on the model

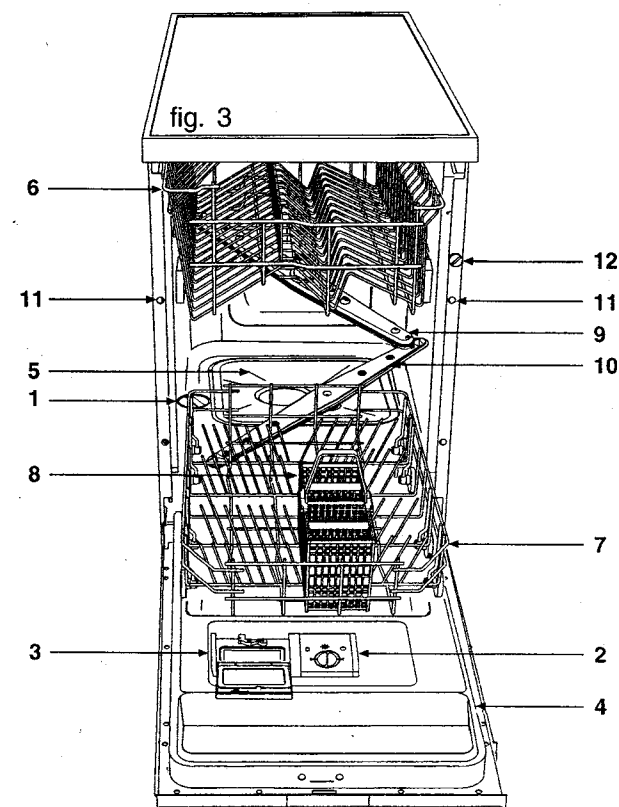

This appliance complies with the requirements of EU directives 72/23/EEC (Low voltage directive), and 89/336 EEC, including amendment 92/31 EEC (Electromagnetic compatibility)

c) DESCRIPTION OF THE APPLIANCE

Front panel

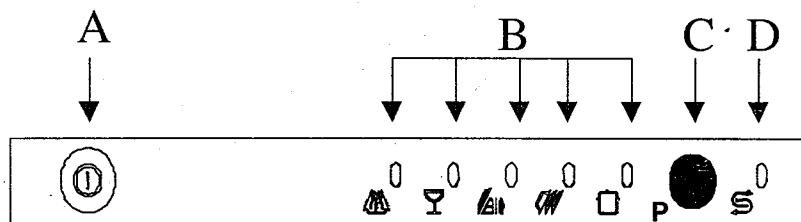

A Start button

B Program selector lights

C Program selector button

D No salt warning lights (*)

(*) Depending on the model

c) DESCRIPTION OF THE APPLIANCE

A

When this button is pressed, the dishwasher is receiving power

B

When ON, this light indicates the program selected and any failures present (see section "How to deal with small problems")






C

This button can be pressed in sequence to select the desired program

D

When ON, this light indicates that the dishwasher has run out of salt

d) PROGRAM TABLE

PROGRAMME NUMBER & SIMBOL		LOAD CROCKERY AND CUTLERY	PROGRAM OPERATION
1	 SOAK	Pans and dishes awaiting a further wash	Cold prewash
2	 DELICATE	Wash immediately after use for dishes with light dirt	Wash at 45 °C Cold rinse Rinse at 67 °C Dry
3	 BIO (*) EN 50242	Wash immediately after use for dishes with light dirt	Wash at 55 °C Cold rinse Rinse at 67 °C Dry
4	 NORMAL	Dishes with normal dirt	Cold prewash Wash at 65 °C Cold rinse Rinse at 67 °C Dry
5	 INTENSIVE	Very dirty pans and dishes (except delicate items)	Prewash at 45 °C Wash at 67 °C 2 cold rinses Rinse at 70 °C Dry

N.B. Use the soak program only with a partial load

(*) Reference cycle according to EN 50242

e) PREPARATIONS BEFORE USING THE APPLIANCE FOR THE FIRST TIME

Before using the appliance for the first time, remove the polystyrene basket retainer elements. Once the appliance has been **correctly** installed, prepare for use as follows:

- adjust the water softener system
- fill the salt container
- fill the rinse-aid dispenser


Adjusting the water softener

To get good washing results your dishwasher needs soft water (water without calcium contents), otherwise the dishes and internal parts of the appliance will be stained with whitish limescale residues. Therefore, if the water in your area is harder than 9°d (German scale) it must be softened. If the water hardness is less than 9°d there is no need to add salt. The appliance is equipped with a water softening system that can be adjusted in relation to the hardness of water in your area. Depending on the models, this device may provide 3 or 5 settings.

Adjustment with 5 settings: accessed by opening the door, located in the top right-hand corner, can be adjusted using a coin (fig. S).

The following procedure is recommended:

Water hardness		Setting
German degrees	French degrees	
0-9 °dH	0-15 °dF	Setting NR. 1 NO SALT
10-15 °dH	16-25 °dF	Setting NR. 1
16-23 °dH	26-40 °dF	Setting NR. 2
24-34 °dH	41-60 °dF	Setting NR. 3
35-46 °dH	61-80 °dF	Setting NR. 4
47-58 °dH	81-100 °dF	Setting NR. 5

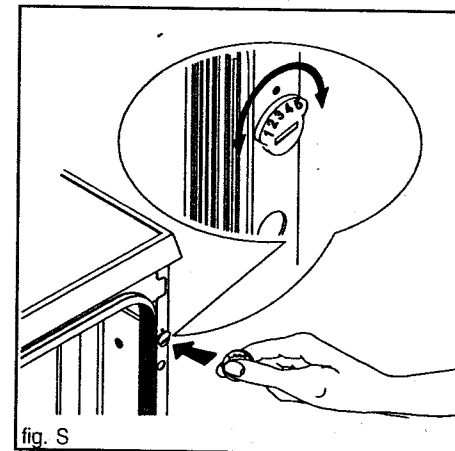

Adjustment with 3 settings: inside the salt container; after removing the cap of the container, turn the little cylinder marked with an arrow. The adjustment can be made using an ordinary screwdriver. The following procedure is recommended:

Water hardness		Type of adjustment
0 - 9 °dH	0 - 15 °dF	No salt indicator light on
10-23°dH	15-40°dF	Medium adjustment arrow
> 24 °dH	> 40 °dF	Maximum adjustment arrow

e) PREPARATIONS BEFORE USING THE APPLIANCE FOR THE FIRST TIME

Some models are equipped with a sticker on the upper edge of the door showing the washing programs and information relating to adjustment of the water softener. Set the water softener after checking the hardness of your water in accordance with the tables below.

For optimum regeneration:

- * the water softener system must be adjusted in accordance with the hardness of the water supply (the appliance is factory set to average values);
- * the salt container must be kept filled with salt.

The water softener is regenerated at each wash cycle thanks to the salt solution. The consumption of salt for regeneration of the water softener depends on the water hardness in your area. Contact your water company for information on the water hardness in your area.

WARNING!

- Use only regenerating salt for dishwasher; **do not use edible salt**. Only use edible or industrial salt in extreme cases, since they contain insoluble substances which may damage the water softening system over time.
- Use caution: dishwasher salt packets and detergent packets are often similar in appearance. If you inadvertently pour detergent into the salt container the water softener system may be damaged.
- **Close the salt container carefully after filling.** It is important that water containing detergent does not enter the salt container since this would cause irreparable damage to the regeneration system. In this case, the warranty will no longer apply.
- **Filling with salt.**
 - Open the door and take out the bottom basket.
 - Unscrew the cap from the salt container by turning it anti-clockwise.

For first start up: when the appliance is used for the first time, after adding the salt also add 1 liter of water to the reservoir.

- Apply the funnel supplied inside the dishwasher to the salt container opening (fig. 6).
- Pour the salt through the funnel into the container. The water softener holds approximately 1,2 kg of salt. Do not overfill.
- Before screwing the cap back into place, remove salt residues from around the container opening.

e) PREPARATION BEFORE USING THE APPLIANCE FOR THE FIRST TIME

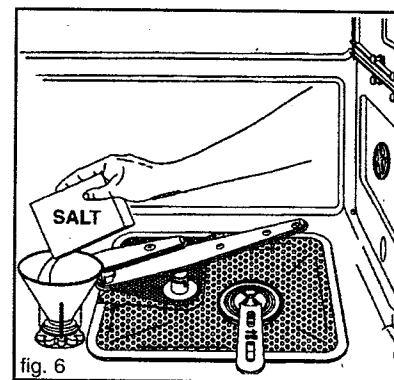


fig. 6

Adding rinse-aid

Rinse-aid is dispensed automatically during the final rinse from the rinse-aid dispenser on the inside of the door (fig. 7). Rinse-aid speeds up the drying phase and prevents the formation of stains and scale deposits on the dishes.

WARNING!

- Use only a reputable brand of rinse-aid for dishwashers.
- If you inadvertently fill the rinse-aid dispenser with detergent (including liquid detergent) it will be damaged.

- Open the door
- Rotate the rinse-aid dispenser lid anti-clockwise by 1/4 of a turn and extract it (fig. 8)

IMPORTANT!

- The salt container must be filled when the No Salt warning light illuminates on the front panel; always top up the container before a wash so that any overflowing salt solution will be removed immediately by the water. In the solution is allowed to remain inside the tank it might cause corrosion.
- After filling the salt container the warning light will switch off either immediately or after one or two wash cycles.
- If your appliance does not have a No Salt warning light, consider that in areas of medium water hardness, the container must be filled approximately every 15 washing cycles (excluding the "soak" program).


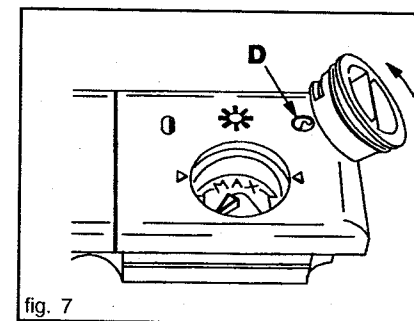


fig. 7

e) PREPARATION BEFORE USING THE APPLIANCE FOR THE FIRST TIME

- Pour in rinse-aid until the container is full (approx. 140cc). Optical level indicator "D" located next to the lid must be completely covered (dark colour). Top up with rinse-aid when the level indicator shows a light colour or when the No Rinse-aid warning light illuminates on the front panel.
- Refit the lid and turn it clockwise.
- Use a cloth to mop up any spills of rinse-aid, which would otherwise lead to the formation of excess foam.

- Refit the lid and turn it clockwise.

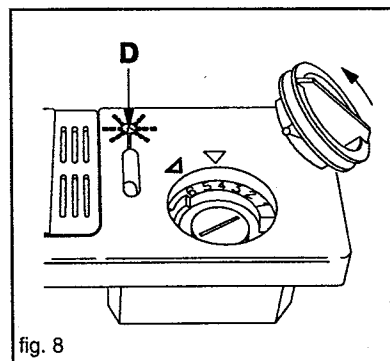

Adjusting rinse-aid dosage

The appliance leaves the factory with a medium setting. You can, however, adjust the rinse-aid dosage by turning the selector in the dispenser to the required position; the dosage is proportional to the position of the selector. Depending on the appliance model, the dosage may be indicated with numbers (1=minimum dosage) or by min. - max. Increase the dosage if the washed dishes are dull or present circular stains.

- To adjust the dosage rotate the dispenser lid anti-clockwise by 1/4 of a turn and extract it
- Now use a screwdriver to turn the dosage selector to the required position (fig. 7-8).

Adding detergent

IMPORTANT

- Use only detergents intended specifically for dishwasher do not use normal washing up detergents, which produce excessive amounts of foam and can impair operation of the appliance.
- The detergent package must be sealed and stored in a dry place to prevent the formation of hardened crystals which will negatively affect washing efficiency.
- The detergent must be poured into the detergent dispenser before each wash cycle, and is dispensed automatically (do not add detergent before running a SOAK program, which does not use detergent).

e) PREPARATIONS BEFORE USING THE APPLIANCE FOR THE FIRST TIME

- If a detergent in tablet form is used, the tablets may be placed in the detergent dispenser or in the cutlery basket. In the later case, still close the door of the detergent dispenser-However, it is preferable to place the tablet in the dispenser so that all the detergent is used in the wash.
- If insufficient detergent is added, the dirt will not be completely eliminated; excessive detergent does not increase the effectiveness of the wash, but is wasteful and may cause foam and pollution.

1. Detergents containing phosphates are more effective at removing fat and starch at temperatures above 60°C.

2. Enzymatic detergents are effective at lower temperatures (from 40°C to 55°C) because of their biological action, and they are also more biodegradable. Enzymatic detergents therefore give the same washing results at low temperatures as those obtainable with traditional phosphate type detergents using 65°C programs.

The concentration of commercial detergents differs from brand to brand. Follow the dosage instructions on the package.

DETERGENT INFORMATION

There are various types of dishwasher detergents available in the shops, in liquid, powder or tablet form and with different chemical compositions:


- 1) containing phosphates.
- 2) phosphate-free (with natural enzymes).

For environmental protection reasons we recommend the use of phosphate- and chlorine-free detergents.

Detergent dispenser

The detergent dispenser is on the inside of the door. If the lid closed:

- 1 Press the button "C" (fig. 9a-9b). The lid will flip open.

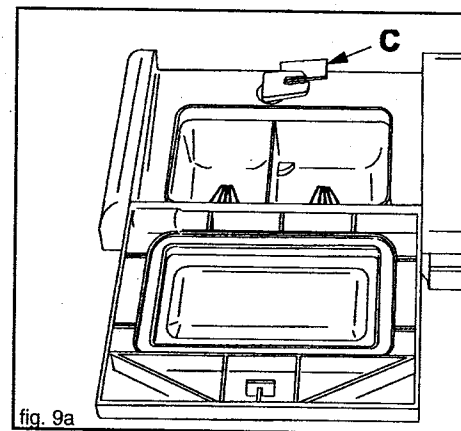

e) PREPARATIONS BEFORE USING THE APPLIANCE FOR THE FIRST TIME

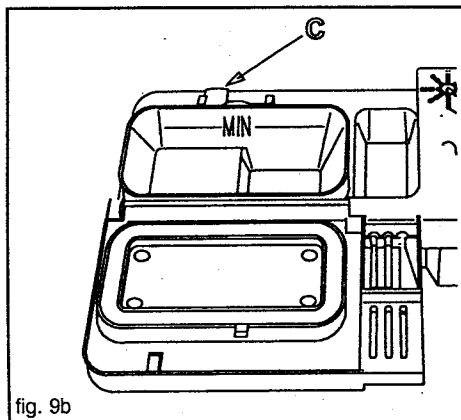


fig. 9b

2 Pour detergent into the container. If you are planning to use the "strong" program (only for certain models), in addition to the dose in the dispenser, add an extra amount by filling cavity "G" or "H" (fig. 10a-10b).

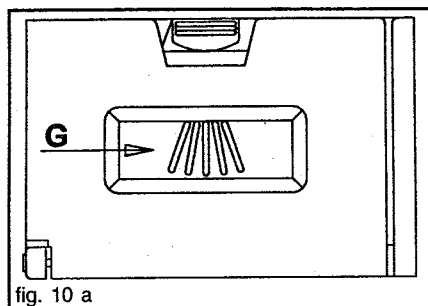


fig. 10 a

The detergent dosing scale, if present, is a useful guide to the quantity to be added.

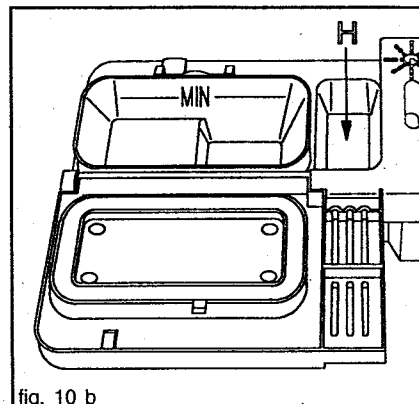


fig. 10 b

3 Close the lid by pressing it down until it clicks into place; the lid opens automatically during the washing program.

f) LOADING THE DISHWASHER

Dishwasher capacity is 9 place-settings including serving dishes.
Before loading the dishes::

- remove coarse food remains, e.g. bones, etc., which could otherwise block the filter or damage the washing pump.
- very dirty pans with burnt-on food remains should be soaked in water before loading. Put pans in the **BOTTOM BASKET**.

It is unnecessary and wasteful to rinse dishes under running water before putting them in the dishwasher baskets.

Good washing results are guaranteed when the dishwasher is loaded correctly.

WARNING!

- Make sure the dishes are positioned securely and that they do not obstruct rotation of the spray arms.
- Do not place very small items in the baskets since they could fall into the tank and jam the spray arms or the wash pump.
- receptacles such as cups, bowls, glasses and pans must be loaded upside down and at an angle so that the water is able to drain properly.
- Do not place dishes and cutlery directly one on top of the other.
- Do not place glasses too close together: they may break or stains may remain after washing.

ADVICE: Make sure the dishes are suitable to be washed in a dishwasher.

f) LOADING THE DISHWASHER

ITEMS THAT ARE NOT DISHWASHER-PROOF

Wooden utensils, cutlery and dishes: possible damage due to high wash temperatures.

Handmade items: Handmade items are rarely suitable for washing in the dishwasher. The relatively high water temperatures and the detergent used may damage them.

Plastic dishes: may be deformed by high wash temperatures. Heat-resistance plastic dishes must be placed in the top basket.

Dishes and items made of copper, tin, zinc and brass: these materials tend to stain in the dishwasher.

Aluminium pots: anodized items may become discoloured.

Silverware: silverware may become stained.

Glass and crystal glass: generally speaking glass items can be washed in the dishwasher. There are, however, certain types of glass that tend to become opaque after numerous wash cycles; wash delicate glass items using a "delicate" washing program, if available, or, in any event, the least intensive of the available programs.

Decorated dishes: modern decorated dishes are generally completely dishwasher proof, although in some cases colours can fade after a large number of washes. If you are in doubt, wash one or two items repeatedly over a period of about one month and then check the results.

Caution!

- Do not wash dishes soiled with ash, wax, lubricating oil or paint.

Loading the dishwasher is easier if you start from the bottom basket.

• Loading the bottom basket

The bottom basket is designed to hold larger dishes with the toughest dirt. In some models, the bottom basket is equipped with tip-up supports (fig. 11) that allow the available space to be used more efficiently.

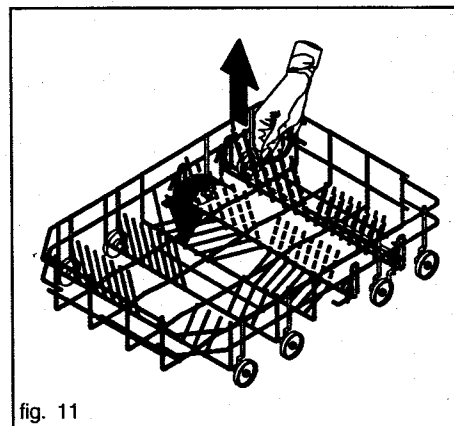


fig. 11

f) LOADING THE DISHWASHER

1. Pull out the bottom basket completely

2. Arrange the dishes: flat plates, soup plates, dessert bowls, pots and pans
Example of how load the dishwasher (fig. 12a-12b).

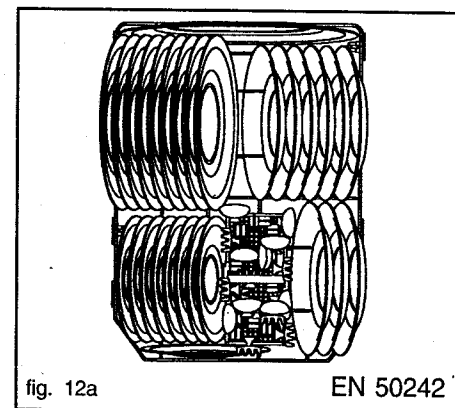


fig. 12a

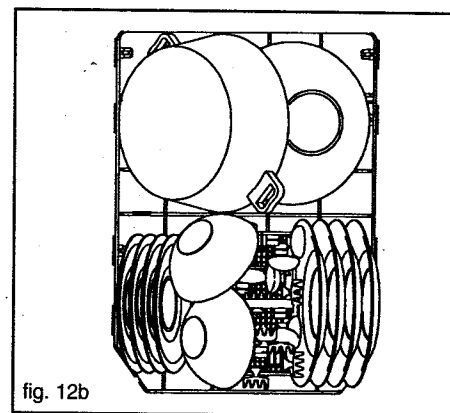


fig. 12b

Cutlery basket (Fig. 12c)

Fill the cutlery basket in an orderly manner, with cutlery handles pointing downwards (take care not to injure your hands on knife blades or fork tips, etc.).

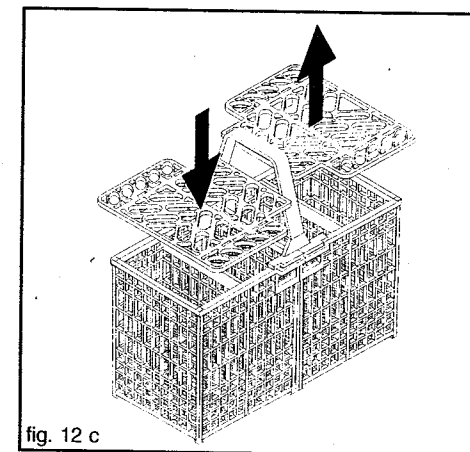


fig. 12c

Important!

Do not put particularly long utensils, such as ladles or kitchen knives in the cutlery basket or they will interfere with the top spray arm. These items should be placed in the top basket.

• Loading top basket

The top basket is intended to hold small and medium size items such as glasses, cups, bowls and side plates (arranged in the racks). Some models are equipped with a pair of lift-up racks on the left hand side (fig. 13) for small bowls and other items.



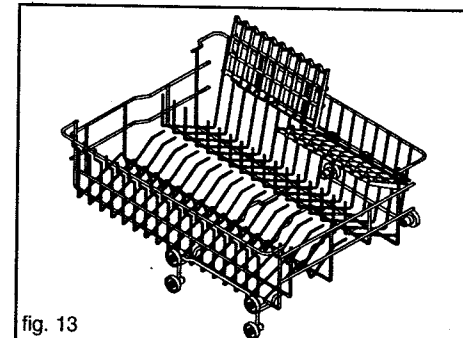


fig. 13

f) LOADING THE DISHWASHER

Pull out the top basket and load the dishes

Example of how load the dishwasher (fig. 14a - 14b):

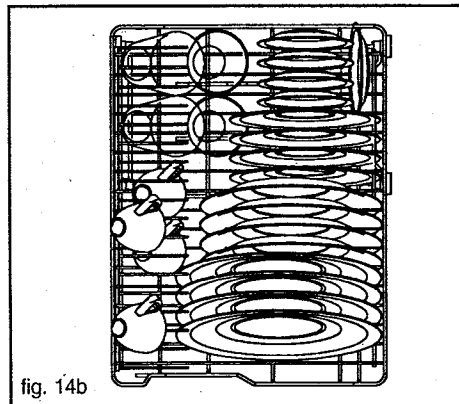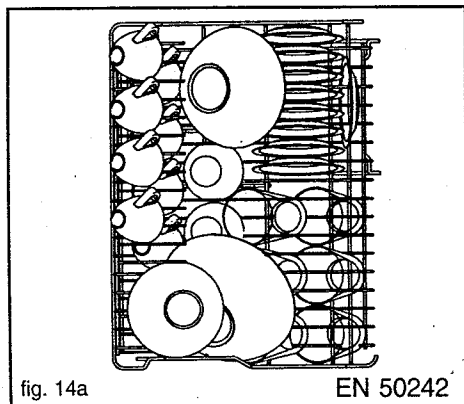



Adjusting the top basket

The top basket can be set in two different positions depending on requirements and the height of the dishes

Pull the basket out to the limit position, turn end stop (E) on the right hand runner (fig. 15) through 90°, push the runner towards the dishwasher and then raise the basket and insert the lower set of wheels into the runner (fig. 16); now restore the end stop to its original position.

The higher position of the top basket allows you to place 210 mm high dishes in the top basket and 300 mm high dishes in the bottom basket.

The lower position of the top basket allows you to place 240 mm high dishes in the top basket and 280 mm high dishes in the bottom basket.

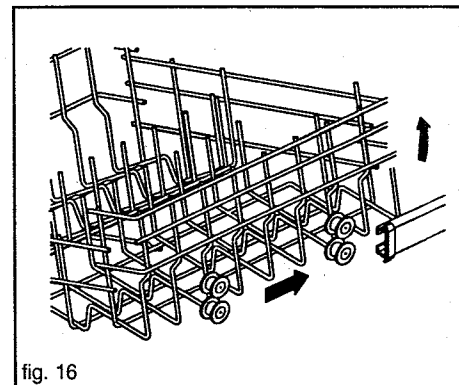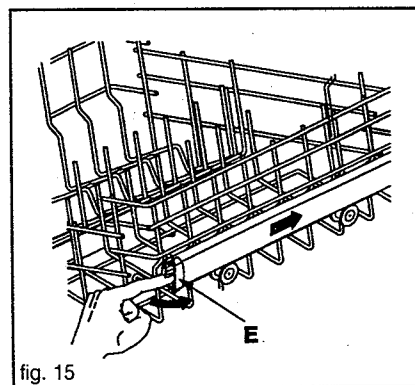

g) SWITCHING THE APPLIANCE ON AND OFF

Starting your dishwasher

Note carefully - When choosing the washing programme with this particular model of dishwasher, which is fully integrable, the door must be opened. Follow the table illustrated in this booklet, especially at first **when you are not familiar the dish washer, in order to select the best wash cycle programs**. The many programs illustrated in this table depend on the type of dishes to be washed, their mechanical and thermic resistance and on how dirty they are.

Switching on

After carrying out all the operations described in the previous points and turning off the water intake tap, proceed as follows :

a) Press the start button (A) and wait for the programmes light to come on.

b) Press the program selector button (C) several times, until the light corresponding to the program of choice illuminates.

c) Close the door. The appliance will start the washing program automatically after the beep.

Switching off

At the end of the program, the dishwasher emits a short beep and the light of the program just completed flashes. To switch off the appliance, open the door and press the start button.

Changing the programme

To change a program in progress, after opening the door press the program selection button for a few seconds until the lights of programs 4 and 5 illuminate simultaneously. After about 1 minute, the dishwasher switches to the end of the cycle.

Caution! If the door is opened while washing in progress, **it is essential to wait at least 1 minute** with the door almost closed before restarting the dishwasher.

Annulling a program

To annul a program in progress, after opening the door press the program selection button for a few seconds until the lights of programs 4 and 5 illuminate simultaneously.



Close the door again.


After about 1 minute, the dishwasher switches to the end of the cycle.

Removing the dishes

It is advisable to wait at least 20 minutes after the end of the program before removing the dishes, so that they will be dry and not too hot. Empty the bottom basket first, so that any drops of water left in the top basket will not fall onto dishes still in the bottom one.

g) SWITCHING THE APPLIANCE ON AND OFF

IMPORTANT: You can turn off the tap at the end of the washing program (fig.17) to eliminate the risk of flooding. This precaution is essential when the appliance is not to be used for a prolonged period.

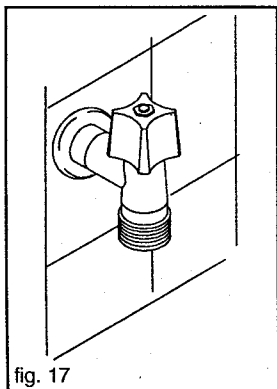

WARNING!

The washing program will be interrupted if the door is opened. When the door is closed again, the program will restart from the point at which it was interrupted (if the temperature in the tank exceed 50°C the programme will restart 60 seconds after the door is closed). Only open the door if strictly necessary while the washing program is in progress, because this action will allow cold air to enter the hot tank and could negatively affect the results of the wash.

If the appliance is built under a kitchen worktop, the steam that escapes when the door is opened could damage the worktop, giving rise to swelling etc.. It is therefore advisable to protect the underside of the worktop with the given accessory components.

h) CLEANING AND MAINTENANCE

The front panel can be cleaned with a soft cloth and clean water or using a special detergent for painted surfaces. Periodically clean the tank and door seals with a moist cloth. Before cleaning the appliance, disconnect it from the electrical supply.

WARNING!

Do not use abrasive products to clean the appliance.

Cleaning the water intake strainer:

The water intake strainer in the tap connection must be cleaned periodically (fig.1)


1. Turn off the tap
2. Unscrew the water intake hose
3. Remove the strainer and wash it under running water
4. With the tap turned off, fit the strainer and the water intake hose connection and tighten it fully.

h) CLEANING AND MAINTENANCE

Cleaning the spray arms:

The spray arms can be easily removed to allow periodic cleaning of the nozzles and prevent any clogging.

To remove the upper spray arm, unscrew locking ring "R" (fig. 18).

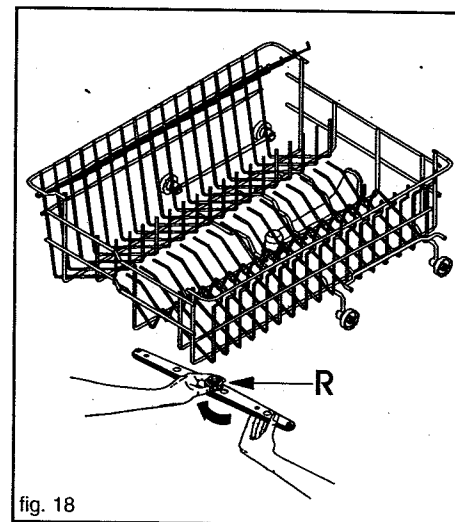


Orbital spray arm

This appliance is equipped with a double "orbital" type bottom spray arm designed to give enhanced washing results by ensuring that the jets of water reach the most inaccessible corners of the tank.

To clean the orbital spray arm...

Remove the longer section "F" by pulling upwards (Fig. 19); now disassemble the sorter section "G".

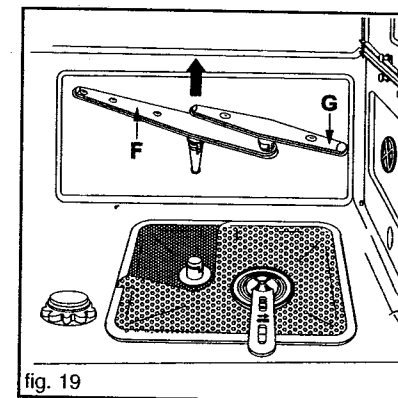

Wash the spray arms thoroughly under a jet of water and then refit them.


Cleaning the tank

The tank and the seals should be cleaned periodically (once or twice a year) to remove any dirt deposited, using a soft cloth and water.


h)CLEANING AND MAINTENANCE

Cleaning the filter unit


The central filter "H" should be removed for inspection periodically and cleaned if necessary. To remove the filter unit, grip the handle and rotate anti-clockwise, then pull upwards (fig. 20);

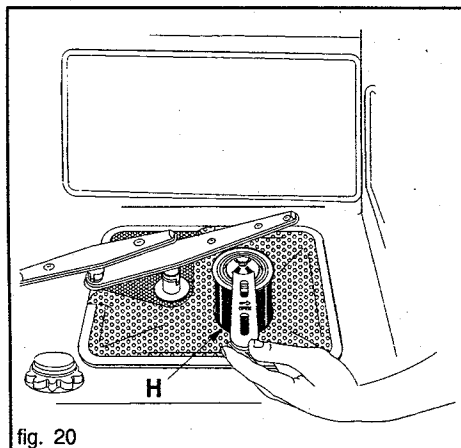

now separate components "L" and "M" as shown in figure 21;

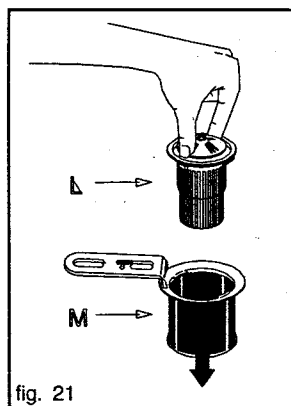


finally separate the two parts of the plastic filter by squeezing gently in the position shown (fig.22) and pulling the top part to remove it.

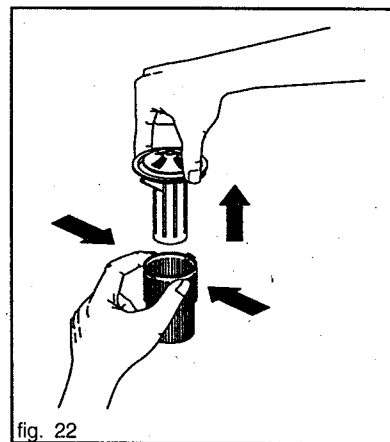

h)CLEANING AND MAINTENANCE

Having removed the central filter you have also the possibility of taking out the "G" filter (it is sufficient to lift it out), while to take out the "P" port it is necessary to remove the spray arm support "N" (Fig. 23).

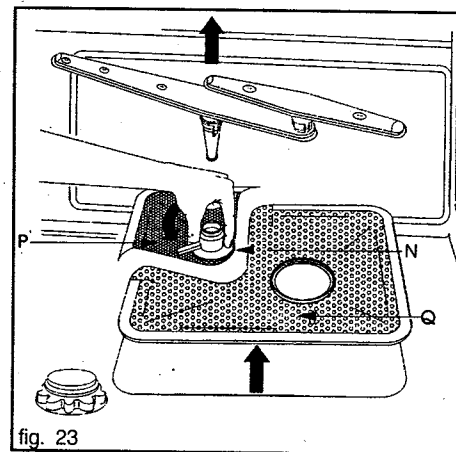

Clean the filters under running water and using a stiff bristle brush. Clean the filters carefully as described above, because the dishwasher cannot operate with a blocked filter. Take care to replace the clean filters correctly (by repeating the above instructions in reverse order) to avoid damage to the washing pump.

i) TROUBLESHOOTING

You will be able to remedy some minor problems with the help of the following instructions. If you are unable to solve the problem, call AFTER-SALES-SERVICE (see point "k").

> The program fails to start...

- Appliance fuses blown ?
- Appliance connected to electrical supply ?
- Power failure ?
- Tap turned on ?
- Appliance door closed properly ?
- Water intake strainer clogged ?
- Water supply/drain hoses kinked or crushed ?

> Water remains in tank at end of program...

- Drain hose kinked or otherwise obstructed ?
- Siphon blocked ?
- Filters blocked ?

> Dishes are not clean at end of washing cycle...

- Detergent dispenser opened ?
- Detergent and/or rinse-aid dosage correct? (see "Preparations before using the appliance...").
- Salt container empty? Without salt the water is not softened and whitish scale deposits will be left on the dishes.

- Dishes correctly loaded? (see "Loading the dishwasher").
- Selected program too mild for type and level of dirt? (see "Cprogram table").
- All filters clean? Filters positioned correctly? (see "Cleaning and Maintenance").
- Spray arm nozzles blocked? (see "Cleaning and Maintenance").
- Spray arms free to rotate ?

> Dishes are still wet and dull at end of program...

- Are you using a good quality rinse-aid ?
- Rinse-aid dosage sufficient ?(see "Adjusting rinse-aid").

> Whitish streaks and stains on dishes at end of program...

- Rinse aid dosage excessive ?(see "Adjusting rinse-aid dosage").

> Dishes and glasses have water stains...

- Rinse-aid dosage sufficient ? (see"Adjusting rinse-aid dosage").
- Are you using a good quality detergent ?





 




 







 

 





i) TROUBLESHOOTING

> Rust marks in tank...

- The tank is made of stainless steel so any rust stains must be due to external causes (flakes of rust from the water pipes, pans, cutlery, etc.). Use a specific commercial cleaner to remove rust stains.

- Are you using the correct detergent dosage? Some detergents have a marked corrosive action (see "Adding detergent").
- Has the salt container cap been closed properly? (see "Filling with salt").
- Is the water softener system correctly adjusted? (see "Adjusting the water softener").

The dishwasher is able to signal a series of a malfunctions by illuminating more than one light simultaneously; the key to these signals is as follows:

E1						The anti-flooding signal has been tripped (for models fitted with AQUASTOP device only). This alarm is only tripped if water leaks from the dishwasher. The after-sales service must be called on.
E2						The dishwasher has loaded too much water and the safety level switch has been tripped. Repeat the cycle. If the problem persists, contact the after-sales service.
E3						The dishwasher is unable to heat the water. Repeat the cycle. If the problem persists, contact the after-sales service.
E5						The dishwasher is unable to take in water. Check the intake hose for kinks and ensure that the siphon is not blocked or the filters fouled.
E6						The dishwasher is unable to discharge the water from the tank. Check the intake hose for kinks and ensure that the siphon is not blocked or the filters fouled.

If an alarm occurs the appliance interrupts the program in progress and signals a fault.

In case of E1, E2, and E3, the washing program must be set again to continue.

In case of E5 and E6, simply open and close the door to continue (once the cause of the fault has been illuminated).

j) PROLONGED DISUSE

If you will not be using the dishwasher for a long period of time, take the following precautions:

- Run the "Soak" program twice in succession.
- Clean the filter.
- Unplug the appliance.
- Leave the door slightly open to prevent odour formation.
- Fill the rinse-aid dispenser.
- Turn off the tap.

Before using the appliance after prolonged disuse:

- Disconnect the water intake hose and allow the water to run into a suitable container for a few minutes to eliminate any debris or impurities from the water pipes. Now reconnect the water intake hose.
- Insert the appliance plug into the power socket.

k) AFTER-SALES SERVICE

If you unable to eliminate minor defects (see point i "Troubleshooting") call After-Sales Service

Only skilled personnel are authorized to carry out repair work on the appliance.

Incorrectly executed repairs may represent a hazard for the user. If the appliance needs repairing, consult the After-sales service or your dealer.

LAVE-VAISSELLE

Instructions pour l'installation et l'emploi

Madame/Monsieur !

Nous vous remercions d'avoir choisi un de nos appareils électroménagers, le lave-vaisselle.

Pour faire sa connaissance, nous vous conseillons de **lire attentivement** les pages qui suivent.

Les informations qu'elles reportent sont très importantes pour votre sécurité, pour l'utilisation, l'installation et l'entretien de la machine et son fonctionnement correct.

- S'il a de problèmes de fonctionnement, contrôler le chapitre i "Elimination des petit défauts". Dans de nombreux cas, il est possible d'éliminer personnellement le défaut ce qui évite des coûts inutiles du Service Technique d' Assistance aux Clients.
- Conserver soigneusement ce manuel pour le consulter à tout moment; en cas de vente du lave-vaisselle, le remettre au nouvel acheteur.

DONNÉES TECHNIQUES

Largeur	cm. 45
Profondeur	cm. 60
Hauteur mini.	P.L. cm.85 - Encastrable cm 82
Encombrement avec porte ouverte	cm. 116
Capacité	9 couverts standard
Pression eau d' alimentation	Min.100-Max.900 Kpa (min.1max 9 bar)
Tension d' alimentation	voir plaquette des caractéristiques
Puissance résistance	voir plaquette des caractéristiques
Puissance totale absorbée	voir plaquette des caractéristiques
Fusible	voir plaquette des caractéristiques

Nous sauvegardons l' environnement - nous utilisons du papier recyclé.