

ZANUSSI

**Instructions
for the use and care
of your Z 100
Dishwasher**

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can be acquainted with the functioning of the appliance and the relevant warnings.

Dishwasher Warnings


THESE WARNINGS ARE PROVIDED IN THE INTEREST OF SAFETY. YOU MUST READ THEM CAREFULLY BEFORE INSTALLING OR USING THE APPLIANCE.

- **Unplug the appliance and turn off the water after use.**
- **Any plumbing work to install this appliance should be carried out by a qualified plumber.**
- **Any electrical work required to install this appliance should be carried out by a qualified electrician.**
- **This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the products.**
- **This product should be serviced by an authorised Zanussi Network Service Centre, and only genuine Zanussi spare parts should be used.**
- **It is dangerous to alter the specifications or modify the product in any way.**
- **Care must be taken to ensure that the appliance does not stand on the electrical supply cable.**
- **Zanussi dishwashers are designed to be used for washing normal household utensils. Items that are contaminated by petrol, paint, steel or iron debris, corrosive, acidic or alkaline chemicals are not to be washed in a dishwasher.**
- **When finished loading or unloading close the door, as an open door can be a hazard.**
- **If your house is fitted with a water softening unit, it is not necessary to add salt to the water softening unit in the dishwasher.**
- **Do not put in your dishwasher: Cutlery with wooden or horn handles or glued parts, bronze cutlery, saucepans with wooden handles unless they are sold as dishwasher proof, aluminium ware, crystal ware, leaded glass, plastic articles unless sold as dishwasher proof, antique china or fine decorated china unless sold as dishwasher proof. Always check with the manufacturer of the item if in any doubt.**
- **A chemical reaction can occur between silver cutlery and stainless steel cutlery. As a precaution do not wash together.**
- **Under no circumstances should you open the door whilst the appliance is in operation. Always turn off the appliance before opening the door.**
- **Built-in dishwashers only: The appliance must be secured to the underside of the worktop using the brackets provided. Failure to do this could result in an unstable appliance which may cause damage or injury.**
- **Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunctioning. Refer to your local Zanussi Network Service Centre. Always insist on genuine Zanussi spare parts.**

Servicing

Should servicing be required for this appliance contact your local Service Agent but before requesting service the following simple checks may save you inconvenience and expenses:

- Check that the power supply is working (by plugging in another appliance).
- Check that the fuse has not blown in the plug.
- Check that the door is properly closed and the water taps are turned on.
- Check that the drain filter or water inlets are not blocked.
- Check that the drain hose is properly located and free from kinks and blockages.

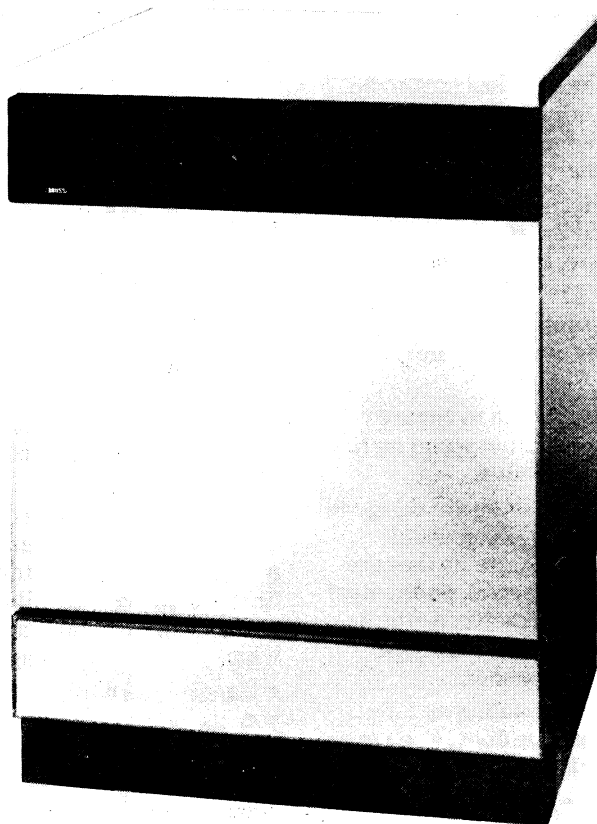

Contents

Installation

Positioning	Page 4
Levelling	Page 5
Water Connection	Page 5
Electrical Connection	Page 7

Operation

Control Panel Description	Page 8
Loading the Crockery	Page 9
Loading the Rinse Aid	Page 12
Loading the Detergent	Page 13
Water Softener	Page 13
Starting the Machine	Page 15
Stopping the Machine	Page 15
Washing Programmes	Page 15
Washing Programmes	Page 16

Care and cleaning

Cleaning the Filter	Page 18
Cabinet Cleaning	Page 20
Useful Hints	Page 21
Something not working	Page 22

Covering door & lower panel

Page 23

Technical data



Width	23.6"
Overall Depth	22.4"
Overall Depth with open Door	47.2"
Height	33.4"
Capacity (in standard IEC place settings)	12
Supply voltage	220/240 V - 50 Hz
Motor Rating during Washing	250 W
Heating Element Power	2570 W
Max. Power Absorbed	2820 W
Water Supply Pressure:	
minimum	7 p.s.i. - 49 kN/m ²
maximum	110 p.s.i. - 758 kN/m ²

Installation

Positioning

After removing the outer carton, set up the machine in the selected spot, preferably very close to water loading and draining facilities. Furthermore, the machine can be installed with the sides and back in touch with the adjacent furniture or with the wall.

The dishwasher features fill and drain hoses which can be turned either to the right or to the left (fig. 1) to suit the installation. The worktop can be adjusted either forwards or backwards up to 25 mm (1 in) to make it possible to align the

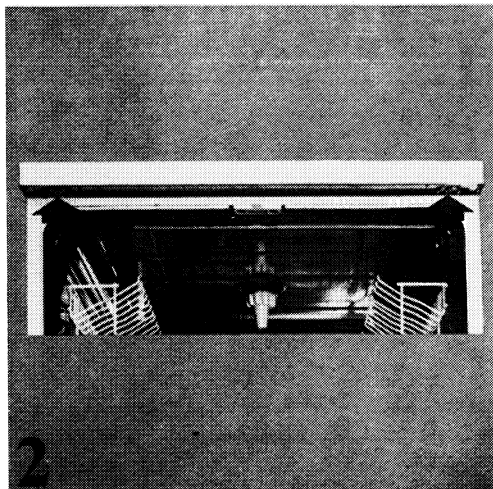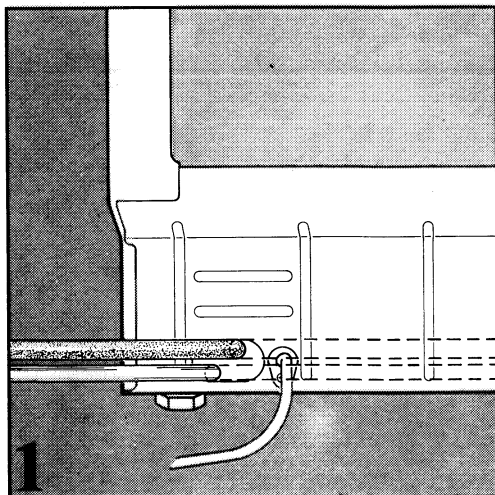

machine properly with the kitchen furniture. To do this, simply remove the securing screws from the front (fig. 2); adjust the worktop as required, then replace the previously removed screws. The machine can also be installed under the kitchen counter or under the sink. To do this, remove the worktop from the machine by unscrewing the two front securing screws and then release it from its rear catch. The dimensions of the special recess required to house the machine are given in Fig. 3.

Levelling




The machine should be accurately levelled by adjusting the four levelling feet so that it be perfectly levelled (max. allowed error: $\pm 2^\circ$). An accurate levelling is a must to ensure a correct operation of the machine.

Connection to the water supply

The machine may be supplied with either cold or hot water. **In the latter case, make sure that the temperature of the hot water never exceeds 60°C (140°F).**

The inlet hose should be connected to a 3/4" gas thread spout (Fig. 4-5) or to a quick-coupling tap (Pres-Block) after inserting the special strainer «A» supplied with the machine.

Make sure that the water supply pressure is within the limits indicated under the technical data (page 3).

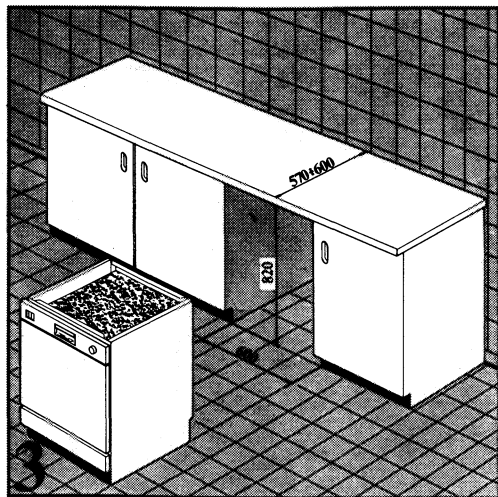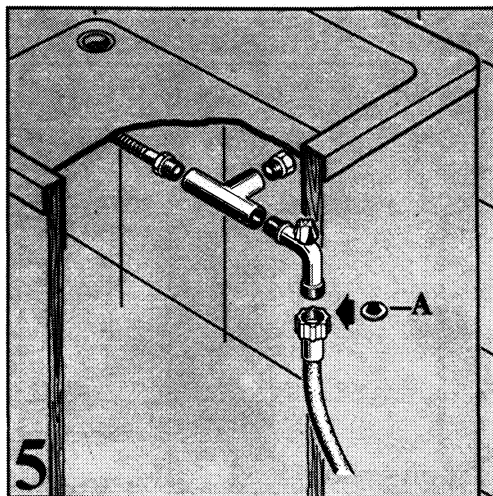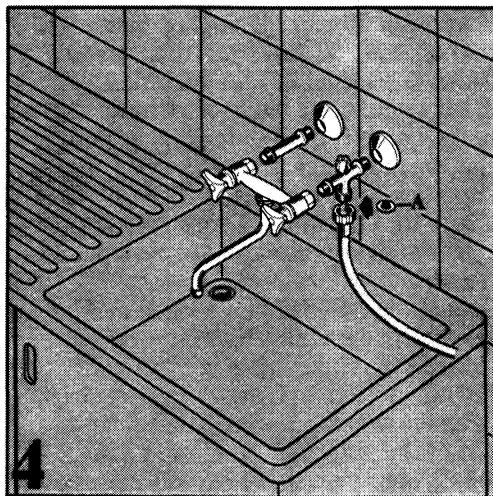

Water outlet connection



The drain pipe from this machine must connect into the main drain from the premises, but not into the rainwater drain.

Information as to the type of drain servicing your premises can be obtained from a builder or the Local Authority.

The curved end of the outlet hose should be firmly hooked over the edge of a sink or connected to a suitable drain pipe in the wall or under the sink; however, such a drain pipe should have a built-in air break in order to avoid water syphoning from the machine during draining. The top of the drain hose (curved end) should not be lower than 30 cms (12 ins) or higher than 90 cms (36 ins) from floor level.

The water should be able to drain freely and the end of the outlet hose must not be under water. It is, therefore, advisable that the drain pipe, if used, has an internal diameter of at least 4 cms (1.5 ins). Also, ensure that the drain hose is not chocked or placed in such a way as to obstruct the normal water flow.

If the drain hose is to be hooked over the sink, ensure that the sink is empty and that the sink plug is not blocking the plug hole. If an extension is required, its inner diameter must be the same as that of the original hose of the washer and its length must not exceed 2 metres (6 ft.).

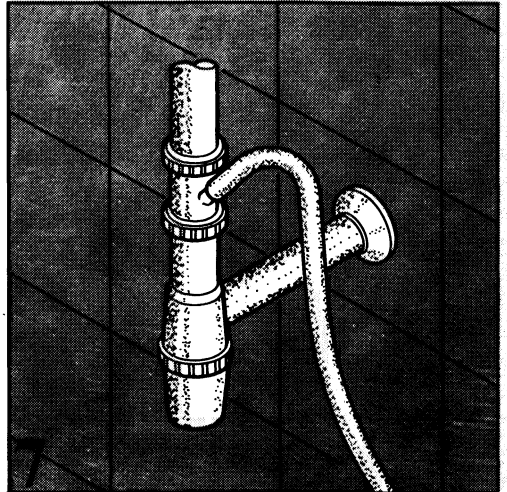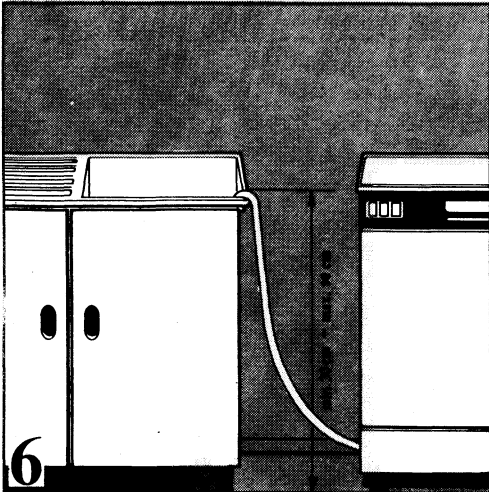

Electrical connection

Warning: this appliance must be earthed

The manufacturer declines to accept any liability should this safety measure not be observed.

Important

The wires in this mains lead are coloured in accordance with the following code:

**GREEN AND YELLOW - EARTH
BLUE
NEUTRAL
BROWN - LIVE**

If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug; this is what you have to do: Connect the green and yellow (earth) wire to the terminal in the plug which is marked with the letter «E» or the earth symbol \perp , or coloured green, or green and yellow.

Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter «N» or coloured black.

Connect the brown (live) wire to the terminal which is marked with the letter «L» or coloured red.

The plug moulded on to the cord incorporates a fuse. For replacement, use a 13 Amp BS 1362 fuse. Only ASTA approved fuses should be used.


The fuse cover/carrier must be replaced in the event of changing fuse.

The plug must not be used if the fuse cover/carrier is lost.

A replacement cover/carrier must be obtained from Zanussi Service Agents whose addresses are listed on the attached «Zanussi Service Agents Nationwide».

This appliance complies with E.E.C. directive No 76/889 of 4.11.76 relative to radio interference suppression.

Operation

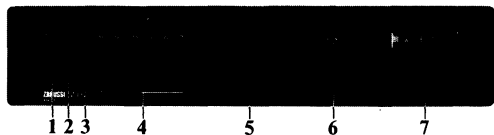

Control panel

- 1) On-off pushbutton
- 2) Start control
- 3) Economy drying button
- 4) Wash programme buttons
- 5) Door handle
- 6) Salt refilling indicator
- 7) Wash-cycle phase indicator

On-off pushbutton

By depressing this button, the pilot lamp will light up indicating that the machine is live and therefore ready to start working.

Attention: Once the On-off button is depressed, it is no longer possible to modify the setting of buttons 3-4 due to a mechanical safety locking device being actuated.

To cancel a wrong selection, turn off the machine by depressing again the On-off button.

Start control

By pressing it in completely the machine starts operating.

Economy drying button

By depressing this button you will obtain a substantial saving in electricity inasmuch as the temperature of the water during the last rinse will be lower than normal.

However, it should be noted that in this case the crockery will take longer to dry than normally.

Door Handle

Grip it firmly, pull it upwards first and then outwards. To close the door, simply push it back till it engages.

Salt Refilling Indicator



It tells you when the time has come to refill the salt in the container (see page 14).

Loading the crockery

Prior to arranging the crockery in the baskets, do remove the bigger food scraps (such as tiny bones, fish-bones, meat or vegetable scraps, fruit peels, etc) to prevent the filter from clogging, which would cause poor washing results. Open the door and slide out the baskets to be able to load the crockery.



Using the bottom basket (fig. 8-9).

The lower basket is designed to take pots, lids, dishes, salad-bowls, cutlery etc. The cutlery should be placed into the special small removable basket. To obtain good washing results, it is recommended to intermix spoons with knives and forks so that they will not stick together. We also suggest that you stack the cutlery into the special small basket with the handles facing downwards. However, if the handles of your cutlery are very thin it is advisable to stack the cutlery with the handles facing upwards, so as to prevent them from sticking out from the bottom of the small basket and thereby blocking the lower sprayarm.

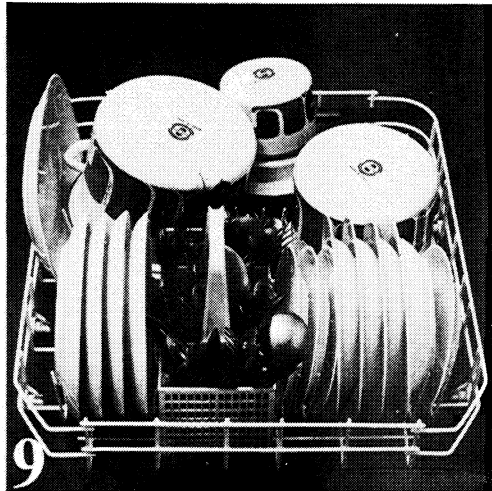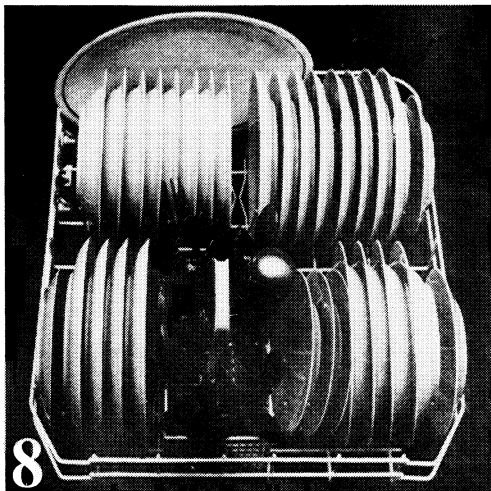

Using the top basket (fig. 10-11).


The top basket is designed to take dishes (dessert plates, saucers, flat plates, soup plates, up to a 24 cms (9.5 ins) diameter plus cups and glasses which should be arranged as shown in the respective pictures.

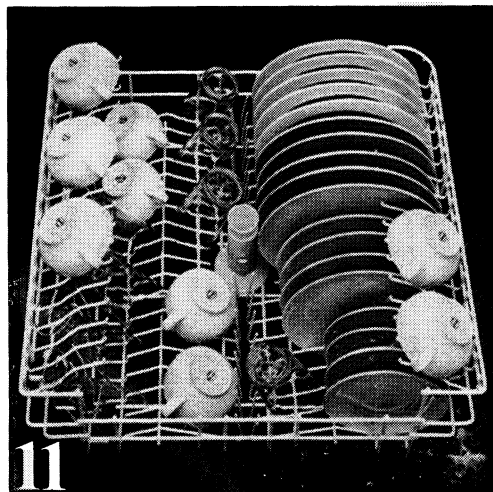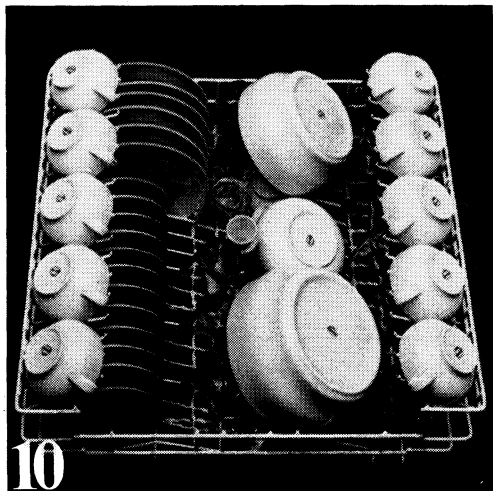

Top basket raising and lowering

If very big plates (over 27 cms (10.6 ins) and up to 31 cms (12.2 ins) diameter) are normally used, the top basket will have to be raised to the upper position. This will make it possible to properly arrange these extra large plates in the bottom basket. To raise the top basket, remove the basket itself after taking off the front runner stops (fig. 12), remove the slides (B - fig. 13) after taking off the rear runner stops and refit them on the higher position (A - Fig. 13), then replace the rear runner stops, the top basket and, finally, the front runner stops.

With the top basket on this upper position there is of course less loading clearance in the basket itself (which will in fact only take dishes up to 19 cms (7.5 ins)) and this will also prevent utilization of the basket's raised cup compartments.

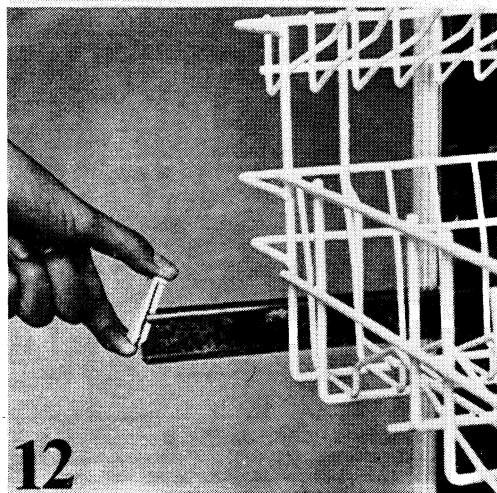

Important

When loading the crockery **be absolutely sure not to accidentally obstruct the water inlet funnel** at the centre of the upper basket.

Only a correct loading of the dishwasher will ensure good washing results.



After loading the crockery, make sure that the spray arms turn freely.

Jet strength control

The water jet strength of the upper spray arm can be adjusted by turning the water inlet funnel (A - fig. 14), to obtain the best washing results without risking that particularly light crockery is upset by the jets:

+ jet strength increase

- jet strength decrease.

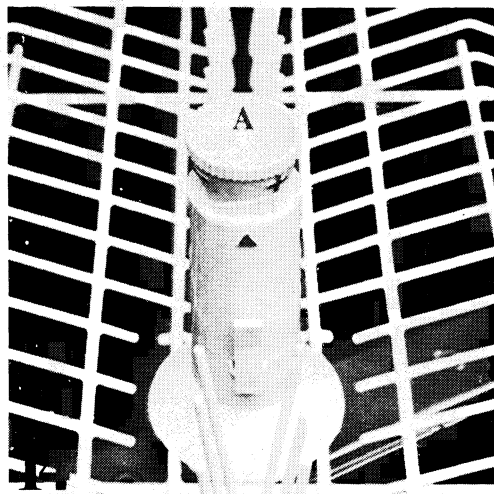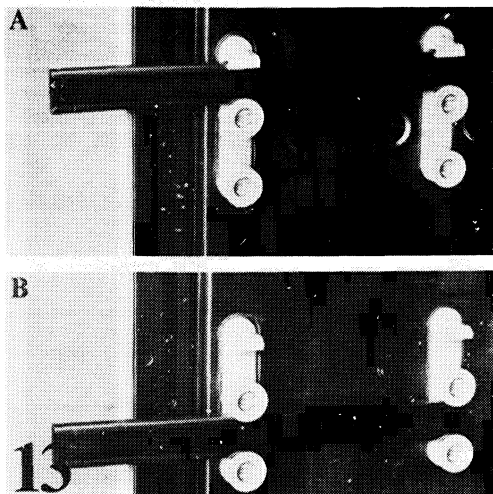

Loading the rinse aid

The rinse aid dispenser, which automatically dispenses the right amount of rinse aid at the proper time, is located inside the dishwasher door. This special liquid product is essential to ensure prompt drying of the crockery and to make it come out crystal-clear since it prevents formation of stains due to the salts contained in the water.

Filling: unscrew the lid of the container and pour in the rinse aid until the level of the liquid is about 2 cms (0.8 ins) from the rim of the filler plug, then replace the container lid. The level of the liquid should be periodically checked through the peephole to be found on the container lid (A - fig. 15).

When the peephole starts clearing up, a topping up becomes necessary.

The container will hold approx 125 cu. cms (7.6 cu. ins) of rinse aid, which quantity will last for about 60 wash cycles.

Quantity: the quantity of rinse aid dispensed automatically from the container can be adjusted, in each single case, to compensate for hard or soft water, more being required for hard water and less for soft.

To vary the quantity as required, turn the small disk located inside the rinse aid

filler cap which is adjustable to five different positions.



To turn the small disk use a screwdriver to be inserted into the special center groove (fig. 16).

Important

We would suggest that you initially leave the small disk on the preset position and that you adjust it as follows only after carrying out a few wash cycles:

increase the quantity of dispensed rinse aid if the crockery remains dull or shows occasional round spots;

decrease the quantity of dispensed rinse aid if the crockery turns out sticky or shows whitish streaky marks.

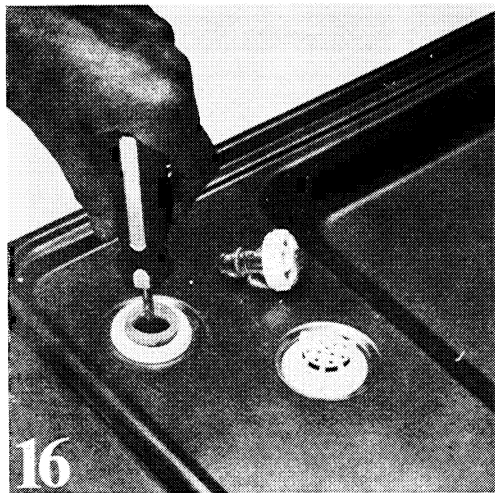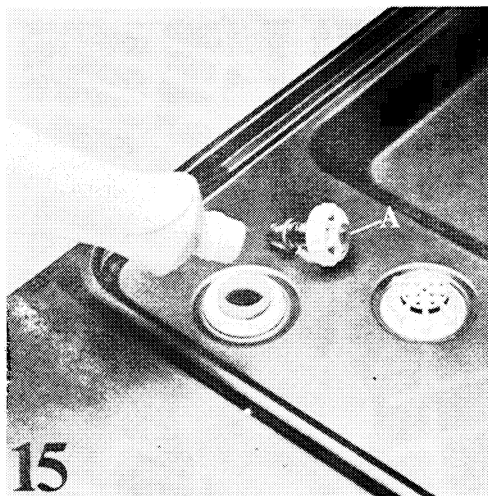

Loading the detergent

The washing powder should be poured into compartment «A» of the container located on the inner door (fig. 17). If the lid of the container happens to be closed, to open it simply push back catch «B» which keeps it clamped down.

Quantity of Detergent: the quantity to be loaded depends on the brand used, on the degree of soil and type of load. On the average, we recommend 4 teaspoonfuls 25 grams (0.88 oz) if you have to wash normally soiled crockery, and up to 5 teaspoonfuls 30 grams (1 oz), for heavily soiled crockery.

Also take into account the detergent manufacturer's recommendations.

After loading the detergent in the proper compartment, close the lid.

The detergent will be automatically dispensed at the proper time.


Detergent for the prewash: this is required only for cycle No. 1 (intensive), and should be poured into the small compartment that normally remains empty after the detergent dispenser lid is closed. The quantity to be loaded is the same as for the main wash.

Important

Only use detergents specially made for dishwashers;

To obtain fine washing results you should only use top quality detergents;

An insufficient quantity of detergent will give poor washing results, whereas an excessive quantity will not improve the results but will only represent a waste.

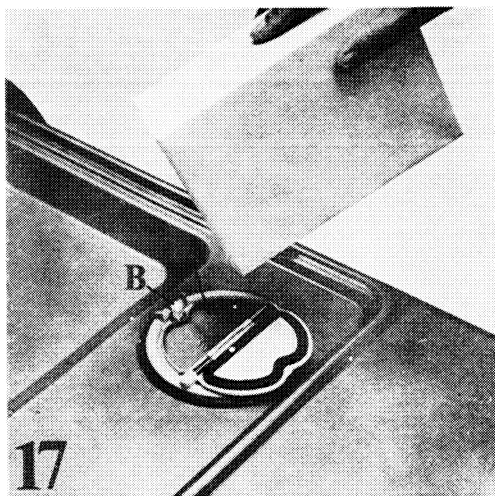

Water softener

Depending on the area, water contains more or less limestone and mineral salts which tend to deposit on the crockery forming whitish markings that eventually cause all surfaces to become dull. The dishwasher incorporates a water softener which purifies the water of all limestone for dishwashing. In this way the cleaning action is greatly enhanced, no incrustations form and during the rinsing phases the crockery is restored to its original brilliance.

Operation of the water softener is completely automatic.

Salt filling

After unscrewing the cap, fill 1,5 kg (3,3 lbs) of coarse cooking salt using the funnel supplied with the machine into the container on the tub bottom (fig. 18).

Carefully replace the container screwcap, making sure that the threading and the gasket have no trace of salt.

After this, it will suffice to periodically top up the container with salt only.

To remind you of this operation, the machine incorporates a salt refill indicator (6 page 8), graduated from number 1 to 20.


Following each wash cycle carried out, the indicator inches forward by one number so that, when the highest (20) number is reached, it means that salt has to be refilled even if the supply is not completely depleted.

Important

When the appliance is put into operation for the first time, it is recommended that you carry out a complete wash cycle without loading any salt in the respective container.

All salt refilling and topping up operations **should be carried out immediately prior to starting any one of the complete wash cycles** (with the exception of the RINSE & HOLD programme) in order to prevent the possibility that any salt granules or salt water, which might flow out of the salt container during refilling of the same, remain for some time on the bottom of the wash tub without being properly diluted.

Use only coarse cooking salt or specific equivalent products for water softeners.

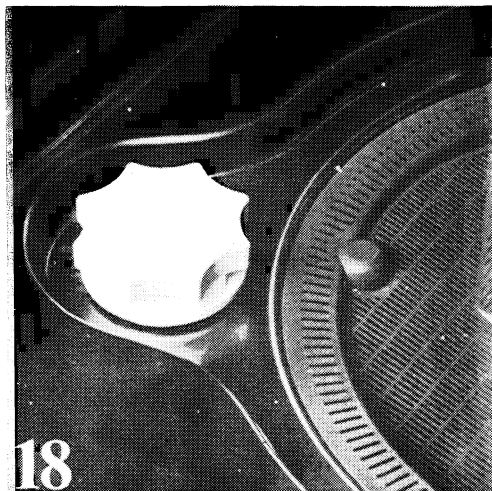

Adjusting the water softener

The water softener is preset for water having a maximum hardness of 40° F (22° d). This setting is designed to suit most of the field requirements. At any rate, if the water hardness exceeds 40 °F (up to a maximum of 60 °F), the water softener may be adjusted accordingly. This operation should be carried out by qualified personnel who should proceed as follows:

Remove the worktop as described on page 4 and 5.

Drill (pierce a 1-2 mm vent hole on point A of the plastic tank as shown in fig. 19.

Replace the worktop.

Under normal operating conditions, the supply of salt in the container will last for about 20 wash cycles, whereas by making the above-mentioned inlet hole, the salt supply will only last for about half as many wash cycles.

Therefore, the salt will have to be refilled in the respective container every time the salt refill indicator shows number 10 and number 20 respectively.

Starting the machine

After connecting the machine to the water supply and to the electric power supply close the door and then proceed as follows:

- Depress the required wash programme button (4).
- Depress the economy drying button (3), if so required.
- Depress the On-off pushbutton (1).
- Depress the Start control (2).

At this point the machine starts operating.

Stopping the machine

When the wash cycle is completed, the machine stops automatically but the pilot lamp remains alight to indicate that the appliance is still live; therefore, to turn the machine Off completely, depress the On-off pushbutton (1) again.


If you require to stop the machine at any moment during the wash cycle, simply depress the above mentioned On-off pushbutton.

We would recommend not to change programme while the machine is operating.

To cancel a wash cycle being carried out, you should turn off the machine and select program 6 (Rinse & Hold) and switch the machine on again. After a short while the machine will stop and the correct program can then be selected.

It is not advisable to open the door during operation. At any rate, the machine incorporates a safety device which stops operation when the door is opened.

We would also recommend, at the end of a wash cycle, that you turn off the water tap and unplug the machine from the wall socket.

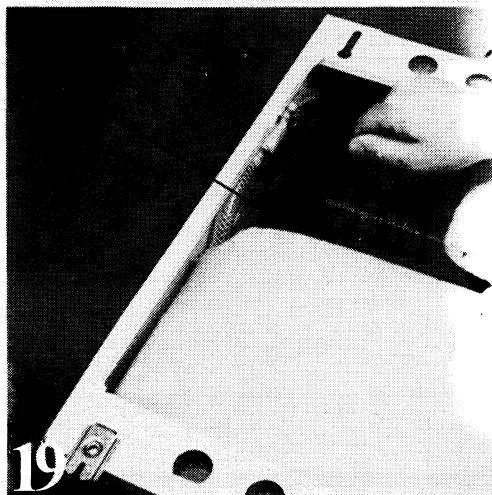

Washing programmes

Programme Type of load and
degree of soil

1

Extremely soiled
crocery, pots, pans
and cutlery

2

Very soiled
crocery, pots, pans
and cutlery

3

Normally soiled crocery,
pots, pans and cutlery,

4














 


 

 
Lightly soiled crocery,
pots, and cutlery

5

Light soiled dishes
and glasses with
delicate decorations

6

Partial load (to be
completed
later in the day)

Recommended programme	Buttons to be depressed	Cycle description
Intensive with prewash	  	Prewash at 55°C/ Main wash up to 65°C/ 2 cold rinses / 1 hot rinse / hot air drying
Energetic with prewash	  	Cold prewash / Extended main wash up to 65 °C / 2 cold rinses 1 hot rinse / hot air drying
Universal with prewash	  	Cold prewash / Main wash up to 65 °C 2 cold rinses / 1 hot rinse / hot air drying
Economy with prewash	  	Cold prewash / Extended main wash up to 55 °C / 2 cold rinses 1 hot rinse / hot air drying
Gentle no prewash	  	Main wash up to 55 °C 2 cold rinses / 1 hot rinse Hot air drying
Rinse & hold	  	Cold rinse to prevent food scraps from drying up and sticking to the dishes.
Economy Drying		If required, depress after selecting wash cycle


Care and cleaning

Cleaning the filter assembly


The filter assembly consists of a large circular fine-mesh filter (A) and two small cone-shaped filters (B - C), fitting one within the other, both being housed in the large filter (fig. 20).

We recommend that you inspect the two small filters B and C after each wash cycle, removing any food scraps that you might detect.

These two concentric filters can be removed by slightly turning the outer filter B anticlockwise until it disengages from its seat (fig. 20).

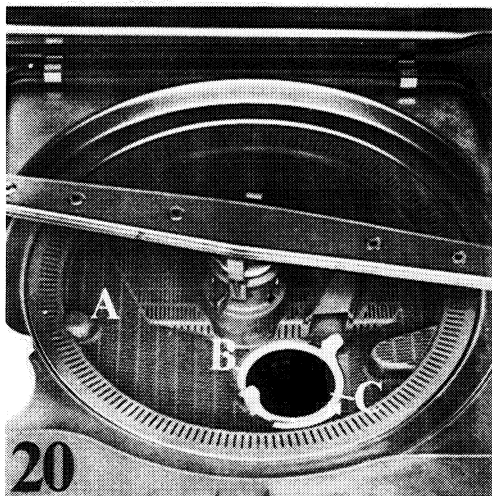

21

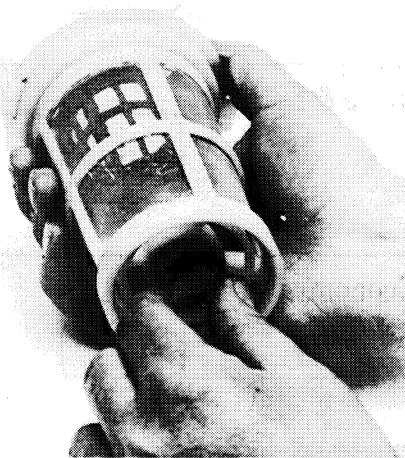

To remove the inner filter C, squeeze together the two small plastic tongues (fig. 21) sticking out from the bottom of outer filter B.

The large fine-mesh filter (A) should be cleaned from time to time (roughly once every two months) on both sides with a suitable brush.

To remove this large filter (A), take off the bottom sprayarm, and unlock part D (fig. 22).

Replace the assembly reversing the above procedure, making sure that the outer rim of the circular filter fits correctly in its housing on the tub bottom.

The dishwasher should not be operated without the filters being correctly installed.



Periodic cleaning of the filters is essential for a smooth and efficient operation of the machine.

Cleaning the sprayarm nozzles

The holes of the sprayarm nozzles should not be obstructed as this would greatly reduce the effectiveness of the washing cycle.

To remove the bottom sprayarm release it from its securing catches and pull it out. To clean the nozzles of the top sprayarm, slide out the top basket whereby the sprayarm will become perfectly accessible.

To remove it, disengage conveyor A from its coupling and unscrew ring nut B (fig. 23).

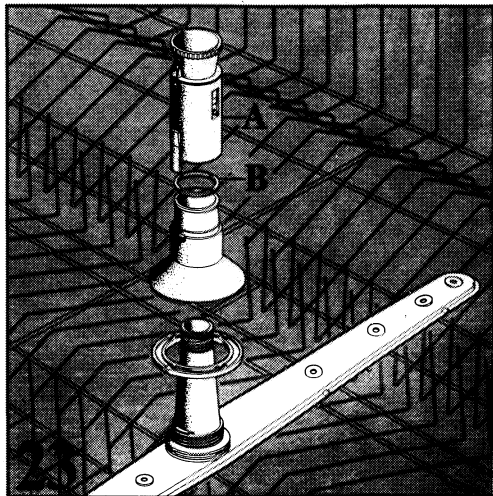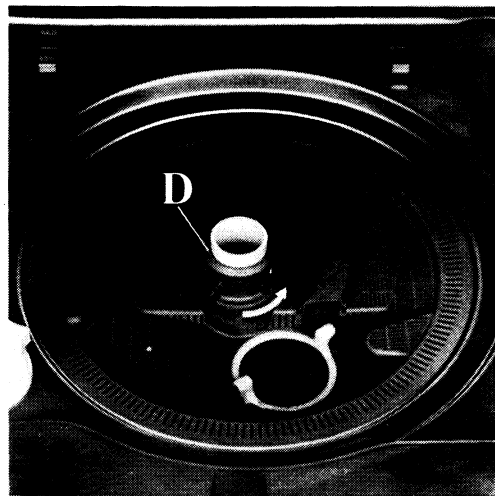

Cabinet cleaning

The outer cabinet and the control board in particular should be wiped periodically with a soft damp cloth and, if necessary, with a little neutral detergent. To clean these parts, never use abrasive products which might scratch the surface.

Long idle periods

If the machine is not to be used some time, it is advisable to take the following precautions:

Disconnect the machine from the electrical network and from the water supply;

Fill up the rinse aid container;

Leave the door ajar to prevent bad smells from lingering in the machine;

Leave the inner part of the machine clean, even if there is some crockery left, by carrying out at least a rinse & hold programme (No. 6).

If you are moving

If you are moving and the dishwasher is transferred to a new location, make sure that the machine is not tilted too much during transport.

Useful hints

the meals, conveniently arranging the various pieces in the respective compartments.

If only partial loads are placed in the machine, do carry out a rinse & hold programme until the load is completed later in the day.

We would also suggest that you take into account the capacity and the space availability of your dishwasher when buying new crockery, particularly pots and pans, all of which should be suitable to be washed in the dishwasher.

Pots: this machine will also wash pots.

Needless to say, the washing results depend on how soiled the pots are.

If there are plenty of dried up food scraps or if there are burnt scraps, it is advisable to pre-rinse the pots by hand or to pre-soak them so as to loosen the scraps.

Cutlery: as a rule, you should not wash in the dishwasher cutlery having wooden or horn handles or glued parts which will not withstand hot water.

Silver Cutlery: this may be washed in the dishwasher with very good results, provided it does not come in touch with steel cutlery. The fact is that the oxidizing effect of the soapy water might cause unsightly spots due to the chemical interaction between the two metals. Therefore, they should be arranged separately in the cutlery basket.

Aluminium Ware: Aluminium is not very suitable for dishwashing.

Decorated Chinaware: some decorations might fade when machine-washed, just as it sometimes happens when washing it by hand, and we would therefore suggest that you wash one single piece a number of times in the machine and then compare it with the other pieces to see if the decoration has faded. At any rate, use only programme number 5 for such delicate crockery.

Crystalware and Plastic Ware: if these are not certified to withstand machine washing, you had better wash them by hand to play it safe.

It stands to reason that a machine of this standing should be utilized and exploited rationally and to its full capacity to make the most of it. Therefore, place the crockery in the machine immediately after

Something not working

If there is a malfunction, make the following checks before you call for service: it may save you trouble and expense.

The Machine will not start:

check that;
the door is correctly closed;
the water tap is full open;
the plug is perfectly inserted in the wall socket;
the fuses of the wiring system are not blown.

The machine will not drain:

check that;
the drain hose is not kinked (bent);
the filter is not clogged.

The crockery does not come out clean:

check that;
the detergent used is suitable for dishwashers and the quantity dispensed is the right one;
the crockery is correctly arranged in the baskets;
the sprayarms turn freely and the nozzles are not obstructed;
the filter is clean.

There are limestone deposits on the crockery:

check that;
there is enough salt in the container;
the rinse aid supply is not depleted;
the quantity of rinse dispensed is not insufficient.

There are traces of tea, coffee or lipstick left on the crockery:

check that;
the quantity of detergent loaded in the machine is not insufficient.

Instructions for covering the door and the lower panel

The door and the lower panel of the appliance are fitted with suitable frames which can easily be removed to make it possible to cover them with a sheet of laminated plastic (or stainless steel). In this way the dishwasher can be matched to the design of the kitchen furniture.

The dimensions of the laminated covering sheet should have the following measurements:

Door Covering Sheet:


Width	590 mm
Height	461 mm
Max. Thickness	4 mm

Lower Panel Covering Sheet

Width	590 mm
Height	114 mm
Max. Thickness	4 mm

To apply the covering sheet, proceed as follows:

- Remove the lower panel (fig. 24) by loosening, without removing them, the two securing screws, and then free it from its top catch;
- Remove the frames from the door and the lower panel after unscrewing the respective securing screws (fig. 24);
- Fit the covering sheet and screw down the frames;
- Refit the lower panel by fastening it first on the top catch and then retighten the two lower screws.

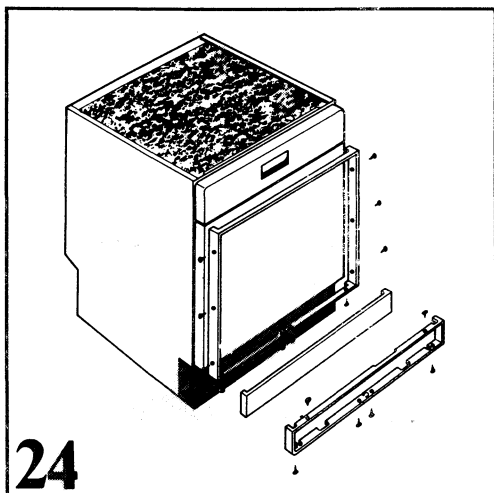



ZANUSSI STANDARD GUARANTEE CONDITIONS

This guarantee is in addition to your statutory and other legal rights which will not be excluded or in any way diminished by the return of the guarantee card.

We, Zanussi Limited, undertake that if, within twelve months (24 months for TV sets) of the date of the purchase, this ZANUSSI appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same **FREE OF ANY CHARGE** for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.

- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.

- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.

- The appliance is still in the possession of the original purchaser.

All service work under this guarantee must be undertaken by a Zanussi Network Service Centre (or the Zanussi Authorised TV Service Dealer).

Any appliance or defective part replaced shall become our property.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.

- Costs incurred for calls to put right machines improperly installed or calls to machines outside the UK and the Republic of Ireland.

- Appliances found to be in use within a commercial environment, plus those which are the subject or rental agreements.

- Television receivers - routine adjustment, or poor reception resulting from a source outside of the receiver.



ZANUSSI 5 YEAR COVER CONDITIONS

For a once-only payment you can extend your Standard Guarantee to 5 years. All the conditions and exclusions of the Standard Guarantee apply.

Notes

1. Products supplied as "seconds", refurbished, damaged or shop-soiled are not eligible for Zanussi 5 year cover.

2. The issue of a cover does NOT by virtue of our having done so, nullify the exclusions.

3. The Engineer will need to check the details of your Cover card and may make a charge for his services if it is not presented to him at the time of his call.

4. The date of purchase, or the date of initial payment (deposit) of the appliance will be deemed the date of commencement of cover.

5. Covers issued are not refundable or transferable.

ZANUSSI

The appliance of science