

User manual

Dishwasher

ZDI 600 QX



Thank you for selecting our appliance

We wish you lots of enjoyment with your new appliance and we hope that you will consider our brand again when purchasing household appliances.

Please read this user manual carefully and keep it throughout the product life cycle as a reference document. The user manual should be passed on to any future owner of the appliance.

Contents

Safety information _____	3	Use of detergent _____	16
Control panel _____	4	"Multitab function" _____	17
Select and start a washing programme _____	7	Unloading the dishwasher _____	18
Washing programmes _____	8	Care and cleaning _____	18
First use _____	9	Environment concerns _____	20
Set the water softener _____	10	What to do if... _____	21
Use of dishwasher salt _____	11	Technical data _____	23
Use of rinse aid _____	12	Consumption values _____	23
Adjusting the dosage of rinse aid _____	12	Hints for test institutes _____	23
Load cutlery and dishes _____	13	Installation _____	24

Subject to change without notice



Safety information

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

Correct use

- This dishwasher is only intended for washing household utensils suitable for machine washing.
- Do not put any solvents in the dishwasher. This could cause an explosion.
- Knives and other items with sharp points must be loaded in the cutlery basket with their points down or placed in a horizontal position in the upper basket.
- Only use products (detergent, salt and rinse aid) suitable for dishwashers.
- Avoid opening the door whilst the appliance is in operation, hot steam may escape.
- Do not take any dishes out of the dishwasher before the end of the dishwashing cycle.
- After use, isolate the appliance from the power supply and turn off the water supply.
- This product should be serviced only by an authorised service engineer, and only genuine spare parts should be used.

- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons will cause injury or serious malfunctioning. Contact your local Service Force Centre. Always insist on genuine spare parts.

General safety

- Dishwasher detergents can cause chemical burns to eyes, mouth and throat. Could endanger life! Comply with the safety instructions of the dishwasher detergent manufacturer.
- The water in your dishwasher is not for drinking. Detergent residues may still be present in your machine.
- Ensure that the door of the dishwasher is always closed when it is not being loaded or unloaded. In this way you will avoid anybody tripping over the open door and hurting themselves.
- Do not sit or stand on the open door.

Child safety

- This appliance is designed to be operated by adults. Don't allow children to use the dishwasher unsupervised.
- Keep all packaging well away from children. There is risk of suffocation.
- Keep all detergents in a safe place out of children's reach.
- Keep children well away from the dishwasher when the door is open.

Installation

- Check your dishwasher for any transport damage. Never connect a damaged machine. If your dishwasher is damaged contact your supplier.
- All packaging must be removed before use.
- Any electrical and plumbing work required to install this appliance must be carried out by a qualified and competent person.
- For safety reasons it is dangerous to alter the specifications or attempt to modify this product in any way.
- Never use the dishwasher if the electrical supply cable and water hoses are damaged;


or if the control panel, work top or plinth area are damaged such that the inside of the appliance is freely accessible. Contact your local Service Force centre, in order to avoid hazard.

- All sides of the dishwasher must never be drilled to prevent damage to hydraulic and electric components.

CAUTION!

For electrical and water connection carefully follow the instructions given in specific paragraphs.

Control panel

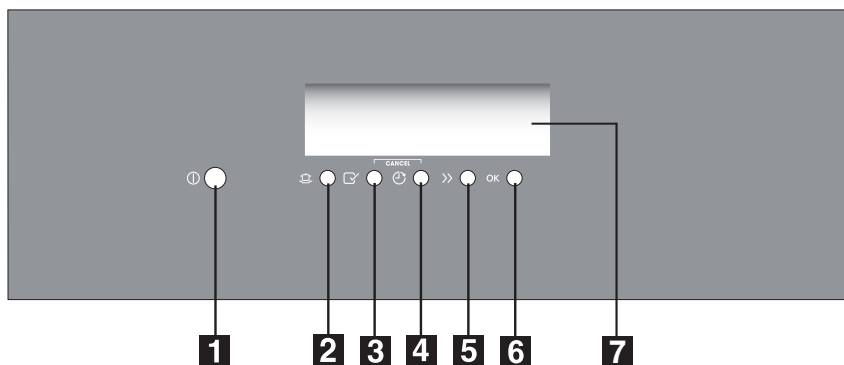

1. **On/Off** button
2. **Programme selection** button
3. **Option** button
4. **Delay start** button
5. **Scrolling** button
6. **OK** button
7. **Display**

IMPORTANT!

A sequence of displayed and audible signals will guide you in the setting up of the appliance, the selection of washing programmes and options. Follow the instructions that appear in the display.

Scrolling button

This button has a double function:

- selecting within "programme menu",
- selecting within "option menu" and "submenu".

OK button

Is necessary to:

- confirm / memorize any option,
- start a washing programme.

Delay start button

Allows the start of the washing programme to be delayed from 1 hour to 19 hours.

The countdown will decrease with steps of 1 hour. Only in the last hour the decrease is in minutes.

Once the countdown has elapsed the washing programme will start automatically.

IMPORTANT!

The "Option" and "Delay start" buttons if pressed simultaneously can:

- cancel a washing programme in progress,
- cancel the setting of an option

It is also possible to return to the factory setting for the following options:

- **LANGUAGE**
 - **BRIGHTNESS** (factory setting level 10)
- In setting mode press for about 6 seconds these 2 buttons simultaneously; the default language message will appear in the display.

Option button





press this button to enter a menu of options; press again to exit from the menu:

How to set the options


1. Press "**Option**" button.
2. Press "**Scrolling**" button until desired option is displayed.
3. Press "**OK**" to confirm and enter submenu.
4. Press "**Scrolling**" button until required submenu is displayed.
5. Press "**OK**" to confirm.
6. To exit from the menu press "**Option**" button.

Switching on for the first time - setting the language

1. Press "**On/Off**" button.
2. In the display appears the default language message.
If you want to confirm the default language press "**OK**"
3. If you want to set a different language; use the "**Scrolling**" button until the required language appears in the display.
Press "**OK**" to confirm.

Option menu	Option submenu
ECO DRY Allows you to shorten the drying phase to only 15 minutes. It is not available with all washing programmes (see "Washing programmes" chart)	ON  OFF
EXTRA RINSE Adds another rinse phase to set programmes. Not available with all washing programmes (see "Washing programmes" chart).	ON  OFF
MULTITAB Multitab function; allows the use of the combi detergent tablets (see "Multitab function").	ON  OFF
RINSE AID Allows you to activated/deactivated the rinse aid dispenser. Factory setting: activated.	ON OFF
HARDNESS Allows you to set electronically the water softener.	
LANGUAGE Allows you to select the language in which the messages are displayed.	
SOUND VOLUME Allows to adjust the volume of audible signals. 5 levels available.	ON OFF  (Level 0)
BRIGHTNESS Allows you to increase or decrease the brightness of the background of the display. 10 different levels can be selected.	
CONTRAST Allows you to increase or decrease the contrast of the display. 10 different levels can be selected.	

Display

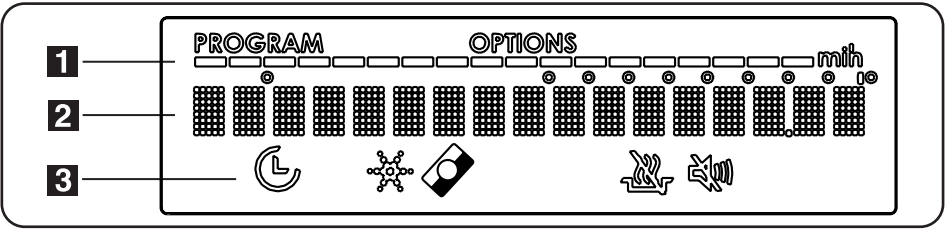

1. **Washing programmes:** during the progress of the programme these little bars indicate the phase of the washing pro-






gramme: prewash - main wash - rinses - drying.

2. In this row several details are displayed:
 - **Setting mode** guide to the selection of the washing programme - duration time of the programme, options (when together with the washing programme one or more options are set, the update

of the programme duration will occur automatically).

- **Once the programme has started** indicates the sequence of the running phase and the running time of the programme in progress.

3. **Symbols:** indicate the options (see chart).

The symbols have the following meaning:	
	DELAY START: fixed in setting mode; flashing when countdown in progress
	EXTRA RINSE: illuminated when this option is active.
	MULTITAB: illuminated when the Multitab function is active.
	ECO DRY: illuminated when this option is active.
	SOUND VOLUME: exclusion of the volume for audible signals.

Select and start a washing programme

1. Check that the baskets have been loaded correctly and that the spray arms are free to rotate.
2. Check that the water tap is opened.
3. Press the **On/Off** button.
4. Select the washing programme. (See "Washing programmes chart").
5. If required, postpone the start time of the washing programme.
6. Set, if required, the options.
7. Press the **OK** button and close the door, the washing programme will start automatically.

If the delay start has been set, the countdown will start automatically. Once the delay start has elapsed the programme will start automatically.

The opening of the door will interrupt the countdown. Close the door; the countdown will continue from the point at which it was interrupted.



WARNING!

Interrupt or cancel a washing programme in progress ONLY if it's absolutely necessary. Attention! Hot steam may escape when the door is opened. Open the door carefully.

Cancel a delay start or a washing programme in progress

1. Press simultaneously both **Option** and **Delay start** buttons.
 2. The message **CONFIRM CANCEL ?** is displayed.
 3. Press **OK** button to confirm.
 4. The appliance returns to setting mode and the message **CHOOSE PROGRAMME** is displayed.
- If a delay start is cancelled, also set the washing programme has been cancelled.
 - If a new washing programme is set, check that there is detergent in the detergent dispenser.

Interrupt a washing programme in progress

- Open the dishwasher door; the programme will stop. The message **PLEASE CLOSE DOOR** is displayed.

- Close the dishwasher door; the programme will continue from the point at which it was interrupted.

End of the washing programme

- The dishwasher will automatically stop and an acoustic signal informs you of the end of the washing programme.
 - The messages **PROGRAMME FINISHED** alternated with **PLEASE SWITCH OFF** are displayed.
1. Press the **On/Off** button.
 2. Open the dishwasher door.
Leave the door ajar and wait a few minutes before removing the dishes; in this way they will be cooler and the drying will be improved

Washing programmes

Programme	Degree of soil	Type of load	Programme description
Automatic 1)	Normal soil	Crockery, cutlery, pots and pans	Prewash Main wash 1 or 2 intermediate rinses Final rinse Drying
60° Quick 2)	Light soil	Crockery and cutlery	Main wash Final rinse

Programme	Degree of soil	Type of load	Programme description
55° Quick	Normal soil	Crockery and cutlery	Main wash 1 intermediate rinse Final rinse
70° Intensive	Heavy soil	Crockery, cutlery, pots and pans	Prewash Main wash 2 intermediate rinses Final rinse Drying
50° Eco ³⁾	Normal soil	Crockery and cutlery	Prewash Main wash 1 intermediate rinses Final rinse Drying
45° Glass	Normal soil	Delicate crockery and cutlery	Main wash 1 intermediate rinse Final rinse Drying
Plate Warmer	This is a programme both designed to heat plates before serving or remove dust from dishes which have not been used for a long time.		1 hot rinse This programme does not require the use of detergent.
Prewash	Any. Partial load (to be completed later in the day).		1 cold rinse (to avoid food scraps from sticking together). This programme does not require the use of detergent.

1) During the "Automatic" washing programme the amount of soil on the dishes is determined by how cloudy the water is. The programme duration, water and energy consumption levels can vary; this depends upon if the appliance is fully or partially loaded and if the dishes are lightly or heavily soiled.

The temperature of the water is automatically adjusted between 45°C and 70°C.

2) Ideal for washing a partially loaded dishwasher. This is perfect daily programme, made to meet the needs of a family of 4 persons who only wish to load breakfast and dinner crockery and cutlery.

3) Test programme for test institutes.

First use

Before using your dishwasher for the first time:

- Ensure that the electrical and water connections comply with the installation instructions
- Remove all packaging from inside the appliance
- Set the water softener
- Pour 1 litre of water inside the salt container and then fill with dishwasher salt

- Fill the rinse aid dispenser

If you want to use combi detergent tablets such as: "3 in 1", "4 in 1", "5 in 1" etc... set the Multitab function (see "Multitab function").

Set the water softener

The dishwasher is equipped with a water softener designed to remove minerals and salts from the water supply, which would have a detrimental or adverse effect on the operation of the appliance.

The higher the content of these minerals and salts, the harder your water is.

Water hardness is measured in equivalent scales, Clarke degrees, French degrees (°TH)



and mmol/l (millimol per litre - international unit for the hardness of water).

The softener should be adjusted according to the hardness of the water in your area. Your local Water Authority can advise you on the hardness of the water in your area.

Water hardness			Adjusting the water hardness setting		Use of salt
Clarke	°TH	mmol/l	manually	electronically	
64 - 88	91 - 125	9,0- 12,5	2	level 10	yes
53 - 63	76 - 90	7,6 - 8,9	2	level 9	yes
46 - 52	65 - 75	6,5 - 7,5	2	level 8	yes
36 - 45	51 - 64	5,1 - 6,4	2	level 7	yes
28 - 35	40 - 50	4,0 - 5,0	2	level 6	yes
23 - 27	33 - 39	3,3 - 3,9	2	level 5	yes
18 - 22	26 - 32	2,6 - 3,2	1	level 4	yes
13 - 17	19 - 25	1,9 - 2,5	1	level 3	yes
5 - 12	7 - 18	0,7 - 1,8	1	level 2	yes
< 5	< 7	< 0,7	1	level 1	no

The water softener must be set in both ways: manually, using the water hardness dial and electronically.

Setting the water softener manually (see table)

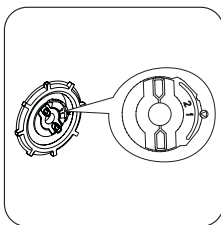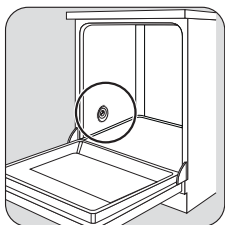

Set switch to position 1 or 2

The water softener is factory set at position 2.

Setting electronically



The dishwasher is factory set at level 5. Enter **Option menu - HARDNESS**.

Using the **scrolling** button set the level of the water softener according to the hardness of the water in your area (see chart).

Use of dishwasher salt

CAUTION!


Use only special salt suitable for dishwashers.

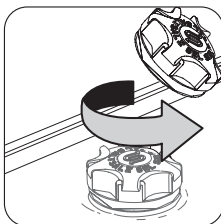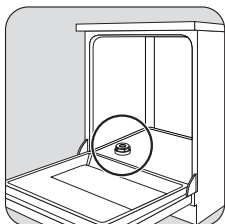


Unscrew the cap.




Only before filling with salt for the first time, fill the salt container with water.

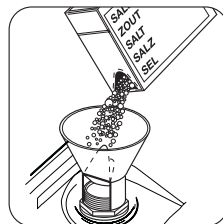

Using the funnel provided, pour in the salt until the container is filled with salt.

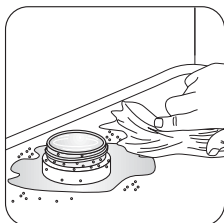

Remove any trace of salt.

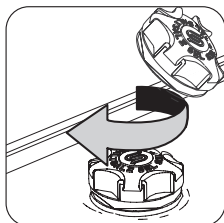

Replace the cap tightly turning it clockwise until it stops with a click.

IMPORTANT!

Immediately start a complete programme.

IMPORTANT!



Water will overflow from the container as salt is added.

IMPORTANT!


The salt container will require topping up periodically.

You are reminded of this by a displayed message: **REFILL SALT.**

Use of rinse aid

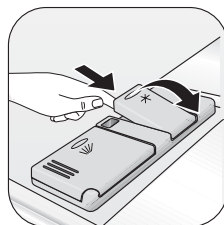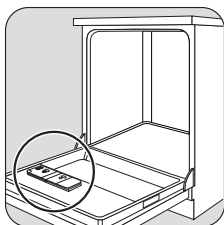

Open the lid.

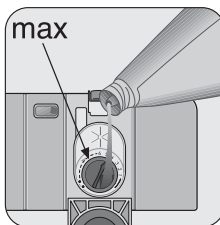

Fill up with rinse aid. The maximum level for filling is indicated by "max"



Clean up any rinse aid which overflows. Close the lid and press until it locks.

! CAUTION!

Never fill the rinse aid dispenser with any other substances (e.g. dishwasher cleaning agent, liquid detergent). This would damage the appliance.



IMPORTANT!

The rinse aid container will require topping up periodically.
You are reminded of this by a displayed message: **REFILL RINSE AID.**


Adjusting the dosage of rinse aid

Increase the dose if there are drops of water or lime spots on the dishes after washing.


Reduce the dose if there are whitish streaks on the dishes or a bluish film on glassware or knife blades.

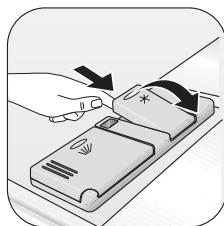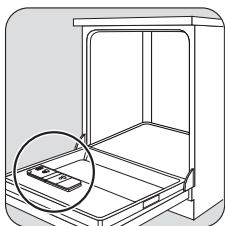

Open the lid.

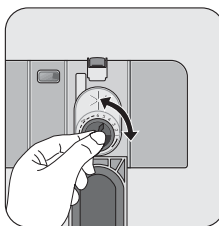

Set the dosage level. (The dose is factory set in position 4).

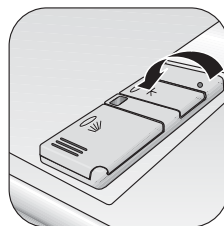

Close the lid and press until it locks.

Load cutlery and dishes

Sponges, household cloths and any object that can absorb water may not be washed in the dishwasher.


- Before loading the dishes, you should:
 - Remove all left over food and debris.
 - Soften remnants of burnt food in pans
- When loading the dishes and cutlery, please note:
 - Dishes and cutlery must not impede the rotation of the spray arms.
 - Load hollow items such as cups, glasses, pans, etc. with the opening downwards so that water cannot collect in the container or a deep base.
 - Dishes and items of cutlery must not lie inside one another, or cover each other.
 - To avoid damage to glasses, they must not touch.
 - Lay small objects in the cutlery basket.
- Plastic items and pans with non stick coatings have a tendency to retain water drops; these items will not dry as well as porcelain and steel items.
- Light items (plastic bowls etc.) must be loaded in the upper basket and arranged so they do not move.

For washing in the dishwasher the following cutlery and dishes
are not suitable:

- Cutlery with wooden, horn, china or mother-of-pearls handles.
- Plastic items that are not heat resistant.
- Older cutlery with glued parts that are not temperature resistant.
- Bonded cutlery items or dishes.
- Pewter or copper items.
- Lead crystal glass.
- Steel items prone to rusting.
- Wooden platters.
- Items made from synthetic fibres.

are of limited suitability:


- Only wash stoneware in the dishwasher if it is specially marked as being dishwasher-safe by the manufacturer.
- Glazed patterns may fade if machine washed frequently.
- Silver and aluminium parts have a tendency to discolour during washing: Residues, e.g. egg white, egg yolk and mustard often cause discolouring and staining on silver. Therefore always clean left-overs from silver immediately, if it is not to be washed straight after use.

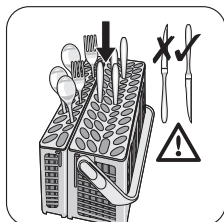

Forks and spoons should be placed in the removable cutlery basket with the handles facing downwards and the knives with their handles facing upwards.


If the handles protrude from the bottom of the basket, obstructing the lower spray arm, load the cutlery with the handles facing upwards.

Mix spoons with other cutlery to prevent them from sticking together.

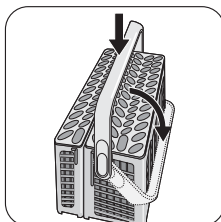


To make loading of the cutlery basket easier, lower the cutlery basket handle.


For best results we recommend you to use the cutlery grids.

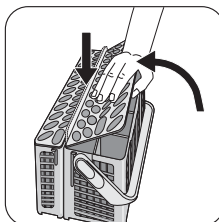


If the size and dimensions of the cutlery do not allow the use of the grids, they can be easily hidden.

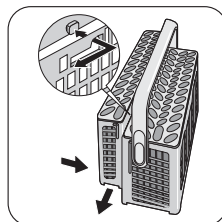



The cutlery basket is in two parts which can be separated to give greater loading flexibility. To separate the two parts, slide them horizontally in opposite directions and pull them apart. To reassemble, reverse the procedure.

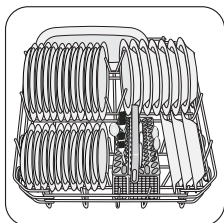


Load the lower basket. Arrange serving dishes and large lids around the edge of the basket.

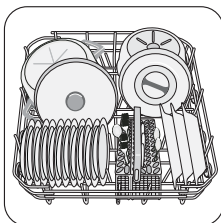


The two rows of prongs on the lower basket can be easily lowered to allow you to load pots, pans and bowls.

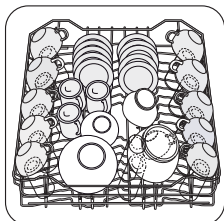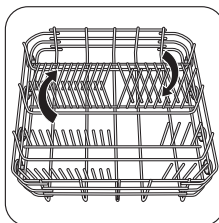


Load upper basket. Light items (plastic bowls etc.) must be loaded in the upper basket and arranged so they do not move.

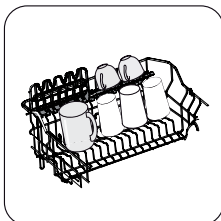

Glasses with long stems can be placed upside down in the cup racks. For taller items, the cup racks can be folded upwards.

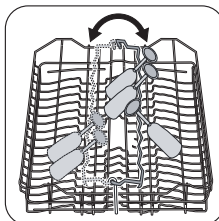

For glasses with long stems (according to the size and dimensions), set the glass holder to the left or right position.

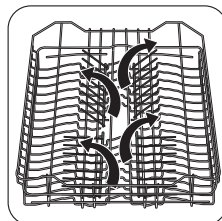

The central rows of prongs can be easily lowered to improve loading flexibility.


Adjusting the height of the upper basket

If washing very large plates you can load them in the lower basket after moving the upper basket to the higher position.

	Maximum height of the dishes in :	
	upper basket	lower basket
With upper basket raised	20 cm	31 cm
With upper basket lowered	24 cm	27 cm

To move to the higher position proceed as follows:

1. Pull out the basket until it stops.
2. Carefully lift both sides upwards until the mechanism is engaged and the basket is stable.

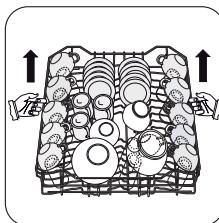

To lower the basket to the original position proceed as follows:

1. Pull out the basket until it stops.
2. Carefully lift both sides upwards and then allow the mechanism to drop back down slowly, keeping hold of it.

IMPORTANT!

Never lift or lower the basket on one side only

IMPORTANT!



When the basket is in the higher position you will not be able to use the cup racks.

Use of detergent


IMPORTANT!

Only use detergents suitable for dishwashers.


Observe the manufacturer's dosing and storage recommendations.

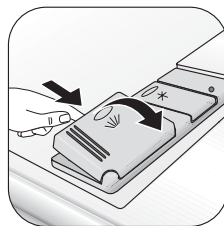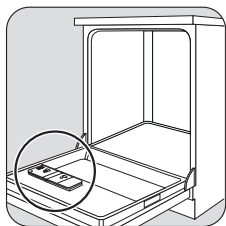


Open the lid.

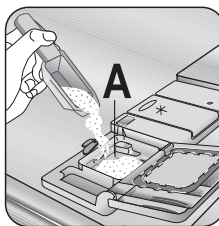


Fill in the detergent in compartment A.

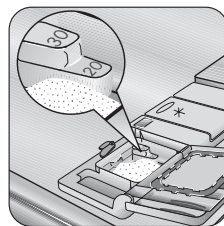

Observe the dosing levels.

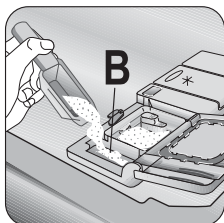

For programmes with pre-wash add an additional detergent dose in compartment **B**.

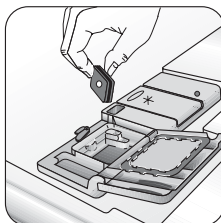

When using detergent tablets: place detergent tablets in compartment **A**.



Close the lid.

Detergent tablets

Detergent tablets from different manufacturers dissolve at different rates. For this reason, some detergent tablets do not attain their full

cleaning power during short washing programmes. Therefore, please use long washing programmes when using detergent tablets, to ensure the complete removal of detergent residuals.

"Multitab function"

This appliance is equipped with the "Multitab function", that allows the use of the "Multitab" combi detergent tablets.

These products are detergents with a combined cleaning, rinsing and salt functions. They can also contain other different agents depending on which kind of tablets you choose ("3 in 1", "4 in 1", "5 in 1" etc...)

Check whether these detergents are suitable for your water hardness. See the manufacturers instructions.

Once this function is selected it will remain active also for the following washing programmes. With the selection of this function the inflow of rinse aid and salt from each respective supply container is automatically deactivated and also the displayed messages for salt and rinse aid are deactivated.

Select the "Multitab function" before the start of a washing programme.

With the use of the "Multitab function", the cycle durations may change. In this case, in the display, the indication of the time is automatically updated.

Once the programme is running, the "Multitab function" can **NO** longer be changed.

If you want to exclude the "Multitab function" you have to cancel the programme setting and then deactivate the "Multitab function". In this case you have to set a washing programme (and desired options) again.

If the drying results are not satisfactory we suggest that you:

1. Fill up the rinse aid dispenser with rinse aid.
 2. Activate the rinse aid dispenser.
 3. Set the rinse aid dosage to position 2.
- The activation/deactivation of the rinse aid dispenser can only be possible with the "Multitab" function active.

If you decide to turn back to the use of standard detergent system we advise that you:

1. Deactivate the "Multitab" function.
2. Fill up the salt container and the rinse aid dispenser again.
3. Adjust the water hardness setting to the highest setting and perform 1 normal washing programme without loading any dishes.
4. Adjust the water hardness setting according to the hardness of the water in your area.
5. Adjust the rinse aid dosage.

Unloading the dishwasher

- Hot dishes are sensitive to knocks. The dishes should therefore be allowed to cool down before removing from the appliance.
- Empty the lower basket first and then the upper one; this will avoid water dripping from the upper basket onto the dishes in the lower one.

- Water may appear on the sides and the door of the dishwasher as the stainless steel will eventually become cooler than the dishes.



CAUTION!



When the washing programme has finished, it is recommended that the dishwasher is unplugged and the water tap turned off.

Care and cleaning


Cleaning the filters

IMPORTANT!


NEVER use the dishwasher without filters. Incorrect repositioning and fitting of the filters will produce poor washing results.

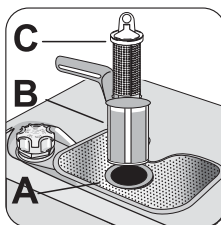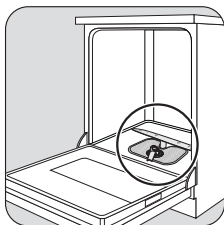


Clean filters **A**, **B** and **C** thoroughly under running water.

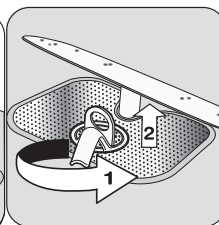

Turn the handle about 1/4 turn anticlockwise and remove filters **B** and **C**.

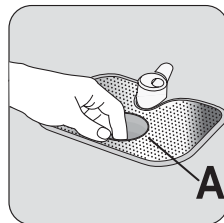

Remove filter **A** from the base of the washing compartment.

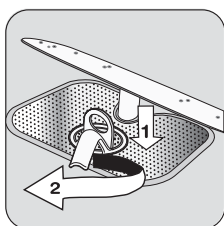

Replace the filters and lock by turning the handle clockwise to the stop.

Cleaning the spray arms

NEVER try to remove the spray arms.

If residues of soil have clogged the holes in the spray arms, remove them with a cocktail stick.

External cleaning

Clean the external surfaces of the machine and control panel with a damp soft cloth. If necessary use only neutral detergents. Never use abrasive products, scouring pads or solvent (acetone, trichloroethylene etc....).

Internal cleaning

Ensure that the seals around the door, the detergent and rinse aid dispensers are cleaned regularly with a damp cloth.

We recommend every 3 months to run the wash programme for heavy soiled dishes using detergent but without dishes.

Prolonged periods of non-operation

If you are not using the machine for any prolonged period of time you are advised to:

1. Unplug the appliance and then turn off the water.

2. Leave the door ajar to prevent the formation of any unpleasant smells.
3. Leave the inside of the machine clean.

Frost precautions

Avoid placing the machine in a location where the temperature is below 0°C. If this is unavoidable, empty the machine, close the appliance door, disconnect the water inlet pipe and empty it.


Moving the machine

If you have to move the machine (moving house etc....):

1. Unplug it.
2. Turn the water tap off.
3. Remove the water inlet and discharge hoses.
4. Pull the machine out together with the hoses.

Avoid over tilting the machine during transportation.

Environment concerns

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

ponents are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.

CAUTION!

When a unit is no longer being used:

- Pull the plug out of the socket.
- Cut off the cable and plug and dispose of them.
- Dispose of the door catch. This prevents children from trapping themselves inside and endangering their lives.

Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic com-

What to do if...

The dishwasher will not start or stops during operation. Certain problems are due to the lack of simple maintenance or oversights, which can be solved with the help of the indications described in the chart, without calling out an engineer.

Switch off the dishwasher, open the door and carry out the following suggested corrective actions.

Display message and malfunction	Possible cause and solution
<ul style="list-style-type: none"> intermittent audible signal message OPEN THE TAP in the display The dishwasher does not fill with water	<ul style="list-style-type: none"> The water tap is blocked or furred with limescale. Clean the water tap. The water tap is turned off. Turn the water tap on. The filter (where present) in the threaded hose fitting at the water inlet valve is blocked. Clean the filter in the threaded hose. The water inlet hose has not been correctly laid or it is bent or squashed. Check the water inlet hose connection.
<ul style="list-style-type: none"> intermittent audible signal message DRAIN BLOCKED in the display The dishwasher will not drain	<ul style="list-style-type: none"> The sink spigot is blocked. Clean out the sink spigot. The water drain hose has not been correctly laid or it is bent or squashed. Check the water drain hose connection.
<ul style="list-style-type: none"> intermittent audible signal ,30 appears in the display Anti-flood device is activated	<ul style="list-style-type: none"> Close the water tap and contact your local Service Force Centre.
The programme does not start.	<ul style="list-style-type: none"> The dishwasher's door has not been properly closed. (Message PLEASE CLOSE DOOR displayed). Close the door. The main plug is not plugged in. Insert the main plug. The fuse has blown out in the household fuse box. Replace the fuse. Delay start has been set. If dishes are to be washed immediately, cancel the delay start.

Once these checks have been carried out; close the dishwasher's door and switch on the appliance. Press the button of the programme that was running before the intervention of the alarm. The programme will continue from the point at which it was interrupted. If the malfunction or fault code reappears contact the Service Force Centre. For other fault codes not described in the above chart, please contact your Service Force Centre. Contact your local Service Force Centre, quoting the model (Mod.), product number (PNC) and serial number (S.N.).

This information can be found on the rating plate located on the side of the dishwasher door. So that you always have these numbers at hand, we recommend you to make a note of them here:

Mod. :
PNC :
S.N. :

The wash results are not satisfactory	
The dishes are not clean	<ul style="list-style-type: none"> • The wrong washing programme has been selected. • The dishes are arranged in such a way as to stop water reaching all parts of the surface. The baskets must not be overloaded. • The spray arms do not rotate freely due to incorrect arrangement of the load. • The filters in the base of the washing compartment are dirty or incorrectly positioned. • Too little or no detergent has been used. • Where there are limescales deposits on the dishes; the salt container is empty or the incorrect level of the water softener has been set. • The drain hose connection is not correct. • The salt container cap is not properly closed.
The dishes are wet and dull	<ul style="list-style-type: none"> • Rinse aid was not used. • The rinse aid dispenser is empty.
There are streaks, milky spots or a bluish coating on glasses and dishes	<ul style="list-style-type: none"> • Decrease rinse aid dosing.
Water drops have dried onto glasses and dishes	<ul style="list-style-type: none"> • Increase rinse aid dosing. • The detergent may be the cause. Contact the detergent manufacturer's consumer care line.

If after all these checks, the problem persists, contact your local Service Force Centre.

Technical data

Dimensions	Width x Height x Depth (cm)	59,6 x 81,8-89,8 x 57,5
Electrical connection Voltage - Overall power - Fuse	Information on the electrical connection is given on the rating plate on the inner edge of the dishwasher's door.	
Water supply pressure	Minimum Maximum	0,05 MPa (0,5 bar) 0,8 MPa (8 bar)
Capacity	place settings	12

Consumption values

The consumption values are intended as a guide and depends on the pressure and the temperature of the water and also by the var-

iations of the power supply and the amount of dishes.

Programme	Consumption values		
	Programme duration (in minutes)	Energy consumption (in kWh)	Water (litres)
Automatic	*	1,1 - 1,7	12 - 23
Quick 60°	*	0,9	9
Quick 55°	*	1,0 - 1,2	11 - 12
Intensive 70°	*	1,6 - 1,8	22 - 24
Eco 50° (Test programme for Test Institutes)	*	1,0 - 1,1	12 - 13
Glass 45°	*	0,8 - 0,9	14 - 15
Plate Warmer	*	0,8	4
Prewash	*	0,1	4

* The programme duration is visible in the digital display when the washing programme is selected.


Hints for test institutes

Testing in accordance with **EN 60704** must be carried out with appliance fully loaded and using the test programme (see "Consumption values").


Test in accordance with **EN 50242** must be carried out when the salt container and rinse

aid dispenser have been filled with salt and rinse aid respectively and using the test programme (see "Consumption values").


Full load: 12 standard place settings	
Amount of detergent required	5 g + 25 g (Type B)
Rinse aid setting	position 4 (Type III)

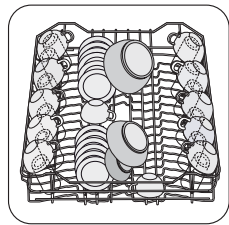

Upper basket
(take off the glass holder)

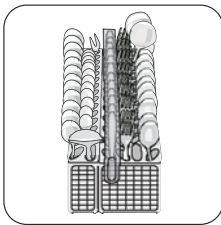

Cutlery basket

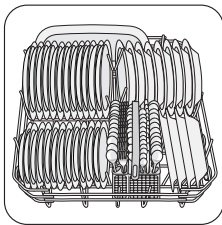

Lower basket

Installation

WARNING!

Any electrical and/or plumbing work required to install this appliance should be carried out by a qualified electrician and/or plumber or competent person.

Fitting under a counter

IMPORTANT!

Carefully follow the instructions on the enclosed template for building in the dishwasher and fitting the furniture panel.

WARNING!

The dishwasher must be secured against tilting. Therefore make sure that the counter it is fixed under, is suitably secured to a fixed structure (adjacent kitchen units cabinets, wall).

This dishwasher is designed to be fitted under a kitchen counter or work surface.

No further openings for the venting of the dishwasher are required, but only to let the water fill and drain hose and power supply cable pass through.

The dishwasher incorporates adjustable feet to allow the adjustment of the height.

During all operations that involve accessibility to internal components the dishwasher has to be unplugged.

Be sure that once the appliance has been installed, it is easily accessible for the service engineer in the event that a repair is required.

Levelling

Good levelling is essential for correct closure and sealing of the door.

When the appliance is correctly levelled, the door will not catch on either side of the cabinet. If the door does not close correctly, loosen or tighten the adjustable feet until the machine is perfectly level. (See enclosed template).

Water connection

WARNING!

The dishwasher must not be connected to open water appliances or instantaneous water heaters. This dishwasher may be fed with either hot (max. 60°) or cold water. Nevertheless we advise you a cold water supply.

WARNING!

Only use, for connection to the water mains, new hose-set; old hose-set must not be reused.

CAUTION!


If the machine is connected to new pipes or pipes which have not been used for a long time, you should run the water for a few minutes before connecting the inlet hose.

Water inlet hose with safety valve

Connect the inlet hose to a water tap with an external thread of 3/4".

After connecting the double-walled water inlet hose, the safety valve is next to the tap.

If the water inlet hose leaks, the safety valve cuts off the water supply.

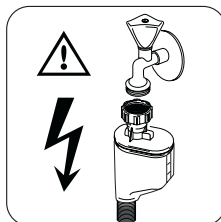

WARNING!

The electrical cable for the safety valve is in the double-walled water inlet hose and is live.

Therefore do not immerse the water inlet hose or the safety valve in water.


Take care when installing the water inlet hose. Place the water inlet hose in such a way that it is always lower than the bottom edge of the safety valve.

If the water inlet hose or the safety valve is damaged, remove the mains plug immediately.


CAUTION!

A water inlet hose with safety valve **MUST** only be replaced by your local Service Force Centre.


Drain hose

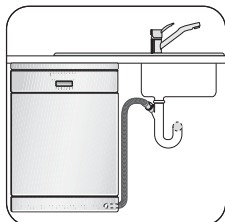


Connect drain hose to the sink.

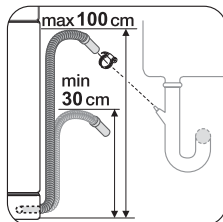

Required height: 30 to 100 cm above bottom of the dishwasher.

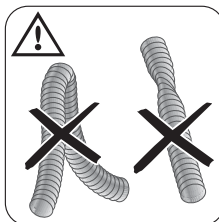

Ensure that the hoses are not kinked, crushed or entangled.

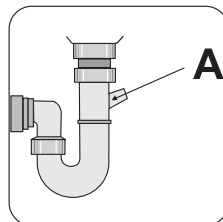

When connecting the drain hose to an under sink trap spigot, **the entire plastic membrane (A) must be removed**. Failure to remove all the membrane will result in food particles building up over time eventually blocking the dishwasher drain hose spigot.

If you use a drain hose extension the total length should not be longer than 4 metres. Likewise the internal diameter of the couplings used for connections to the waste outlet must be no smaller than the diameter of the hose provided.

Electrical connection

CAUTION!

Safety standards require the appliance to be earthed.

Prior to using the appliance for the first time, ensure that the rated voltage and type of supply on the rating plate match that of the supply where the appliance is to be installed.

The fuse rating is also to be found on the rating plate.

Always plug the mains plug into a correctly installed shockproof socket. Multi-way plugs, connectors and extension cables must not be used.

This could constitute a fire hazard through overheating.

If necessary, have the domestic wiring system socket replaced. In case that the electrical cable has to be replaced, contact your local Service Force centre.

The plug must be accessible after the appliance has been installed.

Never unplug the appliance by pulling on the cable. Always pull the plug.

The manufacturer accepts no liability for failure to observe the above safety precautions.

[illegible]

www.electrolux.com

www.zanussi-electrolux.co.uk