



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY DVP-SR120. You'll find the answers to all your questions on the SONY DVP-SR120 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY DVP-SR120
User guide SONY DVP-SR120
Operating instructions SONY DVP-SR120
Instructions for use SONY DVP-SR120
Instruction manual SONY DVP-SR120



[Your user manual](#)
[SONY DVP-SR120](#)

Manual abstract:

1 and Ver. 2.0 of VIDEO CD standards. You can enjoy two kinds of playback according to the disc type. Disc type VIDEO CDs without PBC functions (Ver. 1.1 discs) VIDEO CDs with PBC functions (Ver. 2.0 discs) You can Enjoy video playback (moving pictures) as well as music. Play interactive software using menu screens displayed on the TV screen (PBC Playback), in addition to the video playback functions of Ver.

1.1 discs. Moreover, you can play high-resolution still pictures if they are included on the disc. When playing DTS*-encoded CDs, excessive noise will be heard from the analog stereo outputs. To avoid possible damage to the audio system, the consumer should take proper precautions when the analog stereo outputs of the DVD player are connected to an amplification system.

To enjoy DTS Digital Surround™ playback, an external 5.1-channel DTS Digital Surround™ decoder system must be connected to the digital output of the DVD player. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners.

Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. * "DTS," "DTS Digital Surround" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc. 5 Precautions On safety · Caution The use of optical instruments with this product will increase eye hazard. · Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further. On power sources · The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off. · If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord. · Should the AC power cord (mains lead) need to be changed, have it done at a qualified service shop only. On placement · Place the player in a location with adequate ventilation to prevent heat build-up in the player.

· Do not place the player on a soft surface such as a rug that might block the ventilation holes on the bottom. · Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock. On operation · If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates. · When you move the player, take out any discs. If you don't, the disc may be damaged. On adjusting volume · Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played. On cleaning · Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution.

Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine. If you have any questions or problems concerning your player, please consult your nearest Sony dealer. IMPORTANT NOTICE Caution: The enclosed DVD player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

Notes About the Discs On handling discs · To keep the disc clean, handle the disc by its edge. Do not touch the surface. · Do not stick paper or tape on the disc. If there is glue (or a similar substance) on the disc, remove the glue completely before using the disc. · Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.



[Your user manual](#)
[SONY DVP-SR120](#)