

CD/DVD Player

Operating Instructions





DVP-PR30

© 2008 Sony Corporation

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The mains lead must only be changed at a qualified service shop.

Batteries or batteries installed apparatus shall not be exposed to excessive heat such as sunshine, fire or the like.



This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located at the bottom of the unit.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

Notice for customers in the United Kingdom and Republic of Ireland

A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience. Should the fuse in the plug supplied need to be replaced, a 5AMP fuse approved by ASTA or BSI to BS1362, (i.e., marked with ⊕ or ♥ mark) must be used. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.



Disposal of Old Electrical & Electronic Equipment (applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, vou will help prevent potential negative consequences for the environment and human health. which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.



Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems) This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

Precautions

Safety

- This unit operates on 220 240 V AC, 50/60 Hz. Check that the unit's operating voltage is identical with your local power supply.
- The nameplate is located at the bottom of the unit.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Installing

- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit and discs away from equipment with strong magnets, such as microwave ovens, or large loudspeakers.
- Do not place heavy objects on the unit

Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the set due to lightning and powerline surges.

Notes About the Discs

 To keep the disc clean, handle the disc by its edge. Do not touch the surface. Dust, fingerprints, or scratches on the disc may cause it to malfunction.





- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.
- Clean the disc with a cleaning cloth.

Wipe the disc from the centre out.



- Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.
- If you have printed the disc's label, dry the label before playing.

Precautions

On safety

Should any solid object or liquid fall into the cabinet, unplug the player and have it checked by qualified personnel before operating it any further.

On power sources

- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- If you are not going to use the player for a long time, be sure to disconnect the player from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.

On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- Do not place the player on a soft surface such as a rug.
- Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Do not install this player in a confined space, such as a bookshelf or similar unit.
- Install the player so that the AC power cord (mains lead) can be unplugged from the wall socket immediately in the event of trouble.

On operation

- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- When you move the player, take out any discs. If you don't, the disc may be damaged.
- Do not touch the disc if it is still spinning when you open the lid.

On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played.

On cleaning

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

On cleaning discs, disc/lens cleaners

Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction.

On replacement of parts

In the event that this unit is repaired, repaired parts may be collected for reuse or recycling purposes.

IMPORTANT NOTICE

Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Plasma display panel televisions and projection televisions are susceptible to this

If you have any questions or problems concerning your player, please consult your nearest Sony dealer.

Table of Contents

	WARNING	2
	Precautions	3
	About This Manual	5
	Guide to Parts and Controls	
Hool	(ups	
	Step 1: Connecting to Your TV	9
	SCART input jack	9
	Step 2: Connecting the Mains Lead	10
	Step 3: Preparing the Remote	10
	Controlling your TV with the supplied remote	
	Step 4: Quick Setup.	
Play	back	
-	Playing Discs	14
	Control Menu display (Magic Pad)	16
	List of Control Menu items	17
	Various Play Mode Functions	19
	Creating your own programme (Programme Play)	19
	Playing in random order (Shuffle Play)	20
	Playing repeatedly (Repeat Play)	
	Repeating a specific portion (A-B Repeat Play)	
	Customizing the playback configuration	
	Adjusting the playback picture (CUSTOM PICTURE MODE)	
	Sharpening the picture (SHARPNESS)	
	Locking discs (PARENTAL CONTROL)	
	Playing MP3 Audio and JPEG Images	23
	Selecting a JPEG image file	
	Setting the pace for a slide show (INTERVAL)	
	Selecting the slides' appearance (EFFECT)	25
	Playing DivX Video Files	
Setti	ngs and Adjustments	
	Using the Setup Display	27
	LANGUAGE SETUP	
	SCREEN SETUP	28
	CUSTOM SETUP	29
	AUDIO SETUP	30
	Setting the digital output signal	30

Additional Information	32
Troubleshooting	32
Self-diagnosis Function (When letters/numbers appear on the screen) .	34
Playable Discs	34
Specifications	36
Language Code List	37
Parental Control Area Code List	37
Index	38

About This Manual

- Instructions in this manual describe the controls on the remote. You can also use the controls
 on the player if they have the same or similar names as those on the remote.
- "DVD" may be used as a general term for commercial DVDs, DVD+RWs/DVD+Rs/DVD+R DLs (+VR mode) and DVD-RWs/DVD-Rs/DVD-R DLs (VR mode, video mode).
- NEED-to-know information (to prevent incorrect operation) is listed under the **3** icon. NICE-to-know information (tips and other useful information) is listed under the **3** icon.
- The meaning of the icons used in this manual is described below:

Icons	Meaning
DVDvideo	Functions available for commercial DVDs and DVD+RWs/DVD+Rs/DVD+R DLs in +VR mode or DVD-RWs/DVD-Rs/DVD-R DLs in video mode
DVDvr	Functions available for DVD-RWs/DVD-Rs/DVD-R DLs in VR (Video Recording) mode
VCD	Functions available for VIDEO CDs (including Super VCDs or CD-Rs/CD-RWs in video CD format or Super VCD format)
CD	Functions available for music CDs or CD-Rs/CD-RWs in music CD format
DATA	Functions available for DATA discs containing MP3*1 audio tracks, JPEG image files, and DivX*2 video files


^{*}¹ MP3 (MPEG-1 Audio Layer III) is a standard format defined by ISO (International Organization for Standardization)/IEC (International Electrotechnical Commission) MPEG which compresses audio data

^{*2} DivX[®] is a video file compression technology, developed by DivX, Inc. DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

Guide to Parts and Controls

For more information, see the pages indicated in parentheses.

Remote

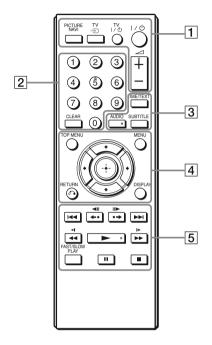

1 PICTURE NAVI (24)

Divides the screen into 9 subscreens so you can choose the desired scene quickly.

Each time you press the button, the display changes as follows:

- CHAPTER VIEWER
- TITLE VIEWER
- TRACK VIEWER

The JPEG image files in the album appear in 16 subscreens.

TV → (input select) (11)

Switches the TV's input source between the TV and other input sources.

TV I/(1) (on/standby) (11)

Turns the TV on or to standby mode.

I/(1) (on/standby) (12)

Turns on, or sets the player to standby mode.

∠ (volume) +/- (11)

Adjusts the TV volume.

2 Number buttons

Enters the title/chapter numbers, etc.

CLEAR (17)

Clears the entry field.

3 TIME/TEXT (23, 26)

Displays the playing time and remaining time. Press repeatedly to change the displayed information. CD/DVD text appears only when text is recorded on the disc.

If an MP3 audio track has an ID3 tag, the player will display the album name/track title from the ID3 tag information. This player supports ID3 versions 1.0/1.1 and 2.2/2.3.

AUDIO (OD)

Changes the audio language or audio channel.

 
When 4 digits are displayed, they indicate a language code. See "Language Code List" on page 37 to see which language the code represents.

The format of the current audio signal (Dolby Digital, DTS, PCM, etc.) appears as shown on page 7.

♦ When playing a DVD VIDEO

Example:


Dolby Digital 5.1 ch



♦ When playing a DivX video file on a **DATA** disc

Example:

 MP3 audio



SUBTITLE (....) (25)

Changes the subtitles.

4 TOP MENU

Displays the DVD's top menu.

MENU (23)

Displays the menu.

₹ RETURN (15)

Returns to the previous display.

DISPLAY (16)

Displays the playback information on the screen.

←/↑/↓/→ (12)

Moves the highlight to select a displayed item.

Centre button (ENTER) (12)

Enters the selected item.

5 I◀◀/▶►I (previous/next)

advance)

√I ✓✓/►►► (scan/slow)

► (play)

II (pause)

■ (stop)

FAST/SLOW PLAY

See "Basic operations" (page 7) for the function of each button.

Basic operations

То	Operation
Play	Press ►.
Stop	Press ■.
Pause	Press ■.
Go to the next chapter, track, or scene in continuous play mode	Press ►►.
Go back to the previous chapter, track, or scene in continuous play mode	Press ►.
Scan backward/ forward	Press Press repeatedly to change the speed.
Replay the previous scene*1*3	Press •• • II (replay) during playback.
Briefly fast forward the current scene*2*3	Press II▶ •→ (advance) during playback.
Play backward* ⁴ / forward* ⁵ in slow motion	Press II during playback, then press
Play backward* ⁴ / forward* ⁵ one frame at a time	Press ■ during playback, then press ← ◆ ■ II/II → • →.
Play in various speed with sound* ⁶	Press FAST/SLOW PLAY repeatedly during playback.

For all DVDs except for DVD+RWs/DVD+Rs/ DVD+R DLs and DivX video files.

For DVDs and DivX video files only.


^{*3} These functions may not work with some

For DVD VIDEOs and DVD-VR mode only.

For DVDs, VIDEO CDs and DivX video files

^{*6} For DVDs, VIDEO CDs, Super VCDs and DVD-VR mode only.


Top panel

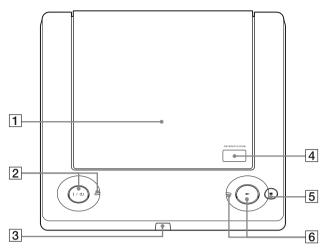

- **1** Disc lid (14)
- 2 1/0 (on/standby) button/indicator (12) Lights up when the power is on.
- (remote sensor) (10)

- 4 OPEN/CLOSE (14)
- **5** (stop) button (14)
- [6] ► (play) button/indicator (14) Lights up in playback mode.

Rear panel

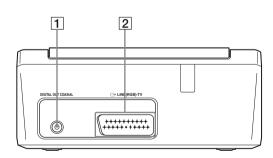


- 1 DIGITAL OUT (COAXIAL) jack (10)
- **2** LINE (RGB) TV jack (9)

When unpacking, check the supplied accessories by referring to page 36.

- Plug cables securely to prevent unwanted noise.
- Refer to the instructions supplied with the components to be connected.
- Be sure to disconnect the mains lead of each component before connecting.

Step 1: Connecting to Your TV

Connect this player to your TV monitor, or projector using an audio/video (SCART) cable. This connection will use your TV speakers for sound.

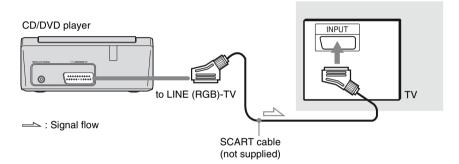

SCART input jack

Be sure to make the connections firmly to avoid hum and noise.

When using this connection, check that the TV conforms to S video or RGB signals. Refer to the operating instructions supplied with the TV to be connected. Also, when you set "LINE" to "S VIDEO" or "RGB" under "SCREEN SETUP" in the Setup Display (page 28), use a SCART cable that conforms to each signal.

When connecting to a standard 4:3 screen TV


Depending on the disc, the image may not fit your TV screen. To change the aspect ratio, see page 28.

- · Do not connect a VCR, etc., between your TV and the player. If you pass the player signals via the VCR, you may not receive a clear image on the TV screen.
- When you connect the player to your TV via the SCART jack, the TV's input source is set to the player automatically when you start playback. In this case, press TV \odot (input select) on the remote to return the input to the TV.

When you play a disc recorded in the NTSC colour system, the player outputs the video signal or the Setup Display etc. in the NTSC colour system and the picture may not appear on the PAL colour system televisions. In this case, open the disc lid and remove the disc.

To connect to your audio component

Use the following pattern.

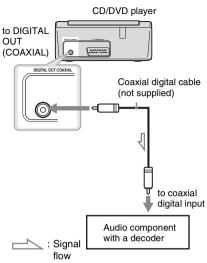



For correct speaker location, see the operating instructions supplied with the connected components.

If your audio component has a Dolby*¹ Digital, DTS*², or MPEG audio decoder and a digital input jack, use this connection. You can enjoy Dolby Digital (5.1ch), DTS (5.1ch), and MPEG audio (5.1ch) surround effect.

- *1 Manufactured under license from Dolby Laboratories.
 - Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.
- *2 Manufactured under license under U.S. Patent #: 5,451,942 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Out are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.

ø

 
- After you have completed the connection, make the appropriate settings in Quick Setup (page 12).
 If your audio component has an MPEG audio decoder function, set "MPEG" to "MPEG" in "AUDIO SETUP" (page 31). Otherwise, no sound or a loud noise will come from your speakers.
- The TVS effects of this player cannot be used with this connection.
- In order to listen to DTS sound tracks, you must use this connection. DTS sound tracks are not output through the LINE (RGB)-TV (SCART) jack, even if you set "DTS" to "ON" in Quick Setup (page 12).

Step 2: Connecting the Mains Lead

Plug the player and TV mains lead (power cord) into a mains.

Step 3: Preparing the Remote

You can control the player using the supplied remote. Insert two R6 (size AA) batteries by matching the ⊕ and ⊖ ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor on the player.




Ø

- Do not leave the remote in an extremely hot or humid place.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or a lighting apparatus. Doing so may cause a malfunction.
- If you do not use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Controlling your TV with the supplied remote

You can control the sound level, input source, and power switch of your Sony TV with the supplied remote.

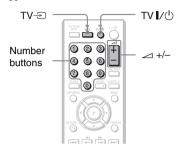

You can control your TV using the buttons below.

By pressing	You can
TV I/Ů	Turn the TV on or off
✓ (volume) +/–	Adjust the volume of the TV
TV → (input select)	Switch the TV's input source between the TV and other input sources



Depending on the connected unit, you may not be able to control your TV using all or some of the buttons on the supplied remote.

To control other TVs with the remote

You can control the sound level, input source, and power switch of non-Sony TVs as well. If your TV is listed in the table below, set the appropriate manufacturer's code.

- While holding down TV V. O, press the number buttons to select your TV's manufacturer's code (see the table below).
- 2 Release TV I/(¹).

◆Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.


Code number
01 (default)
24
33
76
17, 49
06, 08, 72
71
29
38



- When you replace the batteries of the remote, the code number you have set may be reset to the default setting. Set the appropriate code number again.
- Depending on the connected unit, you may not be able to control your TV using all or some of the buttons on the supplied remote.

Step 4: Quick Setup

Follow the steps below to make the minimum number of basic adjustments for using the player. To skip an adjustment, press $\blacktriangleright \blacktriangleright 1$. To return to the previous adjustment, press $\blacktriangleright \blacktriangleright 1$.

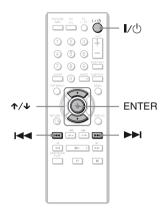

- 1 Turn on the TV.
- 2 Press I/U.

 
The player turns on and the I/\bigcirc indicator lights up.

3 Switch the input selector on your TV so that the signal from the player appears on the TV screen.

"Press [ENTER] to run QUICK SETUP" appears at the bottom of the screen. If this message does not appear, select "QUICK" under "SETUP" in the Control Menu to run Quick Setup (page 17).

4 Press ENTER without inserting a disc.

The Setup Display for selecting the language used in the on-screen display appears.




5 Press **↑**/**↓** to select a language.

The player displays the menu and subtitles in the selected language.

6 Press ENTER.

 The Setup Display for selecting the aspect ratio of the TV to be connected appears.




7 Press ★/↓ to select the setting that matches your TV type.

- ♦ If you have a wide-screen TV or a 4:3 standard TV with a wide-screen mode
- 16:9 (page 28)
- ◆ If you have a 4:3 standard TV
- 4:3 LETTER BOX or 4:3 PAN SCAN (page 28)

8 Press ENTER.

 The Setup Display for selecting the type of video signal output from the LINE (RGB)-TV jack appears.



- 9 Press ↑/↓ to select the type of signal you want to output from the LINE (RGB)-TV jack.
 - ♦ Video signals
 - VIDEO (page 28)
 - ♦ S video signals
 - S VIDEO (page 28)
 - ◆ RGB signals
 - RGB (page 28)

10 Press ENTER.

The Setup Display for selecting the type of jack used to connect your audio component such as an amplifier (receiver) appears.



 
11 Press ↑/↓ to select the type of jack (if any) you are using to connect to an audio component, then press ENTER.

If you did not connect an audio component, select "NO," then go to step 15.

If you connected an audio component using coaxial digital cable, select "YES: DIGITAL OUTPUT."


12Press ↑/↓ to select the type of Dolby Digital signal you wish to send to your audio component.

If your audio component has a Dolby Digital decoder, select "DOLBY DIGITAL." Otherwise, select "D-PCM."



13Press ENTER.

 "DTS" is selected.



14Press ★/↓ to select whether or not you wish to send a DTS signal to your audio component.

If your audio component has a DTS decoder, select "ON." Otherwise, select "OFF."

15_{Press ENTER.}

Quick Setup is finished and connections are complete.


If your audio component has an MPEG audio decoder, set "MPEG" to "MPEG" (page 31).

Playback


Playing Discs DVDvideo DVDvR

VCD CD DATA

Depending on the DVD or VIDEO CD, some operations may be different or restricted. Refer to the operating instructions supplied with your disc.

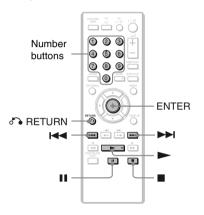

- 1 Push OPEN/CLOSE on the top panel to open the disc lid.
- 2 Fit the disc to the pivot, and close the lid until it clicks.

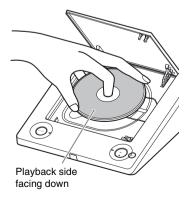

The player starts playback (continuous play) and the ▶ indicator lights up. Adjust the volume on the TV or the audio component.

Depending on the disc, a menu may appear on the TV screen. For DVD VIDEOs, see page 7. For VIDEO CDs, see page 15.

If a disc is inside the player

Press .

To stop playback

Press

To pause playback

Press II.



You can have the player turned off automatically whenever you leave it in stop mode for more than 30 minutes. To turn this function on or off, set "AUTO POWER OFF" in "CUSTOM SETUP" to "ON" or "OFF" (page 29).



Discs created on DVD recorders must be correctly finalized before they can be played. For more information about finalizing, refer to the operating instructions supplied with the DVD recorder.

Note on playing DTS sound tracks on a DVD VIDEO

DTS audio signals are output only through the DIGITAL OUT (COAXIAL) jack.

To resume playback from the point where you stopped the disc (Multi-disc Resume) DVDvideo VCD

When you press ➤ again after you stop playback, the player starts playback from the point when you pressed ■.



- To play from the beginning of the disc, press twice, then press ►.
- With DVD VIDEOs and VIDEO CDs, the player stores the point where you stopped the disc for up to 6 discs and resumes playback the next time you insert the same disc. If you store a resume playback point for the seventh disc, the resume playback point for the first disc is deleted.

6)

- · "MULTI-DISC RESUME" in "CUSTOM SETUP" must be set to "ON" (default) for this function to work (page 29).
- Resume Play does not work during Shuffle Play and Programme Play.
- With some discs, Resume Play may not work, depending on the point you stop playback, or if you press I/.

To play VIDEO CDs With PBC Functions (PBC Playback) VCD

PBC (Playback Control) allows you to play VIDEO CDs interactively by following the menu on the TV screen.

When you start playing a VIDEO CD with PBC functions, the menu for your selection appears.

Select an item using the number buttons, and press ENTER. Then, follow the instructions in the menu for interactive operations (press ➤ when "Press SELECT" appears).

Refer to the instructions supplied with the disc, as the operating procedure may differ depending on the VIDEO CD.

To return to the menu

Press & RETURN.



To play without using PBC, press ◄◄/►► or the number buttons while the player is stopped to select a track, then press or ENTER.

"Play without PBC" appears on the TV screen and the player starts continuous play. You cannot play still pictures such as a menu.

To return to PBC playback, press ■ twice then press .

Control Menu display (Magic Pad)


Use the Control Menu to select a function and to view related information. Press DISPLAY repeatedly to turn on or change the Control Menu display as follows:

```
Control Menu display 1
Control Menu display 2 (Except CD)
Control Menu display off
```

The Control Menu display 1 and 2 will show different items depending on the disc type.

Example: Control Menu display 1 when playing a DVD VIDEO. Press **↑**/**↓** to select the Control Menu item, then press ENTER.

For details about the item, see "List of Control Menu items" (page 17, 18).

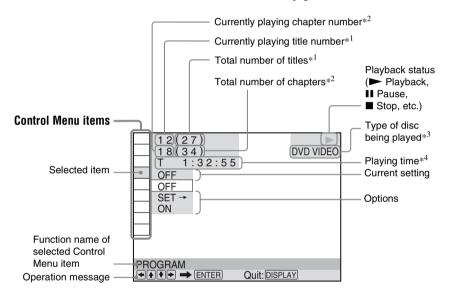

^{*1} Displays the scene number for VIDEO CDs (PBC is on), track number for VIDEO CDs/CDs, album number for DATA discs.

^{*2} Displays the index number for VIDEO CDs, MP3 audio track number, or JPEG image file number for DATA discs. DivX video file number for DATA discs.

^{*3} Displays Super VCD as "SVCD."

^{*4} Displays the date for JPEG files.

List of Control Menu items

Item Item Name, Function TITLE/SCENE/TRACK

CHAPTER/INDEX

TRACK

Selects the title, scene, track, chapter, or index to be played.

Press **↑/** to select the search method.

"** (**)" is selected (** refers to a number).

Press ENTER. "** (**)" changes to "-- (**)."

Press the number buttons to select the number you want to search.

Press ENTER.

TIME/TEXT (A)

Checks the elapsed time and the remaining playback time. Input the time code for picture and music searching (DVD and DivX video files only).

- 1 Press ENTER.
- Input the time code using the number buttons, then press ENTER.

For example, to find the scene at 2 hours, 10 minutes, and 20 seconds after the beginning, just enter "2:10:20."

6

You cannot search for a scene on a DVD+RW/DVD+R/DVD+R DL using the time code.

ORIGINAL/PLAY LIST

Selects the type of titles (DVD-VR mode) to be played, the ORIGINAL one, or an edited PLAY LIST.

PROGRAM (page 19) Selects the title, chapter, or track to play in the order you want.

SHUFFLE (page 20) T 933 Plays the title, chapter, or track in random order.

REPEAT (page 20)

Plays the entire disc (all titles/all tracks/all albums) repeatedly or one title/chapter/track/album/file repeatedly.

A-B REPEAT (page 21)

Specifies the parts you want to play repeatedly.

SHARPNESS (page 22)

Exaggerates the outline of the image to produce a sharper picture.

PARENTAL CONTROL

(page 22) Set to prohibit playback on this

SETUP (page 12, 27)

OUICK:

Use Quick Setup to choose the desired language of the on-screen display, the aspect ratio of the TV and the audio output signal.

CUSTOM:

In addition to the Quick Setup setting, you can adjust various other settings.

Returns the settings in "SETUP" to the default setting.

Magnifies the image up to four times the original size, and scroll using \(\bullet/\)

To return to normal view, press CLEAR.

This function is available for all pictures except a background image.

ANGLE

Changes the angle.

CUSTOM PICTURE MODE

(page 22)

Adjusts the video signal from the player. You can select the picture quality that best suits the programme you are watching.



TVS

Selects surround sound effect when connecting a stereo TV or 2 front speakers. This only works when playing a multichannel Dolby audio soundtrack. Furthermore, if the player is set up to output the signal from the DIGITAL OUT (COAXIAL) jack, the surround effect will only be heard when "DOLBY DIGITAL" is set to "D-PCM" and "MPEG" is set to "PCM" in "AUDIO SETUP" (page 30).

The default setting is underlined.

OFF

Cancels the setting.

- TVS DYNAMIC THEATER
- TVS DYNAMIC
- TVS WIDE

This mode is effective when the distance between the front L and R speakers is short, such as with builtin speakers on a stereo TV.

TVS NIGHT

This feature is useful when you want to hear the dialogue and enjoy the surround sound effects of "TVS WIDE" at low volume.

TVS STANDARD

Use this setting when you want to use TVS with 2 separate speakers.

Ø

- · When you select one of the TVS modes, turn off the surround setting of the connected TV or audio component.
- · The TVS effects do not work when using the Fast Play or Slow Play functions, even though you can change the TVS modes.



The Control Menu icon indicator lights up in green →
 when you select any item except "OFF" ("PROGRAM," "SHUFFLE," "REPEAT," "A-B REPEAT," "SHARPNESS," "ZOOM," "TVS" only). The "ORIGINAL/PLAY LIST" indicator lights up in green when you select "PLAY LIST" (default setting). The "ANGLE" indicator lights up in green when you can change the angle. The "CUSTOM PICTURE MODE" indicator lights up in green when any setting other than "STANDARD" is selected.

Hama for DATA diago

Item	Item Name, Function
	ALBUM Selects the album that contains MP3 audio tracks and JPEG image file to be played.
	FILE Selects the JPEG image file to be played.
	ALBUM Selects the album that contains DivX video file to be played.
- Marie	FII F



Selects the DivX video file to be played.

DATE

Displays the date the picture was taken by a digital camera.

INTERVAL (page 25) Specifies the duration for which the slides are displayed on the screen.

EFFECT (page 25) Selects the effects to be used for changing slides during a slide show.

MODE (MP3, JPEG) CORTA Selects the data type; MP3 audio

track (AUDIO), JPEG image file (IMAGE), or both (AUTO) to be played when playing a DATA disc.

Various Play Mode Functions

You can set the following play modes:

- Programme Play (page 19)
- Shuffle Play (page 20)
- Repeat Play (page 20)
- A-B Repeat Play (page 21)

63

The play mode is cancelled when:

- you open the disc lid.
- you press \(\frac{1}{\cdot \cdot} \) and the player enters standby mode.

 
□ % Creating your own programme (Programme Play)

DVDvideo VCD CD

You can play the contents of a disc in the order you want. You can programme up to 99 titles, chapters, and tracks.

After selecting [\ \mathbb{R} \] (PROGRAM) on the Control Menu (page 16), press \uparrow/\downarrow to select "SET \longrightarrow ," then press ENTER.


"TRACK" is displayed when you play a VIDEO CD or CD.



Titles or tracks recorded on a disc

2 Press →.

 The cursor moves to the title or track row "T" (in this case, "01").




Chapters recorded on a disc

Select the title, chapter, or track you want to programme.


When playing a DVD VIDEO

For example, select chapter "03" of title "02 "

 Press **↑/** to select "02" under "T." then press ENTER.



Next, press **↑/** to select "03" under "C," then press ENTER.

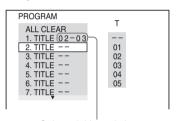


Selected title and chapter

◆ When playing a VIDEO CD or CD

 For example, select track "02." Press **↑/** to select "02" under "T," then press ENTER.





Total time of the programmed tracks

Repeat steps 2 to 3, to programme other titles, chapters, or tracks.

The programmed titles, chapters, and tracks are displayed in the selected order.

5 Press ►.

Programme Play begins. When the programme ends, you can restart the same programme again by pressing ►.

To return to normal play

Press CLEAR, or select "OFF" in step 1. To play the same programme again, select "ON" in step 1 and press ENTER.

To change or cancel a programme

- **1** Follow step 1 of "Creating your own programme (Programme Play)."
- 2 Select the programme number of the title, chapter, or track you want to change or cancel using ↑/↓ and press →. If you want to delete the title, chapter, or track from the programme, press CLEAR.
- **3** Follow step 3 of "Creating your own programme (Programme Play)" for new programming. To cancel a programme, select "--" under "T," then press ENTER.

To cancel all of the titles, chapters, or tracks in the programmed order

Press ↑ and select "ALL CLEAR" in step 2 of "Creating your own programme (Programme Play)" and press ENTER.



You can perform Repeat Play or Shuffle Play of programmed titles, chapters, or tracks. During Programme Play, follow the steps of Repeat Play (page 20) or Shuffle Play (page 20).

6)

- When you programme tracks on a Super VCD, the total playing time is not displayed.
- You cannot use this function with VIDEO CDs or Super VCDs with PBC playback.

| Playing in random order (Shuffle Play) | DVDvideo | VCD | CD |

You can have the player "shuffle" titles, chapters, or tracks. Subsequent "shuffling" may produce a different playing order.

- - ♦ When playing a DVD VIDEO
 - TITLE
 - CHAPTER
 - ♦ When playing a VIDEO CD or CD
 - TRACK
 - ◆ When Programme Play is activated
 - ON: shuffles titles, chapters, or tracks selected in Programme Play.
- 2 Press ENTER.

Shuffle Play starts.

To return to normal play

Press CLEAR, or select "OFF" in step 1.



- You can set Shuffle Play while the player is stopped. After selecting the "SHUFFLE" option, press ►. Shuffle Play starts.
- Up to 200 chapters in a disc can be played in random order when "CHAPTER" is selected.

0

You cannot use this function with VIDEO CDs or Super VCDs with PBC playback.

Playing repeatedly (Repeat Play) DVDvrdso DVDvrd VCD CD

You can play all of the titles or tracks on a disc, or a single title, chapter, or track repeatedly.

You can use a combination of Shuffle or Programme Play modes.

- After selecting ☐ ☐ (REPEAT) on the Control Menu (page 16), press ↑/
 to select the item to be repeated.
 - DISC: repeats all of the titles, tracks, or albums. (Select ORIGINAL or PLAY LIST in DVD-VR mode.)

- TITLE: repeats the current title on a disc.
- CHAPTER: repeats the current chapter.
- TRACK: repeats the current track.
- FILE (DivX video files only): repeats the current file.
- ALBUM: repeats the current album.

♦ When Programme Play or Shuffle Play is activated

• ON: repeats Programme Play or Shuffle Play.

2 Press ENTER.

Repeat Play starts.

To return to normal play

Press CLEAR, or select "OFF" in step 1.

Ø

 
You cannot use this function with VIDEO CDs or Super VCDs with PBC playback.

Repeating a specific portion (A-B Repeat Play)

DVDvideo DVDvR VCD CD

You can play a specific portion of a title, chapter or track repeatedly.

The "A-B REPEAT" setting bar appears.



2 During playback, when you find the starting point (point A) of the portion to be played repeatedly, press ENTER.

The starting point (point A) is set.



When you reach the ending point (point B), press ENTER again.

The set points are displayed and the player starts repeating this specific portion.

To return to normal play

Press CLEAR, or select "OFF" in step 1.

6)

- A-B Repeat Play does not work across multiple titles
- You may not set A-B Repeat Play for contents in DVD-VR mode that contains still pictures.

Customizing the playback configuration

Adjusting the playback picture (CUSTOM PICTURE MODE)

DVDvideo DVDvR VCD DATA

You can adjust the video signal from the player to obtain the picture quality you want.

After selecting [□ (CUSTOM PICTURE MODE) on the Control Menu (page 16), press ↑/↓ to select the setting you want.

The default setting is underlined.

- <u>STANDARD:</u> displays a standard picture.
- DYNAMIC 1: produces a bold dynamic picture by increasing the picture contrast and the colour intensity.
- DYNAMIC 2: produces a more dynamic picture than DYNAMIC 1 by further increasing the picture contrast and colour intensity.
- CINEMA 1: enhances details in dark areas by increasing the black level.
- CINEMA 2: white colours become brighter and black colours become richer, and the colour contrast is increased.
- MEMORY: adjusts the picture in greater detail.

PICTURE	Changes the contrast.
BRIGHTNESS	Changes the overall brightness.
COLOR	Makes the colours deeper or lighter.
HUE	Changes the colour balance.

2 Press ENTER.

The selected setting takes effect.

Ğ.

When you watch a movie, "CINEMA 1" or "CINEMA 2" is recommended

Sharpening the picture (SHARPNESS) DVDvideo DVDVIA VCD DATA

You can enhance the outlines of images to produce a sharper picture.

The default setting is underlined.

- OFF: cancels this option.
- $\overline{1:}$ enhances the outline.
- 2: enhances the outline more than 1.

2 Press ENTER.

The selected setting takes effect.

______Locking discs (PARENTAL CONTROL)

You can set two kinds of playback restrictions as following:

- · Custom Parental Control
- · Parental Control

After selecting PARENTAL CONTROL) on the Control Menu (page 16), the options appear as shown below. Select the option you want.

The default setting is underlined.

- ON →: Sets the playback restrictions so that the player will not play inappropriate discs (Custom Parental Control).
- PLAYER →: Playback of some DVD VIDEOs can be limited according to a predetermined level such as the age of the users. Scenes may be blocked or replaced with different scenes (Parental Control).
 See "Parental Control (limited playback)" (page 22) for detailed settings.
- PASSWORD →: Enter a 4-digit password using the number buttons. The same password is used for both Custom Parental Control and Parental Control. Also use this menu to change the password.
- OFF →: Turns off the Custom Parental

Parental Control (limited playback) DVDvideo

You can set a playback limitation level.

1 After selecting (PARENTAL CONTROL) on the Control Menu

(page 16), press **↑/** to select "PLAYER →." then press ENTER. The password is required.

- **2** Enter or re-enter your 4-digit password using the number buttons, then press ENTER.
 - The display for setting the playback limitation level appears.
- Press **↑/**to select "STANDARD," then press ENTER.

The selection items for "STANDARD" are displayed.

Press **↑/** to select a geographic area as the playback limitation level, then press ENTER.

The area is selected.

When you select "OTHERS \rightarrow ." select and enter a standard code in the table on page 37 using the number buttons.

5 Press **↑/** to select "LEVEL," then press ENTER.

The selection items for "LEVEL" are displayed.

Select the level you want using \uparrow / \downarrow , then press ENTER.

Parental Control setting is complete. The lower the value, the stricter the limitation.

To turn off the Parental Control function. set "LEVEL" to "OFF."




If you forget your password, remove the disc and repeat step 1 of "Parental Control (limited playback)." When you are asked to enter your password, enter "199703" using the number buttons, then press ENTER. The display will ask you to enter a new 4-digit password. After you enter a new 4-digit password, replace the disc in the player and press . When the display for entering your password appears, enter your new password.

Depending on the disc, you may be asked to change the parental control level while playing the disc. In this case, enter your password, then change the level. If the Resume Play mode is cancelled, the level returns to the previous level.

Playing MP3 Audio and JPEG Images DATA

You can play MP3 audio tracks and JPEG image files on DATA discs.

You can enjoy JPEG images as a slide show.

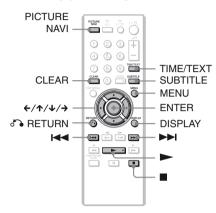




You can view the disc information while playing MP3 audio tracks and JPEG image files using TIME/TEXT (page 6).

6

DATA CDs recorded in KODAK Picture CD format automatically start playing when inserted.

Press MFNU.

 The list of albums on the disc appears. When an album is being played, its title is shaded.



2 Press ↑/↓ to select the album.

3 Press ►.

Playback starts from the selected album. The JPEG images in the selected album start playing as a slide show.

To select a specific MP3 audio track, press ENTER and press ↑/◆ to select a track, then press ENTER.

To select a specific JPEG image file, see "Selecting a JPEG image file" (page 24).

To stop playback

Press .

To go to the next or previous page Press → or ←

To return to the previous display Press & RETURN.

To go to the next or previous MP3 audio track

Press ► or during playback. You can select the first track of the next album by pressing ► during playback of the last track of the current album.

Note that you cannot return to the previous album by using ► , and that you need to select the previous album from the album list.

To turn on or off the display

Press MENU repeatedly.



of the selected album, you can select to play only the MP3 audio tracks, JPEG image files, or both, by setting "MODE (MP3, JPEG)" (page 18).

Selecting a JPEG image file

1 Press MENU.

The list of albums on the disc appears.

2 Press ★/◆ to select the album, then press PICTURE NAVI.

The image files in the album appear in 16 subscreens. A scroll box is displayed on the right.

1	2	3	4	
5	6	7	8	
9	10	11	12	
13	14	15	16	

To display additional images, select a bottom image and press \bullet . To return to a previous image, select a top image and press \uparrow .

3 Press ←/↑/↓/→ to select the image you want to view, and press ENTER.

The selected image appears.

To go to the next or previous JPEG image file

Press ← or → during playback. You can select the first file of the next album by pressing → during playback of the last file of the current album.

Note that you cannot return to the previous album by using ϵ , and that you need to select the previous album from the album list.

To rotate a JPEG image

Press ↑/↓ while viewing the image. Each time you press ↑, the image rotates counterclockwise by 90 degrees.

To return to normal view, press CLEAR.

Note that the view also returns to normal if you press ←/→ to go to the next or previous image.

To display JPEG image information

Press SUBTITLE while viewing JPEG image files

The file name, camera maker/model, date, time, picture resolution, file size, camera setting information (ISO speed rating, Exposure time, F Number, Exposure bias, or Focal length) of the picture are displayed on the screen.

4 is displayed when the picture was taken using flash.

is displayed when the image is automatically rotated.

To hide the information, press SUBTITLE. Note that the above information may not appear depending on the digital camera.

To stop viewing the JPEG image Press ■

()

PICTURE NAVI does not work if "AUDIO (MP3)" is selected in "MODE (MP3, JPEG)" (page 18).

Setting the pace for a slide show (INTERVAL)

You can set the time the slides are displayed on the screen.

After selecting _____ (INTERVAL) on the Control Menu (page 16), press ↑/ ↓ to select a setting.

The default setting is underlined.

- NORMAL: sets to standard duration.
- FAST: sets a duration shorter than NORMAL.
- SLOW 1: sets a duration longer than NORMAL.
- SLOW 2: sets a duration longer than SLOW 1.

2 Press ENTER.

Selecting the slides' appearance (EFFECT)

You can select the way the slides are displayed during a slide show.

1 After selecting ______ (EFFECT) on the Control Menu (page 16), press ↑/ ↓ to select a setting.

The default setting is underlined.

- MODE 1: the images randomly cycle through the effects.
- MODE 2: the next image slides over the previous image.
- MODE 3: the image sweeps in from top to bottom.
- MODE 4: the image sweeps in from left to right.
- MODE 5: the image stretches out from the centre of the screen.
- OFF: turns off this function.


2 Press ENTER.

Playing DivX Video Files

DATA

 $\mathrm{Div}X^{@}$ is a video file compression technology, developed by $\mathrm{Div}X$, Inc. This product is an official $\mathrm{Div}X^{@}$ Certified product.

You can play DATA discs that contain DivX video files.

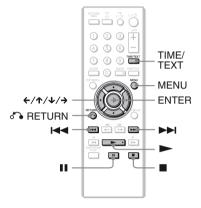



You can view the disc information while playing a DivX video file using TIME/TEXT (page 6).

Ø

- If there are no DivX video files recorded on the DATA disc, a message appears to indicate that the disc is not playable.
- The player cannot play a DivX video file of size more than 720 (width) × 576 (height)/2 GB.
- The player cannot play some DivX video files that are longer than 3 hours.
- Depending on the DivX video file, the picture may pause or be unclear. In which case, it is recommended that you create the file at a lower bit rate. If the sound is still noisy, MP3 is the recommended audio format. Note, however, this player does not conform to WMA (Windows Media Audio) format.
- Because of the compression technology used for DivX video files, it may take some time after you press (play) for the picture to appear.
- Depending on the DivX video file, the sound may not match the pictures on the screen.

1 Press MENU.

A list of albums on the disc appears. Only albums that contain DivX video files are listed.

To play the entire album, select an album and press ►.

2 Press ↑/↓ to select the album and press ENTER.

3 Press ►.

Playback starts from the selected album. To select a specific file, press ↑/♣, and press ENTER. The selected file starts playing.

To stop playback

Press ■.

To go to the next or previous page $Press \leftarrow or \rightarrow$.

To turn the display on or off

Press MENU repeatedly.

To return to the previous display

Press RETURN.

To go to the next or previous DivX video file without turning on the above file list

You can select the next or previous DivX video file in the same album by pressing ►► or ►►.

You can also select the first file of the next album by pressing ►►I during playback of the last file of the current album. Note that you cannot return to the previous album by using I◄ . To return to the previous album, select it from the album list.



If the number of viewing times is preset, you can play the DivX video files as many times as the preset number. The following occurrences are counted:

- when the disc lid is opened.
- when another file is played.
- when the player is turned off. This includes when the player is automatically turned off by the Auto Power Off function. Press ■ instead of ■ when you want to stop viewing.

Settings and Adjustments

Using the Setup Display

By using the Setup Display, you can make various adjustments to items such as picture and sound. You can also set a language for the subtitles and the Setup Display, among other things.

For details on each Setup Display item, see pages from 27 to 31.

Ø

Playback settings stored in the disc take priority over the Setup Display settings and not all of the functions described may work.

1 Press DISPLAY when the player is in stop mode.

The Control Menu appears.

 
2 Press ↑/↓ to select _______ (SETUP), then press ENTER.

The options for "SETUP" appear.

- QUICK: makes the basic adjustments (page 12).
- CUSTOM: makes various adjustments.
- RESET: resets all the settings explained on pages 27 to 31.

3 Press ★/↓ to select "CUSTOM," then press ENTER.

The Setup Display appears.
Select the setup category and adjust each item following the instruction on pages 27 to 31





LANGUAGE SETUP

"LANGUAGE SETUP" allows you to set various languages for the on-screen display or sound track.

Select "LANGUAGE SETUP" in the Setup Display.

◆ OSD (On-Screen Display)

Switches the display language on the screen.

◆ MENU (DVD VIDEO only)

You can select the desired language for the disc's menu.

◆ AUDIO (DVD VIDEO only)

Switches the language of the sound track. When you select "ORIGINAL," the language given priority in the disc is selected.

◆ SUBTITLE (DVD VIDEO only)

Switches the language of the subtitle recorded on the DVD VIDEO.

When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language you selected for the sound track.



If you select "OTHERS →" in "MENU,"
"SUBTITLE," or "AUDIO," select and enter a
language code from "Language Code List" on
page 37 using the number buttons.

43

If you select a language in "MENU,"
"SUBTITLE," or "AUDIO" that is not recorded on
a DVD VIDEO, one of the recorded languages will
be automatically selected.



SCREEN SETUP

Choose settings according to the TV to be connected.

Select "SCREEN SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 27). The default settings are underlined.

◆ TV TYPE

Selects the aspect ratio of the connected TV (4:3 standard or wide).

<u>16:9</u>	Select this when you connect a wide-screen TV or a TV with a wide mode function.
4:3 LETTER BOX	Select this when you connect a 4:3 screen TV. Displays a wide picture with bands on the upper and lower portions of the screen.
4:3 PAN SCAN	Select this when you connect a 4:3 screen TV. Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.

16:9



4:3 LETTER BOX



4:3 PAN SCAN



63

Depending on the DVD, "4:3 LETTER BOX" may be selected automatically instead of "4:3 PAN SCAN" or vice versa.

◆ SCREEN SAVER

The screen saver image appears when you leave the player in pause or stop mode for 15 minutes, or when you play a CD, or DATA disc (MP3 audio) for more than 15 minutes. The screen saver will help prevent your display device from becoming damaged (ghosting). Press to turn off the screen saver.

<u>ON</u>	Turns on the screen saver.
OFF	Turns off the screen saver.

◆ BACKGROUND

Selects the background colour or picture on the TV screen when the player is in stop mode or while playing a CD, or DATA disc (MP3 audio).

JACKET PICTURE	The jacket picture (still picture) appears, but only when the jacket picture is already recorded on the disc (CD-EXTRA, etc.). If the disc does not contain a jacket picture, the "GRAPHICS" picture appears.
GRAPHICS	A preset picture stored in the player appears.
BLUE	The background colour is blue.
BLACK	The background colour is black.

◆ LINE

Selects video signals output from the LINE (RGB)-TV jack on the rear panel of the player.

VIDEO	Outputs video signals.
S VIDEO	Outputs S video signals.
RGB	Outputs RGB signals.

(3

- If your TV does not accept S video or the RGB signals, no picture will appear on the TV screen, even if you select "S VIDEO" or "RGB." Refer to the instructions supplied with your TV.
- If your TV has only one SCART (EURO AV) jack, do not select "S VIDEO."



CUSTOM SETUP

Use this to set up playback related and other settings.

Select "CUSTOM SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 27).

The default settings are underlined.

◆ AUTO POWER OFF

Switches the Auto Power Off setting on or off

	The player enters standby mode when left in stop mode for more than 30 minutes.
OFF	Switches this function off.

◆ AUTO PLAY

Switches the Auto Play setting on or off. This function is useful when the player is connected to a timer (not supplied).

<u>OFF</u>	Switches this function off.
	Automatically starts playback when the player is turned on by a timer (not supplied).

◆ PAUSE MODE (DVDs only)

Selects the picture in pause mode.

<u>AUTO</u>	The picture, including subjects that move dynamically, is output with no jitter. Normally select this position.
FRAME	The picture, including subjects that do not move dynamically, is output in high resolution.

◆ TRACK SELECTION (DVD VIDEO only)

Gives the sound track which contains the highest number of channels priority when you play a DVD VIDEO on which multiple audio formats (PCM, MPEG audio, DTS, or Dolby Digital format) are recorded.

<u>OFF</u>	No priority given.
AUTO	Priority given.

6)

- When you set the item to "AUTO," the language may change. The "TRACK SELECTION" setting has higher priority than the "AUDIO" settings in "LANGUAGE SETUP" (page 27).
- If you set "DTS" to "OFF" (page 31), the DTS sound track is not played even if you set "TRACK SELECTION" to "AUTO."
- If PCM, DTS, MPEG audio, and Dolby Digital sound tracks have the same number of channels, the player selects PCM, DTS, MPEG audio, and Dolby Digital sound tracks in this order.

◆ MULTI-DISC RESUME (DVD VIDEO/ VIDEO CD only)

Switches the Multi-disc Resume setting on or off. Resume playback can be stored in memory for up to 6 different DVD VIDEOs/VIDEO CDs (page 14).

<u>ON</u>	Stores the resume setting in memory for up to 6 discs.
OFF	Does not store the resume setting in memory. Playback restarts at the resume point only for the current disc in the player.

63

If you run Quick Setup, Multi-disc Resume setting stored in memory may return to the default settings.

◆ DivX

Displays the registration code for this player. For more information, go to http://www.divx.com/vod on the Internet.



AUDIO SETUP

"AUDIO SETUP" allows you to set the sound according to the playback and connection conditions.

Select "AUDIO SETUP" in the Setup Display. To use the display, see "Using the Setup Display" (page 27).

The default settings are underlined.

◆ AUDIO DRC (Dynamic Range Control) (DVDs only)

Makes the sound clear when the volume is turned down when playing a DVD that conforms to "AUDIO DRC."

This function affects the output from the following jacks:

- -LINE (RGB)-TV jack
- DIGITAL OUT (COAXIAL) jack only when "DOLBY DIGITAL" is set to "D-PCM" (page 30).

STANDARD	Normally, select this position.
TV MODE	Makes low sounds clear even if you turn the volume down.
WIDE RANGE	Gives you the feeling of being at a live performance.

◆ DOWNMIX (DVDs only)

Switches the method for mixing down to 2 channels when you play a DVD which has rear sound elements (channels) or is recorded in Dolby Digital format. For details on the rear signal components, see page 7. This function affects the output of the following jacks:

- -LINE (RGB)-TV jack
- DIGITAL OUT (COAXIAL) jack when "DOLBY DIGITAL" is set to "D-PCM" (page 30).

DOLBY SUR- ROUND	Normally, select this position. Multi-channel audio signals are output to 2 channels for enjoying surround sounds.
NORMAL	Multi-channel audio signals are downmixed to 2 channels for use with your stereo.

◆ DIGITAL OUT

Selects if audio signals are output via the DIGITAL OUT (COAXIAL) jack.

ON	Normally, select this position. When you select "ON," see "Setting the digital output signal" for further settings.
OFF	The influence of the digital circuit upon the analogue circuit is minimal.

Setting the digital output signal

Switches the method of outputting audio signals when you connect a component such as an audio component or MD deck with a digital input jack.

For connection details, see page 10. Select "DOLBY DIGITAL," "MPEG," "DTS," and "48kHz/96kHz PCM" after setting "DIGITAL OUT" to "ON." If you connect a component that is incompatible with the selected audio signal, a loud noise (or no sound) may be heard from the speakers, risking damage to your ears or speakers.

◆ DOLBY DIGITAL (DVDs only)

Selects the type of Dolby Digital signal.

DOLBY DIGITAL	Select this when the player is connected to an audio component with a built-in Dolby Digital decoder.
D-PCM	Select this when the player is connected to an audio component without a built-in Dolby Digital decoder. You can select whether the signals conform to Dolby Surround (Pro Logic) or not by making adjustments to the "DOWNMIX" item in "AUDIO SETUP" (page 30).

◆ MPEG (DVDs only)

Selects the type of MPEG audio signal.

<u>PCM</u>	Select this when the player is connected to an audio component without a built-in MPEG decoder. If you play multi-channel MPEG audio sound tracks, only the Front (L) and Front (R) signals will be output from your two front speakers.
MPEG	Select this when the player is connected to an audio component with a built-in MPEG decoder.

◆ DTS

Selects whether or not to output DTS signals.

OFF	Select this when the player is connected to an audio component without a built-in DTS decoder.
ON	Select this when the player is connected to an audio component with a built-in DTS decoder.

- When you play a DVD VIDEO with DTS sound tracks, set "DTS" to "ON" in "AUDIO SETUP" (page 31).
- If you connect the player to audio equipment without a DTS decoder, do not set "DTS" to "ON" in "AUDIO SETUP" (page 31). A loud noise may come out from the speakers, affecting your ears or causing the speakers to be damaged.

◆ 48kHz/96kHz PCM (DVD VIDEO only)

Selects the sampling frequency of the audio signal.

48kHz/16bit	The audio signals of DVD VIDEOs are always converted to 48kHz/16bit.
96kHz/24bit	All types of signals including 96kHz/24bit are output in their original format. However, if the signal is encrypted for copyright protection purposes, the signal is only output as 48kHz/16bit.

6)

The analogue audio signals from the LINE RGB-TV (SCART) jack are not affected by this setting and keep their original sampling frequency level.

Additional Information

Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

Power

The power is not turned on.

Check that the mains lead is connected securely.

Picture

There is no picture/picture noise appears.

- → Re-connect the connecting cable securely.
- → The connecting cables are damaged.
- Check the connection to your TV (page 9) and switch the input selector on your TV so that the signal from the player appears on the TV screen.
- → Set "LINE" in "SCREEN SETUP" to an item appropriate for your system (page 28).
- → The disc is dirty or flawed.
- → The disc is recorded in a colour system that is different from your TV.

The picture is black and white.

- → Set "LINE" in "SCREEN SETUP" to an item appropriate for your TV (page 28).
- → Depending on the TV, the picture on the screen becomes black and white when you play a disc recorded in the NTSC colour system.
- → When you are using a SCART cable, be sure to use one that is fully wired (21-pins).

Sound

There is no sound.

- → Re-connect the connecting cable securely.
- → The connecting cable is damaged.
- → The player is connected to the wrong input jack on the audio component (page 9, 10).
- → The audio component input is not correctly set.
- → The player is in pause mode or in Slowmotion Play mode.
- → The player is in fast forward or fast reverse mode.
- → If the audio signal does not come through the DIGITAL OUT (COAXIAL) jack, check the audio settings (page 30).
- → While playing a Super VCD on which the audio track 2 is not recorded, no sound will come out when you select "2:STEREO," "2:1/L," or "2:2/R." Press AUDIO to select the recorded track.
- When playing multichannel MPEG audio soundtracks, only the Front (L) and Front (R) signals will be output from two front speakers.

The sound volume is low.

→ The sound volume is low on some DVDs. The sound volume may improve if you set "AUDIO DRC" in "AUDIO SETUP" to "TV MODE" (page 30).

Operation

The remote does not function.

- → The batteries in the remote are weak.
- → There are obstacles between the remote and the player.
- → The distance between the remote and the player is too far.
- → The remote is not pointed at the remote sensor on the player.

The disc does not play.

- → The disc is turned over. Insert the disc with the playback side facing down.
- → The disc is skewed.
- The player cannot play certain discs (page 34).
- → The region code on the DVD does not match the player.
- → Moisture has condensed inside the player (page 3).

→ The player cannot play a recorded disc that is not correctly finalized (page 35).

The MP3 audio track cannot be played (page 34).

- → The player cannot play audio tracks in mp3PRO format.
- → "MODE (MP3, JPEG)" is set to "IMAGE (JPEG)" (page 18).
- → The DATA disc contains a DivX video file.

The JPEG image file cannot be played (page 34).

- → The image is larger than 3072 (width) × 2048 (height) in normal mode, or more than 3,300,000 pixels in progressive JPEG. (Some progressive JPEG files cannot be displayed even if the file size is within this specified capacity.)
- → "MODE (MP3, JPEG)" is set to "AUDIO (MP3)" (page 18).
- → The DATA disc contains a DivX video file.

The MP3 audio tracks and JPEG image files start playing simultaneously.

→ "MODE (MP3, JPEG)" is set to "AUTO" (page 18).

The DivX video file cannot be played.

- → The file is not created in DivX format.
- → The file has an extension other than ".AVI" or ".DIVX."
- → The DATA disc (DivX video) is not created in a DivX format that conforms to ISO 9660 Level 1/Level 2 or Joliet/UDF.
- → The DivX video file is larger than 720 (width) × 576 (height).

The album/track/file names are not displayed correctly.

→ The player can only display numbers and alphabet. Other characters are displayed as "*".

The disc does not start playing from the beginning.

- → Programme Play, Shuffle Play, Repeat Play, or A-B Repeat Play is selected (page 19).
- Resume play has taken effect (page 14).

"Copyright lock" appears and the screen turns blue when playing in DVD-VR mode.

→ Images taken from digital broadcasts, etc., may contain copy protection signals, such as complete copy protection signals, single copy signals, and restriction-free signals. When images that contain copy protection signals are played, a blue screen may appear instead of the images. It may take a while when looking for playable images. (For player that cannot play images that contain a copy protection only)

Some functions such as Stop, Fast Play, Slow Play, Slow-motion Play, Repeat Play, Shuffle Play, or Programme Play cannot be performed.

→ Depending on the disc, you may not be able to do some of the operations above.

The player does not operate properly.

→ When static electricity, etc., causes the player to operate abnormally, unplug the player.

5 numbers or letters are displayed on the screen.

→ The self-diagnosis function was activated. (See the table on page 34.)

"Data error" appears on the TV screen when playing a DATA disc.

- → The MP3 audio track/JPEG image file/ DivX video file you want to play is broken.
- → The data is not MPEG-1 Audio Layer III data.
- → The JPEG image file format does not conform to DCF (page 34).
- → The JPEG image file has the extension ".JPG" or ".JPEG," but is not in JPEG format.
- → The file you want to play has the extension ".AVI" or ".DIVX," but is not in DivX format, or is in DivX format but does not conform to a DivX Certified profile.

Self-diagnosis Function

(When letters/numbers appear on the screen)

When the self-diagnosis function is activated to prevent the player from malfunctioning, a five-character service number (e.g., C 13 50) with a combination of a letter and four digits appears on the screen. In this case, check the following table.

First three characters of the service number	Cause and/or corrective action
C 13	The disc is dirty or recorded in a format that this player cannot play (page 34). Clean the disc with a cleaning cloth or check its format.
C 31	The disc is not inserted correctly. → Re-insert the disc correctly.

Playable Discs

Format of discs		
Commercial DVD	VID	D
DVD-RW/-R	DVD RW	R R4.7
DVD+RW/+R/ +R DL	RW DVD+ReWritable	DVD+R DVD+R DL
VIDEO CD/ Music CD	COMPACT COMPAC	COMPACT DIGITAL AUDIO
CD-RW/-R	COMPACT COMPACT ReWritable	COMPACT COMPACT Recordable

The player can play recordable media that is correctly finalized.

"DVD+RW," "DVD-RW," "DVD+R," "DVD+R DL," "DVD-R," "DVD VIDEO," and "CD" logos are trademarks.

The player cannot play the discs other than above. Also, the player cannot play the following discs:

- A disc that has a non-standard shape (e.g., card, heart).
- · A disc with paper or stickers on it.
- A disc that has the adhesive of cellophane tape or a sticker still left on it.

Note about CDs/DVDs

The player can play CD-ROMs/CD-Rs/CD-RWs recorded in the following formats:

- music CD format
- video CD format
- MP3 (MPEG-1 Audio Layer III) audio tracks, JPEG image files, and DivX video files of format conforming to ISO 9660* Level 1/Level 2, or its extended format, Joliet
- KODAK Picture CD format
- * A logical format of files and folders on CD-ROMs, defined by ISO (International Organization for Standardization).

The player can play DVD-ROMs/ DVD+RWs/DVD+Rs/DVD+R DLs/ DVD-RWs/DVD-Rs/DVD-R DLs recorded in the following formats:

 MP3 audio tracks, JPEG image files, and DivX video files of format conforming to UDF (Universal Disk Format).

MP3 audio track, JPEG image file or DivX video file that the player can play

The player can play the following tracks and files:

- -MP3 audio tracks with the extension ".MP3."
- JPEG image files with the extension ".JPEG" or ".JPG."
- -JPEG image files that conform to the DCF* image file format.
- -DivX video files with the extension ".AVI" or ".DIVX."

"Design rule for Camera File system": Image standards for digital cameras regulated by JEITA (Japan Electronics and Information Technology Industries Association).



- If you add numbers (01, 02, 03, etc.) to the front of the track/file names when you store the tracks (or files) in a disc, the tracks and files will be played in that order.
- Since a disc with a complex hierarchy of folders takes longer to start playback, it is recommended that you create albums with no more than two hierarchies.
- To repeat both MP3 audio tracks and JPEG image files in a single album, repeat the same MP3 audio track or album when "MODE (MP3, JPEG)" is set to "AUTO." See "Playing repeatedly (Repeat Play)" (page 20) to repeat the track or album.

- The player will play any data with the extension ".MP3," ".JPG," or ".JPEG," even if they are not in MP3 or JPEG format. Playing these data may generate a loud noise which could damage your speaker system.
- · The player does not conform to audio tracks in mp3PRO format.
- · Some JPEG files cannot be played.
- With DATA discs that contain DivX video files in addition to MP3 audio tracks or JPEG image files, the player plays only the DivX video files.
- · You can view a slide show with sound only when the MP3 audio tracks and JPEG image files are placed in the same album.
- · If playing time of JPEG image or MP3 audio is longer than the other, the longer one continues without sound or image.
- If you play large MP3 track data and JPEG image data at the same time, the sound may skip. It is recommended that you set the MP3 bit rate to 128 kbps or lower when creating the file. If the sound still skips, then reduce the size of the JPEG file.
- · Some JPEG files, especially progressive JPEG files or JPEG files of 3,000,000 pixels or more, may take longer to display than others, which may make the duration seem longer than the setting you selected.
- The player recognizes a maximum of 200 albums regardless of the selected mode. Of each album, the player recognizes up to 300 MP3 audio tracks and 300 JPEG image files when "AUTO" is selected, 600 MP3 audio tracks when "AUDIO (MP3)" is selected, 600 JPEG image files when "IMAGE (JPEG)" is selected, and 600 DivX video files.
- · Proceeding to the next or another album may take some time.
- · The player may not play a DivX video file when the file has been combined from two or more DivX video files.

- The player cannot play a DivX video file of size more than 720 (width) \times 576 (height)/2 GB.
- · Depending on the DivX video file, the picture may be unclear or the sound may skip.
- The player cannot play some DivX video files that are longer than 3 hours.

Region code

Your player has a region code printed at the bottom of the unit and only will play commercial DVDs (playback only) labelled with identical region codes. This system is used to protect copyrights.

Commercial DVDs labelled play on this player.



Depending on the commercial DVD, there may be no region code indication, even though playing the commercial DVD is prohibited by area restrictions.



· Notes about recordable media

Some recordable media cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not play if it has not been correctly finalized. For more information, refer to the operating instructions for the recording device. Note that some playback functions may not work with some DVD+RWs/DVD+Rs/DVD+R DLs. even if they have been correctly finalized. In this case, view the disc by normal playback. Also some DATA discs created in Packet Write format cannot be played.

· Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this

· For player that cannot play images that contain a copy protection only Images in DVD-VR mode with CPRM* protection may not be played if they contain a copy protection signal. "Copyright lock" appears on the screen.

* CPRM (Content Protection for Recordable Media) is a coding technology that protects the copyright of images.

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVDs or VIDEO CDs.

Copyrights

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Specifications

System

Laser: Semiconductor laser

Outputs

(Jack name: Jack type/Output level/Load

impedance)

DIGITAL OUT (COAXIAL):

Phono jack/0.5 Vp-p/75 ohms

LINE (RGB)-TV:

(AUDIO): SCART jack/2 Vrms/10 kilohms (VIDEO): SCART jack/1.0 Vp-p/75 ohms (S VIDEO): SCART jack/Y: 1.0 Vp-p, C: 0.3 Vp-p (PAL), 0.286 Vp-p (NTSC)/

75 ohms

(RGB): SCART jack/0.7 Vp-p/75 ohms

General

Power requirements:

220 – 240 V AC, 50/60 Hz See page 2 for further information.

Power consumption: 9 W Dimensions (approx.):

 $212 \times 87.4 \times 209.6$ mm (width/height/depth) incl. projecting parts

Mass (approx.): 1.0 kg

Operating temperature: 5 °C to 35 °C **Operating humidity:** 25 % to 80 %

Supplied accessories

- Remote commander (remote) (1)
- R6 (size AA) batteries (2)

Specifications and design are subject to change without notice.

Language Code List

For details, see pages 6, 27.

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1183	Irish	1347	Maori	1507	Samoan
1028	Abkhazian	1186	Scots Gaelic	1349	Macedonian	1508	Shona
1032	Afrikaans	1194	Galician	1350	Malayalam	1509	Somali
1039	Amharic	1196	Guarani	1352	Mongolian	1511	Albanian
1044	Arabic	1203	Gujarati	1353	Moldavian	1512	Serbian
1045	Assamese	1209	Hausa	1356	Marathi	1513	Siswati
	Aymara	1217	Hindi	1357	Malay	1514	Sesotho
1052	Azerbaijani	1226	Croatian	1358	Maltese	1515	Sundanese
	Bashkir	1229	Hungarian	1363	Burmese	1516	Swedish
	Byelorussian		Armenian	1365	Nauru	1517	Swahili
1059	Bulgarian	1235	Interlingua	1369	Nepali	1521	Tamil
	Bihari	1239	Interlingue		Dutch	1525	Telugu
1061	Bislama	1245	Inupiak	1379	Norwegian	1527	Tajik
1066	Bengali;	1248	Indonesian		Occitan	1528	Thai
	Bangla	1253	Icelandic	1403	(Afan)Oromo	1529	Tigrinya
1067	Tibetan	1254	Italian	1408	Oriya	1531	Turkmen
1070	Breton	1257	Hebrew	1417	Punjabi	1532	Tagalog
1079	Catalan	1261	Japanese	1428	Polish	1534	Setswana
1093	Corsican	1269	Yiddish	1435	Pashto;	1535	Tonga
1097	Czech	1283	Javanese		Pushto	1538	Turkish
1103	Welsh	1287	Georgian	1436	Portuguese	1539	Tsonga
1105	Danish	1297	Kazakh	1463	Quechua	1540	Tatar
1109	German	1298	Greenlandic	1481	Rhaeto-	1543	Twi
1130	Bhutani	1299	Cambodian		Romance	1557	Ukrainian
1142	Greek	1300	Kannada	1482	Kirundi	1564	Urdu
1144	English	1301	Korean	1483	Romanian	1572	Uzbek
	Esperanto	1305	Kashmiri	1489	Russian	1581	Vietnamese
1149	Spanish		Kurdish	1491	Kinyarwanda	1587	Volapük
1150	Estonian	1311	Kirghiz		Sanskrit	1613	Wolof
1151	Basque	1313	Latin	1498	Sindhi	1632	Xhosa
1157	Persian	1326	Lingala	1501	Sangho	1665	Yoruba
1165	Finnish	1327	Laothian	1502	Serbo-	1684	Chinese
1166	Fiji	1332	Lithuanian		Croatian	1697	Zulu
1171	Faroese	1334	Latvian;		Singhalese		
	French		Lettish		Slovak		
1181	Frisian	1345	Malagasy	1506	Slovenian	1703	Not specified

Parental Control Area Code List

For details, see page 22.

Code Area	Code Area	Code Area	Code Area
2044 Argentina	2165 Finland	2362 Mexico	2149 Spain
2047 Australia	2174 France	2376 Netherlands	2499 Sweden
2046 Austria	2109 Germany	2390 New Zealand	2086 Switzerland
2057 Belgium	2248 India	2379 Norway	2528 Thailand
2070 Brazil	2238 Indonesia	2427 Pakistan	2184 United
2079 Canada	2254 Italy	2424 Philippines	Kingdom
2090 Chile	2276 Japan	2436 Portugal	
2092 China	2304 Korea	2489 Russia	
2115 Denmark	2363 Malaysia	2501 Singapore	

Index

Numerics FILE 18 S 16:9 28 Scan backward 7 4:3 LETTER BOX 28 Scan forward 7 Handling discs 3 4:3 PAN SCAN 28 SCENE 17 48kHz/96kHz PCM 31 SCREEN SAVER 28 5.1 Channel Surround 10 SCREEN SETUP 28 ID3 tag 6 SETUP 17, 27 INDEX 17 Α Setup Display 27 INTERVAL 18, 25 A-B REPEAT 17, 21 SHARPNESS 17, 22 A-B Repeat Play 21 SHUFFLE 17, 20 J Advance 7 Shuffle Play 20 JPEG 5 ALBUM 18 Slow-motion Play 7 ANGLE 17 SUBTITLE 25, 27 AUDIO 27 LANGUAGE SETUP 27 AUDIO DRC 30 LINE 28 AUDIO SETUP 30 TIME/TEXT 17 AUTO PLAY 29 TITLE 17 М **AUTO POWER OFF 29** TITLE VIEWER 6 MEMORY 22 TRACK 17 MENU 27 TRACK SELECTION 29 MODE (MP3, JPEG) 18 BACKGROUND 28 TRACK VIEWER 6 MP3 5 Batteries 10 Troubleshooting 32 MPEG 31 TV TYPE 28 C MULTI-DISC RESUME 14, 29 **TVS 18** CD 14, 34 Ν CHAPTER 17 NTSC 9 CHAPTER VIEWER 6 VIDEO CD 5, 14 Connecting 9 0 Ζ Continuous play On-screen display CD/VIDEO CD 14 **ZOOM 17** Control Menu Display 16 DVD 14 Setup Display 27 Control Menu 16 ORIGINAL 17 CUSTOM 27 ORIGINAL/PLAY LIST 17 Custom Parental Control 22 **OSD 27** CUSTOM PICTURE MODE 17, 22 Р **CUSTOM SETUP 29** PAL 9 D PARENTAL CONTROL 17, 22 DATA disc 5 PAUSE MODE 29 DATE 18 PBC Playback 15 DIGITAL OUT 30 PICTURE NAVI 6 Digital output 30 PLAY LIST 17 Display Playable Discs 34 Control Menu Display 16 PROGRAM 17, 19 Setup Display 27 Programme Play 19 DivX® 29 DOLBY DIGITAL 30 Q DOWNMIX 30 OUICK 17 DTS 31 Quick Setup 12 DVD 5, 14

R

Remote 6, 10, 11 REPEAT 17, 20

Repeat Play 20

Replay 7 RESET 17 Resume 14, 29

DVD+RW 5, 7

EFFECT 18, 25

FAST/SLOW PLAY 7

DVD-RW 5

F

To find out useful hints, tips and information about Sony products and services please visit: www.sony-europe.com/myproduct



Printed on 70% or more recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.



3-874-015**-11**(1)