

# DVD Home Theatre System

Operating Instructions

DAV-DZ310/DZ510/DZ610/DZ810



**HDMI**



SUPER AUDIO CD



**MP3**

## WARNING

### Caution – The use of optical instruments with this product will increase eye hazard.

 
Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc. Do not place the naked flame sources such as lighted candles on the apparatus. To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not expose batteries or apparatus with battery-installed to excessive heat such as sunshine, fire or the like.

To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

Indoor use only.



This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.

### For the customers in Australia



**Disposal of Old Electrical & Electronic Equipment (Applicable in the European**

**Union and other European countries with separate collection systems)**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

## Precautions

### On power sources

- The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.
- As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

### Copyrights

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and

other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

This system incorporates with Dolby® Digital and Dolby Pro Logic (II) adaptive matrix surround decoder and the DTS\*\* Digital Surround System.

\* Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.

\*\* Manufactured under license under U.S. Patent #’s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.

This system incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

“DVD-RW,” “DVD-R,” “DVD+RW,” “DVD+R,” “DVD VIDEO,” and the “CD” logos are trademarks.

“BRAVIA” is a trademark of Sony Corporation.

“PLAYSTATION” is a trademark of Sony Computer Entertainment Inc.

## ABOUT DIVX VIDEO:

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

## ABOUT DIVX VIDEO-ON-DEMAND:

This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to [www.divx.com/vod](http://www.divx.com/vod) with this code to complete the registration process and learn more about DivX VOD.

DivX® is a registered trademark of DivX, Inc., and is used under license.

“S-AIR” and its logo are trademarks of Sony Corporation.  
(DAV-DZ810 only)

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.  
(Australian models only)

“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance

standards.  
(Australian models only)

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.  
(Australian models only)

## About MPEG-4 Visual

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD (“MPEG-4 VIDEO”) THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)

# About These Operating Instructions

- The instructions in these Operating Instructions describe the controls on the remote. You can also use the controls on the unit if they have the same or similar names as those on the remote.
- The Control Menu items may vary depending on the area.
- “DVD” may be used as a general term for a DVD VIDEO, DVD+RW/ DVD+R, and DVD-RW/ DVD-R.
- Measurements are expressed in feet (ft) for North American models.
- The default setting is underlined.
- The system is compatible with the S-AIR function, which allows transmission of sound between S-AIR products wirelessly (DAV-DZ810 only). For details of S-AIR products, see “Using an S-AIR Product” (page 60).
- Notes or instructions for the S-AIR function in these Operating Instructions refer only to DAV-DZ810, and notes or instructions for the surround amplifier or S-AIR receiver in these Operating Instructions refer only to when the surround amplifier or S-AIR receiver is used.

# Table of Contents

Precautions .....	2
About These Operating Instructions .....	3
Playable Discs/Files on a USB	
Device.....	5
Package Contents .....	10
Index to Parts and Control .....	12
Guide to the Control Menu .....	18

## Getting Started

<b>Step 1: Installing the System .....</b>	<b>22</b>
<b>Step 2: Connecting the System ...</b>	<b>29</b>
<b>Step 3: Setting up the System .....</b>	<b>34</b>

## Playback

Playing a Disc .....	38
Playing Files on a Disc/USB	
Device.....	38
Other Playback Operations .....	41
Selecting the Playback Mode.....	44
Enjoying Karaoke .....	47
Displaying the Information of a Disc/ USB Device .....	50
Enjoying the Audio/Video of the Connected Component .....	51

## Tuner

Presetting Radio Stations .....	53
Listening to the Radio .....	53

## Sound Effect

Enjoying Surround Sound .....	55
Selecting the Sound Effect.....	57

## Convenient Functions

Using the Control for HDMI Function for “BRAVIA” Sync .....	58
Using an S-AIR Product .....	60
Transferring Songs onto a USB Device.....	63
Using the sleep timer .....	66
Adjusting the Delay Between the Picture and Sound .....	67
Enjoying Multiplex Broadcast Sound .....	67
Changing the Input Level of the Sound from Connected Components .....	67












## Settings


Changing the Brightness of the Front Panel Display.....	69
Setting the Demonstration Mode to On/Off .....	69
Reperforming the Quick Setup .....	69
Set the System to Standby Mode Automatically .....	69
Performing Further Settings .....	70

## Additional Information

Precautions .....	78
Troubleshooting .....	80
Specifications .....	86
Index .....	91

# Playable Discs/Files on a USB Device

Type	Disc logo	Characteristics	Icon
DVD VIDEO	     	<ul style="list-style-type: none"> <li>• DVD VIDEO</li> <li>• DVD-R/DVD-RW in DVD VIDEO format or video mode</li> <li>• DVD+R/DVD+RW in DVD VIDEO format</li> </ul>	<b>DVD-V</b>
VR (Video Recording) mode	 	<ul style="list-style-type: none"> <li>• DVD-R/DVD-RW in VR (Video Recording) mode (except for DVD-R DL)</li> </ul>	<b>DVD-VR</b>
VIDEO CD		<ul style="list-style-type: none"> <li>• VIDEO CD (Ver. 1.1 and 2.0 discs)</li> <li>• Super VCD</li> <li>• CD-R/CD-RW/CD-ROM in video CD format or Super VCD format</li> </ul>	<b>VIDEO CD</b>
Super Audio CD	 SUPER AUDIO CD	<ul style="list-style-type: none"> <li>• Super Audio CD</li> </ul>	<b>Super Audio CD</b>
CD		<ul style="list-style-type: none"> <li>• Audio CD</li> <li>• CD-R/CD-RW in audio CD format</li> </ul>	<b>CD</b>
DATA CD	–	<ul style="list-style-type: none"> <li>• CD-R/CD-RW/CD-ROM in DATA CD format that contains the following kinds of files and conforms to ISO 9660<sup>1)</sup> Level 1/Level 2, or Joliet (extended format).               <ul style="list-style-type: none"> <li>– MP3 files<sup>2)3)</sup></li> <li>– JPEG image files<sup>4)</sup></li> <li>– DivX/MPEG4 video files</li> </ul> </li> </ul>	<b>DATA CD</b>
DATA DVD	–	<ul style="list-style-type: none"> <li>• DVD-ROM/DVD-R/DVD-RW/DVD+R/DVD+RW in DATA DVD format that contains the following kinds of files and conforms to UDF (Universal Disk Format).               <ul style="list-style-type: none"> <li>– MP3 files<sup>2)3)</sup></li> <li>– JPEG image files<sup>4)</sup></li> <li>– DivX/MPEG4 video files</li> </ul> </li> </ul>	<b>DATA DVD</b>

Type	Disc logo	Characteristics	Icon
USB device	–	<ul style="list-style-type: none"> <li>• USB device that contains the following kinds of files. <ul style="list-style-type: none"> <li>– MP3 files<sup>2)3)</sup> or WMA/AAC files<sup>3)</sup></li> <li>– JPEG image files<sup>4)</sup></li> <li>– DivX/MPEG4 video files</li> </ul> </li> </ul>	

<sup>1)</sup>A logical format of files and folders on CD-ROMs, defined by ISO (International Organization for Standardization).

<sup>2)</sup>MP3 (MPEG1 Audio Layer 3) is a standard format defined by ISO/MPEG for compressed audio data. MP3 files must be in MPEG1 Audio Layer 3 format.

<sup>3)</sup>Files with copyright protection (Digital Rights Management) cannot be played by the system.

<sup>4)</sup>JPEG image files must conform to the DCF image file format. (DCF “Design rule for Camera File system”: Image standards for digital cameras regulated by Japan Electronics and Information Technology Industries Association (JEITA).)

## Notes on discs

This product is designed to playback discs that conform to the Compact Disc (CD) standard.

DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard, therefore, these discs may not be compatible with this product.

## Example of discs that the system cannot play

The system cannot play the following discs:

- CD-ROM/CD-R/CD-RW other than those recorded in the formats listed on page 5
- CD-ROM recorded in PHOTO CD format
- Data part of CD-Extra
- CD Graphics disc
- DVD Audio
- DATA CD/DATA DVD that does not contain MP3 files, JPEG image files, DivX video files, or MPEG4 video files
- DATA CD/DATA DVD that is created in Packet Write format
- DVD-RAM
- Blu-ray Disc

Also, the system cannot play the following discs:

- A DVD VIDEO with a different region code (page 7)
- A disc that has a non-standard shape (e.g., card, heart)
- A disc with paper or stickers on it
- A disc that has the adhesive of cellophane tape or a sticker stuck on it

## Notes about CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/DVD+RW

In some cases, CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/DVD+RW cannot be played on this system due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software.

The disc will not play if it has not been correctly finalized. For more information, refer to the operating instructions for the recording device.

Note that some playback functions may not work with some DVD+RWs/DVD+Rs, even if they have been correctly finalized. In this case, view the disc by normal playback. Also some DATA CDs/DATA DVDs created in Packet Write format cannot be played.

## Notes about Multi Session CD

- This system can play a Multi Session CD when an MP3 file is contained in the first session. Any subsequent MP3 files recorded in later sessions can also be played.
- This system can play a Multi Session CD when a JPEG image file is contained in the first session. Any subsequent JPEG image files recorded in later sessions can also be played.
- If MP3 files and JPEG image files in music CD format or video CD format are recorded in the first session, only the first session will be played.

## Region code

Your system has a region code printed on the rear of the unit and will only play a DVD labeled with the same region code.

A DVD VIDEO labeled  will also play on this system.

If you try to play any other DVD VIDEO, the message [Playback prohibited by area limitations.] will appear on the TV screen. Depending on the DVD VIDEO, no region code indication may be given even though playing the DVD VIDEO is prohibited by area restrictions.

## Notes about playback operations of a DVD or VIDEO CD

Some playback operations on a DVD or VIDEO CD may be intentionally set by software producers. Since this system will play a DVD or VIDEO CD according to the disc contents the software producers designed, some playback features may not be available. Be sure to read the operating instructions of the DVD or VIDEO CD.

## Notes about playable files

- The system can recognize up to 200 folders, including albums (folders) that do not contain audio files, JPEG image files, or video files. When more than 200 folders are on the DATA CD/DATA DVD/USB device or more than 150 files are in a folder, folders/files that are recognized by the system differ depending on the folder configuration.
- The system can play the following files.

File	Extension of the file
MP3 file	“.mp3”
WMA file*	“.wma”
AAC file*	“.m4a”
JPEG image file	“.jpg” or “.jpeg”
DivX video file	“.avi” or “.divx”
MPEG4 video file	“.mp4” or “.m4v”

\* USB device only.

The system will attempt to play any data with the extensions above, even if it is not in MP3/WMA/AAC/JPEG/DivX/MPEG4 format. Playing this data may generate a loud noise which could damage your speaker system.

- The following can increase the time it takes to start playback:
  - when a DATA CD/DATA DVD/USB device is recorded with a complicated tree structure.
  - when the audio files, JPEG image files, or video files in another folder have just been played.
- Some files on DATA CDs/DATA DVDs/USB devices cannot be played by the system depending on the file format.
- The system can play to a depth of 8 folders only.
- The system may not be able to play an audio file, JPEG image file, or video file depending on the file type.
- Files recorded by a device such as a computer may not be played in the order in which they were recorded.
- Folders that have no audio files, JPEG image files, or video files are skipped.
- Compatibility with all MP3/WMA/AAC encoding/writing software, recording devices, and recording media cannot be guaranteed.
- Compatibility with all MPEG4 video encoding/writing software, recording devices, and recording media cannot be guaranteed.
- The playback order may not be applicable depending on the software used for creating the audio file, JPEG image file, or video file, or if there are more than 200 folders or 150 files in each folder.

### **About DivX video files**

- DivX<sup>®</sup> is a video file compression technology, developed by DivX, Inc. This product is an official DivX<sup>®</sup> Certified product.
- You can play a DATA CD/DATA DVD/USB device that contains DivX<sup>®</sup> video files.

#### **Note**

- The system may not play a DivX video file when the file has been combined from two or more DivX video files.
- The system cannot play a DivX video file larger than 720 (width) × 576 (height) or 4GB.
- Depending on the DivX video file, sound may skip or not match the pictures on the TV screen.
- The system cannot play some DivX video files that are longer than 3 hours.
- Depending on the DivX video file, the picture may pause or be unclear, in which case it is recommended that you create the file at a lower bit rate. If the sound is noisy, MP3 is the recommended audio format.
- Because of the compression technology used for DivX video files, it may take some time after you press ► for the picture to appear.

### **Notes about USB devices**


- This system supports Mass Storage Class (MSC) devices.
- This system is not guaranteed to operate with all USB devices or memories.
- Although there are variety of complex functions for USB devices, the playable contents of USB devices connected to the system are music, photo, and video contents only. For details, refer to the operating instructions of the USB device.
- When a USB device is inserted, the system reads all the files on the USB device. If there are many folders or files on the USB device, it may take a long time to finish reading the USB device.
- Do not connect the system and the USB device through a USB hub.
- With some connected USB devices, there may be a delay before an operation is performed by this system.



- The playback order for the system may differ from the playback order of the connected USB device.
- Always turn off the system before removing the USB device. Removing the USB device while the system is on may corrupt the data on the USB device.
- Before using a USB device, make sure that no virus-ridden files are on the USB device.


# Package Contents

## Main unit

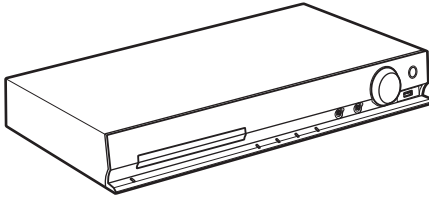


## Speaker packages


- DAV-DZ310

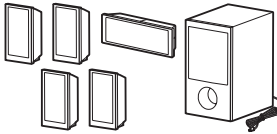


- DAV-DZ510

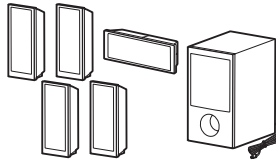

- DAV-DZ610

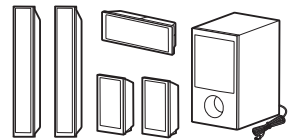

- DAV-DZ810

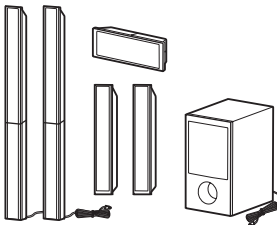


- Speaker cords (1 set)  
For DAV-DZ310/DAV-DZ510/DAV-DZ610 (red/white/green/gray/blue)  
For DAV-DZ810 (green/gray/blue)




- Foot pads (1 set)



 
- Wall mounting parts  
For DAV-DZ510



 
- Speaker assembly parts  
For DAV-DZ310



 - Speaker assembly parts for the tall round pole-type speakers  
For DAV-DZ610/DAV-DZ810




 - Speaker assembly parts for the tall square-type speakers  
For DAV-DZ810



## Accessories

 - Remote commander (remote) (1)




- R6 (size AA) batteries (2)



- Calibration mic (1)



 
- FM wire antenna (aerial) (1)



- Video cord (1)



- HDMI cable (1)  
(Singapore, Indonesian, Malaysian, Filipino, Latin American, and Mexican models only)

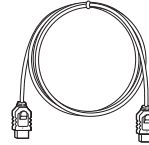

- Speaker-bottom covers (2)  
(DAV-DZ810 only)




- Operating Instructions
- Quick Setup Guide
- Speaker Installation Guide  
(DAV-DZ310/DAV-DZ610/DAV-DZ810 only)

# Index to Parts and Control

For more information, refer to the pages indicated in parentheses.

## Front panel

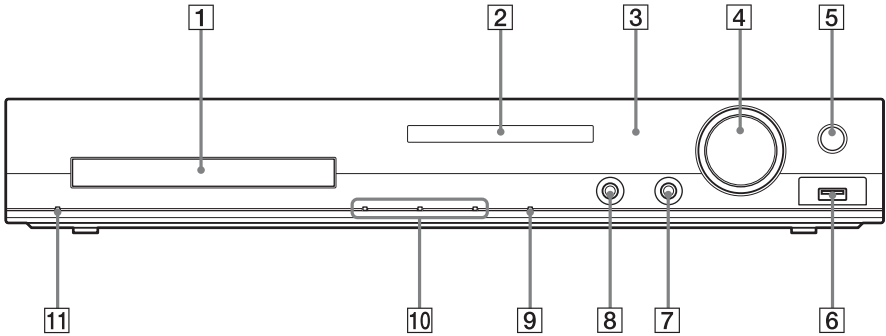

**1 Disc tray**

Opens or closes the disc tray.

**2 Front panel display (page 13)**

▶ **(play)**

**3  (remote sensor)**

Receives the remote signal. Point the remote toward here when using the remote.

Starts or re-starts playback.

**4 MASTER VOLUME control**

Adjusts the system's volume.

■ **(stop)**

Stops playback and remembers the stop point (resume point).

**5 REC TO USB (page 63)**

Transfers tracks/MP3 files/radio programs onto a USB device.

Lights up during transfer of tracks/MP3 files/radio programs.

**11  I/O (on/standby)**

Turns on the unit, or sets it to standby mode.

**6  (USB) port (pages 32, 38)**

Used for connecting a USB device or iPod\*.

\* Australian models only.

**7 AUDIO IN jack (page 32)**

Used for connecting other components, such as a portable audio source.

**8 MIC/A.CAL MIC jack (pages 34, 47)**

Used for connecting a microphone or the calibration mic.


**9 FUNCTION**

Selects the playback source.

**10 Play operation buttons**

▲ **(open/close)**

## Front panel display

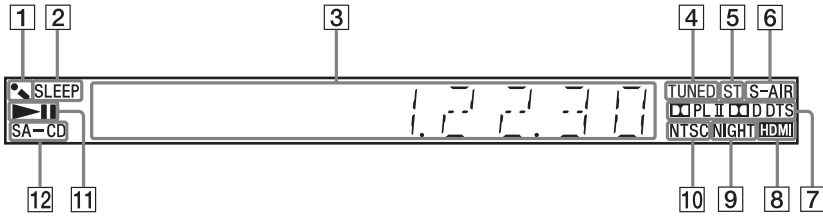

**1 Karaoke indicator**

Lights up when the karaoke mode is on.

**2 SLEEP indicator**

Flashes when the sleep timer is set.

**3 System status display**

**4 TUNED indicator (Radio only)**

Lights up when a station is received.

**5 ST indicator (Radio only)**

Lights up when stereo sound is received.

**6 S-AIR indicator (only when the wireless transmitter (not supplied) is inserted into the unit) (DAV-DZ810 only)**

Lights up during wireless transmission. Flashes when “S-AIR STBY” is set to “STBY ON” and the system is in standby mode while wireless transmission between the unit and S-AIR receiver is not activated.

**7 Surround format indicator**

**8 HDMI indicator**

Lights up when a signal is established between a TV and the unit via HDMI.

**9 NIGHT indicator**

Lights up when the night mode is on.

**10 NTSC indicator**


Lights up when the color system is set to NTSC. (Asian, Australian, Middle Eastern, and South African models only)

**11 Playing status indicator**

**12 SA-CD indicator**

Lights up when a Super Audio CD/CD is loaded.

## Rear panel

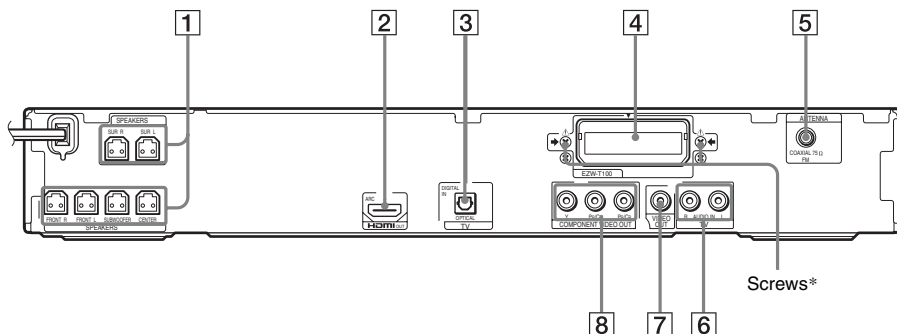

- 1 **SPEAKERS** jacks (page 29)
- 2 **HDMI OUT** jack (page 30)
- 3 **TV (DIGITAL IN OPTICAL)** jack (DAV-DZ510/DAV-DZ610/DAV-DZ810 only) (page 30)
- 4 **EZW-T100** slot (DAV-DZ810 only) (page 60)
- 5 **ANTENNA (COAXIAL 75Ω FM)** jack (page 33)
- 6 **TV (AUDIO IN R/L)** jacks (page 30)


- 7 **VIDEO OUT** jack (page 30)
- 8 **COMPONENT VIDEO OUT** jacks (page 30)

\*  **CAUTION**

**(DAV-DZ810 only)**

Please do not remove the screws unless you are installing the EZW-T100.

## Remote control

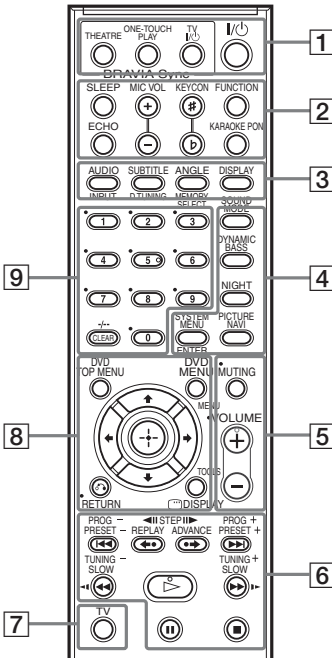

Number 5, VOLUME +, and ► buttons have a tactile dot. Use the tactile dot as a reference when operating the remote.

### About the operation of the supplied remote

You can operate this system and a Sony TV with the supplied remote.

#### ■ System operation

Press buttons marked with .

#### ■ Sony TV operation

Press buttons marked with while pressing the TV button.

THEATRE and TV I/O buttons are operated directly without pressing the TV button.

#### Note

- Depending on your TV, you may not be able to control your TV or to use some of the buttons.

#### 1 THEATRE (page 58)

Switches to the optimum video mode for watching movies automatically.

#### ONE-TOUCH PLAY (page 58)

Activates One-Touch Play.

#### TV I/O (on/standby)

Turns on your TV or sets it to standby mode.

#### I/O (on/standby) (page 34)

Turns on the system or sets it to standby mode.

#### 2 SLEEP (page 66)

Sets the sleep timer.

#### ECHO (page 47)

Adjusts the level of the echo effect.

#### MIC VOL +/- (page 47)

Adjusts the microphone volume.

#### KEYCON #/b (page 48)

Changes the key of a song.

#### FUNCTION (pages 38, 51, 53)

Selects the playback source.

#### KARAOKE PON (page 48)

Turns Karaoke Pon mode on/off.

#### 3 AUDIO (page 42)

Selects the audio format/track.

#### SUBTITLE (page 42)

Selects the subtitle language when multilingual subtitles are recorded on a DVD VIDEO.

#### ANGLE (page 42)

Switches to other viewing angles when multi-angles are recorded on a DVD VIDEO.

#### DISPLAY (page 50)

Changes the information in the front panel display.

#### INPUT

Switches your TV's input source.

#### D.TUNING (page 53)

Selects the radio frequencies.

#### MEMORY SELECT (pages 38, 63)

Selects the USB device's memory number for playback or transfer.

- 4 SOUND MODE (page 57)**
- Selects the sound mode.
- DYNAMIC BASS (page 57)**
- Reinforces bass frequencies.
- NIGHT (page 57)**
- Activates the night mode function.
- PICTURE NAVI (page 39)**
- Displays the image browser for JPEG file selection.

**SYSTEM MENU (pages 53, 55, 60, 66, 69)**

Enters the system menu.

**ENTER**

Enters the selected item.

- 5 MUTING**

Turns off the sound temporarily.

**VOLUME +/- (page 38)**

Adjusts the volume.

- 6 Playback operation buttons**

See “Other Playback Operations” (page 41).

**◀◀/▶▶ (previous/next)**

**◀|||/|||▶ STEP**

**◀••/••▶ REPLAY/ADVANCE**

**◀◀/▶▶ (fast reverse/fast forward)**

**◀◀/▶▶ SLOW**

**▷ (play)**

**|| (pause)**

**■ (stop)**

**Radio operation buttons**

See “Listening to the Radio” (page 53).

**PRESET +/-**

**TUNING +/-**

**PROG +/-**

Select the TV channel.

- 7 TV**

Changes to the TV operation mode for the remote.

- 8 DVD TOP MENU (page 43)**

Opens or closes the DVD’s Top Menu.

**DVD MENU (page 43)**

Opens or closes the DVD’s menu.

**←/↑/↓/→**

Moves the highlight to a displayed item.

**⊕ (ENTER)**

Enters the selected item.

**↶ RETURN (page 39)**

Returns to the previous display.

**⏮ DISPLAY (pages 18, 34, 38, 41, 44, 47, 58, 63, 70)**

Displays the playback information on the TV screen.

**MENU**

Displays the menu of your TV.

**TOOLS**

Displays the operation menu for the current display.

- 9 Number buttons (pages 41, 53)**

Enters the title/chapter numbers, radio frequencies, etc.

**CLEAR (pages 41, 44, 66)**

Clears the entry field.


**-/-**

Selects a channel number greater than 10.



## To insert the batteries

Insert two R6 (size AA) batteries (supplied) by matching the  $\oplus$  and  $\ominus$  ends on the batteries to the markings inside the compartment.

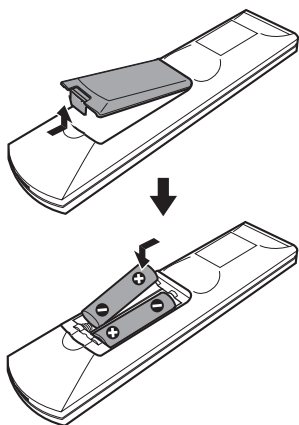


### Note

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with an old one.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- If you do not intend to use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

# Guide to the Control Menu

You can use the Control Menu to select a function and to view related information.

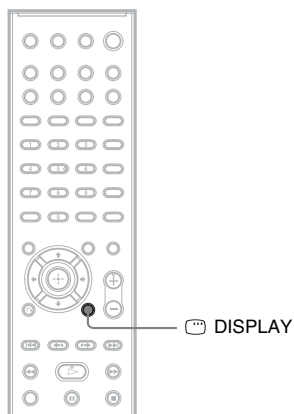

Press  DISPLAY while using the “DVD/CD” or “USB” function.


Each time you press  DISPLAY, the Control Menu changes:

① → ② → ③ → ① → ...

- ① Control Menu 1
- ② Control Menu 2 (appears when available)
- ③ Control Menu off

# Control Menu



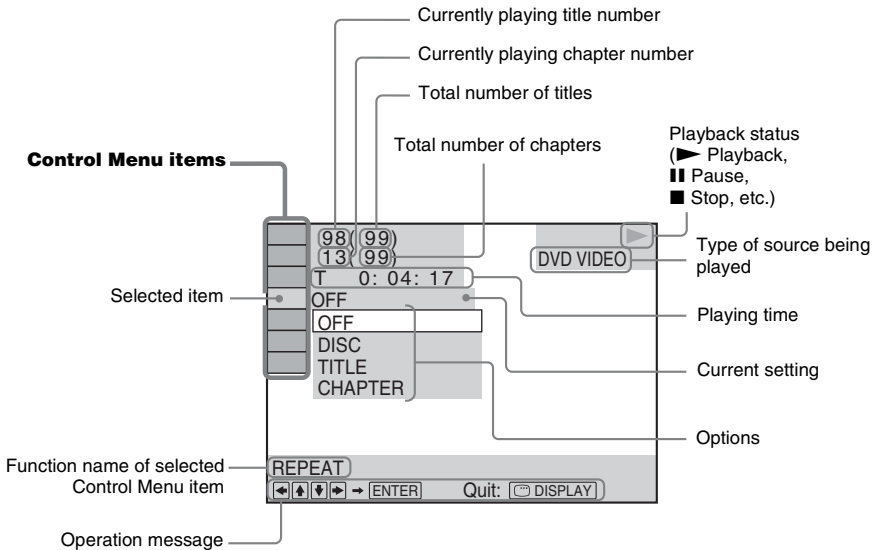











Example: Control Menu 1 when playing a DVD VIDEO.



## List of Control Menu items

The Control Menu 1 and 2 will show different items depending on the source. For details, see the pages in parentheses in the chart below.

Item	Item Name, Function, Relevant Source
	<b>[TITLE] (page 41)/[SCENE] (page 41)/[TRACK] (page 41)</b> You can select the title, scene, or track to be played. <span style="float: right;">DVD-V DVD-VR VIDEO CD</span>
	<b>[CHAPTER] (page 41)/[INDEX] (page 41)</b> You can select the chapter or index to be played. <span style="float: right;">DVD-V DVD-VR VIDEO CD</span>
	<b>[INDEX] (page 41)</b> You can display the index and select the index to be played. <span style="float: right;">Super Audio CD</span>
	<b>[TRACK] (page 41)</b> You can select the track to be played. <span style="float: right;">Super Audio CD C D DATA CD DATA DVD USB</span>
	<b>[ORIGINAL/PLAY LIST] (page 43)</b> You can select the type of titles (DVD-RW/DVD-R) to be played, the [ORIGINAL] one, or an edited [PLAY LIST]. <span style="float: right;">DVD-VR</span>
	<b>[TIME] (page 42)</b> You can check the elapsed time and the remaining playback time. You can play from a desired point by inputting the time code (DVD VIDEO/DVD-VR only). <span style="float: right;">DVD-V DVD-VR VIDEO CD Super Audio CD C D DATA CD DATA DVD USB</span>
	<b>[MULTI/2CH] (page 44)</b> You can select the playback area on a Super Audio CD when available. <span style="float: right;">Super Audio CD</span>
	<b>[SUPER AUDIO CD/CD LAYER] (page 44)</b> You can select the playback layer on a Super Audio CD when available. <span style="float: right;">Super Audio CD</span>



	<b>[PROGRAM] (page 44)</b> You can select the track to play in the order you want. <b>VIDEO CD</b> <b>C D</b>
	<b>[SHUFFLE] (page 45)</b> You can play the tracks/files in random order. <b>VIDEO CD</b> <b>Super Audio CD</b> <b>C D</b> <b>DATA CD</b> <b>DATA DVD</b> <b>USB</b>
	<b>[REPEAT] (page 46)</b> You can play the entire disc/USB device (all titles/all tracks/all folders/all files) repeatedly or one title/chapter/track/folder/file repeatedly. <b>DVD-V</b> <b>DVD-VR</b> <b>VIDEO CD</b> <b>Super Audio CD</b> <b>C D</b> <b>DATA CD</b> <b>DATA DVD</b> <b>USB</b>
	<b>[A/V SYNC] (page 67)</b> You can adjust the delay between the picture and sound. <b>DVD-V</b> <b>DVD-VR</b> <b>VIDEO CD</b> <b>DATA CD</b> <b>DATA DVD</b> <b>USB</b>
	<b>[DISC MENU] (page 43)</b> You can display the DVD's menu. <b>DVD-V</b>
	<b>[BROWSING] (page 39)</b> You can display the list of folders/JPEG image files. <b>DATA CD</b> <b>DATA DVD</b> <b>USB</b>
	<b>[SETUP] (page 70)</b> [CUSTOM] In addition to the Quick Setup setting, you can adjust various other settings. [QUICK] (page 34) You can make basic adjustments. Use the Quick Setup to select the desired language of the on-screen display, the aspect ratio of your TV, and start the Auto Calibration. <b>DVD-V</b> <b>DVD-VR</b> <b>VIDEO CD</b> <b>Super Audio CD</b> <b>C D</b> <b>DATA CD</b> <b>DATA DVD</b> <b>USB</b>
	<b>[FOLDER] (page 41)</b> You can select the folder to be played. <b>DATA CD</b> <b>DATA DVD</b> <b>USB</b>
	<b>[FILE] (page 41)</b> You can select the JPEG image file or video file to be played. <b>DATA CD</b> <b>DATA DVD</b> <b>USB</b>
 1)	<b>[DATE] (page 51)</b> You can display the date the picture was taken by a digital camera. <b>DATA CD</b> <b>DATA DVD</b> <b>USB</b>
 1)	<b>[INTERVAL] (page 46)</b> You can select the duration for which the slides are displayed on the TV screen. <b>DATA CD</b> <b>DATA DVD</b> <b>USB</b>
 1)	<b>[EFFECT] (page 46)</b> You can select the effects to be used for changing slides during a slide show. <b>DATA CD</b> <b>DATA DVD</b> <b>USB</b>
	<b>[MEDIA] (page 40)</b> You can select the playback priority of different types of media (MP3/AAC <sup>2)</sup> /WMA <sup>2)</sup> file, JPEG image file, video file, or both MP3 and JPEG image files <sup>3)</sup> to be played on a DATA CD/DATA DVD/USB device. <b>DATA CD</b> <b>DATA DVD</b> <b>USB</b>
	<b>[USB TRANSFER] (page 63)</b> You can transfer tracks on an audio CD or MP3 files on a DATA CD/DATA DVD onto a USB device. <b>USB</b>

<sup>1)</sup>These items are not displayed when playing a DATA CD/DATA DVD/USB device with video files.



<sup>2)</sup>USB device only.

<sup>3)</sup>DATA CD/DATA DVD only.

## List of Control Menu Items for karaoke

Item	Item Name, Function, Relevant Source
	<b>[KARAOKE MODE] (page 47)</b> Set karaoke mode to on/off. <div style="display: flex; justify-content: flex-end; gap: 5px; margin-top: 5px;"> <span>DVD-V</span> <span>DVD-VR</span> <span>VIDEO CD</span> <span>C D</span> <span>DATA CD</span> <span>DATA DVD</span> <span>USB</span> </div>
	<b>[VOCAL SELECT] (page 49)</b> Selects different kind of vocals recorded in the disc. <div style="display: flex; justify-content: flex-end; gap: 5px; margin-top: 5px;"> <span>DVD-V</span> <span>VIDEO CD</span> <span>C D</span> </div>

### Tip


- The Control Menu icon indicator lights up in yellow  →  when you select any item except [OFF] ([PROGRAM], [SHUFFLE], [REPEAT], [A/V SYNC], [KARAOKE MODE], and [VOCAL SELECT] only). The [ORIGINAL/PLAY LIST] indicator lights up in yellow when you select [PLAY LIST] (default setting). The [MULTI/2CH] indicator lights up in yellow when you select the multi-channel playback area on a Super Audio CD.

## Getting Started


## Step 1: Installing the System

### How to position the system


Install the system by referring to the illustration below.

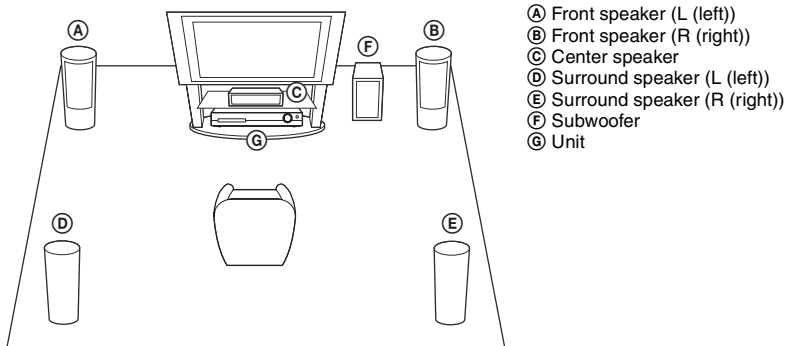

### To attach the foot pads to the subwoofer

 

Remove the foot pads from the protective cover.

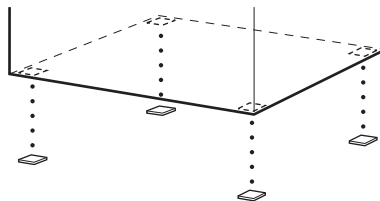

#### Note

- Use caution when placing the speakers and/or speaker stands attached to the speakers on a specially treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result.

### Assembling the speakers

*(DAV-DZ310/DAV-DZ610/DAV-DZ810 only)*

For assembling the speakers refer to “Speaker Installation Guide” (supplement).

## When installing the speakers on a wall


### Caution

- Contact a screw shop or installer for information regarding the wall material or screws to be used.
- Use screws that are suitable for the wall material and strength. As a plaster board wall is especially fragile, attach the screws securely to a beam. Install the speakers on a vertical and flat wall where reinforcement is applied.
- Sony is not responsible for accidents or damage caused by improper installation, insufficient wall strength or improper screw installation, natural calamity, etc.

### Before installing the tall speaker on a wall (DAV-DZ810 only)


You cannot install the tall square-type speaker with the lower part attached. Be sure to remove the lower part of the tall square-type speaker before installing the tall square-type speaker on a wall.

- 1 Pull out the speaker cord from the slot of the rear of the speaker.**

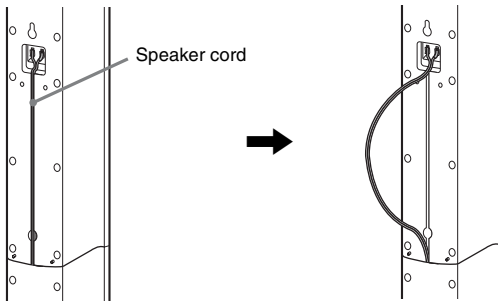


Rear of the speaker

- 2 Disconnect the speaker cords from the speaker.**

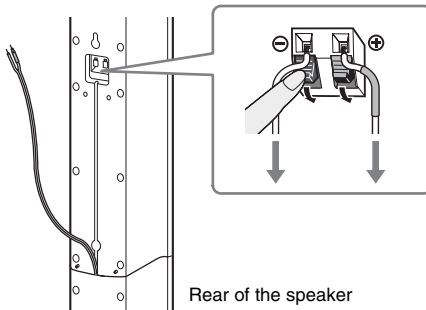


Rear of the speaker

- 3 Remove the screw (pre-installed) at the rear of the speaker.**

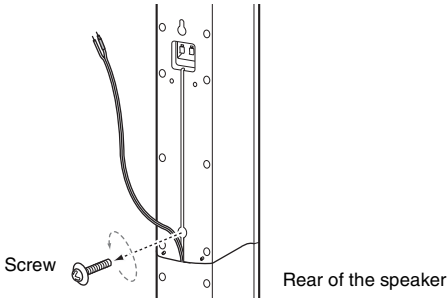


- 4 Lift the upper part of the speaker.**

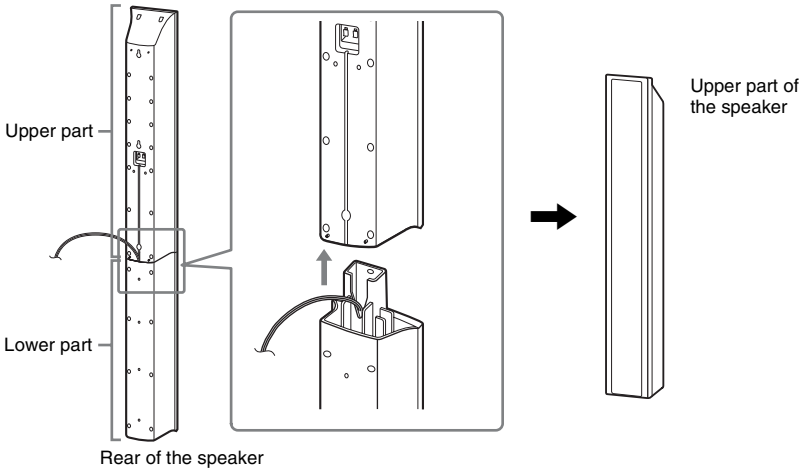


- 5 Pull out the speaker cord from the bottom of the lower part of the speaker.**

The removed speaker cord is used when installing the speaker on a wall.

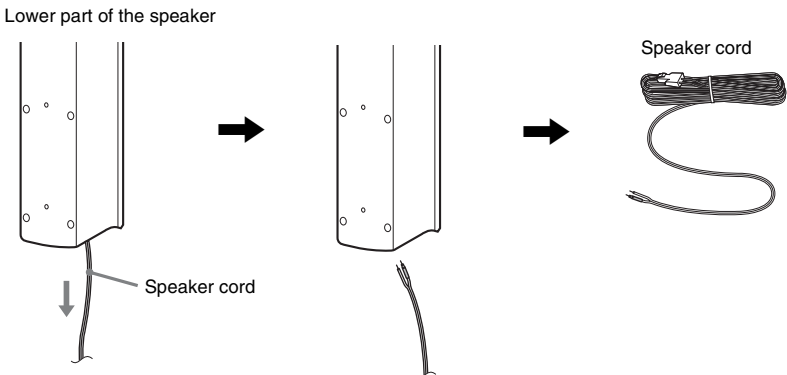



- 6** Remove the protection paper from the speaker-bottom cover, then attach the speaker-bottom cover to the bottom of the upper part of the speaker.

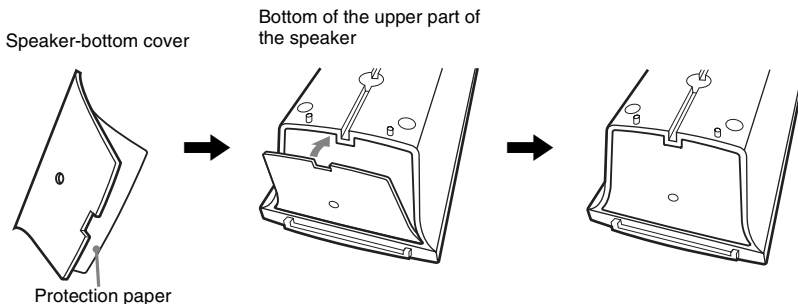

**Note**


- When removing the protection paper, pull it off via the section exposed by the notch in the speaker-bottom cover.

### To hang the speaker on a wall



For DAV-DZ510, you can select the speaker hanging method.

- To hang the speakers directly on a wall in an upright position: see the following Steps.
- To hang the front and surround speakers on a wall at a desired angle by using the supplied wall mounting parts: see “To install the front and surround speakers on a wall using the wall mounting parts” (page 26).

- 1** Connect the speaker cord with the color tube to ⊕, and the speaker cord without the color tube to ⊖.

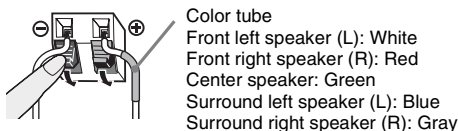

 
- 2** Prepare screws (not supplied) that are suitable for the hole on the back of each speaker. See the illustrations below.



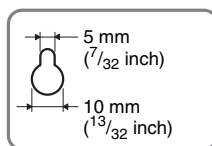



Hole on the back of the speaker


- 3** Fasten the screws to the wall, then hang the speaker on the wall.

**Depth of fastened screw**

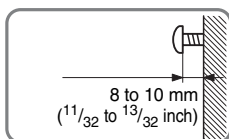

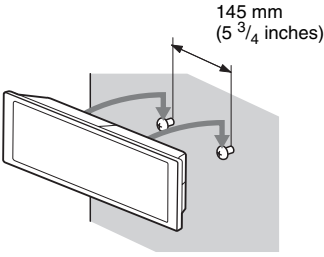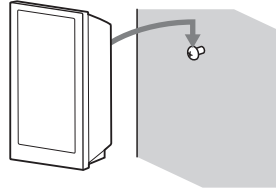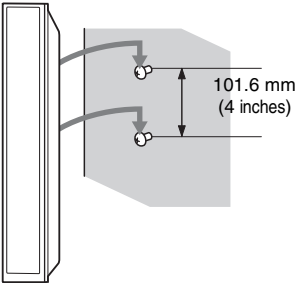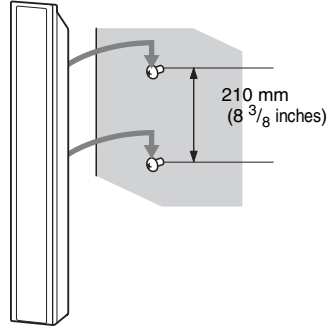**For the center speaker****For the small speakers (DAV-DZ310/ DAV-DZ510/DAV-DZ610 only)****For the tall round pole-type speakers (DAV-DZ610/DAV-DZ810 only)****For the tall square-type speakers (DAV-DZ810 only)****To install the front and surround speakers on a wall using the wall mounting parts (DAV-DZ510 only)**


- 1 Pass the speaker cord through the mounting plate, then attach the mounting plate to the wall using commercially available screws.

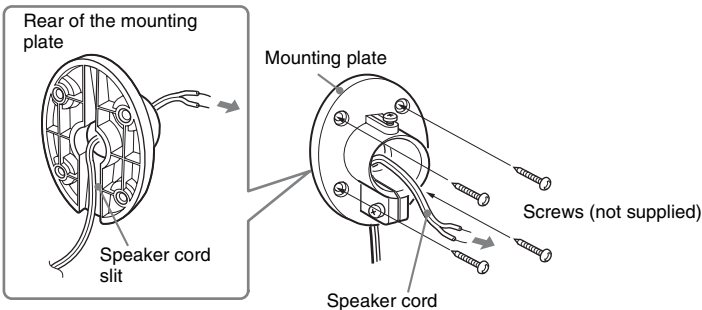


Use the speaker cords as follows:

- Front left speaker (L): White
- Front right speaker (R): Red
- Surround left speaker (L): Blue
- Surround right speaker (R): Gray


- 2** Remove the cover from the mounting bracket, pass the speaker cord through the hole on the rear side of the mounting bracket and out from the front side of the bracket, then connect the speaker cord to the speaker.

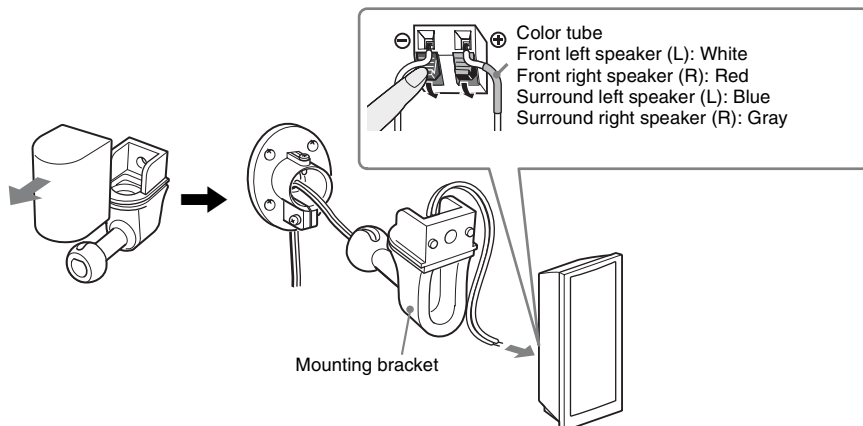


- 3** Tightly secure the speaker to the mounting bracket with the screw (supplied).

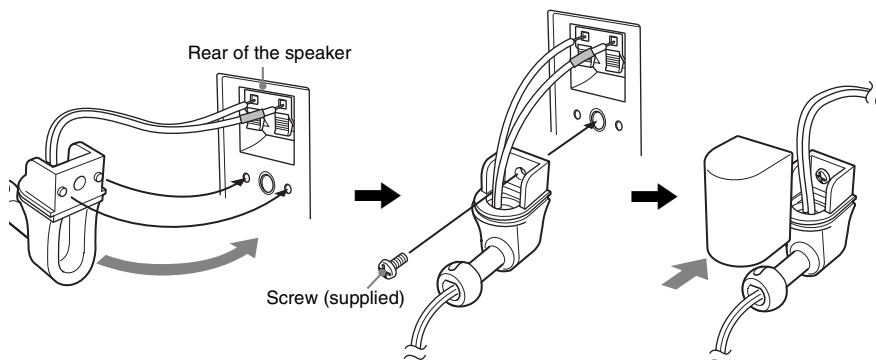

- 4** Adjust the length of the speaker cord as you bring the shaft knob together with the mounting plate, then insert the knob firmly until it stops.

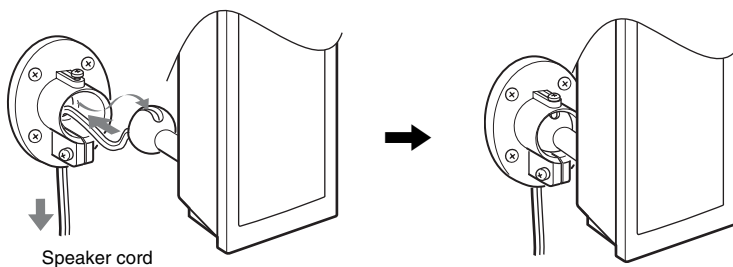

- 5** After deciding the angle, secure a screw on the lower side (①), then secure a screw on the upper side (②).

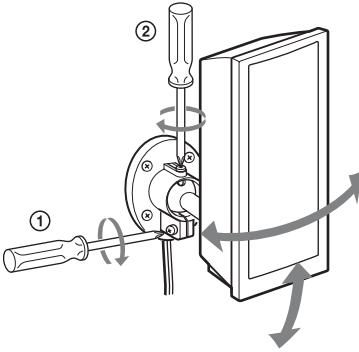
**Note**

- Make sure that the wall is sufficiently thick before installing.
- Do not loosen the screws at the mounting plate or screw to secure the speaker to the mounting bracket during the assembly process. If you do, the speaker may drop and cause an injury.

# Step 2: Connecting the System


## Connecting the speakers

- 1 Insert the connectors of the speaker cords to match the color of the **SPEAKERS** jacks of the unit until they click.

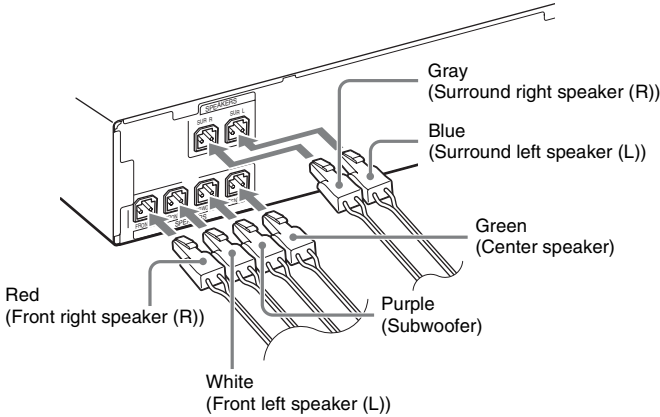

- 2 Connect the speaker cord with the color tube to  $\oplus$ , and the speaker cord without the color tube to  $\ominus$ .

The subwoofer speaker cord is fixed to the subwoofer.

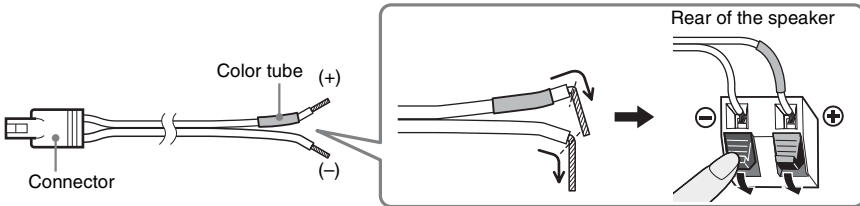


### Note


- Do not catch the speaker cord insulation (rubber covering) in the speaker terminals.

## Connecting your TV/set-top box

### When connecting to a TV only

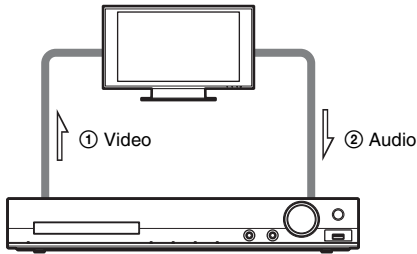

### When connecting to a TV and set-top box

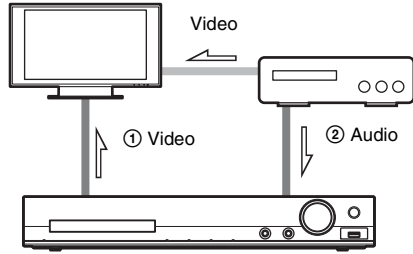

### ① Connecting the video to your TV

Depending on the jacks on your TV, select one of the connection methods.

#### ■ Method 1: Video cord (supplied) connection

This is the basic connection.


#### ■ Method 2: HDMI cable\* connection

Picture quality will be improved compared to Method 1.

If your TV is compatible with the Audio Return Channel function, this connection also sends a digital audio signal from the TV. You do not need to make a separate audio connection for listening to TV sound. For details of the Audio Return Channel function, see “Receiving the digital audio signal of your TV” (page 59).

#### ■ Method 3: Component video cable connection (not supplied)

Picture quality will be improved compared to Method 1.

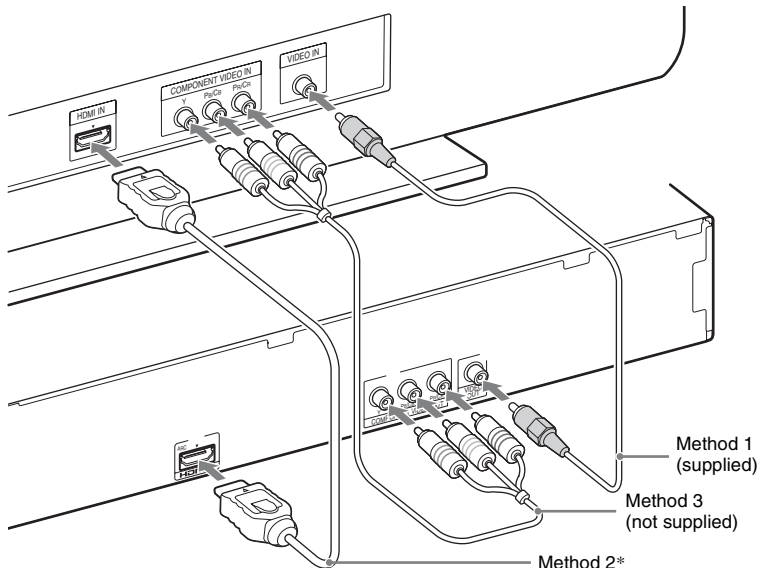

\* The HDMI cable is supplied with Singapore, Indonesian, Malaysian, Filipino, Latin American, and Mexican models only.

## ② Connecting the audio from your TV/set-top box


To listen to TV or set-top box sound via the system, select one of the connection methods.

### ■ Method 1: Audio cord (not supplied) connection

This is the basic connection and sends an analog audio signal.

### ■ Method 2: Digital optical cord (not supplied) connection (DAV-DZ510/DAV-DZ610/DAV-DZ810 only)

Sound quality will be improved compared to Method 1.

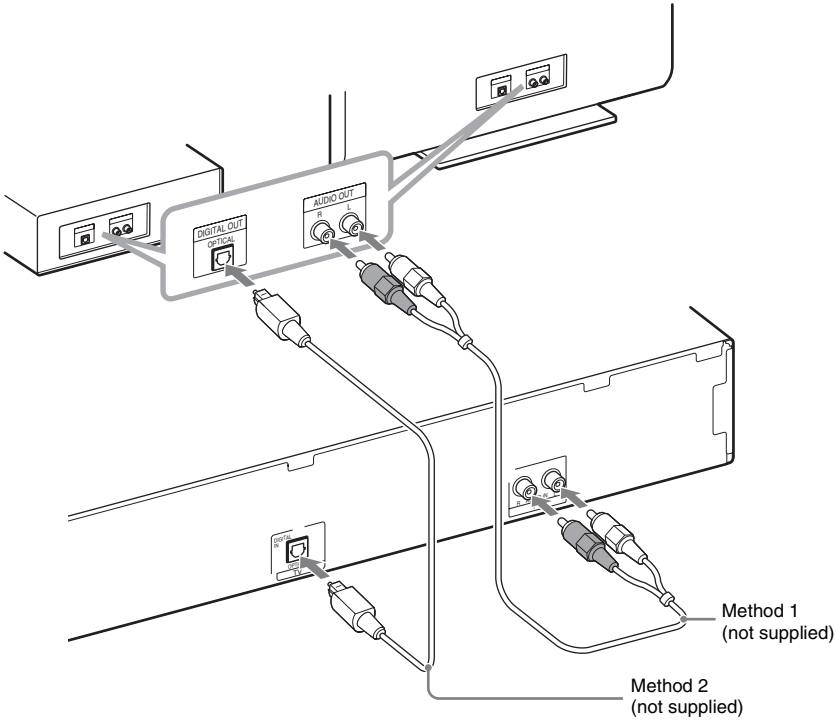

#### Note

- The system can accept both digital and analog signals. Digital signals have priority over analog signals. If the digital signal ceases, the analog signal will be processed after a few seconds.

#### Tip

- You can connect another component, such as a VCR, digital satellite receiver, or PlayStation, to the TV jacks instead of your TV.

## To change the color system (PAL or NTSC) (Asian, Australian, Middle Eastern, and South African models only)


Depending on your TV, you may be required to select either PAL or NTSC for the color system. The initial setting for Australian, Middle Eastern, and South African models is PAL. The initial setting for Asian models is NTSC.

- 1 Turn off the system by pressing I/⏻.**
- 2 Turn on the system by pressing I/⏻ on the unit while pressing FUNCTION on the unit.**  
Each time you perform this operation, the color system toggles between PAL and NTSC. “NTSC” lights up in the front panel display when the color system is set to NTSC.

## Connecting the other components


You can enjoy connected components via the system’s speakers.

Connected component	Required cord for connection
Portable audio source (not supplied)	<b>A</b> Stereo mini-plug cord (not supplied)
USB device (not supplied)	<b>B</b> USB connector (not supplied)

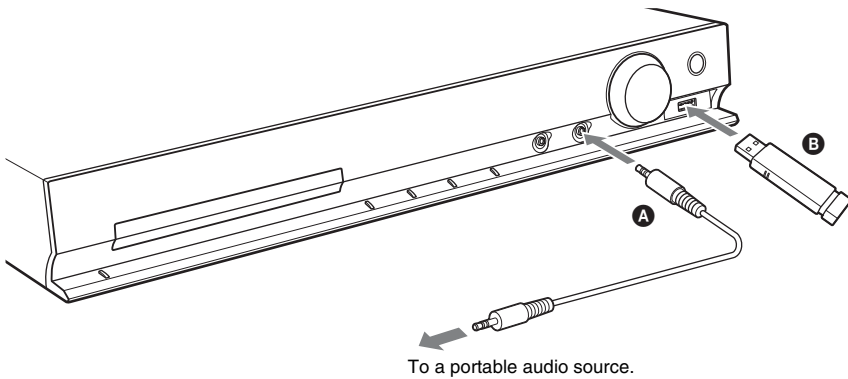



## Connecting the antenna (aerial)

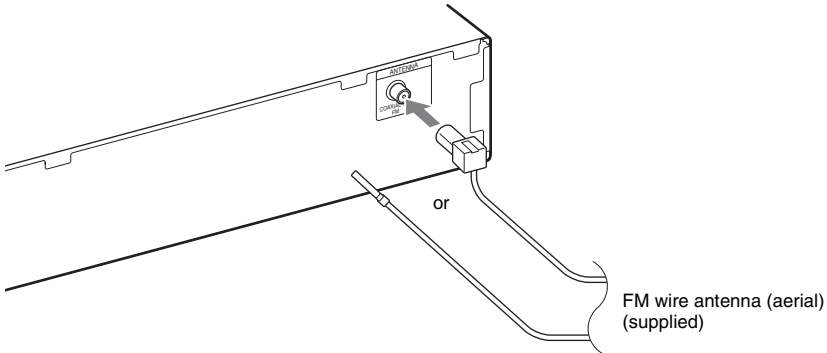


### Note

- After connecting the FM wire antenna (aerial), extend and keep it as horizontal as possible.


## Connecting the AC power cord (mains lead)

### 1 Connect the AC power cord (mains lead).

The demonstration appears in the front panel display.

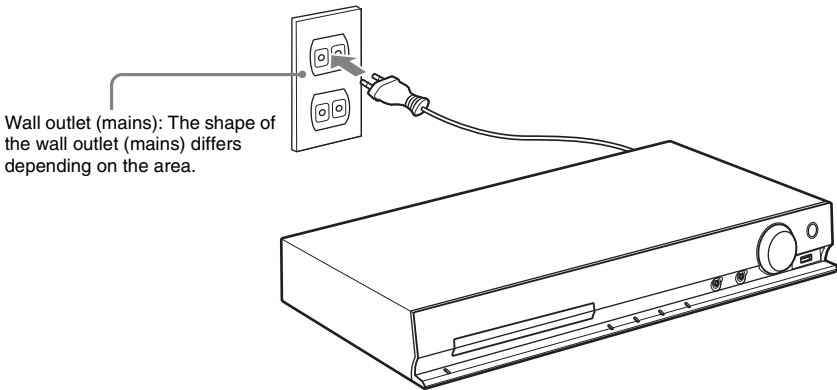



### 2 Press I/⏻ to turn the system on, then press I/⏻ again to turn off the demonstration.

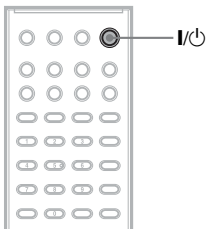


## Step 3: Setting up the System

### Performing the Quick Setup

 Displayed items vary depending on the area.

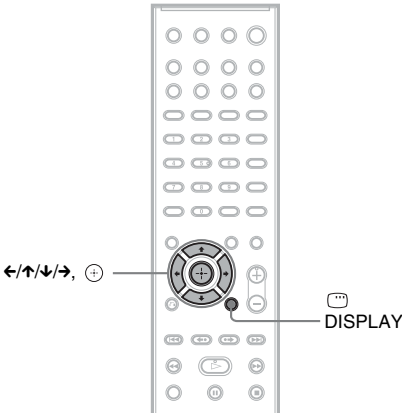

- 1** Turn on your TV.
- 2** Switch the input selector on your TV so that the signal from the system appears on the TV screen.
- 3** Press **I/⏻** to turn the system on.
- 4** Press **+** without inserting a disc or connecting a USB device.

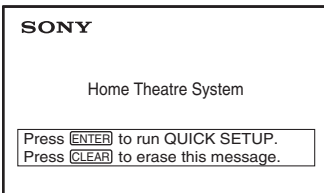


#### Note


- If this message does not appear, press **FUNCTION** repeatedly to select "DVD/CD." If

this message still does not appear, recall the Quick Setup display (page 69).

- 5** Press **↑/↓** to select a language, then press **+**.

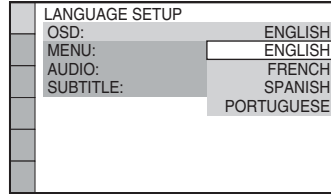


- 6** Press **↑/↓** to select the setting that matches your TV type, then press **+**.

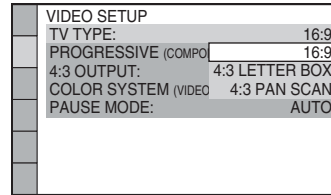


- **[16:9]**: This aspect ratio is for a wide-screen TV or a 4:3 standard TV with a wide-screen mode (page 71)
- **[4:3 LETTER BOX]** or **[4:3 PAN SCAN]**: This aspect ratio is for a 4:3 standard TV (page 71)

- 7** Press **↑/↓** to select the Control for HDMI setting, then press **+**.

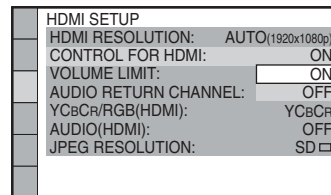

- **[ON]**: The Control for HDMI function is set to on.
- **[OFF]**: The Control for HDMI function is set to off.

- 8** Press  $\leftarrow/\rightarrow$  to select the speaker formation image as the speakers are actually positioned, then press  $\oplus$ .

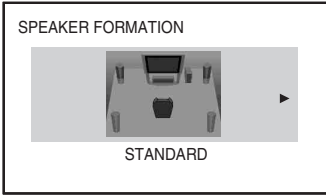


- [STANDARD]: Select this when you install all the speakers normally.
- [NO CENTER]: Select this when you install the front and surround speakers only.
- [NO SURROUND]: Select this when you install the center and front speakers only.
- [FRONT ONLY]: Select this when you install the front speakers only.
- [ALL FRONT]: Select this when you install all the speakers in front of the listening position.
- [ALL FRONT - NO CENTER]: Select this when you install the front and surround speakers in front of the listening position.

- 9** Connect the calibration mic (supplied) to the A.CAL MIC jack on the front panel.

Set up the calibration mic at ear level using a tripod, etc. (not supplied).

The front of each speaker should face the calibration mic, and there should be no obstruction between the speakers and the calibration mic.

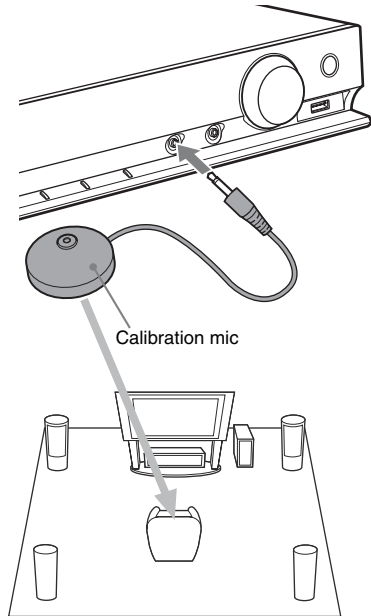

- 10** Press  $\leftarrow/\rightarrow$  to select [YES], then press  $\oplus$ .

Be quiet during the measurement.

**Note**

- Loud test sounds are output when [AUTO CALIBRATION] starts. You cannot turn the volume down. Give consideration to children and neighbors.
- The environment of the room in which the system is installed may affect measurements. When the measurements differ considerably from the status of the speaker installation, perform the speaker settings manually by following “Settings for the speakers” (page 76).

- 11** Unplug the calibration mic, press  $\leftarrow/\rightarrow$  to select [YES], then press  $\oplus$ .

### To quit the Quick Setup

Press  $\square$  DISPLAY in any Step.

 
## Setting the type of video output to match your TV


Depending on the connection of your TV (page 30), select the type of video output of the system.


### To select the type of video signal output from the HDMI OUT jack

When you connect the unit and your TV with an HDMI cable, select the type of video signals output from the HDMI OUT jack.


- 1** Press **FUNCTION** repeatedly to select "DVD/CD."




- 2** Press  $\square$  DISPLAY while the system is in stop mode.
- 3** Press  $\uparrow/\downarrow$  to select  [SETUP], then press  $\oplus$ .

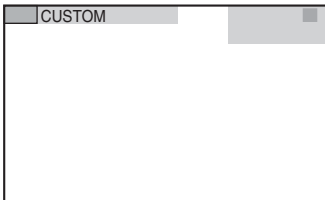


- 4** Press  $\uparrow/\downarrow$  to select [CUSTOM], then press  $\oplus$ .

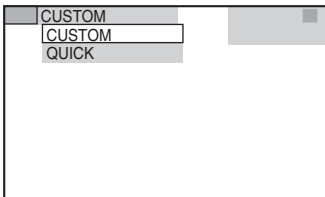


- 5** Press  $\uparrow/\downarrow$  to select [HDMI SETUP], then press  $\oplus$ .

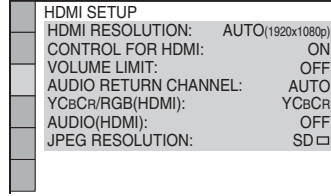

- 6** Press  $\uparrow/\downarrow$  to select [HDMI RESOLUTION], then press  $\oplus$ .

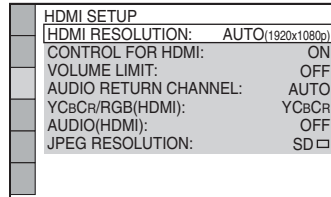

- 7** Press  $\uparrow/\downarrow$  to select the desired setting, then press  $\oplus$ .

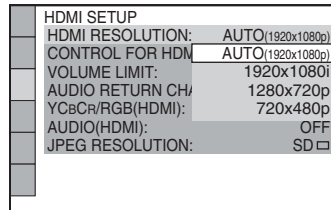

- [AUTO (1920 × 1080p)]: The system outputs the optimal video signal for the connected TV.
- [1920 × 1080i]: The system outputs 1920 × 1080i\* video signals.
- [1280 × 720p]: The system outputs 1280 × 720p\* video signals.
- [720 × 480p]\*\*: The system outputs 720 × 480p\* video signals.


\* i: interlace, p: progressive

\*\* Depending on the area, [720 × 480/576p] may appear and the system may output 720 × 576p video signals.

## To select the type of video signal output from the COMPONENT VIDEO OUT jacks

 
When you connect the unit and your TV with a component video cable, select the type of video signals output from the COMPONENT VIDEO OUT jacks.

- 1 Press **FUNCTION** repeatedly to select "DVD/CD."




- 2 Press **DISPLAY** while the system is in stop mode.


- 3 Press **↑/↓** to select  [SETUP], then press **+**.

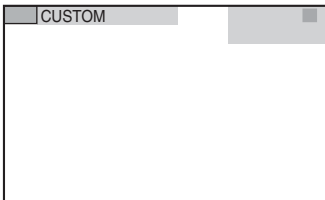


- 4 Press **↑/↓** to select [CUSTOM], then press **+**.

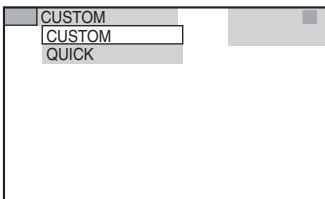


- 5 Press **↑/↓** to select [VIDEO SETUP], then press **+**.

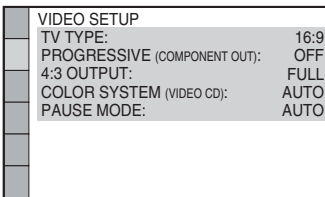

- 6 Press **↑/↓** to select [PROGRESSIVE (COMPONENT OUT)], then press **+**.

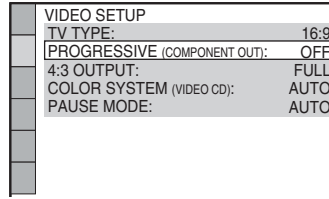

- 7 Press **↑/↓** to select the desired setting, then press **+**.

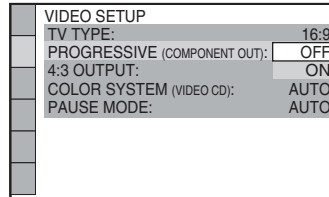

[OFF]: The system does not output progressive signals. Select this setting when:

- your TV does not accept progressive signals, or,
- your TV is connected via jacks other than the COMPONENT VIDEO OUT jacks.

[ON]: The system outputs progressive signals. Select this setting when:

- your TV accepts progressive signals, and,
- your TV is connected via the COMPONENT VIDEO OUT jacks.

When you select [ON], the confirmation display appears. Follow the Steps below.

- 8 Press **←/→** to select [START], then press **+**.


The system outputs a progressive signal for about 5 seconds. Check that the screen is displayed correctly.

- 9 Press **←/→** to select [YES], then press **+**.


The system outputs a progressive signal. When you select [NO], the system does not output a progressive signal.

## Playing a Disc

DVD-V DVD-VR VIDEO CD Super Audio CD CD

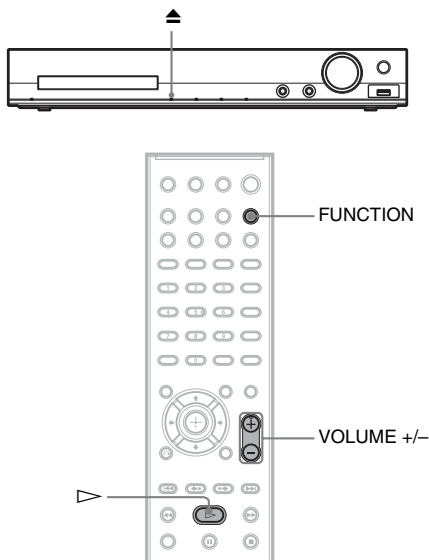

- 1** Press **FUNCTION** repeatedly to select “DVD/CD.”  
The selected item appears in the front panel display.
- 2** Press **▲** to open the disc tray.
- 3** Place a disc on the tray, then press **▲**.

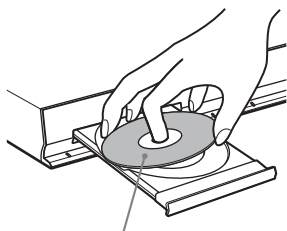


With the label side up.

- 4** Press **▶** to start playback.

- 5** Press **VOLUME +/-** to adjust the volume.

## Playing Files on a Disc/ USB Device

DATA CD DATA DVD USB

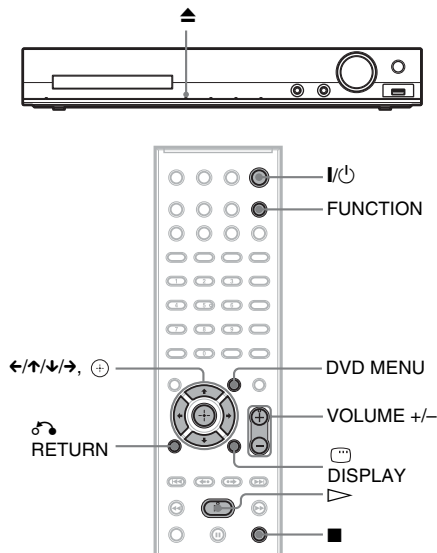

- 1** Press **FUNCTION** repeatedly to select the source you want to play.  
The selected item appears in the front panel display.
  - “DVD/CD”: For a disc.
  - “USB”: For a USB device.


## 2 Load the source.

### ■ For a disc

Place a disc on the tray by pressing **▲** to open/close the disc tray.

### ■ For a USB device

Connect a USB device to the **↔** (USB) port.

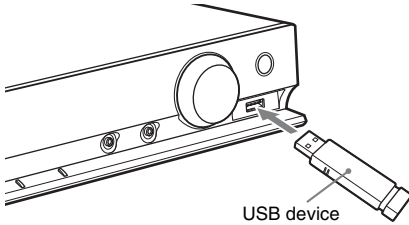


#### Note

- It may take about 10 seconds before "READING" appears in the front panel display depending on the type of USB device.

[FOLDER LIST] appears on the TV screen. If [FOLDER LIST] does not appear, press DVD MENU.

## 3 Press **↑/↓** to select a folder.

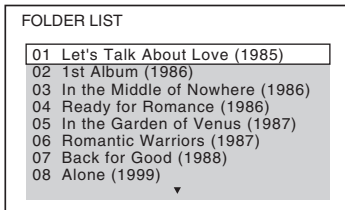

## 4 Press **▶** to start playback.

### ■ For video or audio files

The system starts playback of files in the selected folder.

### ■ For JPEG image files


The system starts a slide show of files in the selected folder.

## 5 Press **VOLUME +/-** to adjust the volume.

## To select the playback source of the USB device

You can select the memory number for playback depending on the USB device.

Press **MEMORY SELECT**.

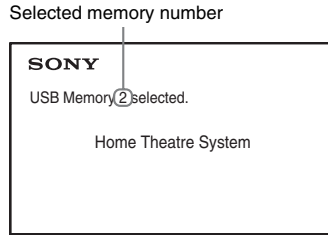

#### Note

- When the memory cannot be selected, [Operation not possible.] appears on the TV screen.
- The memory number changes depending on the USB device.

## To remove the USB device

- Press **■** to stop playback.
- Press **I/⏻** to turn off the system.
- Remove the USB device.

## Playing a specific file

**DATA CD** **DATA DVD** **USB**

## 1 Select a folder by following Steps in "Playing Files on a Disc/USB Device" (page 38).

## 2 Press **+** to display the file list.

## 3 Select a file.

To return to the folder list, press **↶** RETURN.

### ■ For video or audio files

Press **↑/↓** to select a file.



#### ■ For JPEG files

Press  $\leftarrow/\uparrow/\downarrow/\rightarrow$  to select an image.

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16

## 4 Start playback.

#### ■ For video or audio files

Press  $\blacktriangleright$  to start playback from the selected file.

#### ■ For JPEG image files

Press  $\blacktriangleright$  to start a slide show beginning with the selected file. Press  $\oplus$  to display only the selected file.

## To display the thumbnail list of JPEG image files


Press PICTURE NAVI.

## To turn on/off the list of folders/files

Press DVD MENU.

## To display the list of folders/files using the Control Menu

1 Press  $\square$  DISPLAY.

2 Press  $\uparrow/\downarrow$  to select  [BROWSING], then press  $\oplus$ .

3 Press  $\uparrow/\downarrow$  to select the desired list, then press  $\oplus$ .

- [FOLDER LIST]: A list of folders appears. To display a list of files, press  $\uparrow/\downarrow$  to select a folder, then press  $\oplus$ .
- [PICTURE LIST] (JPEG image files only): A thumbnail list of the JPEG image files in the folder appears.

## When different file types are on a disc/USB device

DATA CD DATA DVD USB

You can select the file type that is played with priority when mixed media (audio files, JPEG image files, or video files) are on the disc/USB device.

1 Press  $\square$  DISPLAY.

2 Press  $\uparrow/\downarrow$  to select  [MEDIA], then press  $\oplus$ .

3 Press  $\uparrow/\downarrow$  to select a setting, then press  $\oplus$ .

- [MUSIC/PHOTO] (DATA CD/DATA DVD only): You can play both JPEG image files and MP3 files in the same folder as a slide show.
- [MUSIC]: Audio file playback has priority.
- [VIDEO]: Video file playback has priority.
- [PHOTO]: JPEG image file playback has priority. You can play JPEG image files as a slide show.

The default setting differs depending on the source.

For details of the playback priority of file types under the [MEDIA] setting, see "Playback Priority of File Types" (page 89).



# Other Playback Operations

## Playback operation buttons on the remote

**DVD-V** **DVD-VR** **VIDEO CD** **Super Audio CD** **C D**

**DATA CD** **DATA DVD** **USB**

Depending on the type of disc/file, the function may not work.

To	Press
Stop	■
Pause	⏸
Return to normal playback or resume playback after pause	▶
Cancel the resume point	■ twice.
Skip the current chapter, track, file, or scene	⏮ or ⏭. <ul style="list-style-type: none"> <li>• ⏮: go to the beginning.</li> <li>• Press ⏮ twice in a second to go to the previous item.</li> <li>• ⏭: go to the next item.</li> </ul>
Skip the current JPEG image file	⏪ or ⏩ during playback. <ul style="list-style-type: none"> <li>• ⏪: go to the previous file.</li> <li>• ⏩: go to the next item.</li> </ul>
Locate a point quickly	◀◀/◀◀ or ▶▶/▶▶ while playing a disc. <ul style="list-style-type: none"> <li>• ◀◀/◀◀: fast reverse scan.</li> <li>• ▶▶/▶▶: fast forward scan.</li> </ul> Each time you press ◀◀/◀◀ or ▶▶/▶▶ during scan, the scan speed changes.
Watch frame by frame	⏮, then press ◀◀/◀◀ or ▶▶/▶▶. <ul style="list-style-type: none"> <li>• ◀◀/◀◀: slow-motion play (reverse).</li> <li>• ▶▶/▶▶: slow-motion play (forward).</li> </ul> Each time you press ◀◀/◀◀ or ▶▶/▶▶ during slow-motion play, the playback speed changes.

To	Press
Play one frame at a time (Freeze Frame)	⏮, then press ◀◀ STEP or ▶▶ STEP. <ul style="list-style-type: none"> <li>• ◀◀ STEP: go to the preceding frame.</li> <li>• ▶▶ STEP: go to the next frame.</li> </ul>
Replay the previous scene or briefly fast forward the current scene	⏮ or ⏭ during playback. <ul style="list-style-type: none"> <li>• ◀◀◀◀: 10 seconds before.</li> <li>• ▶▶▶▶: 30 seconds ahead.</li> </ul>
Go to the previous or next page when a list of folders/files has multiple pages	⏪ or ⏩.
Rotate a JPEG image file	⬆/⬇ while viewing a JPEG image file. Press CLEAR to return to normal view.

### Tip

- When playing files, you can select the next folder by continuing to press ▶▶ (→ for JPEG image files) after the last file on the current folder, but you cannot return to the previous folder by pressing ◀◀ (← for JPEG image files). To return to the previous folder, select the folder from the folder list.
- You cannot rotate the JPEG image file when you set [JPEG RESOLUTION] in [HDMI SETUP] to [(1920 × 1080i) HD □] or [(1920 × 1080i) HD] (page 72).

## Playing a specific title/ chapter/track/scene, etc.

### To select the title/chapter/track/ scene/index/folder/file number for playback

**DVD-V** **DVD-VR** **VIDEO CD** **Super Audio CD** **C D**


**DATA CD** **DATA DVD** **USB**

**1** Press  DISPLAY.

**2** Press  $\uparrow/\downarrow$  to select the search method, then press  $\oplus$ .

- [TITLE/SCENE/TRACK]
- [CHAPTER/INDEX]
- [TRACK]
- [INDEX]
- [FOLDER]
- [FILE]


Example: [CHAPTER]  
 [\*\* (\*\*\*)] is selected (\*\* refers to a number).  
 The number in parentheses indicates the total number of titles, chapters, tracks, indexes, scenes, folders, or files.

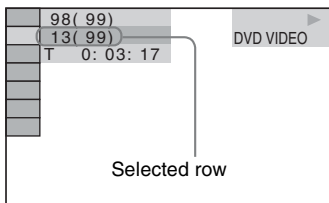

**Note**

- If [MEDIA] is set to [MUSIC/PHOTO] and [FILE] does not appear, press DISPLAY again.

**3** Press  $\uparrow/\downarrow$  or the number buttons to select the desired number of the title, chapter, track, scene, etc., then press  $\oplus$ .

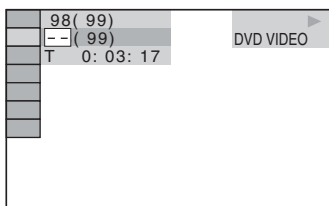

If you make a mistake, press CLEAR to cancel the number.

**To select a scene using the time code**

**DVD-V** **DVD-VR**

- 1** Press DISPLAY.
- 2** Press  $\uparrow/\downarrow$  to select [TIME], then press  $\oplus$ .

**3** Input the time code using the number buttons, then press  $\oplus$ .

For example, to find a scene at 2 hours, 10 minutes, and 20 seconds after the beginning: press 2, 1, 0, 2, 0 ([2:10:20]).

**Note**

- You cannot search for a scene on a DVD+RW using the time code.

**Changing angles**

**DVD-V**

Press ANGLE during playback to select the desired angle.

**Displaying subtitles**

**DVD-V** **DVD-VR** **DATA CD** **DATA DVD** **USB**

Press SUBTITLE during playback to select the desired subtitle language.

**Note**

- You can select the subtitles if the DivX video file has an “.avi” or “.divx” extension and contains subtitle information within the same file.

**Changing the audio**

**DVD-V** **DVD-VR** **VIDEO CD** **C D** **DATA CD**

**DATA DVD** **USB**

Press AUDIO repeatedly during playback to select the sound.

**DVD VIDEO**


You can toggle audio format or language when the source contains multiple audio formats or multilingual audio.

When 4 digits are displayed, they indicate a language code. See “Language Code List” (page 90) to confirm which language the code represents.

When the same language is displayed two or more times, the DVD VIDEO is recorded in multiple audio formats.

## Example:

Dolby Digital 5.1 channel

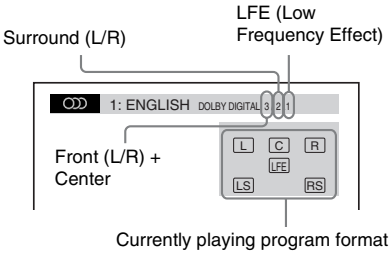

### ■ DVD-VR

You can toggle audio tracks when a disc contains multiple audio tracks.

### ■ VIDEO CD/CD/DATA CD (MP3 file)/DATA DVD (MP3 file)/USB device (audio file)

You can change the sound track.

- [STEREO]: The stereo sound.
- [1/L]: The sound of the left channel (monaural).
- [2/R]: The sound of the right channel (monaural).

### ■ DATA CD (DivX video file)/DATA DVD (DivX video file)/USB device (DivX video file)

You can toggle audio tracks when a video file contains multiple audio tracks.

### ■ Super VCD

You can change the sound track.

- [1:STEREO]: The stereo sound of audio track 1.
- [1:1/L]: The sound of the left channel of audio track 1 (monaural).
- [1:2/R]: The sound of the right channel of audio track 1 (monaural).
- [2:STEREO]: The stereo sound of audio track 2.
- [2:1/L]: The sound of the left channel of audio track 2 (monaural).
- [2:2/R]: The sound of the right channel of audio track 2 (monaural).

## Using the DVD's menu

### DVD-V

When you play a DVD which contains several titles, you can select the title you want using DVD TOP MENU.

When you play a DVD that allows you to select items such as the language for the subtitles and the language for the sound, select these items using DVD MENU.

- 1 Press **DVD TOP MENU** or **DVD MENU**.
- 2 Press **←/↑/↓/→** or the number buttons to select the item you want to play or change, then press **+**.

### To display the DVD's menu on the Control Menu

- 1 Press **DISPLAY**.
- 2 Press **↑/↓** to select **[DISC MENU]**, then press **+**.
- 3 Press **↑/↓** to select **[MENU]** or **[TOP MENU]**, then press **+**.

## Selecting an original title or edited title on a DVD-VR

### DVD-VR

This function is only available for DVD-VRs with a playlist created.

- 1 Press **DISPLAY** while the system is in stop mode.
- 2 Press **↑/↓** to select **[ORIGINAL/PLAY LIST]**, then press **+**.
- 3 Press **↑/↓** to select a setting, then press **+**.
  - **[PLAY LIST]**: You can play the titles in the order of the existing playlist.
  - **[ORIGINAL]**: You can play the titles as they were originally recorded.

## Selecting a playback area for a Super Audio CD

### Super Audio CD

Some Super Audio CDs consist of a 2 channel playback area and a multi-channel playback area. You can select the playback area you want to listen to.

- 1 Press **DISPLAY** while the system is in stop mode.
- 2 Press **↑/↓** to select **[MULTI/2CH]**, then press **+**.
- 3 Press **↑/↓** to select the setting, then press **+**.
  - [MULTI]: You can play the multi-channel playback area.
  - [2CH]: You can play the 2 channel playback area.

## Changing a playback layer for a hybrid Super Audio CD

### Super Audio CD

Some Super Audio CDs consist of a Super Audio CD layer and a CD layer. You can change the playback layer you want to listen to.

- 1 Press **DISPLAY** while the system is in stop mode.
- 2 Press **↑/↓** to select **[SUPER AUDIO CD/CD LAYER]**, then press **+**.
  - When the current layer is the CD layer [SUPER AUDIO CD] appears.
  - When the current layer is the Super Audio CD layer [CD] appears.
- 3 Press **+** to change the layer.
  - [SUPER AUDIO CD]: You can play the Super Audio CD layer. When the system is playing a Super Audio CD layer, “SA-CD” lights up in the front panel display.

- [CD]: You can play the CD layer. When the system is playing a CD layer, “CD” lights up in the front panel display.

### Note

- Super Audio CD audio signals are not output from the HDMI OUT jack.

## Selecting the Playback Mode

### Playing in programmed order


#### (Program Play)

### VIDEO CD C D

You can play the contents of a disc in the order you want by arranging the order of the tracks on the disc to create your own program. You can program up to 99 tracks.

- 1 Press **DISPLAY**.
- 2 Press **↑/↓** to select **[PROGRAM]**, then press **+**.
- 3 Press **↑/↓** to select **[SET →]**, then press **+**.

Total time of the programmed tracks

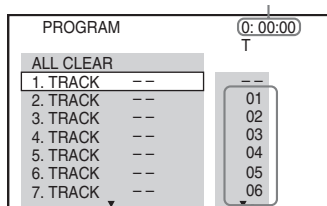

Tracks recorded on a disc

#### 4 Press →.

The cursor moves to the track row [T] (in this case, [01]).

PROGRAM		0: 00:00
ALL CLEAR		T
1. TRACK	--	--
2. TRACK	--	01
3. TRACK	--	02
4. TRACK	--	03
5. TRACK	--	04
6. TRACK	--	05
7. TRACK	--	06

#### 5 Select the track you want to program.

**Ex. To set track 2 as the first programmed track**

Press ↑/↓ to select [02] under [T], then press ⊕.

Selected track	Track number [T]
PROGRAM	
0: 03:51	
ALL CLEAR	T
1. TRACK	02
2. TRACK	--
3. TRACK	02
4. TRACK	03
5. TRACK	04
6. TRACK	05
7. TRACK	06

Total time of the programmed tracks

#### 6 To program other tracks, repeat Steps 4 to 5.

#### 7 Press ▶ to start Program Play.

#### To return to normal playback

Press CLEAR when the display for the program setting is not displayed on the TV screen, or select [OFF] in Step 3. To play the same program again, select [ON] in Step 3 and press ⊕.

#### To change or cancel a program

1 Follow Steps 1 to 3 of “Playing in programmed order.”

2 Press ↑/↓ to select the program number of the track you want to change or cancel.

If you want to delete the track from the program, press CLEAR.

#### 3 Follow Step 5 of “Playing in programmed order” for new programming.

To cancel a program, select [--] under [T], then press ⊕.

#### To cancel all of the tracks in the programmed order

1 Follow Steps 1 to 3 of “Playing in programmed order.”

2 Press ↑ and select [ALL CLEAR], then press ⊕.

### Playing in random order

#### (Shuffle Play)

VIDEO CD Super Audio CD CD DATA CD DATA DVD

USB

#### Note

• The same song may be played repeatedly when you are playing MP3 files.

1 Press DISPLAY during playback.

2 Press ↑/↓ to select [SHUFFLE], then press ⊕.

3 Press ↑/↓ to select the item to be shuffled.

#### ■ VIDEO CD/Super Audio CD/CD

- [OFF]: Off.
- [TRACK]: You can shuffle tracks on the disc.

#### ■ During Program Play

- [OFF]: Off.
- [ON]: You can shuffle tracks selected in Program Play.

#### ■ DATA CD (audio files only)/DATA DVD (audio files only)/USB device (audio files only)

- [OFF]: Off.
- [ON (MUSIC)]: You can shuffle audio files in the folder on the current disc/USB device. When no folder is selected, the audio files in the first folder are shuffled.

4 Press ⊕ to start Shuffle Play.

## To return to normal playback

Press CLEAR, or select [OFF] in Step 3.

### Note

- You cannot use Shuffle Play with a VIDEO CD or Super Audio CD with PBC playback.

## Playing repeatedly

(Repeat Play)

DVD-V DVD-VR VIDEO CD Super Audio CD C D

DATA CD DATA DVD USB

- 1 Press DISPLAY during playback.
- 2 Press  $\uparrow/\downarrow$  to select [REPEAT], then press  $\oplus$ .
- 3 Press  $\uparrow/\downarrow$  to select the item to be repeated, then press  $\oplus$ .
  - DVD VIDEO/DVD-VR
    - [OFF]: Off.
    - [DISC]: You can repeat all of the titles on the disc.
    - [TITLE]: You can repeat the current title on a disc.
    - [CHAPTER]: You can repeat the current chapter on a disc.
  - VIDEO CD/Super Audio CD/CD
    - [OFF]: Off.
    - [DISC]: You can repeat all of the tracks on the disc.
    - [TRACK]: You can repeat the current track.
  - DATA CD/DATA DVD/USB device
    - [OFF]: Off.
    - [DISC] (DATA CD/DATA DVD only): You can repeat all of the folders on the disc.
    - [MEMORY] (USB device only): You can repeat all of the folders on the USB device.
    - [FOLDER]: You can repeat the current folder.
    - [TRACK] (audio files only): You can repeat the current file.
    - [FILE] (video files only): You can repeat the current file.
- 4 Press  $\blacktriangleright$  to start Repeat Play.

## To return to normal playback

Press CLEAR, or select [OFF] in Step 3.

### Note

- You cannot use Repeat Play with a VIDEO CD or Super VCD with PBC playback.

## Selecting an effect for the slide show

DATA CD DATA DVD USB

- 1 Press DISPLAY repeatedly until [EFFECT] appears on the control menu.
- 2 Press  $\uparrow/\downarrow$  to select [EFFECT], then press  $\oplus$ .
- 3 Press  $\uparrow/\downarrow$  to select a setting, then press  $\oplus$ .
  - [MODE 1]: The JPEG image file sweeps in from the top to the bottom of the TV screen.
  - [MODE 2]: The JPEG image file stretches out from the left to the right of the TV screen.
  - [MODE 3]: The JPEG image file stretches out from the center of the TV screen.
  - [MODE 4]: The JPEG image files randomly cycle through the effects.
  - [MODE 5]: The next JPEG image file slides over the previous image.
  - [OFF]: Off.


### Note

- The [EFFECT] setting is not effective when you set [JPEG RESOLUTION] in [HDMI SETUP] to [(1920 × 1080i) HD  $\square$ ] or [(1920 × 1080i) HD] (page 72).
- The [EFFECT] setting cannot be selected when you are playing a disc that does not contain JPEG image files or a USB device, or when you set [MEDIA] to a setting that cannot play JPEG image files.

## Selecting the slide show duration

DATA CD DATA DVD USB

- 1 Press DISPLAY repeatedly until [INTERVAL] appears on the control menu.


- 2** Press  $\uparrow/\downarrow$  to select  [INTERVAL], then press  $\oplus$ .
- 3** Press  $\uparrow/\downarrow$  to select a setting, then press  $\oplus$ .
  - [NORMAL]: You can set to the standard duration.
  - [FAST]: You can set the duration shorter than [NORMAL].
  - [SLOW 1]: You can set the duration longer than [NORMAL].
  - [SLOW 2]: You can set the duration longer than [SLOW 1].

**Note**

- Some JPEG image files may take longer to display than the option you selected, especially progressive JPEG image files or JPEG image files of 3,000,000 pixels or more.
- The [INTERVAL] setting cannot be selected when you are playing a disc that does not contain JPEG image files or a USB device, or when you set [MEDIA] to a setting that cannot play JPEG image files.

## Playing a slide show with sound

**DATA CD DATA DVD**

- 1** Prepare a folder on a disc which contains both MP3 files and JPEG image files.  
The MP3 files and JPEG image files must not be in separate folders. For details of making the disc, refer to the instructions of your PC, software, etc.
- 2** Press  $\square$  DISPLAY.
- 3** Press  $\uparrow/\downarrow$  to select  [MEDIA], then press  $\oplus$ .
- 4** When [MUSIC/PHOTO] is selected, go to Step 5. When other than [MUSIC/PHOTO] is selected, press  $\uparrow/\downarrow$  to select [MUSIC/PHOTO], then press  $\oplus$ .
- 5** If the folder list does not appear, press DVD MENU.  
You can turn the folder list on/off by pressing DVD MENU repeatedly.

- 6** Press  $\uparrow/\downarrow$  to select the desired folder and press  $\blacktriangleright$ .

**Note**

- If you play a large MP3 file and JPEG image file at the same time, the sound may skip. Sony recommends that you set the MP3 bit rate to 128 kbps or lower when creating the file. If the sound still skips, reduce the size of the JPEG image file.


## Enjoying Karaoke


**DVD-V DVD-VR VIDEO CD C D DATA CD DATA DVD USB**

**Note**

- You cannot use the karaoke function with the S-AIR receiver. When using the karaoke function, turn the S-AIR receiver off. (DAV-DZ810 only)

- 1** Plug a microphone into the MIC jack.

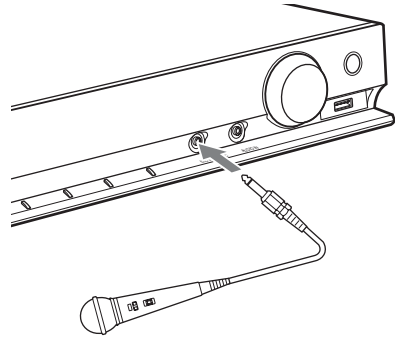

The system enters karaoke mode, and “” lights up in the front panel display.

- 2** Start audio playback following the Steps in “Playing a Disc” (page 38) or “Playing Files on a Disc/USB Device” (page 38).
- 3** Sing along to the audio.  
Press MIC VOL +/- to adjust the microphone volume.

### To set the system to karaoke mode without the microphone connected

- 1** Press  $\square$  DISPLAY.

**Note**

- The Control Menu will not appear if no disc/USB device is inserted into the unit.

- 2 Press **↑/↓** repeatedly to select **[KARAOKE MODE]**, then press **(+)**.
- 3 Press **↑/↓** to select **[ON]**, then press **(+)**.

**To cancel karaoke mode**

Disconnect the microphone, or set **[KARAOKE MODE]** to **[OFF]**.

**Note**

- Before connecting, press **MIC VOL** – to set the microphone volume to minimum.
- If you play the Super Audio CD layer of a Super Audio CD (page 44), karaoke mode will be set to off automatically. In this case, the beginning of the sound may be cut off. To avoid the sound cutting, play the Super Audio CD after you set **[KARAOKE MODE]** to **[OFF]**.
- Microphone sound is not output when:
  - the microphone is not connected to the unit properly.
  - the microphone volume is set to minimum.
  - you use a microphone other than the monaural dynamic type.
- When you set the system to karaoke mode while playing a **VIDEO CD/CD/MP3** file, the sound track (page 42) is set to **[1/L]** automatically.
- Karaoke mode cannot be set while playing the iPod (Australian models only).

**Tip**

- The karaoke play is performed with the audio channel you selected using **AUDIO** (page 42).

**To add the echo effect**

Press **ECHO** repeatedly.

Each time you press **ECHO**, the echo level changes as follows:

```

“ECHO OFF” → “ECHO 1”
  ↑           ↓
“ECHO 3” ← “ECHO 2”
  
```

To cancel the echo effect, select “ECHO OFF.”

**Note**

- If howling occurs:
  - move the microphone away from the speakers.
  - lower the microphone volume or echo level.

- lower the overall volume.

**Changing the key of a song (Key Control)**

You can change the key to suit your vocal range, except when the system is in stop mode.

Press **KEYCON #/b** to suit your vocal range in karaoke mode.

You can adjust the key lower or higher in 13 steps (**b6** – **#6**).

**Note**

- Depending on the source, you may not be able to change the key.
- The key may return to the original key automatically if you operate the system or the status of the system is changed.

**Reducing the vocal sound of a non-karaoke source (Karaoke Pon)**

You can enjoy karaoke with a stereo-recorded source, even if it is a non-karaoke source, by reducing the sound of the vocals.

Press **KARAOKE PON** in karaoke mode.

**To cancel Karaoke Pon mode**

Press **KARAOKE PON** again.

**Note**

- This function may not work well depending on the source.
- Karaoke Pon mode may be canceled automatically if you operate the system.



## Selecting the vocals (Vocal Select)

DVD-V

VIDEO CD

CD

When playing a karaoke DVD recorded in Dolby Digital format in karaoke mode, you can turn on or off the guide vocal recorded in the karaoke track.

When playing a VIDEO CD/CD in karaoke mode, you can listen to the vocals.

You can also change the guide vocal channel to select different kinds of vocals.

- 1 Press **DISPLAY** in karaoke mode.
- 2 Press **↑/↓** repeatedly to select **[VOCAL SELECT]**, then press **+**.
- 3 Press **↑/↓** repeatedly to select the desired vocal channel.

### ■ DVD VIDEO

- [OFF]: The guide vocal is canceled.
- [1+2]: Guide vocal 1+2 is output.
- [1]: Guide vocal 1 is output.
- [2]: Guide vocal 2 is output.

### ■ VIDEO CD/CD

- [OFF]: The guide vocal is canceled.
- [L+R]: Same sound is output from both speakers.
- [STEREO]: The standard stereo sound is output.

### ■ Super VCD

- [OFF]: The guide vocal is canceled.
- [1:L+R]: Same sound of the audio track 1 is output from both speakers.
- [1:STEREO]: The stereo sound of the audio track 1 is output.
- [2:L+R]: Same sound of the audio track 2 is output from both speakers.
- [2:STEREO]: The stereo sound of the audio track 2 is output.

- 4 Press **+**.


#### Note

- Depending on the disc, you may not be able to change the guide vocal channel.
- The channel may return to the default setting if you operate the system.

## About karaoke DVDs recorded in Dolby Digital format

DVD-V


On karaoke DVDs recorded in Dolby Digital format, guide melody and guide vocal tracks are recorded in addition to the accompaniment. You can select an accompaniment, guide melody, or guide vocal track when the system is in karaoke mode.

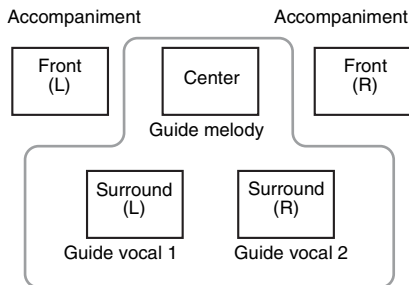

You can select any of these. These are output from the respective speakers.

You can check the audio information by pressing **AUDIO** (page 42). When playing a Karaoke DVD, “♪” appears as the current audio format.

### Example:

 

- 2/0: Recorded only with accompaniment.
- 3/0: Recorded with guide melody.
- 3/1: Recorded with guide melody and one guide vocal.
- 3/2: Recorded with guide melody and two guide vocals.


# Displaying the Information of a Disc/USB Device

## Viewing playback information



Press **DISPLAY** repeatedly during playback.

### Information on the TV screen

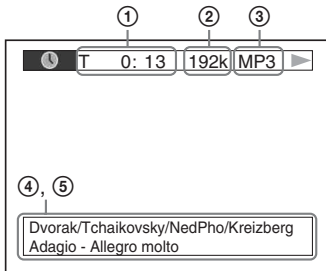

- ① **[T \*\*:\*\*:\*\*/C \*\*:\*\*:\*\*/D \*\*:\*\*:\*\*]**  
Playing time of the current title, track/  
chapter/disc  
**[T \*\*:\*\*:\*\*/C -:\*\*:\*\*/D -:\*\*:\*\*]**  
Remaining time of the current title, track/  
chapter/disc  
**[ \*\*:\*\*:\*\* ]**  
Playing time of the current scene/video file
- ② **Bit rate**  
Appears when playing an audio file.
- ③ **File type**  
Appears when playing an audio/video file.
- ④ **Folder/file name**  
Appears when playing an audio file/JPEG  
image file/video file.  
If an MP3 file has an ID3 tag, the system  
will display an album name/title name from  
the ID3 tag information.  
The system can support ID3 ver 1.0/1.1/2.2/

2.3.  
ID3 ver 2.2/2.3 tag information display has  
priority when both ID3 ver 1.0/1.1 and ver  
2.2/2.3 tags are used for a single MP3 file.

### ⑤ Text information

The DVD/Super Audio CD/CD text  
appears only when text is recorded on the  
disc. You cannot change the text. If the disc  
does not contain text, “NO TEXT” appears.

#### Note

- Depending on the source being played, the system  
can only display a limited number of characters. Also,  
depending on the source, not all text characters will  
be displayed.

### Information in the front panel display

Each time you press **DISPLAY** during playback,  
the following information appears.  
Some displayed items may disappear after a few  
seconds.

#### ■ DVD VIDEO/DVD-VR

- ① Playing time of the current title
- ② Remaining time of the current title
- ③ Playing time of the current chapter
- ④ Remaining time of the current chapter
- ⑤ Disc name
- ⑥ Title and chapter

#### ■ VIDEO CD (with PBC functions)/Super VCD (with PBC functions)

- ① Playing time of the current item
- ② Disc name
- ③ Scene number

#### ■ VIDEO CD (without PBC functions)/Super Audio CD/CD

- ① Playing time of the current track
- ② Remaining time of the current track
- ③ Playing time of the disc
- ④ Remaining time of the disc
- ⑤ Track name
- ⑥ Track and index\*

\* VIDEO CD/Super Audio CD only.

#### ■ Super VCD (without PBC functions)

- ① Playing time of the current track
- ② Track text
- ③ Track and index number

■ DATA CD/DATA DVD/USB device (audio file)

- ① Playing time and current track number
- ② Track (file) name\*

\* If an MP3 file has an ID3 tag, the system will display a title name from the ID3 tag information. The system can support ID3 ver 1.0/1.1/2.2/2.3. ID3 ver 2.2/2.3 tag information display has priority when both ID3 ver 1.0/1.1 and ver 2.2/2.3 tags are used for a single MP3 file.


■ DATA CD (video file)/DATA DVD (video file)/USB device (video file)

- ① Playing time of the current file
- ② Current file name
- ③ Current album and file number

**Note**

- The system can only display the first level of the DVD/CD text, such as the disc name or title.
- The disc name or track name may not be displayed depending on the text.
- Playing time of MP3 files and video files may not be displayed correctly.

# Enjoying the Audio/Video of the Connected Component

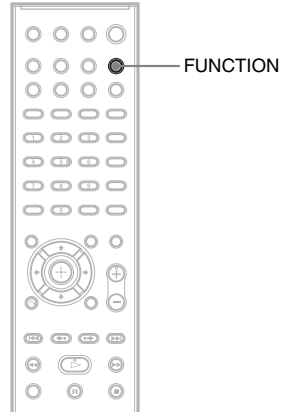


## Viewing the date information of a JPEG image file

**DATA CD** **DATA DVD** **USB**

You can check the date information during playback when the Exif\* tag is recorded in the JPEG image file.

Press **DISPLAY** repeatedly until **[DATE]** appears on the control menu.

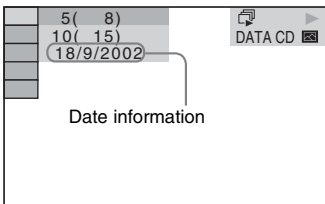

### 1 Press FUNCTION repeatedly to select the desired function.

The selected item appears in the front panel display.

Function	Source
“DVD/CD”	Disc that is played by the system
“TUNER FM”	FM radio
“USB”	USB device or iPod* that is connected to the  (USB) port
“TV”	TV or set-top box
“AUDIO IN”	Portable audio source that is connected to the AUDIO IN jack on the front panel

\* “Exchangeable Image File Format” is a digital camera image format defined by the Japan Electronics and Information Technology Industries Association (JEITA).

## 2 Prepare the source.

- “DVD/CD”: Insert the disc into the unit (page 38).
- “TUNER FM”: Select the radio program (page 53).
- “USB”: Connect the USB device directly (page 38), or iPod\* via a USB cable (page 52).
- “TV”: Select the channel on the TV or set-top box.
- “AUDIO IN”: Connect the portable audio source via an audio cord (stereo mini-plug cord) (page 32).

## 3 Operate the connected component.

To enjoy a set-top box, select the input of the set-top box via the TV to which it is connected.

\* Australian models only.

### iPod models that can be operated via USB

You can operate an iPod using the buttons on the remote by connecting the iPod via the  (USB) port to the system.

The battery of the iPod is charged via the system.

The iPod models that can be operated via USB are as follows. Update your iPod with the latest software before using it with the system.



iPod nano  
5th generation (video camera)



iPod touch  
2nd generation



iPod classic



iPod nano  
4th generation (video)



iPod touch  
1st generation



iPod nano  
3rd generation  
(video)



iPod nano  
2nd generation  
(aluminum)

Remote buttons for operating an iPod connected to the system are as follows:


Press	Operation
	Same operation as the  button of the iPod.
	Pause.
	Fast reverse or forward.
	Same operation as the  buttons of the iPod.
	Same operation as the MENU button of the iPod.
	Same operation as the Click Wheel of the iPod.
	Same operation as the Center button of the iPod.

#### Note

- The iPod is charged when connected to the system while the system is turned on.
- You cannot transfer songs onto the iPod.
- Sony cannot accept responsibility in the event that data recorded to iPod is lost or damaged when using an iPod connected to this unit.
- This product has been designed specifically to work with iPod and has been certified to meet Apple performance standards.

# Presetting Radio Stations

You can preset 20 FM stations.

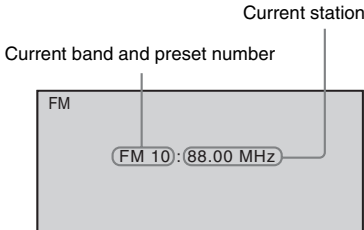

- 1 Press **FUNCTION** repeatedly to select **"TUNER FM."**

The selected item appears in the front panel display.

- 2 Press and hold **TUNING +/-** until the auto scanning starts.

 
Scanning stops when the system tunes in a station. **"TUNED"** appears in the front panel display. When a stereo program is received, **"ST"** also appears in the front panel display.

- 3 Press **SYSTEM MENU**.


- 4 Press **↑/↓** to select **"MEMORY."**

- 5 Press **⊕** or **→**.

A preset number appears in the front panel display.



 - 6 Press **↑/↓** to select the preset number you want.



- 7 Press **⊕**.

**"COMPLETE"** appears in the front panel display, and the station is stored.

- 8 Repeat Steps 2 to 7 to store other stations.

- 9 Press **SYSTEM MENU**.

## To change the preset number

Select the desired preset number by pressing **PRESET +/-** (page 53), then perform the procedure from Step 3.

## Listening to the Radio

Preset radio stations in the system's memory first (see "Presetting Radio Stations" (page 53)).

- 1 Press **FUNCTION** repeatedly to select **"TUNER FM."**

The selected item appears in the front panel display.

- 2 Press **PRESET +/-** repeatedly to select the preset station.

- 3 Adjust the volume by pressing **VOLUME +/-**.

## To listen to radio stations when you know the frequencies

Press **D.TUNING** in Step 2, press the number buttons to select the frequencies, then press **⊕**.

## To listen to non-preset radio stations

Use manual or automatic tuning in Step 2.

For manual tuning, press **TUNING +/-** repeatedly.

 
For automatic tuning, press and hold **TUNING +/-**. The automatic tuning stops automatically when the system receives the radio station. To stop the automatic tuning manually, press **TUNING +/-** or **■**.

## If an FM program is noisy

If an FM program is noisy, you can select monaural reception. There will be no stereo effect, but reception will improve.

- 1 Press **SYSTEM MENU**.

- 2 Press **↑/↓** to select **"FM MODE."**



- 3 Press **⊕** or **→**.

**4** Press  $\uparrow/\downarrow$  to select “MONO.”

- “STEREO”: Stereo reception.
- “MONO”: Monaural reception.

**5** Press  $\oplus$ .

**6** Press SYSTEM MENU.

# Enjoying Surround Sound

You can enjoy surround sound simply by selecting one of the system's pre-programmed surround settings.

## Enjoying TV sound with the 5.1 channel surround sound effect

- 1** Press **SYSTEM MENU**.
- 2** Press **↑/↓** to select **"SUR.SETTING,"** then press **⊕** or **→**.  
The selected item appears in the front panel display.
- 3** Press **↑/↓** to select **"PRO LOGIC,"** then press **⊕**.
- 4** Press **SYSTEM MENU**.

**Note**


• When TV program sound is monaural, sound is output only from the center speaker.



## Selecting surround settings based on your listening preference

- 1** Press **SYSTEM MENU**.
- 2** Press **↑/↓** to select **"SUR.SETTING,"** then press **⊕** or **→**.  
The selected item appears in the front panel display.
- 3** Press **↑/↓** to select the surround setting you want, then press **⊕**.  
See the table below for surround setting descriptions.
- 4** Press **SYSTEM MENU**.

### About speaker output

The table below describes the options when you connect all the speakers to the unit and you set [SPEAKER FORMATION] to [STANDARD] (page 73).

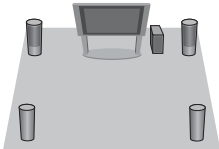Sound from	Surround setting	Effect
	"A.F.D. MULTI" (AUTO FORMAT DIRECT MULTI)	<ul style="list-style-type: none"> <li>• 2 channel source: The system outputs 2 channel sound from the front and surround speakers by assigning the 2 channel sound to the surround left and right channels.</li> <li>• Multi-channel source: The system outputs sound from the speakers depending on the number of channels of the source.</li> </ul>

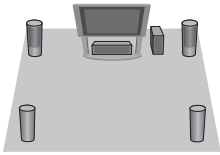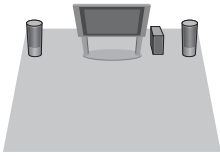Sound from	Surround setting	Effect
	"PRO LOGIC" "PLII MOVIE" "PLII MUSIC"	<ul style="list-style-type: none"> <li>• 2 channel source: The system simulates surround sound from 2 channel sources and outputs sound from all the speakers.               <ul style="list-style-type: none"> <li>– "PRO LOGIC" performs Dolby Pro Logic decoding.</li> <li>– "PLII MOVIE" performs Dolby Pro Logic II movie mode decoding.</li> <li>– "PLII MUSIC" performs Dolby Pro Logic II music mode decoding.</li> </ul> </li> <li>• Multi-channel source: The system outputs sound from the speakers depending on the number of channels of the source.</li> </ul>
	"2CH STEREO"	The system outputs the sound from the front speakers and subwoofer regardless of sound format or number of channels. Multi-channel surround formats are downmixed to 2 channels.
Depending on the source.	"A.F.D. STD" (AUTO FORMAT DIRECT STANDARD)	The system discriminates the sound format of the source and presents sound as it was recorded/encoded.

**Note**

- You cannot select the surround settings while the system is loading a disc.
- Depending on the input stream, the surround settings may not be effective.



# Selecting the Sound Effect

## Selecting the effect to suit the source

Press **SOUND MODE** repeatedly during playback until the desired mode appears in the front panel display.

- **“AUTO”**: The system automatically selects “MOVIE” or “MUSIC” to produce the sound effect depending on the source. “AUTO” appears in the front panel display.
- **“MOVIE”**: The system provides the sound for movies. “MOVIE” appears in the front panel display.
- **“MUSIC”**: The system provides the sound for music. “MUSIC” appears in the front panel display.

### Note

- When you play a Super Audio CD, this function does not work.

## Enhancing compressed sound

You can enhance compressed sound such as an MP3 file.

This effect is activated automatically when all the following conditions are satisfied:

- The function is set to “AUDIO IN” or “USB.”
- “SUR.SETTING” is set to “A.F.D. STD” or “A.F.D. MULTI” (page 55).

### To turn off the sound effect

Select other than “A.F.D. STD” or “A.F.D. MULTI” for “SUR.SETTING” (page 55).

## Reinforcing bass frequencies

Press **DYNAMIC BASS**.

“D. BASS ON” appears in the front panel display.

### To turn off the sound effect

Press **DYNAMIC BASS** again.

## Enjoying the sound at low volume

You can enjoy sound effects or dialogue, as you would in a movie theater, even at low volume. It is useful for watching movies at night.

Press **NIGHT**.

“NIGHT” lights up in the front panel display.

### Note

- This effect does not work for a Super Audio CD. When you load a Super Audio CD while this function is activated, the sound effect turns off automatically.

### To turn off the sound effect

Press **NIGHT** again.

# Using the Control for HDMI Function for “BRAVIA” Sync

This function is available on TVs with the “BRAVIA” Sync function.

By connecting Sony components that are compatible with the Control for HDMI function with an HDMI cable, operation is simplified as below:

- System Power Off (page 58)
- One-Touch Play (page 59)
- Theatre Mode (page 59)
- System Audio Control (page 59)
- Volume Limit (page 59)
- Audio Return Channel (page 59)
- Remote Easy Control (page 59)
- Language Follow (page 60)

Control for HDMI is a mutual control function standard used by CEC (Consumer Electronics Control) for HDMI (High-Definition Multimedia Interface).

### Note

- Depending on the connected component, the Control for HDMI function may not work. Refer to the operating instructions of the component.

## Preparing the Control for HDMI function

### (Control for HDMI - Easy Setting)

If your TV is compatible with the Control for HDMI - Easy Setting function, you can set the system's [CONTROL FOR HDMI] function automatically by setting your TV. For details, refer to the operating instructions of your TV.

If your TV is not compatible with the Control for HDMI - Easy Setting function, set the Control for HDMI function of the system and TV manually.

- 1** Make sure that the system and your TV are connected with an HDMI cable.
- 2** Turn on your TV and press **I/⏻** to turn on the system.
- 3** Switch the input selector on your TV so that the signal from the system through the HDMI input appears on the TV screen.
- 4** Set the Control for HDMI function of your TV.  
For details of the setting of your TV, refer to the operating instructions of your TV.
- 5** On the system, press **FUNCTION** repeatedly to select “DVD/CD.”  
The selected item appears in the front panel display.
- 6** Press **☰ DISPLAY** while the system is in stop mode.
- 7** Press **↑/↓** to select **📺 [SETUP]**, then press **+**.
- 8** Press **↑/↓** to select **[CUSTOM]**, then press **+**.
- 9** Press **↑/↓** to select **[HDMI SETUP]**, then press **+**.
- 10** Press **↑/↓** to select **[CONTROL FOR HDMI]**, then press **+**.
- 11** Press **↑/↓** to select **[ON]**, then press **+**.

## Turning the system off in sync with your TV

### (System Power Off)

When you turn your TV off by using the **POWER** button on your TV's remote or **I/⏻** on the system's remote, the system turns off automatically.

### Note

- This function depends on the settings of your TV. For details, refer to the operating instructions of your TV.
- Depending on the status of the system (ex. while playing a CD), the system may not turn off automatically.

## Watching a DVD by a single button press

### *(One-Touch Play)*

#### Press ONE-TOUCH PLAY

Your TV turns on, your TV's function is set to the HDMI input to which the system is connected, and the system starts playing a disc automatically.

The System Audio Control function is also activated automatically.

## Using the Theatre Mode

### *(Theatre Mode)*

If your TV is compatible with the Theatre Mode, you can enjoy optimal image and sound quality suited for movies, and the System Audio Control function is activated automatically.

Press THEATRE.

## Enjoying TV sound from the speakers by this system

### *(System Audio Control)*

To use this function, connect the system and your TV with an audio cord and an HDMI cable (page 30).

Press **I/⏻** to turn on the system while your TV is turned on.

The System Audio Control function is activated. TV sound is output from the system speakers, and the volume of your TV's speakers is minimized automatically.

#### **Note**

- While your TV is in PAP (picture and picture) mode, the System Audio Control function will not work. When your TV exits PAP mode, the output method of your TV returns to the one before PAP mode.
- Depending on the TV, when you adjust the system's volume, the volume level appears on the TV screen. In this case, the volume levels that appear on the TV screen and the front panel display of the system may differ.

#### **Tip**

- You can also operate the System Audio Control function via the TV menu.
- You can operate the volume and mute control of the system via the TV remote.

## Limiting the volume level of TV sound from the system's speakers

### *(Volume Limit)*

When the System Audio Control function is activated and TV sound is output from the system's speakers, the volume level is limited to the level that is set in [VOLUME LIMIT]. For details, see [VOLUME LIMIT] (page 73).

## Receiving the digital audio signal of your TV

### *(Audio Return Channel)*

The system can receive the digital audio signal of your TV via an HDMI cable when your TV is compatible with the Audio Return Channel function. You can enjoy TV sound via the system by using just one HDMI cable. For details, see [AUDIO RETURN CHANNEL] (page 73).

## Operating the system via the TV remote

### *(Remote Easy Control)*

You can control the basic functions of the system via the TV remote when the system's video output is displayed on the TV screen. For details, refer to the operating instructions of the TV.

## Changing the language for the system's on-screen display in sync with your TV

### (Language Follow)

When you change the language for the on-screen display of your TV, the system's on-screen display language is also changed.

#### Note

- When the system's on-screen display is displayed, this function does not work.

## Using an S-AIR Product


### (DAV-DZ810 only)

When you purchase the S-AIR product, you need to perform the following settings to activate wireless transmission.

### About S-AIR products

There are two types of S-AIR products.

- S-AIR main unit (this unit): This is for transmitting sound. You can use up to three S-AIR main units. (The number of usable S-AIR main units depends on the use environment.)
- S-AIR sub unit: This is for receiving sound.
  - **Surround amplifier (optional)**: You can enjoy surround speaker sound wirelessly.
  - **S-AIR receiver (optional)**: You can enjoy system sound in another room.

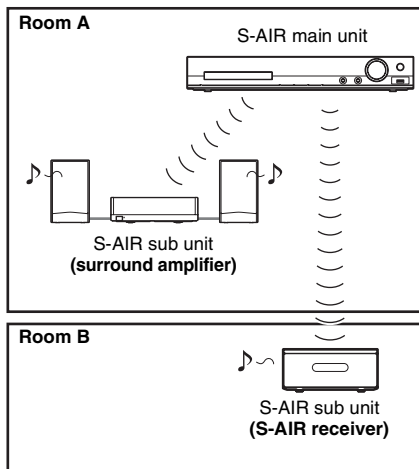

## Inserting the wireless transmitter/transceiver

To make use of the S-AIR function, you need to insert the wireless transmitter into the unit and the wireless transceiver into the S-AIR sub unit.


#### Note

- When you insert the wireless transmitter/transceiver, make sure that the AC power cord (mains lead) is not connected to a wall outlet (mains).
- Do not touch the terminals of the wireless transmitter/transceiver.

### To insert the wireless transmitter into the unit

- 1 Remove the screws directly below the  mark.

Rear of the unit

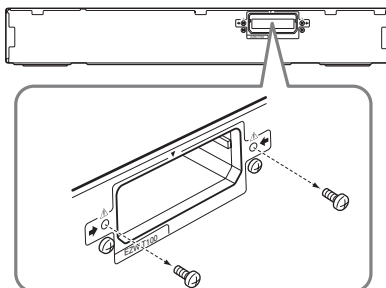


**Note**

- Remove the screws that are indicated in the illustration. Do not remove other screws.

## 2 Insert the wireless transmitter.


Rear of the unit

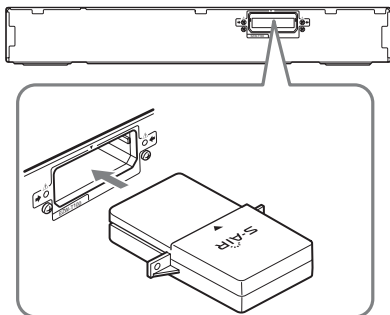**Note**

- Insert the wireless transmitter with the S-AIR logo facing up.
- Insert the wireless transmitter so that the ▼ marks are aligned.
- Do not insert anything other than the wireless transmitter into the EZW-T100 slot.

## 3 Make sure to use the same screws to secure the wireless transmitter.

Rear of the unit

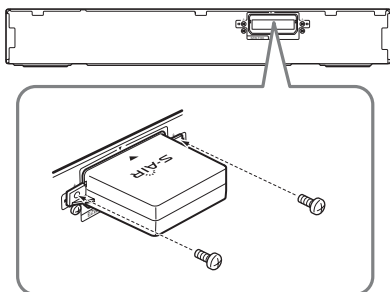

## To insert the wireless transceiver into the S-AIR sub unit

For details on installing the wireless transceiver into the S-AIR sub unit, such as a surround amplifier or S-AIR receiver, see the operating instructions of the S-AIR sub unit.

**Tip**

- When you change the S-AIR configuration, Sony recommends that you perform [AUTO CALIBRATION] (page 74).


## Setting the S-AIR ID to activate wireless transmission

*For the surround amplifier  
For the S-AIR receiver*

Simply by matching the ID of the main unit and the S-AIR sub unit, you can activate wireless transmission.

### To set the ID of the unit

- 1 Press **SYSTEM MENU**.
- 2 Press **↑/↓** to select "S-AIR ID," then press **⊕** or **→**.  
The selected item appears in the front panel display.
- 3 Press **↑/↓** to select the desired ID, then press **⊕**.  
You can select any ID (A, B, or C).
- 4 Press **SYSTEM MENU**.
- 5 **Set the S-AIR sub unit to the same ID.**  
Wireless transmission is activated as follows (example):

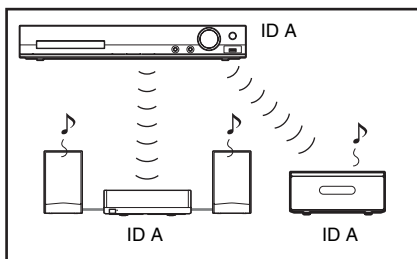**Tip**

- To confirm the current ID, perform Steps 1 to 3 above. When you pair the unit with an S-AIR sub unit (page 62), "(PAIRING)" appears beside ID in the front panel display.

## To set the ID of the surround amplifier

Refer to the operating instructions of the surround amplifier.

## To set the ID of the S-AIR receiver

Refer to the operating instructions of the S-AIR receiver.

## Enjoying sound by the S-AIR receiver while the main unit is in standby mode

### For the S-AIR receiver

You can receive the system's sound by the S-AIR receiver while the main unit is in standby mode by setting "S-AIR STBY" to "STBY ON."

- 1 Press **SYSTEM MENU**.
- 2 Press **↑/↓** to select "**S-AIR STBY**," then press **⊕** or **→**.

The selected item appears in the front panel display.

- 3 Press **↑/↓** to select the desired setting, then press **⊕**.

- "STBY ON": You can receive the system's sound by the S-AIR receiver while the unit is in standby mode or turned on.
- "STBY OFF": You cannot receive the system's sound by the S-AIR receiver while the unit is in standby mode.

- 4 Press **SYSTEM MENU**.

#### Note

- When you turn the system off while "S-AIR STBY" is set to "STBY ON," "S-AIR" flashes (when wireless transmission between the unit and S-AIR receiver is not activated), or lights up (when wireless transmission between the unit and S-AIR receiver is activated) in the front panel display.

## Identifying the unit with a specific S-AIR sub unit (Pairing operation)

### For the surround amplifier

### For the S-AIR receiver

When using S-AIR products, neighbors may also receive your system's sound if IDs are the same, or you may receive sound from neighbors. To prevent this, you can identify the unit with a specific S-AIR sub unit by performing the pairing operation.

When you perform pairing, wireless transmission is activated between the paired main unit and S-AIR sub unit only.

- 1 Place the S-AIR sub unit that you want to pair near the unit.

- 2 Match the IDs of the unit and the S-AIR sub unit.

- To set the ID of the unit, see "To set the ID of the unit" (page 61).
- To set the ID of the surround amplifier, refer to the operating instructions of the surround amplifier.
- To set the ID of the S-AIR receiver, refer to the operating instructions of the S-AIR receiver.

- 3 Press **SYSTEM MENU**.

- 4 Press **↑/↓** to select "**PAIRING**," then press **⊕** or **→**.

The selected item appears in the front panel display.

- 5 After "**START**" appears in the front panel display, press **⊕**.

The unit starts pairing and "SEARCH" flashes in the front panel display.

To cancel pairing, press **SYSTEM MENU**.

- 6 Start pairing of the S-AIR sub unit.

#### ■ For the surround amplifier

Press **I/⏻** on the surround amplifier to turn on the surround amplifier and press **PAIRING** on the rear panel of the surround amplifier. (To press **PAIRING**, a slim

instrument, such as a paper clip, can be used.)

The PAIRING indicator of the surround amplifier flashes when pairing starts.

When wireless transmission is activated, the PAIRING indicator of the surround amplifier turns on and “PAIRING” and “COMPLETE” appear alternately in the front panel display.

#### ■ For the S-AIR receiver

Refer to the operating instructions of the S-AIR receiver.

When wireless transmission is activated, “PAIRING” and “COMPLETE” appear alternately in the front panel display.

#### Note

- Perform pairing within several minutes of Step 5. If you do not do so, “PAIRING” and “INCOMPLETE” appear alternately in the front panel display. To continue pairing, press ⊕ and start again from Step 5. To cancel pairing, press SYSTEM MENU.

## 7 Press SYSTEM MENU.

### To cancel pairing

Change the ID of the main and sub unit (page 61).

## If wireless transmission is unstable

*For the surround amplifier*  
*For the S-AIR receiver*

If you use multiple wireless systems, such as wireless LAN or Bluetooth, the transmission of S-AIR signals or other wireless signals may be unstable. In this case, the transmission may be improved by changing the following “RF CHANGE” setting.

### 1 Press SYSTEM MENU.

### 2 Press ↑/↓ to select “RF CHANGE,” then press ⊕ or →.

The selected item appears in the front panel display.

### 3 Press ↑/↓ to select the desired setting, then press ⊕.

- “AUTO”: Normally select this. The system changes “RF CHANGE” to “ON” or “OFF” automatically.
- “ON”: The system transmits sound by searching for the better channel for transmitting.
- “OFF”: The system transmits sound by fixing the channel for transmitting.

### 4 Press SYSTEM MENU.

### 5 When you set “RF CHANGE” to “OFF,” select the ID so that wireless transmission is most stable (page 61).

#### Note

- In most cases, you will not need to change this setting.
  - If “RF CHANGE” is set to “OFF,” transmission between the unit and S-AIR sub unit can be performed using one of the following channels.
  - S-AIR ID A: equivalent channel for IEEE 802.11b/g channel 1
  - S-AIR ID B: equivalent channel for IEEE 802.11b/g channel 6
  - S-AIR ID C: equivalent channel for IEEE 802.11b/g channel 11
- The transmission may be improved by changing the transmission channel (frequency) of the other wireless system(s). For details, refer to the operating instructions of the other wireless system(s).

## Transferring Songs onto a USB Device

You can transfer songs on an audio CD or radio programs onto a USB device by encoding to MP3 format. You can also transfer MP3 files on a DATA CD/DATA DVD onto a USB device. For connecting the USB device, see “Playing Files on a Disc/USB Device” (page 38).

The transferred music is limited to private use only. Use of the music beyond this limit requires permission of the copyright holders.

## Notes on USB transferring


- Do not connect the unit and the USB device through a USB hub.
- Make sure there is enough space in the USB device for transferring.
- Do not remove the USB device during transferring.
- When you are transferring tracks from an audio CD, the tracks are recorded as 128 kbps MP3 files.
- When you are transferring MP3 files from a DATA CD/DATA DVD, the MP3 files are transferred with the same bit rate as the original MP3 files.
- When you are transferring a radio program, the audio is recorded as a 128 kbps MP3 file.
- CD text information is not transferred in the created MP3 files.
- If you stop a transfer from an audio CD halfway, the MP3 file that was being created is deleted.
- Transferring stops automatically if:
  - the USB device runs out of space during transfer.
  - the number of folders on the USB device reaches the limit for the number that the system can recognize.
- You can store up to 150 files in a folder.
- You can store up to 199 folders in a single USB device.
- If a folder or file that you are trying to transfer already exists on the USB device with the same name, a sequential number is added after the name without overwriting the original folder or file.

## To select the transfer destination of the USB device

You can select the memory number for transfer depending on the USB device.

**Press MEMORY SELECT.**

Selected memory number

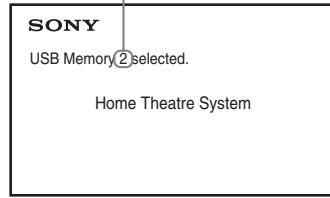

### Note

- When the memory cannot be selected, [Operation not possible.] appears on the TV screen.
- The memory number changes depending on the USB device.
- Select a transfer destination before transfer.

## Folder and file generation rules

When transferring onto a USB device, a “MUSIC” folder is created directly below the “ROOT”. Folders and files are generated within this “MUSIC” folder as follows according to the transferring method and source.

- When transferring multiple tracks on an audio CD or multiple MP3 files on a DATA CD/DATA DVD

Source	Folder name	File name
MP3	Same as the transferring source <sup>1)</sup>	
Audio CD	“FLDR001” <sup>2)</sup>	“TRACK001” <sup>3)</sup>

- When transferring a single track on an audio CD or a single MP3 file on a DATA CD/DATA DVD

Source	Folder name	File name
MP3	“REC1-MP3” <sup>4)</sup>	Same as the transferring source <sup>1)</sup>
Audio CD	“REC1-CD” <sup>4)</sup>	“TRACK001” <sup>3)</sup>

- When transferring a radio program

Folder name	File name
“FM001” <sup>4)</sup>	“TRACK001” <sup>3)</sup>

<sup>1)</sup>Up to 64 characters of the name are assigned (including the extension).

<sup>2)</sup>Folders are assigned in numeric order thereafter.

<sup>3)</sup>Files are assigned in numeric order thereafter.



4) A new file is transferred in the “REC1-MP3” or “REC1-CD” folder each time single-track transferring is performed.

## Transferring tracks on an audio CD or MP3 files on a DATA CD/DATA DVD onto a USB device

- 1 Load an audio CD/DATA CD/DATA DVD.
- 2 Press **DISPLAY** while the system is in stop mode.
- 3 Press **↑/↓** to select **[USB TRANSFER]**, then press **+**.

### ■ For an audio CD

Press **+** and skip to Step 5.

### ■ For a DATA CD/DATA DVD

Follow the next Step.

- 4 Press **↑/↓** to select **[TRACK]** or **[FOLDER]**, then press **+**.
  - **[TRACK]**: The folder list appears. Press **↑/↓** to select the desired folder, then press **+**.
  - **[FOLDER]**: The folders recorded on the DATA CD/DATA DVD appear. You can transfer all MP3 files in the folder.
- 5 Press **←/↑/↓/→** to select **[■ ALL]** (for an audio CD) or **[☑ ALL]** (for a DATA CD/DATA DVD), then press **+**.
 

To deselect all tracks, select **[☐ ALL]**, then press **+**.
- 6 Press **←/↑/↓/→** to select **[START]**, then press **+**.
 

To cancel transferring, press **■**.


### To select individual tracks/MP3 files/folders

Press **↑/↓** to highlight the track/MP3 file/folder, then press **+** to add a check in Step 4.

To cancel the selection, highlight the track/MP3 file/folder, then press **+** to remove the check.

### ■ For an audio CD

Remaining space of the USB device

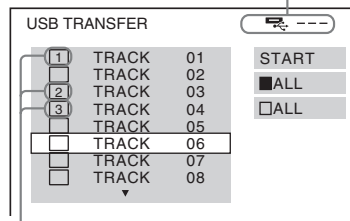

Tracks to be transferred.

### ■ For a DATA CD/DATA DVD

Remaining space of the USB device



MP3 files/folders to be transferred.

## Transferring by single button press

You can transfer tracks/MP3 files simply onto a USB device by using REC TO USB.

- 1 Load an audio CD/DATA CD/DATA DVD.
- 2 Press **■**.
 

To transfer all tracks, skip to Step 4.  
To transfer a single track, follow the next Step.
- 3 Select the desired track/MP3 file, then press **▶**.
- 4 Press **REC TO USB** on the unit.
 

REC TO USB lights up and “READING” appears in the front panel display. Then, “PUSH PLAY” and the remaining space of the USB device appear alternately in the front panel display.

## 5 Press ► to start transferring.

When transferring is completed, “COMPLETE” appears in the front panel display and playback of the disc and USB device stops automatically.

To cancel transferring, press ■.

## Transferring a radio program

You can transfer a radio program you are listening to onto a USB device.

### 1 Press FUNCTION repeatedly to select “TUNER FM.”

The selected item appears in the front panel display.

### 2 Select the radio station by pressing PRESET +/- or TUNING +/-.

### 3 Press REC TO USB on the unit.

REC TO USB lights up and “READING” appears in the front panel display. Then, “PUSH PLAY” and the remaining space of the USB device appear alternately in the front panel display.

### 4 Press ► to start transferring.

### 5 Press ■ to stop transferring.

## To create a new MP3 file while transferring

Press REC TO USB while transferring.

“NEW TRACK” appears in the display and transferring continues in a new MP3 file right after you press REC TO USB.

If you press REC TO USB again within a few seconds, a new MP3 file cannot be created.

#### Note

- When a new MP3 file is created, transferring is temporarily disabled.

#### Tip

- A new MP3 file is created automatically after approximately 1 hour of transferring.

## Erasing audio files on a USB device

You can erase audio files (“.mp3,” “.wma,” or “.m4a”) on the USB device.

### 1 Press FUNCTION repeatedly to select “USB.”

The selected item appears in the front panel display.

### 2 Press ↑/↓ to select a folder.

### 3 Select the audio file(s).

■ To erase all audio files in a folder

Press CLEAR.

■ To erase an audio file

Press ⊕ and press ↑/↓ to select the desired audio file, then press CLEAR.

### 4 Press ←/→ to select [YES], then press ⊕.

To cancel, select [NO], then press ⊕.

#### Note

- Do not remove the USB device while erasing.
- If the folder to be erased contains non-audio format files or sub folders, these are erased from the list on the TV screen, but are not erased from the USB device.

## Using the sleep timer

You can set the system to turn off at a preset time, so you can fall asleep listening to music.

### Press SLEEP.

Each time you press SLEEP, the minutes display (the remaining time) changes by 10 minutes. When you set the sleep timer, “SLEEP” flashes in the front panel display.

### To check the remaining time

Press SLEEP once.

### To change the remaining time

Press SLEEP repeatedly to select the desired time.

## To cancel the sleep timer

Press SLEEP repeatedly until “SLEEP OFF” appears in the front panel display.

## To set the sleep timer using the system menu

- 1 Press **SYSTEM MENU**.
- 2 Press **↑/↓** to select “SLEEP,” then press **⊕** or **→**.  
The selected item appears in the front panel display.
- 3 Press **↑/↓** to select a setting, then press **⊕**.  
The minutes display (the remaining time) changes by 10 minutes.
- 4 Press **SYSTEM MENU**.


## Adjusting the Delay Between the Picture and Sound

### [A/V SYNC]

DVD-V DVD-VR VIDEO CD DATA CD DATA DVD

### USB

When the sound does not match the pictures on the TV screen, you can adjust the delay between the picture and sound.

- 1 Press **DISPLAY**.
- 2 Press **↑/↓** to select  [A/V SYNC], then press **⊕**.
- 3 Press **↑/↓** to select a setting, then press **⊕**.
  - [OFF]: Off.
  - [ON]: You can adjust the delay between the picture and sound.

### Note

- Depending on the input stream, [A/V SYNC] may not be effective.

## Enjoying Multiplex Broadcast Sound

### (DUAL MONO)

You can enjoy multiplex broadcast sound when the system receives or plays a Dolby Digital multiplex broadcast signal.

### Note

- To receive a Dolby Digital signal, you need to connect a TV or other component to the unit with a digital optical cord\* (page 30). If your TV is compatible with the Audio Return Channel function (page 59), you can receive a Dolby Digital signal via an HDMI cable.
- \* DAV-DZ510/DAV-DZ610/DAV-DZ810 only.

### Press AUDIO repeatedly to select the audio signal.

The selected item appears in the front panel display.

- “MAIN”: Sound of the main language will be output.
- “SUB”: Sound of the sub language will be output.
- “MAIN+SUB”: Mixed sound of both the main and sub languages will be output.

## Changing the Input Level of the Sound from Connected Components

The sound distortion of the connected component may be improved by reducing the input level.

- 1 Press **FUNCTION** repeatedly to select “TV” or “AUDIO IN.”  
The selected item appears in the front panel display.
- 2 Press **SYSTEM MENU**.
- 3 Press **↑/↓** to select “ATTENUATE,” then press **⊕** or **→**.

**4** Press  $\uparrow/\downarrow$  to select a setting, then press  $\oplus$ .

- “ATT ON”: You can attenuate the input level.
- “ATT OFF”: Normal input level.

This setting is made separately for each function.

**5** Press **SYSTEM MENU**.

## Changing the Brightness of the Front Panel Display

- 1 Press **SYSTEM MENU**.
- 2 Press **↑/↓** to select “DIMMER,” then press **⊕** or **→**.  
The selected item appears in the front panel display.
- 3 Press **↑/↓** to select the brightness of the front panel display, then press **⊕**.
  - “DIMMER OFF”: The front panel display is bright.
  - “DIMMER ON”: The front panel display is dim.
- 4 Press **SYSTEM MENU**.

## Setting the Demonstration Mode to On/Off

You can turn on/off the demonstration in the front panel display while the system is in standby mode.

- 1 Press **SYSTEM MENU**.
- 2 Press **↑/↓** to select “DEMO,” then press **⊕** or **→**.  
The selected item appears in the front panel display.
- 3 Press **↑/↓** to select a setting, then press **⊕**.
  - “DEMO OFF”: Off.
  - “DEMO ON”: On.
- 4 Press **SYSTEM MENU**.

## Reperforming the Quick Setup

- 1 Press **FUNCTION** repeatedly to select “DVD/CD.”  
The selected item appears in the front panel display.
- 2 Press **⊞** **DISPLAY** while the system is in stop mode.
- 3 Press **↑/↓** to select **[SETUP]**, then press **⊕**.
- 4 Press **↑/↓** to select **[QUICK]**, then press **⊕**.  
Perform the Quick Setup following the procedure of “Performing the Quick Setup” (page 34).

## Set the System to Standby Mode Automatically

The system enters standby mode automatically when you do not operate the system for about 30 minutes and the system is not outputting sound for about 30 minutes. “AUTO STBY” begins to flash in the front panel display about 2 minutes before the system enters standby mode. You can turn the auto standby function on/off.

- 1 Press **SYSTEM MENU**.
- 2 Press **↑/↓** to select “AUTO STBY,” then press **⊕** or **→**.  
The selected item appears in the front panel display.
- 3 Press **↑/↓** to select the setting, then press **⊕**.
  - “ON”: On.
  - “OFF”: Off.
- 4 Press **SYSTEM MENU**.

# Performing Further Settings

You can make various adjustments to items such as picture and sound.  
Displayed items vary depending on the area.

**Note**

- Playback settings stored in the disc take priority over the Setup Display settings and not all the functions described may work.

**1 Press FUNCTION repeatedly to select “DVD/CD.”**

The selected item appears in the front panel display.

**2 Press  DISPLAY while the system is in stop mode.**

**3 Press  $\uparrow/\downarrow$  to select  [SETUP], then press  $\oplus$ .**


**4 Press  $\uparrow/\downarrow$  to select [CUSTOM], then press  $\oplus$ .**

**5 Press  $\uparrow/\downarrow$  to select the setup item, then press  $\oplus$ .**

- [LANGUAGE SETUP] (page 70)
- [VIDEO SETUP] (page 71)
- [HDMI SETUP] (page 72)
- [AUDIO SETUP] (page 73)
- [SYSTEM SETUP] (page 75)
- [SPEAKER SETUP] (page 76)

Example: [VIDEO SETUP]

Selected item

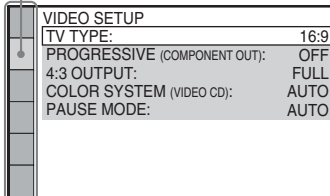


Setup items

**6 Press  $\uparrow/\downarrow$  to select an item, then press  $\oplus$ .**




The options for the selected item appear.  
Example: [TV TYPE]

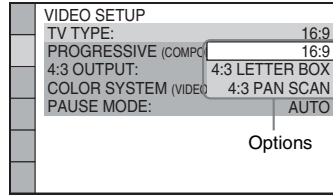

**7 Press  $\uparrow/\downarrow$  to select a setting, then press  $\oplus$ .**

The setting is selected and setup is complete.

Example: [4:3 LETTER BOX]

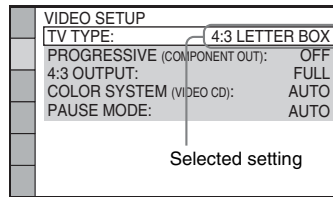

**To reset all of the [SETUP] settings**

To reset all of the [SETUP] settings, see [RESET] (page 76).

## Setting the display or sound track language

 [LANGUAGE SETUP]

Set various languages for the on-screen display or sound track.

■ [OSD] (On-Screen Display)

You can switch the display language on the TV screen.

■ [MENU] **DVD-V**

You can switch the language for the disc's menu.

**[AUDIO] DVD-V**

You can switch the language of the sound track. When you select [ORIGINAL], the language given priority on the disc is selected.

**[SUBTITLE] DVD-V**

You can switch the language of the subtitles recorded on the DVD VIDEO. When you select [AUDIO FOLLOW], the language for the subtitles changes according to the language you selected for the sound track.

**Note**

• When you select a language in [MENU], [AUDIO], or [SUBTITLE] that is not recorded on the DVD VIDEO, one of the recorded languages will be automatically selected (depending on the disc, the language may not be selected automatically).

**Tip**

• If you select [OTHERS →] in [MENU], [AUDIO], and [SUBTITLE], select and enter a language code from “Language Code List” (page 90) using the number buttons.

## Settings for the display

**[VIDEO SETUP]**

Select settings according to your TV.

**[TV TYPE]**

You can select the aspect ratio of the connected TV.

[16:9]: Select this when you connect a wide-screen TV or a TV with a wide-screen mode.



[4:3 LETTER BOX]: Select this when you connect a 4:3 standard TV. The system displays a wide picture with bands on the upper and lower portions of the TV screen.



[4:3 PAN SCAN]: Select this when you connect a 4:3 standard TV. The system automatically displays a wide picture on the entire screen and cuts off the portions that do not fit.

**[PROGRESSIVE (COMPONENT OUT)]**

You can set the progressive signal that is output from the COMPONENT VIDEO OUT jacks to on/off. For details, see “To select the type of video signal output from the COMPONENT VIDEO OUT jacks” (page 37).

[OFF]: The system outputs interlace signals.

[ON]: The system outputs progressive signals. When you select [ON], follow the Steps below.

- 1** Select [ON], then press **+**.
- 2** Press **←/→** to select [START], then press **+**.  
The system outputs a progressive signal for about 5 seconds. Check that the screen is displayed correctly.
- 3** Press **←/→** to select [YES], then press **+**.  
The system outputs a progressive signal. If you select [NO], the system will not output a progressive signal.

**Note**

 
• [PROGRESSIVE (COMPONENT OUT)] is effective only when you connect the unit and TV with a component video cable (page 30).

**[4:3 OUTPUT]**

When you use a 16:9 aspect ratio TV, you can adjust the aspect ratio to watch 4:3 aspect ratio signals. If you can change the aspect ratio on your TV, change the setting on your TV, not the system.

[FULL]: Select this when you can change the aspect ratio on your TV.

[NORMAL]: Select this when you cannot change the aspect ratio on your TV. A 16:9 aspect ratio signal with black bands on left and right sides of the image appears.



16:9 aspect ratio TV

**Note**

- [4:3 OUTPUT] is effective only when you set [TV TYPE] in [VIDEO SETUP] to [16:9].

---

■ **[COLOR SYSTEM (VIDEO CD)]**

**(Asian, Australian, Middle Eastern, and South African models only)**

You can select the color system when you play a VIDEO CD.

[AUTO]: The system outputs the disc's video signal, either PAL or NTSC. If your TV uses a DUAL system, select [AUTO].

[PAL]: The system changes the video signal of an NTSC disc and outputs it in the PAL system.

[NTSC]: The system changes the video signal of a PAL disc and outputs it in the NTSC system.

**Note**

- You cannot change the color system of the disc itself.
- You can change the color system of this system according to the connected TV (page 30).

---

■ **[BLACK LEVEL]**

**(North American, Mexican, Latin American, and taiwan models only)**

You can select the black level (setup level) for the video signals output from the jacks other than COMPONENT VIDEO OUT/HDMI OUT.

[ON]: The standard level.

[OFF]: You can lower the standard black level. Use this when the picture becomes too white.

---

■ **[BLACK LEVEL (COMPONENT OUT)]**

**(North American, Mexican, Latin American, and taiwan models only)**

You can select the black level (setup level) for the video signals output from the COMPONENT VIDEO OUT jacks.

You cannot select this and the setting is not effective when the system outputs a progressive signal.

[OFF]: You can set the black level of the output signal to the standard level.

[ON]: You can raise the standard black level. Use this when the picture becomes too black.

---

■ **[PAUSE MODE] DVD-V**

**(DVD VIDEO/DVD-R/DVD-RW only)**

You can select the picture in pause mode.

[AUTO]: The picture, including subjects that move dynamically, is output with no jitter. This setting is for normal usage.

[FRAME]: The picture, including subjects that do not move dynamically, is output in high resolution.

---

## Settings for HDMI



**[HDMI SETUP]**

---

■ **[HDMI RESOLUTION]**

You can select the type of video signal that is output from the HDMI OUT jack.

[AUTO (1920 × 1080p)]: The system outputs the optimal video signal for the connected TV.

[1920 × 1080i]: The system outputs 1920 × 1080i\* video signals.

[1280 × 720p]: The system outputs 1280 × 720p\* video signals.

[720 × 480p]\*\*: The system outputs 720 × 480p\* video signals.

\* i: interlace, p: progressive

\*\* Depending on the area, [720 × 480/576p] may appear.

---

■ **[CONTROL FOR HDMI]**

This function is available when you connect the system and TV that is compatible with the Control for HDMI function with an HDMI cable.

[ON]: On. You can operate mutually between components that are connected with an HDMI cable.

[OFF]: Off.



### ■ [VOLUME LIMIT]

When the System Audio Control (page 59) is activated, loud sound may be output depending on the volume level of the system. You can prevent this by limiting the maximum level of the volume when the System Audio Control function activates.

[OFF]: Off.

[LEVEL3]: Maximum volume level is set to 10.

[LEVEL2]: Maximum volume level is set to 15.

[LEVEL1]: Maximum volume level is set to 20.

#### Note

- This function is available only when [CONTROL FOR HDMI] is set to [ON].

### ■ [AUDIO RETURN CHANNEL]

This function is available when you connect the system and TV that is compatible with the Audio Return Channel function.

[AUTO]: The system can receive the digital audio signal of your TV via an HDMI cable automatically.

[Off]: Off.

#### Note

- This function is available only when [CONTROL FOR HDMI] is set to [ON].

### ■ [YCbCr/RGB (HDMI)]

You can select the type of HDMI signal output from the HDMI OUT jack.

[YCbCr]: The system outputs YCbCr signals.

[RGB]: The system outputs RGB signals.

### ■ [AUDIO (HDMI)]

You can select the audio output status from the HDMI OUT jack.

[OFF]: The system does not output sound from the HDMI OUT jack.

[ON]: The system outputs audio signals by converting Dolby Digital, DTS, or 96 kHz/24-bit PCM signals to 48 kHz/16-bit PCM.

#### Note

- When you set the function to other than “DVD/CD” or “USB,” the system does not output the sound from

the HDMI OUT jack even if you set [AUDIO (HDMI)] to [ON].

### ■ [JPEG RESOLUTION]

You can select the resolution of JPEG image files output from the HDMI OUT jack.

[SD ]: The system outputs standard resolution with a black frame.

[HD ]: The system outputs HD resolution with a black frame.

[HD]: The system outputs the HD resolution without a black frame.

[(1920 × 1080i) HD ]: The system outputs full size HD resolution with a black frame.

[(1920 × 1080i) HD]: The system outputs full size HD resolution without a black frame.

#### Note

- [JPEG RESOLUTION] is effective only when you set [TV TYPE] in [VIDEO SETUP] to [16:9], and you set [HDMI RESOLUTION] in [HDMI SETUP] to other than [720 × 480p] or [720 × 480/576p].
- You can select [(1920 × 1080i) HD ] or [(1920 × 1080i) HD] only when you set [HDMI RESOLUTION] in [HDMI SETUP] to [1920 × 1080i].
- The HDMI signal will stop momentarily when:
  - the system is loading or unloading a DATA CD or DATA DVD.
  - you connect or remove a USB device.

## Settings for the audio



### [AUDIO SETUP]

### ■ [SPEAKER FORMATION]

Depending on the shape of the room, you may not be able to install some speakers. For better surround sound, Sony recommends that first you decide the position of the speakers.

**1** Press **←/→** to select a setting, then press **+**.

- [STANDARD]: Select this when you install all the speakers normally.
- [NO CENTER]: Select this when you install the front and surround speakers only.

- [NO SURROUND]: Select this when you install the center and front speakers only.
- [FRONT ONLY]: Select this when you install the front speakers only.
- [ALL FRONT]: Select this when you install all the speakers in front of the listening position.
- [ALL FRONT - NO CENTER]: Select this when you install the front and surround speakers in front of the listening position.

**2** Press  $\leftarrow/\rightarrow$  to select [YES] or [NO], then press  $\oplus$ .

- [YES]: Continue with [AUTO CALIBRATION]. Follow the Steps of [AUTO CALIBRATION] below.
- [NO]: Exit [SPEAKER FORMATION].


■ [AUTO CALIBRATION]

D. C. A. C. (Digital Cinema Auto Calibration) can set the appropriate surround sound automatically.

**1** Connect the calibration mic (supplied) to the A.CAL MIC jack on the front panel.

Set up the calibration mic at ear level using a tripod, etc. (not supplied).

The front of each speaker should face the calibration mic, and there should be no obstruction between the speakers and the calibration mic.

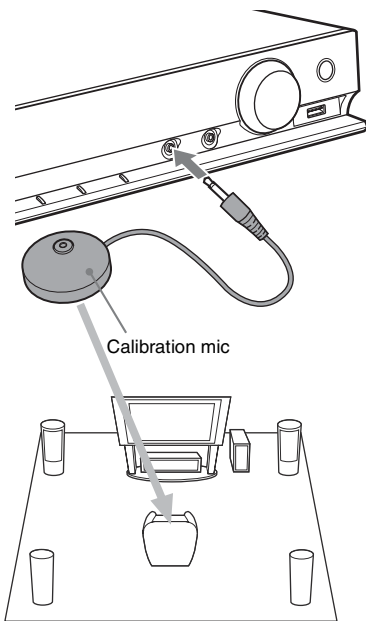

**2** Press  $\leftarrow/\rightarrow$  to select [YES], then press  $\oplus$ .

[AUTO CALIBRATION] starts.  
Be quiet during the measurement.

**Note**

- The environment of the room in which the system is installed may affect measurements. When the measurements differ considerably from the status of the speaker installation, perform the speaker settings manually by following "Settings for the speakers" (page 76).

**3** Press  $\leftarrow/\rightarrow$  to select [YES] or [NO], then press  $\oplus$ .

**4** Disconnect the calibration mic when the measurement completes correctly.

**Note**

- The system outputs a loud test sound when [AUTO CALIBRATION] starts. You cannot turn the volume down. Give consideration to children and neighbors.
- The measurement for [SUBWOOFER] is always [YES] and [SPEAKER SETUP] returns to the default setting when you perform [AUTO CALIBRATION].

**■ [AUDIO DRC] DVD-V**

You can compress the dynamic range of the sound track. [AUDIO DRC] is useful for watching movies at low volume late at night.

[OFF]: No compression of dynamic range.

[STANDARD]: The system reproduces the sound track with the kind of dynamic range that the recording engineer intended.

[MAX]: The system compresses dynamic range fully.

**Note**

- [AUDIO DRC] works only for Dolby Digital.

**■ [TRACK SELECTION] DVD-V**

You can give the sound track which contains the highest number of channels priority when multiple audio formats (PCM, DTS, Dolby Digital, or MPEG audio) are recorded.

[OFF]: Off.

[AUTO]: The system selects the sound track automatically according to the priority.

**Note**

- When you set the item to [AUTO], the language may change. The [TRACK SELECTION] setting has higher priority than the [AUDIO] settings in [LANGUAGE SETUP] (page 70). (Depending on the disc, this function may not work.)

**Other Settings**** [SYSTEM SETUP]****■ [SCREEN SAVER]**

You can reduce the damage to the display device (ghosting). Press any button (e.g., ►) to cancel the screen saver.

[ON]: The screen saver image appears if you do not operate the system for about 15 minutes.

[OFF]: Off.

**■ [BACKGROUND]**

You can select the background color or picture on the TV screen.

[JACKET PICTURE]: The jacket picture (still picture) appears, but only when the jacket picture is already recorded on the disc (CD-EXTRA, etc.). If the disc does not contain a jacket picture, a preset picture stored in the system appears.


[GRAPHICS]: A preset picture stored in the system appears.


[BLUE]: The background is blue.



[BLACK]: The background is black.

**■ [PARENTAL CONTROL]**



The [PARENTAL CONTROL] function allows you to restrict playback of DVDs that have ratings. Scenes may be blocked or replaced with different scenes.

**1 Enter or re-enter your 4-digit password using the number buttons, then press .**

**2 Press  to select [STANDARD], then press .**

**3 Press  to select a geographic area as the playback limitation level, then press .**

When you select [OTHERS →], select and enter a standard code from “Parental Control Area Code List” (page 90) using the number buttons.

**4 Press  to select [LEVEL], then press .**


**5 Press  to select the desired level, then press .**

The lower the value, the stricter the limitation.


**To turn off the [PARENTAL CONTROL] function**

Set [LEVEL] to [OFF] in Step 5.

**To play a disc for which [PARENTAL CONTROL] is set**

When you load the disc and press ►, the display for entering your password appears. Enter your 4-digit password using the number buttons, then press .

**Tip**

- If you forget your password, enter “199703” using the number buttons, then press . The display will ask you to enter a new 4-digit password. After you

enter a new 4-digit password, replace the disc in the unit and press ►. When the display for entering your password appears, enter your new password.

## Changing the password

- 1 Enter your 4-digit password using the number buttons, then press ⊕.**
- 2 Press ↑/↓ to select [CHANGE PASSWORD →], then press ⊕.**
- 3 Enter a new 4-digit password using the number buttons, then press ⊕.**  
If you make a mistake entering your password, press ← before you press ⊕, then input the correct number.
- 4 To confirm your password, re-enter it using the number buttons, then press ⊕.**

### ■ [DivX (R) VOD]

You can display the registration or deactivation code for this system, or deactivate this system after activation.

#### To display the registration code

Press ↑/↓ to select [Registration Code →], then press ⊕.

#### To deactivate the system

Press ←/→ to select [YES] or [NO], then press ⊕.

- [YES]: The system is deactivated and the deactivation code is displayed.
- [NO]: The system returns to the previous display.

#### To display the deactivation code again after deactivation

Press ↑/↓ to select [Deactivation Code →], then press ⊕.

For more information, go to <http://www.divx.com> on the Internet.

### ■ [MULTI-DISC RESUME] **DVD-V** **VIDEO CD**

This system recalls the point where you stopped the disc the last time it was played and resumes playback from that point the next time you insert the same disc.

**[ON]:** The system stores the resume points in memory for up to 10 discs.

**[OFF]:** The system does not store the resume points in memory. Playback restarts at the resume point only for the current disc in the unit.

#### Note

- When the resume playback memory is full, the resume playback point for the earliest disc is deleted.

### ■ [RESET]

You can return the [SETUP] settings other than [PARENTAL CONTROL] to the default settings.

Press ←/→ to select [YES], then press ⊕.

You can also quit the process and return to the Control Menu by selecting [NO] here.

Do not press I/⏪ while resetting the system as it takes a few seconds to complete.

#### Note

- The [MEDIA], [INTERVAL], [EFFECT], and [MULTI/2CH] settings also return to the default settings.

## Settings for the speakers

### **⊞** [SPEAKER SETUP]

You can adjust the speaker settings manually without performing the Quick Setup. Select the speakers you will use, set the speaker distance from your listening position, and then adjust the sound level for each speaker. You can adjust the sound level by using the [TEST TONE] function.

### ■ [CONNECTION]

#### [FRONT]

[YES]

#### [CENTER]

[YES]: Normally select this.

[NONE]: Select this if no center speaker is used.

#### [SURROUND]

[YES]: Normally select this.

[NONE]: Select this if no surround speakers are used.

**[SUBWOOFER]****[YES]****Note**

- When you change the [CONNECTION] setting, the [STANDARD] of [SPEAKER FORMATION] setting remains the same, but the other settings of [SPEAKER FORMATION] return to [STANDARD].

**■ [DISTANCE (FRONT)]**

Set the distance of the front and center speakers from the listening position.

For the best possible surround sound, place all speakers at the same distance from the listening position. The distance can be between 1.0 to 7.0 meters<sup>1)</sup> (3 to 23 ft) for the front speakers, and 0.0 to 7.0 meters<sup>2)</sup> (0 to 23 ft) for the center speaker.

If you cannot place the center speaker at the same distance, you can move the center speaker up to 1.6 meters closer to the listening position.

[L/R] 3.0 m/10 ft: Set the front speaker distance.

[CENTER] 3.0 m/10 ft: Set the center speaker distance.

<sup>1)</sup>0.9 to 6.9 meters for North American models.

<sup>2)</sup>0.0 to 6.9 meters for North American models.

**■ [DISTANCE (SURROUND)]**

Set the distance for the surround speakers from the listening position.

For the best possible surround sound, place all speakers at the same distance from the listening position. The distance can be between 1.0 to 7.0 meters\* (0 to 23 ft).

If you cannot place surround speakers at the same distance, you can move the surround speakers up to 5.0 meters (16 ft) closer to the listening position.

[L/R] 3.0 m/10 ft: Set the surround speaker distance.

\* 0.0 to 6.9 meters for North American models.

**Note**

- Depending on the input stream, the [DISTANCE] setting may not be effective.

**■ [LEVEL (FRONT)]**

You can adjust the sound level of the front speakers, center speaker, and subwoofer. You can set the parameters from -6.0 dB to 0 dB for [L/R], and from -6.0 dB to +6.0 dB for [CENTER] and [SUBWOOFER]. Be sure to set [TEST TONE] to [ON] for easy adjustment.

[L/R] 0.0 dB: Set the front speaker level.

[CENTER] 0.0 dB: Set the center speaker level.

[SUBWOOFER] +2.0 dB: Set the subwoofer level.

**■ [LEVEL (SURROUND)]**

You can adjust the sound level of the surround speakers. You can set the parameter from -6.0 dB to +6.0 dB. Set [TEST TONE] to [ON] for easy adjustment.

[L/R] 0.0 dB: Set the surround speaker level.

**■ [TEST TONE]**

You can adjust the sound level of the speakers by using the [TEST TONE] function.

[OFF]: The test tone is not emitted from the speakers.

[ON]: The test tone is emitted from each speaker in sequence while adjusting the level.

Adjust the sound level as follows.

- 1** Set the [TEST TONE] to [ON].
- 2** Press  $\leftarrow/\uparrow/\downarrow/\rightarrow$  repeatedly to select the desired speaker and the level, then press  $\oplus$ .
- 3** Repeat Step 2.
- 4** Press  $\leftarrow/\uparrow/\downarrow/\rightarrow$  to set [TEST TONE] to [OFF] after adjusting the speaker level.

# Precautions

## On power sources

- Unplug the unit from the wall outlet (mains) if you do not intend to use it for an extended period of time. To disconnect the cord, pull it out by the plug, never by the cord.

## On placement

- Place the system in a location with adequate ventilation to prevent heat build-up in the system.
- At high volume, over long periods of time, the cabinet becomes hot to the touch. This is not a malfunction. However, touching the cabinet should be avoided. Do not place the system in a confined space where ventilation is poor as this may cause overheating.
- Do not block the ventilation slots by putting anything on the system. The system is equipped with a high power amplifier. If the ventilation slots are blocked, the system can overheat and malfunction.
- Do not place the system on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
- Do not install the system near heat sources such as radiators, or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Do not install the system in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the system and discs away from components with strong magnets, such as microwave ovens, or large loudspeakers.
- Do not place heavy objects on the system.

## On operation

- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the unit. Should this occur, the system may not operate properly. In this case, remove the disc and leave the system turned on for about half an hour until the moisture evaporates.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.

## On adjusting volume

- Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is suddenly played.

## On cleaning

- Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.  
If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

## On cleaning discs, disc/lens cleaners

- **Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction.**

## On your TV's color

- If the speakers should cause your TV screen to have color irregularity, turn off the TV then turn it on after 15 to 30 minutes. If color irregularity should persist, place the speakers further away from your TV set.

### IMPORTANT NOTICE

Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

## On moving the system

- Before moving the system, make sure that there is no disc inserted, and remove the AC power cord (mains lead) from the wall outlet (mains).

## Notes about the Discs

### On handling discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface.
- Do not stick paper or tape on the disc.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.

### On cleaning

- Before playing, clean the disc with a cleaning cloth.

Wipe the disc from the center out.



- Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.

This system can only play a standard circular disc. Using neither standard nor circular discs (e.g., card, heart, or star shape) may cause a malfunction.

Do not use a disc that has a commercially available accessory attached, such as a label or ring.

# Troubleshooting

If you experience any of the following difficulties while using the system, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

Note that if service personnel changes some parts during repair, these parts may be retained.

When you install the S-AIR sub unit (not supplied), in the event of a problem with the S-AIR function, have a Sony dealer check the entire system together (main unit and S-AIR sub unit). (DAV-DZ810 only)

## General

Symptom	Problems and solutions
The power is not turned on.	<ul style="list-style-type: none"><li>• Check that the AC power cord (mains lead) is connected securely.</li></ul>
The remote does not function.	<ul style="list-style-type: none"><li>• The distance between the remote and the unit is too far.</li><li>• The batteries in the remote are weak.</li></ul>
The system does not work normally.	<ul style="list-style-type: none"><li>• Disconnect the AC power cord (mains lead) from the wall outlet (mains), then reconnect after several minutes.</li><li>• Perform the following procedure. (Note that the system parameters, such as preset stations, return to the default settings.)<ol style="list-style-type: none"><li>① Press <b>I/⏻</b> to turn on the system.</li><li>② Press <b>▶</b>, <b>FUNCTION</b>, and <b>I/⏻</b> on the unit at the same time. "COLD RESET" appears in the front panel display.</li></ol></li></ul>
After performing [AUTO CALIBRATION], [NONE] appears in the [Measurement Complete.] display.	<ul style="list-style-type: none"><li>• Check the speaker connection (page 29).</li><li>• Do not install the speaker in another room.</li></ul>

## Picture

Symptom	Problems and solutions
There is no picture.	<ul style="list-style-type: none"><li>• The video input on your TV is not set so that you can view pictures from the system.</li><li>• Check the output method on your system.</li></ul>
There is no picture when you make an HDMI cable connection.	<ul style="list-style-type: none"><li>• The unit is connected to an input device that is not HDCP (High-bandwidth Digital Content Protection) compliant ("HDMI" on the front panel does not light up).</li><li>• If the HDMI OUT jack is used for video output, change the type of video signal output from the HDMI OUT jack (page 72). Connect your TV and the unit using a video jack other than HDMI OUT, and switch your TV's input to the connected video input so that you can see the on-screen displays. Change the type of video signal output from the HDMI OUT jack, and switch your TV's input back to HDMI. If the picture still does not appear, repeat the Steps and try other options.</li></ul>



Symptom	Problems and solutions
There is no picture when you make a component video cable connection.	<ul style="list-style-type: none"> <li>You have set progressive format but your TV cannot accept the signal in progressive format. In this case, return the setting to interlace format (the default setting) (pages 36, 71).</li> <li>You have set [PROGRESSIVE (COMPONENT OUT)] in [VIDEO SETUP] to [ON] (page 71) even though your TV cannot accept the progressive signal. In this case, disconnect the HDMI cable from the unit and then set to [OFF].</li> <li>Even if your TV is compatible with progressive format (525p/625p) signals, the image may be affected when you set progressive format. In this case, return the setting to interlace format (the default setting) (pages 36, 71).</li> </ul>
Picture noise appears.	<ul style="list-style-type: none"> <li>If the picture output from your system goes through your VCR to get to your TV, the copy-protection signal applied to some DVD programs could affect picture quality. Connect the unit directly to your TV.</li> </ul>
An image is not displayed on the entire TV screen.	<ul style="list-style-type: none"> <li>Check the setting of [TV TYPE] in [VIDEO SETUP] (page 71).</li> <li>The aspect ratio on the disc is fixed.</li> </ul>
Color irregularity occurs on the TV screen.	<p>The system's speakers contain magnet parts, so magnetic distortion may occur. When color irregularity occurs on the TV screen, check the following items.</p> <ul style="list-style-type: none"> <li>Install the speakers at least 0.3 meters (1.0 ft) from your TV set.</li> <li>If the color irregularity persists, turn off your TV set once, then turn it on after 15 to 30 minutes.</li> <li>Make sure that no magnetic object (magnetic latch on a TV stand, health care device, toy, etc.) is placed near the speakers.</li> <li>Reposition the speakers farther away from your TV set.</li> </ul>
Playback picture becomes distorted.	<ul style="list-style-type: none"> <li>Set [YCbCr] in [YCbCr/RGB (HDMI)] to [RGB] (page 73).</li> </ul>

## Sound

Symptom	Problems and solutions
There is no sound.	<ul style="list-style-type: none"> <li>The speaker cord is not connected securely.</li> <li>Check the speaker settings (page 76).</li> </ul>
There is no sound when the component (digital satellite receiver, PlayStation 3, etc.) is connected directly to your TV via HDMI.	<ul style="list-style-type: none"> <li>Check the following status. <ul style="list-style-type: none"> <li>Connect an audio cable from the AUDIO OUT (audio out) jack of your TV to the system (page 30) and select the "TV" function.</li> <li>Disable your TV's speakers.</li> </ul> </li> </ul>
There is no sound from the DIGITAL IN OPTICAL jack (DAV-DZ510/DAV-DZ610/DAV-DZ810 only).	<ul style="list-style-type: none"> <li>The sampling frequency of the input stream is more than 48 kHz.</li> </ul>
There is no digital sound from the HDMI OUT jack when using the Audio Return Channel function.	<ul style="list-style-type: none"> <li>Set [AUDIO RETURN CHANNEL] in [HDMI SETUP] to [AUTO] (page 73).</li> <li>Set [CONTROL FOR HDMI] in [HDMI SETUP] to [ON] (page 72).</li> <li>Make sure that your TV is compatible with the Audio Return Channel function.</li> <li>Make sure that an HDMI cable is connected to a jack on your TV that is compatible with the Audio Return Channel function.</li> <li>The sampling frequency of the input stream is more than 48 kHz.</li> </ul>
The system does not output sound correctly when connected to a set-top box.	<ul style="list-style-type: none"> <li>Set [AUDIO RETURN CHANNEL] in [HDMI SETUP] to [OFF] (page 73).</li> </ul>
Severe hum or noise is heard.	<ul style="list-style-type: none"> <li>Move your TV away from the audio components.</li> <li>Clean the disc.</li> </ul>

Symptom	Problems and solutions
The sound loses stereo effect when you play a VIDEO CD, a CD, or an audio file.	<ul style="list-style-type: none"> <li>• Select stereo sound by pressing AUDIO (page 42).</li> </ul>
There is no sound or the volume level is very low from a certain speaker or all the speakers.	<ul style="list-style-type: none"> <li>• Check the surround setting (page 55).</li> <li>• Check the speaker connections and settings (pages 29, 76).</li> <li>• Depending on the DVD, the output signal may not be the entire 5.1 channel.</li> <li>• A 2 channel source is being played.</li> <li>• Check the wireless setting (page 60).</li> </ul>
The sound comes from the center speaker only.	<ul style="list-style-type: none"> <li>• Depending on the disc, the sound may come from the center speaker only.</li> </ul>
There is no system sound from your TV.	<ul style="list-style-type: none"> <li>• Set [AUDIO (HDMI)] in [HDMI SETUP] to [ON] (page 73).</li> <li>• The HDMI OUT jack does not output Super Audio CD sound.</li> <li>• Perform the following procedure. <ol style="list-style-type: none"> <li>① Turn the system off and on again.</li> <li>② Turn the connected component off and on again.</li> <li>③ Disconnect and then connect the HDMI cable again.</li> </ol> </li> </ul>
The sound of files played from a DATA CD/DATA DVD/USB device is distorted.	<ul style="list-style-type: none"> <li>• The bit rate used when encoding the audio files was low. Transfer audio files encoded with higher bit rates onto the DATA CD/DATA DVD/USB device.</li> </ul>
There is noise or the sound skips while playing a USB device.	<ul style="list-style-type: none"> <li>• Copy the files to your computer, format the USB device in FAT12, FAT16, or FAT32 format, and transfer the files to the USB device again.</li> </ul>

## Disc playback

Symptom	Problems and solutions
A disc does not play.	<ul style="list-style-type: none"> <li>• The region code on the DVD does not match the system.</li> <li>• Moisture has condensed inside the unit and may cause damage to the lenses. Remove the disc and leave the unit turned on for about half an hour.</li> </ul>
The language for the sound track or subtitle cannot be changed.	<ul style="list-style-type: none"> <li>• Set the language via the disc's menu.</li> </ul>
A disc does not start playing from the beginning.	<ul style="list-style-type: none"> <li>• While in stop mode, press <b>■</b> on the unit or the remote and then start playback (page 41).</li> </ul>
A DATA CD/DATA DVD cannot be played.	<ul style="list-style-type: none"> <li>• The DATA CD is not recorded in ISO 9660 Level 1/Level 2, or Joliet.</li> <li>• The DATA DVD is not recorded in UDF (Universal Disk Format).</li> </ul>
A file cannot be played.	<ul style="list-style-type: none"> <li>• The extension of the file name or file format is not correct. See "Playable Discs/Files on a USB Device" (page 5).</li> <li>• Check the [MEDIA] setting (page 40).</li> <li>• The system can play to a depth of 8 folders only.</li> <li>• Check that the number of folders is 200 or less.</li> <li>• Check that the number of audio files/JPEG image files in the folder is 150 or less.</li> </ul>
A JPEG image file cannot be viewed.	<ul style="list-style-type: none"> <li>• The JPEG image file is larger than 3,072 (width) × 2,048 (height) pixels in normal format, or more than 2,000,000 pixels in progressive format which is mainly used on Internet Web sites.</li> </ul>
A video file cannot be played.	<ul style="list-style-type: none"> <li>• The video file is larger than 720 (width) × 576 (height).</li> </ul>
The titles of folders/files/file names are not displayed correctly.	<ul style="list-style-type: none"> <li>• The system can only display numbers and letters of the alphabet. Other characters are displayed as [ _ ].</li> </ul>

Symptom	Problems and solutions
File names are not displayed properly.	<ul style="list-style-type: none"> <li>The character codes that can be displayed by this system are numbers and letters of the alphabet only. Other characters are not displayed correctly.</li> </ul>

## USB playback

Symptom	Problems and solutions
A USB device does not start playing from the beginning.	<ul style="list-style-type: none"> <li>While in stop mode, press <b>■</b> on the unit or the remote and then start playback (page 41).</li> </ul>
A USB device cannot be played.	<ul style="list-style-type: none"> <li>USB devices formatted with file systems other than FAT12, FAT16, or FAT32 are unsupported.*               <ul style="list-style-type: none"> <li>* This system supports FAT12, FAT16, and FAT32, but some USB devices may not support all of these. For details, refer to the operating instructions of the USB device or contact the manufacturer.</li> </ul> </li> <li>If you use a partitioned USB device, only audio files on the first partition can be played.</li> </ul>
A file cannot be played.	<ul style="list-style-type: none"> <li>The extension of the file name or file format is not correct. See “Playable Discs/Files on a USB Device” (page 5).</li> <li>Check the [MEDIA] setting (page 40).</li> <li>The system can play to a depth of 8 folders only.</li> <li>Check that the number of folders is 200 or less.</li> <li>Check that the number of audio files/JPEG image files in the folder is 150 or less.</li> <li>Files that are encrypted or protected by passwords, etc. cannot be played.</li> </ul>
A JPEG image file cannot be viewed.	<ul style="list-style-type: none"> <li>The JPEG image file is larger than 3,072 (width) × 2,048 (height) pixels in normal format, or more than 2,000,000 pixels in progressive format which is mainly used on Internet Web sites.</li> </ul>
A video file cannot be played.	<ul style="list-style-type: none"> <li>The video file is larger than 720 (width) × 576 (height).</li> </ul>
A WMA file cannot be played.	<ul style="list-style-type: none"> <li>A WMA file that is in WMA DRM, WMA Lossless, or WMA PRO format cannot be played.</li> </ul>
An AAC file cannot be played.	<ul style="list-style-type: none"> <li>An AAC file that is in AAC DRM or AAC Lossless format cannot be played.</li> </ul>
The titles of folders/files/file names are not displayed correctly.	<ul style="list-style-type: none"> <li>The system can only display numbers and letters of the alphabet. Other characters are displayed as [ _ ].</li> </ul>
File names are not displayed properly.	<ul style="list-style-type: none"> <li>The character codes that can be displayed by this system are numbers and letters of the alphabet only. Other characters are not displayed correctly.</li> </ul>
It takes time until playback starts.	<ul style="list-style-type: none"> <li>After the system reads all files on the USB device, playback may take more time than usual if:               <ul style="list-style-type: none"> <li>there are many folders or files on the USB device.</li> <li>the folder or file organization structure is very complex.</li> <li>the memory capacity is very large.</li> <li>the file size is extremely large.</li> <li>the internal memory is fragmented.</li> </ul> </li> <li>The system is playing an audio file in AAC format.</li> </ul>
A USB device which has been used on another device does not work.	<ul style="list-style-type: none"> <li>It may be recorded in an unsupported format. If so, first take the precaution of backing up important files on the USB device by copying them to your computer hard disk. Next, format the USB device in FAT12, FAT16, or FAT32 format, and transfer the files to the USB device again.</li> </ul>

## Audio track/file transfer

Symptom	Problems and solutions
You cannot start transferring onto a USB device.	<ul style="list-style-type: none"><li>• The following problems may have occurred.<ul style="list-style-type: none"><li>– The USB device is full.</li><li>– The number of audio files and folders on the USB device has reached the upper limit.</li><li>– The USB device is write-protected.</li></ul></li></ul>
Transferring stops before it is finished.	<ul style="list-style-type: none"><li>• The communication speed of the USB device is extremely slow. Connect a USB device that this system can play.</li><li>• If the transferring and erasing operations are repeated multiple times, the file structure within the USB device becomes complex. Follow the procedure in the operating instructions of the USB device to format the USB device. If the problem persists, contact your nearest Sony dealer.</li><li>• The USB device is full.</li><li>• The number of audio files and folders on the USB device has reached the upper limit.</li></ul>
Transferring to a USB device results in an error. Audio files or folders on the USB device cannot be erased.	<ul style="list-style-type: none"><li>• The USB device was disconnected or the power was turned off during erasing. Delete the partially-erased file. If this does not fix the problem, the USB device may be broken. Follow the procedure in the operating instructions of the USB device to format the USB device. If the problem persists, contact your nearest Sony dealer.</li><li>• Check if the USB device is write-protected.</li></ul>

## Tuner

Symptom	Problems and solutions
Radio stations cannot be tuned in.	<ul style="list-style-type: none"><li>• Check that the antenna (aerial) is connected securely. Adjust the antenna (aerial) or connect an external antenna (aerial) if necessary.</li><li>• The signal strength of the stations is too weak (when tuning in with automatic tuning). Use direct tuning.</li></ul>
FM reception is poor.	<ul style="list-style-type: none"><li>• Use a 75-ohm coaxial cable (not supplied) to connect the unit to an outdoor FM antenna (aerial).</li></ul>

## S-AIR

### (DAV-DZ810 only)

Symptom	Problems and solutions
There is no sound or noise is heard from the S-AIR sub unit, or sound skips.	<ul style="list-style-type: none"><li>• If you use another S-AIR main unit, place it more than 8 m (about 25 feet) away from the other S-AIR main unit you are using.</li><li>• Place the S-AIR main unit and S-AIR sub unit closer together.</li><li>• Avoid use of equipment that generates electromagnetic energy, such as a microwave oven.</li><li>• Place the S-AIR main unit and S-AIR sub unit away from other wireless devices.</li><li>• See “If wireless transmission is unstable” (page 63).</li><li>• Change the S-AIR ID settings of the S-AIR main unit and S-AIR sub unit.</li><li>• Turn off the system and S-AIR sub unit, then turn them on.</li></ul>
The S-AIR function on the system menu cannot be operated.	<ul style="list-style-type: none"><li>• Check that the wireless transceiver is inserted into the unit correctly (page 60).</li></ul>

 

 
## Control for HDMI

Symptom	Problems and solutions
The Control for HDMI function does not work.	<ul style="list-style-type: none"> <li>• Set [CONTROL FOR HDMI] in [HDMI SETUP] to [ON] (page 72).</li> <li>• Make sure that the connected component is compatible with the [CONTROL FOR HDMI] function.</li> <li>• Check the connected component's setting for the Control for HDMI function. Refer to the operating instructions of the component.</li> <li>• If you change the HDMI connection, connect and disconnect the AC power cord (mains lead), or have a power failure, set [CONTROL FOR HDMI] in [HDMI SETUP] to [OFF], then set to [ON] (page 72).</li> <li>• For details, see "Using the Control for HDMI Function for "BRAVIA" Sync" (page 58).</li> </ul>
No sound is output from the system and TV while using the System Audio Control function.	<ul style="list-style-type: none"> <li>• Make sure that the connected TV is compatible with the System Audio Control function.</li> <li>• For details, see "Using the Control for HDMI Function for "BRAVIA" Sync" (page 58).</li> </ul>

## Karaoke

Symptom	Problems and solutions
Microphone sound is not output.	<ul style="list-style-type: none"> <li>• Set the karaoke mode to on (page 47).</li> <li>• Connect the microphone to the unit properly.</li> <li>• Connect a monaural dynamic microphone.</li> </ul>


## Messages

Symptom	Problems and solutions
"PROTECTOR" and "PUSH POWER" appear alternately.	<ul style="list-style-type: none"> <li>• Press  to turn off the system, and check the following items after "STANDBY" disappears. <ul style="list-style-type: none"> <li>– Are the + and – speaker cords short-circuited?</li> <li>– Is anything blocking the ventilation holes of the system?</li> <li>– After checking the above items and fixing any problems, turn on the system. If the cause of the problem cannot be found even after checking all the above items, consult your nearest Sony dealer.</li> </ul> </li> </ul>
"OVERLOAD," "REMOVE USB," then "PUSH POWER" appear.	<ul style="list-style-type: none"> <li>• A problem has been detected with the level of electrical current from the  (USB) port. Turn off the system and remove the USB device from the  (USB) port. Make sure there is no problem with the USB device. If this display pattern persists, contact your nearest Sony dealer.</li> </ul>
"LOCKED" appears and a disc cannot be ejected.	<ul style="list-style-type: none"> <li>• Contact your Sony dealer or local authorized Sony service facility.</li> </ul>
"DATA ERROR" appears.	<ul style="list-style-type: none"> <li>• The file you want to play is broken.</li> <li>• The file format does not match the extension of the file name. See "Playable Discs/Files on a USB Device" (page 5).</li> <li>• The JPEG image file format does not conform to DCF.</li> </ul>
"READING" is displayed for a long time while playing.	<ul style="list-style-type: none"> <li>• The reading process can take a long time if: <ul style="list-style-type: none"> <li>– there are many folders or files on the USB device.</li> <li>– the folder or file organization structure is very complex.</li> <li>– the memory capacity is very large.</li> <li>– the internal memory is fragmented.</li> </ul> </li> </ul>

## Self-diagnosis Function

### (When letters/numbers appear in the display)

When the self-diagnosis function is activated to prevent the system from malfunctioning, a 5-character service number (e.g., C 13 50) with a combination of a letter and 4 digits appears on the TV screen or front panel display. In this case, check the following table.

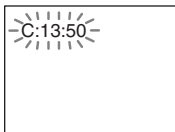

First 3 characters of the service number	Cause and/or corrective action
C 13	The disc is dirty. ➔ Clean the disc with a soft cloth (page 79).
E XX (XX is a number)	To prevent a malfunction, the system has performed the self-diagnosis function. ➔ Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10

### When the version number appears on the TV screen

When you turn on the system, the version number [VER.X.XX] (X is a number) may appear on the TV screen. Although this is not a malfunction and for Sony service use only, normal system operation will not be possible. Turn off the system, and then turn on the system again to operate.



## Specifications

### Amplifier Section

#### DAV-DZ310

POWER OUTPUT (rated):

Front L + Front R 108 W + 108 W (at 3 ohms, 1 kHz, 1% THD)

POWER OUTPUT (reference):

Front L/Front R/Center/  
Surround L/Surround R:  
142 watts (per channel at 3 ohms, 1 kHz)  
Subwoofer: 140 watts (at 3 ohms, 80 Hz)

#### DAV-DZ510/DAV-DZ610/DAV-DZ810

POWER OUTPUT (rated):

Front L + Front R 108 W + 108 W (at 3 ohms, 1 kHz, 1% THD)

POWER OUTPUT (reference):

Front L/Front R/Center/  
Surround L/Surround R:  
167 watts (per channel at 3 ohms, 1 kHz)  
Subwoofer: 165 watts (at 3 ohms, 80 Hz)

Inputs (Analog)

TV (AUDIO IN)

Sensitivity: 450/250 mV

AUDIO IN

Sensitivity: 250/125 mV

MIC

Sensitivity: 1 mV

Inputs (Digital)

DAV-DZ310:

TV (Audio Return Channel)

Input Stream: Dolby  
Digital 5.1ch/DTS 5.1ch/  
Linear PCM 2ch  
(Sampling Frequency: less  
than 48 kHz)

DAV-DZ510/DAV-DZ610/DAV-DZ810:

TV (Audio Return Channel/OPTICAL IN)

Input Stream: Dolby  
Digital 5.1ch/DTS 5.1ch/  
Linear PCM 2ch  
(Sampling Frequency: less  
than 48 kHz)

### Super Audio CD/DVD System

Laser Diode Properties

Emission Duration:

Continuous

Laser Output: Less than  
44.6 μW

\* This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block with 7 mm aperture.

Signal format system  
Mexican and Latin American models:

NTSC  
NTSC/PAL

Other models:

## USB Section

⚡ (USB) port:  
Maximum current: 500 mA

## Tuner Section

System PLL quartz-locked digital synthesizer

Tuning range

North American models: 87.5 MHz - 108.0 MHz  
(100 kHz step)

Other models: 87.5 MHz - 108.0 MHz (50  
kHz step)

Antenna (aerial) FM wire antenna (aerial)

Antenna (aerial) terminals 75 ohms, unbalanced

Intermediate frequency 10.7 MHz

## Video Section

Outputs VIDEO: 1 Vp-p 75 ohms  
COMPONENT:  
Y: 1 Vp-p 75 ohms  
Pb/Cb, Pr/Cr: 0.7 Vp-p  
75 ohms  
HDMI OUT: Type A (19  
pin)

## Speakers

### Front

#### DAV-DZ310 (SS-TS102)

Speaker system Full range Bass reflex  
Speaker unit 65 mm cone type  
Rated impedance 3 ohms  
Dimensions (approx.) 103 mm × 194 mm × 100  
mm (speaker only: 103  
mm × 164 mm × 85 mm)  
(w/h/d)  
Mass (approx.) 0.6 kg

#### DAV-DZ510 (SS-TS106)

Speaker system Full range Bass reflex  
Speaker unit 65 mm cone type  
Rated impedance 3 ohms  
Dimensions (approx.) 103 mm × 225 mm × 82  
mm (w/h/d)  
Mass (approx.) 0.6 kg

#### DAV-DZ610 (SS-TS103)

Speaker system Full range Bass reflex  
Speaker unit 65 mm cone type  
Rated impedance 3 ohms  
Dimensions (approx.) 235 mm × 1,000 / 970 /  
940 / 910 mm × 235 mm  
(speaker only: 103 mm ×  
545 mm × 77 mm) (w/h/d)

Mass (approx.) 2.2 kg

#### DAV-DZ810 (SS-TS104)

Speaker system Full range Bass reflex  
Speaker unit 65 mm cone type  
Rated impedance 3 ohms  
Dimensions (approx.) 255 mm × 1,185 mm × 255  
mm (speaker only: 113  
mm × 645 mm × 77 mm)  
(w/h/d)  
Mass (approx.) 3.1 kg

#### Center (SS-CT101)

Speaker system Full range Bass reflex,  
Magnetically Shielded  
Speaker unit 65 mm cone type  
Rated impedance 3 ohms  
Dimensions (approx.) 265 mm × 94 mm × 70 mm  
(w/h/d)  
Mass (approx.) 0.6 kg

#### Surround

#### DAV-DZ310/DAV-DZ610 (SS-TS102)

Speaker system Full range Bass reflex  
Speaker unit 65 mm cone type  
Rated impedance 3 ohms  
Dimensions (approx.) 103 mm × 164 mm × 85  
mm (w/h/d)  
Mass (approx.) 0.5 kg

#### DAV-DZ510 (SS-TS106)

Speaker system Full range Bass reflex  
Speaker unit 65 mm cone type  
Rated impedance 3 ohms  
Dimensions (approx.) 103 mm × 225 mm × 82  
mm (w/h/d)  
Mass (approx.) 0.6 kg

#### DAV-DZ810 (SS-TS103)

Speaker system Full range Bass reflex  
Speaker unit 65 mm cone type  
Rated impedance 3 ohms  
Dimensions (approx.) 235 mm × 1,000 / 970 /  
940 / 910 mm × 235 mm  
(speaker only: 103 mm ×  
545 mm × 77 mm) (w/h/d)  
Mass (approx.) 2.2 kg

#### Subwoofer (SS-WS102)

Speaker system Subwoofer Bass reflex  
Speaker unit 180 mm cone type  
Rated impedance 3 ohms  
Dimensions (approx.) 225 mm × 395 mm × 315  
mm (w/h/d)  
Mass (approx.) 6.5 kg

## General

### Power requirements

North American and Mexican models:

120 V AC, 60 Hz

Taiwan models: 120 V AC, 50/60 Hz

Argentine models: 220 V - 240 V AC,  
50/60 Hz

Latin American models: 110 V - 240 V AC,  
50/60 Hz

Other models: 220 V - 240 V AC,  
50/60 Hz

### Power consumption

DAV-DZ310/DAV-DZ510/DAV-DZ610

On: 170 W

Standby: Taiwan models:

0.2 W\*, Other models:

0.25 W\*

DAV-DZ810

On: 175 W

Standby: 0.25 W\*

\* *Valid when the system is in the following status:*

– “*DEMO*” is set to “*OFF*.”

– [*CONTROL FOR HDMI*] is set to [*OFF*].

– “*S-AIR STBY*” is set to “*STBY OFF*.” (DAV-DZ810 only)

Dimensions (approx.) 430 mm × 66 mm × 385  
mm (w/h/d) incl.  
projecting parts

Mass (approx.) 4.4 kg

## Supported file format

### MP3 (MPEG 1 Audio Layer-3)

File Extension: mp3

Bitrate: 32 kbps - 320 kbps

Sampling frequencies: 32/44.1/48 kHz

### WMA (USB device only)

File Extension: wma

Bitrate: 48 kbps - 192 kbps

Sampling frequencies: 44.1 kHz

### AAC (USB device only)

File Extension: m4a

Bitrate: 48 kbps - 320 kbps

Sampling frequencies: 44.1 kHz

### DivX

File Extension: avi/divx

Video codec: DivX video

Bitrate: 10.08 Mbps (MAX)

Frame rate: 30 fps

Resolution: 720 × 576

Audio codec: MP3

### MPEG4

File format: MP4 File Format

File Extension: mp4/m4v

Video codec: MPEG4 Simple Profile  
(AVC is not compatible.)

Bitrate: 4 Mbps

Frame rate: 30 fps

Resolution: 720 × 576

Audio codec: AAC-LC (HE-AAC is not  
compatible.)

DRM: Not compatible

Design and specifications are subject to change  
without notice.

- Standby power consumption

Taiwan models: 0.2 W

Other models: 0.25 W

- Halogenated flame retardants are not used in the  
certain printed wiring boards.

- Over 85% power efficiency of amplifier block is  
achieved with the full digital amplifier, S-Master.



## Playback Priority of File Types

The table below describes the playback priority of file types under the [MEDIA] setting.

File type on a disc or USB device	[MEDIA] setting				
	[VIDEO]		[MUSIC/PHOTO]	[PHOTO]	[MUSIC]
	Disc	USB device	Disc	Disc/USB device	Disc/USB device
Video files only	Video files	Video files	Video files	Video files	Video files
JPEG image files only	JPEG image files	JPEG image files	JPEG image files	JPEG image files	JPEG image files
Audio files only	MP3 files	Audio files	MP3 files	Audio files*	Audio files*
Video files and JPEG image files	Video files	Video files	JPEG image files	JPEG image files	Video files
Video files and audio files	Video files	Video files	MP3 files	Audio files*	Audio files*
Audio files and JPEG image files	MP3 files and JPEG image files with slide show	Audio files	MP3 files and JPEG image files with slide show	JPEG image files	Audio files*
Video files, audio files, and JPEG image files	Video files	Video files	MP3 files and JPEG image files with slide show	JPEG image files	Audio files*

\* When using a disc, you can play MP3 files only.

## Language Code List

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1183	Irish	1347	Maori	1507	Samoaan
1028	Abkhazian	1186	Scots Gaelic	1349	Macedonian	1508	Shona
1032	Afrikaans	1194	Galician	1350	Malayalam	1509	Somali
1039	Amharic	1196	Guarani	1352	Mongolian	1511	Albanian
1044	Arabic	1203	Gujarati	1353	Moldavian	1512	Serbian
1045	Assamese	1209	Hausa	1356	Marathi	1513	Siswati
1051	Aymara	1217	Hindi	1357	Malay	1514	Sesotho
1052	Azerbaijani	1226	Croatian	1358	Maltese	1515	Sundanese
1053	Bashkir	1229	Hungarian	1363	Burmese	1516	Swedish
1057	Byelorussian	1233	Armenian	1365	Nauru	1517	Swahili
1059	Bulgarian	1235	Interlingua	1369	Nepali	1521	Tamil
1060	Bihari	1239	Interlingue	1376	Dutch	1525	Telugu
1061	Bislama	1245	Inupiak	1379	Norwegian	1527	Tajik
1066	Bengali;	1248	Indonesian	1393	Occitan	1528	Thai
	Bangla	1253	Icelandic	1403	(Afan)Oromo	1529	Tigrinya
1067	Tibetan	1254	Italian	1408	Oriya	1531	Turkmen
1070	Breton	1257	Hebrew	1417	Punjabi	1532	Tagalog
1079	Catalan	1261	Japanese	1428	Polish	1534	Setswana
1093	Corsican	1269	Yiddish	1435	Pashto;	1535	Tonga
1097	Czech	1283	Javanese		Pushto	1538	Turkish
1103	Welsh	1287	Georgian	1436	Portuguese	1539	Tsonga
1105	Danish	1297	Kazakh	1463	Quechua	1540	Tatar
1109	German	1298	Greenlandic	1481	Rhaeto-	1543	Twì
1130	Bhutani	1299	Cambodian		Romance	1557	Ukrainian
1142	Greek	1300	Kannada	1482	Kirundi	1564	Urdu
1144	English	1301	Korean	1483	Romanian	1572	Uzbek
1145	Esperanto	1305	Kashmiri	1489	Russian	1581	Vietnamese
1149	Spanish	1307	Kurdish	1491	Kinyarwanda	1587	Volapük
1150	Estonian	1311	Kirghiz	1495	Sanskrit	1613	Wolof
1151	Basque	1313	Latin	1498	Sindhi	1632	Xhosa
1157	Persian	1326	Lingala	1501	Sangho	1665	Yoruba
1165	Finnish	1327	Laothian	1502	Serbo-	1684	Chinese
1166	Fiji	1332	Lithuanian		Croatian	1697	Zulu
1171	Faroese	1334	Latvian;	1503	Singhalese		
1174	French		Lettish	1505	Slovak		
1181	Frisian	1345	Malagasy	1506	Slovenian	1703	Not specified

## Parental Control Area Code List

Code	Area	Code	Area	Code	Area	Code	Area
2044	Argentina	2165	Finland	2362	Mexico	2149	Spain
2047	Australia	2174	France	2376	Netherlands	2499	Sweden
2046	Austria	2109	Germany	2390	New Zealand	2086	Switzerland
2057	Belgium	2248	India	2379	Norway	2528	Thailand
2070	Brazil	2238	Indonesia	2427	Pakistan	2184	United
2079	Canada	2254	Italy	2424	Philippines		Kingdom
2090	Chile	2276	Japan	2436	Portugal		
2092	China	2304	Korea	2489	Russia		
2115	Denmark	2363	Malaysia	2501	Singapore		

# Index

## Numerics

4:3 OUTPUT 71

## A

A/V SYNC 67

ANGLE 42

ATTENUATE 67

AUDIO 71

AUDIO (HDMI) 73

AUDIO DRC 75

AUDIO RETURN CHANNEL  
73

AUDIO SETUP 73

AUTO CALIBRATION 74

AUTO STBY 69

## B

BACKGROUND 75

BLACK LEVEL 72

BLACK LEVEL

(COMPONENT OUT) 72

## C

COLOR SYSTEM (VIDEO  
CD) 72

CONTROL FOR HDMI 72

Control for HDMI 58

Control Menu 18

CUSTOM 70

## D

D. C. A. C. (Digital Cinema  
Auto Calibration) 74

DEMO 69

DIMMER 69

DivX® 8, 76

DUAL MONO 67

DVD's menu 43

DYNAMIC BASS 57

## E

EFFECT 46

## F

FM MODE 53

Front panel 12

Front panel display 13

## H

HDMI

YCbCr/RGB (HDMI) 73

HDMI RESOLUTION 72

HDMI SETUP 72

## I

INTERVAL 47

iPod 51

## J

JPEG RESOLUTION 73

## K

Karaoke 47

ECHO 48

Karaoke Pon 48

Key Control 48

Vocal Select 49

## L

Language Code List 90

LANGUAGE SETUP 70

## M

MEDIA 40, 47

MENU 70

Multi Session CD 7

MULTI-DISC RESUME 76

Multiplex broadcast sound 67

## N

NIGHT 57

## O

OSD 70

## P

PAIRING 62

PARENTAL CONTROL 75

PAUSE MODE 72

Playable discs 5

Program Play 44

PROGRESSIVE

(COMPONENT OUT) 71

## Q

Quick Setup 34

## R

Rear panel 14

Region code 7

Repeat Play 46

RESET 76

RF CHANGE 63

## S

S-AIR ID 61

S-AIR receiver 60

S-AIR STBY 62

SCREEN SAVER 75

SETUP 70

Shuffle Play 45

SLEEP 66, 67

SPEAKER FORMATION 73

SPEAKER SETUP 76

CONNECTION 76

DISTANCE 77

LEVEL 77

SUBTITLE 42, 71

Super Audio CD 44

Surround amplifier 60

SYSTEM MENU 53, 55, 61,  
62, 63, 67, 69

SYSTEM SETUP 75

## T

TEST TONE 77

TIME 42

TRACK SELECTION 75

TV TYPE 71

## V

VIDEO SETUP 71

VOLUME LIMIT 73



\* 4 1 6 5 4 8 6 1 2 \* (1)