



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SAMSUNG DVD-C550. You'll find the answers to all your questions on the SAMSUNG DVD-C550 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SAMSUNG DVD-C550
User guide SAMSUNG DVD-C550
Operating instructions SAMSUNG DVD-C550
Instructions for use SAMSUNG DVD-C550
Instruction manual SAMSUNG DVD-C550



[Your user manual](#)
[SAMSUNG DVD-C550](#)

Manual abstract:

Note - Discs which cannot be played with this player. CDGs play audio only, not graphics. DVD+RW, -RW (V mode) - The unit may not play certain CD-R, CD-RW and DVD-R due to the disc type or recording conditions. COPY PROTECTION Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Patents and other intellectual property rights owned by Rovi Corporation and other rights owners. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. POWER ON/OFF () Turn on/off and the player is turned on/off. Region Number Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play.

If the codes do not match, the disc will not play. the Region Number for this player is described on the rear panel of the player. DivX Certification DivX, DivX Certified, and associated logos are trademarks of DivXNetworks, Inc and are used under license. USB HOST (Only DVD-C550/ DVD-C550K) Connect digital still camera, MP3 player, memory stick, Card reader other removable storage devices. Turn it to the left or right to control the volume.

EZ VIEW Button Lets you easily adjust the aspect ratio of a picture according to the screen size of your TV (16:9 or 4:3). MARKER Button REPEAT Button Allows you to repeat play a title, chapter, track, or disc. REPEAT A-B Button Allows you to repeat play a chosen section (A-B) on a disc. SEARCH Buttons (/) Allows you to search forward/backward through a disc. Using component video cables, connect the COMPONENT VIDEO OUT terminal on the rear of the DVD player to the COMPONENT IN terminal of TV.

Turn on the DVD player and TV. 3. Press the input selector on your TV remote control until the Component signal from the DVD player appears on the TV screen. You can use the VIDEO SEL. Progressive scan has twice as many scanning lines as the interlace output method. Progressive scanning method can provide better and clearer picture quality. Using the HDMI-DVI/HDMI-HDMI cable , connect the HDMI OUT terminal on the rear of the DVD player to the DVI IN terminal of your TV. 1CH (Front L-R) on the rear of the DVD player to the AUDIO (red and white) IN terminals of your TV. Turn on the DVD player and TV. 3.

Press the input selector on your TV remote control until the DVI/HDMI signal from the DVD player appears on your TV screen. The second press allows you to change the HDMI output resolution. Depending on your TV, certain HDMI output resolutions may not work. please refer to the user's manual of your TV. If

HDMI or HDMI-DVI cable is plugged into TV, the DVD player's output is set to HDMI/DVI within 10 seconds. If you set the HDMI output resolution 720p, 1080p or 1080i, HDMI output provides better picture quality. If you connect an HDMI cable between Samsung TV and this DVD player, you can operate this DVD player using your TV remote control. This is only available with Samsung TVs that support Anynet+(HDMI-CEC). The following shows examples of connections commonly used to connect the DVD player with a TV and other components. Before Connecting the DVD Player - Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.

- Refer to the user's manual of the additional components you are connecting for more information on those particular components. Turn on the DVD player and TV. 3. Press the input selector on your TV remote control until the Video signal from the DVD player appears on the TV screen. Note - Noise may be generated if the audio cable is too close to the power cable.

- If you want to connect to an Amplifier , please refer to the Amplifier connection page. - The number and position of terminals can vary depending on your TV set. Button when DVD Player is in stop mode or no disc is inserted, the Video Output mode changes in the following sequence: (I-SCAN P-SCAN) HDMI (High Definition Multimedia Interface) HDMI is an interface to enable the digital transmission of video and audio data with just a single connector..



[Your user manual](#)
[SAMSUNG DVD-C550](#)