

3•2•1 GSX

DVD HOME ENTERTAINMENT SYSTEM



Owner's Guide




SAFETY INFORMATION

Please read this owner's guide

Please take the time to follow this owner's guide carefully. It will help you set up and operate your system properly, and enjoy all of its advanced features. Save your owner's guide for future reference.

-  **WARNING:** To reduce the risk of fire or electric shock, do not expose the system to rain or moisture.
-  **WARNING:** This apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on the apparatus. As with any electronic products, use care not to spill liquids in any part of the system. Liquids can cause a failure and/or a fire hazard.

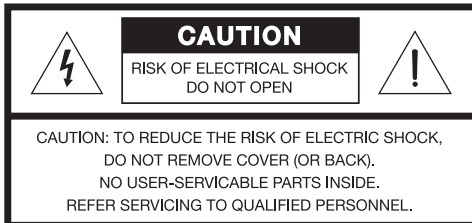



The CAUTION marks shown here are located on the bottom of your 3•2•1 GSX home entertainment system media center and the rear panel of the Acoustimass module:

 


The lightning flash with arrowhead symbol, within an equilateral triangle, alerts the user to the presence of uninsulated dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.




The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this owner's guide.

-  **CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, insert fully.
-  **CAUTION:** No naked flame sources, such as lighted candles, should be placed on the apparatus.



Class 1 laser product

The DVD player within the media center is classified as a CLASS 1 LASER PRODUCT according to EN60825-1:1994 + A1+A2, IEC60825-1:1993+A1+A2.

-  **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. The DVD player should not be adjusted or repaired by anyone except properly qualified service personnel.

Class B emissions limits

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.



Batteries

Please dispose of used batteries properly, following any local regulations. Do not incinerate.

Additional safety information

See the additional instructions on the *Important Safety Information* sheet enclosed in the shipping carton.

©2005 Bose Corporation. No part of this work may be reproduced, modified, distributed or otherwise used without prior written permission.

The distinctive design of the 3•2•1 media center is also a registered trademark of Bose Corporation.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. ©1992-1997 Dolby Laboratories. All rights reserved.

This product contains one or more programs protected under international and U.S. copyright laws as unpublished works. They are confidential and proprietary to Dolby Laboratories. Their reproduction or disclosure, in whole or in part, or the production of derivative works therefrom without the express permission of Dolby Laboratories is prohibited. Copyright 1992-1996 by Dolby Laboratories, Inc. All rights reserved.

MPEG Layer-3 audio compression technology licensed by Fraunhofer IIS and THOMSON multimedia.

"DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.

	INTRODUCTION	5
	SYSTEM SETUP	8
	SYSTEM CONTROLS AND INDICATORS	26
	OPERATION	35
	CHANGING SOURCE SETTINGS	48
	CHANGING SYSTEM OPTIONS	53
	MAINTAINING YOUR SYSTEM	64
	TROUBLESHOOTING	66
INTRODUCTION		5
Before you begin		5
System features		5
Introducing the uMusic™ intelligent playback system		5
Checking for region code compatibility		5
Selecting compatible discs		6
Glossary of terms		6
Limited warranty		7
SYSTEM SETUP		8
Unpacking		8
Selecting locations for your 3•2•1 GSX system components		9
Positioning the media center		9
Positioning the speakers		10
Positioning the Acoustimass® module		11
Making system connections		12
Connecting the Acoustimass module to the media center		12
Connecting the speakers to the Acoustimass module		12
Connecting the supplied antennas		14
Connecting cable FM radio		14
Connecting your TV to the media center		15
Making audio connections		15
Making composite video connections		15
Connecting your TV and VCR to the media center		16
Option A: TV (with audio output jacks) + VCR + media center		16
Option B: TV (NO audio output jacks) + VCR + media center		17
VCR considerations		18
Advanced setup options		18
Making S-video connections (higher quality video)		18
Making component video connections (highest quality video)		19
Connecting digital audio devices		20
Connecting your cable/satellite box, TV, and VCR to the media center		20
Connecting a game console		22
Installing the remote control batteries		23
Connecting the power cord		24
Verifying your system setup		25
SYSTEM CONTROLS AND INDICATORS		26
Remote control		26
Setting up your remote to control other audio/video devices		30
Direct entry of a device code		30
Searching for a device code		31
Verifying an entered device code		33
Changing channel selection control		33
Media center		34

OPERATION	35
Turning your system on and off	35
Playing video DVDs	35
Basic DVD operations	36
Restricting access to video DVDs	36
Playing audio CDs	37
Listening to FM/AM radio	38
Tuning to a station	38
Storing stations as presets	38
Erasing a preset	38
Using the uMusic™ intelligent playback system	39
Storing CDs	39
Playing stored music	40
Rating your music	42
Stored music play modes	42
Repeat and shuffle functions	42
Deleting stored tracks	43
Using uMusic presets	43
Using the Playlist	45
Searching through your music library	46
Registering your system for music information updates	47
CHANGING SOURCE SETTINGS	48
Using the settings menus	48
Stored CD settings menu	50
FM/AM settings menu	50
CD settings menu	50
DVD settings menu	51
TV, CBL-SAT, and AUX settings menu	52
CHANGING SYSTEM OPTIONS	53
Using the System menu	53
Stored CD options	54
Audio options	58
Video options	59
Media center options	60
Remote control options	61
DVD Lock options	62
MAINTAINING YOUR SYSTEM	64
Cleaning	64
Replacing the remote control batteries	65
Accessories	65
TROUBLESHOOTING	66
Troubleshooting table	66
Customer service	67
TECHNICAL INFORMATION	68
END USER LICENSE AGREEMENT	69
DEVICE CODES	A-1

Before you begin

Thank you for purchasing the 3•2•1 GSX DVD home entertainment system, which offers superb sound, elegance, and simplicity in an advanced home audio setup. Using Bose® proprietary signal processing technology, the 3•2•1 GSX system provides improved spaciousness from stereo recordings, and bold movie effects from surround-encoded materials. Yet its few parts require little effort to set up, so you can enjoy your new system's performance right away.

The following items are included to help you set up your system:

- Quick Setup Guide
- Detailed setup instructions in Setup section of this guide
- Setup DVD

System features

- Integrated AM/FM tuner and DVD/CD player in a small media center
- uMusic™ intelligent playback system for storing and playing your favorite songs
- Small, easy-to-place shelf speakers and an attractive hideaway Acoustimass® module
- Easy-to-use universal infrared remote control
- Media center input jacks for a TV, cable/satellite box or other component such as a DVR

Introducing the uMusic™ intelligent playback system

Your 3•2•1 GSX DVD home entertainment system includes the new uMusic intelligent playback system – a breakthrough Bose technology that makes it possible to store and enjoy your CD collection.


What can you do with this system?

- Store your favorite CDs in a music library. Your system can store approximately 200 hours of music or about 200 CDs.
- Teach the system which tracks your like or dislike, conditioning the system to automatically play the music you want to hear most.
- Discover many ways to enjoy your music.

Checking for region code compatibility




For a DVD player and DVD disc to be compatible, their region code numbers must match. These numbers are allocated according to where the player and disc are sold. The 3•2•1 GSX DVD home entertainment systems have a region code which must also match the DVD discs.


Check the region code number on the carton of the 3•2•1 GSX DVD home entertainment system or on the bottom of the media center that comes in the carton. Then be sure to choose only DVD discs that show the same region number on the disc label or front cover.

For example, a Region 1 DVD disc should display the following mark: 

Selecting compatible discs

The DVD/CD player built into the 3•2•1 GSX media center can play the following types of discs identified by their corresponding logos:

- Video DVD 
- Video CD 
- DVD+R, DVD-R, DVD+RW and DVD-RW
- Audio CD 
- CD-R and CD-R/W
- MP3 CDs, where
 - All tracks were burned in a single closed session
 - The disc format is ISO9660
 - Each file has a “.mp3” extension and the filename contains no other periods
- SACDs (CD-compatible content only)

 **Note:** *Regarding copy protection – Music and other content may be protected by international and domestic copyright laws and may contain specific restrictions on use and/or reproduction. Please respect the rights of the artists and other copyright holders.*

Glossary of terms


Aspect Ratio – The shape of the rectangular picture in a TV set. It is the width of the picture relative to the height. Our standard TV picture, in terminology used by that industry, is 4 units wide by 3 units high, or 4:3 (read as 4 by 3) in aspect ratio. There are currently two standard TV aspect ratios, 4:3 and 16:9.


Chapter – In DVD-Video, a division of a title.

Component Video – A video signal split into three parts: luminance and two color signals (marked as YPbPr). It provides the highest level of video quality.

Composite Video – A single video signal that contains luminance, color, and synchronization information. NTSC and PAL are examples of composite video systems.

Dolby Laboratories – Developer of a perceptual coding system for audio.

Dolby Digital  – A type of multi-channel surround sound format used on discs.

DTS  – A type of multi-channel surround sound format used on discs.

DVD – An acronym that is most commonly known to mean Digital Video Disc or Digital Versatile Disc. The audio/video/data storage system based on 12- and 8-cm optical discs.

DVD Video – A standard for storing and reproducing audio and video on DVD-ROM discs, based on MPEG video, Dolby Digital and MPEG audio, and other proprietary data formats.

Gracenote – Music recognition technology and related data provided as part of the service contracted by Bose.

IR – An acronym for infrared. Pertains to the type of remote that sends/receives commands on an infrared light beam.

MPEG – A type of data compression used for audio or video storage on disc.

MP3 – MPEG-1 Layer III audio. This is a compressed audio format that allows you to record many hours of music on a single CD.

NTSC – An acronym for National Television System Committee. The organization that developed both the American Black & White and Color television systems.

PAL – An acronym for Phase Alternate Line. A television format used extensively in Western Europe.

Progressive Scan – A video format which displays all lines of the picture frame in a single pass, and refreshes the TV image 30x/sec. Not compatible with all video displays.

PVR – An abbreviation for Personal Video Recording. Sometimes used interchangeably with DVR for Digital Video Recording, but may include non-digital technology, as used in VCRs.

RDS – A system that displays radio broadcast station and programming information. This feature is available on European systems only.

SACD – An abbreviation for Super Audio Compact Disc, used for high-resolution digital audio storage on CD-sized discs. New Bose® 3•2•1 GSX systems play the CD-compatible portion of such discs, identified by the CD disc logo on the front of the disc.

SCART – A type of jack commonly found on consumer electronics products manufactured for use in Western Europe.

S-video – A video interface standard that carries separate luminance and chrominance signals, usually on a four-pin mini-DIN connector. Also called Y/C. The quality of S-video is significantly better than composite video since it does not require a comb filter to separate the signals. Most high-end televisions have S-video inputs.

uMusic™ intelligent playback system – A revolutionary Bose play mode, which performs like a virtual DJ by noting listener preferences and playing suitable stored CD tracks in response.

Videostage® 5 – Bose proprietary Videostage 5 decoding circuitry gives you a five-channel surround sound experience from everything you listen to – VHS tapes, stereo CDs, even mono TV programs.

Limited warranty

Your 3•2•1 GSX DVD home entertainment system is covered by a limited transferable warranty. Details of the limited warranty are provided on the product registration card that came with your system. Please fill out the information section on the card and mail it to Bose. Failure to do so will not affect your limited warranty rights.

SYSTEM SETUP

Unpacking



Carefully unpack your system. Save all packing materials, which provide the safest way to transport your system. Check to be sure your system includes the parts shown in Figure 1.

If any part of the system appears damaged, do not attempt to use it. Notify Bose or your authorized Bose® dealer immediately. For Bose contact information, refer to the address sheet included in the carton.

WARNING: To avoid danger of suffocation, keep the plastic bags out of the reach of children.

Figure 1

Contents of the shipping carton

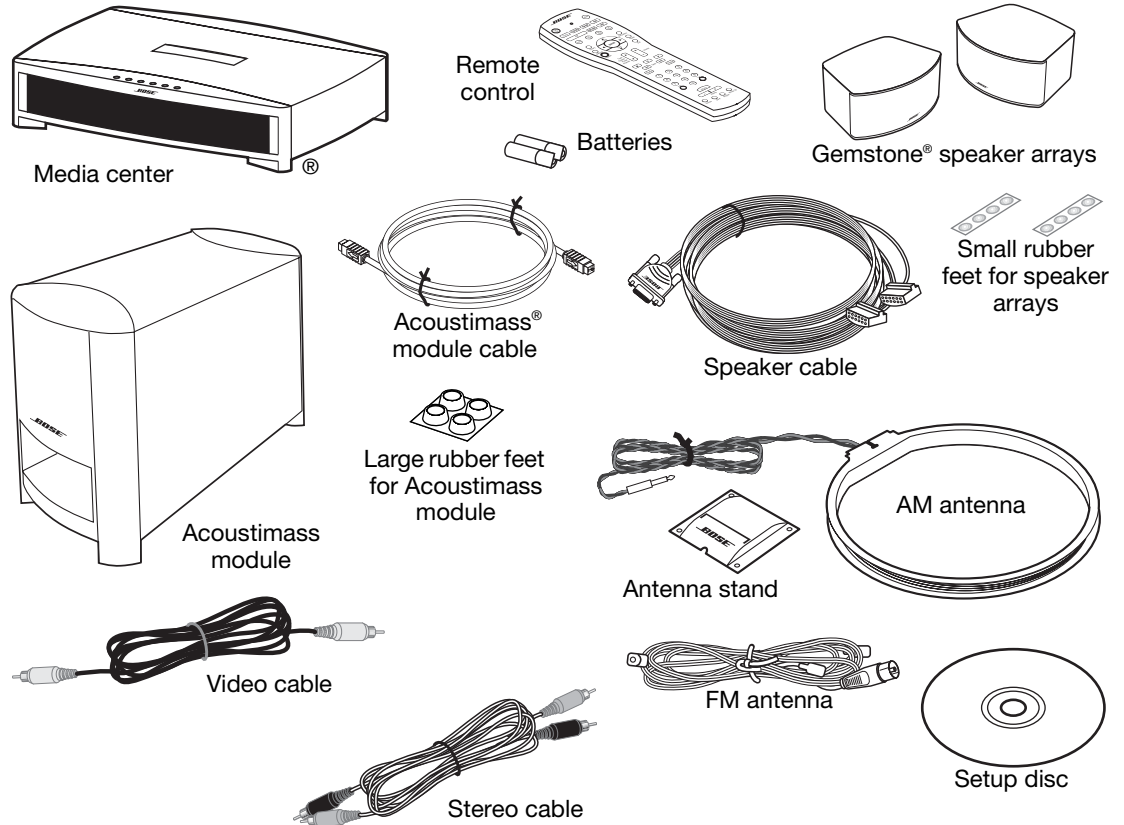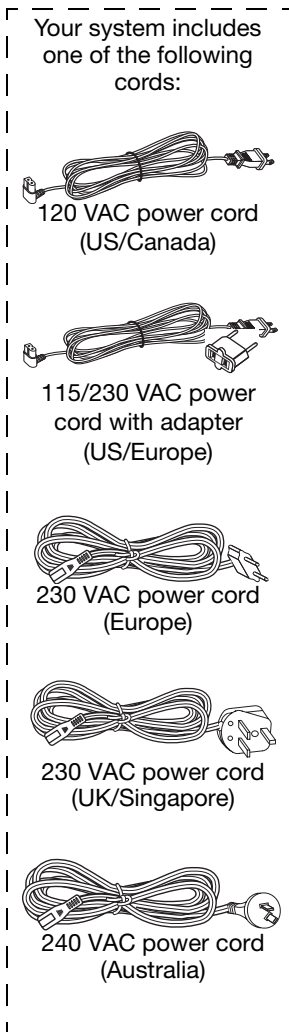

For your records

Now is a good time to find the serial numbers on the bottom of the media center and on the rear of the Acoustimass® module. Please record them here and on your Product Registration Card. You will need to have them ready if you ever need to contact Bose® Customer Service.

Media center serial number: _____

Acoustimass module serial number: _____

Dealer name: _____

Dealer phone: _____ Purchase date: _____

We suggest you keep your sales receipt and product registration together with this owner's guide.

Selecting locations for your 3•2•1 GSX system components

Use the following guidelines and Figure 2 to choose locations and positions for the components of your 3•2•1 GSX home entertainment system.

🎵 **Note:** While these guidelines are offered to help provide great system performance, you may find other placement choices that are more convenient and provide the sound you enjoy.


Positioning the media center

⚠️ **CAUTION:** Do not block any ventilation openings. For reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or cabinet that may keep air from flowing through its ventilation openings.

- Place the media center where nothing obstructs opening the disc tray on its front panel.
- Position the media center close enough to the Acoustimass® module and the speakers so that all the cables will reach.
- Make sure the media center is close enough to additional source devices (TV, VCR or cable box) so that all the cables will reach.
- Make sure that the front of the media center is unobstructed so that it may receive IR (infrared) commands from the remote control.

Figure 2

Sample media center and speaker placement

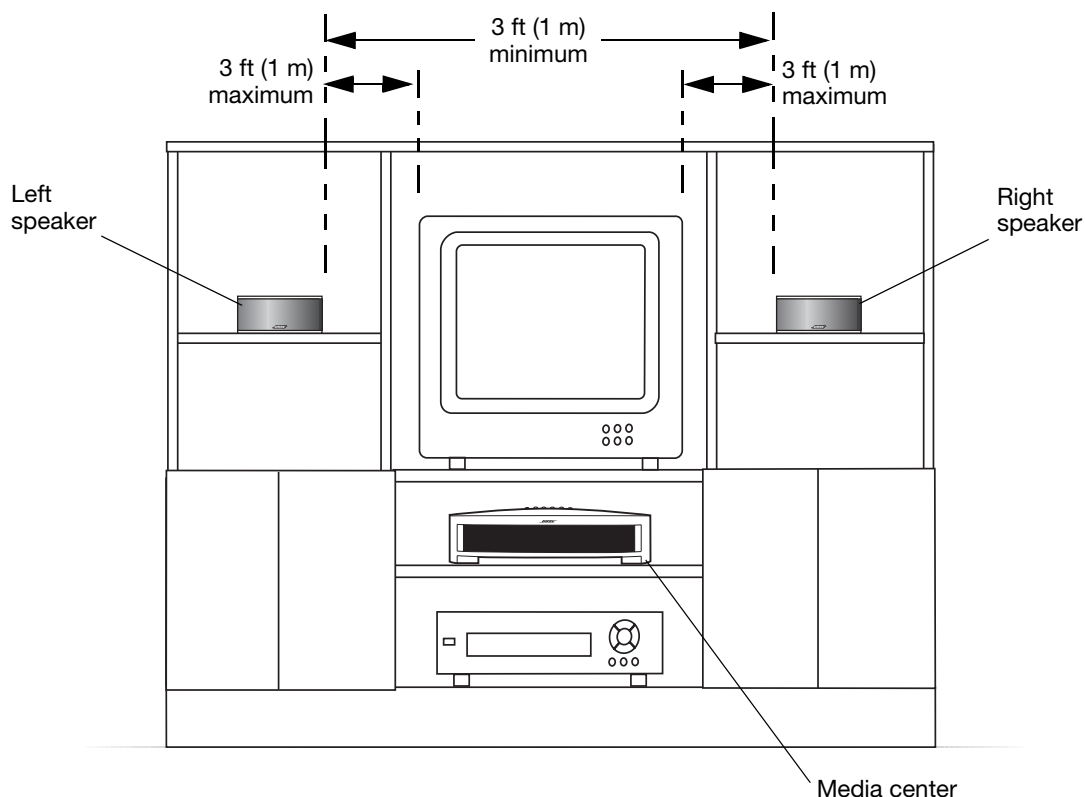

🎵 **Note:** The left and right speakers are magnetically shielded to prevent interference with your TV screen.

Positioning the speakers


Choosing a good location for the speakers will allow you to experience the audio surround effects that your 3•2•1 GSX home entertainment system is designed to deliver.

- Place the left and right speakers at least **3 feet (1 meter) apart from each other** to optimize the surround sound experience (Figure 3).
- Place each speaker **within 3 feet (1 meter) of the edge of the TV screen**. Placing the speakers more than 3 feet away from the TV can cause the sound to become separated from the picture.
- If you are using a bookshelf or a home entertainment unit, place each speaker at the **front edge** of its shelf. Positioning the speakers too far back in an enclosed space can change the overall quality of sound and alter the movie sound effects.

⚠ CAUTION: Choose a stable and level surface for both speakers. Vibration can cause the speakers to move, particularly on smooth surfaces like marble, glass, or highly polished wood. If you are placing the speakers on a flat surface, be sure to attach one set of the small rubber feet to the bottom surface of each speaker. You can obtain additional rubber feet (PN 178321) from Bose® Customer Service. To contact Bose, refer to the list of offices included in the product carton.

🎵 Note: The speakers can be mounted on Bose brackets, table stands, or floor stands. For ordering information, refer to “Accessories” on page 65. Additional or longer cables may also be ordered.

- Set the speakers on their bottom surfaces, only, with the Bose logo right-side up.

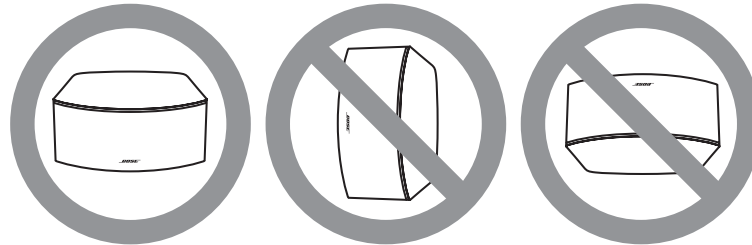

- Aim the speakers straight ahead into the listening area. Do not place the speakers at an angle. **Angling one or both speakers into or away from the listening area significantly alters system performance.**

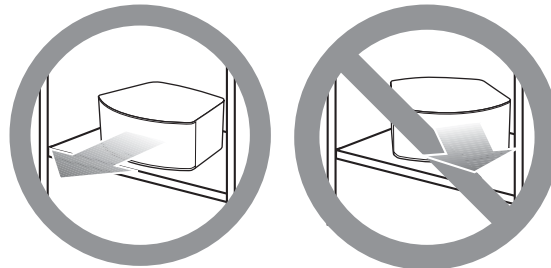


Figure 3


Recommended speaker placement

Positioning the Acoustimass® module

- Place the module at the same end of the room as the TV and the speakers (Figure 4).
- Keep the module at least 3 feet (1 meter) away from the TV to prevent the module from interfering with the TV screen.
- Place the Acoustimass module within reach of the cable from the music center and an AC (mains) power outlet.
- Choose a convenient location such as under a table, behind a sofa or chair, or behind drapes, but do not block the port opening.

Figure 4


Recommended
Acoustimass module
placement

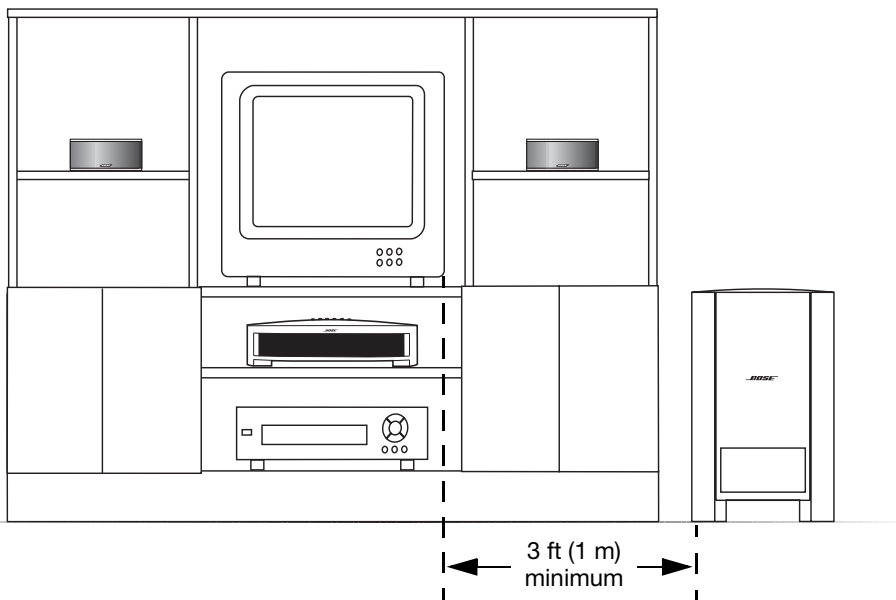

- Attach the large rubber feet to the bottom of each foot on the module. The rubber feet provide increased stability and protection from scratches.
- Aim the port of the module into the room or along the wall. This prevents a blocked port or over-powering bass.
- Stand the Acoustimass module on its feet. Do not lay it on its side or stand it on either end (Figure 5).

Figure 5

Recommended orientation
of the module

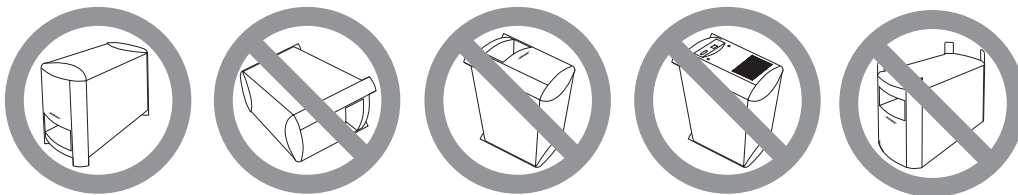

- CAUTION:** Do not block the openings on the back of the module, which provide ventilation for the built-in circuitry.
- CAUTION:** The Acoustimass module generates a magnetic field. Although this is not an immediate risk to your video tapes, audio tapes, and other magnetic media, you should not store any of these items directly on or near the module.

Making system connections

CAUTION: Do not plug the Acoustimass® module into an AC power (mains) outlet until all the components are connected.


Connecting the Acoustimass module to the media center

Plug one end of the Acoustimass module cable into the **Acoustimass Module** jack on the rear of the media center (Figure 6). Plug the other end of the cable into the input (⊖) jack on the rear of the Acoustimass module.

Note: The jacks for the Acoustimass module cable are keyed so that the cable connectors only plug in one way. Make sure that the arrow on the connector body faces up when plugging in the cable.

Figure 6

Acoustimass module-to-media center connection

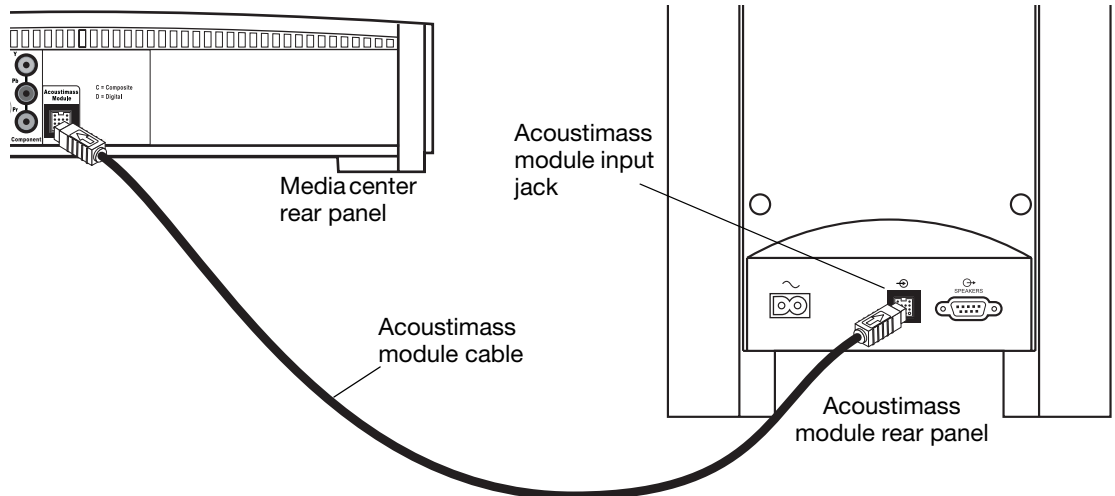


Connecting the speakers to the Acoustimass module

1. Insert the single-plug end of the speaker cable into the **SPEAKERS** jack on the rear panel of the Acoustimass module (Figure 7). Tighten both screws on the plug.

Figure 7

Speaker cable-to-Acoustimass module connection

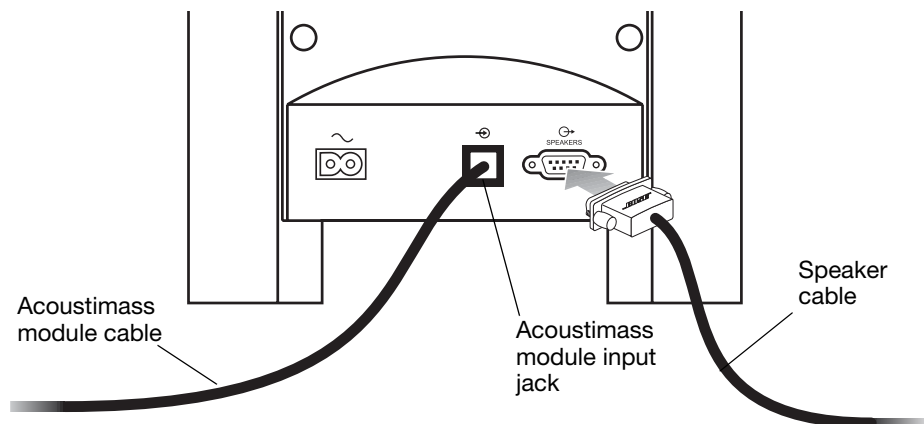


Note: If additional audio cables or longer cables are needed to make these connections, contact Bose Customer Service. Refer to the list of offices included in the product carton.

2. At the other end of the speaker cable, separate the left and right speaker cords as much as necessary to reach each speaker (Figure 8).

Figure 8


Separating left and right speaker cords

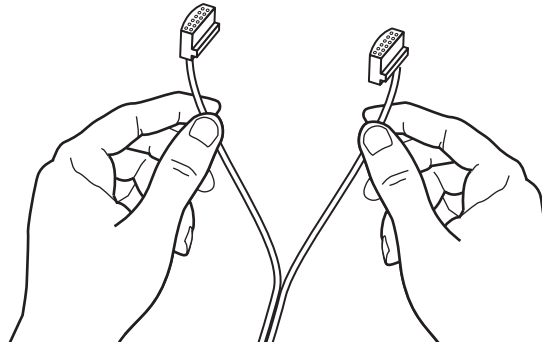

3. Plug the **LEFT** speaker cable into the rear jack of the left speaker (Figure 9). Plug the **RIGHT** speaker cable into the rear jack on the right speaker.

Figure 9

Left and right speaker connections

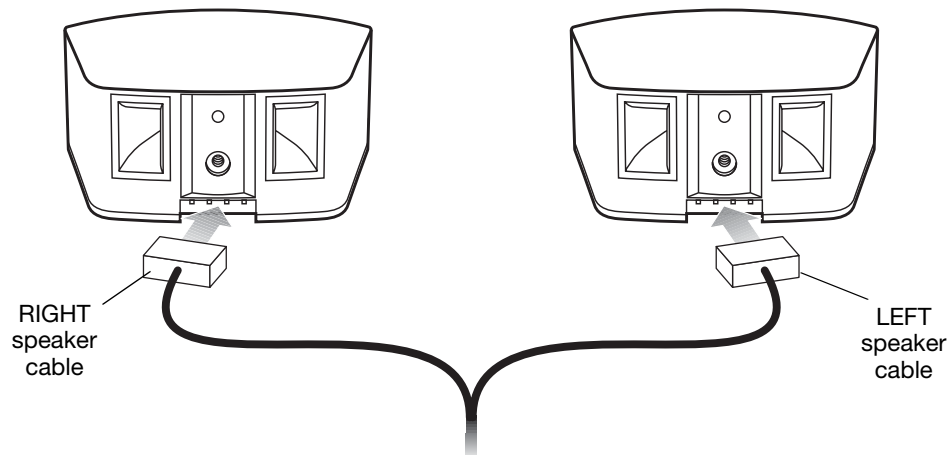

🎵 **Note:** Make sure cable connectors are fully inserted and seated firmly in the speaker jacks.


Connecting the supplied antennas

The rear panel of the media center provides jacks for the AM and FM antennas included with your system (Figure 10). Unwind the wires for each antenna to provide the best reception.

🎵 **Note:** An outdoor antenna may be used in place of the supplied indoor antennas. To add an outdoor antenna, consult a qualified installer. Follow all safety instructions supplied with the antenna.

Figure 10

Antenna connections

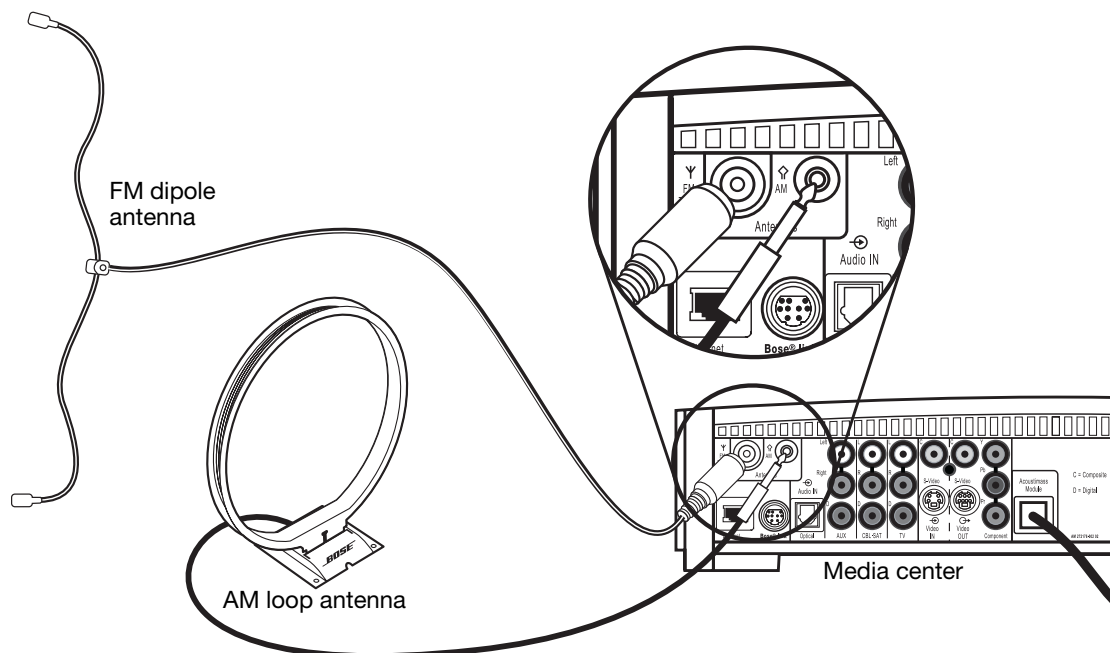

FM antenna

Plug the FM antenna into the **FM** jack on the media center rear panel. Spread out the antenna arms and move them around to establish optimum FM reception. Extend the antenna as far from the media center and other equipment as possible.

AM antenna

Plug the AM loop antenna into the **AM** jack on the media center rear panel. Place the antenna loop at least 20 inches (50 centimeters) away from the media center and at least 4 feet (1.2 meters) away from the Acoustimass® module. Experiment with positioning the loop for optimum AM reception. Follow the instructions enclosed with the AM loop antenna to stand it on the supplied base, or mount it to a wall.

Connecting cable FM radio

Some cable TV providers make FM radio signals available through the cable service to your home. This connection is made to the external FM jack on the back panel of the media center. To connect to this service, contact your cable TV provider for assistance.

🎵 **Note:** Make sure that the cable radio installation includes a TV/FM splitter so that only the FM radio band, not the cable TV band, is received by the media center. If necessary, contact your cable company.

Connecting your TV to the media center

If you want to use the 3•2•1 GSX system with both a TV and a VCR, skip this section and go to “Connecting your TV and VCR to the media center” on page 16.

Making audio connections

♪ **Note:** If your TV does not have audio output jacks, see “Option B: TV (NO audio output jacks) + VCR + media center” on page 17. Otherwise, continue.

1. Connect one end of the supplied stereo cable to the **TV Audio IN** jacks on the rear panel of the media center (Figure 11). Insert the white RCA plug into the **TV** white **L** jack. Insert the red RCA plug into the **TV** red **R** jack.
2. Connect the other end of the stereo cable to the audio output jacks on your TV. Insert the white RCA plug into the white **AUDIO OUT L** jack. Insert the red RCA plug into the red **AUDIO OUT R** jack.

Making composite video connections


♪ **Note:** Some older TVs with standard TV cable connectors do not have a composite video or an S-video input. Such TVs are not compatible with any DVD players and require use of an RF modulator for this connection. RF modulators are available at your local electronics store.

1. Insert one end of the supplied video cable (yellow) to the **Video OUT C** (composite) jack on the back of the media center (Figure 11).
2. Insert the other end of the video cable into one of the video input jacks on your TV.

Figure 11

TV (composite video)-to-media center connections

Write the name of the video input jack used on your TV in the box on page 25. After you turn the system on, you will need to select this video input on your TV in order to view the 3•2•1 GSX system video output.

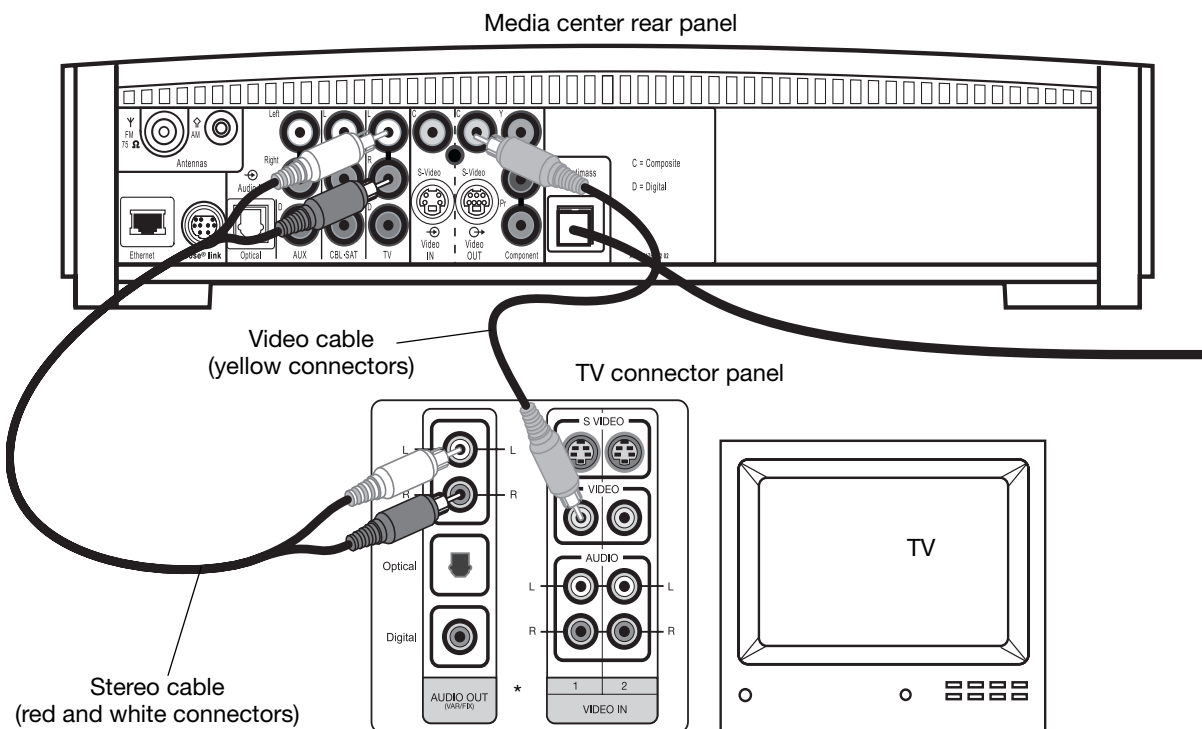

Connecting your TV and VCR to the media center

There are two options for connecting your TV and VCR to the media center.

- **Option A:** TV with audio output jacks+VCR
- **Option B:** TV *without* audio output jacks+VCR

Before proceeding, check your TV for audio output jacks.

Option A: TV (with audio output jacks) + VCR + media center


If your TV has audio output jacks, you can directly route the TV audio to the 3•2•1 GSX home entertainment system (Figure 12).

1. Connect one end of the supplied stereo cable to the **TV Audio IN** jacks on the rear panel of the media center. Insert the white RCA plug into the **TV white L** jack. Insert the red RCA plug into the **TV red R** jack.
2. Connect the other end of the stereo cable to the audio output jacks on your TV. Insert the white RCA plug into the white **AUDIO OUT L** jack. Insert the red RCA plug into the red **AUDIO OUT R** jack.
3. Insert one end of the supplied video cable (yellow) to the **Video OUT C** (composite) jack on the back of the media center. Insert the other end of the video cable into one of the video input jacks on your TV.

Figure 12

Option A connections

Write the name of the video input jack used on your TV in the box on page 25. After you turn the system on, you will need to select this video input on your TV in order to view the 3•2•1 GSX system video output.

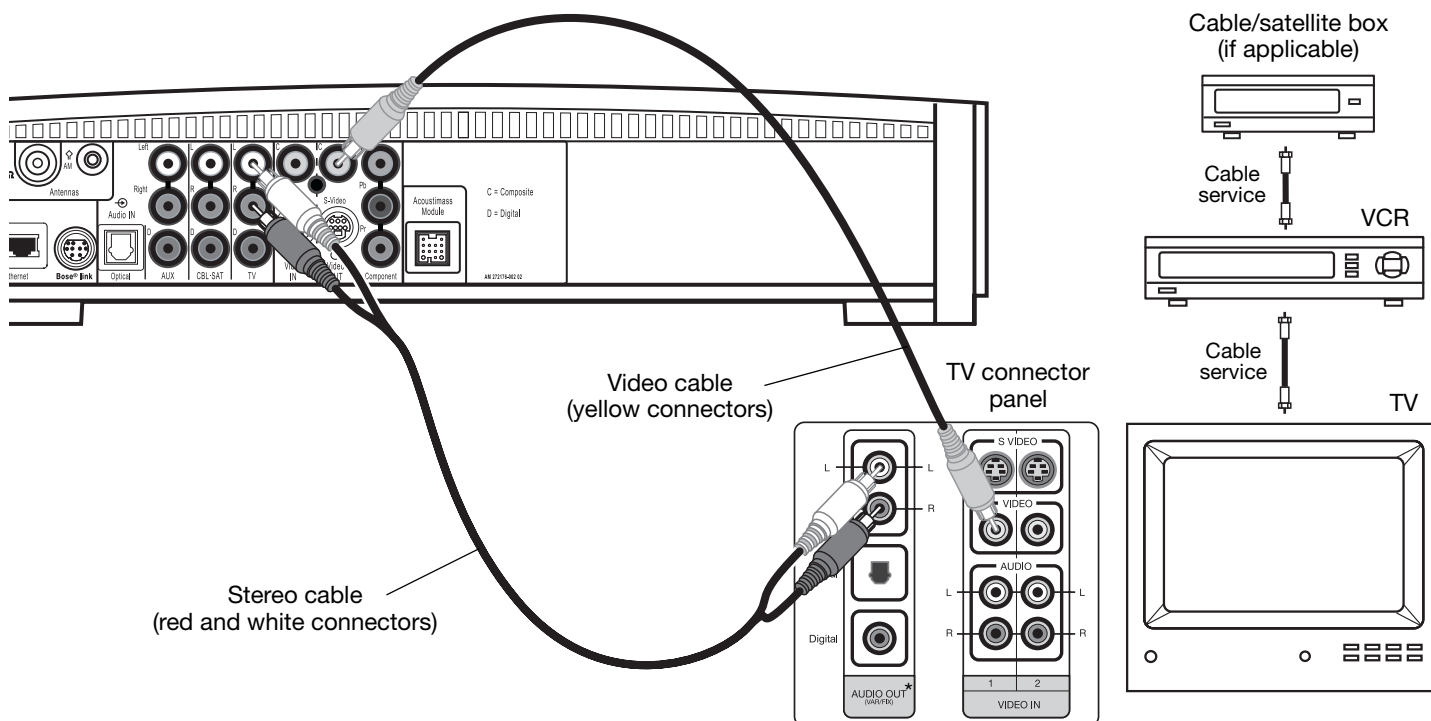

Option B: TV (NO audio output jacks) + VCR + media center


If your TV does not have audio output jacks, you will need to feed audio to the 3•2•1 GSX home entertainment system through a secondary source, such as a VCR. To do this, you will need one additional video cable, which can be purchased at your local electronics store.

1. Connect one end of the supplied stereo cable to the **AUX Audio IN** jacks on the rear panel of the media center (Figure 13). Insert the white RCA plug into the **AUX white L** jack. Insert the red RCA plug into the **AUX red R** jack.
2. Connect the other end of the stereo cable to the **AUDIO OUT** jacks on your VCR. Insert the white RCA plug into the white **AUDIO OUT L** jack. Insert the red RCA plug into the red **AUDIO OUT R** jack.
3. Insert one end of the supplied video cable (yellow) into the **VIDEO OUT** jack on the back of your VCR. Insert the other end of the cable into the **Video IN C** (composite) jack on the back of the media center.
4. Insert one end of the second video cable (yellow) into the **Video OUT C** (composite) jack on the back of the media center. Insert the other end of the cable into one of the video input jacks on your TV.

Figure 13

Option B connections

Write the name of the video input jack used on your TV in the box on page 25. After you turn the system on, you will need to select this video input on your TV in order to view the 3•2•1 GSX system video output.

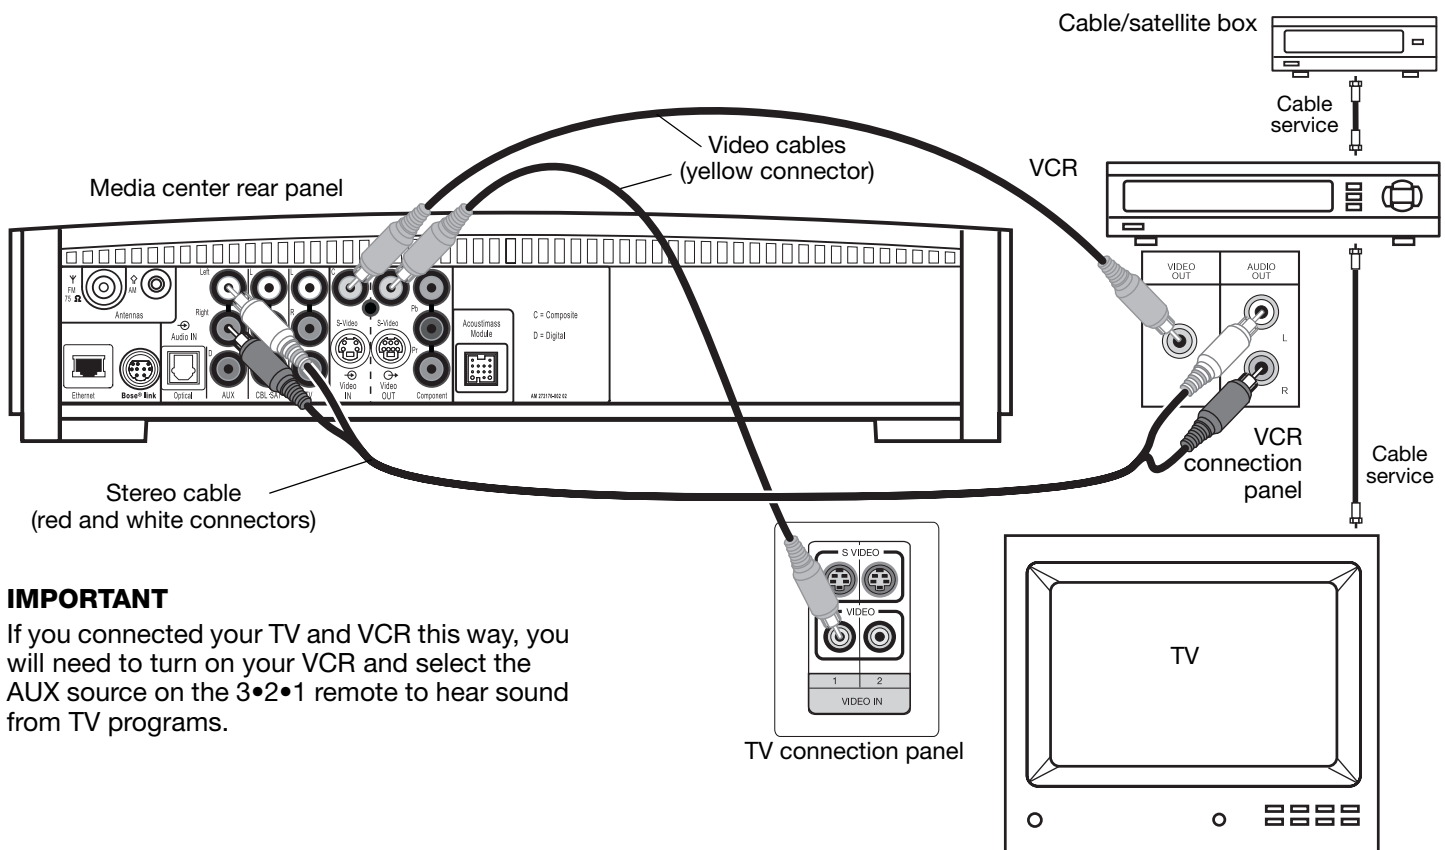

IMPORTANT

If you connected your TV and VCR this way, you will need to turn on your VCR and select the AUX source on the 3•2•1 remote to hear sound from TV programs.

VCR considerations

- Some combination TV/VCR units may not work with 3•2•1 GSX home entertainment systems. Please refer to your TV/VCR owner's manual for information.
- A stereo VCR is required for optimal sound performance. If your VCR has only one audio output, you have a mono VCR. You will need a Y-adaptor cable (available at electronics stores) to connect audio to the media center. For this setup, you will need to select "Mono decoding" (see "TV, CBL-SAT, and AUX settings menu" on page 52) so your 3•2•1 GSX system will simulate surround sound effects from a mono source. Otherwise, you will hear mono sound from both speakers.

Advanced setup options

The 3•2•1 GSX home entertainment system provides connections for producing higher quality video and audio. The following describes how to use these connections.

Making S-video connections (higher quality video)

An S-video input jack, provided on many TVs, delivers a higher quality TV picture than the composite video output connection shown in Figure 11. For this connection you will need an S-video cable which can be purchased from your Bose dealer or a local electronics retailer.


1. Insert one end of the S-video cable into the **S-Video OUT** jack on the media center (Figure 14).
2. Insert the other end of the S-video cable into the **S-VIDEO IN** jack on your TV.

Figure 14

TV (S-video)-to-media center connections

IMPORTANT

If you use S-video to connect your TV to the media center, you must also use S-video to connect all other devices (such as a cable box and VCR) to the media center.

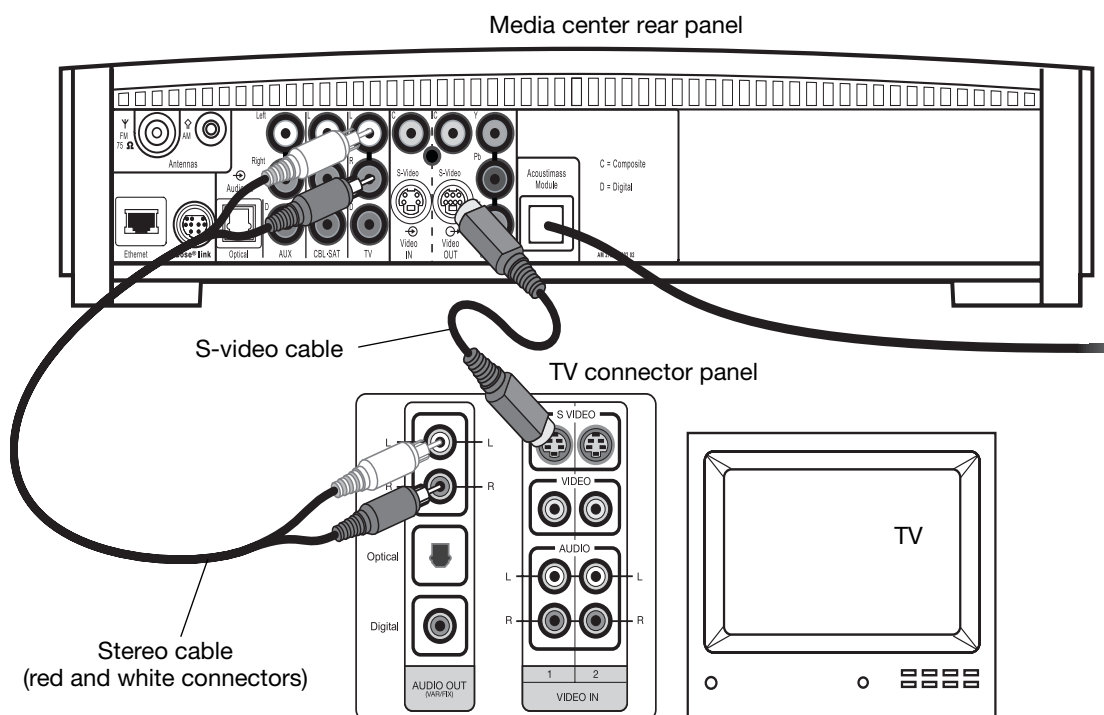

Making component video connections (highest quality video)

Note: Component video connections are required in order to use the progressive scan (NTSC only) feature of your 3•2•1 GSX system. Your TV must support this feature. To turn on the progressive scan feature, see “Video options” on page 59.


For the highest quality video from DVDs, you may want to use a component video connection between the media center and the TV. To do so, your TV must provide component video jacks (typically labelled Y, Pb, and Pr). Refer to your TV owner’s guide for more information.

To make component video connections you will need a component video cable that is long enough to reach from the rear of the media center to your TV (Figure 15). If the cable is not supplied with your TV, you can purchase it separately.

1. On the media center rear panel, plug one end of the component video cable into the **Component Y, Pb, and Pr** video output jacks (Figure 15). Be sure to match the color of the plug with the color of the jack.
2. Plug the other end of the component video cable into the corresponding (color or letter code) component video jack on the back of your TV.

Figure 15

Component video TV-to-media center connections

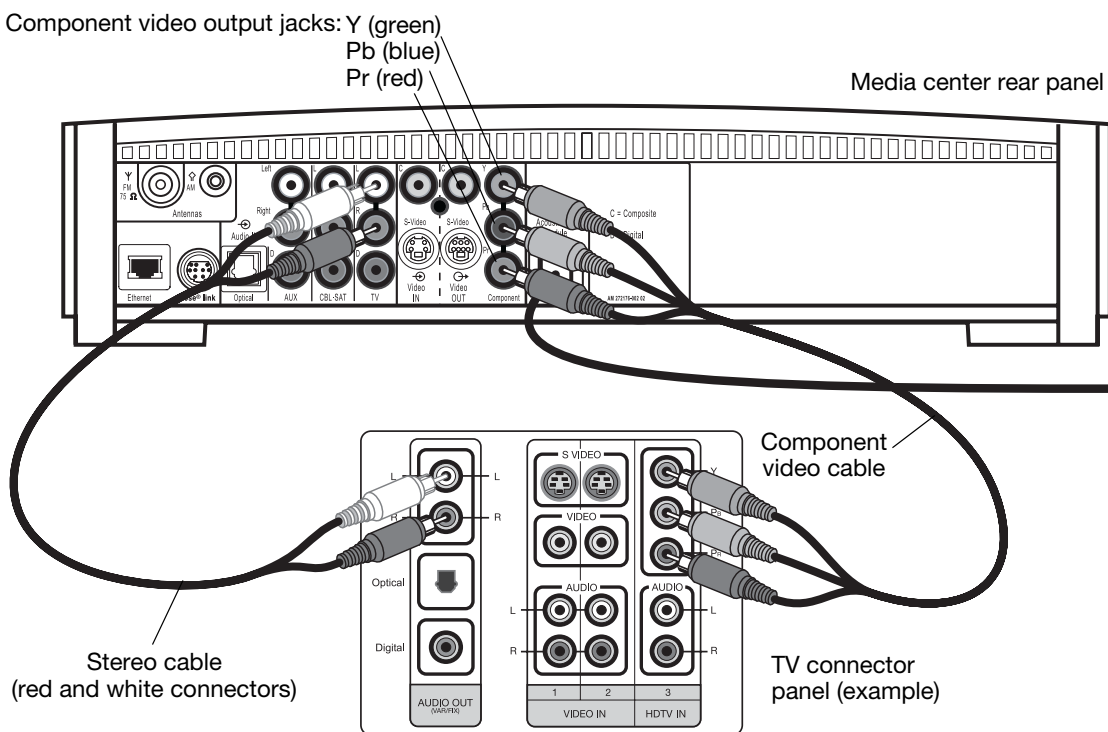

IMPORTANT FOR COMPONENT VIDEO USERS

Input signals received by the **C** (Composite) or **S-Video IN** jacks are not passed through to the **Component** video **OUT** jacks. If you connect an external video device to the **C** or **S-Video IN** jack, you must also connect the **C** or **S-Video OUT** jack on the media center to the respective video input jack on your TV. To view the external video input on your TV, you will need to select the TV video input used for that device. To view the onscreen menus of the 3•2•1 GSX system, you will need to switch back to the TV’s component video input.

Note: For more information, or to purchase the video cables, contact your local electronics store or authorized Bose dealer.

Connecting digital audio devices


Some audio devices feature a digital audio output for optimum sound performance. Use an optical digital cable or a coaxial digital cable, as appropriate, to connect this output to the digital input on the media center. You can purchase the required cables at a local electronics store.

On the media center rear panel, an optical digital cable connects to the OPTICAL jack. A coaxial cable connects to the audio input jacks labeled **D**.

Note: Before you can benefit from the optical connection, you will need to assign the optical connector to the audio source in the system settings menu. See “Media center options” on page 60.

Figure 16

Media center digital audio input jacks

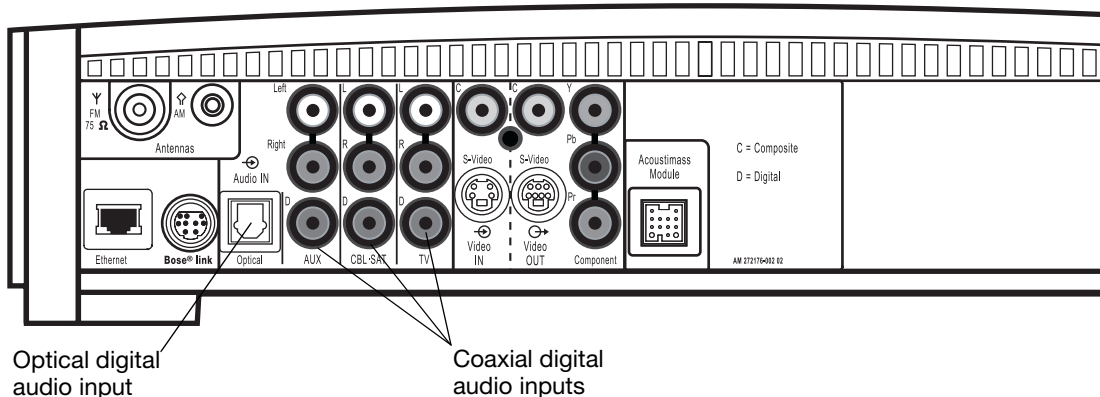

Connecting your cable/satellite box, TV, and VCR to the media center

The 3•2•1 GSX home entertainment system provides flexibility for you to add up to three external audio devices, including your TV, directly to the media center.

Figure 17 shows you an advanced setup using a TV, VCR and cable/satellite box. In this setup, please notice the following:

- S-video connections are used to deliver the cable/satellite signal to the media center. Therefore, the media center output video is sent to the TV also through an S-video connection.
- Analog and digital coaxial audio connections are shown for the cable/satellite box. As an option, you may use an optical digital connection. However, before you can benefit from the optical connection, you will need to assign the optical connector to the cable/satellite box audio source in the system settings menu. See “Media center options” on page 60.
- When connecting an audio device to the media center jacks, remember to match the red jack to the right channel (R) and the white (or black) jack to the left channel (L).
- For further details on making the video connections between your VCR and TV, refer to the manuals for these video devices.


Note: The recommendations contained in this owner’s guide are basic suggestions for connecting external devices to the 3•2•1 GSX system. Instructions and terminology pertinent to these external devices may vary, depending on the manufacturer. Consult the owner’s guide that came with the device for clarification on setup and usage before making any connections.

Figure 17

Advanced setup example:
TV, VCR and cable/satellite
box

For future use only.

Media center

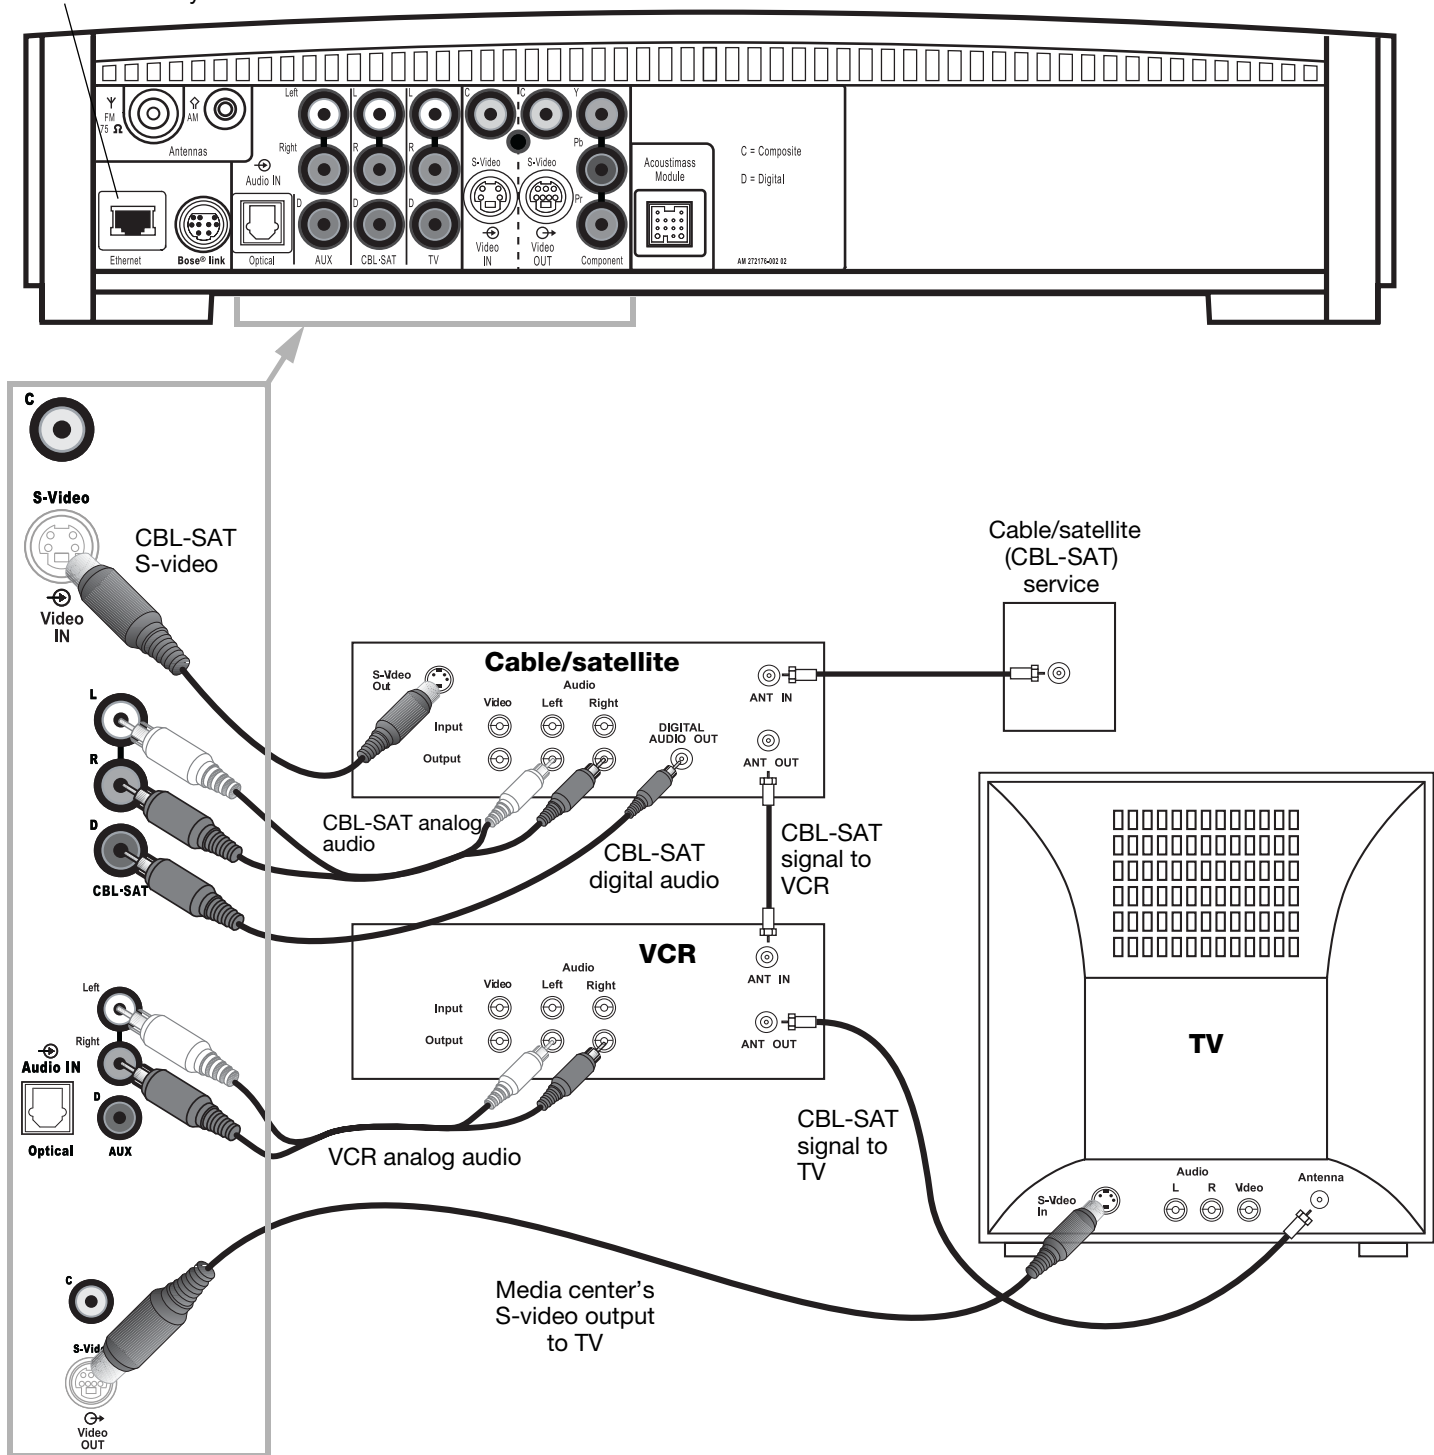


Note: For more information on advanced connections, refer to the DVD setup disc that came with your 3•2•1 GSX home entertainment system.

Connecting a game console

Connect the audio output of a game console to the **AUX Left** and **Right** input jacks. Connect the video output of the game console to the **C (composite) Video IN** jack.

Figure 18

Game console connections

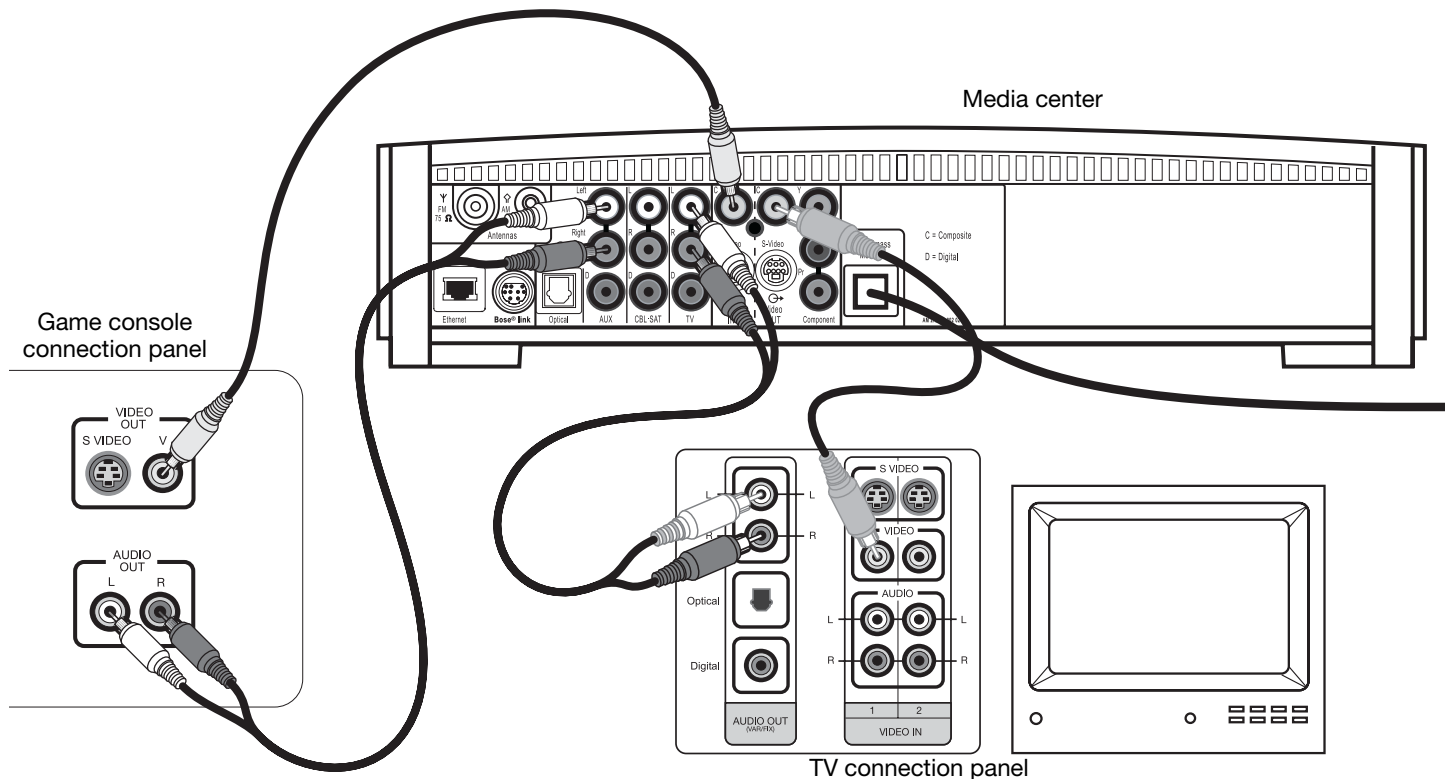

IMPORTANT


If you connected your game console this way, you will need to select the AUX source on the 3•2•1 remote in order to hear sound from the game console.

Installing the remote control batteries

1. On the back of the remote, slide open the battery compartment (Figure 19).
 2. Insert the two supplied AA (IEC-R6) 1.5V batteries, or their equivalent, as shown. Match the plus (+) and minus (-) marked on the batteries with the plus (+) and minus (-) inside the battery compartment.
 3. Slide the battery compartment cover back into place.
- Note:** Replace the batteries when the remote control stops operating or its range seems reduced.

Figure 19

Installing the batteries

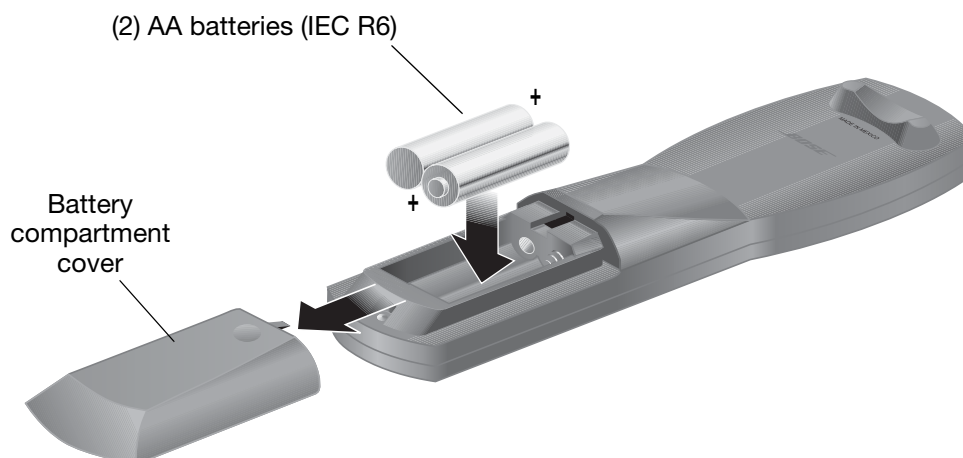

Connecting the power cord

⚠ CAUTION: Do not plug the Acoustimass® module into an AC power (mains) outlet until all the components are connected.


⚠ CAUTION: For dual voltage models only, be sure to set the dual voltage switch on the back of the Acoustimass module to the appropriate voltage for your area (115V or 230V) before connecting to power. If you are not sure about the proper voltage for your area, consult your local electrical authorities.

1. Insert the small connector end of the power cord into the AC INPUT connector on the Acoustimass module (Figure 20).
2. Insert the large end of the cord into an AC power (mains) outlet.

🎵 Note: On 220-240V models only, turn the Acoustimass module POWER switch to on (I).

Figure 20

Connecting to power

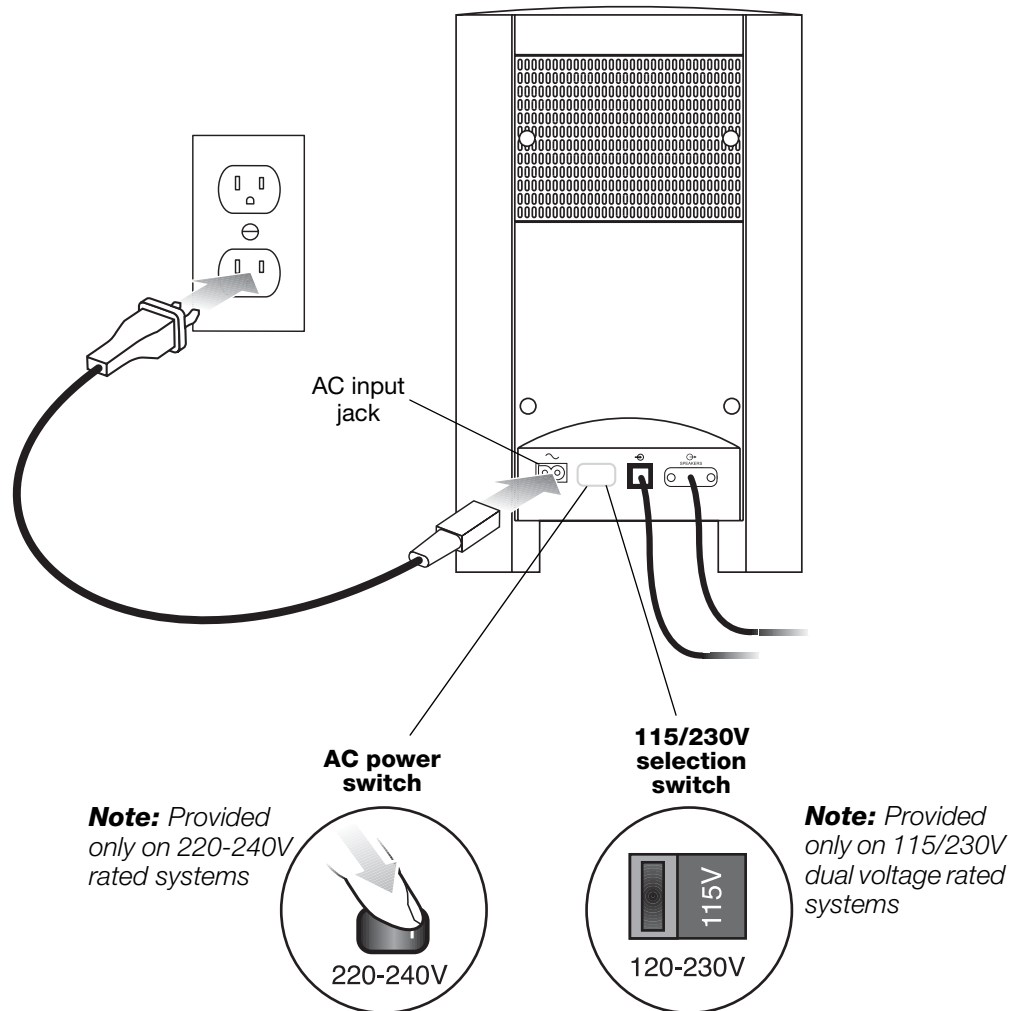

Verifying your system setup

1. Check the following before you continue:

- All cables are connected for the setup you chose.
- The batteries were installed in the remote control.
- The power cord was installed and plugged into a live AC receptacle.

2. Turn on your TV.

Use the remote control that came with your TV.

3. Using your TV remote, select the video input on your TV that connects to the video output of the media center.

Name TV video input used:

- The method of selecting the right video input depends on your TV. Refer to your TV owner's guide for help.

4. Turn off the TV speakers.


- Refer to your TV owner's guide for help.
- If your TV does not have an option to turn off the internal speakers, you may need to adjust both the 3•2•1 GSX system volume and your TV volume until you find a level that produces the desired sound.
- In some TVs, when the internal speakers are turned off, you may need to raise the TV's volume level by 75% to 100% in order to hear audio from the 3•2•1 GSX home entertainment system. See your TV owner's guide for help.

5. Turn on your 3•2•1 GSX system.

- Point the 3•2•1 GSX remote control at the media center and press **On-Off**.

6. Play the 3•2•1 GSX setup DVD.


- Press **Eject** on the media center control panel.
- Insert the DVD setup disc into the disc tray.
- Press **Eject** again to close the tray. The DVD will automatically begin to play. If it does not, press the play button (▶).

 **Note:** Be sure to play the Setup DVD, included in the carton with your system, as soon as all the connections are completed. This will help you verify the connections you have made and confirm proper sound performance.

SYSTEM CONTROLS AND INDICATORS

Remote control

Remote status LED

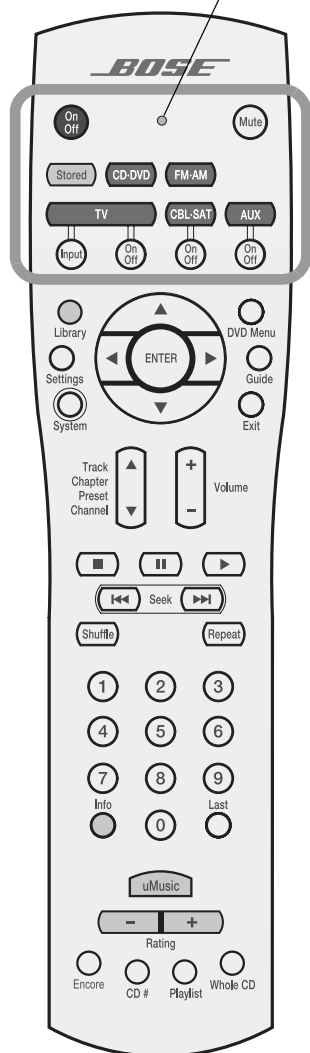

- On/Off** Turns the system on or off.

Status LED:

 - Off (unlit) during normal operation.
 - On during the process of setting up the remote to control other equipment such as your TV or VCR.
- Mute** Silences or restores the sound from the current source.
- Stored** Selects the Stored CD source and turns the system on to the last-selected uMusic™ intelligent playback system play mode.
- CD·DVD** Selects the built-in CD/DVD player and turns the system on.
- FM·AM**

 - Selects the built-in tuner and turns the system on to the previously selected FM/AM station.
 - Switches between FM and AM when the tuner is selected.
- TV** **TV:** Selects the TV sound source and turns your system on.


Input: Changes the external input to your TV. For example, your TV might have two external inputs where one is connected to your cable box and the other to your VCR. Pressing this button alternates between the cable box and the VCR.*

On/Off: Turns your TV on and off.*
- CBL·SAT** **CBL-SAT:** Selects the CBL-SAT sound source and turns your system on.

On/Off: Turns your cable/satellite box on or off.*
- AUX** **AUX:** Selects the AUX sound source and turns your system on.

On/Off: Turns a VCR or PVR that is connected to the AUX jack on or off.*

* Requires special remote settings. See "Setting up your remote to control other audio/video devices" on page 30.

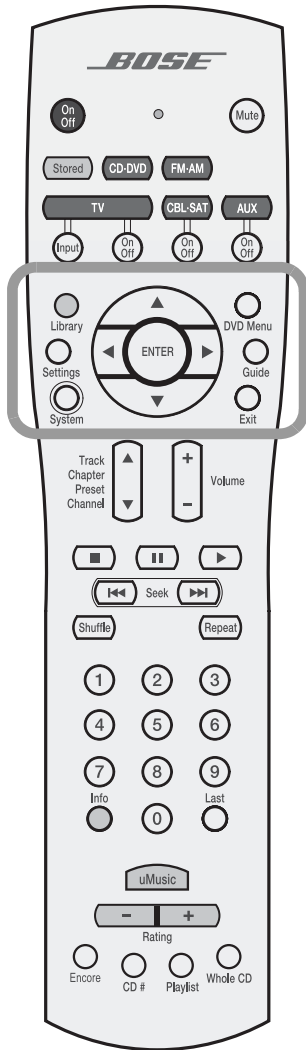Remote control – cont.

Library

Enters the library of stored CD tracks.



Settings

Displays the Settings menu for the current source on your TV screen or media center display.



System

Displays the System menu on your TV screen.

- Displays the DVD menu of the currently loaded DVD disc on your TV screen.
- Displays the main menu of a cable/satellite box, VCR, or PVR on your TV screen (if supported).*



DVD Menu

Displays the TV program guide (if supported) on your TV screen.




Guide


- Removes the Settings menu, System menu, or Library menu from your TV screen.
- Removes the TV program guide (if supported) from your TV screen or media center display.




Exit

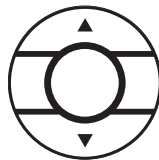

- Tunes the FM or AM radio to the next higher or lower frequency.
- Selects the next item, up or down, in menus.

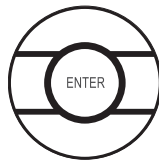



Confirms a menu selection or introduces the next level of menu options.

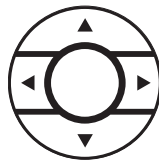

Moves up, down, left, or right in onscreen menus and media center displays.

* Requires special remote settings. See "Setting up your remote to control other audio/video devices" on page 30.

SYSTEM CONTROLS AND INDICATORS

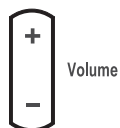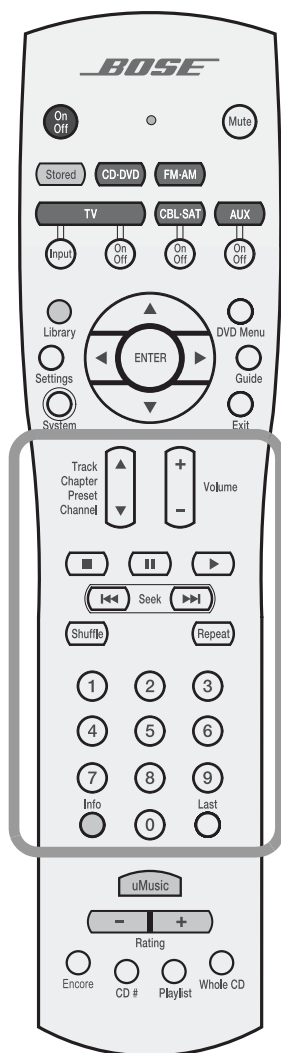Remote control – cont.

Volume

- Raises or lowers the volume of the current source.
- Pressing + restores muted sound from the current source.
- Pressing – lowers the volume of the current source, but does not restore muted sound.

Track
Chapter
Preset
Channel

Skips to the next or previous CD track, DVD chapter, radio station preset, or TV channel (if the remote is set up to control your TV).



- Stops the disc player.
- *For DVDs only*, the disc stops and the system saves the DVD play position. Pressing (▶) continues the DVD from the saved play position. Pressing (■) twice for a disc in play returns to the beginning of the disc.



- Pauses a currently playing disc.
- Pressing (⏏) again (or pressing (▶)) resumes play of a paused disc.
- After 20 minutes of no user interaction, the disc player stops and returns to the beginning of the disc to wait for the next command.



Starts the disc player.




- Skips backward or forward through CD tracks.
- Skips backward or forward through DVD chapters.
- Seeks backward or forward to the next strongest radio station.



Plays audio CD tracks in random order. Press again to cancel.



Repeats a CD, CD track, DVD chapter, or DVD title depending on the selected source. Press again to change the repeat mode.

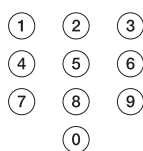

- Selects a CD track, DVD chapter, radio station preset, or TV channel.
- Selects a uMusic preset for the Stored source.
- Allows numerical selection for some menu options.




Info

- Displays or dismisses a cable/satellite information window, if supported.
- If playing an MP3 CD, displays or dismisses artist and title information on the media center display panel.
- Displays information about the stored track that is playing.



Last

Skips to the previous TV channel (if supported by your TV or cable/satellite box).

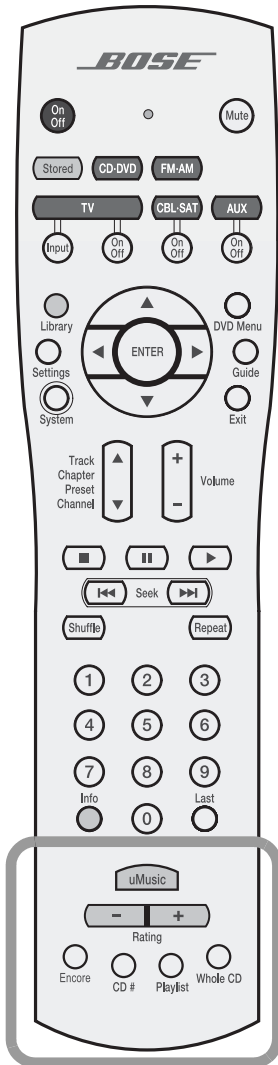Remote control – cont.

uMusic

Selects the uMusic™ intelligent playback system for playing stored music. Overrides any other stored music play mode.



Rating

- Applies a negative (-) or positive (+) rating to the stored track currently playing.
- Pressing - immediately selects a new track.
- Pressing + continues playing the current track.



Encore

Selects and plays stored music that most closely matches the style of the current track.



CD #

Plays the tracks from a CD selected by its number in the uMusic system.



Playlist

Plays all the tracks, if any, assigned to the playlist. Can be used with other play mode options, like Encore.



Whole CD

Skips from the track most recently playing to the first track on the CD of origin and plays that CD from beginning to end.

Setting up your remote to control other audio/video devices

Your remote can be set up to control other audio/video devices such as a TV, VCR, PVR or cable/satellite box by entering a device code while in the setup mode.

- **If you know the device code, follow the instructions under the heading, “Direct entry of a device code”** below. Device codes are listed in the back section of this owner’s guide and in the System menus under Remote Control options.
- **If you can’t find the device code and want to search the system for it, see “Searching for a device code” on page 31.**
- **If you want to verify the device code you have entered for an audio/video device, see “Verifying an entered device code” on page 33.**
- **If you want to return to a previous device assignment,** press and hold the **TV** button until the remote LED is lit (about 5 seconds). On the remote keypad, enter 977.
- **If you want to wipe out all assigned codes,** press and hold the **TV** button until the remote LED is lit (about 5 seconds). On the remote keypad, enter 981.

♪ **Note:** More than one code may work with your particular brand of product. If you notice a lack of response or limited functionality after setting up the remote, try a different code.

 
♪ **Note:** The remote status LED flashes rapidly eight times if you press an invalid key, or enter an unavailable device code. Wait seven seconds for the error to clear and start again.

Direct entry of a device code

Device codes can be found at the back of this owner’s guide or in the System menu under Remote Control options. If you know the device code, you can do the following:

To set up the remote to control your TV

1. Turn on both the 3•2•1 GSX system and your TV.
2. Press and hold the **TV** button until the remote LED is lit (about five seconds).
3. On the remote keypad, enter the four-digit device code for your TV. The LED will turn off temporarily as you press each key.
4. Check that the LED turns off after the code is entered. If the LED blinks, the code is invalid. Try again.
5. Point the remote at your TV and press the **TV On-Off** button. If your TV does not respond, go back to step 2 and try other codes. If you are still unsuccessful, see “Searching for a device code” on page 31.



♪ **Note:** After programming your remote to control external audio/video devices from the System menu, press the System button once to continue navigating the System menu.

To set up the remote to control your cable/satellite box

1. Turn on both the 3•2•1 GSX system and your cable/satellite box.
2. Press and hold the **CBL-SAT** button until the remote LED is lit (about five seconds).
3. On the remote keypad, enter the four-digit device code for your cable/satellite box. The LED will turn off temporarily as you press each key.



4. Check that the LED turns off after the code is entered. If the LED blinks, the code is invalid. Try again.
5. Point the remote at your cable/satellite box and press the **CBL-SAT On-Off** button. If your cable/satellite box does not respond, go back to step 2 and try other codes. If you are still unsuccessful, see "Searching for a device code" below.



To set up the remote to control your VCR or PVR (such as Tivo or Replay TV)

1. Turn on both the 3•2•1 GSX system and your VCR or PVR.
2. Press and hold the **AUX** button until the remote LED is lit (about five seconds).
3. On the remote keypad, enter the four-digit device code for your VCR/PVR. The LED will turn off temporarily as you press each key.
4. Check that the LED turns off after the code is entered. If the LED blinks, the code is invalid. Try again.



5. Point the remote at your VCR or PVR and press the **AUX On-Off** button. If your VCR or PVR does not respond, go back to step 2 and try other codes. If you are still unsuccessful, see "Searching for a device code" below.




Searching for a device code

Use this method if you do not know the code for a device.


Note: *This is a very time-consuming process. Use it as a last resort.*

To set up the remote to control your TV


1. Turn on both the 3•2•1 GSX system and your TV.
2. Press and hold **TV** until the remote LED is lit (about five seconds).
3. Alternately press **Channel ▲** and **TV On-Off** until your TV turns off.

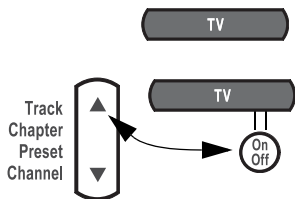

4. Press **Enter**. Check that the remote LED turns off.


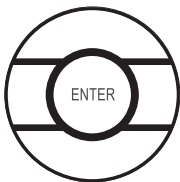


 5. Point the remote at your TV and press **TV On-Off**. If your TV does not respond, go back to step 2 and try again.



To set up the remote to control your cable/satellite box

1. Turn on both the 3•2•1 GSX system and your cable/satellite box.
2. Press and hold **CBL-SAT** until the remote LED is lit (about five seconds).
3. Alternately press **Channel ▲** and **CBL-SAT On-Off** until your cable/satellite box turns off.

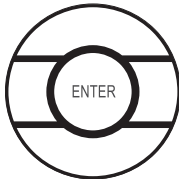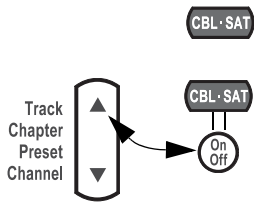



4. Press **Enter**. Check that the remote LED turns off.



5. Point the remote at your cable/satellite box and press **CBL-SAT On-Off**. If your cable/satellite box does not respond, go back to step 2 and try again.

To set up the remote to control your VCR or PVR (for example, TiVo or Replay TV)

1. Turn on both the 3•2•1 GSX system and your VCR/PVR.
2. Press and hold **AUX** until the remote LED is lit (about five seconds).
3. Alternately press **Channel ▲** and **AUX On-Off** until your VCR/PVR turns off.

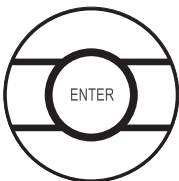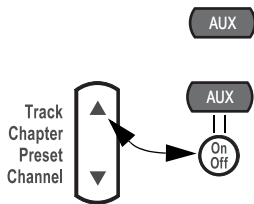

4. Press **Enter**. Check that the remote LED turns off.



5. Point the remote at your VCR/PVR and press **AUX On-Off**. If your VCR/PVR does not respond, go back to step 2 and try again.

Verifying an entered device code

In case you need to check to see what code the remote is using for a particular device, do the following:



1. Press and hold a source key (**TV**, **CBL-SAT**, or **AUX**) until the remote LED lights (about five seconds)
2. Press the **Info** button.
3. Press **1** on the remote and count the number of times the LED blinks (zero is indicated by a long blink). This is the first digit.
4. Press **2** on the remote and count the number of times the LED blinks (zero is indicated by a long blink). This is the second digit.
5. Press **3** on the remote and count the number of times the LED blinks (zero is indicated by a long blink). This is the third digit.
6. Press **4** on the remote and count the number of times the LED blinks (zero is indicated by a long blink). This is the fourth digit.



7. Press **Exit**.

Changing channel selection control

If you are using your 3•2•1 GSX home entertainment system with other audio/video devices, such as a VCR and cable/satellite box, you may wish to change channels using one of these other audio devices rather than your TV.

You can easily switch your 3•2•1 remote to change channels on another audio device:



1. Press and hold **Last** on the 3•2•1 remote. The remote status LED will illuminate and blink the number of times corresponding to the device controlling channel selection.

1 blink = TV
 2 blinks = CBL-SAT
 3 blinks = AUX

2. After the blinking stops, press the source button (**TV**, **CBL-SAT**, or **AUX**) that corresponds to the device you want to use for channel selection.



3. Press **Exit** on the 3•2•1 remote.

To confirm, press and hold **Last** on the 3•2•1 remote and count the number of blinks. If the change was made, press **Exit**. If not, repeat steps 2 and 3.

Media center


The media center has a control panel on the top, a display area to show the current status of the system, and a disc tray that opens on the front of the console.

Control panel

The media center has six buttons located above the display.

Figure 21

Media center controls

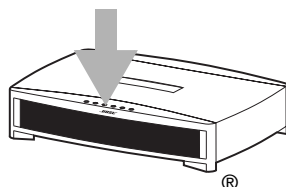

On-Off



Turns system power on or off.

Source



Steps through the available source selections.

- Volume +



Lowers and raises the volume level.

Store



Copies tracks from an audio CD into the music library.

Eject



Opens or closes the disc tray.


Note: If you select another source by pressing the **Source** button, you cannot control the new source with the remote until you press the button for that new source on the remote.

Display indicators

With the system turned on, the media center display lights up to show the state of the system. Not all possible choices, shown below, light up at once (Figure 22). The display changes with each adjustment or selection you make.

Figure 22

Example media center display

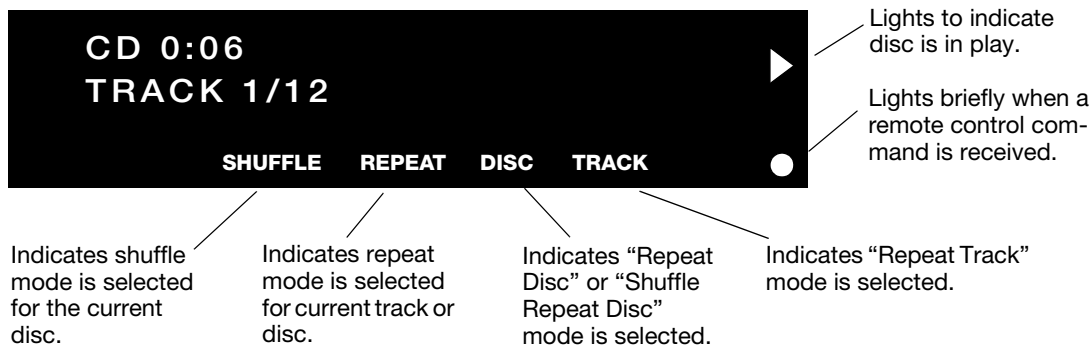


Turning your system on and off



To turn power on or off:

 - Point the 3•2•1 remote at the media center and press **On/Off**.
- OR
- Press **On-Off** on top of the media center.



To turn the system on and select a source at the same time:

- Press **Stored**, **CD-DVD**, **FM-AM**, **TV**, **CBL-SAT**, or **AUX** on the 3•2•1 remote.

Note: Your 3•2•1 remote control can be set up to control other audio/video devices such as your TV, VCR, or cable/satellite receiver. For instructions, see “Setting up your remote to control other audio/video devices” on page 30.

Playing video DVDs

Before you play your first DVD:

- Familiarize yourself with the 3•2•1 remote control. See “Remote control” on page 26.
- Be sure you understand how to switch between the available video inputs on your TV. To view a video DVD, you will need to select the video input on your TV that is connected to the video output of the 3•2•1 GSX media center (see “Connecting your TV to the media center” on page 15).
- If you are unable to select the correct video input on your TV, please consult your TV owner’s guide.
- Be sure that you play the 3•2•1 GSX system setup DVD first. This will help you verify the connections you have made and confirm proper sound performance.


1. Turn on your TV.
 2. Select the correct video input on your TV for the 3•2•1 GSX system.
 3. On the 3•2•1 remote, press **CD/DVD** to turn the 3•2•1 GSX system on to the CD/DVD source.
 4. On the media center control panel, press **Eject** to open the disc tray.
 5. Place the DVD disc in the disc tray.
 6. Press **Eject** again to close the tray.
- The DVD should begin to play automatically. If not, press **Play** on the 3•2•1 remote.

Note: Not all DVDs offer the same features. For example, you can choose to display subtitles while watching a movie only if that particular disc provides subtitle information.

While playing a DVD video, the media center displays the elapsed play time and chapter number.

Figure 23

Sample display for a DVD video

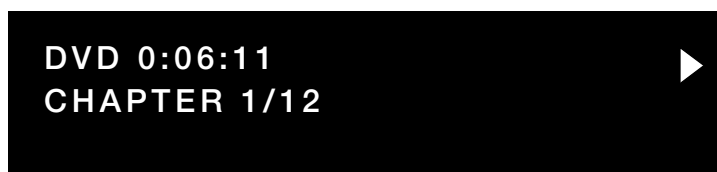

Basic DVD operations



- Press **Pause** to pause a movie.
- Press **Pause** again, or press **Play** to resume playing a paused CD.
- Press **■** (stop) to interrupt a movie in progress.
 - Press **■** once. The system holds the movie at the point of interruption. Press **Play** to resume from the point of interruption.
 - OR
 - Press **■** twice. Play is interrupted and the system returns to the beginning of the disc. Press **Play** to restart the DVD.
- Press **Chapter ▲** to skip to the next chapter on the current DVD. Press **Chapter ▼** to skip to the previous chapter.
- Press **Repeat** once for REPEAT CHAPTER mode.
- Press **Repeat** again for REPEAT TITLE mode.
- Press **Repeat** again to turn the repeat function off (REPEAT OFF).
- Press **◀▶** to scan backward through the current DVD. Press **▶▶** to scan forward.
- Press **Eject** on the media center to stop a disc and open the disc tray.

Note: For information on changing DVD-related source settings, see “DVD settings menu” on page 51.

Restricting access to video DVDs

The DVD Lock menu allows you to restrict access to DVD content that is inappropriate for certain members of your family. For instructions on using the DVD Lock menu, see “DVD Lock options” on page 62.

Playing audio CDs



Eject



Eject



1. On the 3•2•1 remote, press **CD/DVD** to turn the 3•2•1 GSX system on to the CD/DVD source.
2. On the media center control panel, press **Eject** to open the disc tray.
3. Place the CD disc in the disc tray.
4. Press **Eject** again to close the tray.
5. The audio CD should begin to play automatically. If not, press **Play** on the 3•2•1 remote.

Basic CD operations



- Press **Pause** to pause an audio CD.



- Press **Pause** again, or press **Play** to resume playing a paused CD.



- Press **■** to stop a playing audio CD.



- Press **Track ▲** to skip to the next track on the current CD. Press **Track ▼** to skip to the previous track.



- Press **Seek ►►** once to skip to the next track.
- Within the first 2 seconds of play, press **Seek ◀◀** to skip to the previous track. After 2 seconds of play, press **Seek ◀◀** to skip to the beginning of the current track.
- Press and hold **Seek ◀◀** or **Seek ►►** to scan backward or forward through a track.



- Press **Repeat** once for REPEAT TRACK mode. Press **Repeat** again for REPEAT DISC mode. Press **Repeat** again to turn the repeat functions off (REPEAT OFF).



- Press **Shuffle** once for SHUFFLE DISC mode. Press **Shuffle** again to turn off the shuffle mode (SHUFFLE OFF).

Note: For information on changing CD-related source settings, see “CD settings menu” on page 50.

Note: While playing an MP3 CD, pressing **Info** displays artist and title information on the media center display panel.

Listening to FM/AM radio



On the 3•2•1 remote, press **FM-AM**. If the system is off, the radio will turn on to the most recently selected station.

Tuning to a station

Use the following controls to tune to a radio station.




- Press **FM-AM** to switch between the FM and AM bands.



- Press **Tune ▲** to tune up the band. Press **Tune ▼** to tune down the band.



- Press **Seek ◀▶** to go to the previous station. Press **Seek ▶▶** to go to the next available station. Press and hold for rapid tuning. Release to stop at the next available station. To stop anytime, briefly press **Seek ◀▶** or **Seek ▶▶**. To begin seeking again without holding down the **Seek** button, briefly press **Seek ◀▶** or **Seek ▶▶** as soon as the first seek operation stops.

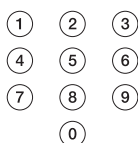

- Press the number of a stored station on the remote.

OR



- Press **Preset ▲** to select the next stored station. Press **Preset ▼** to select the previous stored station.

Note: For information on changing FM/AM-related source settings, see “FM/AM settings menu” on page 50.

Storing stations as presets

Using your 3•2•1 remote control you can store up to 20 AM and 20 FM station presets. This enables you to tune to a favorite station quickly.

1. Tune to the preferred station.
2. Press **Enter** on the remote to store the station at the next available preset number.

OR

Enter a number on the remote using the numeric buttons. For numbers 1-9, press the single number button and hold it. For numbers 10-20, press the first number followed immediately by pressing and holding the second number.

The newly stored preset number appears briefly on the media center display.

Note: Storing a station to a preset number replaces any station previously stored to that preset.

Erasing a preset

1. Tune to the preset station.
2. Press and hold the **0** button on the remote until the media center display tells you that the preset is erased.

Using the uMusic™ intelligent playback system

Before you can play stored music and use the uMusic intelligent playback system, you need to store some CD tracks in your media center. To experience the impact of the uMusic playback system, you should start by storing 10 discs.

Note: *Your system is designed to store tracks of regular CDs only. It will not store MP3 tracks or the contents of DVDs. If an inappropriate disc type is in the disc tray when the Store button is pressed, the media center displays an error message to indicate that storage is not possible.*

Storing CDs

Eject




Store



1. To start, choose 10 of your favorite CDs.
2. Press **Eject** on the media center to open the disc tray.
3. Place an audio CD in the disc tray.
4. Press **Eject** again to close the tray.
5. Press **Store** on the media center.
 - Storing takes about 5 minutes per disc. While a CD is being stored, the media center display (Figure 24) shows you what percentage of the task is completed.
 - To interrupt or stop storing at any time, press **Eject**. To resume storing the same disc, close the disc tray and press **Store** again.

Figure 24

Example of media center display while storing a CD

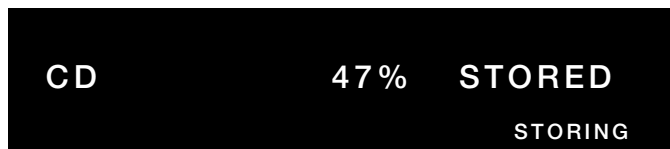

6. After AUDIO CD STORED appears on the media center display, open the disc tray and remove the CD.
7. Repeat these steps for each CD.

Planning time to store your music

- Allow about 5 minutes per CD to copy the tracks.
- Storing 10 discs will take about 1 hour, including the time it takes to insert and remove them.
- After storing a CD, your system needs to process the tracks for efficient storage. If after storing several CDs the media center displays BUSY PROCESSING CDS, you will need to wait and allow the system to complete its process. Turning your system off will allow it to process CDs faster.
- For 10 CDs your system will need about 6 hours of processing time with the system turned off.
- If your CD collection is extensive, you should plan several separate sessions.



Stored

Playing stored music

- Press **Stored** on your remote to select the stored music source and turn the system on, if it is off. The uMusic™ system will begin to play the stored music under the last-selected preset and in the last play mode used. Your media center displays information (Figure 25) about the track that is playing.

Figure 25

 Example media center display of track information

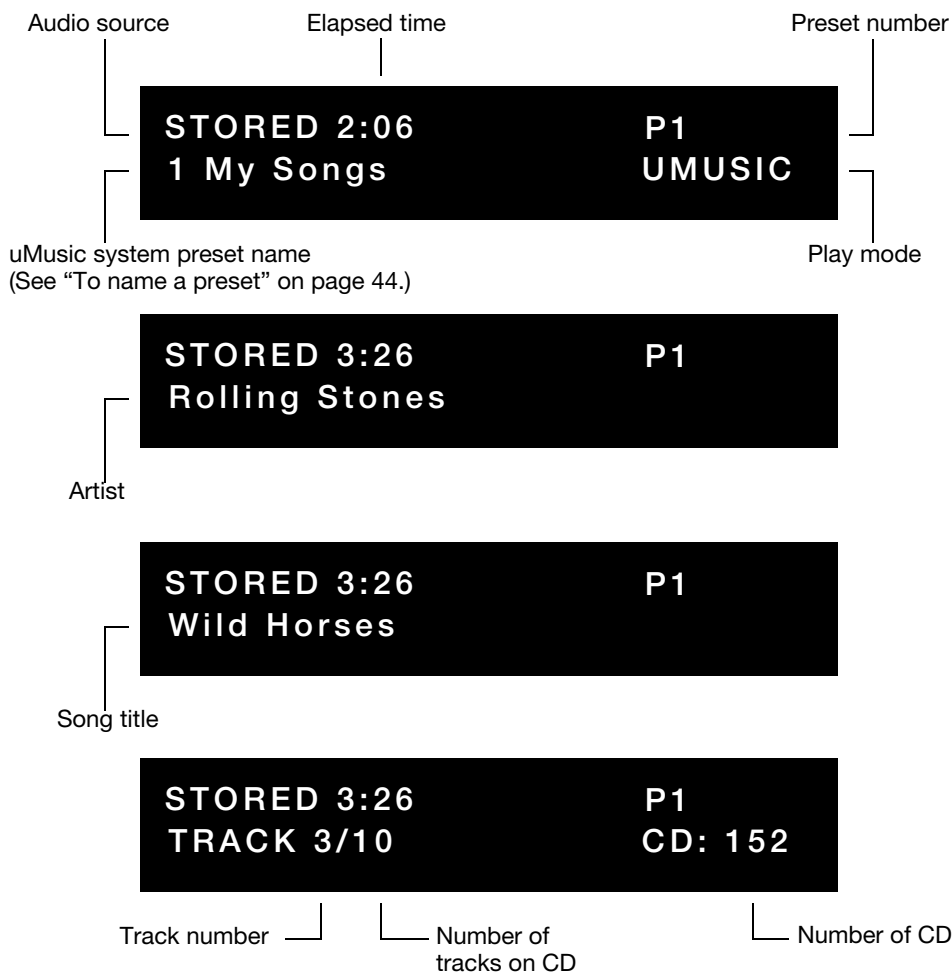

- If you want a different preset, press the corresponding preset number (1 to 9) on the remote.



- Press **Pause** to interrupt the current selection.



- Press **Pause** again, or press **Play** to resume playing a paused selection.



- Press **Stop** once to stop playing a selection. Pressing **Play** will continue the selection from where the track stopped.
- Press **Stop** twice. Pressing **Play** will start the selection from the beginning of the track.



- Press **Track ▲** to skip to another track.
- Press **Track ▼** to skip to a previous track.

🎵 **Note:** Pressing **Track ▲** or **Seek ►►** to skip a track registers a negative rating for that track. See "Rating your music" on page 42.



- Press **Seek ►►** once to skip to the next track.
- Within the first 2 seconds of play, press **Seek ◀◀** to skip to the previous track. After 2 seconds of play, press **Seek ◀◀** to skip to the beginning of the current track.
- Press and hold **Seek ◀◀** or **Seek ►►** to scan backward or forward through a track.



- Press **Info** to see information about the track that is playing on the media center and on your TV (Figure 26) if it is on.

Figure 26

Example of Info display



🎵 **Note:** For information on changing stored music related source settings, see "Stored CD settings menu" on page 50.

Rating your music

When you first start playing your stored music, the uMusic™ system doesn't know what you like to hear the most, so the system starts by playing tracks from your entire music library. As you spend time listening to your music and rating each track, the system learns what you like to hear.



While a track is playing you can tell the system if you like or dislike it:

- Press the **- Rating** button to tell the system you dislike the current track. The current track will stop and the system will select the next track. Pressing the **- Rating** button makes this track, and tracks like it, less likely to be played in the current preset.
- Press the **+ Rating** button to tell the system you really like the current track. The current track will continue to play. Pressing the **+ Rating** button makes this track, and tracks like it, more likely to be played in the current preset.

A rating is also registered when you skip a track or listen to a track all the way through. However, the effect of pressing a **Rating** button is stronger than either of these two actions.

You can also rate your stored music from within the Music Library. See "Rating stored music in the library display" on page 47.

Stored music play modes



Encore



CD #



Playlist



Whole CD

- Press **uMusic** to return to the uMusic playback mode from the Encore, CD#, Playlist, or Whole CD play mode.
- Press **Encore** if the current track that is playing really captures your mood and you would like to hear other similar tracks from your stored music. After the other similar tracks are played, the uMusic playback system resumes.
- Press **CD#**, immediately followed by a CD number, to play one of your stored CDs. The CD number appears on right side of the media center display while a CD is playing.
- Press **Playlist** briefly to play the tracks that you have put into your playlist. For more information, see "Using the Playlist" on page 45.
- Press **Whole CD** to play all tracks, in order, of the CD that includes the track now playing. When the CD is finished playing, uMusic playback resumes.

Repeat and shuffle functions

Repeat and Shuffle functions only apply to CD#, Playlist and Whole CD modes.



- Press **Shuffle** to play tracks in a random order. SHUFFLE is displayed on the media center.
- Press **Shuffle** again to turn off the shuffle function.



- Press **Repeat** to repeat a track. REPEAT TRACK is displayed on the media center.
- Press **Repeat** again to repeat the whole CD or playlist. REPEAT DISC is displayed on the media center.
- Press **Repeat** again to turn off the repeat function.
- To repeat a CD and play its tracks in random order, press **Shuffle** and then press **Repeat**. SHUFFLE REPEAT DISC is displayed on the media center.



Deleting stored tracks

If there is a track stored in the system that you will never want to play, you can permanently delete it from your stored music collection.

1. Press **System** on the remote control.
2. Select **Stored CDs** and press **Enter**.
3. Select **CD#** and press **Enter**.
4. Choose the number of the CD containing the track you want to delete and press **Enter**.
5. Select **Track** and press **Enter**.
6. Choose the name of the track you want to delete and press **Enter**.
7. Select **Track Action** and press **Enter**.
8. Choose **Delete Track** and press **Enter**.
9. After the confirmation, "Do you really want to permanently delete the track from the System," select **Yes** and press **Enter**.
10. Press **Exit** to leave the System menu.

Using uMusic™ system presets

The uMusic system can manage up to nine sets of preferences using presets. The nine presets can be used to establish music preferences for different family members or for special purposes or occasions. If you wish, you can enter a name for each preset to help you remember how it is used.

To select a uMusic preset

1. Press **Stored**.
2. Press **1** to **9** on the remote for the preset you want. A **P** followed by the preset number is displayed on the media center to verify your choice.

STORED 2:06 P 3
TRACK 1/2 5

Note: When you play the uMusic system for the first time it automatically selects preset 1.

3. The uMusic playback system starts to play music according to the likes and dislikes registered, if any, for this preset. You can continue to rate the music being played using the **+** and **-** Rating buttons.

Figure 27

Example music center display showing preset number






To name a preset

1. Press **System**.
2. Select **Media Center** options (Figure 28).

Figure 28

System menu – media center options

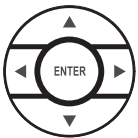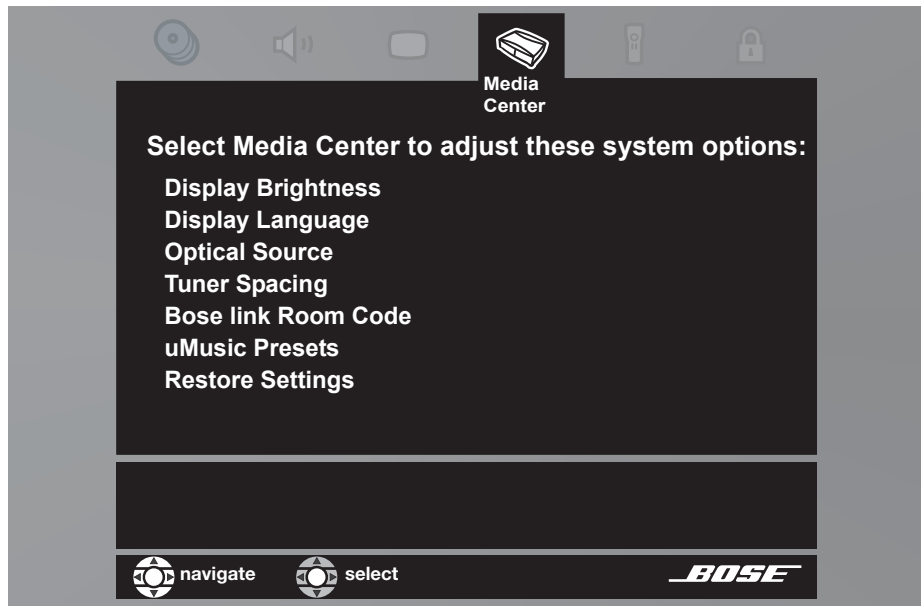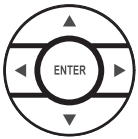

3. Select **uMusic Preset** and press **Enter**.
4. Choose a preset and press **Enter**.
5. Select **uMusic Preset Action** and press **Enter**.
6. Select **Edit Name** and press **Enter**.
7. Using the edit screen, enter a name for the preset. See “Using the Edit Screen” on page 56 for instructions on using the edit screen.
8. Select **Done** at the top right corner of the screen and press **Enter**.
9. Press **Exit** to leave the System menu.



Using the Playlist

Using the Playlist feature you can create a playlist of songs for a specific purpose such as a birthday party or holiday gathering. The Playlist can contain as many tracks as you have stored in your media center.



To add the currently playing song to the playlist

Press and hold **Playlist** until ADDED TO PLAYLIST is displayed on the media center.

To listen to the Playlist

Press **Playlist** briefly. The tracks in the playlist play in order. Press the **uMusic** button to leave the playlist and return to the uMusic playback mode.


To repeat a track or play the tracks in random order, see “Repeat and shuffle functions” on page 42.

To remove a track from the Playlist

While listening to the track in Playlist mode, press and hold **Playlist** until REMOVED is displayed on the media center. The track is removed from the playlist but not from the system.

To add songs to the Playlist by track, album, artist, or genre


1. Press **Library**.
2. Use the navigation buttons to browse through your stored music collection. Refer to “Finding stored music” on page 46.
3. Select the track, album, artist, or genre that you want to add.
4. Press and hold **Playlist** until TRACK>>PLAYLIST or ALBUM>>PLAYLIST is displayed on the media center. The Music Library screen on your TV also indicates that a track, or one or more albums have been added to the Playlist.

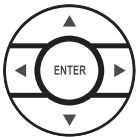

To remove all tracks from the Playlist

Before building a new playlist, you may find it easier to clear the playlist of all its songs.

1. Press **System**.
2. Select **Media Center** options. Press **Enter**.
3. Select **uMusic Preset Action**. Press **Enter**.
4. Select **Clear Playlist**. Press **Enter**.
5. Press **Exit** to leave the System menu.

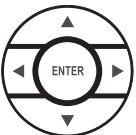

Searching through your music library

Using the Library display, you can search through your music collection by genre, artist, album, or track.


Finding stored music

1. Press **Library**. The Music Library display (Figure 29) appears on your TV. Information also appears on the media center display (Figure 30).



Figure 29


On-screen Music Library display

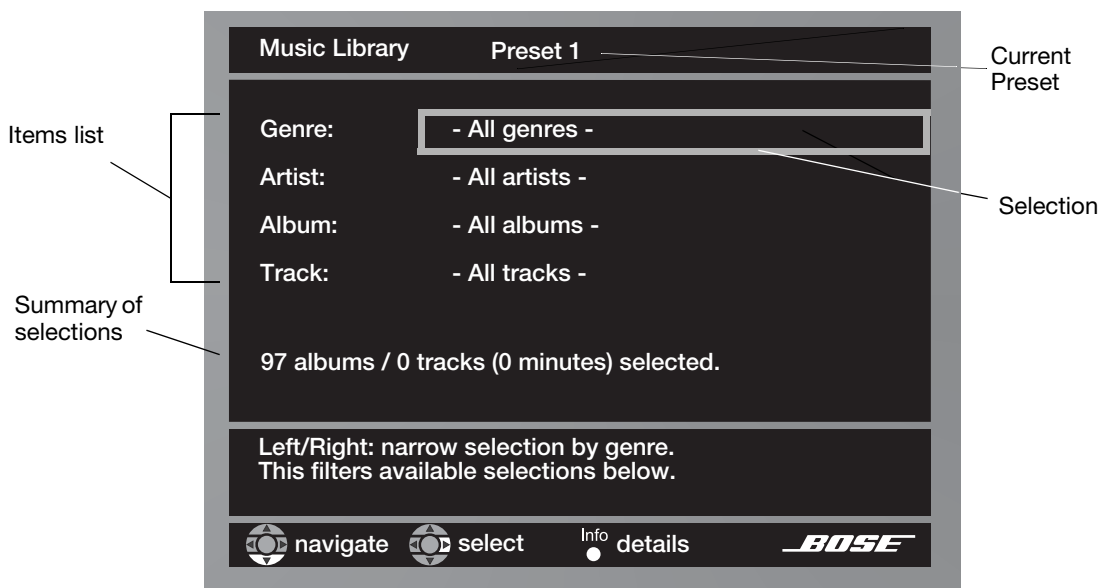

2. Use the navigation buttons on the remote to search for music by Genre, Artist, Album, or Track. Use the up/down arrows to select an item in the list. Use the left/right arrows to change the selection.
3. When you select a track or album you want to hear, press **Enter** to play it. When it is done, the uMusic™ playback system will again start to select songs for you.
4. Press **Exit** to leave the Music Library.

Figure 30

Example of Library information on the media center display

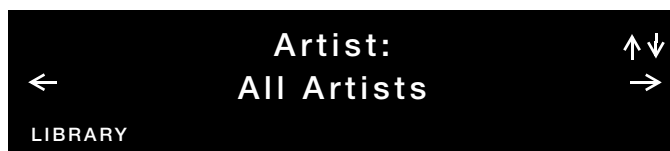

Rating stored music in the library display


You can register a rating for any stored music found in the library by genre, artist, album, or track. First find the item in the library display. While the item is selected, press the **- Rating** or **+ Rating** button on your remote. The display confirms your rating (Figure 31).

Figure 31

Example of rating indicator in the music library display

Selection you are rating

Music rating confirmation
(+ or - indicates how you rated the selection)

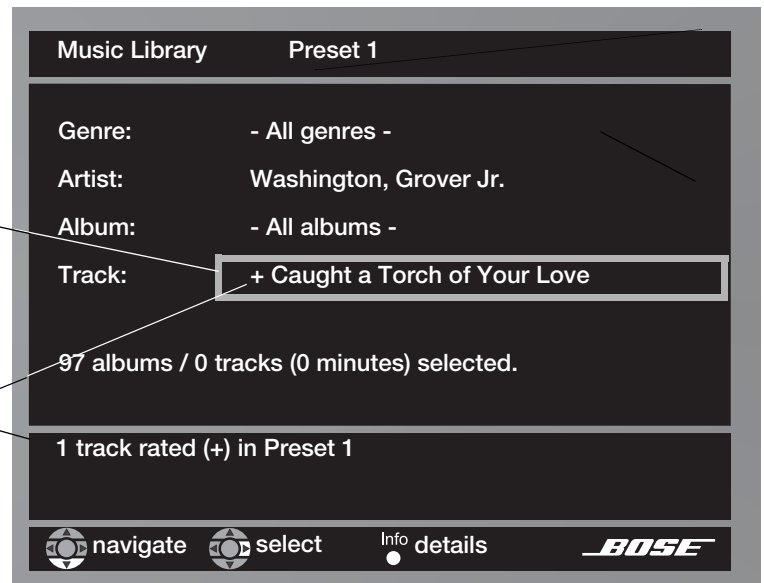

Registering your system for music information updates

When you store CDs, your system draws information from a built-in catalog of music information. This catalog includes 30 different characteristics about each CD such as style, tone, related artists, key influences, and musicians. This is the information that makes the uMusic intelligent playback system work.

Periodically, Bose issues a system update disc to make sure system owners have the most up-to-date music catalog. To receive future updates, be sure to register your system by mailing your completed Product Registration Card to Bose. If indicated on your card, you may be able to register using the Internet.

CHANGING SOURCE SETTINGS

Using the settings menus

While watching a video or listening to music on your system, you can make quick adjustments that will increase your enjoyment of the program. For that purpose, each source you use with this system has its own Settings menu with features appropriate to that source.

To view the settings menus

You can see the Settings menu for each source on your TV screen (Figure 32) and on the display panel of your media center (Figure 33).

1. Turn on your TV and select the correct TV input to view your 3•2•1 GSX system.
2. Press a source button on your 3•2•1 remote control.
3. Press **Settings** to display the Settings menu for the selected source.

If the list of menu items is too long for the screen, a small down or up arrow indicates that you need to scroll down or up to see other items.

4. Press **Exit** to leave the Settings menu.




Settings



Exit

Figure 32

Sample Settings menu on your TV screen

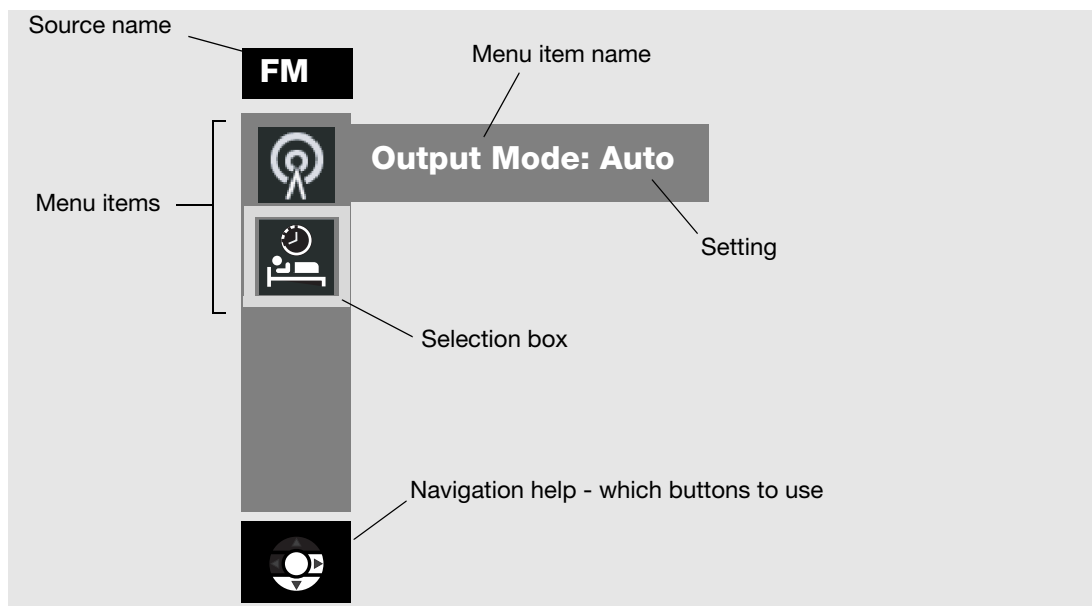


Note: Any changes made in the settings menu on your TV screen will also appear in the media center display panel.

On the media center display panel, menu items will scroll in and out of view as you press the up (▲) and down (▼) arrow buttons on the remote.

Figure 33

Sample Settings menu on the media center display

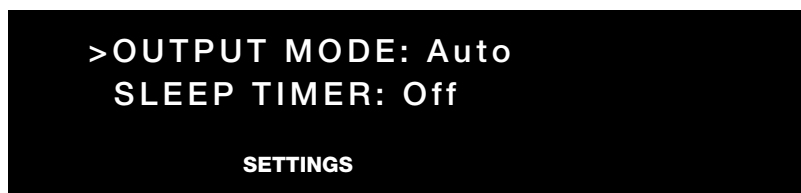


To make changes in the settings menus

Whether you use your TV screen or the media center display to change settings, the same instructions apply.

You can use the actions above to change back to the original (default) settings, too. Do that if you do not like the effect of a change you have made, or accidentally made a change you did not intend. The default settings for each source are shown in the menu tables on the following pages.

 
1. Turn on your TV and select the correct TV input to view your 3•2•1 GSX system.
2. Press a source button on your 3•2•1 remote control.
3. Press **Settings** to display the Settings menu for the selected source.
4. Using the down (▼) and up (▲) arrow buttons, select the menu item you want to change.
5. Press the right arrow (▶) button to select the menu item setting.
6. Press the up (▲) or down (▼) arrow button to change the setting.
7. Press **Enter** or the left arrow (◀) button to save the setting.
8. Press **Exit** to leave the Settings menu.



The progression in Figure 34 shows output mode for the FM tuner being changed from Auto to Stereo.

Figure 34

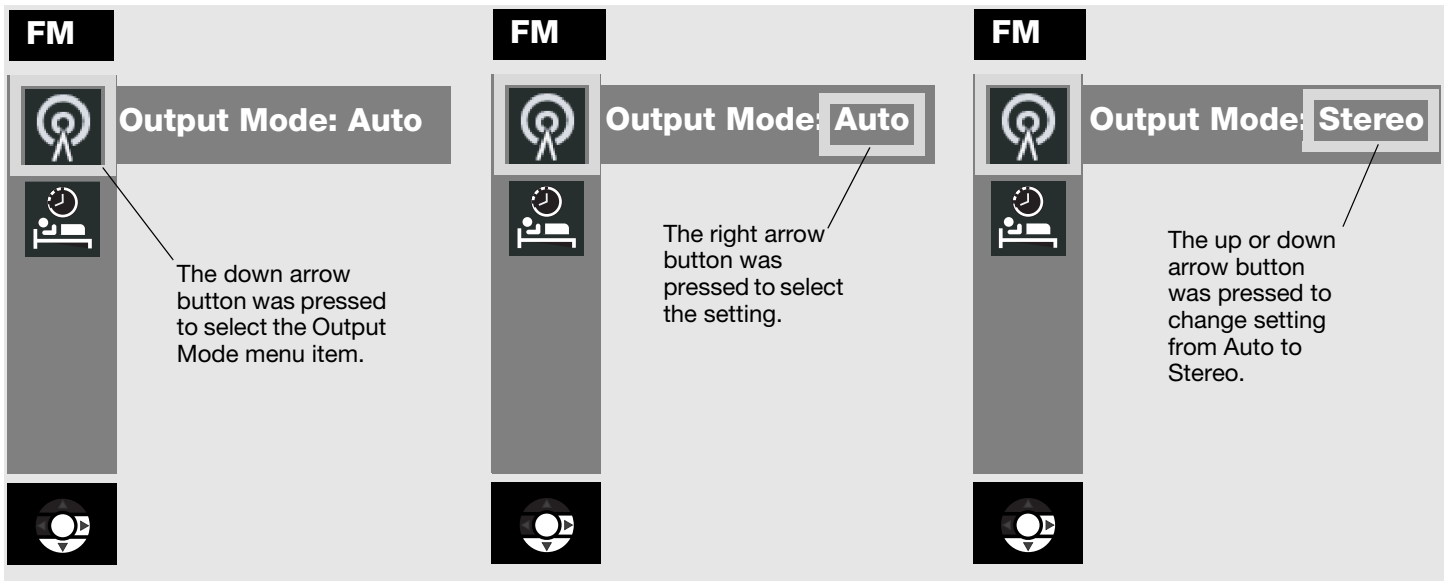


Changing the FM output mode setting



Note: You can restore all default settings by choosing **Restore Settings** in the Systems menu, under **Media Center** options. This reverts all source settings back to the factory default settings. It also changes the **Audio Processing** setting back to **Automatic** (found in the Systems menu under Audio options).




Stored CD settings menu

To see the Stored CD Settings menu, press **Stored** on the remote. Then press **Settings**. Press **Exit** to remove the menu from the screen.

	Name	Settings	Default	Description
	uMusic Preset	1 through 9, or names	1 (or last selected)	Indicates the current preset and allows you to change it.
	Play Mode (indicator)	Library, Encore, CD#, Playlist, Whole CD, Shuffle, Repeat	uMusic	Indicates the current uMusic play mode. Not adjustable in the Settings menu.
	Sleep Timer	10-90 minutes	Off	Sets system to turn off when the selected time elapses.



FM/AM settings menu

To see the FM/AM Settings menu, press **FM-AM** on the remote. Then press **Settings**. Press **Exit** to remove the menu from the screen.

	Name	Settings	Default	Description
	Output Mode (FM only)	Auto, Stereo, Mono	Auto	Allows you to listen to stereo broadcasts in either stereo or mono output.
	RDS Info (FM only, and only on some systems)	Off, On	Off	Displays station and program information (as available from Radio Data System).
	Sleep Timer	Off, 10-90 minutes	Off	Turns the system off after the set time expires. Choose off to deactivate the timer.












CD settings menu

To see the CD Settings menu, press **CD-DVD** on the remote while playing an audio CD. Then press **Settings**. Press **Exit** to remove the menu from the screen.

	Name	Settings	Default	Description
	Track	__ of __		Allows you to select a track on the current disc.
	Sleep Timer	Off, 10-90 minutes	Off	Turns the system off after the set time expires. Choose off to deactivate the timer.

DVD settings menu

To see the DVD Settings menu, press **CD-DVD** on the remote while playing a DVD video disc. Then press **Settings**. Press **Exit** to remove the menu from the screen.






	Name	Settings	Default	Description
	Movie EQ*	On, Off	On	Optimizes the tonal balance for movies.
	Range Compression*	On, Off	On	Adjusts volume to maintain dialogue intelligibility. Keeps some sounds from overwhelming others.
	Mono Decoding*	On, Off	On	Engages Videostage® 5 mono decoding circuitry to convert mono sound (one-channel audio) into simulated surround sound.
	Time	_: _	0:00	Displays the elapsed time of the current DVD. Also, allows you to move to a new location in the movie by entering a new time.
	Title	__ of __		Selects a DVD title from the current disc, according to the number set. Some DVDs do not allow direct access to titles.
	Chapter	_____		Selects a DVD chapter from the current DVD movie, according to the number entered. Some DVDs do not allow direct access to chapters.
	Audio Track	Dependent on disc		Allows you to choose one of the available audio tracks on the current disc.
	Subtitle language	Dependent on disc		Allows you to choose one of the available subtitle languages (only if included on disc).
	Camera Angle	1 of ____		Allows you to select one of the available camera angles (only if included on disc).
	A-B Repeat	A, B		Repeats a segment of the DVD after the start and end points are defined. To begin: <ol style="list-style-type: none"> 1. Move backward or forward to the point in the DVD where you want the segment to start. 2. Press Enter. 3. Move to the point where you want it to end. 4. Press Enter. Repeats until you press the Settings button.
	Sleep Timer	Off, 10-90 minutes	Off	Turns the system off after the set time expires. Choose off to deactivate the timer.

*Available only when Audio Processing is set to User Adjustable. See "Audio options" on page 58 for more information.

TV, CBL-SAT, and AUX settings menu

The settings below affect programs on the TV, even when the source of the program is VCR, CBL/SAT or AUX. There are no separate setting menus for these sources.

Movie EQ, Range Compression and Mono Decoding appear in the menu only if **Audio Processing** is set to **User Adjustable**. Audio Processing can be found in the System menu under Audio options.

	Name	Settings	Default	Description
	Movie EQ*	On, Off	On	Optimizes the tonal balance for movies.
	Range Compression*	On, Off	On	Adjusts volume to maintain dialogue intelligibility. Keeps some sounds from overwhelming others.
	Mono Decoding*	On, Off	On	Engages Videostage® 5 mono decoding circuitry to convert mono sound (one-channel audio) into simulated surround sound.
	Dolby Digital 1+1**	1, 2, Both	1	Plays audio content of selected soundtrack(s). The content of the second soundtrack may be a second language, for example.
	Sleep Timer	Off, 10-90 minutes	Off	Turns the system off after the set time expires. Choose off to deactivate the timer.

*Available only when Audio Processing is set to User Adjustable. See “Audio options” on page 58 for more information.

** Available only when a Dolby Digital 1+1 signal is detected.

Using the System menu

Changes to system options are typically made only once. If your system operates as you want it to, there may be no need for any changes. In some cases, however, changes are required to make the system fully compatible with the installation options you have chosen.

To change System menu options

Unlike the source settings menus, the System menu only appears on your TV screen.

1. Turn on your TV and select the correct TV input to view your 3•2•1 GSX system.
2. Press the **System** button on your 3•2•1 remote control. The System menu (Figure 35) appears on your TV screen.



Note: Entering the System menu causes any DVD or VCD that is playing to pause.


Figure 35

System menu example

Categories of options

List of system options for the selected category

Navigation help – Which remote control buttons to use

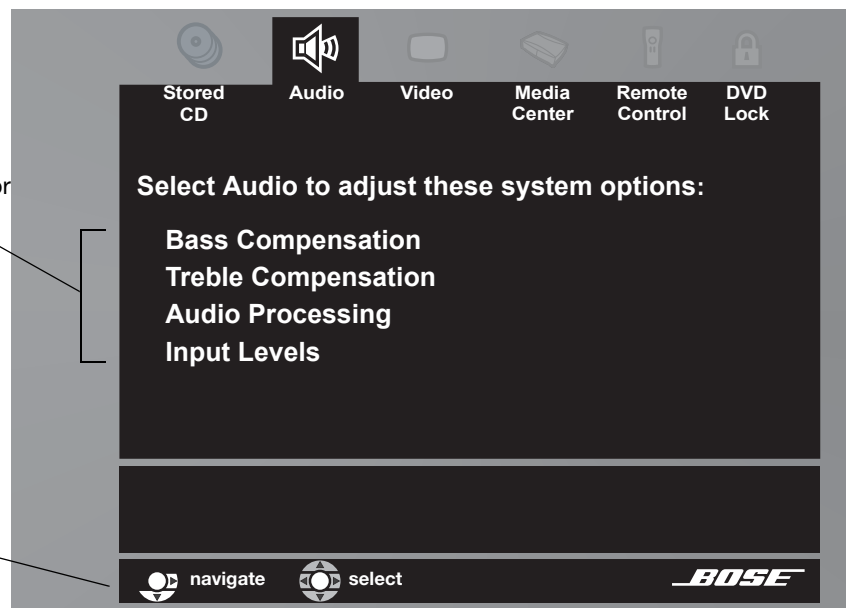

3. Using the right (▶) and left (◀) arrow buttons, highlight one of the option categories (Stored CD, Audio, Video, Media Center, Remote Control, or DVD Lock).
4. Press **Enter** or the down (▼) arrow to select the option category.
5. Using the down (▼) and up (▲) arrow buttons, select the system option to change.
6. Press the right arrow (▶) button to see the system option settings.
7. Press the up (▲) or down (▼) arrow button to change the setting.
8. Press **Enter** or the left arrow (◀) button to save the setting.
9. Press **Exit** to leave the System menu.




Stored CD options

Press **System** on the remote control. A preview of Stored CD features is displayed. Press the down arrow button to move into an active display of submenus.

🎵 **Note:** This choice is available from the System menu only when music from at least one CD has been stored in the system. For information on storing your music, refer to “Storing CDs” on page 39.

Figure 36

Stored CD preview

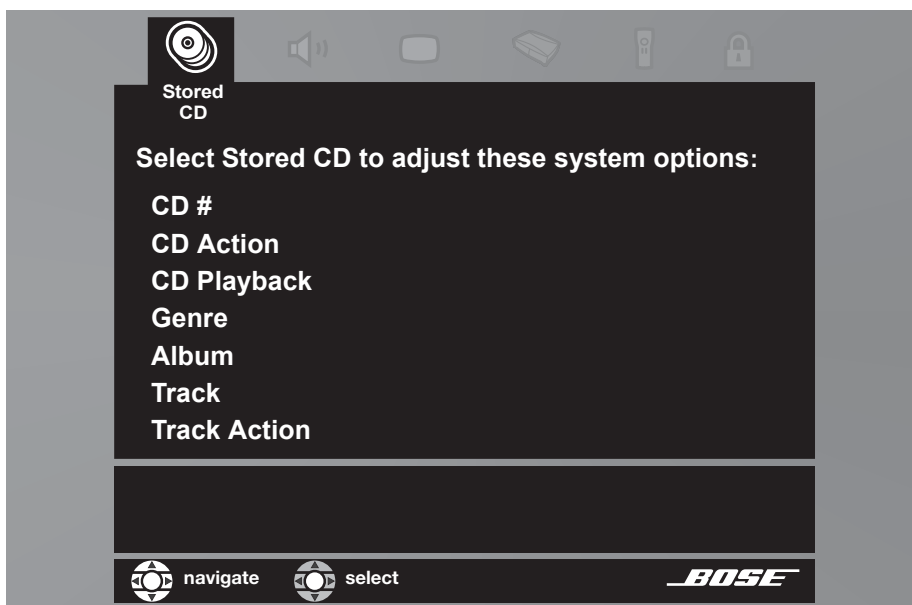

Stored CD Options	Settings	Description
CD# (Indicator only)	1 [default] or selected CD number	Shows the settings for the CD with that number in the system. Changes when the CD selection changes; cannot be edited.
CD Action	Reload CD information [default] Delete CD	Replaces user edits with database information. Requires confirmation. Then removes all information related to this CD.
CD Playback	Automatic [default] Link all tracks Don't link all tracks	Plays linked tracks of a CD in order, such as movements of a symphony. Tracks play together and in order only. Tracks do not always play in order and together.

Stored CD Options	Settings	Description
Genre	Rock/Pop, Classical, Jazz, Electronica, World, Latin, Country, Hip Hop/Rap, Vocal Music, Gospel/Religious, Blues, Soundtrack, Folk/Bluegrass, New Age, Reggae, Easy Listening, Children, Spoken/Comedy, Holiday, Other, Unlabeled	Identifies the type of music on the CD. Reclassifies the CD as the selected music genre.
Album	<i>Specific to the CD.</i>	Displays an editing screen** on your TV which allows you to change album information.
Artist*	<i>Specific to the CD.</i>	Displays an editing screen** on your TV which allows you to change artist information.
File Artist As*	<i>Specific to the CD.</i>	Displays an editing screen** on your TV which allows you to change the way an artist's name is listed.
Track	<i>Specific to the CD.</i>	Allows you to select a track on the CD.
Track Action	Edit [default] Delete Track	Selecting Edit displays an editing screen on your TV. Displays a message asking you to confirm your selection. Upon confirming, the current track and all track information is deleted.

*Does not appear in every menu.



** See "Using the Edit Screen" on page 56.

Using the Edit Screen

The Edit Screen (Figure 37) enables you to change or replace music information provided by the system. It appears when you select a menu item that can be edited from the Stored CD options (page 54) or the Library menu (page 46).

Figure 37

Edit Screen example

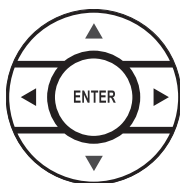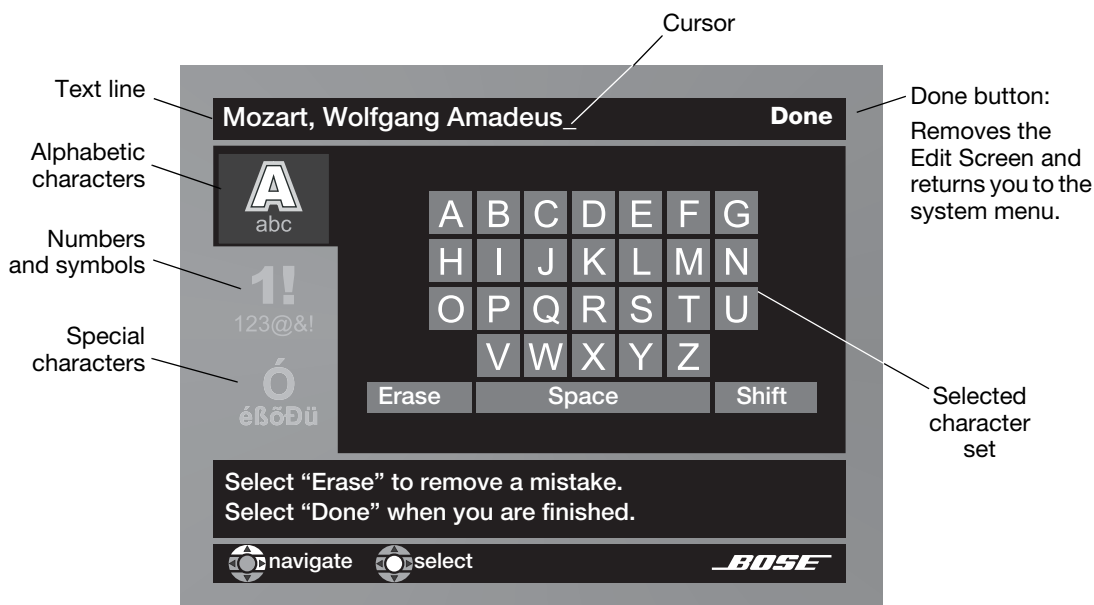

When you select a menu item that can be edited, the text appears in the text line of the Edit Screen. You can add to it or enter new text by selecting characters from the alphabetic, numeric, or special character sets. Use the remote control up, down, left and right arrows to select a character and press **Enter** to write it in the text line. When you are finished editing, select the **Done** button and press **Enter** to remove the Edit Screen.

To remove existing characters from the text line:

Characters are removed from right to left starting at the cursor.

1. Select **Erase**.
2. Press **Enter** to remove the last character in the text line.
3. Press **Enter** as often as needed to remove additional characters in that line.

To enter new text or add to existing text:

New characters are added starting at the cursor.

1. Move to a character and press **Enter**.
2. Move to the next character and press **Enter**.

To enter a space between words:

Spaces are entered to the right of the last character in the text line.

1. Select **Space** and press **Enter**.
2. Select the first character of your next word and press **Enter**.

To enter a capital letter:

The first letter of a new line of text is automatically capitalized. Lower case characters are entered after that unless you use the Shift function.

1. Select **Shift** and press **Enter**. Notice that the alphabetic character set is now all capital letters.
2. Select the next character and press **Enter**.
3. Select **Shift** and press **Enter** again if you want the next entered character to be lower case.

To enter a number or symbol:

1. Select the number and symbols character set.
2. Select the number or symbol you want and press **Enter**.

To enter a non-English special character:

1. Select the special characters set.
2. Select the special character(s) you want and press **Enter**.

To save the text:

- Select **Done** and press **Enter**.

To undo all edits you've made:

To undo changes you made to CD information, you can replace your changes with the original music information that came stored in your system.

1. Press **System** on the remote.
2. Select **CD Action**.
3. Select **Reload CD information** and press **Enter**.
4. Press **Exit**.


Audio options

The audio options affect the way the system sounds in your home.

🎵 **Note:** Listening to an audio source while you change audio options can be helpful. Some changes will be immediately noticeable and therefore useful in fine tuning your selections.

Figure 38

Audio system options

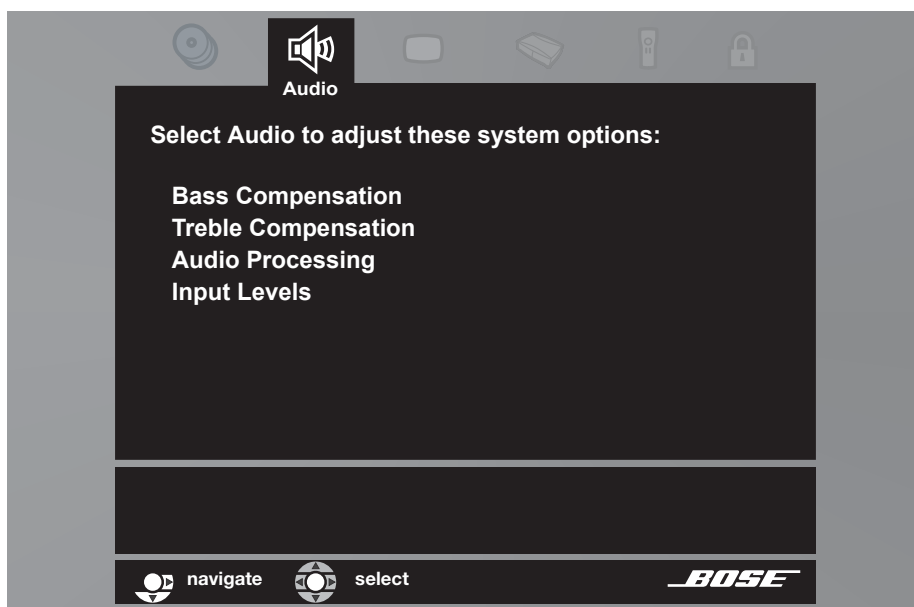


	Settings	Description
Bass Compensation	0 [default] -14 to +14	Normal low-frequency reproduction. Decreased (-) or increased (+) low-frequency reproduction.
Treble Compensation	0 [default] -14 to +14	Normal high-frequency reproduction. Decreased (-) or increased (+) high-frequency reproduction.
Audio Processing	Automatic [default] User Adjustable	Standard Bose® processing applied. Processing options (Movie EQ, Range Compression, Mono Decoding) available in Source Settings menus.
Input Levels: TV Analog Input Level TV Digital Input Level CBL/SAT Analog Input Level CBL/SAT Digital Input Level AUX Analog Input Level AUX Digital Input Level	Normal [default] -6, -3, +3, +6	Standard signal level (loudness). Decreases or increases signal level (adjustable to match the levels of other audio devices). Note: You may want to adjust the input levels of external audio devices so they match the system's internal FM and CD levels.

Video options

The video options affect the way the picture looks on your TV.

Figure 39

Video system options

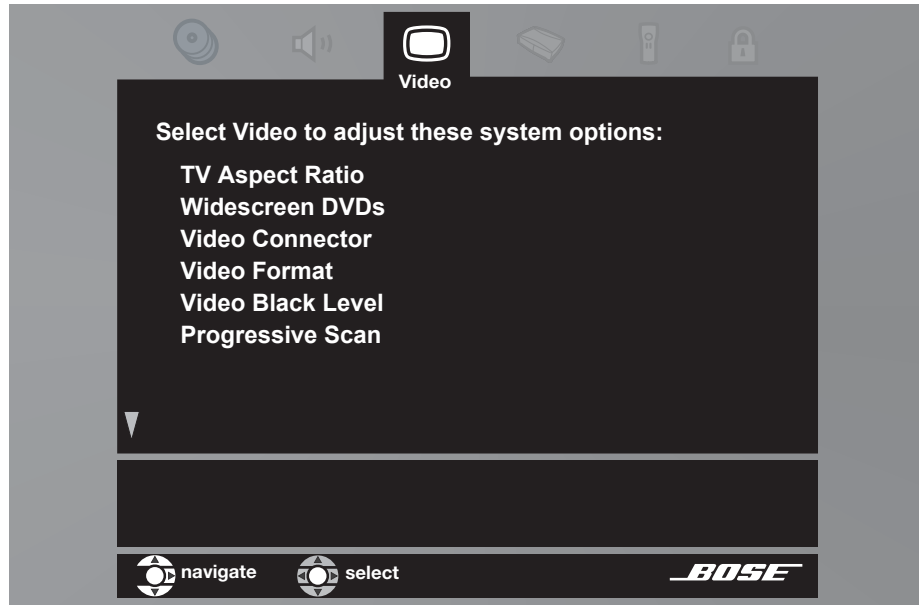

	Settings	Description
TV Aspect Ratio	Normal [default] Widescreen	4:3 ratio screen display. 16:9 ratio widescreen display.
Widescreen DVDs	Modified [default] Unmodified	Modified [default]. Unmodified.
Video Connector*	Composite + S-Video [default] Component	Identifies the type of video connection made on the back panel of the media center.
Video Format	NTSC [default] PAL	Correct for NTSC (US standard) monitors. Correct for PAL (European standard) monitors.
Video Black Level	Normal [default] Extended	Screen black level generally appropriate for TVs. Increases screen black level, appropriate for certain TVs.
Progressive Scan**	Off [default] On	Screen image repaints in standard style. Screen image repaints in advanced style (if available on the TV).

* A read-only item that indicates the connection detected automatically by the system.


** Appears only when **Video Connector** is **Component** (NTSC only).

Media center options

The media center options affect the general operation of the system.

Figure 40

Media Center system options

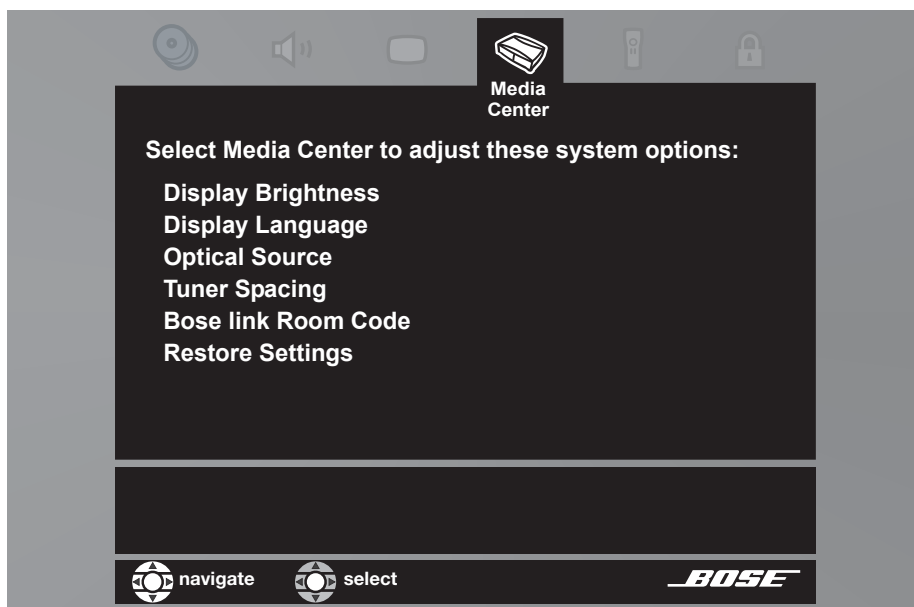

	Settings	Description
Display Brightness	4 [default] 1 (darkest) to 4 (brightest)	Media center display lights with a mid-range brightness. Darkens or lightens the media center display.
Display Language	English [default] Dansk, Deutsch, Espanol, Francais, Italiano, Nederlands, Svenska	On-screen display menus appear in the selected language.
Optical Source	None [default] TV, CBL/SAT, AUX	No digital signal received via optical cable. Digital signal received via optical cable for selected source.
Tuner Spacing	US [default] European	Channel spacing for AM/FM radio stations set to selected region standard.
uMusic Preset	1 [default] 2, 3, 4, 5, 6, 7, 8, 9	The selected preset to which a uMusic Preset Action is applied.
uMusic Preset Action	Edit name Clear playlist Clear ratings	Opens an editing screen for naming or renaming the selected uMusic Preset. Removes all tracks from the system playlist. Removes all stored ratings associated with the selected uMusic Preset.
Bose link Room Code*	B [default] C, D, E, F, G, H, I, J, K, L, M, N, or O	Assigns a room code to your 3•2•1 GSX system when it is connected to a Bose® link source.
Restore Settings	No Yes	Maintains current system settings. Reverts system settings back to factory defaults.

** Appears only when a Bose® link source is connected.

Remote control options

The Remote Control options help you set up your remote to control other audio devices that are connected to your system.

Figure 41

Remote Control system options



	Settings	Description
TV Brand	Brand name	Provides a list of TV brands for the 3•2•1 remote control to operate.
TV Device Code	Code number	Provides a list of available device codes for the selected TV brand.
CBL•SAT Device	Cable, Satellite	Identifies which of two devices is connected to the CBL-SAT input.
CBL•SAT Brand	Brand name	Provides a list of cable/satellite box brands for the 3•2•1 remote control to operate.
CBL•SAT Device Code	Code number	Provides a list of available device codes for the selected cable/satellite box brand.
AUX Device	VCR, PVR	Identifies which of two devices is connected to the AUX input.
AUX Brand	Brand name	Provides a list of VCR/PVR brands for the 3•2•1 remote control to operate.
AUX Device Code	Code number	Provides a list of available device codes for the selected VCR/PVR brand.

🎵 **Note:** To find the brand and device codes for each component that can be connected to, and controlled by the 3•2•1 GSX system, see "Device Codes" on page A-1.


🎵 **Note:** After programming your remote to control external audio/video devices from the System menu, press the System button once to continue navigating the System menu.

DVD Lock options

The DVD Lock options allow you to restrict viewing of DVD videos with certain ratings. To activate this feature, you need to set a level of restriction and establish a password in the DVD Lock section of the System menu.

Figure 42

DVD Lock system options

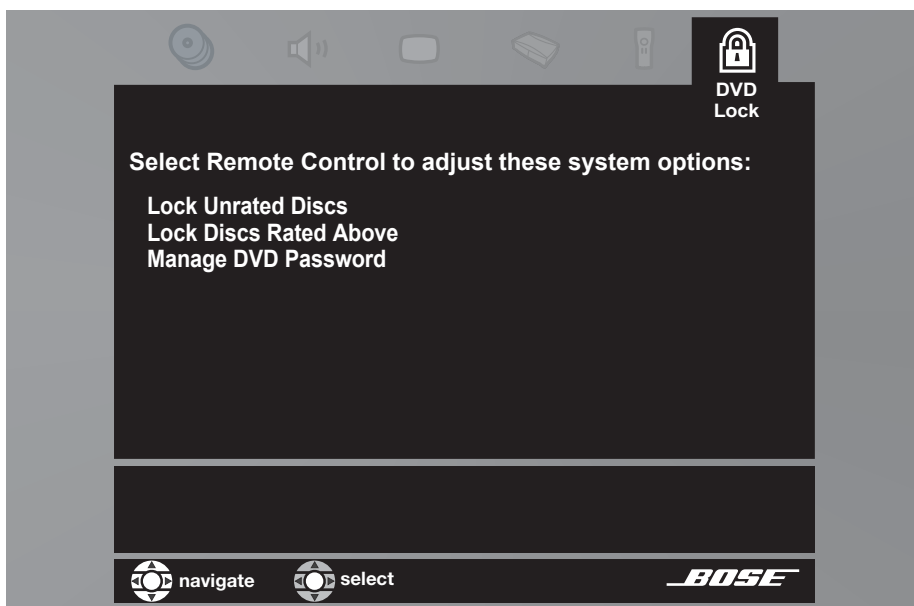

	Settings	Description
Lock Unrated Discs	Off On	No restriction applies to unrated DVD movies. Restricts viewing access to unrated titles when password is set.
Lock Discs Rated Above	1 to 8	Helps prevent viewing discs above the selected number when a password is created.
Manage DVD Password	----	Establishes a new four-number code to restrict access to movies with certain ratings.

Setting a password and restriction level

Your password will help prevent unauthorized viewing of DVD videos that have a higher rating than your restriction level. There are 8 levels to choose from, matched to movie ratings set by the Motion Picture Association of America (MPAA). See “Motion Picture Association of America (MPAA) rating system” on page 63.

1. Turn on your TV and select the correct TV input to view your 3•2•1 GSX system.
2. Press the **System** button on your 3•2•1 remote control.
3. Using the right (▶) and left (◀) arrow buttons, highlight the DVD Lock option.
4. Press **Enter** or the down (▼) arrow key.



Note: If you are using the DVD Lock option for the first time, enter a four-digit password. Then enter it again to confirm.



5. Enter your four-digit password.
6. Using the down (▼) button, scroll down to Lock Discs Rated Above.
7. Press the right arrow (▶) button to see the available settings.
8. Press the up (▲) or down (▼) arrow button to find the rating you want.
9. Press **Enter** or the left arrow (◀) button to save the setting.
10. Press **Exit** to dismiss the Settings menu.



Motion Picture Association of America (MPAA) rating system

	<i>MPAA Rating</i>	<i>Audience Restriction</i>
8		None
7	NC-17	Adult audiences
6	R	Mature audiences
5		Mature teenage audiences
4	PG-13	Teenage audiences
3	PG	Mature young audiences
2		Most audiences
1	G	General

Example: Choosing a Parental Control Setting of 4, restricts access to videos rated above PG-13. Videos with ratings above that may be viewed only after entering the password.

Your password also helps prevent others from changing the restriction level setting without permission.

MAINTAINING YOUR SYSTEM

Cleaning

Cleaning the media center

- Use only a soft, dry cloth to clean the outside surfaces of the media center.
- Do not use any sprays near the system. Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives.
- Do not allow liquids to spill into any openings.

Cleaning the speakers


- Clean the surface of your speakers with a soft, damp cloth. You can use an ammonia-free window cleaner on a soft cloth to maintain the finish.
- Do not use any sprays near the speakers. Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives.
- Do not allow liquids to spill into any openings.

Cleaning discs

- Handle discs by their edges to prevent fingerprints and scratches (Figure 43a).
- To remove stains or fingerprints from the surface of a disc, use a soft and dry lint-free, cloth. Wipe in straight movements from the center of the disc to the outside (Figure 43b). Do not use any chemical products; they can damage the disc.
- Do not use a circular motion to clean (Figure 43c).
- Do not write on or attach labels to the surface of a disc.
- To minimize exposure to dust and dirt, return discs to their cases after use. Store each disc in its case, away from direct sunlight, high temperatures, and humidity.

Figure 43

Disc care

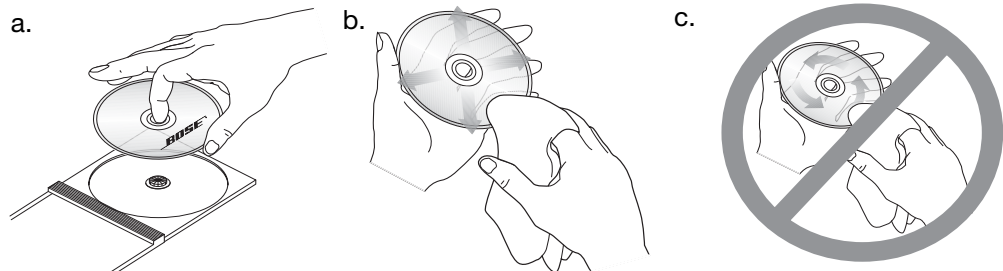

Replacing the remote control batteries




CAUTION: Please dispose of used batteries properly, following any local regulations. Do not incinerate.

- Slide open the battery compartment (Figure 44).
- Notice the polarity markings (+ and -) inside the compartment and install the batteries accordingly. Be sure to replace both batteries.
- Slide the battery compartment cover back into place.

Figure 44

Putting in the batteries

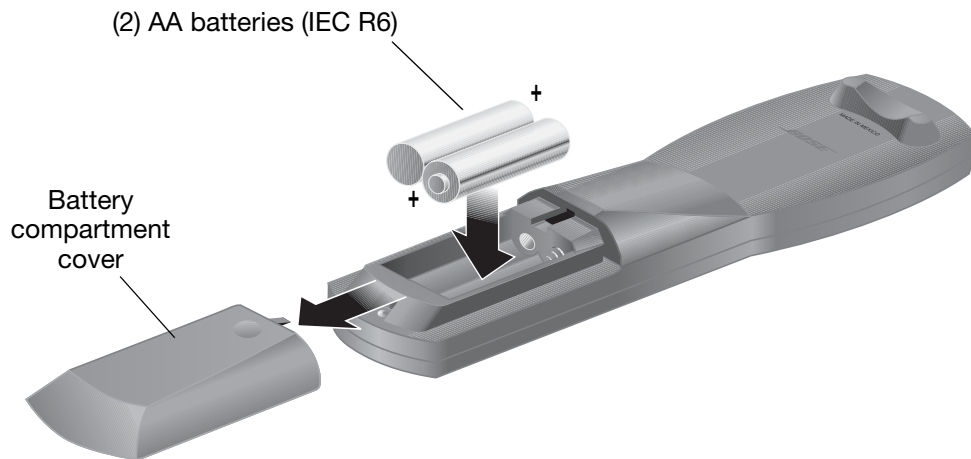


Accessories

The Bose® 3•2•1 GSX system shelf speakers are compatible with Bose mounting accessories, including the UB-20 wall brackets, UFS-20 floor stands and UTS-20 table stands (Figure 45). Bose also offers cable adapters for use in running speaker cable through walls.

For further information or to order the mounting brackets, stands, or cable adapters, contact your Bose dealer or Bose Corporation directly. Refer to the address sheet included in the shipping carton.

Figure 45

Speaker accessories

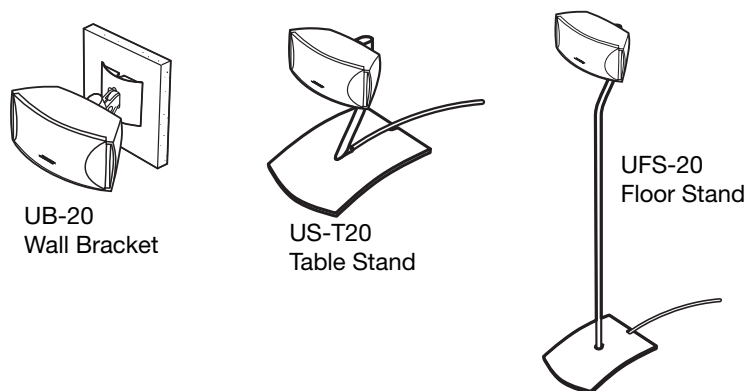

TROUBLESHOOTING

Troubleshooting table

Problem	What to do
System doesn't do anything	<ul style="list-style-type: none"> • Make sure the unit is turned on. Try pressing the remote On-Off button and the media center On-Off button. • Make sure the Acoustimass module cable is properly connected to the media center and the Acoustimass module. • Make sure the power cord is inserted securely into the Acoustimass® module and plugged firmly into an operating AC wall outlet. • Be sure to select a source (CD/DVD, AM/FM, etc.). • Unplug the Acoustimass module power cord from the outlet for one minute, then reconnect it. This allows the unit to reset itself. After reconnecting the power cord, wait for the message, "BOSE 3•2•1" to appear on the media center display.
Disc won't eject	<ul style="list-style-type: none"> • Turn off the unit. • Unplug the Acoustimass module power cord from the outlet for one minute, then reconnect it. This allows the unit to reset itself. • Before powering on, press and hold Eject on the media center.
No sound	<ul style="list-style-type: none"> • Increase the volume. • Check to see if MUTE is lit on the display. If it is, press the Mute button on the remote control to unmute the sound. • On the remote, press the button for the source you want to hear. If you previously selected a source by pressing the Source button on the media center, you cannot control the new source with the remote until you press the button for this new source on the remote. • Make sure the Acoustimass module cable and speaker cable are firmly seated in their respective jacks and the multi-pin connector on the other end is firmly seated in the Acoustimass module jack. • Check speaker connections. • Turn the media center off for 10 seconds, then on again. • Check the connections for any external audio devices. Be sure to select the correct source for the desired input. • Be sure the disc is placed correctly, label-side up, in the CD tray. • Connect the FM and AM antennas. • Unplug the Acoustimass module power cord from the outlet for a minute, then reconnect it. This allows the unit to reset itself. • If you are using an optical digital audio connection, make sure that the optical jack is correctly assigned in the System menu. • Make sure the volume is turned up on the TV. • Check input level settings for each connected device in the System menu.
Sound, but no picture	<ul style="list-style-type: none"> • Make sure the TV is on. • When playing a DVD or other video source, make sure the TV is set to the correct video input.
Remote control is inconsistent or does not work	<ul style="list-style-type: none"> • Check batteries and their polarity (+ and –). See "Replacing the remote control batteries" on page 65. • On the remote, press the button for the source you want to hear. If you previously selected a source by pressing the Source button on the media center, you cannot control the new source with the remote until you press the button for this new source on the remote. • Point the remote control at the media center.

Problem	What to do
Radio does not work or has poor reception	<ul style="list-style-type: none"> • Make sure antennas are connected properly. • Move AM antenna at least 20 inches (50 cm) from the media center. • Adjust antenna position to improve reception. • AM antenna must be upright. • Move antennas farther from TV or other electronic equipment. • You may be in an area of weak signal coverage.
DVD or CD does not play	<ul style="list-style-type: none"> • Check to see if the Play symbol in the display is lit. • After pressing the CD/DVD button, wait a few seconds before pressing Play. • Make sure the disc is properly inserted (label-side up). • Eject the disc and try loading it again. • There may be dirt or dust on the disc. Clean the disc. See “Cleaning discs” on page 64. • The disc may be defective. Try another disc. • Make sure region codes for both the DVD and player match. See “Check for region code compatibility” page 5.
FM sound is distorted	<ul style="list-style-type: none"> • Adjust antenna position to reduce interference.
Sound is distorted	<ul style="list-style-type: none"> • Make sure speaker cables are not damaged and the connections are secure. • Reduce the output level from any external audio devices connected to the music center. • Reduce the input level setting for the connected device in the system menu.
Picture is black and white or rolling	<ul style="list-style-type: none"> • Check the video cable connections. • Check the Video Format setting and change to appropriate setting (NTSC or PAL). See “Video options” on page 59.
Forgot your password	<ul style="list-style-type: none"> • Enter the password 2673 to unlock DVD access.
“NO LABEL” appears on the media center display when using the Stored CD source	<ul style="list-style-type: none"> • The uMusic system uses a catalog of music information to identify and classify the CDs you store. A recent CD release might not be in the catalog. To receive music information updates, be sure to register your system. • Manually enter information using the edit screen (page 56).
“BUSY PROCESSING CDs” appears on the media center display and it won’t let me store any more CDs	<ul style="list-style-type: none"> • When you store a CD, the tracks are first placed in a holding area which can hold up to 10 CDs. This message appears if this holding area is full. Wait 30 minutes and try again.

Customer service

For additional help in solving problems, contact Bose® Customer Service. Refer to the address list included in the carton.

TECHNICAL INFORMATION

Power rating

USA/Canada: 120V ~ 50/60Hz 300W

International: 220-240V ~ 50/60Hz 300W

Dual voltage: 115/230V ~ 50/60Hz 300W

Audio inputs

AUX – Left, Right (analog); **D** (digital)

CBL-SAT – L, R (analog); **D** (digital)

TV – L, R (analog); **D** (digital)

Optical – SPDIF digital, mapped to input

Audio outputs

Acoustimass® Module – SPDIF

Video inputs

C (composite) – NTSC or PAL format

S-Video

Video outputs

C (composite) – NTSC or PAL format

S-Video

Component Y, Pb, Pr

Antennas

FM 75Ω – external FM antenna

AM – external AM antenna

Maximum ambient temperature

104°F (45°C)

Dimensions

Media center: 3¼"H x 13¾"W x 10"D
(8.3 cm x 34.9 cm x 25.4 cm)

Remote control: 1⅛"H x 2½"W x 9"D
(3.0 cm x 6.5 cm x 22.9 cm)

3•2•1 GSX speakers: 2½"H x 5½"W x 4"D
(6.4 cm x 14 cm x 10.5 cm)

Acoustimass module: 14½"H x 8¾"W x 19⅛"D
(36.7 cm x 22.2 cm x 48.5 cm)

Weights

Media center: 6.7 lb (3.0 kg)

GSX speakers: 1 lb (.45 kg) each

Acoustimass module: 23.3 lb (10.6 kg)

Finish

Media center: polymer

Speakers: polymer

Acoustimass module: polymer

END USER LICENSE AGREEMENT

IMPORTANT: READ CAREFULLY: This End User License Agreement (“EULA”) is a legal agreement between you, the End User (“End User” or “You”), and Bose Corporation (“Bose”) governing your use of the technology and software and data and data content belonging to Bose, its vendors and licensors (“Technology”), that is contained in this audio/video device (“System”). By tearing open the protective wrapping on this System, you are agreeing to be bound by the terms of this EULA. In the event you disagree with any of the terms contained herein, DO NOT UNWRAP THIS SYSTEM. Return the sealed System to Bose Corporation for a full refund.

Copyright laws and international copyright treaties, as well as other intellectual property laws and treaties protect the Technology contained within this System. The Technology is being licensed, not sold. This EULA grants you the right to use the Technology only on this Bose System. You may NOT transfer, lend, distribute, prepare derivative works, reverse engineer, de-compile, or disassemble the Technology, except and only to the extent that applicable law expressly permits such activity. You agree that you will use the Technology and the System solely for your own personal non-commercial use.

The Technology contains software that allows You to obtain vendor-supplied music-related information, including name, artist, track, and title information (“Data”). You may use Data only by means of the intended End User functions of the Technology. You agree not to assign, copy, transfer or transmit such Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT DATA EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Technology will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Technology or Data. Bose, its vendors and licensors reserve all rights in the Technology, including all ownership rights. You agree that the vendors and licensors of Bose may enforce their rights under this Agreement directly in their own name.

Bose warrants this System in accordance with the provisions of the warranty card delivered with this System. EXCEPT AS EXPRESSLY SET FORTH THEREIN, BOSE, ITS VENDORS, AND ITS LICENSORS HEREBY DISCLAIM ALL WARRANTIES, EXPRESS, IMPLIED, AND STATUTORY, IN CONNECTION WITH THE TECHNOLOGY, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OF THIRD PARTY RIGHTS, AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL BOSE, ITS VENDORS, OR ITS LICENSORS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE TECHNOLOGY. IN NO EVENT SHALL BOSE BE LIABLE FOR ANY DAMAGES.

None of the Technology shall be exported or re-exported in violation of any export provisions of the United States or any other applicable jurisdiction. Any attempt to sublicense, assign or transfer any of the rights, duties or obligations hereunder shall be void. This Agreement shall be governed by and interpreted under the laws of the Commonwealth of Massachusetts, without regard to its conflicts of law provisions.

YOU ACKNOWLEDGE THAT YOU HAVE READ AND UNDERSTAND THIS AGREEMENT AND AGREE TO BE BOUND BY ITS TERMS. YOU FURTHER AGREE THAT THIS AGREEMENT IS THE COMPLETE AND EXCLUSIVE STATEMENT OF THE AGREEMENT BETWEEN YOU AND BOSE AND SUPERCEDES ANY PROPOSAL OR PRIOR AGREEMENT, ORAL OR WRITTEN, AND ANY OTHER COMMUNICATIONS RELATING TO THE SUBJECT MATTER OF THIS AGREEMENT.

Device Codes

Códigos de instalación

Codes de configuration

TV Television Televisor Télévision	888.....	0264, 0412	Akai.....	0009, 0030, 0035, 0037, 0072, 0163, 0178, 0191, 0208, 0216, 0217, 0218, 0264, 0284, 0361, 0371, 0433, 0448, 0473, 0480, 0516, 0548, 0556, 0581, 0602, 0606, 0631, 0672, 0696, 0702, 0708, 0714, 0715, 0729, 0745, 0753, 0806, 0812, 1537, 1903	Anitech	0009, 0037, 0282	Axion	1937
	A-Mark	0003	Akiba	0037, 0218, 0282, 0294, 0455	Ansonic.....	0009, 0104, 0292, 0370, 0428, 0668	Axxent.....	0009
	A.R. Systems.....	0374, 0455	Akito.....	0037, 0272	AOC.....	0003, 0009, 0030, 0060, 0092, 0093, 0108, 0178, 0179, 0180, 0451	Baihe	0009, 0264, 0412
	Abex	0032	Akura.....	0009, 0037, 0218, 0264, 0282, 0412, 0493, 0668, 0714	Aolingpu.....	0858	Baile	0001, 0009, 0374, 0661
	Accent.....	0009	Alaron	0179, 0216	Aolinpike	0264, 0412	Baird.....	0072, 0073, 0190, 0193, 0208, 0217
	Acec	0012	Alba	0009, 0036, 0037, 0163, 0216, 0218, 0235, 0247, 0355, 0371, 0418, 0443, 0487, 0581, 0668, 1037	Apex Digital.....	0748, 0765, 0767, 0879, 1943	Bang & Olufsen	0087, 0565
	Acura	0009	Alfide	0672	Apollo.....	0473	Baohuashi	0264, 0412
	Adcom	0284	Allorgan	0206, 0217, 0294	Arc En Ciel	0109, 0196, 0198, 0399, 0501	Baosheng.....	0009, 0817
	Addison	0092, 0108, 0653	Allstar	0037	Arcam.....	0216, 0217	Barco.....	0380
	Admiral	0087, 0093, 0163, 0264, 0463	Ambassador	0177	Archer	0003	Basic Line	0009, 0037, 0217, 0218, 0282, 0339, 0374, 0455, 0556, 0668
	Advent.....	0519, 0761, 0779, 0783, 0807, 0815, 0817, 0842, 1933	America Action	0180	Ardem	0037, 0714	Bastide.....	0217
	Adventura.....	0046	Amplivision.....	0217, 0370, 0400	Aristona	0012, 0037, 0556	Baur	0037, 0303, 0361, 0505, 0512, 0535, 0554
	Adyson	0032, 0216, 0217	Ampro.....	0751	Arthur Martin.....	0163, 0400	Baysonic.....	0180, 0236, 0463
	Agashi	0216, 0217, 0264	Amstrad.....	0009, 0037, 0171, 0177, 0218, 0264, 0354, 0371, 0412, 0433, 0516, 0581, 0648, 1037	ASA	0070, 0087, 0104	Bazin	0217
	AGB	0516	Anam.....	0003, 0009, 0180, 0250, 0628, 0700, 0861	Asberg	0037, 0102	Beaumark.....	0178
	Agef.....	0087	Anam National	0055, 0250, 0650	Asora	0009	Beijing.....	0001, 0009, 0208, 0226, 0264, 0374, 0412, 0661, 0812, 0817, 0821
	Aiko.....	0009, 0092, 0216, 0217, 0264	Anglo.....	0009, 0264	Astra	0037	Beko.....	0037, 0370, 0418, 0486, 0606, 0714, 0715, 1037
	Aim	0037, 0072, 0706, 0753	Anhua	0051	Asuka.....	0217, 0218, 0264	Bell & Howell	0016, 0154
	Aiwa	0701, 0705, 0848, 1904, 1910, 1914			Atlantic	0037, 0206, 0216, 0259	Beon.....	0032, 0037, 0418
					Atori.....	0009	Berthen	0668
					Auchan	0163, 0400	Best	0337
					Audinac	0180	Bestar	0037, 0370, 0374
					Audiosonic.....	0009, 0037, 0109, 0217, 0218, 0264, 0337, 0370, 0374, 0428, 0486, 0714, 0715	Bestar-Daewoo	0374
					Audioton	0217, 0264, 0370, 0428, 0486	Binatone	0217
					Audiovox	0003, 0092, 0180, 0451, 0623, 0802, 0875, 1937	Black Diamond.....	0614, 1037
				Autovox	0087, 0206, 0217, 0247	Black Panther	0102	
				Awa	0009, 0011, 0036, 0108, 0157, 0216, 0217, 0264, 0374, 0606	Black Star	0247	
						Blacktron	0282	
						Blackway	0218, 0282	
						Blaupunkt.....	0036, 0170, 0191, 0195, 0200, 0327, 0328, 0455, 0535, 0554	

TV

Blue Sky	0037, 0218, 0282, 0455, 0487, 0556, 0668, 0714, 0715, 1037, 1254	Celestial	0767, 0819, 0820, 0821	Condor	0009, 0037, 0247, 0264, 0282, 0370, 0411, 0418	Dayton	0009
Blue Star	0282	Centrex	0780, 0826	Conia	0754	Daytron	0009, 0037, 0374
Bondstec.....	0247	Centrum	1037	Conic	0032	Dayu.....	0374, 0661
Boots	0009, 0217, 0272	Centurion.....	0037	Conrac.....	0808	De Graaf	0208, 0227, 0548
BPL	0037, 0282	Century	0087, 0238, 0247	Conrowa	0009, 0145, 0156, 0264, 0412, 0696, 0698, 0753, 1170	DEC	0795
Bradford.....	0180	CGE	0074, 0084, 0247, 0370, 0418	Contec.....	0009, 0036, 0037, 0157, 0180, 0216	Decca	0033, 0037, 0072, 0217, 0272, 0516, 0621
Brandt	0109, 0196, 0198, 0335, 0399, 0501, 0560, 0625	Changcheng	0001, 0009, 0051, 0264, 0374, 0412, 0661, 0817	Continental Edison.	0109, 0196, 0198, 0399, 0487, 0501	Deitron	0374
Brandt Electronic ..	0109, 0501	Changfei	0009, 0374, 0817	Cosmel	0009, 0037, 0337	Denko	0264
Brinkmann	0037, 0418, 0486, 0519, 0668, 1237	Changfeng	0264, 0412, 0696, 0753, 0817	Craig	0180	Denon	0145, 0511
Brionvega	0087	Changhai	0009, 0817	Crosley	0054, 0074, 0084, 0087, 0247	Denver	0037
Britannia	0216, 0217	Changhong.....	0009, 0156, 0264, 0508, 0519, 0765, 0767, 0783, 0807, 0817, 0820, 0821, 0827, 0848, 1028, 1910	Crown	0009, 0037, 0039, 0053, 0180, 0208, 0339, 0370, 0412, 0418, 0486, 0487, 0579, 0606, 0672, 0712, 0714, 0715	DER.....	0190, 0193
Broksonic	0003, 0236, 0463, 1905, 1911, 1929, 1935, 1938	Chengdu.....	0009, 0817	Crown Mustang	0672	Desmet.....	0009, 0037, 0087
Bruns	0087	Ching Tai.....	0003, 0009, 0092, 0179	CS Electronics.....	0216, 0218, 0247	Diamant.....	0037
BSR.....	0163, 0294	Chun Yun	0000, 0003, 0009, 0033, 0092, 0179, 0180, 0700, 0843	CTC	0247	Diamond	0009, 0264, 0698, 0825
BTC.....	0218	Chunfeng	0009, 0264	Curtis Mathes	0016, 0030, 0039, 0047, 0051, 0054, 0056, 0060, 0093, 0145, 0154, 0166, 0451, 0466, 0702, 1147, 1347, 1919	Digatron.....	0037
Bush.....	0009, 0036, 0037, 0208, 0217, 0218, 0235, 0264, 0272, 0282, 0284, 0294, 0355, 0361, 0371, 0374, 0487, 0519, 0556, 0581, 0614, 0617, 0668, 0698, 0714, 1037, 1237, 1900	Chung Hsin.....	0033, 0036, 0053, 0108, 0180	CXC	0180	Digiline	0668
Caihong	0009, 0817	Chungfeng	0412	Cybertron	0218	Digital Life	0780, 0872
Cailing	0748	Chunsun	0009, 0817	D-Vision	0037	Digitor	0037
Candle.....	0030, 0046, 0056, 0186	Cimline.....	0009, 0218	Daenyk	0179, 0672	Dixi	0009, 0037, 0087
Canton	0218	Cinema	0672	Daewoo	0003, 0009, 0030, 0032, 0037, 0039, 0056, 0092, 0108, 0154, 0170, 0178, 0180, 0217, 0218, 0374, 0451, 0499, 0556, 0623, 0628, 0634, 0661, 0672, 0700, 1661, 1902, 1909, 1921, 1928	DL.....	0848
Capsonic.....	0264	Cineral	0092, 0451	Dainichi.....	0216, 0218	Domeos.....	0668
Carad.....	0610, 0668, 1037	Citizen	0030, 0039, 0046, 0056, 0060, 0092, 0186, 0280, 0451, 0535, 1928	Dansai	0009, 0032, 0035, 0036, 0037, 0208, 0216, 0217	Domland	0394
Carena	0037, 0455	City	0009	Dantax	0714, 0715	Dongda	0009
Carnivale.....	0030	Clarion	0180	Dawa	0037	Donghai.....	0009
Carrefour.....	0036, 0070	Clarivox	0037, 0070			Drean.....	0037
Carver	0054, 0170	Clatronic	0009, 0037, 0102, 0217, 0218, 0247, 0264, 0370, 0371, 0579, 0714			DTS	0009
Cascade	0009, 0037	Clayton	1037			Dual	0037, 0217, 0259, 0303, 0394, 0519, 0807, 1137, 1237
Casio	0037	CMS.....	0216			Dual Tec.....	0217
Cathay.....	0037	CMS Hightec.....	0217			Dumont	0017, 0070, 0087, 0102
CGE.....	0037, 0217	Colt.....	1906			Durabrand	0003, 0171, 0178, 0180, 0463
Celebrity	0000	Concerto.....	0056			Dux	0012, 0037
Celera	0765	Concorde.....	0009			Dwin.....	0720, 0774
						Dynatron	0012, 0037
						E-Elite	0218
						ECE.....	0037
						Edison-Minerva	0487
						Elbe.....	0217, 0238, 0259, 0292, 0411, 0435, 0516, 0610, 0630
						Elbe-Sharp	0516
						Electroband	0000
						Elekta.....	0009, 0264

Elektra.....	0017, 1661	Finlux.....	0037, 0070, 0072, 0087, 0102, 0104, 0105, 0179, 0217, 0346, 0411, 0473, 0480, 0492, 0516, 0621, 0629, 0631, 0714, 0715	GEC.....	0037, 0043, 0072, 0163, 0217, 0361, 0516	Grunpy.....	0179, 0180
ELG.....	0037			Geloso.....	0009, 0374	Haier.....	0698, 0768, 0779, 0869, 1017
Elin.....	0009, 0037, 0104, 0361, 0448, 0548			General.....	0186, 0590	Haihong.....	0009
Elite.....	0218			General Electric....	0021, 0027, 0047, 0055	Haiyan.....	0264, 0412, 0817
Elman.....	0102	Firststar.....	0009, 0033, 0236	General Technic....	0009	Halifax.....	0216, 0217, 0264
Elta.....	0009, 0264	Firstline.....	0009, 0037, 0072, 0208, 0216, 0217, 0235, 0238, 0247, 0294, 0361, 0374, 0411, 0556, 0668, 0714, 1037	Genesis.....	0009, 0037	Hallmark.....	0178
Emco.....	0247			Genexxa.....	0009, 0037, 0163, 0218, 0412, 0493	Hampton.....	0216, 0217
Emerson.....	0037, 0038, 0039, 0070, 0087, 0154, 0171, 0177, 0178, 0179, 0180, 0236, 0247, 0280, 0282, 0361, 0370, 0371, 0463, 0486, 0623, 0714, 1905, 1909, 1911, 1928, 1929, 1944			Giant.....	0217	Hanimex.....	0218, 0294, 1908
Emperor.....	0282	Fisher.....	0036, 0045, 0047, 0072, 0087, 0104, 0154, 0157, 0208, 0217, 0303, 0370	Gibraltar.....	0017, 0030	Hankook.....	0030, 0056, 0178, 0180, 0628
Envision.....	0030, 0813	Flint.....	0037, 0072, 0218, 0264, 0455, 0610	Gintai.....	0354, 0721	Hanseatic.....	0009, 0037, 0087, 0217, 0282, 0294, 0361, 0377, 0394, 0428, 0499, 0519, 0556, 0634, 0661, 0714, 0808, 1237
Enzer.....	0753	Forgestone.....	0193	Goldfunk.....	0668	Hantarex.....	0009, 0037, 0102, 0238, 0516
Epson.....	0833, 0840	Formenti.....	0037, 0087, 0216	GoldHand.....	0216	Hantor.....	0037
Erres.....	0012, 0037	Fortress.....	0087, 0093	GoldStar.....	0001, 0030, 0032, 0037, 0039, 0056, 0109, 0154, 0163, 0178, 0216, 0217, 0247, 0290, 0361, 0377, 0606, 0714, 0715, 1910, 1926	Harley Davidson....	0043, 0179, 1904
ESC.....	0037, 0217	Fraba.....	0037, 0370	Gooding.....	0487	Harman/Kardon....	0054
Ether.....	0003, 0009, 0030	Friac.....	0009, 0037, 0102, 0370, 0499	Goodmans.....	0009, 0032, 0035, 0036, 0037, 0072, 0179, 0217, 0218, 0235, 0264, 0335, 0360, 0371, 0374, 0480, 0487, 0499, 0516, 0556, 0560, 0579, 0630, 0634, 0661, 0668, 1037, 1900, 1909	Harvard.....	0180
Etron.....	0001, 0009, 0163	Frontech.....	0009, 0163, 0217, 0247, 0264, 0448			Harwood.....	0009, 0032, 0037, 0412, 0487
Eurofeel.....	0217, 0264	Fujitsu.....	0009, 0072, 0179, 0186, 0206, 0217, 0259, 0683, 0809, 0853			Hauppauge.....	0037
Euroman.....	0037, 0216, 0217, 0264, 0370	Fujitsu General.....	0009, 0186, 0206, 0217			Havermy.....	0093
Europa.....	0037	Funai.....	0171, 0179, 0180, 0264, 0294, 0303, 0668, 1904	Gorenje.....	0370	HCM.....	0009, 0037, 0217, 0218, 0264, 0282, 0412, 0418
Europhon.....	0102, 0217, 0516			GPM.....	0218	Hello Kitty.....	0451
Expert.....	0163, 0206, 0259, 0400	Furi.....	0145, 0264, 0412, 0817	Gradiente.....	0053, 0056, 0170	Hema.....	0009, 0217
Exquisit.....	0037, 0247	Futuretech.....	0180	Graetz.....	0163, 0339, 0361, 0371	Hifivox.....	0109, 0196, 0198, 0399, 0501
Feilang.....	0009	Galaxi.....	0037	Gran Prix.....	0648	Higashi.....	0216
Feilu.....	0009, 0817	Galaxis.....	0037, 0370	Granada.....	0037, 0045, 0072, 0108, 0163, 0208, 0217, 0225, 0226, 0339, 0400, 0473, 0502, 0516, 0548, 0560	Highline.....	0037, 0264
Feiyue.....	0009, 0817	Ganxin.....	0817			Hikona.....	0218
Fenner.....	0009, 0374	Gateway.....	1755, 1756	Grandin.....	0009, 0037, 0163, 0282, 0374, 0455, 0579, 0610, 0668, 0714, 0715	Himitsu.....	0180, 0628, 0779
Ferguson.....	0037, 0053, 0073, 0109, 0190, 0192, 0193, 0238, 0335, 0548, 0560, 0625	GBC.....	0009, 0218, 0374			Hinari.....	0009, 0036, 0037, 0179, 0218, 0235, 0264, 0294, 0355, 1908
Fidelity.....	0037, 0163, 0193, 0216, 0264, 0361, 0371, 0412, 0512	GE.....	0021, 0027, 0030, 0047, 0051, 0055, 0092, 0093, 0178, 0180, 0282, 0451, 0560, 0625, 1147, 1347, 1447, 1454, 1907, 1917, 1919, 1922	Grundig.....	0009, 0036, 0037, 0070, 0191, 0195, 0443, 0487, 0535, 0554, 0556, 0587, 0672, 0706, 0740, 1935	Hisawa.....	0218, 0282, 0400, 0455, 0610, 0714
Filsai.....	0217	Geant Casino.....	0400			Hisense.....	0009, 0145, 0156, 0227, 0508, 0696, 0748, 0753, 0821, 0848, 1170
Finlandia.....	0072, 0163, 0208, 0346, 0548					Hit.....	0087

TV

Hitachi	0009, 0016, 0027, 0030, 0032, 0036, 0037, 0038, 0039, 0043, 0044, 0056, 0072, 0092, 0105, 0108, 0109, 0145, 0151, 0156, 0157, 0163, 0165, 0178, 0179, 0186, 0194, 0196, 0198, 0217, 0225, 0227, 0473, 0480, 0481, 0492, 0499, 0508, 0516, 0548, 0563, 0578, 0629, 0634, 0719, 0744, 1037, 1045, 1137, 1145, 1170, 1225, 1256, 1481, 1904	Imperial	0037, 0074, 0084, 0196, 0247, 0370, 0418, 0630	Jensen	0519, 0761, 0807, 0815, 0817, 1933	Kingsley	0216
Hitachi Fujian	0108, 0150, 0828	Imperial Crown	0001, 0009, 0264, 0374, 0412, 0661	Jiahua	0051	Kioto	0054, 0556, 0706
Hitsu	0009, 0218	Indiana	0037	Jialicai	0009, 0264, 0412	Kiton	0037, 0668
HMV	0087, 0193	Infinity	0054	Jinfeng	0051, 0208, 0226, 0817	KLH	0765, 0767
Hongmei	0009, 0093, 0264, 0817, 0848, 1910	Ingelen	0163, 0487, 0610, 0714	Jinhai	0848, 1910	Kloss	0024, 0046
Hongyan	0264, 0412, 0817	Ingersoll	0009	Jinque	0009, 0264, 0412, 0817	Kneissel	0037, 0238, 0259, 0292, 0374, 0411, 0435, 0499, 0556, 0610
Hornophone	0012, 0037	Inno Hit	0009, 0072, 0102, 0217, 0247, 0282, 0290, 0516	Jinta	0009, 0264, 0412, 0848, 1910	Kolin	0033, 0036, 0053, 0108, 0180
Hoshai	0282	Innova	0037	Jinxing	0009, 0037, 0054, 0145, 0156, 0264, 0556, 0698, 0817, 0821	Kolster	0102, 0247
Hua Tun	0009	Innovation	0519, 1237	JMB	0443, 0499, 0556, 0634	Kongque	0009, 0264, 0817
Huafa	0009, 0145	Inteq	0017	Jocel	0712	Konka	0037, 0218, 0371, 0418, 0628, 0632, 0638, 0641, 0703, 0707, 0714, 0754, 0779, 0795, 0816, 0817, 1957
Huanghaimei	0009	Interbuy	0037, 0247, 0264	Jubilee	0556	Kontakt	0487
Huanghe	0009, 0817	Interfunk	0012, 0037, 0087, 0109, 0163, 0200, 0247, 0275, 0327, 0361, 0501, 0512	Juhua	0264, 0412, 0817	Korpel	0037
Huanglong	0009	Intervision	0009, 0037, 0102, 0217, 0218, 0247, 0264, 0282, 0377, 0394, 0448, 0455, 0486, 0487, 0519, 1237	JVC	0036, 0053, 0054, 0093, 0190, 0192, 0193, 0218, 0371, 0418, 0463, 0508, 0606, 0653, 0683, 1253, 1923	Korting	0087
Huangshan	0009, 0264, 0412, 0817	Irradio	0009, 0037, 0218, 0247, 0290, 0371	Kaige	0009, 0264, 0412, 0817	Kotron	0412
Huanyu	0216, 0227, 0264, 0374, 0817, 0848, 1910	IRT	0451, 0628, 0698, 1661	Kaisui	0009, 0037, 0216, 0217, 0218, 0282, 0455	Koyoda	0009
Huaqiang	0264, 0412	Isukai	0037, 0218, 0282, 0455	Kamp	0216	Kraking	0238
Huari	0145, 0264, 0412	ITC	0217	Kangchong	0848, 1910	Kriesler	0012
Huodateji	0051	ITS	0037, 0216, 0218, 0264, 0282, 0371	Kangli	0001, 0009, 0264, 0374, 0661, 0817	KTV	0030, 0039, 0180, 0217, 0280
Hygashi	0216, 0217	ITT	0163, 0179, 0193, 0208, 0339, 0346, 0361, 0473, 0480, 0548, 0606, 0610	Kangyi	0009, 0264, 0412	Kuaile	0009, 0264, 0412
Hyper	0009, 0216, 0217, 0247	ITT Nokia	0163, 0179, 0208, 0339, 0346, 0361, 0473, 0480, 0548, 0606, 0610	Kapsch	0104, 0163, 0206, 0361	Kuba Electronic	0303
Hypson	0037, 0264, 0282, 0400, 0455, 0668, 0714, 0715	ITV	0037, 0247, 0264, 0284, 0374	Karcher	0264, 0282, 0610, 0714, 0778	Kulun	0009
Hyundai	0803, 0849, 0865	Janeil	0046	Kathrein	0556	Kunlun	0051, 0208, 0226, 0264, 0374, 0661, 0817
H=her	0714	JBL	0054	Kawa	0371	Kyoshu	0032, 0412, 0418
Iberia	0037	JCB	0000	Kawasho	0216	Kyoto	0032, 0163, 0216, 0217
ICE	0216, 0217, 0218, 0264, 0371	Jean	0003, 0009, 0036, 0051, 0092, 0156, 0179, 0236, 0721	KB Aristocrat	0163	L&S Electronic	0808
ICeS	0216, 0218	JEC	0502	KEC	0180	Lark	0386
				Ken Brown	0236, 0463	LaSAT	0486
				Kendo	0037, 0102, 0235, 0247, 0411, 0428, 0519, 0610, 1237	Leader	0009
				Kenia	0030	Lecson	0037
				Kennedy	0163, 0206, 0435	Lemair	0032, 0411
				Kenwood	0030	Lenco	0037, 0374
						Lenoir	0009
						Lesa	0247
						Leyco	0037, 0072, 0264, 0294, 0579

LG.....	0001, 0003, 0030, 0032, 0037, 0038, 0039, 0056, 0060, 0108, 0109, 0178, 0442, 0556, 0606, 0644, 0698, 0700, 0714, 0715, 0856, 1178, 1934	Magnin.....	1907	Mercury	0001, 0009, 0037	Myriad	0556
Liesenk & Tter	0037	Magnum	0037, 0648, 0714, 0715	Mermaid.....	0037	NAD	0156, 0178, 0361, 0866
Liesenkotter	0012, 0037, 0327, 0328	Majestic.....	0016	Metronic.....	0625	Naiko	0037, 0606
Lifetec	0009, 0037, 0218, 0374, 0519, 0668, 1037, 1137, 1237	Mandor	0264	Metz	0037, 0087, 0275, 0367, 0388, 0447, 0535, 0554, 0587, 0668, 0746	Nanbao	0009, 0264, 0412, 0848, 1910
Lihua.....	0817	Manesth	0035, 0037, 0217, 0235, 0264, 0294	MGA	0030, 0150, 0178, 0218, 1907	Nansheng.....	0264, 0412, 0817
Lloyd's	0001, 0009, 1904	Manhattan	0037, 0668, 0778, 1037	Micromaxx	0037, 0630, 0668, 0808, 1037	NAT	0214, 0226
Lloytron	0032	Marantz.....	0030, 0037, 0054, 0412, 0556, 0704, 0854, 0855, 1154	Micromaxx	0037, 0630, 0668, 0808, 1037	National	0051, 0055, 0208, 0214, 0226, 0227, 0508
Loewe	0037, 0087, 0136, 0292, 0512, 0516, 0633, 0655, 0790, 1790	Marelli	0087	Microstar	0808	NEC	0009, 0011, 0030, 0036, 0046, 0051, 0053, 0056, 0154, 0156, 0165, 0170, 0178, 0186, 0217, 0264, 0374, 0412, 0455, 0497, 0499, 0508, 0603, 0704, 0817, 1170, 1270, 1704
Logik.....	0001, 0011, 0016, 0033, 0193, 0371, 0698	Mark.....	0009, 0037, 0216, 0217, 0374, 0714, 0715	Midland.....	0017, 0032, 0039, 0047, 0051	Neckermann.....	0037, 0087, 0191, 0200, 0247, 0327, 0370, 0411, 0418, 0505, 0554, 0556
Logix.....	0668	Masuda	0009, 0037, 0217, 0218, 0264, 0371	Minato	0037	NEI.....	0037, 0337, 0371
Longjiang	0264, 0412, 0817	Materin.....	0858	Minerva.....	0070, 0108, 0487, 0516, 0535, 0554	Nesco	0179, 0247
Luma	0206, 0259	Matsui.....	0009, 0011, 0033, 0035, 0036, 0037, 0072, 0163, 0177, 0191, 0195, 0208, 0217, 0235, 0272, 0294, 0335, 0354, 0355, 0371, 0433, 0443, 0455, 0487, 0516, 0556, 0579, 0714	Minoka	0037, 0412	Netsat	0037
Lumatron.....	0037, 0073, 0163, 0206, 0217, 0259, 0264	Matsushita	0051, 0250, 0650	Minutz	0021	Network.....	0032, 0337
Lux May.....	0009, 0037, 0581	McMichael.....	0043	Mirror	1900	Neufunk.....	0009, 0037, 0218, 0556, 0610, 0714
Luxman	0056, 0579	Mediator	0012, 0037	Mistral Electronics ..	0193	New Tech	0009, 0037, 0217, 0448, 0556
Luxor	0163, 0179, 0194, 0208, 0217, 0290, 0361, 0473, 0480, 0548, 0631	Medion.....	0037, 0512, 0556, 0668, 0698, 0808, 1037, 1137, 1437, 1900	Mitsubishi	0030, 0033, 0036, 0037, 0056, 0087, 0093, 0108, 0150, 0154, 0178, 0179, 0180, 0236, 0250, 0354, 0512, 0535, 0556, 0817, 0836, 0868, 1037, 1250, 1917	New World.....	0218
LXI	0047, 0054, 0154, 0156, 0178	Megapower	0700	Monaco	0009	Newwave	0009, 0092, 0093, 0178, 0721
M & S.....	0054	Megas.....	0610	Monivision	0700, 0843	Nicamagic	0216
M Electronic	0009, 0037, 0104, 0105, 0109, 0163, 0217, 0346, 0374, 0480	Megatron	0003, 0145, 0178	Morgan's	0037	Nikkai.....	0009, 0032, 0035, 0036, 0037, 0072, 0216, 0217, 0218, 0264, 0337
Madison.....	0037	Meile	0264, 0412, 0817, 0848, 1910	Motorola.....	0055, 0093	Nikko	0030, 0092, 0178
Magnadyne	0087, 0102, 0247, 0516	Melelectronic.....	0009, 0037, 0104, 0105, 0163, 0216, 0217, 0247, 0346, 0374, 0411, 0480, 0492, 0512, 0634, 0661	MTC	0030, 0056, 0060, 0216, 0370, 0512	Nikon	0848, 1910
Magnafon	0102, 0216, 0516	Melvox	0400	MTEC	0032	Noblex	0037, 0154, 0264
Magnasonic	1913, 1928	Memorex	0009, 0016, 0056, 0060, 0150, 0154, 0178, 0179, 0250, 0463, 1037, 1911, 1920, 1924, 1926, 1927	Mudan	0009, 0051, 0208, 0226, 0264, 0412, 0817	Noblisko.....	0070, 0102, 0216
Magnavox.....	0011, 0020, 0024, 0030, 0036, 0054, 0179, 0186, 0187, 0386, 0706, 0780, 1254, 1454, 1904, 1913, 1931, 1944	Memphis.....	0337	Multibroadcast	0193	Nogamatic	0109, 0196, 0399, 0501
				Multistandard.....	0102	Nokia	0163, 0179, 0208, 0339, 0346, 0361, 0374, 0473, 0480, 0548, 0606, 0610, 0631, 1912
				Multitec.....	0037, 0486, 0668, 1037		
				Multitech	0009, 0037, 0102, 0180, 0216, 0217, 0247, 0264, 0486		
				Murphy	0039, 0163, 0216		
				Musikland	0218, 0247		

TV

Norcent.....	0748, 0824	Pacific.....	0519, 0556, 0714, 0807, 1037, 1137, 1237	Philips	0000, 0009, 0012, 0017, 0020, 0024, 0027, 0030, 0032, 0037, 0043, 0051, 0054, 0056, 0087, 0092, 0108, 0178, 0186, 0187, 0193, 0200, 0238, 0361, 0374, 0554, 0556, 0570, 0690, 0721, 0774, 1154, 1454, 0499	Protech.....	0009, 0037, 0102, 0217, 0247, 0264, 0337, 0418, 0486, 0668
Nordic	0217	Pael	0216	Phoenix.....	0037, 0087, 0216, 0486	Proton	0001, 0003, 0009, 0030, 0039, 0178, 0466, 0644
Nordmende.....	0037, 0109, 0195, 0196, 0198, 0399, 0501, 0560, 0714	Palladium.....	0037, 0247, 0370, 0411, 0418, 0519, 0630, 0655, 1137, 1237	Phonola	0012, 0037, 0087, 0193, 0216	ProVision.....	0037, 0556
Normerel	0037	Palsonic	0001, 0037, 0072, 0217, 0218, 0264, 0284, 0377, 0418, 0448, 0698, 0773, 0779	Pilot	0030, 0039, 0712	Pulsar	0017
Novak	0012	Panama.....	0037, 0217, 0247, 0264	Pioneer	0011, 0037, 0038, 0109, 0163, 0166, 0361, 0428, 0486, 0512, 0679, 0760, 0866	Pye	0012, 0037, 0087, 0374, 0412, 0554, 0556
Novatronc	0037, 0105, 0374	Panasonic	0037, 0051, 0054, 0055, 0108, 0163, 0208, 0214, 0226, 0227, 0250, 0361, 0367, 0508, 0516, 0548, 0650, 1210, 1310, 1410, 1650, 1651, 1919, 1924, 1927, 1930, 1941, 1946, 1947	Plantron	0009, 0037, 0264	Pymi	0009
NTC.....	0092	Panavision.....	0037, 0411	Playsonic.....	0217, 0714, 0715	Qingdao.....	0051, 0208, 0226, 0264, 0412, 0817
NU-TEC	0698	Panda	0009, 0051, 0208, 0226, 0264, 0412, 0508, 0698, 0706, 0780, 0817, 0821, 0826, 0848, 1910	Policom.....	0109, 0501	Quadra Vision	0400
Oceanic	0163, 0208, 0361, 0400, 0473, 0548	Pathe Cinema.....	0163, 0216, 0238	Polytron	0282, 0697	Quadral	0218
Odeon	0264	Pathe Marconi	0109, 0196, 0198, 0399, 0501	Poppy	0009	Quasar	0009, 0051, 0055, 0165, 0247, 0250, 0650, 1919, 1924
Okano	0009, 0037, 0072, 0370	Pausa	0009	Portland	0039, 0092, 0374	Quelle	0011, 0037, 0070, 0074, 0084, 0104, 0200, 0327, 0328, 0361, 0505, 0512, 0535, 0554, 0668
Omega	0264	Penney.....	0003, 0021, 0027, 0030, 0032, 0039, 0047, 0051, 0056, 0060, 0156, 0178, 1347, 1907, 1919, 1926	Pionier	0370, 0486	R-Line	0037
Omni.....	0780	Perdio	0037, 0072, 0163, 0216, 0282	Plantron	0009, 0037, 0264	Radialva.....	0218, 0337
Onking	0280	Perfekt	0037	Playsonic.....	0217, 0714, 0715	Radiola.....	0012, 0037, 0217, 0556
Onwa	0102, 0180, 0218, 0371, 0433, 0581, 0602	Pershin.....	0400	Policom.....	0109, 0501	Radiomarelli	0037, 0087, 0516
Opera.....	0037	Phase	0032	Polytron	0282, 0697	RadioShack	0030, 0032, 0037, 0039, 0047, 0056, 0154, 0165, 0178, 0180, 1904, 1920
Optimus.....	0154, 0166, 0250, 0650, 1913, 1924, 1927	Philco	0020, 0030, 0032, 0037, 0054, 0056, 0074, 0084, 0087, 0145, 0178, 0180, 0186, 0247, 0370, 0418, 0463, 0628, 0774, 1661, 1911	Poppy	0009	Radiotone.....	0009, 0037, 0264, 0412, 0428, 0579, 0648, 0668
Optonica.....	0093, 0165	Philex	0193	Portland	0039, 0092, 0374	Rank.....	0070
Orbit	0037	Philharmonic	0217	Powerpoint.....	0037, 0487	Rank Arena	0036, 0753, 0796
Orion.....	0011, 0037, 0102, 0177, 0179, 0235, 0236, 0294, 0355, 0412, 0443, 0463, 0516, 0556, 0655, 0714, 1905, 1911, 1929, 1954			Prandoni-Prince....	0361, 0516	Ranser	0001
Orline	0037, 0218			Premier	0009, 0264	RBM	0070
Ormond	0668, 1037			Prima	0009, 0264, 0303, 0412, 0519, 0761, 0783, 0807, 0815, 0817, 1933	RCA	0000, 0030, 0038, 0047, 0051, 0060, 0090, 0092, 0093, 0178, 0560, 0618, 0625, 0679, 0702, 1047, 1147, 1247, 1347, 1447, 1454, 1547, 1907, 1917, 1919, 1922, 1948, 1953, 1958
Orsowe.....	0516			Princeton.....	0700, 0717		
Osaki	0032, 0037, 0072, 0217, 0218, 0264, 0272, 0355, 0374, 0412, 0493, 0556			Prinz	0072, 0194, 0361		
Osio.....	0037, 0290			Prism	0051		
Oso	0218			Profex.....	0009, 0163, 0361		
Osume	0032, 0036, 0037, 0072, 0157, 0218			Profi.....	0009		
Otto Versand	0036, 0037, 0093, 0109, 0191, 0217, 0226, 0235, 0247, 0294, 0303, 0361, 0505, 0512, 0535, 0554, 0556			Profitronic	0037, 0102		

Realistic	0030, 0032, 0039, 0056, 0154, 0165, 0178, 0180	Samsung	0009, 0030, 0032, 0037, 0039, 0056, 0060, 0072, 0090, 0092, 0093, 0154, 0156, 0163, 0178, 0179, 0208, 0216, 0217, 0226, 0264, 0290, 0370, 0448, 0519, 0556, 0587, 0618, 0644, 0702, 0766, 0774, 0812, 0814, 0817, 0821, 1060, 1237, 1903	SEG	0009, 0036, 0037, 0102, 0216, 0217, 0218, 0264, 0668, 1037, 1437	Siesta	0370
Recor	0037, 0418			SEI	0037, 0087, 0102, 0163, 0177, 0206, 0294, 0516	Signature	0016
Rectiligne	0037			Sei-Sinudyne	0037, 0087, 0102, 0206, 0294, 0516	Silver	0036, 0179, 0361, 0455, 0715
Rediffusion.....	0036, 0346, 0361, 0548			Seleco	0163, 0206, 0259, 0264, 0346, 0371, 0411, 0435	Simpson	0186, 0187
Reflex.....	0037, 0668, 1037			Semivox	0180, 0236, 0463	Singer	0009, 0037, 0087, 0102, 0335, 0435, 1537
Relisys.....	0865	Samsux	0039	Semp	0156, 1356	Sinudyne.....	0037, 0087, 0102, 0163, 0177, 0206, 0235, 0294, 0361, 0516
Reoc.....	0714	Sandra	0216, 0217	Sencora	0009	SKY.....	0037
Revox.....	0037	Sanjian.....	0264, 0412	Sentra	0035	Skygiant	0180
Rex	0163, 0206, 0259, 0264, 0411	Sansei.....	0451	Serie Dorada.....	0030, 0056, 0156, 0178	Skysonic	0696, 0753
RFT	0037, 0072, 0087, 0264, 0428	Sansui.....	0037, 0371, 0455, 0463, 0602, 0655, 0706, 0727, 0729, 0861, 1904, 1911, 1929	Serino.....	0093, 0455, 0610	Skyworth.....	0009, 0037, 0264, 0696, 0698, 0727, 0748, 0753, 0817
Rhapsody	0216	Santon	0009	Shancha.....	0264, 0412, 0817	SLX	0668
Roadstar	0009, 0037, 0218, 0264, 0282, 0418, 1037	Sanyo	0011, 0036, 0045, 0072, 0088, 0104, 0108, 0145, 0154, 0156, 0157, 0180, 0208, 0216, 0217, 0227, 0264, 0280, 0339, 0370, 0412, 0508, 0721, 0799, 1154, 1907	Shanghai	0009, 0208, 0226, 0264, 0412, 0817, 0848, 1910	Smaragd	0487
Robotron.....	0087			Shaofeng.....	0145, 0227, 0817	Solavox	0032, 0037, 0072, 0163, 0361, 0548
Rowa	0009, 0037, 0216, 0264, 0587, 0698, 0712, 0748, 0817	Sanyuan	0009, 0093, 0817	Sharp	0009, 0030, 0032, 0036, 0039, 0053, 0093, 0157, 0165, 0186, 0193, 0200, 0256, 0294, 0386, 0491, 0516, 0650, 0688, 0689, 0720, 0760, 0851, 1193, 1917	Sonawa	0218
Roxy	0448	SBR	0012, 0037, 0043, 0193	Sharper Image.....	1950	Songba.....	0009
Royal Lux	0335, 0370, 0412	Schaub Lorenz.....	0361, 0374, 0486, 0548, 0606, 0714	Shen Ying	0003, 0009, 0092, 0179	Soniko.....	0037
Runco	0017, 0030, 0497, 0603	Schneider.....	0012, 0037, 0163, 0217, 0218, 0247, 0259, 0303, 0361, 0371, 0394, 0519, 0556, 0648, 0668, 0714, 1037, 1137, 1237, 1904	Shencai.....	0009, 0145, 0264, 0412	Sonitron.....	0208, 0217, 0339, 0370
Ruyi.....	0227, 0817			Sheng Chia	0009, 0033, 0093, 0179, 0236	Sonneclair	0037
Saba	0087, 0109, 0163, 0196, 0198, 0250, 0335, 0361, 0399, 0501, 0516, 0548, 0560, 0625	Schaub Lorenz.....	0361, 0374, 0486, 0548, 0606, 0714	Shenyang	0009, 0264, 0696, 0753, 0817	Sonoko.....	0009, 0037, 0217, 0264, 0282
Saccs.....	0238	Schneider.....	0012, 0037, 0163, 0217, 0218, 0247, 0259, 0303, 0361, 0371, 0394, 0519, 0556, 0648, 0668, 0714, 1037, 1137, 1237, 1904	Shen Ying	0003, 0009, 0092, 0179	Sonolor.....	0163, 0208, 0282, 0361, 0400, 0505, 0548
Sagem.....	0455, 0610			Shencai.....	0009, 0145, 0264, 0412	Sontec	0009, 0037, 0294, 0370
Saige	0009, 0817			Sheng Chia	0009, 0033, 0093, 0179, 0236	Sony	0000, 0011, 0036, 0037, 0102, 0111, 0157, 0353, 0505, 0650, 0834, 1010, 1100, 1505, 1651, 1904, 1925
Saisho	0009, 0011, 0033, 0177, 0217, 0235, 0264, 0354, 0516	Scotch	0178	Shenyang	0009, 0264, 0696, 0753, 0817	Sound & Vision.....	0102, 0218, 0374
Saivod.....	0037, 1037	Scotland.....	0163	Sherwood	0009	Soundesign.....	0178, 0179, 0180, 0186
Sakan.....	0163	Scott	0178, 0179, 0180, 0236	Shintoshi	0037	Soundwave.....	0032, 0037, 0418, 0715
Salora	0163, 0194, 0208, 0290, 0361, 0480, 0516, 0519, 0548, 0621, 0807, 1237	Sears	0047, 0054, 0056, 0154, 0156, 0171, 0178, 0179, 1904, 1926	Shivaki.....	0037, 0178, 0443	Sowa	0036, 0051, 0060, 0092, 0156, 0178, 0226
Salsa.....	0335			Shorai.....	0179, 0294	Spectra	0009
Sambers	0102, 0290, 0516	Seaway	0634	Siam	0037	Spectricon.....	0003
Sampo	0009, 0030, 0032, 0036, 0039, 0092, 0093, 0154, 0171, 0178, 0650, 0700, 0721, 1755	Seelver.....	1037	Siarem	0087, 0102, 0516	Squareview	0171
				Siemens	0032, 0037, 0157, 0191, 0195, 0200, 0327, 0328, 0535, 0554	Ssangyong	0009, 0032
				Siera	0012		

Universum	0009, 0011, 0032, 0036, 0037, 0070, 0072, 0074, 0084, 0104, 0105, 0109, 0157, 0170, 0177, 0200, 0217, 0247, 0264, 0290, 0294, 0327, 0328, 0346, 0361, 0370, 0411, 0418, 0473, 0480, 0492, 0501, 0505, 0512, 0519, 0535, 0554, 0631, 0668, 0807, 1037, 1237, 1437, 1901	Watson.....	0009, 0037, 0163, 0218, 0394, 0519, 0579, 0668, 1037, 1237, 1437	Zanussi	0206, 0264	Hanseatic.....	0808
Univox.....	0037, 0087, 0163, 0337	Watt Radio	0102, 0216	Zenith.....	0016, 0017, 0092, 0178, 0463, 1904, 1909, 1911, 1929	Hitachi.....	1481
V Inc.	0864, 1756	Waycon	0156	Zenor	0339	Hyundai.....	0803, 0865
V7	1755	Wega	0036, 0037, 0087	Zuhai	0009, 0374	L&S Electronic	0808
Vector Research ...	0030	Weipai.....	0009	Zonda.....	0003, 0698, 0779	LG	0037, 0056, 0178, 0856
Vestel	0037, 0217, 0556, 0668, 1037	Weltblick.....	0217			Marantz	0704
Vexa	0009, 0037	Wharfedale	0037, 0519, 0556, 0807, 1237			Medion	0808
Vibrant.....	0272	White Westinghouse	0037, 0186, 0216, 0337, 0463, 0623, 1909			Micromaxx.....	0808
Victor	0036, 0053, 0250, 0650, 0653	Winco	0412			Microstar.....	0808
Videologic.....	0216, 0218	Windsor.....	0668			Mitsubishi.....	0836
Videosat.....	0247	Windstar	0282, 0337			Monivision	0843
VideoSeven	1755	Wintel	0714			NEC	0704, 1704
VideoSystem	0037	Xenius.....	0661			Norcent	0824
Videotechnic.....	0217	Xiahua.....	0009, 0264, 0412, 0698, 0773, 0779, 0817			Panasonic	0250, 0650
Vidikron	0054	Xianghai	0009			Philips	0690
Vidtech	0036, 0178	Xiangyang	0264, 0412			Pioneer.....	0679, 0760
Viewsonic	0857, 0864, 1755	Xiangyu	0009			Relisys	0865
Viking	0046	Xihu	0264, 0412, 0817			Sampo	1755
Visiola	0216	Xinaghai	0412			Sharp.....	0093
Vision	0032, 0037, 0072, 0217, 0264	Xingfu	0009			Sony.....	0000
Vistar	0206	Xinghai	0264			Studio Experience ..	0843
Vortec	0037	Xinrisong.....	0848, 1910			SVA	0865
Voxson	0087, 0163, 0178, 0418	XLogic	0860			Tatung	1756
Waltham.....	0037, 0109, 0217, 0418, 0668	Xrypton	0037			TCL	1035
Wards	0000, 0016, 0017, 0020, 0021, 0024, 0027, 0030, 0047, 0051, 0054, 0055, 0056, 0060, 0111, 0154, 0156, 0165, 0166, 0178, 0179, 0180, 0186, 0187, 0866, 1147, 1156, 1347, 1356	Xuelian	0848, 1910			TCM	0808
Warumaia	0374, 0661	Yamaha	0030, 0769, 0833, 0839			Teac	0755, 1755
		Yamishi	0037, 0217, 0218, 0282, 0455			Toshiba.....	0650, 1704
		Yapshe	0250			V Inc.	1756
		Yingge	0009			V7	1755
		Yokan	0037			VideoSeven.....	1755
		Yoko	0009, 0037, 0216, 0217, 0218, 0247, 0264, 0339			Viewsonic.....	1755
		Yongbao	0848, 1910			Xenius	0661
		Yonggu.....	0009			Zenith	0178
		Yorx	0218				
		Youlanasi	0817				
		Yousida	0009, 0848, 1910				
		Yuhang.....	0009				
		Zanela.....	0238				

LCD

LCD TV
LCD TV
TV avec écran LCD

Audiovox	0180, 0802, 0875, 1937
Envision	0813
Hyundai	0849
LG.....	0856, 1178
Manhattan	0778
Marantz.....	0855
Panasonic.....	0650, 1941
Philips	1454
RCA.....	0047, 1958
Samsung	0766, 0814
Sharp	0093
SVA	0587, 0870, 0871
Sylvania	0171
Techview	0847
Toshiba	0845, 1656
V Inc.....	0864
Viewsonic	0857, 0864

PLTV

Plasma TV
TV de plasma
TV avec écran à plasma

Akai	0708, 0812
Albatron	0843
Chun Yun.....	0843
Conrac.....	0808
Daewoo	0451, 0661
Digital Life.....	0872
Fujitsu	0683, 0809, 0853
Gateway.....	1755, 1756

CAB

Cable box
Receptor de cable
Terminal câble

ABC	0003, 0008, 0011, 0013, 0014, 0017, 0237
Alcatel.....	0896
Americast.....	0899
Amstrad.....	1222
Austar	0012, 0276
Bell & Howell	0014
Bell South.....	0899

CAB

Birmingham Cable Communications...	0276	NTL Cabletell	0276
British Telecom.....	0003	Oak.....	0019
Cable & Wireless...	1068	Ono.....	1068
Cabletime	0448, 0665	Optimus	0021
Clearmaster	0883	Optus	0276, 1060
ClearMax.....	0883	Pace.....	0237, 1060, 1068, 1877
Comcrypt	0443	Panasonic	0000, 0008, 0021, 0040, 0107
Comtec.....	0019	Panther	0637
Comtronics	0040	Paragon.....	0000
Contec	0019	Philips.....	0013, 0286, 0317, 0619, 0817, 1305
Coolmax	0883	Pioneer.....	0144, 0533, 0877, 1021, 1877
Daeryung.....	0008, 0277, 0477, 0877, 1877	Pulsar	0000
Decsat.....	0423	PVP Stereo Visual Matrix	0003
Digi	0637	Quasar	0000
Director.....	0476	RadioShack	0883
Dumont.....	0637	RCA	0021
Everquest	0040	Regal	0020, 0273, 0279
Filmnet	0443	Rembrandt	0011
Foxtel.....	1222	Runco	0000
France Telecom	0451, 0817, 0896	Sagem	0817
Funai.....	0019	Salora	0000
Galaxi.....	0008	Salora	0000
GE	0237	Samsung	0000, 0040, 0144
Gehua	0476	Scientific Atlanta ...	0008, 0017, 0237, 0277, 0477, 0877, 1877
General Instrument	0003, 0011, 0014, 0276, 0476, 0810	Signal	0040
Golden Channel....	1110	Signature	0011
GoldStar	0040, 0144	SL Marx.....	0040
Hamlin.....	0009, 0020, 0273	Sony.....	1006
Hitachi	0011, 0014	Sprucer	0021
HyperVision.....	0619	Starcom.....	0003, 0014
Jerrold.....	0003, 0011, 0012, 0014, 0276, 0476, 0810	Stargate.....	0040
Kabelvision	0003	Supercable	0276
LG.....	0040, 0144	Supermax	0883
Macab.....	0817	Tadiran	0040
Memorex.....	0000	Tele Danmark	0619, 1016
MNET.....	0019, 0443	Tele+1	0443
Motorola	0276, 0476, 0810, 1106, 1254, 1376	Telepiu	0443
Mr Zapp.....	0817	Television.....	0040
Multichoice	0019, 0443	Telewest	1068
MultiVision	0012	Thomson	1110
Noos.....	0817	Timeless	0040
NTL	1060, 1068	Tocom.....	0012, 0013
		Torx.....	0003
		Toshiba	0000

Trans PX.....	0276	Astacom	0668, 0710
Tri-Vision	1257	Aston	0142, 1129, 1261
Tristar	0883	Astra	0108, 0607, 0713
TS	0003	Astrastar	0548
Tudi	0286	Astro	0133, 0173, 0369, 0548, 0607, 0658, 0868, 1099, 1100, 1317
United Cable.....	0003	Athena	0668
US Electronics.....	0276	Atlantic Telephone	0879
V2	0883	Atsat	1300
Viewmaster	0883	Aurora	0642, 0879
Vision	0883	Austar	0497, 0642, 0863, 0879, 1173, 1225, 1259
Visiopass	0451, 0817	Avalon	0396
Vortex View	0883	Axiel	0668, 0710
Zenith.....	0000, 0525, 0899	Axis	0369, 0834, 1111

SAT

Satellite receiver
Receptor de satélite
Récepteur Satellite

@sat	1300	Beko	0455
ABSat	0123, 0668, 0713, 0832	Bentley Walker	1017
ADB	1259	Best	0369
AGS	0668, 0710	Blaupunkt	0173
Akai	0200	Blue Sky	0713
Akena	0668	Boca	0132, 0713, 0794
Alba	0455, 0713	Boston	0668, 0710
Allsat	0200, 1017, 1043	Brand Unknown	0132, 0299, 0713, 0742, 0834, 0885
Allsonic	0369	British Sky Broadcasting	1175, 1848, 1849
Alltech	0713	Broco	0713
Alpha	0668	BskyB	1849
AlphaStar	0772	BT	0668, 0710
Altai	0396	Bubu Sat	0713
Amitronica	0713	Cambridge	0868
Ampere	0132, 0396	Canal Digital	0853
Amstrad	0132, 0345, 0396, 0713, 0742, 0795, 0863, 0868, 0882, 0885, 1317, 1849	Canal Satellite	0853, 1339
Anglo	0713	Canal+	0853
Ankaro	0369, 0713	Century	0856
AntSat	1017, 1083	CERT	0108
Apollo	0455	Channel Master	0212
Arcon	0834, 1043, 1075, 1205	Chaparral	0053, 0209, 0216
Asat	0200	Cherokee	0123, 0710
ASLF	0713	Chess	0157, 0713, 1085
AssCom	0853	CityCom	0115, 0299, 0607, 1176
		Clemens Kamphus	0396, 0834
		Cobra	0396
		Colombia	0132, 0668
		Comag	0132, 1412

Condor	0369, 0607	Engel	0713, 1017	Goldvision	1017	JOK	0710
Connexions	0396	EP Sat	0455	Gooding	0571	JVC	0492, 0571, 0775, 1170, 1775
Conrad	0115, 0369, 0607, 0868	Eurieult	0084, 0882, 0885	Goodmans	0455, 1246, 1284	K-SAT	0713
Crossdigital	1109	Euro1	1278	Gradiente	0856, 1487	Kamm	0713
Cryptovision	0455, 0795	Eurocrypt	0108, 0455	Granada	0108, 0455	KaTelco	1111
Cyrus	0200	Europa	0607, 0863, 0868	Grandin	0084	Kathrein	0114, 0115, 0123, 0173, 0200, 0249, 0658, 0713, 0742, 1057, 1221, 1224
D-box	0723, 0873, 1127	European	0794	Grundig	0173, 0345, 0571, 0750, 0853, 0879, 1150, 1291, 1297, 1849	Kathrein Eurostar	0115
Daeryung	0396	Europhon	0132, 0299, 0607	Hanseatic	0605, 1099, 1100	Kenwood	0853
Daewoo	0713, 1111, 1296	Eurosky	0115, 0132, 0299, 0369, 0607, 0868	Hauppauge	1294	Key West	0132, 0794
Daumling	0794	Eurostar	0115, 0607	HDT	1011	Kiton	0114
Delfa	0863	Eutelsat	0713	Helium	0607	Klap	0668, 0710
Deltasat	1075	Expressvu	0775, 1775	Hirschmann	0108, 0173, 0299, 0369, 0396, 0573, 0607, 0710, 0868, 0882, 1085, 1111	Konig	0607
Dgtec	1242, 1542	Fast	1901	Hitachi	0455, 0489, 0491, 0819, 1250	Koscom	0834, 1043
Digatron	1294	Fenner	0157, 0369, 0605, 0668, 0713	Homecable	0238	Kreiling	0114, 0249, 0658
Digenius	0299, 1161	Finlandia	0108, 0455	Houston	0396, 0668	Kreismeyer	0173
DigiQuest	0863	Finlux	0108, 0455, 0573	Hansel & Gretel	0132	L&S Electronic	0132, 0369, 1043
DigiSat	0868	Flair Mate	0713	HTS	0775, 1775	Labgear	1296
DigitAll World	1227	Force	1101, 1194	Hughes Network Systems	0749, 1142, 1442, 1443, 1444, 1749	LaSAT	0115, 0132, 0157, 0299, 0369, 0607
Digiturk	1076	Force NO AS	1101, 1194	Humax	0863, 1176	Legend	0269
DirecTV	0099, 0247, 0392, 0566, 0639, 0724, 0749, 0819, 1076, 1109, 1142, 1392, 1442, 1443, 1444, 1639, 1640, 1749, 1856	Fortec Star	1017, 1083	Huth	0132, 0607, 0794, 1017, 1075, 1143	Lenco	0115, 0369, 0607, 0713
Discoverer	0605	Foxtel	0497, 0879, 1173, 1176, 1225	Hwain	0885	Lenson	0868
Discovery	0668, 0710	Fraba	0868	Hyundai	1011, 1075	LG	1075, 1226
Diseqc	0710	Fracarro	0668, 0871	ID Digital	1176	Lifesat	0132, 0157, 0299, 0369, 0605, 0713, 1043
Dish Network System	0775, 1005, 1170, 1505, 1775	Freecom	0868	IEEC	0605	Logix	1017, 1075
Dishpro	0775, 1005, 1505, 1775	Freesat	0882	Imex	0084	Lorenzen	0132, 0299, 0607, 0742, 0794, 0867, 1161, 1294
Distratel	0084, 0885, 1205	Fresat	0885	Indovision	1487	Lupus	0369
DMT	1075	FTEmaximal	0369, 0713, 0863	Ingelen	0396, 0882	Luxor	0108, 0345, 0573, 0868
DNT	0200, 0396	Fuba	0108, 0115, 0173, 0299, 0369, 0396, 0573, 1161	Innova	0099	Magnavox	0722, 0724
Dream Multimedia	1237	Galaxis	0115, 0369, 0834, 0853, 0863, 1101, 1111	International	0132	Manata	0132, 0668, 0710, 0713
Dune	0369	Garnet	1075	Interstar	1017	Manhattan	0455, 0834, 1017, 1083
Echostar	0159, 0167, 0269, 0280, 0396, 0610, 0668, 0713, 0775, 0853, 0871, 1005, 1086, 1170, 1200, 1505, 1775	GbSAT	1214	Intervision	0607	Marantz	0200
Einhell	0132, 0713, 0794, 0868	GE	0566	IQ	0210	Maspro	0173, 0571, 0713, 0750
Elap	0713, 1129	General Instrument	0869	IQ Prism	0210	Matsui	0173, 0571, 0710
Elsat	0713	GF	0834, 1043	Irdeto Technology	0879	Matsushita	0340, 0500
Elta	0200, 0369	GF Star	1043	ISkyB	1487	Max	0607
Emme Esse	0369, 0871	GOD Digital	0200	Italtel	0871	MB	0605
eMTech	1214	GOI	0775, 1775	ITT	0108	Mediacom	1206
		Gold Box	0853	ITT Nokia	0455, 0573, 0723, 0873		
		Goldbox	0292, 0853	Janeil	0152		

SAT							
MediaSat	0292, 0853, 0868	Ouralis	1205	RadioShack	0869	SKY	0099, 0711, 0856, 1014, 1175, 1487, 1848, 1849, 1856
Medion	0132, 0299, 0369, 0713, 1043, 1075	Oxford	0668	Radix	0396, 0882, 1317	Sky Television	1014
Mega	0200	Pace	0123, 0200, 0241, 0455, 0497, 0720, 0791, 0795, 0853, 0867, 1175, 1323, 1423, 1487, 1849	RCA	0143, 0392, 0566, 0855, 1392	SKY+	1175
Memorex	0269, 0724	Pacific Satellite	0834	Realistic	0052	Skymaster	0157, 0605, 0713, 1075, 1085, 1200
Metronic	0084, 0123, 0713, 0885, 1205, 1215, 1282, 1283	Packsat	0710	Rebox	1214	Skymax	0200
Metz	0173	Palcom	0299, 1161	Red Star	0369	Skyplus	1412
Micro	0607, 0713, 0868	Palladium	0396, 0571, 0868	Roadstar	0713, 0853	SkySat	0114, 0157, 0605, 0607, 0713
Micromaxx	0299, 0369	Palsat	0157, 0868	Rover	0369, 0713	SL	0132, 0742
Microtec	0713	Panasat	0615, 0879	Saba	0115, 0607, 0710, 0885	SM Electronic	0157, 0713, 1200
Minerva	0571	Panasonic	0152, 0247, 0340, 0455, 0500, 0701, 1304, 1320, 1849	Sabre	0455	Smart	0115, 0132, 0396, 0713, 0794, 0882, 1101, 1273, 1317
Mitsubishi	0455, 0491, 0749	Panda	0108, 0173, 0455, 0607, 0834	Sagem	0820, 1114, 1253, 1307	Sony	0163, 0292, 0294, 0639, 0853, 1639, 1640, 1849
Morgan's	0132, 0200, 0713, 0794	Pansat	1011	Salora	0108	Star	1487
Motorola	0869	Patriot	0132, 0668, 0710	Salora	0108	Star Choice	0869
Multichoice	0642, 0879	Paysat	0724	Samsung	0853, 0863, 1017, 1109, 1206, 1243, 1244, 1276, 1293	Star Trak	0180
Multitec	0157	Philips	0099, 0133, 0173, 0200, 0292, 0455, 0571, 0668, 0710, 0722, 0724, 0749, 0750, 0853, 0856, 1076, 1114, 1142, 1442, 1487, 1749	Sanyo	0493, 1219	Starlite	0200
Myryad	0200	Pioneer	0292, 0329, 0352, 0853	SAT	0868	Strong	0132, 0369, 0853, 0879, 1158, 1300
Mysat	0713	Planet	0396, 0871	Sat Control	1300	STS	0210
NEC	0496, 1270	Polytron	0396	Sat Cruiser	1143	Sunny Sound	0369
Netgem	1322	Preisner	0132, 0396, 0794, 1101, 1317	Sat Partner	0868	Sunsat	0713
Netsat	0099, 1487	Premiere	0292, 0853, 0873	Sat Team	0713	Sunstar	0132, 0369, 0642, 0794
Neuhaus	0607, 0713, 0834, 0868	Prima	0795	Satcom	0605, 0607	Supermax	1143
Neusat	0713, 0834	Primacom	1111	SatCruiser	1143	Supernova	1487
Neveling	1161	Profile	0668, 0710	Satec	0713, 0834	Tantec	0455
Newton	0396	Promax	0455	Satelco	0369	Tarbs	1225
Next Level	0869	Prosat	1173, 1225	Satplus	0157	Tatung	0455
NextWave	1143, 1227	Proscan	0392, 0566	Satstation	1083	TCL	1143
Nikko	0200, 0713	Prosonic	0742	Schneider	0157, 0668, 0710, 1206, 1901	Teac	1225, 1227, 1322
Nokia	0108, 0455, 0573, 0723, 0751, 0853, 0873, 1023, 1127, 1223, 1723	Pye	0571	Schwaiger	0132, 0157, 0605, 0607, 0863, 0885, 1075, 1083, 1111	Tecatel	1200
Nordmende	0455	Pyxis	0834	SCS	0115, 0299	TechniSat	0114, 0157, 0396, 0455, 0548, 0863, 0868, 1099, 1100
OctaTV	1505	Quadral	0369, 0668, 0710	Sedeae Electronique	0132	Technosat	1143, 1206
Okano	0668	Quelle	0115, 0299, 0607, 0742	Seemann	0396	Technowelt	0132, 0607
OnDigital	0133, 0241, 0751	Radiola	0200	SEG	0114, 0369, 0605, 0742, 1075, 1087	Techsan	1017
Opentel	1412			Seleco	0871	Techwood	0114
Optex	0834, 1043, 1283			Septimo	0885, 1205	tekComm	1017
Optus	0879, 1143			Serino	0610	Telasat	0115, 0605, 0607
Orbitech	0114, 0157, 0548, 0834, 0868, 1099, 1100			Sharp	0494	Teleciel	1043
Origo	0497			Siemens	0173	Telefunken	0710
OSAT	0345			Silva	0299		
				Skantint	0713		
				SKR	0713		

Teleka	0396, 0607, 0750, 0834, 0868	Viasat	1323	Alba	0000, 0072, 0081, 0209, 0278, 0315, 0348, 0352	Calix	0037
Telesat	0605	Victor	0492	Alienware.....	1972	Canon	0035
Telestarc	0114, 0157, 0868, 1099, 1100	Visiosat	0114, 0142, 0710, 0713, 1129	Allorgan	0240	Carena	0081, 0209
Telesystem	0396	Viva	0856	Allstar	0081	Carrefour.....	0045
Teletech	0114	Voom	0869	America Action	0278	Carver	0081
Televés	0132, 0455, 0868, 1214	Welltech	0157	American High.....	0035	Casio	0000
Televisa	1487	Wetekom	0157, 0605, 0868	Amoisonic.....	0479	Cathay	0278
Tempo	1143	Wewa	0455	Amstrad	0000, 0072, 0278	CCE	0072, 0278
Tevion	0713	Wisi	0173, 0299, 0396, 0455, 0607, 0868	Anam	0037, 0162, 0226, 0240, 0278, 0480, 1037	CGE	0000, 0041
Thomson	0115, 0292, 0392, 0455, 0607, 0668, 0710, 0711, 0713, 0820, 0853, 0885, 1046, 1198, 1291	Worldsat	0114, 0123, 0668, 0710	Anam National.....	0162, 0226, 1162, 1562	Changhong.....	0048, 0081
Thorn	0455	XCOM	0123, 0668, 0832	Anitech	0072	Cimline	0072
Tioko	0132	Xcom Multimedia	0668	Ansonic.....	0000	Cineral	0278
Tivo	1142, 1442, 1443, 1444	Xrypton	0369	Aristona	0081	Citizen.....	0037, 0278
Tokai	0200	Xsat	0123, 0668, 0713, 1323, 1849	ASA	0037, 0081	Clatronic	0000, 0072
Tonna	0455, 0668, 0713, 0834, 0868	Yes	1487	Asha	0240	Colt	0072
Topfield	1206, 1207	Zehnder	0114, 0115, 0369, 0742, 1075, 1412	Asuka.....	0037, 0038	Combitech.....	0352
Toshiba	0082, 0455, 0486, 0749, 0790, 1285, 1749	Zenith	0856, 1856	Audiosonic	0278	Condor	0278
TPS	0820, 1253, 1307	Zinwell	1173, 1225	Audiovox	0037, 0278	Craig	0037, 0047, 0072, 0240, 0271
Triasat	0868	Zodiac	0396	AVP	0000, 0352	Crown	0072, 0271, 0278, 0480
Triax	0114, 0115, 0200, 0396, 0713, 0853, 0868, 1296, 1317	Zwergnase	0794	Awa	0037, 0043, 0278, 0642	Curtis Mathes	0035, 0041, 0060, 0162, 0760
Turnsat	0713			Baird	0000, 0041, 0104, 0106	Cybernex	0240
Twinner	0713			Bang & Olufsen....	0499	CyberPower	1972
UEC	0879			Basic Line.....	0072, 0104, 0278	Cyrus	0081
Uher	0157			Beaumarck	0240	Daewoo	0045, 0046, 0104, 0209, 0278, 0352, 0637, 0642
UltimateTV	1392, 1640			Beko	0104	Dansai.....	0072, 0278
Uniden	0052, 0074, 0076, 0238, 0722, 0724, 0834			Bell & Howell	0104	Dantax	0352
Unisat	0132, 0200			Bestar	0278	Daytron	0278
Universum	0114, 0115, 0173, 0299, 0571, 0607, 0742, 1087, 1099			Black Diamond	0642	De Graaf	0042, 0046, 0048, 0081, 0104, 0166
Van Hunen	1161			Black Panther	0278	Decca	0000, 0041, 0067, 0081, 0209, 0352
Variosat	0173			Blaupunkt	0034, 0081, 0162, 0226	Deitron	0278
Vega	0369			Blue Sky.....	0037, 0072, 0209, 0278, 0348, 0352, 0480, 0642	Dell	1972
Ventana	0200			Bondstec.....	0072	Denko	0072
Vestel	0114, 0742			Brand Unknown....	0104	Denon	0042
VH-Sat	0299			Brandt	0041, 0320, 0321	Diamant.....	0037
				Brandt Electronic ..	0041	DirecTV	0739
				Brandt Electronique	0041	Domland	0209
				Brinkmann	0209, 0348	Dual	0000, 0041, 0081, 0278, 0348
				Broksonic	0002, 0121, 0184, 0209, 0348, 0479	Dumont	0000, 0081, 0104
				Bush	0000, 0072, 0081, 0209, 0278, 0315, 0348, 0352	Durabrand	0038, 0039
						Dynatech	0000
						Elbe.....	0038, 0278
						Elcatech.....	0072

VCR

VCR
VCR
VCR

VCR

Electrohome	0037	Goodmans	0000, 0037, 0072, 0081, 0209, 0278, 0348, 0352, 0637, 0642	Intervision	0000, 0209, 0278	Magnavox	0000, 0035, 0039, 0081, 0149, 0563, 0593
Electrophonic.....	0037	GPX	0037	IR	0041, 0042, 0045, 0047, 0072, 0081, 0104, 0106, 0209, 0226, 0240, 0348	Magnin	0240
Elin	0240	Gradiente	0000	Irradio.....	0037, 0072, 0081	Manesth	0045, 0072, 0081, 0209
Elsay	0072	Graetz	0041, 0104, 0240	ITT.....	0041, 0046, 0104, 0106, 0240, 0384	Marantz	0035, 0038, 0081, 0209
Elta.....	0072, 0278	Granada	0000, 0037, 0042, 0046, 0048, 0081, 0104, 0226, 0240	ITV	0037, 0278	Mark	0000, 0278
Emerex	0032	Grandin	0000, 0037, 0072, 0209, 0278	JBL.....	0278	Marta	0037
Emerson	0000, 0002, 0035, 0037, 0043, 0045, 0072, 0121, 0184, 0209, 0240, 0278, 0479, 0637, 1593	Grundig	0034, 0072, 0081, 0226, 0320, 0347, 0348, 0352	Jensen.....	0041	Master's	0278
ESC.....	0240, 0278	Haaz.....	0348	JMB.....	0209, 0348, 0352	Matsui.....	0209, 0240, 0348, 0352
Etzuko	0072	Hanimex	0352	JVC	0041, 0045, 0067, 0081, 0384	Matsushita.....	0035, 0162, 0226, 1162
Ferguson.....	0000, 0041, 0278, 0320, 0321	Hanseatic.....	0037, 0038, 0081, 0209	Kaisui	0072	Media Center PC ...	1972
Fidelity.....	0000, 0072, 0240, 0352, 0432	Haojie	0240	Karcher	0081, 0278	Mediator	0081
Finlandia	0000, 0037, 0042, 0043, 0046, 0048, 0081, 0104, 0106, 0166, 0226, 0384	Harley Davidson ...	0000	KEC	0037, 0278	Medion	0209, 0348, 0352
Finlux	0000, 0042, 0081, 0104	Harman/Kardon.....	0038, 0081	Kendo	0072, 0106, 0209, 0278, 0315, 0348	MEI	0035
Firstline.....	0037, 0043, 0045, 0072, 0209, 0278, 0348, 0480	Harwood.....	0072	Kenwood	0038, 0041, 0067, 0384	Meletronic	0000, 0037, 0038
Fisher.....	0046, 0047, 0104	HCM	0072	Kendo	0072, 0106, 0209, 0278, 0315, 0348	Memorex.....	0000, 0035, 0037, 0039, 0046, 0047, 0048, 0104, 0162, 0209, 0240, 0307, 0348, 0479, 0569, 1037, 1048, 1162, 1262
Flint	0209	Headquarter.....	0046	KIC	0000	Memphis	0072
Frontech	0072	Hewlett Packard ...	1972	Kimari.....	0047	Metronix	0081
Fuji	0033, 0035	HI-Q	0047	Kioto	0348	Metz	0037, 0081, 0162, 0226, 0347, 0836, 1162, 1562
Fujitsu	0000, 0045	Hinari.....	0041, 0072, 0209, 0240, 0278, 0352	KLH	0072	MGA.....	0043, 0240
Fujitsu General	0037	Hisawa	0209, 0352	Kneissel	0037, 0209, 0278, 0348, 0352	MGN Technology ...	0240
Funai.....	0000, 0593, 1593	Hischito	0045	Kodak.....	0035, 0037	Micormay	0348
Galaxi.....	0000	Hitachi	0000, 0037, 0041, 0042, 0046, 0081, 0089, 0166, 0240	Kolin	0041, 0043	Micromaxx.....	0209
Galaxis	0278	Hornophone.....	0081	Kyoto	0072	Microsoft.....	1972
Garrard	0000	Howard Computers	1972	Lenco.....	0278	Migros.....	0000
Gateway	1972	HP	1972	Leyco	0072	Mind	1972
GE	0035, 0048, 0060, 0226, 0240, 0320, 0760	Hughes Network Systems	0042, 0739	LG.....	0037, 0038, 0042, 0045, 0209, 0480, 1037	Minolta	0042
GEC	0081	Hypson	0000, 0037, 0072, 0209, 0278, 0352, 0480	Lifetec	0209, 0348	Mitsubishi.....	0000, 0041, 0043, 0048, 0067, 0081, 0480, 0642
General.....	0045	H÷her	0278	Lloyd's.....	0000	Motorola	0035, 0048
General Technic....	0348	iBUYPOWER.....	1972	Loewe	0037, 0081, 0162, 1562	MTC	0000, 0240
Genexxa	0104	Imperial	0000	Logik.....	0072, 0106, 0209, 0240	Multitec	0037
Go Video	0432, 0526	Ingersoll.....	0209, 0240	Lux May	0072	Multitech.....	0000, 0072
GoldHand	0072	Inno Hit	0072, 0240	Luxor	0043, 0046, 0047, 0048, 0104, 0106, 0315	Murphy.....	0000
GoldStar	0037, 0038, 0209, 0226, 0480	Interbuy	0037, 0072	LXI	0037	Myryad	0081
		Interfunk	0081, 0104	M Electronic	0000, 0038	NAD	0104
		Internal.....	0278, 0637	Magnasonic.....	0278, 0593	National	0226
		International.....	0037, 0278			NEC	0035, 0037, 0038, 0041, 0048, 0067, 0104, 0278

Neckermann.....	0081	Philips.....	0000, 0035, 0081, 0226, 0384, 0563, 0593, 0618, 0739, 1081, 1181	Runco	0039	Singer	0045, 0072, 0271
Nesco	0000, 0072	Phonola.....	0081	Saba	0041, 0278, 0320, 0321, 0384, 0494	Sinudyne.....	0081, 0209, 0352
Neufunk	0209	Pilot	0037	Saisho	0209, 0348	Smaragd.....	0348
Newave	0037	Pioneer.....	0042, 0067, 0081, 0162	Salora.....	0043, 0046, 0104, 0106	Sonic Blue.....	0614, 0616
Nikkai.....	0072, 0278	Polk Audio.....	0081	Sampo.....	0037, 0048	Sonneclair	0072
Nikko	0037	Portland.....	0278, 0637	Samsung	0045, 0240, 0432, 0760, 1014	Sonolor.....	0046
Nikon	0034	Prinz.....	0000	Sanky	0039, 0048	Sontec	0037
Noblex.....	0240	Profitronic	0081, 0240	Sansei	0048	Sony	0000, 0032, 0033, 0034, 0035, 0106, 0636, 1032, 1972
Nokia	0041, 0042, 0046, 0048, 0081, 0104, 0106, 0240, 0278, 0315	Proline	0000, 0278, 0320, 0321, 0642	Sansui	0000, 0041, 0067, 0072, 0106, 0209, 0271, 0348, 0479	Soundwave.....	0037, 0209
Nordmende.....	0041, 0067, 0320, 0321, 0384, 0494	Proscan.....	0060, 0760	Sanyo.....	0046, 0047, 0048, 0067, 0104, 0159, 0240	Ssangyong	0072
Northgate	1972	Prosco	0278	Saville.....	0240, 0278, 0352	Standard	0278
NU-TEC	0209	Prosonic	0209, 0278	SBR.....	0081	Stern	0278
Oceanic	0000, 0041, 0046, 0048, 0081, 0104, 0106	Protech	0072	Schaub Lorenz	0000, 0041, 0104, 0106, 0315, 0642	Strong.....	0271
Okano	0072, 0209, 0278, 0315, 0348	ProVision	0278	Schneider	0000, 0037, 0042, 0072, 0081, 0240, 0278, 0352,	STS.....	0042
Olympus	0035, 0226	Pulsar	0039	Scott	0043, 0045, 0121, 0184	Sunkai.....	0209, 0278, 0348
Optimus.....	0037, 0048, 0104, 0162, 0432, 0593, 1048, 1062, 1162, 1262	Pye	0081	Sears	0000, 0035, 0037, 0042, 0046, 0047, 0104	Sunstar.....	0000
Orbit	0072	Qisheng.....	0060	Schaub Lorenz	0000, 0041, 0104, 0106, 0315, 0642	Suntronic	0000
Orion.....	0002, 0121, 0184, 0209, 0348, 0352, 0479	Quarter.....	0046	Schneider	0000, 0037, 0042, 0072, 0081, 0240, 0278, 0352,	Sunwood	0072
Orson.....	0000	Quartz.....	0046	Scott	0043, 0045, 0121, 0184	Supra.....	0037
Osaki	0000, 0037, 0072	Quasar	0035, 0162, 0278, 1162	Seaway	0278	Sylvania.....	0000, 0035, 0043, 0081, 0593, 1593
Osume	0072	Quelle	0081	SEG.....	0072, 0081, 0240, 0278, 0637, 0642	Symphonic	0000, 0593, 1593
Otake	0209	Radialva	0037, 0048, 0072, 0081	SEI	0081	Systemax	1972
Otto Versand	0081	Radiola.....	0081	Sei-Sinudyne	0081	T+A	0162
Pace	0352	Radionette.....	0037	Seleco	0037, 0041, 0384	Tagar Systems	1972
Pacific	0000	RadioShack	0000, 0037, 1037	Semivox	0045, 0209	Taisho	0209
Palladium	0037, 0041, 0072, 0209	Radix	0037	Semp	0045	Tandberg.....	0278
Palsonic.....	0000, 0072, 0642	Randex	0037	Sentra	0072	Tandy.....	0000, 0104
Panasonic.....	0035, 0162, 0226, 0616, 0836, 1062, 1162, 1262, 1562, 1662	Rank.....	0041	Setron	0072	Tashiko	0000, 0037, 0048, 0081, 0240
Pathe Cinema	0043	Rank Arena.....	0041	Sharp	0037, 0048, 0209, 0569, 0848, 1048	Tatung.....	0000, 0041, 0043, 0045, 0048, 0067, 0081, 0209, 0348, 0352
Pathe Marconi.....	0041	RCA	0000, 0035, 0042, 0048, 0060, 0106, 0149, 0226, 0240, 0320, 0760, 0880	Shinco	0000	TCM	0348
Penney	0035, 0037, 0038, 0042, 0240	Realistic.....	0000, 0035, 0037, 0046, 0047, 0048, 0104	Shintom	0072, 0104	Teac	0000, 0037, 0041, 0072, 0278, 0307, 0526, 0593, 0637, 0642
Pentax.....	0042	Reoc	0348	Shivaki.....	0037	Tec.....	0072
Perdio	0000, 0209	ReplayTV	0614, 0616	Shogun	0240	Tech Line	0072
Philco.....	0000, 0035, 0038, 0072, 0209, 0226, 0479	Rex	0041, 0384	Siemens	0037, 0046, 0081, 0104, 0320, 0347	Technics	0035, 0162, 0226, 1162
		RFT	0072	Siera	0081	TechniSat	0348
		Ricoh.....	0034	Silva.....	0037	Teco	0035, 0037, 0038, 0041, 0048
		Roadstar.....	0037, 0072, 0081, 0240, 0278	Silver.....	0278	Tedex.....	0037, 0348
		Royal	0072				

VCR

Teknika	0000, 0035, 0037	Wards	0000, 0033, 0035, 0038, 0039, 0042, 0045, 0046, 0047, 0048, 0060, 0072, 0081, 0149, 0240, 0760
Teleavia.....	0041	Watson.....	0081, 0352
Telefunken	0041, 0209, 0278, 0320, 0321, 0384, 0494	Weltblick.....	0037
Telestar	0037	Wharfedale	0593
Teletech	0000, 0072, 0278	White Westinghouse	0072, 0209, 0278, 0637
Tenosal	0072	World	0348
Tensai.....	0000, 0072, 0278	XR-1000	0000, 0035, 0072
Tevion	0348	Yamaha	0038, 0041
Texet.....	0278	Yamishi	0072, 0278
Thomas	0000	Yokan	0072
Thomson.....	0041, 0060, 0067, 0278, 0320, 0321, 0384, 0494, 0722	Yoko.....	0037, 0072, 0240
Thorn	0037, 0041, 0104	Zenith	0000, 0033, 0034, 0039, 0209, 0479, 0637
Tivo	0618, 0636, 0722, 0739, 1503	ZT Group	1972
TMK	0240	ZX	0209, 0348, 0352
Tokai.....	0037, 0041, 0072, 0104		
Topline.....	0348		
Toshiba.....	0041, 0043, 0045, 0067, 0081, 0352, 0384, 0432, 1008, 1503, 1972		
Totevision	0037, 0240		
Touch	1972		
Towada.....	0072		
Triad	0278		
Uher	0240		
Ultravox	0278		
Unitech.....	0240		
United Quick Star..	0278		
Universum	0000, 0037, 0081, 0104, 0106, 0209, 0240, 0348		
Vector	0045		
Vector Research ...	0038		
Victor	0041, 0067, 0384		
Video Concepts....	0045		
Video Technic	0000		
Videomagic	0037		
Videosonic	0240		
Viewsonic	1972		
Villain	0000		

DVR

Digital Video Recorder (DVR)
DVR
Enregistreur audio numérique

ABS	1972
Alienware	1972
CyberPower.....	1972
Dell	1972
Gateway	1972
Hewlett Packard	1972
Howard Computers	1972
HP	1972
iBUYPOWER.....	1972
Media Center PC ...	1972
Microsoft	1972
Mind.....	1972
Northgate.....	1972
Panasonic	0616
Philips.....	0618, 0739
ReplayTV	0614, 0616
Sonic Blue.....	0614, 0616
Sony.....	0636, 1972
Systemax.....	1972
Tagar Systems	1972
Thomson	0722

Tivo	0618, 0636, 0722, 0739	Daewoo	1909, 1921, 1928
Toshiba	1972	Emerson	0236, 1905, 1909, 1911, 1928, 1929
Touch	1972	Funai	1904
Viewsonic	1972	GE	1907, 1917, 1919, 1922
ZT Group	1972	GoldStar	1926

TVDVD

TV/DVD combination
Combinación de TV/DVD
Combinaison TV/DVD

Advent.....	1933	Goodmans.....	1909
Apex Digital.....	1943	Hanimex	1908
Audiovox	1937	Harley Davidson	1904
Axion.....	1937	Hinari	1908
Broksonic	1935	Hitachi.....	1904
Bush	0698, 1037, 1900	JVC	1923
Daewoo	1902	LG	1934
Goodmans	1900	Lloyd's	1904
Grundig.....	1935	Magnasonic	1913, 1928
Jensen.....	1933	Magnavox	1904, 1913, 1931
Konka.....	1957	Magnin	1907
Mirror	1900	Memorex.....	1920, 1924, 1926, 1927
Panasonic	1941	MGA.....	1907
Prima	1933	Mitsubishi.....	1917
RCA.....	1948, 1958	Nokia	1912
Samsung	1903	Optimus.....	1913, 1924, 1927
Sylvania	0171	Orion	1905, 1911, 1929
Teac.....	1949	Panasonic	1919, 1924, 1927, 1930
Toshiba	1935	Penney	1907, 1919, 1926
		Quasar	1919, 1924
		RadioShack	1904, 1920
		RCA	1907, 1917, 1919, 1922
		Sansui.....	1904, 1911, 1929

TVVCR

TV/VCR combination
Combinación de TV/VCR
Combinaison TV/VCR

Aiwa	1904, 1910, 1914	Sanyo	1907
America Action	0180	Schneider.....	1904
Audiovox	0180	Sears	1904, 1926
Broksonic	1905, 1911, 1929	Sharp.....	1917
Citizen	1928	Sony.....	1904, 1925
Colt	1906	Sylvania.....	1931
Curtis Mathes	1919	Symphonic	1904, 1913
		Teac	1904, 1909, 1913, 1932
		Thomas	1904
		Toshiba.....	1918, 1936
		White Westinghouse	1909
		Zenith	1904, 1911, 1929

TVVCRDVD

TV/VCR/DVD combination
Combinación de TV/VCR/DVD
Combinaison TV/VCR/DVD

Akai	1903
Broksonic	1938
Emerson	1944
Orion.....	1954
Panasonic.....	1946, 1947
RCA.....	1953
Sharp	1917
Sylvania	1944
Toshiba.....	1945

CABDVR

Cable/DVR combination
Combinación de cable/DVR
Combinaison Câble/DVR

Americast	0899
General Instrument	0476, 0810
Jerrold.....	0476, 0810
Motorola	0476, 0810, 1106, 1376
Pace	0237, 1877
Pioneer	0877, 1877
Scientific Atlanta ...	0877, 1877
Sony	1006
Supercable	0276
Zenith.....	0899

SATDVR

DBS/DVR combination
Combinación de receptor de DBS/DVR
Combinaison récepteur DBS/DVR

@sat	1300
Atsat	1300
British Sky Broadcasting.....	1175
Canal Satellite	1339
Comag	1412
Digiturk	1076
Dream Multimedia..	1237
Echostar	0610, 0775, 1170, 1505
Euro1	1278
Expressvu	0775
Fast.....	1901
Force NO AS	1194
GbSAT	1214
Grundig	1150
Hughes Network Systems	1142, 1442, 1443, 1444
Humax	1176
Hyundai.....	1011
JVC.....	1170
Kathrein.....	1221, 1224
Opentel	1412
Pace.....	1423
Panasonic	1320
Philips.....	1142, 1442
Proscan.....	0392
Radix	1317
RCA	1392
Rebox	1214
Sagem	1253, 1307
Schneider.....	1901
SKY	1175, 1848
Skyplus	1412
Sony.....	0639, 1640
Strong.....	1158, 1300
Topfield	1206
TPS.....	1253, 1307
Zehnder.....	1075, 1412

DVDDVR

DVD/DVR combination
Combinación de DVD/DVR
Combinaison DVD/DVR

RCA.....	0880
Toshiba	1008, 1503

PROJ

Video projector
Proyector de vídeo
Projecteur vidéo

Ampro	0751
Dwin	0720, 0774
Epson.....	0833, 0840
JVC	0683
Marantz.....	1154
Mitsubishi	0868
NEC.....	0497
Panasonic.....	1310, 1410
RCA.....	0047
Runco	0497, 0603
Sanyo.....	0799
Sharp	0491, 0688, 0689, 0851
Sony	0353, 0834
Toshiba	0832
Yamaha.....	0833, 0839
Zenith.....	0017

DTVA

DTVA
DTVA
DTVA

Daewoo	1296
Grundig	1297
Hauppauge	1294
Labgear	1296
Netgem	1322
Nokia	1723
Pace.....	1323, 1423
Panasonic	1304, 1849
Rebox	1214
Teac	1227, 1322
Triax	1296

AMP

Audio amplifier/tuner
Amplificador de audio/sintonizado
Amplificateur audio/tuner

Bose.....	1629
-----------	------



282434

BOSE[®]
Better sound through research[®]

©2005 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
282434 AM Rev.00 CCM-001355