



DV-150 DVD-Player



# SAFETY INFORMATION

**TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**



**CAUTION:** To reduce the risk of fire and electric shock, do not remove the cover (or

back) of the unit. Refer servicing only to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

## IMPORTANT SAFEGUARDS

In addition to the careful attention devoted to quality standards in the manufacture of your video product, safety is a major factor in the design of every instrument. However, safety is your responsibility, too. This sheet lists important information that will help to assure your enjoyment and proper use of the video product and accessory equipment. Please read them carefully before operation and using your video product.

## Installation

Read all instructions carefully, even if you are familiar with the appliance.

1. This appliance is not intended for use by children or infirm persons without supervision.
2. Children should be prevented from playing with the appliance.
3. This appliance should be placed on a dry, level surface before it is operated.
4. **INDOOR USE ONLY** this appliance is not intended for outdoor use.
5. Do not expose this appliance to rain or moisture. Do not immerse the appliance in water or any other liquid.
6. Do not place items filled with liquids, such as vases, on the appliance. Do not expose the appliance to dripping or splashing liquids.
7. This appliance is not intended for use in bathrooms, laundry areas or similar moist locations. Never locate this appliance in the immediate surroundings of, or where it may fall into, a bath, basin, washtub, shower or swimming pool.

8. Do not place naked flame sources, such as candles, on the appliance.
  9. Do not locate the appliance or cord near heat sources such as radiators, heaters, air ducts or direct sunlight.
  10. Do not block any of the ventilation openings. Ensure that vents are not covered by newspapers, tablecloths, curtains, etc. Do not install in a tight-fitting cabinet.
  11. Do not insert or allow foreign objects to enter any grille openings.
  12. Do not run the cord under carpeting. Instead, arrange the cord away from traffic areas where it will not become a trip hazard.
  13. To disconnect the appliance, turn the appliance off, switch off the power outlet and remove the plug from the power outlet.
  14. Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
  15. Do not operate the appliance if it has a damaged cord or plug; after the appliance malfunctions; or has been dropped or damaged in any way. Consult Singer for examination.
  16. Use of controls or adjustments, or performance of procedures other than those specified herein, may result in hazardous radiation exposure.
- Caution**

Do not open do not attempt to repair, disassemble or modify this appliance.

Dangerous high voltages exist inside this appliance. This appliance is only to be serviced by Singer Service Technician. There are no user-serviceable parts inside. Do not look at laser pick-up directly. Do not touch the lens.

## Installation Warnings

**Ventilation** Slots and openings in the case are provided for ventilation to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or heat register. This product should not be placed in a built-in installation such as a bookcase or rack, unless proper ventilation is provided or the video product manufacturer instructions have been followed.

**Outdoor Antenna Grounding** If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and buildup static charges. ANSI/NFPA No. 70-1984 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

**Power Lines** An outside antenna system should not be located in the vicinity of overhead power lines, other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching or approaching such power lines or circuits, as contact with them might be fatal. Installing an outdoor antenna can be hazardous and should be left to a professional antenna installer.

**Lightning** For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power line surges.

## Compulsory Warnings

If the supply cord is damaged, it must be replaced by Singer service Technician, in order to avoid a hazard. This product has not been designed for any uses other than those specified in this booklet.

### Laser Safety

This compact disc player is classified as a CLASS 1 LASER PRODUCT.

Only qualified service personnel should remove the cover or attempt to service this device due to possible eye injury.

Invisible laser radiation when open and interlock failed or defeated.

Avoid direct exposure to beam.

# FEATURES

DVD, CD, MP3, Picture CD compatible  
CD-R, CD-RW capable

## TV format:

PAL/ NTSC color system  
4:3 / 16:9 screen format select

## Video output:

Composite Video output  
S-Video output  
YPbPr output  
SCART output

## Audio output:

Down-mix stereo output  
DTS surround output

## DVD features:

Multi Subtitle select  
Multi Language select  
Multi Angle select

## Other features:

On screen control menu  
Digital zooming  
Slow motion forward  
Child lock

# CONTENTS

Page

<b>WARNING IMPORTANT NOTICE FEATURES</b>	4
<b>INTRODUCTION</b>	
About DVD	7
About the player	8
Front panel function	8
Back panel function	8
Remote control	9
<b>SYSTEM CONNECTION</b>	10
<b>GETTING STARTED</b>	
Play a disc	11
Video port setup	12
<b>FUNCTION BUTTONS</b>	
[ Power ], [ Open / Close disc tray ], [ Play / Pause / Step / Stop ]	13
[ Skip ], [ Search ], [ Slow ], [ Select an item ], [ Title / Menu ]	14-15
[ NumberkeyPad ], [ PAL / NTSC ], [ Angle ], [ Subtitle ], [ Audio ],	16-17
[ Pscan ], [ Mode ], [ Reset ], [ Search a desired section ]	18-19
[ Repeat ], [ A-B ], [ Zoom ], [ Mute ], [ 3D ], [ PBC ], [ Channel ]	20-21
[ Program ], [ Return ], [ Mark ], [ Clear ], [ Display ],	22-24
<b>ON SCREEN DISPLAY</b>	
DVD mode	25
CD mode	25
MP3 mode	26
<b>SETUP MENU</b>	
LANGUAGE MENU	27
OSD Menu / Subtitle / Audio	
VIDEO MENU	27
TV Shape / TV System	
AUDIO MENU	28
Digital output / LPCM 48k DS	
RATING MENU	28
Password / Rating	
<b>TROUBLE SHOOTING</b>	29-30
<b>SPECIFICATIONS</b>	31

# INTRODUCTION

## Loading batteries to the remote control

Remove the battery compartment cover.

Load two AAA (UM-4 or R03) batteries into the battery compartment.

Make sure that the batteries have been inserted in the correct polarities matching to the symbols +, - marked in the battery compartment. Close the battery compartment cover.

 
When replacing batteries, replace both batteries. Do not mix new and used batteries operating together, otherwise, the operation lifetime will be much shorter than normal.

Remove the batteries if the unit will not be used for a prolonged period of time.


The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared sensor of the unit during operation.

If the sensor has been covered or there is a large object between the remote control and the sensor, the sensor will not respond.

The sensor may not be able to receive the remote signal when it is exposed to direct sunlight or a strong artificial light (fluorescent or strobe light). In this case, change the direction of the light or reposition the unit to avoid direct lighting.

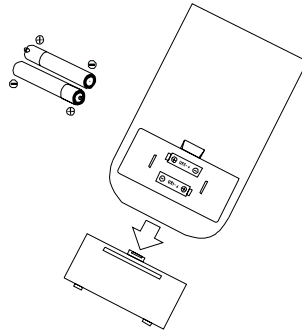

 Within approximately  
6 meter (20 feet)

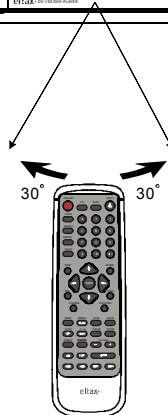



## ***BE ENVIRONMENTALLY FRIENDLY***

Do not dispose of batteries as normal rubbish. Be environmentally friendly, dispose of batteries following the Government's regulation.

## About DVD

DVD (Digital Versatile Disc) is a digital video medium under the MPEG II format, featuring a variety of revolutionary entertainment capabilities. The MPEG II video compression technology provides capacity for an excellent picture of minimum 500 lines resolution on screen, up to 8 language soundtracks, up to 9 views from different camera angles and up to 32 language subtitles (provided the DVD disc itself supports these features).

### Disc information

Disc types	DVD	CD
Recording Method	Digital / MPEG II	Digital
Capacity	Single-layer / Single side 4.7GB = 2 hr Single-layer / Double sides 8.5GB = 4 hr Double-layers / Single side 9.4GB = 4.5 hr Double-layers / Double sides 17GB = 8 hr	650MB=74min
Disc size	12cm / 8cm	12cm / 8cm
Horizontal Resolution	500 lines up	-
Sub-titles	32	-
Sound tracks	8	1
Symbol		

### REMARK

Some features contained in this DVD player are related to the DVD disc's software.

Some features cannot be performed if the disc does not support the feature, or requires special settings.

Check the features printed on the disc's packing or follow the instructions of the Disc's on screen menu.

## Select a DVD disc

### DVD Region Code

DVD discs and DVD players are manufactured under the worldwide agreed DVD Regional Code System that the player will operate only with corresponding disc of the same Regional Code.

Region code	Region
1	Canada, USA
2	Europe (incl. Poland, Romania, The Czech republic), Japan, Middle East (incl. Saudi Arabia, Egypt, Iran, South Africa)
3	East Asia (incl. Hong Kong, Taiwan, South Korea), South-East Asia
4	Australia, Caribbean, Central & South America, Mexico, New Zealand
5	Africa, Former Soviet Union, India, North Korea, Pakistan, Turkmenistan
6	China

### Care of disc

Video disc contains high-density compressed data that needs proper handling

- Hold the disc with fingers. Hold the disc's outer edge and/or the center spindle hole. Do not touch the disc surface.



- Do not bend or press the disc. Do NOT expose the disc to direct sunlight or heating sources.



- Store discs in cabinet vertically, in dry condition.

Prevent exposure to:

 
- Direct sunlight
- Heat or exhaust from a heating device.
- Extreme humidity

- Clean the disc surface with a soft, dry cleaning cloth. Wipe the disc surface gently, radially, from center toward the outer edge.

- Do not apply thinner, alcohol chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.


## About the player

### Front panel

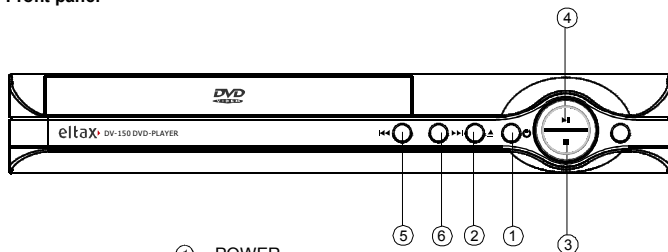

- ① POWER
- ② OPEN/CLOSE
- ③ STOP
- ④ PLAY/PAUSE
- ⑤ STOP
- ⑥ PLAY/PAUSE

### Back panel

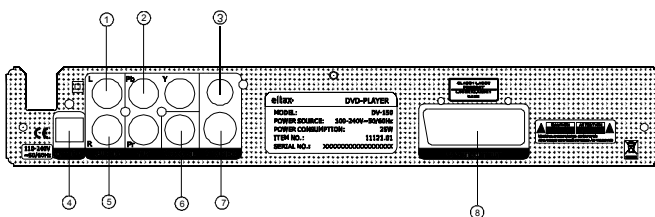 


- ① Left channel output jack
- ② Pr/Pb/Y output jack
- ③ VIDEO output jack
- ④ Digital signal OPTICAL output jack
- ⑤ Right channel output jack
- ⑥ Digital signal COAXIAL output jack
- ⑦ S-Video output jack
- ⑧ Scart output jack



## Remote control

 Some features of the player can only be performed by the remote control.  
Some features described in this owner's manual are related to the Disc's encoding.  
Some features may not be available, if the disc encoding does not support the feature.

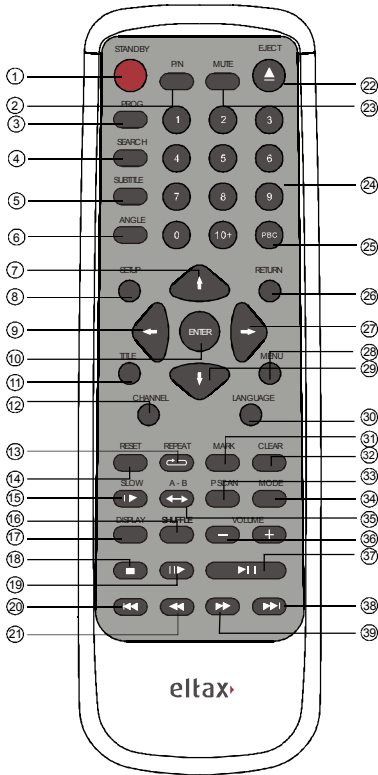

## REMARK

Some features contained in this DVD player are related to the DVD Disc's software.  
Some features cannot be performed if the disc does not support the feature, or requires special settings. Check the features printed on the disc's packing or follow the instructions of the Disc's on screen menu.

- |              |               |
|--------------|---------------|
| ① STANDBY    | ②② EJECT      |
| ② P/N        | ②③ MUTE       |
| ③ PROG       | ②④ 0-9 NUMBER |
| ④ SEARCH     | ②⑤ PBC        |
| ⑤ SUBTITLE   | ②⑥ RETURN     |
| ⑥ ANGLE      | ②⑦ RIGHT      |
| ⑦ UP         | ②⑧ MENU       |
| ⑧ SETUP      | ②⑨ DOWN       |
| ⑨ LEFT       | ③⑩ LANGUAGE   |
| ⑩ ENTER/PLAY | ③① MARK       |
| ⑪ TITLE      | ③② CLEAR      |
| ⑫ CHANNEL    | ③③ RSCAN      |
| ⑬ REPEAT     | ③④ MODE       |
| ⑭ RESET      | ③⑤ A-B        |
| ⑮ SLOW       | ③⑥ VOL        |
| ⑯ SHUFFEL    | ③⑦ PLAY/PAUSE |
| ⑰ DISPALY    | ③⑧ NEXT       |
| ⑱ STOP       | ③⑨ F.FWD      |
| ⑲ STEP       |               |
| ⑳ PREV       |               |
| ㉑ F.REV      |               |

## Notes

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared sensor during operation. When the sensor is covered or there is a large object between the remote control and the sensor, the sensor cannot receive signals. The sensor may not be able to receive signals properly when it is exposed to direct sunlight or a strong artificial light (such as a fluorescent or strobe light). In this case, change the direction of the light or reposition the unit to avoid direct lighting.

# SYSTEM CONNECTION

## Preparations

 
### System connection(Optional according to your back panel)

1. When making connection between this unit and other components, be sure all connection with power-off.
2. Audio/Video cables are connected according to the different colour identification and they should be fitted firmly.


- Yellow to video terminal
- White to audio terminal L,L
- Red to audio terminal R,R
- Black to audio terminal W,CENTER

3. Scheme of connection

#### ● 2CHANNEL CONNECTION

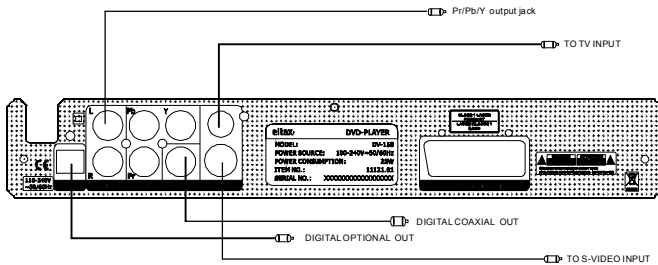

#### ● WITH SCART CONNECTION

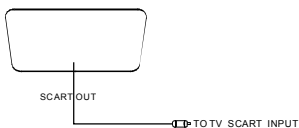 

# GETTING STARTED

- Unpack the unit.
- Read through this owner's manual before installation and use.
- Load batteries into the remote control unit.
- Connect the system, make sure the connections are secured.
- Connect the power plug to the AC power outlet.

## REMARK

Some features contained in this DVD player are related to the DVD disc's software. Some features cannot be performed if the disc does not support the feature, or requires special settings. Check the features printed on the disc's packing or follow the instructions of the Disc's on screen menu.

## Play a disc

 
### Switch on the player

Push the main power button to turn on the DVD unit. Power on the TV set and the amplifier if connected.

### Set up the system

Select the corresponding setting of the TV set (A V1, A V2, S-Video etc.) and the amplifier, until the DVD power on screen appears.

### Load a disc

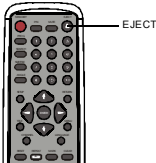


Press **EJECT** button on the remote control (or front panel) to open the disc tray. Load a disc and press **EJECT** to close the disc tray  
(Note, place the disc's label side up, blank side down)

### Automatic Play

 The unit will take a few seconds to download the disc initial data, display the disc type logo in the left upper corner of the TV screen, and then start playing automatically.

### If a DVD Disc Menu appears on screen

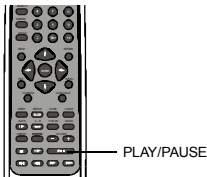


Press **PLAY** button on the remote (or on the unit) to start playing.

OR

Press **CURSOR** buttons to select the desired feature in the menu,

 And then press the **ENTER** button to confirm a selection.

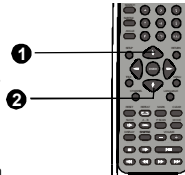

**NOTE** Normally, when a MP3 disc is loaded, the unit will take longer time to download the initial data. DVD disc that does not match the region code cannot be executed by this player.

Return to the disc main menu, press **MENU** button on the remote.  
Prevent loading the disc upside down.

## Video port setup

The DVD player is equipped with the following video ports:

Composite Video (V) (Always active)  
S-Video (Default option)





**The DVD player has been pre-set at the factory to Composite Video (V) and S-Video outputs, as default settings.**

The player is equipped with the following video output ports:

**Composite Video and S-Video** always active, does not need setting.

### For TV System setting

TV System menu is to set up the output TV system to PAL or NTSC:

- 1 In STOP mode, press SETUP button  setup menu appears.
- 2 Press RIGHT button , highlight "Video" icon.
- 3 Press ENTER button , sub-menu appears.
- 4 Highlight "TV System" selection, press ENTER Button, sub menu appears.
- 5 Highlight "NTSC" or "PAL" or "AUTO", press ENTER Button.
- 6 Press SETUP button  to quit.

 
 
**AUTO** Auto switch to PAL or NTSC system according to the disc  
if not, the default system is PAL

**NTSC** NTSC TV system

**PAL** PAL TV system

### Default setting PAL

When a DVD disc of NOT Correct format (region code) is loaded, the player Will not accept the disc and message "INCORRECT REGION CODE" will be displayed on screen.  
When a DVD disc of NOT correct TV system is loaded or the TV set of NOT correct TV system with the player, a distorted video signal may come out on the screen.

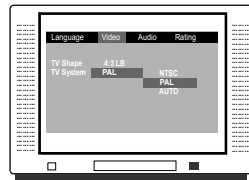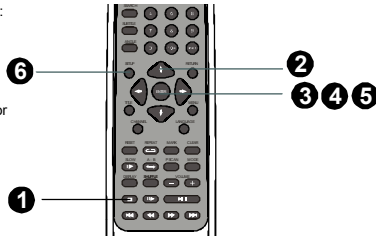

### NOTE

After the video output set up, if the picture output is:

- Distorted ,
- Black and white (no color),
- Picture not full screen
- Border part of Picture has been blocked.



 
It could be a result of wrong broadcast system matching Between the player and the TV set.

Press PAL / NTSC button in STOP mode to switch the broadcast system between PAL and NTSC.  
See Function Button - PAL / NTSC switch of this manual..

Or See TROUBLE SHOOTING in this manual.

# FUNCTION BUTTONS

## Power ON / OFF

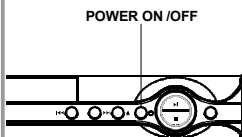


To switch the player Between power on and off mode:

**Press POWER button on front panel**

 (Always switch off the player after use)


## Open /Close disc tray

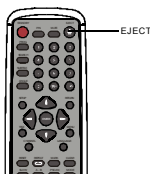

To open and close The disc tray:

**Press EJECT button  on the remote**
 
## Play / Pause / Step/ Stop

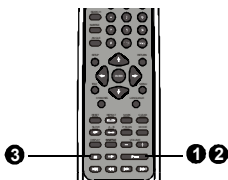


**1 Press PLAY/PAUSE button **

To play the Disc

**2 Then Press PLAY/PAUSE button **


to pause.

Repeat pressing the button to step forward the still picture frame by frame.

 
Press  to resume normal playback.

**3 Press STOP button**

to stop in two modes:

- a) Press **Once** STOP memorizes the interrupt position.  
( May resume with Play button  )
- b) Press **Twice** To stop completely  
(Will NOT resume with Play button)


### Skip Forward / Backward

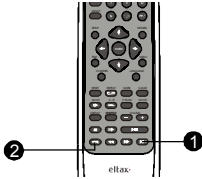

- 1 Press to skip forward (chapters)
- 2 Press to skip backward (chapters)

Player will not advance or reverse during "WARNING" section of any disc.

### Search Forward / Backward

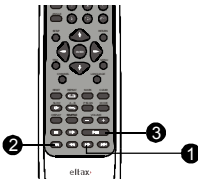 


The unit muted in SEARCH mode

- 1 Press to Search forward  
Repeat pressing the button to change search speed
- 2 Press to search backward  
Repeat pressing the Button to change search speed
- 3 Press PLA Y/PAUSE button to resume normal playback

Player will not advance or reverse during "WARNING" section of any Disc.


### Slow Forward

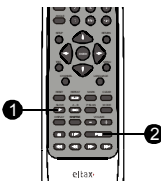 




The unit mutes in SLOW mode

 - 1 Press to play slow forward  
Repeat pressing the Button to change slow forward speed
- 2 Press PLA Y/PAUSE button to resume normal playback

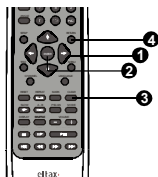
### Select an item in menu





In the disc menu or setup menu

 - 1 **press cursor button** to move between function items.
- 2 **Press**  to confirm a selection.
- 3 **Press**  to cancel an entry.
- 4 **Press**  to return to the previous menu.
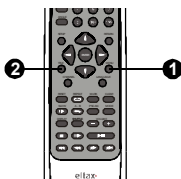
### Disc Title /Menu




- 1 **Press MENU button**  return to the DVD disc Menu.
- 2 **Press TITLE Button**  return to the DVD disc Title.

**Disc MENU** Disc menu is a DVD disc feature, allowing users to select functions on screen.

**Disc TITLE** Disc title is the beginning track of a DVD disc. Some DVD discs refuse the "TITLE" function.

## Numeric Key Pad / Direct Program access

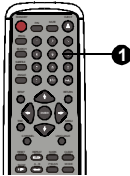 

### Direct Program access

- 1 Input the desired Chapter or Track number using the Numeric key pad. Press ENTER button to confirm your direct access Chapter or key selection.
  - Chapter - when Playing a DVD disc, or
  - Track - when playing a CD or Mp3 disc

### Numeric input - Function / Menu

- 1 Press the numeric Key pad to input data for disc or setup menu.

**NOTE** Program functionality depends on different DVD disc's format, some DVD discs do not allow direct access function.

 
## PAL / NTSC switch

The player is equipped with PAL and NTSC broadcast system output.

- 1 Press STOP button  to stop the player operation


In STOP mode

- 2 Press PAL/NTSC button  to switch the player between PAL and NTSC system

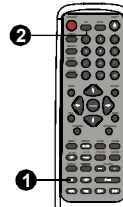


## Multi-Angle

 If a DVD disc contains Multi-Angle feature, viewing angles may be selected.

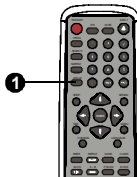

 
- 1 During in playback, repeat pressing ANGLE button  to select the desired viewing angle. Status will be displayed on screen..

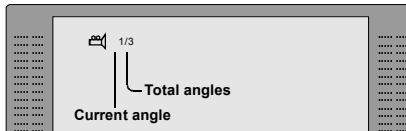

A DVD disc may contain up to 9 selectable viewing angles.




## Multi-Subtitle

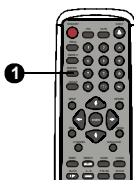 

If a DVD disc contains the Multi-Subtitle feature, subtitle may be selected:

 
- 1 **During in playback, repeat pressing SUBTITLE button**  to select the desired subtitle. Status will be displayed on screen.

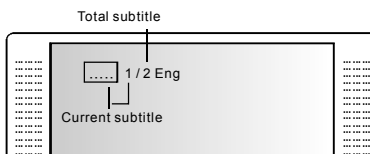


### NOTE


A DVD disc may contain up to 32 subtitle selections.
 
## Multi-Audio Soundtrack

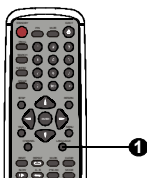

If a DVD disc contains Multi-Audio Soundtrack feature, Audio Language can be selected:

 - 1 **During in playback, repeat pressing LANGUAGE button**  to select the desired audio language. Playback status will be displayed on screen.

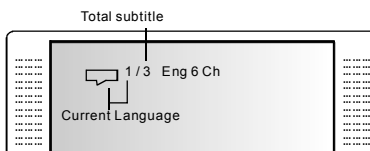


### NOTE




A DVD disc may contain up to 8 audio language selections.

In most cases, an Audio Soundtrack selection will be displayed on a DVD disc start up menu.

 Press **CURSOR** Button to select and **ENTER** button to confirm.
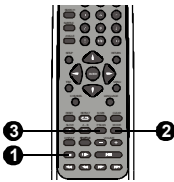
## Mode




- ❶ First, You should press [STOP] Key 
- ❷ Press the [MODE]key  may select video output. You can choose between S-Video, RGB and YUV.
- ❸ Press the [PSCAN]key  to choose between progressive scan and interlace scan.


By pressing the [PSCAN] you can choose if the component video output is interlaced or progressive scan.

Note:

You can only use this function if your TV set has the progressive scan feature.


## Reset

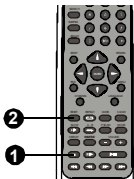 


- ❶ First, You should press [STOP] Key 
- ❷ press "RESET" button on the remote, this option will resume the original Settings of this machine.



## SEARCH a desired section

 
 This function does NOT apply to MP3

- 1 Press the **SEARCH** button to play at a desired Title, Chapter or Time.

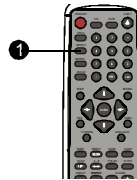

### DVD disc

 - Press the **SEARCH** button select SEARCH Mode.  
 Press **DOWN** button highlight desired item.
- TITLE ---** Input title number  
**CHAPTER ---** Input chapter number  
**TIME --:--** Input time hh:mm:ss  
 (Hour : Minute : Second)
- Press **ENTER** button.

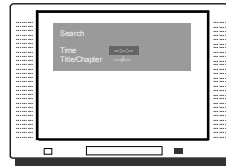

### CD disc

- Press the **SEARCH** button to T rack Search mode.  
 Press the **SEARCH** button again to Disc Search mode.
- TIME --:--** Input time hh:mm:ss  
 (Hour : Minute : Second)  
**TRACK ---** Input track number XXX  
 (Track Number)
- Press **ENTER** button.



### NOTE

- SEARCH functionality depends on different DVD disc's format. Some DVD discs do not allow SEARCH function.
- SEARCH does NOT function during Program playback.

## Repeat

- 1 Press REPEAT  button multiple times to reach desired repeat mode (see below).

### DVD disc

 
 
Repeat Chapter	Repeat the Chapter
Repeat Title	Repeat the Title
Repeat Off	Repeat function off

### CD disc

Repeat Single	Repeat the existing track
Repeat All	Repeat all tracks
Repeat Off	Repeat function off

### MP3 disc

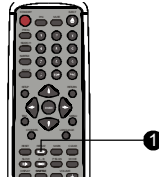

Repeat One	Repeat the existing track
Repeat All	Repeat all tracks
Repeat Off	Repeat function off





### NOTE

  
Repeat functionality depends on different disc's production format, some DVD discs do not allow repeat function.

## Repeat the section A-B

- 1 To repeat playback of a desired section:
- 1) Press the A-B  button at the beginning of the desired section, "A".
  - 2) Press the A-B  button again at the end of the desired section, "B".

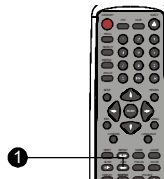



The player will repeat playback of the section from A to B.

Press the A-B  button again to cancel the function and return to normal play.


### NOTE

 - A-B repeat depends on different disc's production format, some DVD discs do not allow repeat function.
- A-B function does not apply to MP3 disc.
- The period between A and B should be at least 3 seconds.

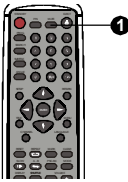
**Mute**


- ① Press **MUTE**  button  
To mute ( turn off ) the audio output.

 Press the button again  
To resume normal audio output.

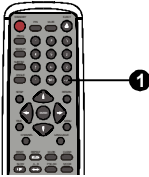**PBC Play**

 - ① For VCD2.0 disc playing in the condition of PBC ON, Song selection can only be done, when the playing returned to main menu in the condition of PBC OFF, press relevant number Key to get favorite song during playing

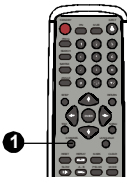
**Channel**

- ① When play SVCD,VCD disc, press **CHANNEL**  button  
Key to select left vocal, Right vocal ,Mix vocal or Stereo vocal

## Program setting

 Program to play a DVD and CD disc in a desired sequence automatically.


### DVD program menu

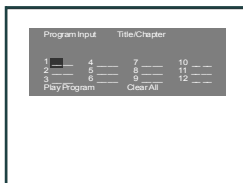

Load a DVD disc.

- 1 Press the **PROG** button, the DVD program menu will appear .
- 2 Use numeric key pad to input the Title number and the Chapter number. Repeat step 2 until programming is completed.
- 3 Highlight "Play Program", to start the program. Highlight "Clear All", to clear all input. Press **ENTER** button to confirm.
- 4 Press **PROG** button to exit the program menu.
- 5 Press **PROG** button to cancel the program.

### CD program menu

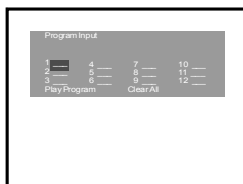 


Load a CD disc.

- 1 Press the **PROG** button, the CD program menu will appear .
- 2 Use numeric key pad to input the Track number. Repeat step 2 until programming is completed.
- 3 Highlight "Play Program", to start the program. Highlight "Clear All", to clear all input. Press **ENTER** button to confirm.
- 4 Press **PROG** button to exit the program menu.
- 5 Press **PROG** button to cancel the program.

#### NOTE

 
- Some DVD discs do not allow programming.
- Single track disc cannot be programmed.

## Return

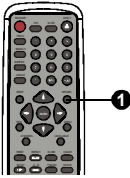

- 1 In **PBC mode**, when pressing "RETURN" Key to <sup>RETURN</sup> return to the menu, thus canceling the PBC mode, the "RETURN" key will be invalid

## Mark

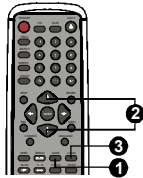 

### STORING MARKS MEMORY

1. Press the "MARK" button on remote control during the disc is played and the menu of mark setting with three bookmarks will appear on the screen.
2. Use the direction buttons (▲ or ▼) on the remote control to select mark numbers (Bookmarks 1, 2 & 3), and press ENTER button to enter the playing times where you would like to view again afterwards. A maximum of three marks can be stored.
3. Press "CLR" button to clear a particular mark. Press "MARK" button to clear the display.

 
### PLAYBACK FROM A MARKED POSITION


1. Press the "MARK" button on the remote control to display the menu of mark setting on the screen.
2. Use the direction buttons (▲ or ▼) on the remote control to select your desired mark, and press "ENTER" button to start to playback from that point.
3. Marked positions can be recalled anytime by pressing "MARK" button on the remote control.

### Note:

All the marks are cleared when the power is off or the disc is removed.



## Clear

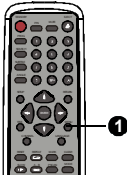

- 1 Setting program or searching need to input number. press CLEAR  button to clear the number when the input number is wrong.

## Shuffle

  
- 1 Press "shuffle" button, "shuffle on" displayed on screen, when if a song finished or continue to press "▶▶" or "◀◀", the song played next is at player's random selection; while repeat to press "shuffle" button, there will be "shuffle off" displayed, when if a song finished or continue to press "▶▶" or "◀◀", the song played next is per songlist sequence.

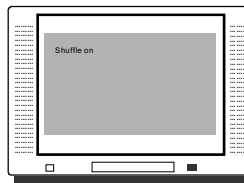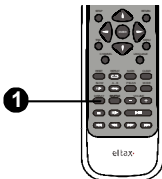



# ON SCREEN DISPLAY

 
## DISPLAY

Press DISPLAY  button, an On Screen Display (OSD) indicator will be displayed at the upper part of the TV screen in displaying the disc information and operation status.


The OSD indicator will remain on screen until pressing the DISPLAY button to turn it off.

The OSD indicator is a user friendly interface designed for displaying the status of the playback. When a different disc is loaded (DVD, CD or MP3), the OSD indicator bar will be different.


## OSD - DVD mode

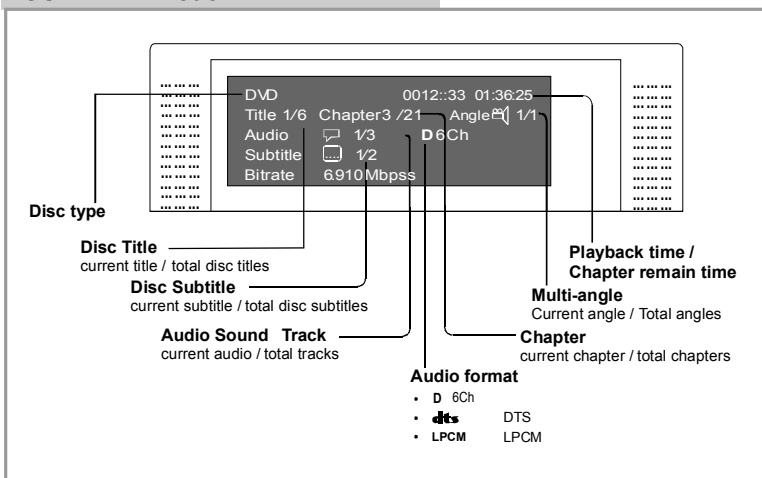

## OSD - CD mode

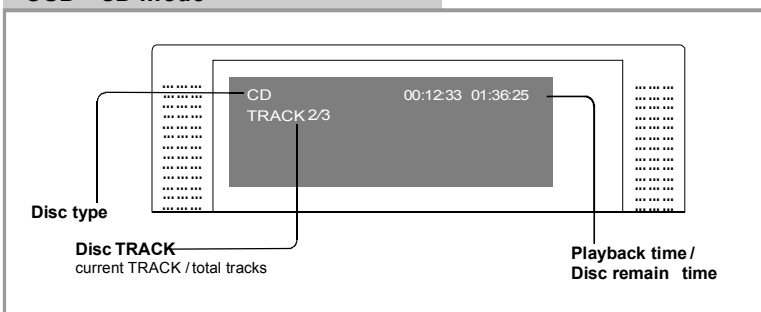 

**MP3 mode**

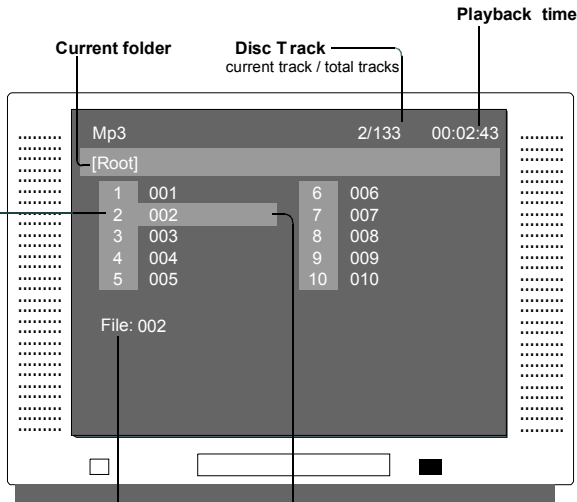 

**Current folder**

**Disc T rack**  
current track / total tracks

**Playback time**

**Playing track highlight**

**Playing track file information**  
(Information provided by the disc)


**Selection highlight**  
(Press **ENTER**  button to play this track)

**Auto playback**

The player will load the MP3 disc and auto start to playback from track one till the last track of the root directory.

**Select a track**

Press **ARROW** button to highlight the desired track, and switch between folder and pages.

Press **ENTER**  button to play the selected track.

 
**Playing track file information**


You may add the information of the MP3 file while you create the disc, e.g. artist, song name and date etc.,. Those information of the playing track will be display at the lower part of the screen.

# SETUP

Various features of the player can be adjusted in the SETUP menu:

Press SETUP  button  
SETUP menu appears.

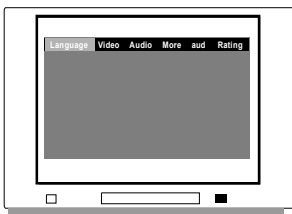


Highlight the desired icon Press ENTER  button to activate the setting sub menu.

## Language

Enter this menu to set the language in OSD display, DVD disc subtitle, DVD disc audio and DVD disc start menu.

Press SETUP  button


Highlight "Language",  
Press ENTER , Language sub menu appears.



Highlight the desired item and press ENTER button,

Highlight the desired item,

Press ENTER  button to confirm.

Press SETUP  button to save the setting and quit.

### Default setting

OSD Menu	:	English
Subtitle	:	Off
Audio	:	English

 
## Video

Enter this menu to set the video setting

Press SETUP  button

Highlight "Video",


Press ENTER , Video sub menu appears.

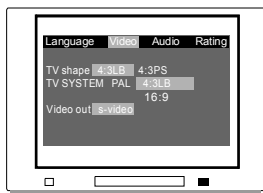

Highlight the desired item and press ENTER button,

Highlight the desired item,

Press ENTER  button to confirm.

Press SETUP  button to save the setting and quit.

### Default setting

TV Shape	4:3 LB
TV System	PAL

## TV screen

The aspect ratio of the picture provided by the DVD player can be varied in line with the features available on the TV in use.

### 4:3 Letter Box

Allow you to see movies in their original aspect ratio. Entire frame of the movie will be display on screen, but it will occupy a smaller portion of the screen.



### 4:3 Pan Scan

The signal will fill the screen with the centre of the picture. The left and right edge of picture may be cut outside range of the screen.



## SETUP MENU (Press SETUP button)

### 16:9 Wide Screen

When you connect to a wide screen TV, this setting will allow the original aspect ratio will be display full screen.



 
#### NOTE



Depending on the DVD disc format, e.g. 2.35:1, the wide screen setting may still have black margins above and below the picture.

### TV System

TV System menu is to set up the broadcast system:

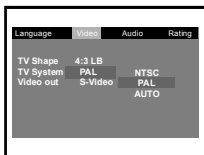

**AUTO** Auto switch to PAL or NTSC system according to the disc, if not, the default system is PAL

**NTSC** NTSC TV system

**PAL** PAL TV system


### Audio (digital audio)

 Enter this menu to setup the digital audio output format of different signal type. The selectable output formats are PCM or Raw.

Press **SETUP** button

Highlight "Audio",

Press **ENTER** button, Audio sub menu appears.

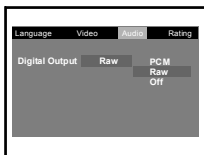

Highlight the desired item and press **ENTER** button,

Highlight the desired item,

Press **ENTER** button to confirm.

Press **SETUP** button to save the setting and quit.


### Rating

 Enter this menu to setup the rating level of the player. The player will require a password to play any disc with rating level higher than the setting.

Press **SETUP** button

Highlight "Rating",

Press **ENTER** button, Rating sub menu appears.

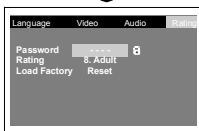

Highlight "Password" selection, input the 4 digits password, Press **ENTER** button. The rating lock release.

#### Default setting

**Password** : 0000

**Rating** : 8. Adult

Highlight "Rating",

Repeatedly pressing **ENTER** button to change the setting:

1. Kid Safe
2. G
3. PG
4. PG\_13
5. PG\_R
6. R
7. NC\_17
8. Adult

 
Highlight "Password" selection,

Press **ENTER** button to lock.

Press **SETUP** button to save the setting and quit.

# TROUBLE SHOOTING

Should your DVD player develop a problem, please check below before requesting service:

Symptom	Check and Action
No Power	<ul style="list-style-type: none"> <li>• Check if the power cord has been properly connected to the power outlet.</li> <li>• Check if the main power has been switched on.</li> </ul>
Does not play	<ul style="list-style-type: none"> <li>• No disc, load a disc.</li> <li>• Disc has been loaded upside down. Place the disc with the label side up.</li> <li>• Disc's region code does not match to the player.</li> <li>• Disc is not correct type for player.</li> <li>• Disc is damaged or dirty, clean the disc or try another disc.</li> <li>• Moisture may be condensed inside the player. Remove the disc and leave the unit power on for one or two hours.</li> </ul>
No Picture	<ul style="list-style-type: none"> <li>• Check if the TV set has power on, use TV remote to select A/V signal for DVD rather than broadcast.</li> <li>• Check if the system connection is proper and secure.</li> <li>• Check if the connection cables are damaged.</li> <li>• Clean the disc.</li> </ul>
Picture noise / distorted	<ul style="list-style-type: none"> <li>• The disc is dirty or damaged. Clean the disc or try another disc.</li> <li>• Reset the color system of the player or the TV set.</li> <li>• Try to direct the player to the TV set instead of via other components, such as a VCR.</li> </ul>
Picture not full screen	<ul style="list-style-type: none"> <li>• Select the screen format from the player's SETUP MENU, see " <i>SETUP MENU</i> " of this manual.</li> <li>• Select the screen format from DVD disc menu.</li> </ul>
Malfunction	<ul style="list-style-type: none"> <li>• Should the player develop a malfunction, unplug the player for 30 minutes. After 30 minutes, power on the player and the restore function should reset the player.</li> </ul>
No sound	<ul style="list-style-type: none"> <li>• DTS disc used. Press the remote control "LANGUAGE" button  and re-select the audio setting on the remote.</li> </ul>

## TROUBLE SHOOTING



**CAUTION** : To reduce the risk of fire and electric shock, do not remove the cover (or back) of the unit. Refer servicing only to Singer Service Technician

Symptom	Check and Action
Cannot SKIP or SEARCH	<ul style="list-style-type: none"> <li>• Some discs are programmed that do not allow users to SKIP or SEARCH at some sections, especially at the beginning WARNING section.</li> <li>• Single Chapter disc cannot apply SKIP function.</li> </ul>
No sound or sound output not complete	<ul style="list-style-type: none"> <li>• Check if the TV and Amplifier have been switched on, and correctly set.</li> <li>• Check if the TV and Amplifier system connection is secured.</li> <li>• Press LANGUAGE button to select other audio tracks output of disc.</li> <li>• Check if the MUTE function of the TV or Amplifier has been activated.</li> <li>• There will be no sound output during P AUSE / STEP / SLOW and SEARCH.</li> </ul>
No surround sound	<ul style="list-style-type: none"> <li>• If digital output has been applied:                             <ul style="list-style-type: none"> <li>• Press SETUP button</li> <li>• Highlight "AUDIO"</li> <li>• Highlight "Digital Out"</li> <li>• Select RAW or PCM</li> <li>• Press SETUP button</li> </ul> </li> <li>• Power on the amplifier or active type loudspeakers.</li> </ul>
MP3 disc no sound or noisy	<ul style="list-style-type: none"> <li>• When PC program files or other data files are mixed with MP3 files in the same disc, the player may play the non-MP3 files with noise or no sound.</li> <li>• Check the disc, if all the files on disc are MP3 files Skip the file, try other files.</li> </ul>
Remote control does not function	<ul style="list-style-type: none"> <li>• Remove the obstacles between the remote control and the player .</li> <li>• Point the remote control towards the remote sensor on the player.</li> <li>• Check if the batteries of the remote control have been loaded with correct polarities.</li> <li>• Replace the batteries of the remote control.</li> </ul>

# SPECIFICATIONS

Type of Disc	DVD CD-DA CD-MP3 JPEG CD CD-R / CD-RW
Video Format	MPEG 2
Audio Format	MPEG 1, LAYER 1, LAYER 2, LAYER 3
Signal Output	Color System: PAL/NTSC Audio System: DIGITAL down mix stereo DIGITAL digital output DTS digital output Audio DAC 16bit/48KHz Video Output: 1 Vpp (at 75 ohm) Audio Output (Stereo): 2 Vpp
Frequency Response	CD: 4Hz 20KHz (EIAJ) DVD: 4Hz 22KHz (48K) 4Hz 44KHz (96K)
S/N ratio	> 92 dB
THD	< 0.04%
Output Terminals	Video (composite) output X1 S-Video output X1 2 channel analog output X1 DIGITAL/DTS digital coaxial output X1 YPbPr output X1 SCART output X1
Power input	AC 100-240V 50/60Hz 25W
Dimensions	W254 x D240 x H45 mm

For further information please visit our website:

[www.eltax.com](http://www.eltax.com)

Item no. 40202