



User's Manual





Notice

Copyright © 2001 HUMAX Corporation)

Not to be copied, used or translated in part or whole without HUMAX's prior consent in writing except approval of ownership of copyright and copyright law.

Warranty

The information in this document is subject to change without notice. HUMAX does not have any responsibility for direct, indirect, accidental, necessary and other corruptions due to your offer or use of the information contained in this manual.

Trademarks

'Dolby' and the double-D symbol are trademarks of Dolby Laboratories.

DTS and DTS Digital Out are trademarks of Digital Theatre Systems Inc.

Manufactured under license from Dolby Laboratories.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patent and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

US Patent Nos. 4,631,603; 4,577,216; 4,819,098; 4,907,093; and 6,516,132.

Thank you for purchasing a HUMAX digital terrestrial receiver. Please read this user manual carefully, to be able to safely install, use and maintain the receiver at maximum performance. Keep this user manual next to your receiver for future reference.

Notice

Read this manual carefully and make sure you understand the provided instructions. For your safety, know what the reaction upon each action will be.

Warnings, Cautions and Notes

Throughout the whole manual, pay special attention to the following marks that indicate hazardous situations.

Warning

Indicates a hazardous situation which, if not avoided, could result in (serious) injury.


Caution

Indicates a situation which, if not avoided, could damage the equipment or other apparatus.

Note

Indicates additional information to the user to make the user aware of possible problems and information of any importance to help the user to understand, to use and to maintain the installation.



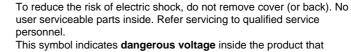



presents a risk of electric shock or personal injury.

This symbol indicates important instructions accompanying the product.

Only for DVD player

1. CAUTION



Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

The DVD player is classified as a $\it CLASS~1~LASER$ product. The CLASS 1 LASER PRODUCT label is located on the exterior.

2. Supported disc formats

The following discs can be used in your DVD.

Note: Supported discs could be different with the following disc.

• DVD Video (Digital Versatile Disc)

- Super Video CD
- Video CD
- Super Audio CD (Only plays the CD layer of a hybrid SACD disc)
- Audio CD
- MP3

Notice

3. Region code of the DVD player and DVDs





Since DVD films are not normally released in all parts of the world at the same time, all DVD players have a specific regional code. Discs can be given an optional regional code. If the regional codes differ between the player and the disc, playback is not possible.

DVDs must be marked *ALL* for all regions or specific number for specific region to work in this machine. If the DVD is marked with a different region, it cannot be played in this DVD player.

Some DVD discs may not have a regional code label even though their playback is prohibited by area limits.

Region 2 Europe, Japan, Middle East, Egypt, South Africa, Greenland

Europe European Region 2 DVDs may be sub-coded D1 through D4. *D1* identifies a UK-only release. *D2* a identify European DVDs that are not sold in the UK and Ireland. *D4*

identifies DVDs that are distributed throughout Europe.

Safety and Warning

This digital terrestrial receiver has been manufactured to satisfy international safety standards. Please read the following safety precautions carefully.

Safety Instructions and Precautions

1. MAINS SUPPLY

90 - 250V AC 50/60Hz

Operate your product only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult local power company. Disconnect the receiver from the mains before you start any maintenance or installation procedure

2. OVERLOADING

Do not overload a wall outlet, extension cord or adapter as this may result in electric fire or shock.

3. LIQUIDS

The receiver should not be exposed to any liquids such as dripping or splashing. In addition, no objects filled with liquids, such as vase, shall be placed on the apparatus.

4. CLEANING

Disconnect the receiver from the wall outlet before cleaning. Use a light damp cloth (no solvents) to dust the receiver.

5. VENTILATION

The slots on top of the receiver must be left uncovered to allow proper airflow to the unit. Do not stand the receiver on soft furnishings or carpets. Do not stack electronic equipments on top of the receiver.

6. ATTACHMENTS

Do not use any unsupported attachments as these may be hazardous or cause damage the receiver.

7. CONNECTION TO THE AERIAL

Disconnect the receiver from the mains before connecting or disconnecting the cable from the aerial. Failure to do so can damage the aerial.

8. CONNECTION TO THE TV

Disconnect the receiver from the mains before connecting or disconnecting the cable from the aerial. Failure to do so can damage the TV.

9. EARTHING

The aerial cable must be buried in the ground.

The buried cable of the system must comply with SABS 061.

Safety and Warning

10.1 OCATION

Place the receiver indoors to avoid exposing it to lightening, rain or sun.

Do not place it near a radiator or heat register.

Make sure it has more than 10 cm clearance from any appliances susceptible to electromagnetic influences, such as TV and VCR.

Do not block these openings with any object, and do not place the product on a bed, sofa, rug, or other similar surface.

If you place the product on a rack or bookcase, ensure that there is adequate ventilation and that you have followed the manufacturer's instructions for mounting.

Do not place the product on an unstable cart, stand, tripod, bracket, or table where it can fall.

A falling product can cause serious injury to a child or adult, and serious damage to the appliance.

11.LIGHTNING, STORM, or NOT IN USE

Unplug the product from the wall outlet and disconnect the aerial during a lightning storm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-line surges.

12.EXTRANEOUS OBJECTS

Do not insert anything through the openings in the unit, where they can touch dangerous voltage point or damage parts.

13.REPLACEMENT of PARTS

When the replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorised substitutions may result in additional damage to the unit.

Warning

1. Follow these directions in order not to damage the power cord or plug.

Do not modify or process the power cord or plug arbitrarily.

Do not bend or twist the power cord too much.

Make sure to disconnect the power cord with the plug held.

Keep heating appliances as far as possible from the power cord in order to prevent the cover vinyl from melting.

2. Follow these directions. Failure to follow one of them may cause electrical shock.

Do not open the main body.

Do not insert metals or inflammable objects inside the product.

Do not touch the power plug with a wet hand.

Disconnect the power cord in case of lightening.

- Do not use the product when it is out of order. If you continue to use the product when defective, serious damage can be caused toit. Make sure to contact your local product distributor if the product is out of order.
- 4. Please do not insert metal or alien substance into the slots for the modules and smart cards. In doing so can cause damage to the STB and reduce its life span.

Only for DVD player

1. Cleaning discs

Some malfunctions (frozen or distorted and broken sound for example) are due to dirt on the disc. To avoid such problems you should clean your discs regularly.



Dirty discs should be cleaned with a soft cloth. Always wipe from the middle to the edge.

Note: Do not use any solvents such as benzine, thinner, alcohol , commercially available cleaning agents or antistatic sprays designed for analogue records.

2. Handling discs

Do not touch the playback side of disc.

Hold the disc by the edges so that fingerprints will not get on the surface.

3. Storing discs

After playing, store the disc in its case.

Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

Contents

STB

1. Before Using the Receiver		GB12
	1.1 Package Contents	GB12
	1.2 Front Panel	GB13
	1.3 Rear Panel	GB14
	1.4 Remote Control	GB15
2. Setup		GB19
	2.1 Connecting the Antenna for STB	GB19
	2.2 Connecting for DVD player	GB22
	2.3 Powering On	GB24
3. Loading		GB25
	3.1 Booting Mode	GB25
	3.2 Installation Wizard	GB25
4. Basic Operation		GB26
	4.1 Switching Channel	GB26
	4.2 Volume Control	GB26
	4.3 Text and Interactive Services	GB26
	4.4 Change the Subtitle Language	GB27
	4.5 Change a Audio Language	GB27
	4.6 Program Information (I- plate)	GB28
	4.7 Option List	GB30
5. Channel List		GB32
	5.1 Displaying and Switching Channel List	GB32
	5.2 Changing Channel List Group	GB33
	5.3 Edit Channels	GB34
	5.4 Edit Favourite Channels	GB36
	5.5 Channel Change Mode	GB39
6. Program Guide		GB40
	6.1 Viewing Programme Guide Information	GB40
	6.2 Finding a Programme	GB42
	6.3 Viewing Reserved Programme	GB43

7. Setting Preferences		
7.1 Parental Control	GB45	
7.2 Language Setting	GB45	
7.3 Time Setting	GB47	
7.4 Schedule	GB48	
7.5 A/V Control	GB49	
7.6 UHF Tunning	GB50	
7.7 Miscellaneous Settings	GB53	
8. Installation	GB54	
8.1 Automatic Search	GB54	
8.2 Manual Search	GB55	
8.3 Default Setting	GB56	
9. Software Update	GB57	
9.1 OTA (Over the Air)	GB57	
9.2 Software Update from PC	GB60	
10. System Information		
10.1 Status	GB61	
10.2 Signal Detection	GB61	
11. Games		
12. Manipulating Your TV Using Remote Control		

Contents

DVD Player

1. Getting Started	GB73	
2. Playing a DVD-VIDEO Disc		
2.1 Playing a title	GB75	
2.2 General Information	GB75	
2.3 Search	GB76	
2.4 Skipping Chapter	GB77	
2.5 Repeat Mode	GB77	
2.6 Repeat a section of disc	GB78	
2.7 Fast Playing	GB78	
2.8 Slow Motion	GB79	
2.9 Zooming in and out	GB79	
2.10 Subtitle/Audio	GB79	
2.11 Listening Mode	GB80	
2.12 Time display	GB80	
2.13 Angle	GB80	
3. Playing a Audio CD	GB81	
3.1 Playing Audio CD	GB81	
3.2 Detail Information	GB81	
3.3 Playlist Menu	GB83	
3.4 Search	GB83	
3.5 Listening Mode	GB84	
3.6 Time Display	GB85	
3.7 Fast Playing	GB85	
3.8 Play Mode	GB86	
3.9 Repeat Mode	GB86	
3.10 Playlist Editor	GB86	
3.11 MP3 Disc Scan	GB87	
4. Settings (DVD part)		
4.1 Language	GB88	
4.2 Audio	GB89	
4.3 Display	GB90	
4.4 Disc	GB92	
4.5 Parental Control	GB92	

Appendix1. Menu Map	GB94
Appendix2. Trouble Shooting	GB96
Appendix3. Specification	GB98
Appendix4. Glossary	GB100
Appendix5. Service and Support	GB102


1.Before Using the Receiver

This chapter describes detail instructions on the product and its accessories.

1.1 Package Contents

Please check all package contents before using your receiver.



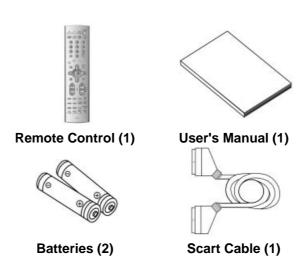

Note: Since faults may occur if the remote control is being left without a battery for a long time, always keep the battery inserted in the remote control.

1.2 Front Panel



1. STANDBY Button

Switches between Operation and Standby modes.

2. DVD/DTV

Change mode between DTV and DVD.

3. TV/RADIO

Switches between TV and Radio modes.

4. CH-/CH+

Adjust the audio volume.

5. Stop

Stop play a disc.

6. Play / Pause

Start playback/Pause playback.

7. Skip previous

Return to the beginning of the current chapter/track or skip back to the previous chapter/track.

8. Skip next


Skip to the next chapter/track.

9. OPEN/CLOSE

Open and close the disc tray.

1. Before Using the Receiver

1.3 Rear Panel

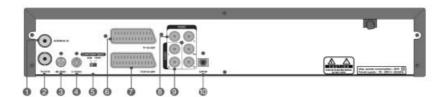

1. ANTENNA IN

Connects a antenna to a antenna cable.

2. TV/VCR

Connects a RF signal from your receiver to RF(ANT) input jack on your TV or VCR.

3. RS-232C

Connects to your PC to upgrade product's software programme.

4. S-Video

Connect your receiver to a TV or VCR that accepts S-Video input.

5. COMPONENT SELECT

RGB If you select RGB, you can connect to video, audio L and R.

YPbPr If you select YPbPr, you can connect your receiver to a TV or VCR that accepts

high-quality video input.

6. TV SCART

Connects a TV SCART cable.

7. VCR SCART

Connects a VCR SCART cable.

8. VIDEO

Connects to your TV or VCR and output Video signals.

9. AUDIO L/R


Connects to your TV or VCR and output Audio signals.

10.S/PDIF

Outputs the digital audio signals(S/PDIF).

1.4 Remote Control

STB RCU

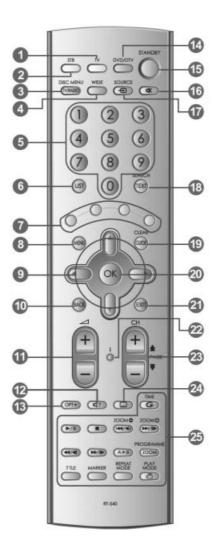

Note: This remote control can also control your TV. To set the remote control for your TV, please refer to **Chapter 12**.

1. Before Using the Receiver

STB

1. TV

Turn on the TV.

2. STB

Turn on the STB.

3. TV/RADIO

Switches between TV and Radio modes.

4. WIDE

Set the Display Format.

5. NUMERICAL BUTTONS

Enters a TV/Radio channel number or menu option number.

6. LIST

Displays the channel list in DTV.

7. COLOR BUTTONS

Select color keys for interactive applications.

8. MENU

Displays the main menu in DTV.

9. ARROW BUTTONS

Changes the channel or move the cursor to the up, down, left or right menu option.

10.BACK

Returns to the previous menu and screen.

11.V -/+

Adjusts the audio volume of TV.

12.SOUNDTRACK

Displays the Soundtrack.

13.OPT + (OPTION)

Displays the channel attributes during watching a programme.

14.DVD/DTV

Change mode between DTV and DVD.

15.STANDBY

Switches between Operation and Standby modes.

16.MUTE

Pauses the audio temporarily. That is, volumes on/off temporarily.

17.SOURCE / AUX

Selects the input source between TV and receiver./Controls input mode of TV.

18.TEXT

Displays digital text.

19.GUIDE

Displays the Programme Guide.

20.OK

Selects a menu, or confirms the selected operation. And displays the channel list during watching a programme.

21.EXIT

Exits the main menu or Guide screen.

22.i (INFORMATION)

Displays the information about the channel and programme.

23.CH - / + or PAGE - / +

Changes the Channel or Page.


24.SUBTITLE

Changes the subtitle language.

25.DVD FUNCTION BUTTONS

- This part explains STB function only.
- Press the G() button to display the game.

DVD RCU

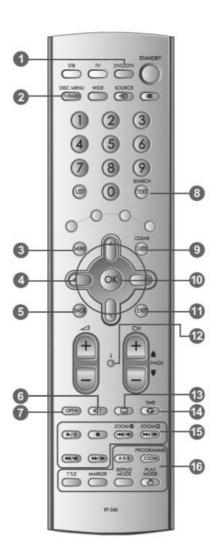

1. Before Using the Receiver

DVD

1. DVD/DTV

Change mode between DTV and DVD.

2. DISC MENU

Displays the main disc menu.

3. MENU

Displays the setup menu in DVD.

4. ARROW BUTTONS

Changes the channel or move the cursor to the up, down, left or right menu option.

5. BACK

Returns to the previous menu and screen.

6. SOUNDTRACK

Displays the Soundtrack.

7. OPT+ (OPTION)

Set the listening mode.

8. SEARCH

Change the search mode.

9. CLEAR

Delete the track or bookmark in DVD.

10.OK

Selects a menu, or confirms the selected operation.

11.EXIT

Exits the main menu or Guide screen.

12.i (INFORMATION)

Displays the DISC information.

13.SUBTITLE

Changes the subtitle language in DVD.

Note: This part explains DVD function only.

14.TIME

Change time display.

15.PLAY CONTROL BUTTONS

(PLAY / PAUSE)

Start playback/Pause playback.

() (STOP)

Stop play a disc.

() (SKIP PREVIOUS/ZOOM -)

Return to the beginning of the current chapter or track or skip back to the previous chapter or track./zoom down.

() (SKIP NEXT/ZOOM +)

Skip to the next chapter or track./zoom up.

(((Fast Backward/Slow

Backward)

Fast backward a disc/execute a backward slow playback when playing a DVD.

((Fast Forward/Slow

Backward)

Fast forward a disc/execute a forward slow playback when playing a DVD.

16.DVD FUNCTION BUTTONS

A▶E

Repeat between A and B in DVD.

ZOOM / PROGRAMME

Enlarge the picture during DVD playback. / Edit playlist.

TITLE

Displays the title menu.

MARKER

Set bookmark in a DVD during playback.

REPEAT MODE

Change repeat mode.

ANGLE / PLAY MODE

Change angle and play mode.

2. Setup


This chapter describes how to set up the receiver. Select the most appropriate procedure depending on your requirements.

Note: If you encounter any problem when setting up the receiver, please contact your local product distributor.

2.1 Connecting the Antenna for STB

1. Connecting TV and VCR with SCART

Connect the cable of your TV aerial to the **ANTENNA IN** connector on the rear of the receiver. SCART and co-axial cable are connected as in the figure above.

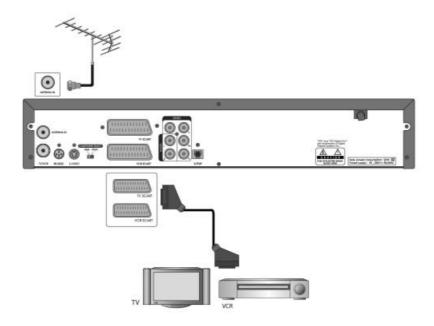


2. Setup

2. Connecting Hi-Fi system 1


Connect the outputs on this receiver to corresponding inputs on your Hi-Fi Audio or Dolby Prologic Decoder.

(left audio out to left audio in, right audio out to right audio in)

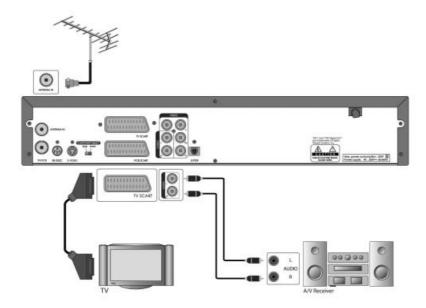

3. Connecting Hi-Fi system 2

If you wish to connect the optical S/PDIF terminal and Dolby digital decoder to listen Dolby digital audio, DTS audio or Multi Surround audio, connect as follows:

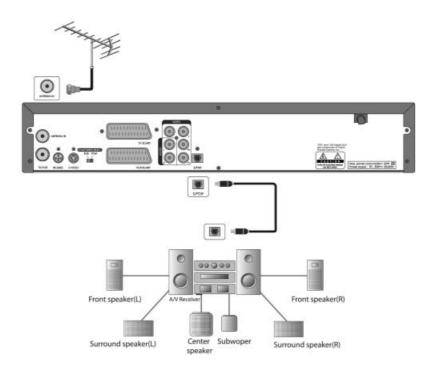


2. Setup

2.2 Connecting for DVD player

1. Connection with Component Video (Y Pb Pr) cable

This method of transmitting pictures produces the highest quality as the video signal is split into its Y(brightness), U and V (red minus brightness, blue minus brightness)components. Insert one end of a component video (Y Pb Pr) cable into the red/blue/green cinch socket at the back of the DVD player and the other end into the component video input sockets on the TV set.

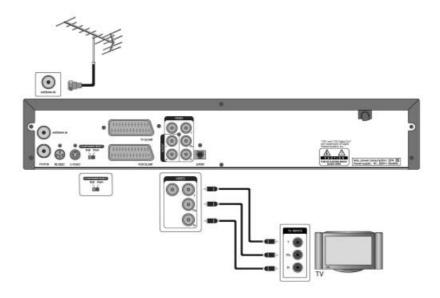


Note: the socket and connector color on the DVD player must match the color of the sockets on the TV set(Red-Red, Blue-Blue, Green-Green). If this is not the case, the colors on the screen may be distorted or the picture may not be visible.

2. Connection with S-Video cable

First, you set the **SCART Output** as S-Video in the chapter 7.5.

- For the highest video quality, connect to your TV using the S-Video socket.

 1. Connect the S-Video connector on the rear of the player to the corresponding connector on the TV using the S-Video cable.
 - 2. Connect the audio left and right channel sockets on the player rear panel to the corresponding sockets on your TV or Stereo system.

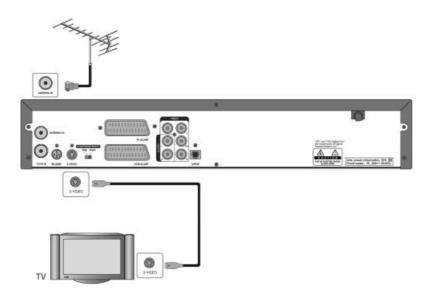

2. Setup

2.3 Powering On

1. Connect the power cord of the receiver to a wall outlet.



2. Turn on the power button, located at the left on the back of the receiver.

Make sure that the Standby LED indicator is turned on Red. $\,$



3. Power on by pressing the **STANDBY** () button at Remote Controller or the **STANDBY** () button at the front of the receiver.



3. Loading

3.1 Booting Mode

When powering on your receiver for the first time, the mode selection will automatically appear.

Select DTV or DVD using the $\blacktriangle/\blacktriangledown$ or $DVD/DTV(ext{$^{\sim}$})$ and press the $OK(ext{$\sim})$ button.

Please wait for booting the DTV or DVD.

Note

If you don't select a specific mode, then the previous mode will be automatically selected.



3.2 Installation Wizard

When using the DTV mode for the first time, a Channel Search will be performed automatically. (You can run the Installation Wizard in Default Setting.)

1.Search

- During operating search, the cursor is located at *Stop*.
 Therefore, if you press the OK(
 \(\bigcirc\) button during searching, the operation is stopped and the channels found so far will be displayed.
- Even after the search operation is complete, and no or not all channels are found, press the OK(
) button and try to reset the search operation again if necessary.
- You can delete any unwanted channels from the list of found channels. Select your desired channels to delete and press the OK((((a))) button. Then select *Delete* and press the OK ((((a))) button. To delete all channels, select *Select All* to select all channels, select *Delete*, and press the OK((((a))) button.



4. After completing the Channel Search and deleting unwanted channels, select **Save** to save the changes. When completing Channel Search, you can enjoy digital television.

Warning: If you exit the Install Wizard without fully completing the channel searching procedures, you may not watch any broadcasting normally. In this case, you

can use the Installation Menu to configure your receiver as you like

This chapter describes functions such as switching channel, volume control, and basic features for watching programmes.

4.1 Switching Channel

You can switch the current channel using one of the following methods.

- 1. Press the CH-/CH+ (-/+) button.
- Enter your desired channel numeric using the NUMERICAL (0-9) buttons to move to the channel directly.
- 3. Press the TV/RADIO (button to switch between TV channel and Radio channel.

Note: You can switch channel using Programme Guide or Channel List. Please refer to Chapter 5 and 6 for more information.

4.2 Volume Control

- 1. Press the V-/V+ (-/+) buttons to adjust the audio volume of your TV.
- 2. Press the MUTE () button to stop the sound of your TV temporarily.

Note: The mute function keeps enabled while you change the channel. This function is only for TV. Refer to chapter 12 to set the TV.

4.3 Text and interactive services

If your chosen channel has teletext (MHEG) features , you can access them. Teletext services often load automatically shortly after the Digital Teletext window is displayed. In which case, simply follow the given instructions(press color buttons).

- 1. Press **TEXT** (button to access teletext(MHEG) features.
- 2. Press TEXT (button again to return to normal viewing.
- 3. Press the CH-/CH+ (-/+) button to exit this service.

Note: You should select *OFF* from the subtitle language to display teletext(MHEG).

4.4 Change the Subtitle Language

If the current programme provides Subtitle information, you can select the language for the Subtitle.

- Press the SUBTITLE () button to display the subtitle language list.
- Select your desired subtitle language using the ▲/▼
 button, and press the OK (⊗) button. Then the subtitle will
 be displayed in the selected language at the bottom of the
 screen.
- Select *OFF* from the subtitle language list if you do not wish subtitles to be displayed on the screen.



Note: You can select a default subtitle language by selecting MENU - Preferences - Language Setting - Subtitle Language.

4.5 Change a Audio Language

If the current programme is available in multiple audio languages, you can select the language that you wish to listen in.

- Press the SOUNDTRACK (a) button to display soundtrack list.
- 2. Select your desired audio language using the ▲/▼ button to change Audio immediately.
- 3. Select Audio Direction(left, right, stereo) using the ◀/▶
- Press the EXIT (((a)) or SOUNDTRACK ((a)) button to exit the soundtrack list.




Note: you can select your desired default audio language by selecting **MENU - Preferences - Language Setting -Audio Language.**

4.6 Programme Information (I- plate)

Programme information is always displayed for a specific period of time whenever you switch channels. You can view the programme information by pressing the i () button while watching a programme. Press the EXIT(@) button to hide the I-plate.

1. General Information

General Information is displayed as follows on the screen.

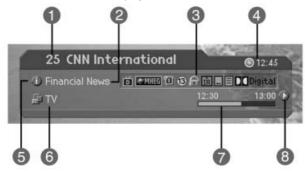

- 1. Channel number and channel name
- 2. Programme name
- 3. Icons
 - ŶΠ Displayed only if this programme is reserved.
 - 13 Represents parental level. It indicates the minimum level of ages that the programme is targeted at.
 - 0 Displayed only when the channel is a locked channel.
 - Displayed only when the channel is a scrambled channel.
 - Displayed only when subtitle information is available.
 - Displayed only when there is any teletext information.

 - DI Digital Displayed only when the programme is a dolby digital one.
 - MHEG Displayed when the channel supports MHEG.
 - D Displayed when the channel supports data channel.

- 4. Current time
- 5. Detail programme information: displayed if detailed programme information is provided.
- Channel looping mode and Channel List Name: if you select Within the current channel list
 by selecting MENU Edit channels Channel Change Mode, the Icon of Channel looping
 mode is displayed. And channel list, which you selected, is displayed.
- 7. Programme broadcasting time and progress bar: displays programme playing time and progress bar.
- 8. Next programme Information : displayed if next programme information is provided. Press the button to display the next programme information.

Note: If there is no available programme information, programme information is not displayed.

2. Detail Programme Information

You can see detailed information about the current programme. Press the i ($\mbox{$\stackrel{\cdot}{\bigcirc}$}$) button where I-plate is displayed to view detailed information.

- Press the i ($\mbox{\begin{tikzpicture}() box.}\end{tikzpicture}$) button again to hide the information box.
- If the Detail information is more than one page, use ▲/▼
 button to move to the previous or next page.



4.7 Option List

You can view and confirm detailed information about the current channel and change the information in necessary.

Note: Press the OPT+ (button when the channel list is displayed to view Option List. Then the following functions in the option list are performed to the current channel where cursor is located.

1. Add a channel to favourite group

You can add current channels to the favourite group immediately. Also, you can add a channel to multiple Favourite groups.

- 1. Press the OPT+ (button.
- Select Favourite using the ▲/▼ button, and press the ▶ or OK (⊗) button.
- Select favourite group using the ▲/▼ button and press the OK (⊗) button to register for Favourite Group.
- Press the OK (

) button again on the selected Favourite
 Group to release the registered channel.
- Move to the parent menu using the ◀ button to save the changes automatically.





Note: For detailed information about how to change Favourite Group's name and how to register Favourite Channel for the whole channels, refer to *Chapter 5*.

2. Lock/Unlock a Channel

You can lock or unlock the current channel while watching a programme.

- 1. Press the OPT+ (button.
- Select Lock using the ▲/▼ button, and press the ▶ or OK
 button.
- Select Lock option using the ▲/▼ button, and press the OK (⊗) button.
- Select *Unlock* option using the ▲/▼ button, and press the OK (⊗) button.
- 5. You will be prompted to enter your Password. Enter your password to unlock the channel.
- 6. Move to the parent menu using the ◀ button to save the changes automatically.





Note: When switching to the Locked Channel, you must enter the password to watch a programme.

3. Delete a Channel

You can delete the current channel while watching a programme.

- 1. Press the OPT+ (button.
- Select *Delete* using the ▲/▼ button, and press the OK (ⓐ) or ▶ button.
- Select Yes in the confirmation message and press the OK
 (
) button.
- 4. Enter password using the **NUMERICAL** (0-9) button to delete the current channel.





5. Channel List

3 types of channel lists are provided for easy and quick channel finding.

TV The list of all TV channels with 2 subgroups: one is sorted by channel number, the

other is sorted by channel name.

Radio The list of all Radio channels with 2 subgroups: one is sorted by channel number, the

other is sorted by channel name.

Favourite The list of the favourite channels with 5 subgroups that you can organise channels by

your private taste.

5.1 Displaying and Switching Channel List

You can display channel list using LIST ((a)) button and switch into other channel on the channel list.

 Press the LIST (
) button while watching a programme to display the channel list.

 Select your desired channel using the ▲/▼ button and press the OK (⊗) button to change the channel.

 Enter the channel numeric directly using NUMERICAL (0-9) button to move cursor into your desired channel. And then press the OK (⊗) button to change into the selected channel.

 Select On by going to MENU - Preferences -Miscellaneous Settings - Option in CH List to display scramble icon in the channel list.
 Select OFF by going to MENU - Preferences -Miscellaneous Settings - Optoin in CH List to display only channel list without scramble icon.



- If there are multiple channels, press the PAGE-/PAGE+ () button to move by channel.
- Whenever you press the **TV/RADIO** (a) button while the channel list is displayed, the channel list will be switched between TV and Radio channel list.

5.2 Changing Channel List Group

You can select channel list by group.

- Press the ▶ button while the channel list is displayed to view the group list.
- 2. Select your desired channel group using the ▲/▼ button to display its sub-groups.
- Press the OK (⊗) or ▶ button, select your desired sub-group using the ▲/▼ button, and then press the OK (⊗) button.
- 4. The channel list for the selected sub-group is displayed.





- The sub-group of Favourite channel list may exist or not depending on your configuration.
- If Within the Current Channel List option is selected from MENU Edit channels Channel Change Mode menu, you can only change programme within the selected channel list using the P-/P+ () while your watching a programme.

5. Channel List

5.3 Edit Channels

You can edit all channels or each channel by channel list group.

- 1. Press the MENU () button.
- Select *Edit Channels* using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select Edit Channel lists using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- 4. You will be prompted to enter your password. Enter your password using **NUMERICAL** (0-9) button.



Note:

- Press the BACK (๑) or ◀ button to save the changes and return to the previous menu, press
 the MENU (๑) or EXIT (๑) button to exit the menu screen.
- You can easily navigate all menus using the assigned numeric for each menu. Press the
 MENU 2 1 in order at remote control to select Edit Channel Lists menu.

1. Select a Channel Group

You can select the channel list group to edit. TV or Radio, and the subgroups from the channel search for aerial and scramble channel lists are included as channel list groups.

- Press the OK (⊗) or button in group to display Channel List Group.
- Select your desired *Channel List Group* using the ▲/▼ button, and press the OK (⊚) button.



- Press the TV/RADIO (button to move to TV or RADIO channel list directly.
- For editing Favourite channel list, move to MENU Edit Channels Edit Favourite Channels menu.

2. Delete Channels

You can delete one or more channels.

- 1. Move the cursor to the channel list using the **◄/**▶ button.
- Select your desired channel, and then press the OK (
 button to delete the channel(s). You can select multiple channels.
- Select *Delete* in the right using the ▶ button, and press the OK (○) button.



3. Lock/Unlock Channels

You can lock or unlock one or more channels.

- 1. Move the cursor to the channel list using the $\P/\$ button.
- Select your desired channel, and then press the OK (
 button to lock/unlock the channel(s). You can select
 multiple channels.
- Select Lock in the right using the button, and press the OK (⊗) button.



Note:

- Only if locked channel(s) is selected or all channels are locked, Lock is switched into Unlock.
 When you press Unlock, locked channel is switched into unlocked channel.
- Enter password using the NUMERICAL (0-9) button to watch locked channel.

4. Select/Unselect All Channels

You can select/unselect all channels at a time.

- 1. Select **Select All** in the right and press the **OK** (((a)) button to select all channels.
- 2. Select *Unselect All* in the right and press the **OK** (((a)) button to unselect all the selected channels

5. Channel List

5.4 Edit Favourite Channels

You can edit Favourite channel or Favourite channel list.

- 1. Press the MENU () button.
- Select *Edit Channels* using the ▲/▼ button, and press the OK (⊗) button.
- 3. Select *Edit Favourite Channels* using the ▲/▼ button, and press the **OK** (⊗) or ▶ button.



Note:

- Press the BACK (
) or
 | button to save the changes and return to the previous menu. Press
 the MENU (
) or EXIT (
) button to exit the Menu screen.
- You can easily navigate all menu items using the assigned NUMERICAL (0-9) button for each menu. Press the MENU 2 2 in order on the remote controller to select the Edit Favourite Channels menu.

The buttons for editing the Favourite channel list are described in the following table.

Add Adds Favourite channel.

Remove Removes from the Favourite channel.

TV/RADIO Switches between TV and Radio channel list.

Fav.Group Changes Favourite channel list group.

Move Moves the order of channel list within the Favourite channel list.

Rename Renames the name of Favourite channel list.

Sort Sorts channels by number or name in all TV/Radio channel list.

Unselect All Unselect all the selected channel.

1. Add/Remove favourite channels

You can add favourite channel(s) to a specific Favourite channel list or remove the added favourite channel(s) from the list.

- 1. Select Favourite Group using 🔠.
- 2. Select your desired channel(s) in all TV/Radio channel list, and press to add Favourite channel(s).
- 3. Select your desired channel(s) in Favourite channel list, and press 1 to remove Favourite channel(s).

Note: You can switch between TV and Radio channel list using TV/RADIO (button at remote control or ...).

2. Move favourite channels

You can move favourite channel to your desired location within the Favourite channel list.

This function is only changing the location without changing the channel number

- 1. Select Favourite Group using 🛅 .
- Select your desired channel to move within the Favourite channel list and press the OK (
 button.
- 3. Select , and press the **OK** () button.
- 4. Move the cursor to your desired location using the ▲/▼ button, and press the **OK** (⊗) button.
- 5. The selected channel(s) is moved to the desired location you selected.

3. Rename a favourite channel list

You can rename Favourite channel list.

- 1. Select Favourite group to rename using
- 2. Select **____**, and press the **OK** (ⓐ) button.
- 3. Enter the Favourite channel list name using the keyboard displayed on the screen.

5. Channel List

4. Additional Features

Additional Features provides many useful functions which are necessary to add Favourite Channel.

Change between TV and Radio channel list

You can add not only TV channel(s) but also Radio channel(s) to Favourite channel list. Press 1 to switch all channel list into TV or Radio channels.

Note: You can also change into TV or Radio channel by pressing **TV/RADIO** (button at remote controller.

Select a favourite channel list

You can select your desired Favourite channel list to edit. Press to display the Favourite channel list. Then select your desired channel list using the ▲/▼ button, and press the OK (⊗) button.



Sort a channel list

You can sort all TV or Radio channel lists by channel number or name for easy Favourite channel searching. If channel lists are sorted by channel number, being is displayed. When you press this button, all the channel lists are sorted by name. Or, if channel lists are sorted by channel name, being is switched into being in Press this button to order channels by number.

Unselect all the selected channels

Press subutton to unselect all the selected channel.

5.5 Channel Change Mode

You can change the channel either in the group or in the entire groups while watching a programme.

- 1. Press the **MENU** (((a)) button.
- Select Channel Change Mode using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select All Channels or within the current channel list using the ▲/▼ button, and press the OK (⊗) button.



Note: When *Within the current channel list* is selected, you can only change the channel within the current channel list using the CH-/CH+(□/⊕) buttons.

6. Programme Guide

The Programme Guide displays programme information about each channel, based on the date and time. You can also schedule your recording using the information given.

Note: Press the GUIDE () button to exit the Guide screen.

6.1 Viewing Programme Guide Information

You can view programme information for all channels.

- 1. Press the GUIDE () button.
- Move to previous or next programme within the same channel using the ◀/▶ button.
- Move to another desired channel using the ▲/▼ button. If there are multiple channels, use PAGE-/PAGE+ (□/+) button to move to channels by page. Also, you can enter your desired channel number using the NUMERICAL (0-9) button on the remote controller to move to the channel directly.
- Select your desired programme, and press the OK (
 button. Then you can watch the programme if it is on air, or you can reserve it if it is the following programme.
- Press the i () button in the selected programme to view Extended Information for the selected programme.



1. Viewing Guide Information by Groups

You can view programme information for desired channel list by groups.

- 1. Press the GUIDE () button.
- 2. Press the REDbutton to display the channel list group.
- Select your desired channel list group using the ▲/▼ button to display the appropriate sub-group.
- Move the cursor to the sub-group using the ▶ button, select your desired sub-group using the ▲/▼ button, and then press the OK (⋈) button.
- The Programme Guide for selected channel list is displayed.



2. Viewing Programme Information Using Time Bar

You can quickly search for your desired time zone using the Time bar.

- 1. Press the GUIDE () button.
- 2. Press the GREEN button to display Time Bar.
- Select the *Time Bar* button using the ◀/▶ button, and press the OK (๑) button to move as your desired amount of time. If you press the button repeatedly, the same operation is repeated.



- 4. Each button functions as follows.
 - Now Moves to the current programme where the cursor is located.
 - Moves to the previous programme or 30 minutes before.
 - Moves to the next programme or 30 minutes after.
 - Moves to 2 hours before.
 - Moves to 2 hours after.
 - Day Moves to one day before.
 - Day Moves to one day after.
- 5. Select Notation and press the **OK** (((a)) button to exit the Time Bar.

Note: Guide provides programme information from the previous day to the next 7 days.

3. Reserving (Reserving a Watching)

You can automatically reserve your desired programme by selecting the scheduled programme and pressing the $\mathbf{OK}(\bigcirc)$ button.

- 1. Select the desired programme and press the **OK** ((\odot) button. The following message will be displayed.
- Select Yes and press the OK ((()) button to reserve the programme. When a reservation has been completed, the micro is displayed on the reserved programme.
- If the channel is locked, parental controlled or restricted by watching time, you will be prompted to enter your Password. Enter your Password to complete the reservation.



6. Programme Guide

6.2 Finding a Programme

You can find your desired programme by programme name or genre easily.

- 1. Press the GUIDE () button.
- 2. Press the BLUEbutton to display Find screen.
- 3. Enter the programme name directly using the keyboard displayed on the screen.
- 4. When completing entering programme name, select the *Find* button, and press the **OK** (⊚) button.



Note:

- Select ▲/▼/◀/▶ button and then press OK (⊗) button to enter the programme name on the keyboard screen.
- If you select *Previous* or *Next* on the Keyboard displayed on the screen and press OK
 ////> button, the keyboard layout is switched.
- 7. Select your desired genre and press the **OK** ((a)) button.
- 8. If you select your desired programme from the *Found Programme* List screen and press the **OK**(⊚) button, you can watch the programme if it is on air, or you can reserve your recording if it is the future programme. If you want to find other programme, you might press the **BLUE** button to display keyboard screen.





Note: The Found Programme List may differ depending on the provided programme information.

6.3 Viewing Reserved Programme

You can add or edit reserved programmes by viewing the reserved programme list.

- 1. Press the **GUIDE** () button.
- Press the YELLOW button to display the Schedule screen.
- Select vacant list and press the OK (

) button to add a new reservation schedule.





1. Editing a Reserved Programme

- Change the reserved Start Time using the ◀/▶ button and the NUMERICAL (0-9) buttons.
- 2. Change the reserved End Time using the **◄/▶** button and the **NUMERICAL** (0-9) buttons.
- 3. Change the Repeat mode using the **◄/**▶ button. The options are *Once, Daily,* and *Weekly.*
- Select the *Delete* using the ◀/▶ button and press the OK
 button to delete the reserved programme.
- Select the *Cancel* using the ◀/▶ button and press the OK
 button to cancel the editing.
- Select the Save using the ◀/▶ button and press the OK
 (๑) button to complete the editing.



6. Programme Guide

2. Adding a Reservation

- Enter your desired channel number using the NUMERICAL (0-9) button. The channel name is automatically displayed by channel number.
- 2. Enter your desired Start Time using the ◀/▶ button and the NUMERICAL (0-9) button.
- Enter your desired End Time using the ◀/▶ button and the NUMERICAL (0-9) button.



- 4. Select one of repeat mode options among *Once*, *Daily*, and *Weekly* using the **◄/▶** button.
- 5. Select the **Save** button and press the **OK** (ⓐ) button to complete entering.
- 6. Select the $\it Cancel$ button and press the $\it OK$ (\odot) button to cancel the reservation.

Note:

- You can reserve up to 20 programmes.
- If you desired programme is already reserved, adjust the reservation appropriately.
- Ilf the channel is locked or restricted by watching time, you will be prompted to enter your Password to complete the reservation.

7. Setting Preferences

You can set censorship, watching time, and all other items suitable for your environment.

Note:

- Press the BACK (๑) or ◀ button to save the changes and return to the previous menu. Press the MENU (๑) or EXIT (๑) button to exit the Menu screen.
- You can easily select any item from the menu using the NUMERICAL (0-9) buttons.

7.1 Parental Control

You can set parental control for each programme and watching time. You can also change your Password.

- 1. Press the MENU () button.
- Select the *Preferences* using the ▲/▼ button, and press the OK (๑) or ▶ button.
- Select the *Parental Control* using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- 4. When prompting message is displayed to ask Password, enter the Password using the **NUMERICAL** (0-9) button.



1. Setting Censorship

Censorship Classification allows you to block programmes according to the age level you have set

- Select the Censorship Classification using the ▲/▼ button, and press the OK (⊚) or button.
- 2. Select your desired *Age level* using the ▲/▼ button, and press the **OK** (⊚) button.

View All	All programmes can be watched because there is no age limitation
7	Programmes are blocked for children under the age of 7.
12	Programmes are blocked for children under the age of 12.
15	Programmes are blocked for children under the age of 15.
18	Programmes are blocked for children under the age of 18.
Lock All	Programmes are blocked without considering the age level.

Note: You have to enter Password to watch the programme which is blocked by the age level.

7. Setting Preferences

2. Setting Allow Watch Time

You can block programmes according to the watching time for all the channels.

- Select the Allow Time Control using the ▲/▼ button, and press the ▶ or OK (⊗) button.
- Select Enable or Disable the Allow Time Control using the ▲/▼ button, and press the ▶ or OK (⋈) button.

Disable You can watch whenever you want regardless of Allow Time.

Enable You can watch only while the time specified by Allow Time.

- When you have selected *Enable*, set the Start and End Time using the **NUMERICAL** (0-9) buttons, and press the **OK** (
) button.
- If you wish to cancel the entered time, select the Cancel button, and press the OK (⊚) button.





Note: Once the setting has been completed, you can watch programme only while the time specified by Allow Time. Or you should enter the Password to watch any programme during unspecified time.

3. Change Password

You can change the existing Password into new one.

- Select Change Password using the ▲/▼ button, and press the OK(⊗) or ▶ button.
- Enter New Password using the NUMERICAL(0~9) button, and select OK and press OK(⊗) button.
- Enter the New Password again to confirm the Verify Password, and select OK and press the OK(⊗) button.



Note: The Default Password is **0000**. If you have forgotten your Password, please contact your local product distributor.

7.2 Language Setting

You can set Language for Menu, Audio, and Subtitle.

- 1. Press the MENU () button.
- Selec *Preferences* using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select Language Setting using the ▲/▼ button, and press the OK (⊗) or ▶ button.



1. Audio/Subtitle Language

You can set the language for Audio and Subtitle. Default language is English.

- Select Audio/Subtitle Language using the ▲/▼ button.
- 2. Press the or **OK** () button to display the available *Language List*.
- 3. Select your desired language using the ▲/▼ button, and press the **OK** (⊚) button.

2. Audio Priority

You can select the priority of audio.

- Select Audio Priority using the ▲/▼ button.
- 2. Press the OK(⊗) or ▶ button to display the Language or Dolby Digital.
- 3. Select your desired option and press the **OK** () button.

Auto Subtitles are displayed automatically in the predefined subtitle language.

Manual Subtitles are displayed in the language when you select the subtitle language by pressing the **Subtitle** () button at remote control.

3. Subtitle Display

You can select whether or not to display the Subtitle if provided.

- 1. Select Subtitle Display using the ▲/▼ button.
- 2. Press the OK(⊗) or button.

Auto Subtitles are displayed automatically in the predefined subtitle language.

Manual Subtitles are displayed in the language when you select the subtitle language by pressing the **Subtitle** (button at remote control.

7. Setting Preferences

3. Subtitle Font

You can select the Subtitle font.

- 1. Select **Subtitle Font** using the ▲/▼ button.
- 2. Press the ▶ or **OK** (⊚) button to display the *Variable* or *Fixed* option.
- 3. Select your desired option and press the **OK** () button.

Variable Uses the horizontally variable Subtitle Font.

Fixed Uses the fixed Subtitle Font.

7.3 Time Setting

You can specify the current time and Power On/Off time.

- 1. Press the MENU (button.
- Select *Preferences* using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select *Time Setting* using the ▲/▼ button, and press the OK (⊚) or ▶ button.



1.Setting Current Time

You can set the GMT Offset for current time.

- Select GMT Offset using the ▲/▼ button.
- Press the OK(⊚) or button to display GMT list. GMT is changed by from 30 minutes to 1 hour.
- 3. Select your GMT offset using the ▲/▼ buttons, and press the **OK** (⊚) button.

Note:

- The current time is set automatically whenever GMT Offset changes.
- The default item is Auto. If GMT Offset is Auto, it is automatically set depending on your country.

2. Power On

You can set the time when the product is automatically powered on.

- 1. Select **Power On** using the ▲/▼ button,
- Select either *Enable* or *Disable* the Power On using the OK (⊗) or button.

Enable Uses the Power On and sets the Power on

time.

Disable Not uses the Power On.



3. 3When you have selected *Enable*, enter the *Channel No* and Time using the NUMERICAL(0~9) buttons, and select *OK* and press the OK(∞) button.

3. Power Off

You can set the time when the product is automatically powered off.

- 1. Select *Power Off* using the ▲/▼ button,
- Select either Enable or Disable the Power Off using the ▲/▼ button, and press the OK (⊗) button.

Enable Uses the Power Off and sets the Power Off time.

Disable Not uses the Power Off.

When you have selected *Enable* enter the *Time* using the NUMERICAL(0~9) buttons, and select OK (⊚) or ▶ button.

Note: Once Power On/Off is specified, it is repeated everyday.

7.4 Schedule

You can reserve a programme to watch programme at your desired time.

- 1. Press the MENU () button.
- Select *Preferences* using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select Schedule using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- 4. Reserved Pregoramme List is displayed on the screen. To edit the existing reservation, select your desired reservation, and press the OK (⊚) button. To add a new reservation, select a blank list and press the OK (⊚) button.



Note: For detailed information about Schedule, refer to Chapter 6.3.

7. Setting Preferences

7.5 A/V Control

You can set Audio or Video Output Control.

- 1. Press the MENU () button.
- Select Preferences using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select AV Control using the ▲/▼ button, and press the OK (⊚) or ▶ button.



1. TV-SCART/VCR-SCART

You can set TV/VCR-SCART Output.

- 1. Select *TV-SCART* using the ▲/▼ button, and press the **OK** (⊗) or ▶ button.
- Select one option among ▲/▼ CVBS/S-Video using the ▲/▼ button, and press the OK(⊗) button

2. VCR-SCART

You can set VCR SCART Output.

- 1. Select VCR-SCART using the ▲/▼ button.
- 2. Select one option among ▲/▼ CVBS/S-Video using the OK (⊗) or ▶ button.

3. Audio Output

Set the Audio Output.

- Select Audio Output using the ▲/▼ button.
- 2. Select one option ▲/▼ Stereo or Mono using the OK (⊗) or ▶ button.

4. Screen Ratio

You can set the aspect ratio of your TV.

- 1. Select **Screen Ratio** using the▲/▼ button.
- 2. Select one option ▲/▼ 4:3 or 16:9 using the OK (⊗) or ▶ button.

5. Display Format

You can select the Display Format according to TV Screen Ratio.

- 1. Select *Display Format* ▲/▼ button, and press the **OK** (⊚) or ▶ button.
- If the Screen Ratio is set to 4:3, you can select one from 16:9 Letterbox/14:9
 Letterbox/Centre Cutout using the ▲/▼ button, and press the OK (⊗) button.
- 3. If the screen ratio is set to 16:9, this item will display Disable or Auto.

6. Dynamic Range

This function adjusts audio output of SCART, RCA, and RF cable with DOLBY DIGITAL.

When listening at a low volume, Dynamic Range reduces the volume of loud sounds such as explosions, etc, and increases the volume of quiet sounds such as whispered dialog.

- 1. Select *Dynamic Range* using the ▲/▼ button, and press the **OK** (⊚) or ▶ button.
- Select one option among ▲/▼ Maximum/Standard/Minimum using the ▲/▼ button, and press the OK(⊗) button

Maximum No compression of Dolby Digital sound.

Standard Light compression of Dolby Digital sound. Set this when listening at low volume

in night. If you connect to a TV with a RCA socket, we will recommend Standard

or user.

Minimum Heavy compression of Dolby Digital sound. Set this when listening the TV by

connecting by RF cable. If you connect to a TV with a RF socket, we will

recommend Minimum for user.

7. Downmix Mode

You can set the downmix mode

- 1. Select Downmix Mode using the ▲/▼ button, and press the **OK** or (⊚) button.
- 2. You can select one option from Dolby Surround or Stereo Normal.

7. Setting Preferences

7.6 UHF Tuning

You can set the UHF Tuning channel.

- 1. Press the MENU () button.
- Select Preferences using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select *UHF Tuning* using the ▲/▼ button, and press the OK (⊗) or ▶ button.



1. UHF Channel

You can select UHF Channels for the TV. The Channel range and Frequency change according to PAL Standard.

- 1. Select *UHF Channel* using the ▲/▼ button, and press the **OK** (⊗) or ▶ button.
- Select channel range based on the following channel criteria using the ▲/▼ button, and press the OK (⊗) button.

CH21-CH69 PAL I/G for Europe CH28-CH69 PAL B for Europe/Australia

2. PAL

You can select the channel range and frequency table.

- Select PAL using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select one option among PAL I/PAL G/PAL B using the ▲/▼ button, and press the OK (⊗) button.

3. UHF Offset

You can adjust fine tuning setting.

- 1. Select *UHF Offset* using the ▲/▼ button, and press the **OK** (⊗) or ▶ button.
- 2. Select a range between -4~+4 using the ▲/▼ button, and press the OK (⊚) button.

7.7 Miscellaneous Settings

- 1. Press the MENU () button.
- Select *Preferences* using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select *Miscellaneous Settings* using the ▲/▼ button, and press the OK (⊗) or ▶ button.



1. i-Plate Display Time

You can set the duration during which the Information box is to be displayed when you switch the channel.

- 1. Select *i-Plate Display Time* using the ▲/▼ button, and press the **OK** (⊚) or ▶ button.
- 2. Select a value between 1~20 seconds using the ▲/▼ button, and press the **OK** (⊗) button.

Note: When it is set to *Disable*, the i-Plate will not be displayed when you switch the channel.

2. OSD Transparency

You can set the transparency of On Screen Display.

- 1. Select **OSD Transparency** using the ▲/▼ button, and press the **OK** (⊚) or ▶ button.
- Select one option among Disable/25/50/75 using the ▲/▼ button, and press the OK (⊗) button.

Disable Fully opaque screen

25, **50**, **75** As the number is bigger, the screen is more transparent.

3. Option in CH List

You can set the option of scrambled icon in the Option in CH List.

- 1. Select the *Option in CH List* using the ▲/▼ button, and press the **OK** (⊗) or ▶ button.
- 2. Select one option from *On/Off* using the ▲/▼ button, and press the **OK** (⊚) button.
 - On Scramble icon display in the channel list.
 - Off Scramble icon disappear in the channel list.

8. Installation

8.1 Automatic Search

If your receiver is connected to the aerial and television, you can automatically search channels without entering any other information.

- 1. Select MENU () button.
- Select *Installation* using the ▲/▼ button, and press the OK (⊗) or ▶ button.



Search

Wait while the receiver searches for the channels, this may take a few minutes.

- During operating search, the cursor is located at Stop Therefore, if you press the OK (
) button during searching, the operation is stopped and the channels found until then will be displayed.
- If search operation is successfully completed, and the channel does not exist, press the OK (
) button and try to reset the search operation again if necessary.
- You can delete unnecessary channels from the searched channels. Select your desired channels to delete and press the OK (⊗) button. Then select *Delete* and press the OK (⊗) button. To delete all channels, select *Select All* to select all channels, select *Delete*, and press the OK (⊗) button.
- 4. When completing Channel Search and deleting unnecessary channels, select *Save* to save the changes.





8.2 Manual Search

You can search channels manually by searching parameters, if you know the MUX information.

- 1. Select MENU (@) button.
- Select *Installation* using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select *Manual Search* from Installation menu using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select Channel, Frequency, Mode, Guard Interval or Network Search using the ▲/▼ button, and press the OK (⊗) or ▶ button.



1. Channel Number

Enter your desired frequency channel to search. When entering frequency channel value, the appropriate frequency value is entered.

Select one of channel using the $\blacktriangle/\blacktriangledown$ button, press the OK(s) button.

2. Frequency

Enter the your desired frequency to search directly. When entering frequency, the appropriate channel for the entered frequency is automatically displayed on Channel.

Enter frequency using the **NUMERICAL**(0~9) button and press **OK**(\odot) button.

3. Mode

Required for Channel Search. If you don't know the value, please select Auto.

Select among Auto, 2k and 8k using the \triangle/∇ button, and press the $OK(\bigcirc)$ button.

4. Guard Interval

Required for Channel Search. If you don't know the value, please select Auto.

Select one option among Auto, 1/4,1/8,1/16 and 1/32 using the ▲/▼ button, and press the OK(⊗) button.

8. Installation

5. Network Search

If specified frequency channel information and other channel information are provided together, the channel, which belongs to other frequency channel, is also searched.

Select one option between **Enable** and **Disable** using the ▲/▼ button.

Note: You can search after the setting of Manual Search. Refer to 8.1 Automatic Search.

8.3 Default Setting

Default Setting restores the receiver to the default settings.

Warning: Please note that once you perform Default Setting, all data such as Channel List, and User Configured data are deleted.

To perform Factory Default:

- 1. Press the MENU (button.
- Select *Installation* using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- 3. Enter *Password* using the **NUMERICAL** (0-9) button.
- Select *Default Setting* using the ▲/▼ button, press the OK (⊗) or ▶ button.
- Select Yes and press the OK (
 (
) button to restore all setting to Factory Default.
 Select No and press the OK (
) or BACK (
) button to return to the previous menu.



- Confirm again to start loading default setting. Enter *Password* using the NUMERICAL (0-9) button to perform restoring.
- When completing the default setting, press the OK (
) button to automatically run the
 Installation Wizard.

When default setting is completed, Installation Wizard is automatically displayed, which helps Channel Search. For detailed information about Installation Wizard, refer to 3. Installation Wizard.

9. Software Update

In order to maintain proper performance of this product, it is essential to have the most up to date software. The latest news and release of software versions may be found at Humax website - http://www.humaxdigital.com.

It is recommended that you periodically check for the availability of software upgrade.

Warning: You can search after the setting of Manual Search. Refer to 8.1 Automatic

Search.

9.1 OTA (Over the Air)

OTA, an abbreviation of **Over-the-Air**, means that downloads the software where the manufacturer reserves the right to decide when and where to release through aerial.

Over the Air(OTA) is simply another alternative for downloading software versions. However, the manufacturer reserves the right to decide when and where this software update can take place by **beaming** latest software versions over the air via aerial. The software update via aerial will only occur under the following circumstances.

1. The equipment should have appropriate loader software.

Caution: Please note that if you don't have normal loader software, the equipment may not be updated or work after software update.

- 2. The manufacturer decides to release software downloading via a designated aerial
- 3. The equipment must be "tuned" properly to the same aerial that the manufacturer uses.
- Update software when the quality of receiving signal strength is high. If the weather is not so good that the quality of receiving signal strength is not recommendable, perform the software upgrade later.

Caution:

- Please be careful to keep the power on and the power cord plugged in during software update.
 If the power is off during software update, it may cause fatal damage to the product.
- Please be careful not to pull out the Signal line (co-axial Cable) during software update.
 Update may be interrupted and the product may not work.

Note:

- · The product cannot work at all during software update.
- It may take 5 ~10 minutes to update software.
- Scheduling operation cannot work during software update.

9. Software Update

1. If new software is found when powering on

- A message will be displayed to notify that new software is found.
- Select Yes and press the OK (⊗) button to update the software.
- 3. Starts downloading new software. Please wait until the updated is completed.
- 4. When completing the software update, the equipment is automatically powered off and on again.



2. If updating software from Menu

- 1. Press the MENU (button.
- Select *Installation* using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- 3. Enter Password using the NUMERICAL (0-9) buttons.
- Select Software Update using the ▲/▼ button, and press the OK (⊗) or ▶ button.



3. Automatic Update

You can set the product to find HUMAX software update site and update software automatically.

- Select Automatic Update using the ▲/▼ button, and press the OK(⊚) or ▶ button. Automatically search for new software.
- When detecting update software, the following result is displayed. If new software is not found by Automatic, use Manual Update.



- Select Yes and press the OK (((a)) button to start updating.
 Select No and press the OK (((a)) button to return to the previous menu without updating.
 Select Later and press the OK (((a)) button to update later. That means the update menu display as soon as you turn on the receiver next time.
- 4. When completing the software update, the product is automatically powered off and on again.

4. Manual Update

You can perform Manual Update only if you know MUX information of software update correctly.

Among the Software Update Sites of HUMAX, the software search operation is performed only for the satellites that have been set to *Enable* in *Installation - Antenna Setting - Satellite Alternative* menu and that have all other Antenna Setting correct.

- Select Manual Update from Software Update screen using the ▲/▼ button, and press the OK (⊗) or ▶ button.
 - Select the channel number which provides update software. You can also enter the frequency instead of channel number in which updated software is provided.
- Select *Mode*. If the information is not known, then *Auto* can be selected.
- Select *Mode*. If the information is not known, then *Auto* can be selected.
- Select Guard Interval. If the information is not known, then Auto can be selected.

Note: How to setting parameters in *Manual Update* is the same as how to set parameters in *Manual Search*. Refer to *Manual Search*.

- It is displayed whether or not New Software exist.
 If new software does not exist, press the OK (⊚) button to return to the Manual Update Menu.
- Select Yes and press the OK (
) button to start updating.
 Select NO and press the OK (
) button to return to the previous menu.
 - Select *Later* and press the **OK** (((a)) button to update later. That means the update menu display as soon as you turn on the receiver next time.
- Performs Software Update. Please wait until it is completed.
- 9. When completing the software update, the product is automatically powered off and on again.





9. Software Update

5 Software Auto-Detecting and Time

You can specify the software detecting time.


If the receiver powers on during software auto-detecting, Detecting will stop.

- 1. Select Software Auto-Detecting from Software Update screen using the ▲/▼ button.
- 2. Select **Enable** or **Disable** using **OK**(⊚) or ▶ button whether or not setting the software detecting time automatically.
- 3. When you select **Enable**, you can set the detecting time in the Auto-Detecting Time.

9.2 S/W Update from PC

You can connect your receiver to the PC directly and update your software by transferring the new software from the PC. Follow these steps to download new software from PC to this product.

- 1. Download new software file (HDF files) equivalent for this product model from our website into your computer(http://www.humaxdigital.com).
- 2. Download and install download tool file from our website into your computer.
- 3. Connect your PC to this product with RS-232C serial cable.
- 4. Execute installed download tool, and then follow the instructions contained the download tool.
- 5. Press the **STANDBY** () button to make this product operating.

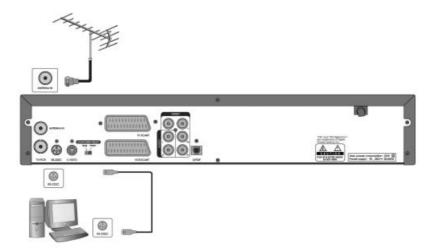

10. System Information

You can view all system information, signal strength and quality.

- 1. Press the MENU () button.
- Select System using the ▲/▼ button, and press the OK (ⓐ) or ▶ button.



10.1 Status

You can view System information

- Select Status using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- 2. Confirm the information about *Hardware version*, Software version, Loader version, System ID, and Update Date



10.2 Signal Detection

You can view the signal strength and signal quality receiving for the channel that is currently on AV.

- Select Signal Detection using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Displays the channel name, frequency, mode, and guard interval of terrestrial frequency, and currently tuned channel number and its name, which current channel belongs to and the graphs and percentage of Signal Strength and Quality of the channel.





11. Games

This product provides various games for user's entertainment.

1. Press the **MENU** (((a)) button.

- 2. Select *Games* using the ▲/▼ button, and press the **OK** (⊗) or ▶ button.
- 3. According to the instruction displayed on screen, you can enjoy the game using $\triangle/\nabla/4/\triangleright$ and \mathbf{OK} (\odot) button.

Note: Press the **EXIT** (\bigcirc) or **BACK** (\bigcirc) button to exit the game.

Press the **GAME**() button to start directly.

You can manipulate TV using the remote control provided by Humax.

Note: This function may not be supported depending on TV model.

TV code setting

Note: While you are setting TV code, please keep pressing TV button.

- 1. Point remote control towards the remote control receiving parts of TV.
- Press the TV () button, and the TV button LED blinks once.
 Keep pressing TV button for 3 seconds, then TV button LED turn on.
 Press three numbers of TV code using the NUMERICAL (0~9) button orderly.
 Refer to the following Code for TV manufacturer.
- 3. TV button LED blink twice when you detach your finger from the TV button.
- 4. TV power turns on or off when the setting is completed.

[Code for TV manufacturer] Table

Brand	Code
A MARK	002
ABEX	016
ACTION	110,124
ACURA	004
ADMIRAL	030,042,076,099,123
ADYSON	016,063
AIKO	029
AKAI	015,099,109,124
AKURA	064,071
ALARON	051,055,062
ALBA	004,017,018,064,123
ALLORGAN	118
AMBASSADOR	049
AMPLIVISION	063
AMSTRAD	004,018,047,049,145
ANAM	003,004,052
ANAM NATIONAL	024
ANITECH	004,071
ANITECH	071
ANSONIC	127
AOC	002,009,015,056

Brand	Code
ARCAM	062,063
ARCHER	002
ASUKA	064,071
ATLANTIC	098
AUDINAC	081
AUDIOSONIC	018,071
AUDIOVOX	002,029,052,084
AUMARK	026
AUTOVOX	068,076,097
BARCO	086
BASIC LINE	004,064
BAUR	018,087,097,099,102,108
BAYSONIC	052
BEAUMARK	050
BEC	099,110,124
BECRESE	040,099,108,109,110
BELCOR	009
BELL & HOWELL	006,038,106
BEON	018
BINATONE	063
BLACKSTRIPE	040

GB 63

Brand	Code
BLACKSTRIPE	106
BLACKSTRIPE	108
BLAUPUNKT	059,060,061
BLUE SKY	064
BLUE STAR	075
BOOTS	063
BOSCH-BAUER	098
BPL	075
BRADFORD	052
BRINKMANN	123
BRITANNIA	062
BROCKWOOD	009
BROKSONIC	002,067,085
BROTHER	071
BRUNS	126
BSR	093,118
BTC	064
BUSH	004,017,018,064,075,093, 099,117
CANDLE	015,025,057
CAPEHART	124
CAPSONIC	071
CARNIVALE	015
CARREFOUR	017
CARVER	023,046
CASCADE	004
CATHAY	018
CCE	063,018,078
CCI	115
CENTURION	018
CGE	101,123

Brand	Code
CIE	133
CIMLINE	004,117
CINERAL	029,084
CITIZEN	015,019,025,026,029,040, 057,074
CLAIRTONE	1056
CLARIVOX	018
CLARIVOX	125
CLATRONIC	098
CLATRONIC	127
CME	004,005,017,018,028,042, 049,063,065,066,068,076, 079,087
CONCERTO	025
CONDOR	098
CONIC	110
CONTEC	004,017,052,056,062
CONTINETAL	141
EDISON	052
CRAIG	105
CRIPTOVISION	023
CROSLEY	110
CROSLEY	004,018,019,052,127
CROWN	098
CTC CURTIS MATHES	006,015,019,020,021,023, 026,030,035,038, 25,040, 044,084,106
CXC	052
CYBERTON	064
DAEWOO	004,009,018,019,029,084, 133

Brand	Code
DAINICHI	064
DANSAI	018
DAYTON	004,009,019,108
DE GRAAF	066
DECCA	018,028,129
DENON	035
DESMET	098
DIXI	003,004,018,126
DUAL	097
DUAL TEC	063
DUMINT	127
DUMONT	007,009
DYNATECH	063
EB TELECOM	105
ECTEC	081
ELBE	116
ELECTROBAND	056
ELECTROHOME	080,106,110
ELEKTA	071
ELIN	018
ELITE	040,064,098,106
ELMAN	127
ELTA	004
EMERSON	009,019,038,049,050,051, 051,053,054,055,056 067,072,074,075,085
ENVISION	015
ERRES	018
EURO-FEEL	071
EUROMANN	071

Brand	Code
EUROPHON	127
FERGUSON	018
FIDELITY	062,097,104
FINLADIA	106
FINLUX	018,028,051,093,129
FIRST LINE	118,004,062,063
FISHER	038,041,063,097,106, 108,126
FORMENTI	018,098,103
FRONTECH	042,071,099
FUJITSU	028,051,124
FUNAI	047,051,052,071,118
FUTURETECH	052
GALAXIS	123,142
GBC	099
GE	011,013,020,021,024,030, 034,050,075,084
EC	018,028,063,095,110,129
GELOSO	004,099
GENEXXA	042,064
GIBRALTER	007,009,015
GO VIDEO	026
GOLDSTAR	000,001,009,015,016,018, 019,025,033,050,063, 071,093,110,124,140
GOODMANS	017,018,028,051,063,133
GPM	064
GRADIENTE	022,025,046,082
GRADIN	098
GRAETZ	042,099

Brand	Code
GRANADA	018,028,063,109,124
GRANDIN	075
GRUNDIG	018,059,060,068,137
GRUNPY	051
GRUNPY	052
HALIEAX	071
HALLMARK	050
HANSEATIC	018,089,097,098,099, 118,119
HARLY DAVIDSON	051
HARMAN KARDON	023
HARVARD	052
HCM	004,071,075
HEMMERMANN	097
HINARI	004,017,018,051,064
HITACHI	094,095,096,099,102, 108,109,110,111,112, 113,114,124,148,016, 017,025, 031,032,035, 037,042,048,063,066, 090,091
HUANYU	062
HUSPI ELEKTRONIK	123
HYPERVISION	134
HYPSON	018,071,075
HYPSON	071,075
ICE	063,071
ICES	064
IMPERIAL	092,099,101,123
INDESIT	068
INDIANA	018

Brand	Code
INFINITY	023
INGEKEN	139
INGELEN	042
INNOHIT	028,124
INNOVA	018
INTEQ	007
INTERBUY	071
INTERFUNK	018,042,095,099
INTERVISION	018,063,071,127,144
ISUKAI	064
ITT	042,099,108
JACSON	129
JBL	023
JCB	137
JEC	040
JVC	017,022,045,054
KAISUI	004,062,063,064,075
KAMP	062
KAPSCH	042,095,099
KATHREIN	089
KAWASHO	062,077
KEC	052
KENDO	018,099,117,119,127,
KENWOOD	009,015
KINGSLEY	062
KLH	124
KLOSS	012
KMC	033
KONIG	004,005,017,018,042,061, 068

Brand	Code
KORPEL	018
KORTING	098
KOYODA	004
KTV	015,019,052,055,056, 063,074
KUBA ELECTRONIC	097
LENCO	071,133,146,018,028, 071,118,124
LG	025
LIESENK & TTER	018
LIFETEC	071
LLOYTRON	016
LOGIK	000,006
LUMA	099
LUXMAN	025
LUXOR	068,094,099,102,124
LXI	007,020,023,038,040, 050,106
M ELECTRONIC	004,018,042,063,097,127
MAGNAFON	127
MAGNASONIC	106
MAGNAVOX	010,012,014,015,017, 023,051,057,058,110
MAJESTIC	006
MANDOR	071
MANESTH	063,071,098,117
MARANTZ	015,018,023,089
MARK	018
MATSUI	004,005,018,049,063, 092,097,117
MATSUSHITA	021,070
MC MICHAEL	110

Brand	Code
MEDIATOR	018
MEGATRON	002,035,050,109
MEI	056
MEMOREX	004,006,025,026,033,036, 038,050,070,071,106
MEMPHIS	124
MGA	009,015,036,039,050
MIDLAND	007,016,019,020,021,034
MINERVA	068
MINUTZ	011
MITSUBISHI	009,017,030,036,039,050, 068
MIVAR	062
MOTOROLA	024,030
MTC	009,015,025,026,056,062
MULTISTANDARD	127
MULTITECH	004,052,062,063,099,127
MUTIMEDIA	132
NAD	040,044,050
NAONIS	099
NATIONAL	068
NEC	009,015,017,025,046
NECKERMANN	018,059,087,089,099,102
NEI	018
NESCO	051
NETSAT	018
NIKKAI	016,018,028,040,062,064, 071124
NIKKO	007,015,020,029,038,040, 050
NISATO	1081
NOBLEX	083

Brand	Code
NOKIA	071,094,095,096,099,106, 108,143
NOSHI	008
NTC	029
OCEANIC	042,099,106,118
ONWA	052
OPTIMUS	038,044,070
OPTIONICA	030,043
ORION	018,049,051,067,085,097, 098,118
OSAKI	016
OSAKI	028
OSAKI	063
OSAKI	064
OSAKI	071
OSAKI	124
oso	064
OSUME	016,028,124
OTTO VERSAND	017,018,059,063,087,089, 093,097,098,099,102, 108,117,118
PALLADIUM	099
PANAMA	063,071
PANASONIC	000,020,021,022,023,024, 026,030,035,036,038, 040,042,043,050,065, 068,070,079,099
PATHE CINEMA	062,098
PAUSA	004

Brand	Code
PCE/PEC	040,106,108
PENNEY	001,102,008,009,011,013, 015,016,019,020,021, 025,026,034,040,050
PHASE	016
PHILCO	009,010,012,014,015,023, 035,057,058,085,123
PHILIPS	007,008,009,010,011,012, 013,014,018,019,023, 089,110,124,138,
PHONOLA	018,098
PILOT	009,015,019
PIONEER	042,044
POLICOM	068
POLYRON	071
PORTLAND	009,019,029
PRANONI PRINCE	099
PRIMA	040,106
PRINZ	124
PRISM	021
PROFEX	004
PROLINE	119
PROSCAN	015,020
PROTEC	099,127
PROTECH	004,018,063,071,
PROTON	002,050
PULSAR	007,009,110,124,
QUASAR	021,024,043,070,

Brand	Code
QUELLE	005,018,087,093,097,099, 108,117,118
QUESTA	017
RADIO SHACK	009,015,016,019,020,025, 038,043,050,052,106
RADIOLA	018
RADIOTONE	071
RADIX	108
RANK ARENA	017
RCA	008,009,020,021,030,034
REALISTIC	009,015,016,019,025,038, 043,050,052,106
REKORD	149
REVOX	018
REX	042,071,076,099,
RFT	088,126,
RHAPSODY	055,056,062
R-LINE	018
ROADSTAR	004,064,071
ROYAL LUX	131
RTF	018
RUNCO	007,015
SABA	042,095,099
SAGEM	139
SAISHO	004,005,049,071,117
SAKIO	071
SALORA	042,094,099,102,106,124
SAMBERS	127
SAMPO	015,016,019

Brand	Code
SAMSUNG	004,009,015,016,018,019, 025,026,050,063,071, 078,089,124,137
SAMSUX	019
SANDRA	062
SANSEI	084
SANSUI	085
SANYO	005,017,028,038,041,106, 107,108,124,129
SBR	018
SCHAUB LORENZ	099
SCHNEIDER	018,064,071,097,136,143, 147
SCIMITSU	009
SCOTCH	050
SCOTT	009,050,051,052,067
SEARS	020,023,025,038,040,041, 047,050,051,106
SEG	017,063,071,126,127
SEI	049
SEI-SINUDYNE	097,099,117,118,127
SELECO	042,076,099,100,119,120, 122,
SEMIVOX	052
SEMP	040
SENTRA	040
SHARP	017,019,030,043
SHOGUN	009
SHORAI	118

Brand	Code
SIAREM	127
SICATEL	121
SIEMENS	018,059,060,061
SIGNATURE	006,040
SILVER	017
SIMPSON	057,058
SINGER	127
SINUDYNE	049
SKANTIC	099
SKY	018
SOGERA	098
SOLAVOX	016
SOLAVOX	042
SONITRON	108
SONOKO	004,018,071
SONOLOR	042
SONTEC	018
SONY	005,017,073,087
SOUND&VISION	127
SOUNDESIGN	050,051,052,057
SOUNDWAVE	018
SPECTRA	133
SPECTRICON	002
SQUAREVIEW	047
SR2000	106
SSS	009,052
STANDARD	004,063,064,098
STARLITE	052
STERN	042,076,099
SUNKAI	117,118
SUPERTECH	097
· · · · · · · · · · · · · · · · · · ·	

Brand	Code
SUPRA	025
SUSUMU	064,010,012,014,015,023, 057,058,080
SYMPHONIC	047
SYSLINE	018
TADNDY	124
TANDY	028,030,042,063,064
TASHIKO	110
TASHKO	017,063
TATUNG	002,018,024,028,063,124
TEC	063,133
TECHLINE	127button.
TECHNEMA	098
TECHNICS	007,020,021,070
TECHNISAT	130
TECHNOL ACE	051
TECHWOOD	002,021,025
TEKNIKA	006,009,019,023,025,026, 029,036,051,052,057
TELECO	135
TELEFUNKEN	025
TELEMEISTER	098
TELETECH	004
TELETON	017,057,063,099
TELEVIDEON	098
TENSAI	064,093,098,118
TESLA	135
TEXET	062,064
THOMAS	110
THOMAS	124
THOMSON	068

Brand	Code
THORN	018,028,040,087,107, 108,110,112,128,129
TMK	025,049,050
TOKAI	124
TOMASHI	075
TOSHIBA	017,026,038,040,069, 106,108
TOSONIC	056
TOTEVISION	019
TOWADA	099,127
TRIUMPH	049,069
TV TEXT	089
UHER	098
UHER	127
ULTRA	081,124
ULTRAVOX	127
UNIVERSAL	011
UNIVERSAL	013
UNIVERSUM	018,071
VECTRO RESEARCH	015
VESTEL	018
VICTRO	012
VIDEOTECHNIC	013

Brand	Code
VIDEOTON	094
VIDIKRON	023
VIDTECH	009,017,050
VISA	004,005,017,018,042,068
VISION	098
VOXSON	042,099
VTQ	126
WALTHAM	063,094,099
WARDS	006,009,010,011,013,014, 015,023,025,034,040, 043,050,051,058
WATSON	018,098
WATT RADIO	097,127
WEGA	017
WHITE WESTINGHOUSE	018,062,098,106
WORLD-TECH	133
YAMAHA	009,015
YOKO	018,063,071,133
YORK	108
ZANUSSI	076,099
ZENITH	006,007,029
ZONDA	002

DVD Player

1. Getting Started

Loading a Disc

- You can switch to DVD player mode by pressing the *DVD/STB* button while in DTV mode.

 1. Press the *OPEN/CLOSE* button to open the disc loading tray which is located at the front of your receiver.
 - 2. Put the selected disc on the tray and check that it is located correctly.
 - 3. Press the *OPEN/CLOSE* button to close the tray.
 - 4. The player is reading the disc. Please wait.



2. Playing a DVD-VIDEO Disc

You can recognise the DVD-Video disc by the logo.

Each disc has one or more chapters.

Your receiver moves within the titles or chapters to access easily and conveniently.

-===		DVD-VID	EO Disc	C	======
	TITLE 1			TITLE 2	
Chapter 1	2	3	Chapter 1	2	3

Buttons

Marker	Marking
(AB)	A-B repeat
(PROGRAMME)	Zoom on/off
(►/II)	Play / Pause
(•• ••)	Fast backward/ Slow motion
(►►/I►)	Fast forward/Slow motion
(•)	Stop
(ROOM®)	Skip previous /Frame by frame
(DOMO)	Skip next / Frame by frame

2.1 Playing a title

- 1. Press the **OPEN/CLOSE** button on the Front panel and insert a disc.
- 2. Press the OPEN/CLOSE button to close the disc loading tray.
- 3. Press the (button to play the disc.
- 4. Disc menu is displayed.
- Select your desired item using the ▲/▼/◀/▶ or NUMERICAL (0~9) button, and press the OK (⊗) button.

As the disc plays, the display shows the current chapter or title, and the elapsed playing time.

- 6. Return to menu when the title is fully played.
- 7. Press the button to move to the next title.

Stop/Resume Press the **STOP** () button to stop playing.

Press the button to resume playing from where you stopped playing.

Pause/Play Press the () button to pause play.


Press the () button again to resume playing.

2.2 General Information

Press the i () button to display the information as below while playing a DVD.

Press the i ($\dot{\Diamond}$) button, **BACK** (\odot) button or **EXIT** (\odot) button to hide the information displayed on the screen.

The following information is displayed.

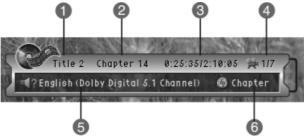

- 1. Title No.: Displays the title number.
- 2. Chapter No.: Displays the chapter number.
- 3. Play Time Information: Displays full playing time and currently playing time of the Disc or chapter. Time display format can be changed by the **TIME** button.
- 4. Angle: Displays total number of angles and the number of currently playing angles.
- 5. Soundtrack: Displays audio information.
- 6. Repeat Mode: Displays repetition of the currently playing chapter.

2. Playing a DVD-VIDEO Disc

2.3 Search

You can move directly to your desired chapter/title /time/marker.

Press the **SEARCH** button to change search mode.

Press the EXIT ($\textcircled{\tiny{o}}$) or BACK ($\textcircled{\tiny{o}}$) button to immediately hide search mode on the screen .

1. Chapter/Title

- Press the SEARCH button repeatedly to select a chapter or title.
- Enter your desired chapter or title number using the NUMERICAL (0~9) button when your desired item is displayed.

If you enter more than the total chapter or title number, the number entered is discarded. In that case, enter the chapter or title number again.

Press the OK 38

(a) button to immediately move to the beginning of a selected chapter or title.



2. Time

- 1. Press the **SEARCH** button repeatedly to select time.
- Enter your desired time using the NUMERICAL (0~9) button when time is displayed.
 If you enter more than the total play time, the entered number is discarded. In that case, enter the time again.
- Press the **OK** (
) button to move to the selected time immediately.



3. Marker

- 1. Press the **SEARCH** button repeatedly to select Marker.
- Select a marked point in the Marker list and press the CLEAR () button to delete the mark.



Note:

- If the marking list is full, you cannot add a new mark and a Fully Marked message is displayed.
- Press the Marker MARKER button to mark while watching a channel.



2.4 Skipping Chapter

You can move to the beginning of the current chapter, the next chapter, or the previous chapter.

- Press the SKIP NEXT () button to move from the chapter currently playing to the next chapter.
- Press the SKIP PREVIOUS () button to move to the beginning of the chapter currently playing.
- Press the SKIP PREVIOUS () button again to move to the beginning of the previous chapter.

Note: Press the SKIP NEXT () or SKIP PREVIOUS () button to display the number of the chapter currently moving on the top right of the screen.



2.5 Repeat Mode

You can repeat the currently playing chapter, title or disc.

- Press the REPEAT MODE button to display current repeat mode during playing.
- 2. Press the **REPEAT MODE** button repeatedly to change repeat mode in the order of **Chapter -> Title ->Disc -> Off.**

Note: Select Off to disenable repeat mode.



2. Playing a DVD-VIDEO Disc

2.6 Repeat a section of disc

You can set the sections to repeatedly switch between each other.

- Press the A ▶ B(→ b) button while playing a disc to set the repeat point to A.
- Press the A ▶ B() button repeatedly to repeat playing between Section A and B.
- 3. Play the setting start and end section repeatedly.
- If the A ▶ B setting is displayed on the screen, press the A ▶ B(...) button to release the setting.
 - If the $A \triangleright B$ setting is not displayed on the screen, press the (\longrightarrow) button to display the screen setting, and then press the (\longrightarrow) button again to release the setting.



2.7 Fast Playing

Press the **FORWARD** (****) button to increase the forward playing speed.

Press the **FORWARD** () button to increase the backward playing speed.

Each time you press the **FORWARD** () or **BACKWARD** () button, the playing speed options are rotated as below.

Forward x2 -> x4 -> x8 -> x16 -> normal play -> x2 -> x4 ...

Backward x2 -> x4 -> x8 -> x16 -> normal play-> x2 -> x4 ...

Note:

- The DVD subtitle is displayed as forward x2. If you increase the playing speed faster than this, the subtitle is not displayed.
- Press the button to play at normal speed.



2.8 Slow Motion

- Press the PAUSE () button to temporarily stop the currently playing DVD disc.
- Press the FORWARD () button to play in slow motion.
 Each time you press the FORWARD () button, the slow motion speed options are rotated as below.

Slow motion 5%->8%->12%->20%->30%->40%

->50%-> 60%->70%->80%->90%->

normal play -> 5%->8%.....

Note: Press the button to play at normal speed.



2.9 Zooming in and out

- Press the ZOOM (button to zoom in or out. Press the ZOOM (button to turn On. Press the ZOOM (button to turn Off.
- Press the ZOOM+ () or ZOOM- () button to zoom in or out.
 - Press the $\triangle/\nabla/4/\triangleright$ button to move within the zoomed in/out screen.



2.10 Subtitle/Audio

If the disc provides several types of subtitles or audio information, you can change the subtitle or audio.

Press the **SUBTITLE** ((a)) or **AUDIO** ((a)) button repeatedly to select your desired subtitle /audio language.

Note:

- Subtitle/audio languages can be changed according to the DVD title.
- Select Off in Subtitle to not display a subtitle.



2. Playing a DVD-VIDEO Disc

2.11 Listening Mode

Press the **OPT+** (con) button repeatedly to select your desired listening mode.

Note: Listening mode can be different according to

DVD title.



2.12 Time display

Press the **TIME** ($\stackrel{\frown}{\ \ \ }$) button repeatedly to select your desired

listening mode.

Total elapsed Displays the total elapsed time since the

title has been playing.

Total remain Displays the total remaining time to be

played.

Single elapse Displays the elapsed time for the currently

playing chapter.

Single remain Displays the remaining time to be played for

the currently playing chapter.

Note:

- The selected time play mode is also adjusted in the front panel.
- Total time on the screen is displayed as *Total* in the front panel; Single chapter on the screen is displayed as *Single* in the front panel.

2.13 Angle

You can select the camera angle.

Press the \mathbf{ANGLE} ($\ensuremath{\textcircled{\#}}$) button repeatedly to select your desired angle.

Note: The number of angles can be changed according to the

DVD



GB 80



3. Playing a Audio CD

3.1 Playing Audio CD

- Press the OPEN/CLOSE button on the Front panel and insert a disc.
- Press the OPEN/CLOSE button to close the disc loading tray.
- The main menu will be displayed to list all audio files in the disc as below.



 Select your desired item using the ▲/▼ button and press the OK (⊗) button. The audio is played.

You can move by page using the PAGE-/PAGE+ (/ b) button.

You can change play mode by pressing the **PLAY MODE** button repeatedly.

You can also change repeat mode by pressing the **REPEAT MODE** button repeatedly.

Note: You can play tracks in the same way as with a disc.Please refer to chapter **2.2 Playing** a *Title*.

3.2 Detail Information

If you select MP3 file on the Main Screen, press the $i(\buildrel b)$ button to display its detailed information.

You can press the i ($\dot{\bigcirc}$) button, **BACK** (\circledcirc) button or **EXIT** (\circledcirc) button to hide the information displayed on the screen and return to main screen.


Note: This is only available for MP3 files.



3. Playing a Audio CD

You can see current status of your audio player at a glance.

The following information is displayed.

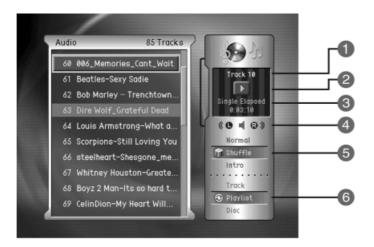

Track No or Displays the track number.
 Play Status Displays the play status.
 Time Display Displays the currently playing time of an audio CD.
 Listening Mode Displays listening mode.
 Play Mode Displays play mode.
 Repeat Mode Displays repetition of the currently playing track.

3.3 Playlist Menu

- Press theLIST ((a)) button while playing an Audio Disc to display *Playlist* menu.
- Press the ▲/▼ button to select your desired Playlist menu.
- Press the OK (⊗) or button to move to sub-menu or select an option.



Note: If *Playlist* is *On,* the Track Number is displayed in the assigned order in the Playlist and the *Disc* in Repeat Mode is disabled.

Edit Playlist Edits the playlist. Refer to 3.10 to edit. Select your

desired tracks and press the **OK** (((a)) button. Press the **BACK** (((a)) or **EXIT** (((a)) button to return to the Playlist.

Add All Tracks to Playlist Adds all tracks on the audio disc to the playlist.

Enable Playlist The playlist is set to **On** and track(s) on the playlist is

(are) played.

Disable Playlist The playlist is set to Off and all tracks on the audio disc

are played.

Delete Playlist All tracks on the playlist are deleted and the playlist is

enabled.

3.4 Search

You can directly move to your desired place. Press the **SEARCH** button to change search mode.

1. Track

- 1. Press the **SEARCH** button to select a track.
- Enter your desired track number using the NUMERICAL (0~9) button. If you enter more than the total number, the number entered is discarded. In that case, enter the track number again.
- Press the **OK** (((())) button to move to the beginning of selected track immediately.



3. Playing a Audio CD

2. Time

- 1. Press the **SEARCH** button repeatedly to select time.
- Enter your desired time using the NUMERICAL (0~9) button when time is displayed. If you enter more than the total play time, the entered number is discarded. In that case, enter the time again.
- Press the **OK** (
) button to move to the selected time immediately.



Note: Time moves to the appropriate point within current playing track.

3. Marker

- 1. Press the **SEARCH** button repeatedly to select a Marker.
- Select your desired marker from Marker list using the ▲/▼ button, and then press the OK (⊗) button. The track is played from the marked point.
- Select a marked point in the Marker list and press the CLEAR () button to delete the mark.



Note:

- If you press the MARKER button during playing a track, it is immediately marked at the point.
- If the marking list is full, you cannot add a new mark and a Fully Marked message is displayed.

3.5 Listening Mode

Press the **OPT+**(button repeatedly to select your desired listening mode.

Note: If you change listening mode, the sound is immediately changed into the selected option.



3.6 Time Display

Press the **TIME** (📸) button repeatedly to select your desired listening mode.

Total Displays the total time of a disc.

Displays the total elapsed time since the Total elapsed

disc has been playing.

Total remain Displays the total remaining time to be

played for the disc.

Single Displays the total time of the current track.

Single elapsed Displays the elapsed playing time of the

current track.

Single remain Displays the remaining time to be played for

the currently playing track.

Note: The displayed time mode on the screen is also adjusted in the front panel.

3.7 Fast Playing

- 1. Press the FORWARD (>>>) button to increase the forward playing speed.
- 2. Press the FORWARD (button to increase the backward playing speed.
- 3. Each time you press the FORWARD () or BACKWARD (button, the playing speed options are rotated as below.

Forward x2 -> x3 -> x4 -> normal play -> x2 -> x3 ...x2 -> x3 -> x4 -> normal play -> x2 -> x3 ...

Backward

Note:

- Press the button to play at normal speed.
- This is also applied to menu-playback, audio main screen, and playlist.



3. Playing a Audio CD

3.8 Play Mode

- Press the PLAY MODE () button during playing to display play mode.
- Press the PLAY MODE () button repeatedly to rotate the play mode in the order of Normal -> Shuffle ->Intro -> Normal...

Normal Plays in normal track order. Shuffle Plays in random track order.

Intro Plays the beginning of a track for 10

seconds.

3.9 Repeat Mode

- Press the REPEAT MODE button during playing to display current repeat mode.
- Press the REPEAT MODE button repeatedly to rotate the repeat mode in the order of Off -> Disc -> Track -> Playlist -> Off.



Note:

- Select Off to disenable repeat mode.
- If the playlist is set to *Off*, you cannot select repeat mode.
- The Disc repeat mode is disable during playing in the Playlist.

3.10 Playlist Editor

You can edit the playlist to play music file with the making lists.

- 1. Press the **PROGRAM** () or **LIST** () button during playing to display Playlist Editor.
- Select *Edit Playlist* using the ▲ or ▼ button and press the OK (๑) button.



GB 86

1. Add Track

Select your desired track from All, and then press the $OK(\otimes)$ button or directly enter your desired track number using the **NUMERICAL** (0~9) button to add to the *Playlist*.

2. Delete Track

- 1. When All is highlighted, press the ANGLE (🕌) button to move the highlight into Playlist.
- 2. Select your desired track and press the CLEAR () button to delete it.

3. Play Track

When you complete editing the playlist, press the **PLAY/PAUSE** () button to play tracks in the assigned order on the Playlist.

Note: Directly enter your desired track number in playlist using the NUMERICAL (0~9) button, and press the OK ((∞) button to add to the Playlist.

3.11 MP3 Disc Scan

In case of MP3 Disc, you can scan the total play time of the mp3 file exists in the disc.

- 1. Press the DISC MENU (button to scan an MP3 Disc.
- 2. Press the **OK** ((a)) or button to start scanning.
- 3. The total time is displayed when completing scanning.

Note: If the tray is open and then closed, the scanning process is reset.

You can set all other items suitable for your environment.

Note:

- You can easily select all menu items using the assigned numerical button for each menu.





4.1 Language

You can set Language for Menu, Audio, and Subtitle.

- 1. Press the MENU () button.
- 2. Select *Language* using the ▲/▼ button, and press the OK ((@)) or Stereo Normal.



1. Player Menus/Disc Menus/Disc Audio/Disc Subtitle Language

- You can set the language for Menu, Audio and Subtitle. Default language is English.

 1. Select *Player Menus/ Disc Menus/ Disc Audio/Disc Subtitle* Language using the ▲/▼ button.
 - 2. Press the **OK** ((a)) or button to display the available *Language List*.
 - 3. Select your desired language using the \triangle/∇ button, and press the **OK** (\bigcirc) button.

Disc Menus Set the language of the Disc title. **Disc Audio** Set the audio language of the DVD disc. **Disc Subtitle** Set the subtitle language of the DVD disc.

4.2 Audio

You can set Audio.

- 1. Press the MENU () button.
- Select Audio using the ▲/▼ button, and press the OK (⊗) or ▶ button.



1. LPCM

You can select digital audio output according to the type of audio system you use.

Select **LPCM** using the ▲/▼ button , and press the **OK** (⊗) or ▶ button.

PCM Set when connecting to an audio system without a Dolby Digital, DTS, or

other special decoder.

2. Dynamic Range

You can set the dynamic range.

Select *Dynamic Range* using the \triangle/∇ button, and press the **OK** (\circledcirc) or \blacktriangleright button.

Maximum you can set the dynamic range to maximum.

Standard Light compression of Dolby Digital sound. Set this when listening at low

volume in night. If you connect to a TV with a RCA socket, we will

recommend Standard for user

Minimum Heavy compression of Dolby Digital sound. Set this when listening the TV

by connecting by RF cable. If you connect to a TV with a RF socket, we will

recommend **Minimum** for user

3. Downmix Mode

You can set the downmix mode.

Select *Downmix Mode* using the ▲/▼ button, and press the **OK** (⊚) or ▶ button. You can select one option from *Dolby Surround* or *Stereo Normal*.

4.3 Display

You can set video display.

- 1. Press the MENU () button.
- Select *Display* using the ▲/▼ button, and press the OK (⊗) or ▶ button.



1. TV Aspect

You can set the aspect ratio of your TV.

- Select TV Aspect using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select one option among 16:9 Widescreen/4:3 Letter Box/4:3 Pan&Scan using the ▲/▼ button, and press the OK (⊚) button.

2. SCART Output

You can set the scart output.

- 1. Select **SCART Output** using the ▲/▼ button, and press the **OK** (⊗) or ▶ button.
- Select one option among CVBS/S-Video/RGB using the ▲/▼ button, and press the OK (⊚) button

CVBS/S-Video/RGB

If you set the YPbPr/RGB switch which is located in the back of your receiver,LPCM to YPbPr with setting scart output to RGB, the video signal is not output to scart. Please use the component terminal.

3. On Screen Info

Display the option information.

Select *On Screen Info* using the ▲/▼ button, and press the **OK** (ⓐ) or ▶ button.

On Display the on screen information when you change the option.

Off Not display.

GB 90

4. Panel Display

You can set the front luminosity.

- 1. Select *Panel Display* using the ▲/▼ button, and press the **OK** (⊗) or ▶ button.
- Select one option among *Dim/Bright/Dim for Playback* using the ▲/▼ button, and press the OK (⊗) button.

Dim Front panel luminosity is dim.Bright Front panel luminosity is bright.

5. Power Saving

You can set the power saving.

- Select *Power Saving* using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- Select one option among Screen Saver Time/Audio Screen Saver/Standby Time using the ▲/▼ button, and press the OK (⊗) or ▶ button.



(3min/10min/30min), screen saver is run. If the screen saver time is

set to **NEVER**, the screen saver time is not enabled.

Audio Screen Saver If standby time is set to *On*, audio is muted while the screen saver

is on. If standby time is set to Off, the audio screen saver is not

enabled.

Standby Time If the assigned amount of time (5min/15min/35min) has elapsed

without playing, it automatically goes to Standby status. If Standby

time is set to NEVER, Standby time is not enabled.

4.4 Disc

You can set the option of Disc.

- 1. Press the MENU () button.
- Select *Disc* using the ▲/▼ button, and press the OK (⊗) or ▶ button.



1. Video CD Playback Control

You can set the playback control of video CD.

Select *Video CD Playback Control* using the ▲/▼ button, and press the **OK** (ⓐ) or ▶ button.

- On Display video CD playback when the video CD is playing.
- Off Not display video CD playback.

2. Player Version

You can view player information.

Select **Player Version** using the ▲/▼ button, and press the **OK**(⊗) or ▶ button.

Confirm the information about Player Version and Release Date.

4.5 Parental Control

You can set parental control and change your password.

- 1. Press the MENU () button.
- Select the *Parental Control* using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- 3. When prompting message is displayed to ask Password, enter the Password using the **NUMERICAL** (0~9) button.



1. Country

You can set the Country.

Select *Country* using the ▲/▼ button, and press the **OK** (ⓐ) or ▶ button.

InternationalYou can set your desired country.USAYou can set Country to USA.

2. Parental Level

You can set the parental level.

- Select Parental Level using the ▲/▼ button, and press the OK (⊗) or ▶ button.
- If Country set to *International*, select one option among *Unrestricted / General / Most Audience / Mature Young / Teenage / Mature Teenage / Mature Audience / Adult / Always Restricted* using the ▲/▼ button, and press the OK (⊗) button.

If Country set to *USA*, select one option among *Off/G/PG/PG-13/R/NC-17/X* using the ▲/▼ button, and press the **OK** (⊚) button.



Note: When you set to Unrestricted, the all discs play without password.

3. Password

You can change the current password into new one.


- Select Change Password using the ▲/▼ button, and press the OK (๑) or ◀ button.
- Enter New Password using the NUMERICAL(0~9) button, and select OK and press OK (⊚) button.
- Enter the New Password again to confirm the Verify Password, and select OK and press the OK (⊗) button.




Note: The Default Password is **0000.** If you have forgotten your Password, please contact your local product distributor.

Appendix1. Menu Map

STB

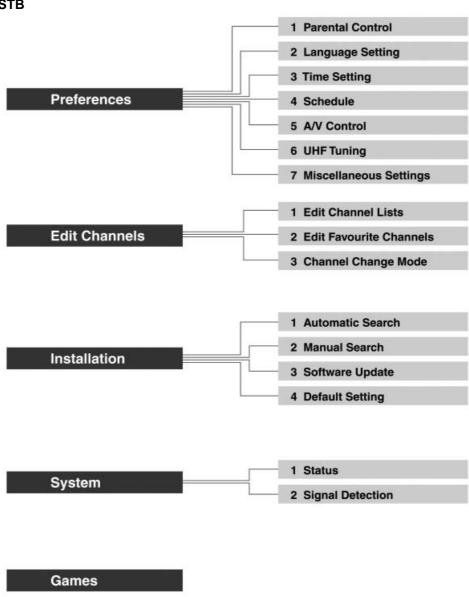

DVD

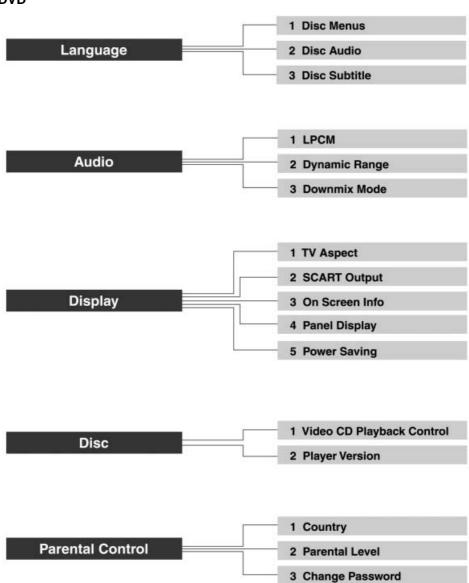

Appendix2. Trouble Shooting

Before contacting your local service, please make sure following instructions. If the product does not work normally after completing the following trouble shooting, please contact your local product distributor or service centre.

STB and DVD

- 1. No message is displayed on the front panel or product has no power
 - Check the main power cable and check that it is plugged into a suitable power outlet.
 - Check whether the Power Switch is On.
- No picture
 - Make sure that the product is in Operation Mode.
 - Make sure that the AV Cable is firmly connected to the TV.
 - Make sure that Antenna line is correctly connected to the equipment.
 - Check the brightness level of TV.
 - Check the channel is on air.
- 3. Poor picture & sound quality
 - Install the antenna in a place where there is no obstacle.
 - Make sure there is no mobile phone or microwave oven near the equipment.
 - Use 75 Ω coaxial cable to connecting TV and antenna.
- 4. No or poor sound
 - Check the volume level of the TV and Receiver.
 - Check the Mute status of the TV and product.
 - Press the Audio button to change the Sound Track type.
- 5. Remote controller does not operate
 - To control the equipment with the remote controller, the remote controller's top end should directly point towards the receiving part of receiver's remote controller.
 - Check the battery of Remote controller.
- 6. Reservation is not available
 - Check whether it it not overlapped with other reservation.
 - Cehck whether the power switch is off.
- 7. Video from the VCR is displayed but audio is not played.
 - Audio may not sound when you watch the video from the VCR through the RF terminal of the TV when the video signal is inputted from SCART of your receiver. To watch video from the VCR through RF terminal, connect the VCR and TV with the RF cable. (For more information, refer to the VCR user manual.)

DVD only

- Disc can't be played
 Ensure the disc label is upwards.
 - Clean the disc.
 - Check if the disc is defective by trying another disc.
 - Check region code.
- 2. No return to start-up screen when disc is removed.
 - Reset by switching the player off, then on again.
 - Check to see if the proramme requires another disc to be loaded.
- 3. Distored sound from Hi-Fi amplifier
 - Check to make sure that no audio connections are made to the amplifier phono input.
- 4. No color in picture
 - The disc format is not according to the TV-set used.(PAL/NTSC)

Error Message (STB only)

Error message	Possible causes	What to do
No or bad signal	The aerial is not pointing properly.	Adjust aerial.
		Check the cable from the aerial.If you cannot resolve the problem you may need to have your aerial and installation tested by a professional.
The channel is scrambled or not available.	The channel has signal, but no audio or video.	Confirm if the channel is currently on air.
	The channel is not deleted by broadcasting company.	
	The channel is for data broadcasting.	Cannot watch the channel in usual way.
The channel is scrambled.	This digital terrestrial receiver does not support the service that enables to descramble the scrambled channels.	
The audio is not available.	The channel has signal, but no Audio.	Press the Audio button to confirm if the channel has Audio.

Appendix3. Specification

Tuner & Channel	_	
RF Loop through Output connector	IEC-Type, IEC 169-24, male	
Frequency Range	48.5MHz to 226.5MHz (VHF)	
	470MHZ to 862MHz (UHF)	
1Signal Level	-10 to -70dBm	
Demodulation	OFDM	
Mode	2K, 8K	
MPEG Transport Stream A/V Decoding		
Transport Stream	MPEG-2 ISO/IEC 13818	
	Transport Stream Specification	
Profile Level	MPEG2 MP@ML	
Video Input Rate	15 Mbit/s Max	
1Aspect Ratio	4:3, 16:9 Letter box	
Video Resolution	720x576, 720x480	
Audio Decoding	MPEG/MusiCam Layer I & II	
Audio Mode	Single channel/Dual channel/Joint Stereo/Stereo	
Memory		
Flash Memory	4 Mbytes	
Graphics (MPEG) & System Memory	16 Mbytes	
EEPROM	8 Kbytes	
Available Disc(DVD)		
Available Reading	MP3/Audio CD/VCD/Photo CD/CD-R,RW/DVD-R,RW/DVD+R,RW,SVACD	
A/V & Data In/Out		
Video	RCA/SCART Video Output(CVBS, RGB, S-Video)	
Audio R/L	RCA/SCART Volume and Mute Control (Resolution: 20 bits DAC, MAX. 2Vrms)	
S/PDIF	Digital Audio Output, Fiber-Optic(Resolution : 20 bits)	
RS-232C	Transfer Rate:115,200 bps,3 pin Socket type	

Power Supply	
Input Voltage	90~250V AC, 50/60Hz
Туре	SMPS
Power Consumption	Max. 35W
Stand by Power	≤5W
Protection	1Separate Internal Fuse.
	The input should be protected against lighting
Physical Specification	
Size	420mm X 75mm X 300 mm
Weight (Net)	Around 4.8Kg
Operating Temperature	0 °C to +45 °C
Storage Temperature	-10 °C to +70 °C

Appendix4. Glossary

Component Video (Y Pb Pr)

This method of transmitting pictures produces the highest quality as the video signal is split into its Y(brightness), U and V(red minus rightness, blue minus brightness) components. The signal can also be sent as interlaced or as progressive scan.

Dolby Digital

Dolby Laboratories standard for transmitting 5.1 channels. Five full-value channels are transmitted in this acoustic playback system. A further channel is used for low frequencies(effects). The loudspeakers are arranged front left, front middle, rear left and rear right. This system is currently the most common system and is used in cinemas.

DTS (Digital Theater Systems)

DTS are trademarks of Digital Theater Systems Inc.

Transmission standard for 5.1 channels from Digital Theater Systems Inc. This is the second most wide-spread after Dolby Digital.

DVD (Digital Versatile Disc)

A new storage medium that combines the convenience of the compact disc with the latest digital video technology. DVD video uses modern MPEG2 data compression technology that enables an entire feature film to be stored on a single five inch disc.

Programme Guide (Electronic Programme Guide, EPG)

A electronic programme guide (EPG) that comes with the broadcast to a particular satellite, Note that every station fills the EPG differently or not, so differences in the EPG are not necessarily receiver errors.

Frequency

The number of cycles or events per one second, which is expressed in the unit of hertz

FTA (Free- To-Air)

An unscrambled broadcast, which you can view without additional payments to a service provider.

GB 100

MP3

MP3 files are highly compressed music files. The data is compressed to 1/10 of the volume of the original audio material using a special process. This means that 10 hours of music can be stored on a single CD.

OSD (On Screen Display)

The function that displays the information about the monitor that the user needs or has to know on the screen directly. OSD information includes brightness, contrast, tuning, RGB adjustment, and screen size and positions (top, left, width, and height), and so on.

OTA (Over The Air)

Means that software downloads where the manufacturer reserves the right to decide when and where to release them through satellite system.

SCART

A 21-pin connector used for connection of this product, VCR and TV. Also called Euroconnector or Peritel connector.

S/PDIF (Sony/Philips Digital Interface format)

Standard format for digital audio output. It outputs audio signals directly as digital audio signals without changing into analog signals because conversion into analog signals can degrade signal quality.

S-Video

This is used to transmit the brightness signal(Y signal) and color signal(C signal) separately.

Appendix5. Service and Support

You can get information such as a troubleshooting guide, software upgrades and product support guide from the following web sites and call center (Hotline).

Please try to contact to your local dealers first when you have any problem.

Web site and e-mail

Homepage

http://www.humaxdigital.com English http://www.humaxdigital.com/Deutsch/ Deutsch http://www.humaxarabia.com Arabic

HCSA (Humax Customer Service Area)

Software Download, Information and Technical Q&A

http://www.humaxdigital.com/hcsa/ English http://www.humaxdigital.com/Deutsch/hcsa/ Deutsch

E-mail (Technical Q&A)

tech-info@humax-digital.co.uk Europe & North Africa

techinfo@humax-digital.de Germany
callcenterME@humaxdigital.com Middle East
Webmaster@humaxdigital.com Asia & Other area

Call Center

Humax Middle East Call Center (Dubai, UAE)

Tel: +971 (0)4 359 2323 (Open: 9:00 - 20:00 / close on Friday)

E-mail: callcenterME@humaxdigital.com Open: Local Time in Dubai (GMT+4)

9:00 - 20:00 (Saturday - Thursday, close on Friday)

Support Language: English/Arabic

Humax Hotline (Germany)

Germany: 01805 778 870 (€ 0,12/Min)

Other Countries: + 49 1805 778 870 (€ 0,12/Min+ International Call Charge)

Open: Local Time in Germany (GMT+1) 8:00 - 20:00 (Monday - Friday) 8:00 - 18:00 (Saturday)

Support Language: Deutsch/English

Humax BTCI Hotline (Premiere Model)

Germany: 01805-778900 (€ 0,12/Min) Austria: 0900-900633 (€ 0,33/Min)

For hardware repair, please refer to support website. (Homepage or HCSA)

