

Congratulations on your purchase of a high-quality Insignia product. Your Blu-ray Disc player has built-in Wi-Fi that lets you connect your player to the Internet to download BD-Live content.

This guide includes two options for configuring your wireless connection:

- Connecting to a broadcasting wireless network using DHCP
- Connecting to a wireless network using WPS (Wi-Fi Protected Setup)

 
NOTE: You only have to perform this procedure once. The next time you turn on your player, it will connect to the network automatically.

Connecting to a broadcasting wireless network using DHCP


NOTE: The steps in this task are based on using the remote control that came with your player.

To set up a network connection:


- 1 Press **ENTER**. The *Settings* menu opens.
- 2 Press **▲** or **▼** to select **Network**. The **Network** menu opens.

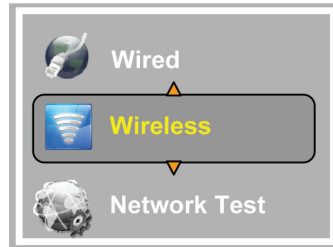

  
- 3 Press **▶**, press **▲** or **▼** to highlight **Wireless**, then press **ENTER**. A list of network options opens.

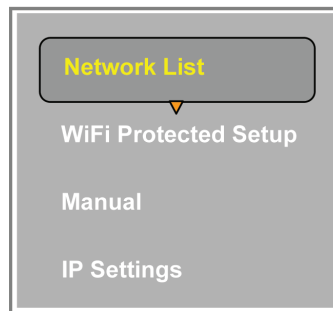

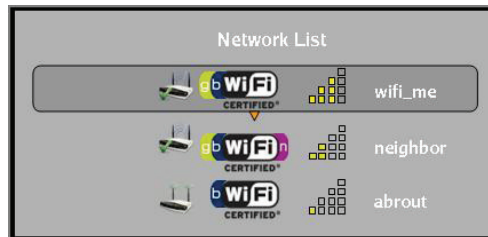

 - 4 Press **▲** or **▼** to highlight *Network List*, then press **ENTER**. The *Network List* opens and shows the available networks. It may take several seconds for this list to appear.

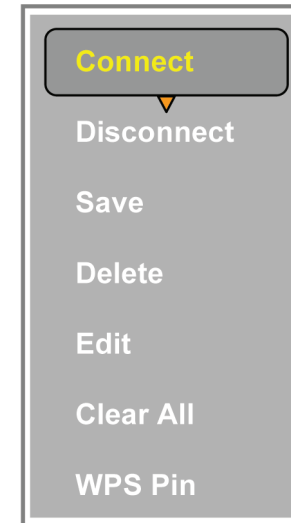

- 5 Press **▲** or **▼** to highlight a network, then press **ENTER**. A list of options opens.



 
- 6 If your network is not using encryption or you have successfully logged on the the network before, go to Step 15.

NOTE: If a network is using encryption, a closed lock icon  appears next to the network name. If you have successfully logged on to the network before, a saved  icon appears next to the network name.


Or,

If your network is using encryption, go to the next step.

- 7 Press **▲** or **▼** to highlight **Edit**, then press **ENTER**. An edit screen opens. The **AdHoc** and **Name** fields are already set correctly based on data received from the wireless router.

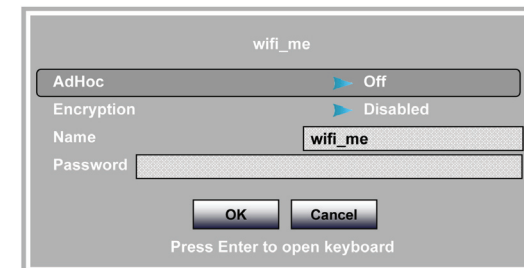

 
- 8 Press ▲ or ▼ to highlight the **Encryption** field, then press **ENTER**. A list of encryption types opens.

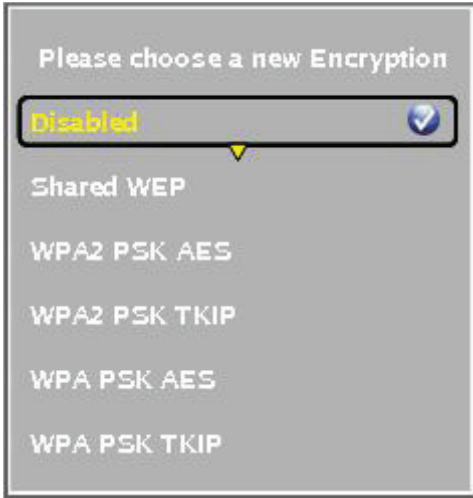

- 9 Press ▲ or ▼ to highlight the type of encryption used by your router, then press **ENTER**. The edit screen reopens.
NOTE: If you do not know what type of encryption your router uses, log on to your router and check the encryption setup. See the router manual for instructions on how to do this.




 - 10 Press ▲ or ▼ to highlight the **Password** field, then press **ENTER**. An on-screen keyboard appears.

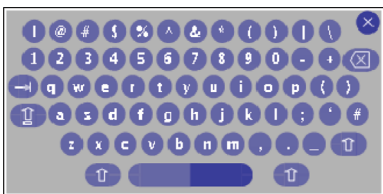

- 11 Press ▲, ▼, ◀ or ▶ to highlight the first letter in the password, then press **ENTER**. Repeat this step to enter the rest of the password. If you make a mistake, use ☒ to delete the character.
12 After you enter the password, highlight ☒, then press **ENTER** to close the keyboard.
13 Press ▼ to highlight **OK**, then press **ENTER**. The *Network List* reopens.

 - 14 If necessary, press ▲ or ▼ to highlight the network again, then press **ENTER**. The option list reopens.

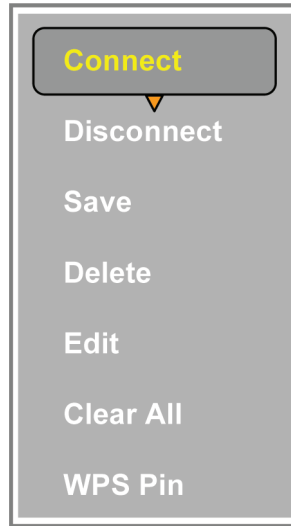

- 15 Press ▲ or ▼ to highlight **Connect**, then press **ENTER**. If the wireless network is working, you should see a ✓ and a connected message on the TV. If the message does not appear, your Blu-ray player is not connected to the network. Repeat this task again.

 


Connecting to a wireless network using WPS (Wi-Fi Protected Setup)

NOTE: The steps in this task are based on using the remote control that came with your player.

To set up a network connection:

- 1 Press **ENTER**. The *Settings* menu opens.
- 2 Press ▲ or ▼ to select **Network**. The *Network* menu opens.

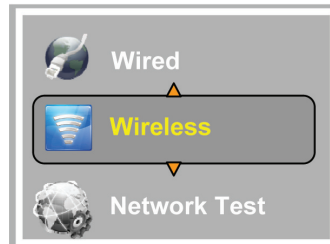

- 3 Press ▶, press ▲ or ▼ to highlight **Wireless**, then press **ENTER**. A list of network options opens.



- 4 Press ▲ or ▼ to highlight **WiFi Protected Setup**, then press **ENTER**. The following screen appears.



- 5 Press the button on top of your router. The following screen should appear. When you see "Success" on the screen, your player is connected to the router.



- 6 Press **ENTER** to close the message.