


Panasonic®

DVD/CD PLAYER

Operating Instructions

Model No. **DVD-S25/DVD-S23**

The illustration shows the models for U.S.A. and Canada.

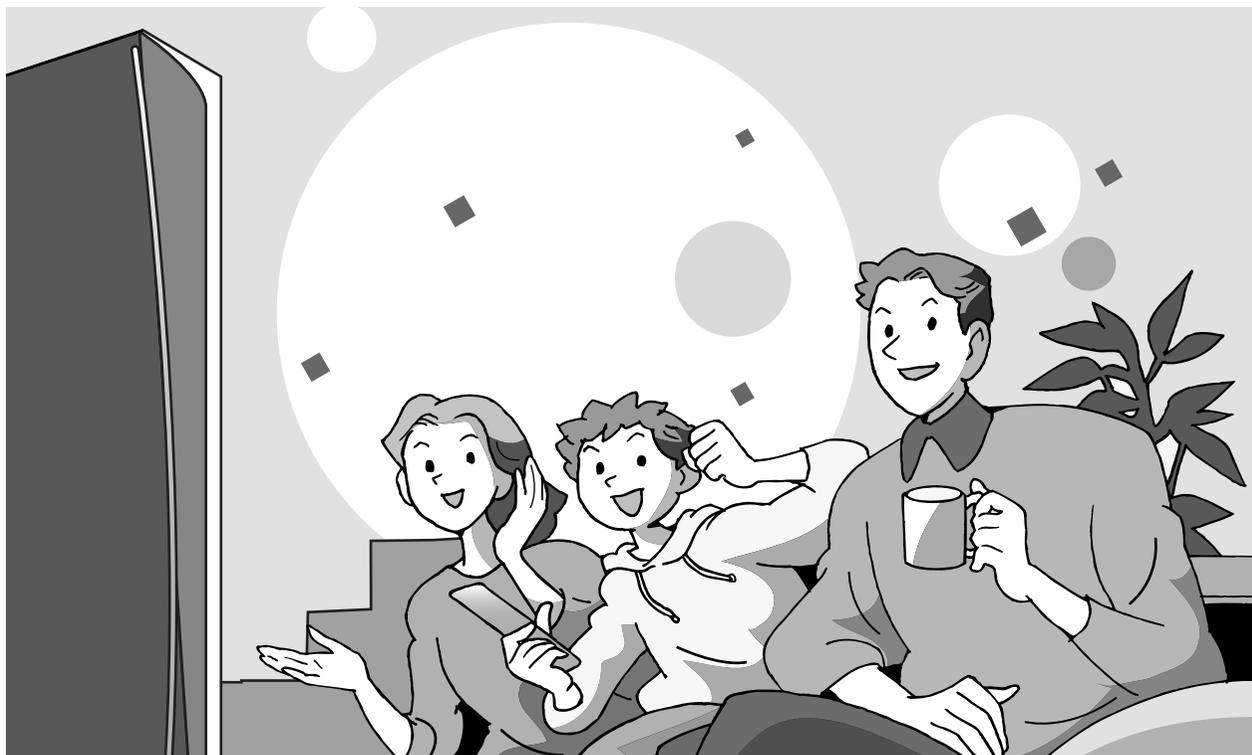

Dear customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.



Region number

The player plays DVD-Video marked with labels containing the region number or "ALL".

| Region | Number |
|----------------------------------|--------|
| U.S.A. and Canada | 1 |
| The Middle East and South Africa | 2 |
| Asia | 3 |
| Australia and N.Z. | 4 |
| Russia | 5 |

Example: **U.S.A. and Canada**



Unless otherwise indicated, illustrations in these operating instructions are of the models for U.S.A. and Canada.

Table of contents

Getting started

- IMPORTANT SAFETY INSTRUCTIONS** 2
- Accessories** 3
- Disc information** 3
- STEP 1 The remote control** 4
- STEP 2 Connection to a television** 4
- STEP 3 QUICK SETUP** 4

Operations

- Basic play** 5
- Increasing your enjoyment of movies** 6
- Convenient functions** 8
- Using navigation menus** 9
- Using On-Screen Menu Icons** 10
- Changing the player settings** 12
- Home Theater** 14

Reference

- Specifications** 15
- Maintenance** 15
- Troubleshooting guide** 16
- Limited Warranty (ONLY FOR U.S.A.)** 18
- Product Service** 18
- Referencia rápida en español** 19

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

For the U.S.A. and Canada

CAUTION:

TO PREVENT ELECTRIC SHOCK MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

CAUTION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE FOLLOWING APPLIES ONLY IN THE U.S.A. AND CANADA



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE SCREWS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Accessories



Please check and identify the supplied accessories. Use numbers indicated in parentheses when asking for replacement parts.

(Only for U.S.A.) To order accessories contact 1-800-332-5368 or the website (<http://www.panasonic.com>).

(For other areas) To order accessories, call the dealer from whom you have made your purchase.

- 1 Remote control

U.S.A. and Canada

(EUR7621070)

Other areas

(EUR7621080)

- 1 Audio/video cable

(JAC3315N)

- 2 Remote control batteries

- 1 AC power supply cord

U.S.A. and Canada

(RJA0065-K)

Australia and N.Z.

(RJA0035-2X)

Other areas

(RJA0019-2X)

Note

The included AC power supply cord is for use with this unit only. Do not use it with other equipment.

Disc information

Discs that can be played

| | | | |
|-----------|---|---|--|
| DVD-Video | | | You may not always be able to control play as described in these operating instructions, e.g. some functions do not work when the play time is not displayed. Read the disc's instructions carefully. |
| DVD-R | | DVD-V | <ul style="list-style-type: none"> ● Panasonic DVD-R recorded and finalized* on a Panasonic DVD video recorder or DVD video camera are played as DVD-Video on this unit. ● It may not be possible to play DVD-R in all cases due to the type of disc or condition of the recording. |
| Video CD | | VCD | You may not always be able to control play as described in these operating instructions, e.g. some functions do not work when playback control is on. To cancel playback control, press the numbered buttons in the stop mode (→ page 5, Enter number). |
| CD | | CD | — |
| CD-R/RW | — | WMA MP3 JPEG | <ul style="list-style-type: none"> ● This unit can play CD-R/RW (audio recording disc) recorded with CD-DA, video CD, WMA, MP3, or JPEG. Close the sessions or finalize* the disc after recording. ● It may not be possible to play CD-R and CD-RW in all cases due to the type of disc or condition of the recording. |

*A process that allows play on compatible equipment.

Use discs with the above logos and that conform to specifications. The unit cannot play other discs correctly.

Discs that cannot be played

DVD-RAM, DVD-Audio, DVD-ROM, CD-ROM, CDV, CD-G, +RW, DVD-RW, CVD, SVCD, SACD, Divx Video Discs and Photo CD.

Built-in decoders

This unit has Dolby Digital and DTS decoders so you can enjoy discs that display the indicated logo in stereo without connecting a separate decoder.



Video systems

The Middle East, South Africa, Asia, Russia, Australia and N.Z.

- This unit can play PAL and NTSC, but your television must match the system used on the disc.
- PAL discs cannot be correctly viewed on an NTSC television.
- This unit can convert NTSC signals to PAL 60 for viewing on a PAL television (→ page 12, Video—NTSC Disc Output).
- Output is interlace (576i), when playing PAL discs.


U.S.A. and Canada

PAL discs cannot be played.

To clean discs

DVD-Video, Video CD, CD

Wipe with a damp cloth and then wipe dry.

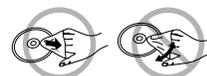

DVD-R


- Clean with an optional DVD-RAM/PD disc cleaner (LF-K200DCA1, where available).
- Never use cloths or cleaners for CDs etc.

Handling precautions

- Do not attach labels or stickers to discs (This may cause disc warping, rendering it unusable).
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not use scratch-proof protectors or covers.
- Do not use the following discs:
 - Discs with exposed adhesive from removed stickers or labels (rented discs etc).
 - Discs that are badly warped or cracked.
 - Irregularly shaped discs, such as heart shapes.

STEP 1 The remote control

■ Batteries

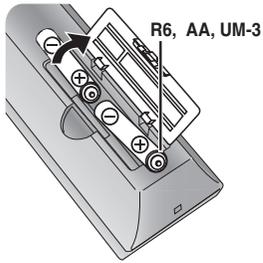

- Insert so the poles (+ and -) match those in the remote control.
 - Do not use rechargeable type batteries.
- Do not:**
- mix old and new batteries.
 - use different types at the same time.
 - heat or expose to flame.
 - take apart or short circuit.
 - attempt to recharge alkaline or manganese batteries.
 - use batteries if the covering has been peeled off.

Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire.

Remove if the remote control is not going to be used for a long period of time. Store in a cool, dark place.


■ Use

Aim at the remote control sensor, avoiding obstacles, at a maximum range of 7 m (23 feet) directly in front of the unit.


STEP 2 Connection to a television

- Do not place the unit on amplifiers or equipment that may become hot. The heat can damage the unit.
- **Do not connect through the video cassette recorder.** Due to copy guard protection, the picture may not display properly.
- Turn off all equipment before connection and read the appropriate operating instructions.
- Connect the terminals of the same color.
- To enjoy more powerful sound → page 14

■ Television with VIDEO IN terminal

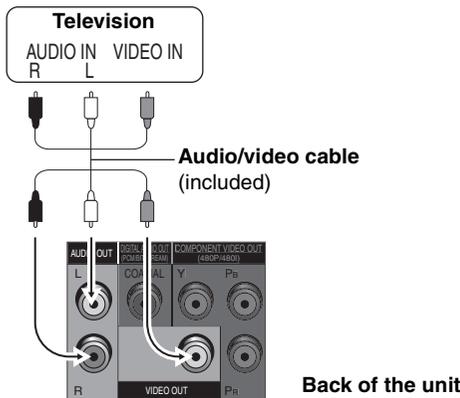

■ Television with COMPONENT VIDEO IN terminals

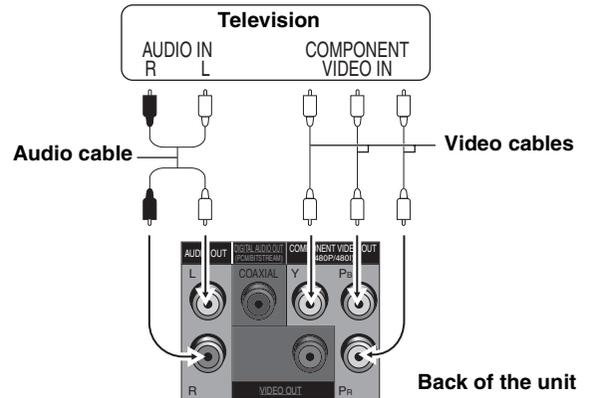


- To enjoy progressive video → page 11

U.S.A. and Canada

- Select "Darker" in "Black Level Control" in the SETUP menu (→ page 12).

■ Connect the AC power supply cord last

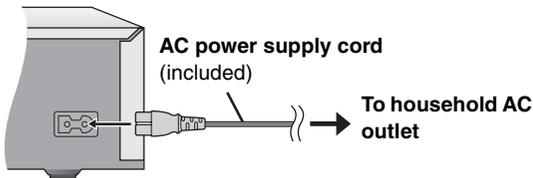

Conserving power

This unit consumes a small amount of power, even when it is turned off.


| | |
|--------------------------|-----|
| U.S.A. and Canada | 1 W |
| Other areas | 2 W |

To save power when the unit is not to be used for a long time, unplug it from the household AC outlet.

STEP 3 QUICK SETUP




Turn on the television and select the appropriate video input on the television.
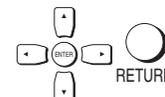
| | | | | |
|--|--|--|---|---|
| <p>1</p>  <p>Power ON.</p> | <p>2</p>  <p>Shows QUICK SETUP screen.</p> | <p>3</p>  <p>Follow the message and make the settings.</p> | <p>4</p>  <p>Press to finish QUICK SETUP.</p> | <p>5</p>  <p>Press to exit.</p> |
|--|--|--|---|---|

To change these settings later

Select "QUICK SETUP" in the SETUP menu (→ page 13).

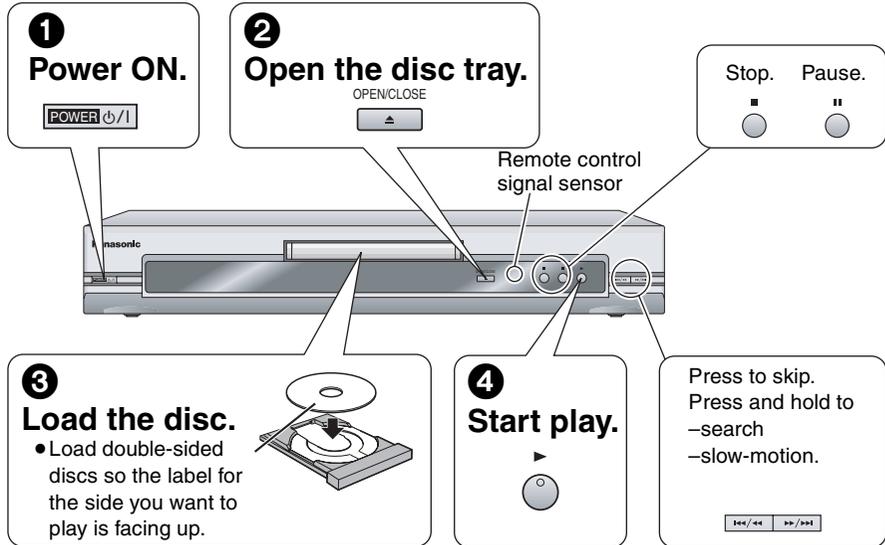

• Check “Mixed Disc—Audio & Stills” in the SETUP menu (→ page 13) if the disc includes both WMA/MP3 and JPEG.

Stop



The position is memorized when “▷” flashes on the display.

- Press [▶] (PLAY) to resume. **DVD-V** → page 7, To review the previous chapters
- Press [■] to clear the position.

Pause



- Press [▶] (PLAY) to start play.

Skip



(Group skip **JPEG**)



Search
(during play)



- Up to 5 steps
- Press [▶] (PLAY) to start play.

Slow-motion
(during pause)


- **VCD** Slow motion, forward direction only

Frame-by-frame
(during pause)



- **VCD** forward direction only

On-screen item select

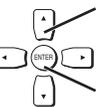

Select

Register

Note
Discs continue to rotate while menus are displayed. Press [■] when you finish to preserve the unit’s motor and your television screen.

Enter number



DVD-V **VCD** **CD**
e.g. To select 12:
[≥10] → [1] → [2]

- While stopped, selecting tracks using this method will cancel playback control. **VCD**

WMA **MP3** **JPEG**
e.g. To select 123:
[1] → [2] → [3] → [ENTER]

Disc menu

TOP MENU  **DVD-V** Shows a disc top menu

MENU  **DVD-V** Shows a disc menu

RETURN  **VCD** Shows a disc menu

Return to previous screen

RETURN 

Main unit display

FL SELECT  Number display
↑ ↓
Time display

Information screen


SUBTITLE  **WMA** **MP3** **JPEG**
Turns the information screen on/off

■ **Standby/on switch (⏻/⏻)**
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

The Middle East, South Africa, Asia, Russia, Australia and N.Z.

Standby/on indicator (⏻)

When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.

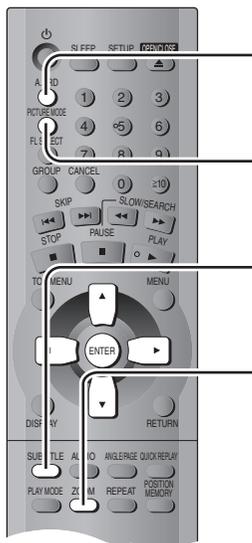

A.SRD
 Advanced Surround
 Virtual surround with television's speakers

PICTURE MODE
 Picture Mode
 Picture quality suitable for movies

SUBTITLE
 Subtitle

ZOOM
 Zoom
 Expanding the picture to fit the screen

See below for detail.



Increasing your enjoyment of movies

Advanced Surround

DVD-V **VCD** (2 or more channels)

Press **[A.SRD]** to select "SP1" or "SP2".

SP1: Natural effect
SP2: Enhanced effect



- When using discs recorded with surround sound, sound seems to come from speakers on either side of you.
- When using headphones from the connected equipment, select "HP" by pressing [**◀**] and [**▲ ▼**].
- Optimum seating position is 3 to 4 times the distance between the front left and right speakers or the width of the television if using the televisions speakers.
- Do not use in combination with surround effects on other equipment.

Picture Mode

DVD-V **VCD** **JPEG**

Press **[PICTURE MODE]**.




- Normal:** Normal mode.
Cinema1: Mellows images and enhances detail in dark scenes.
Cinema2: Sharpens images and enhances detail in dark scenes.
Animation: Adjusts image quality suited for viewing animations.
Dynamic: Adjusts to a more vibrant image by emphasizing contrast.

Subtitle

DVD-V (with multiple subtitles)

Press **[SUBTITLE]** to select the subtitle language.

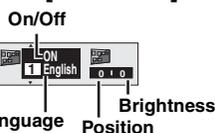

On/Off

Press [**▶**] and then [**▲ ▼**] to select "ON" or "OFF".


To change the subtitle position and brightness

- Press [**▶**] and then [**▲ ▼**] to adjust.
- Position: 0 to -60 in 2 unit steps
 - Brightness: "Auto" to automatically adjust the brightness against the background, or 0 to -9

Zoom

DVD-V **VCD**

Press **[ZOOM]** to select the preset aspect ratio.

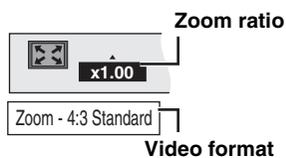


Preset zoom ratios suitable for the following video formats are available.

| | Zoom ratio | Video format |
|----------------|------------|-----------------------|
| 4:3 Standard | 4:3 | American Vista 1.85:1 |
| European Vista | 1.66:1 | Cinemascope 1 2.35:1 |
| 16:9 Standard | 16:9 | Cinemascope 2 2.55:1 |

• You can also select the preset aspect ratio by pressing [**ENTER**] and [**◀ ▶**].

Fine adjustments

- Press [**▲ ▼**].
- from ×1.00 to ×1.60 (in 0.01 units)
 - from ×1.60 to ×2.00 (in 0.02 units)

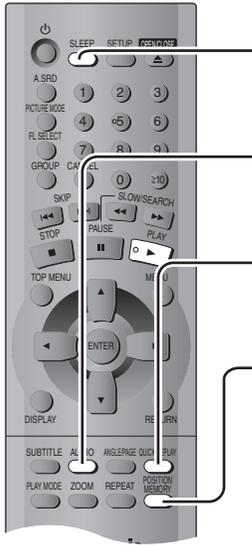

Sleep timer



Audio



Quick replay

Replaying a scene



Position memory

Memorizing the position to resume play

See below for detail.



Sleep timer

Press [SLEEP] to select the time to turn off (60 min, 90 min, 120 min) or "AUTO".



AUTO:

- Turns the unit off 5 minutes after play finishes.
- Also works with DVDs that show a menu after play finishes.
- Does not work if you stop play or show a disc menu. It is activated again when you restart play.

To confirm the remaining time

Press [SLEEP] again.

Audio

DVD-V (with multiple soundtracks) **VCD**

Press [AUDIO] to select the soundtrack.



Signal type/data

DVD-V (Karaoke discs)

You can also use this button to turn the vocals on and off. Read the disc's instructions for details.

VCD

You can also use this button to select "L", "R" or "LR".

Quick replay

DVD-V **VCD** **CD** **WMA** **MP3**

(Only when the elapsed play time can be displayed)

Press [QUICK REPLAY] to skip back a few seconds or a few pictures.

Position memory

(Only when the elapsed play time can be displayed)

This position is memorized even after turning off the unit or changing the disc.

Press [POSITION MEMORY].



- Up to 5 discs.
- When the sixth disc is memorized, the earliest position is replaced.

When the unit is turned on or the disc is inserted, "▷" flashes on the display.

Press [▶] (PLAY) to start play from that position.

To review the previous chapters **DVD-V**

Press [▶] (PLAY) while the following message is on the display.



- Do not press [▶] (PLAY) if you want to cancel review.

Audio/Subtitle language

| | | |
|--------------|-----------------|-----------------|
| ENG: English | SVE: Swedish | CHI: Chinese |
| FRA: French | NOR: Norwegian | KOR: Korean |
| DEU: German | DAN: Danish | MAL: Malay |
| ITA: Italian | POR: Portuguese | VIE: Vietnamese |
| ESP: Spanish | RUS: Russian | THA: Thai |
| NLD: Dutch | JPN: Japanese | *: Others |

Signal type/data

LPCM/□□ Digital/DTS/MPEG: Signal type


k (kHz): Sampling frequency

b (bit): Number of bits

ch (channel): Number of channels

Example: 3/2_1ch

- .1: Low frequency effect (not displayed if there is no signal)
- 0: No surround
- 1: Mono surround
- 2: Stereo surround (left/right)
- 1: Center
- 2: Front left+Front right
- 3: Front left+Front right+Center

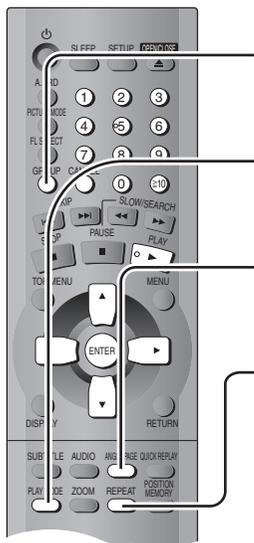

GROUP Starting play from a selected group

PLAY MODE Starting program and random play

ANGLE/PAGE Angle/Picture rotation

REPEAT Repeat play

See below for detail.




Starting play from a selected group

WMA MP3 JPEG

A folder on WMA/MP3 and JPEG discs is treated as a "Group".


- 1 Press **[GROUP]**.
- 2 Press **[▲ ▼ ◀ ▶]** to select the item and press **[ENTER]**.

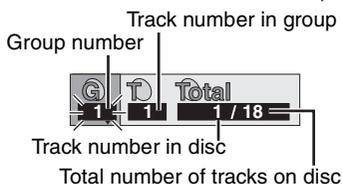

Program play (up to 32 items)

DVD-V VCD CD WMA MP3

- 1 While stopped, press **[PLAY MODE]**.
- 2 Press the numbered buttons to select the items (**WMA MP3**) then press **[ENTER]**.
Repeat this step to program other items.
- 3 Press **[▶]** (**PLAY**).

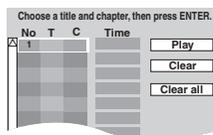

Using the cursor buttons

Press **[ENTER]** and **[▲ ▼]** to select an item, then press **[ENTER]** again to register.

- Select "ALL" to enter all items.

Changing the program

Press **[▲ ▼]** to select an item.

- To change an item, repeat step 2.
- To clear an item, press **[CANCEL]** (or select "Clear" and press **[ENTER]**).

- Press **[ANGLE/PAGE]** to skip 8 lines at a time.

Clearing the whole program

Select "Clear all" and press **[ENTER]**. The whole program is also cleared when the unit is turned off or the disc tray is opened.

To exit the program mode

Press **[PLAY MODE]** while stopped.

Random play

DVD-V VCD CD WMA MP3

- 1 While stopped, press **[PLAY MODE]** twice.
- 2 (**DVD-V** only)
Press the numbered buttons to select a title.
- 3 Press **[▶]** (**PLAY**).



To exit the random mode

Press **[PLAY MODE]** while stopped.

Angle/Picture rotation

DVD-V (with multiple angles)

Press **[ANGLE/PAGE]** to select the angle.

JPEG

- 1 Press **[ANGLE/PAGE]**.
- 2 Press **[▲ ▼]** to select "Rotate right" or "Rotate left" and press **[ENTER]**.
• Press **[ANGLE/PAGE]** again to clear the popup screen.

Repeat play

(Only when the elapsed play time can be displayed)

Press **[REPEAT]** to select an item to be repeated.



DVD-V

VCD CD

Chapter, Title, All* or Off Track, All or Off

WMA MP3

JPEG

Track, Group, All* or Off Group or Off

*During program and random play


- Select "All" to repeat all the items you selected in program play (→ left) or random play (→ above).

Using navigation menus




- 1** TOP MENU
Shows navigation menu.
- 2** Select the item.
- 3** ENTER
Press to enter.
- 4** TOP MENU
Press to exit.

e.g. **WMA** **MP3**

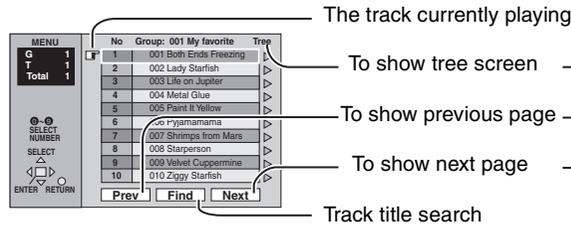

e.g. **JPEG**

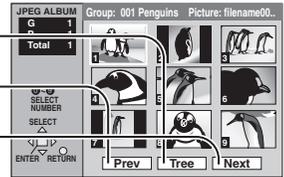


Search methods (while the navigation menu is displayed)

Using the tree screen

WMA **MP3** **JPEG**

- 1** **WMA** **MP3**
Press [▶].
JPEG
Press [▲ ▼ ◀ ▶] to select "Tree" and press [ENTER].
- 2** Press [▲ ▼ ◀ ▶] to select a group and press [ENTER].
The navigation menu for the group appears.

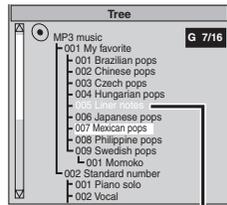

Indicates this group includes no compatible files.

Using a track title

WMA **MP3**

e.g. Finding a title including "LOVE"

- 1** Press [▲ ▼] to select "Find" and press [ENTER].
- 2** Press [▲ ▼] to select "L" and press [ENTER].
Repeat this step to enter "O", "V" and "E".
 - Lower case is also searched.
 - Press [◀▶] to skip between A, E, I, O and U.
 - Press [←] to erase a character.
 - Erase the asterisk (*) to search for the titles starting with that word.
- 3** Press [▶] to select "Find" and press [ENTER].
The search result screen appears.
- 4** Press [▲ ▼] to select the track and press [ENTER].



To return to the menu

Press [RETURN].

Tips for making WMA/MP3 and JPEG discs

- Discs must conform to ISO9660 level 1 or 2 (except for extended formats).
- This unit is compatible with multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.

Naming folders and files

At the time of recording, prefix folder and file names with 3-digit numbers in the order you want to play them (this may not work at times).


Files must have the extension:

“.WMA” or “.wma”

“.MP3” or “.mp3”

“.JPG”, “.jpg”, “.JPEG” or “.jpeg”

e.g. **MP3**

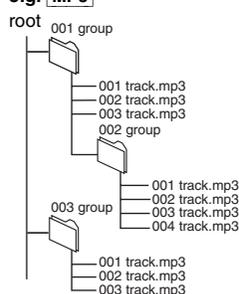

WMA

- You cannot play WMA files that are copy protected.



MP3

- This unit is not compatible with ID3 tags.

JPEG

- To view JPEG files on this unit:
 - Take them on a digital camera that meets the DCF Standard (Design rule for Camera File system) Version 1.0. Some digital cameras have functions that are not supported by the DCF Standard Version 1.0 like automatic picture rotation which may render a picture un-viewable.
 - Do not alter the files in any way or save them under a different name.
- This unit cannot display moving pictures, MOTION JPEG and other such formats, still pictures other than JPEG (e.g. TIFF) or play associated sound.

To get disc information or to play from a specified item

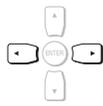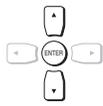- | | | | | |
|--|---|---|---|---|
| 1  Press once. | 2  Select the icon. | 3   Make the settings. | 4  Press if the setting doesn't change. | 5  Press to exit. |
|--|---|---|---|---|



To see the current playback item
To start from a specific item



DVD-V (Karaoke discs)
To turn on/off vocal



WMA **MP3**
Displays the current bitrate or sampling frequency



DVD-V **VCD** **CD** **WMA** **MP3**
To see the current playback location
DVD-V
To start from a specific time



VCD
To change the audio channel



WMA **MP3** **JPEG**
To see the current playback item in disc
To start from a specific item on the disc



VCD
Indicates whether playback control is on or off



DVD-V
To change the soundtrack/subtitle/angle



JPEG
To turn on/off slideshow
To change the slideshow timing (0-30 sec)



WMA **MP3** **JPEG**
To turn on/off information screen



To change the position of the icons

To see the playback position

- | | | |
|---|--|---|
| 1  Press twice. | 2  Change the playback time display. | 3  Press to exit. |
|---|--|---|

DVD-V **VCD** **CD** **WMA** **MP3**
Current position

To see the current playback item



DVD-V **VCD** **CD** **WMA** **MP3**
To see the current playback position

Condition – play, pause, or slow/search


To change unit setting

1




Press three times.

2

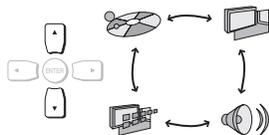


Select the menu.

3

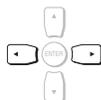

Select the icon.

4

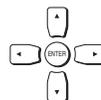

Operate.

5



Press to exit.



Play menu—Change play sequence



DVD-V **VCD** **CD** **WMA** **MP3**

To repeat a specified section (A-B repeat)
Press [ENTER] at the starting and ending points. Press [ENTER] again to cancel.



DVD-V **VCD** **CD** **WMA** **MP3** **JPEG**

To repeat an item (→ page 8, Repeat play)



Displays the play mode setting

---: Normal play PGM: Program play
RND: Random play

To mark a position to play again (Marker)

Press [ENTER] to highlight the first asterisk and press [ENTER] again to mark a position. You can mark up to 5 positions.

1 2 3 * *

To mark another position: [◀▶] → [ENTER]
To recall a marker: [◀▶] → [ENTER]
To erase a marker: [◀▶] → [CANCEL]



Display menu—Change screen appearance

To fit 4:3 image to a 16:9 aspect television (4:3 Aspect)



Normal: Stretches images laterally

Auto: Expands letterbox images to fill the screen and put the other images in the center

Shrink: Puts images in the center

Zoom: Expands images to fill the screen



To expand the picture to fill the screen (→ page 6, Zoom)



To change the subtitle position and brightness (→ page 6, Subtitle)



To adjust the brightness of the on-screen displays (-3 to +3)



Picture menu—Change picture quality



To select the preset picture quality (→ page 6, Picture Mode)



To switch between Progressive (480P) and Interlace (480I) video

To select according to the type of material (film or video) for progressive output



Auto 1: For viewing film material

Auto 2: For viewing film material including 30-frame-per-second progressive video

Video: For viewing video material



Audio menu—Change sound effect



To enjoy virtual surround with television's speakers (→ page 6, Advanced Surround)



DVD-V (Dolby Digital, DTS, MPEG, 3-channel or over, with the dialogue recorded in the center channel)

To make the dialogue in movies easier to hear (Dialogue Enhancer)





To change the position of the icons

To enjoy progressive video

1. Connect to the component video input terminals on a 480P compatible television.
2. In SETUP menu, set "Progressive Out (Component)" to "Enable" (→ page 12).
3. Select "480P" (→ above, Picture menu).
 - Video will not be displayed correctly if connected to an incompatible television.
 - All Panasonic televisions that have 480P input connectors are compatible. Consult the manufacturer if you have another brand of television.

Changing the player settings

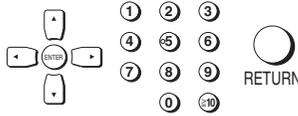- 1**  Shows SETUP menu.
- 2**  Select the tab.
- 3**  Select the item.
- 4**  Press to enter
- 5**  Make the settings.
- 6**  Press to exit.

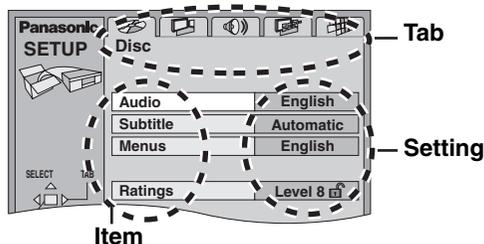

- The settings remain intact even if you switch the unit to standby.
- Underlined items are the factory preset.

The QUICK SETUP enables successive settings of the items in the shaded area.



“Disc” tab — To choose the language and to set a ratings level

| | |
|--|---|
| Audio Choose the audio language. | <ul style="list-style-type: none"> • <u>English</u> • (Language options)^{*1} • Original^{*2} • Other*^{*^{*^{*^{*^{*³}}}}} |
| Subtitle Choose the subtitle language. | <ul style="list-style-type: none"> • <u>Automatic</u>^{*4} • English • (Language options)^{*1} • Other*^{*^{*^{*^{*^{*³}}}}} |
| Menus Choose the language for disc menus. | <ul style="list-style-type: none"> • <u>English</u> • (Language options)^{*1} • Other*^{*^{*^{*^{*^{*³}}}}} |
| Ratings Set a ratings level to limit DVD-Video play. • The password screen is shown if you choose levels 0 to 7 or if you choose “Ratings” when levels 0–7 have been selected. Follow the on-screen instructions. | <p>Setting ratings (When level 8 is selected)</p> <ul style="list-style-type: none"> • <u>8 No Limit</u> • 1 to 7 • 0 Lock All: To prevent play of discs without ratings levels. <p>Changing ratings (When level 0–7 is selected)</p> <ul style="list-style-type: none"> • Unlock Player • Change Password • Change Level • Temporary Unlock |



“Video” tab — To enable progressive output or to make settings to suit your television

| | | |
|--|--|---|
| TV Aspect Choose the setting to suit your television and preference. | <ul style="list-style-type: none"> • 4:3 Pan&Scan: Regular aspect television (4:3) The sides of the widescreen picture are cut off so it fills the screen (unless prohibited by the disc). • 4:3 Letterbox: Regular aspect television (4:3) Widescreen picture is shown in the letterbox style. • 16:9: Widescreen television (16:9) |   |
| Progressive Out (Component) Choose “Enable” to enable progressive output. | <ul style="list-style-type: none"> • Disable: Interlace output • Enable or • Enable (NTSC Disc Only): Progressive output | |
| Still Mode Specify the type of picture shown when paused. | <ul style="list-style-type: none"> • Automatic • Field: The picture is not blurred, but picture quality is lower. (Two fields appear alternately to make up one frame.) • Frame: Overall quality is high, but the picture may appear blurred. (Frame is a unit of moving pictures.) | |
| Black Level Control ^{*5} Change the black level of the picture if you connected a television through the COMPONENT VIDEO OUT terminals. | <ul style="list-style-type: none"> • Lighter: When connected through VIDEO OUT • Darker: When connected through COMPONENT VIDEO OUT | |
| NTSC Disc Output ^{*6*7} Choose PAL 60 or NTSC output when playing NTSC discs (→ page 3, Video systems). | <ul style="list-style-type: none"> • PAL60: When connected to a PAL television • NTSC: When connected to an NTSC television (For Asia: “NTSC” is the factory preset.) | |

“Audio” tab — To make settings to suit your digital connection and other audio settings

PCM Down Conversion

Select how to output audio with a sampling frequency of 96 kHz.

- **No:** Signals are output as 96 kHz. (Choose when the connected equipment can process signals with sampling frequency of 96 kHz.)
- **Yes:** Signals are converted to 48 kHz. (Choose when the connected equipment cannot process signals with sampling frequency of 96 kHz.)

Signals are converted to 48 kHz despite the above settings if the signals have a sampling frequency of over 96 kHz, or the disc has copy protection.

Dolby Digital

- **Bitstream** ● PCM

DTS Digital Surround

- **PCM** ● Bitstream

Select “**Bitstream**” when the equipment can decode the bitstream (digital form of multi-channel data). Otherwise, select “**PCM**”.

Note

If the bitstream is output to the equipment without a decoder, high levels of noise can be output and may damage your speakers and hearing.

MPEG^{#7}

- **PCM** ● Bitstream

Dynamic Range Compression

- **Off**
- **On:** Adjusts for clarity even when the volume is low through compressing the range of the lowest sound level and the highest sound level. Convenient for late night viewing. (Only works with Dolby Digital)

Audio during Search

Choose whether to have sound during search.

- **On**
- **Off:** No sound during search.



“Display” tab — To choose the on-screen message language or to turn them off

Menu Language

Choose the language for these menus and the on-screen messages.

- ^{#5} ● **English** ● Français ● Español

- ^{#6} ● **English** ● 中文

- ^{#7} ● **English** ● Français ● Deutsch ● Italiano ● Español ● Português ● Svenska ● Nederlands

On-Screen Messages

Choose whether to show on-screen messages or not.

- **On** ● Off

FL Dimmer

Changes the brightness of the unit's display.

- **Bright** ● Dim
- **Auto:** The display is dimmed during play, but brightens when you perform operations such as slow-motion, search, and pause.



“Others” tab — To select either still picture data or audio data when playing discs including both data and other settings

Auto Power Off

- **On:** The unit switches to standby mode after about 30 minutes in the stop mode, irrespective of the SLEEP setting.
- **Off**

Mixed Disc – Audio & Stills

Select the type of file played on discs containing both JPEG and WMA/MP3.

- **Audio (MP3/WMA)**
- Stills (JPEG)

Demo

- **Off**
- **On:** A demonstration of the on-screen displays starts. Press any button to stop it.

QUICK SETUP

Answer questions to make basic settings (→ page 4).

- Yes ● **No**

^{#1} Language options

U.S.A. and Canada : French and Spanish

Asia : Chinese

The Middle East, South Africa, Russia, Australia and N.Z. :

French, German, Italian, Spanish, Portuguese, Swedish and Dutch

^{#2} The original language designed on the disc is selected.

^{#3} Input a code number referring to the table on page 15.

^{#4} If the language selected for “Audio” is not available, subtitle appear in that language (If available on the disc).


^{#5} **U.S.A. and Canada**

^{#6} **Asia**

^{#7} **The Middle East, South Africa, Russia, Australia and N.Z.**


■ To enjoy multi-channel surround sound (Digital connection)

Amplifier with a built-in decoder or a decoder-amplifier combination

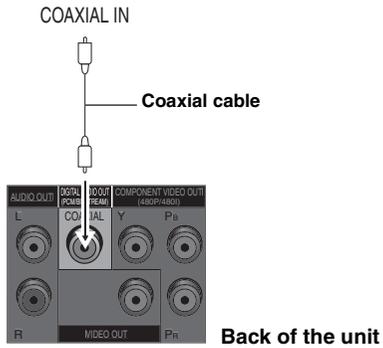

■ To enjoy stereo sound or Dolby Pro Logic (Analog connection)

Amplifier or system component

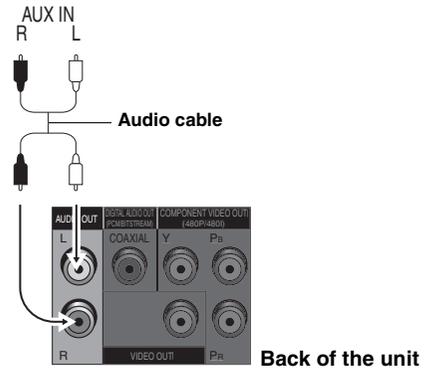

When you use digital connection

Change “PCM Down Conversion”, “Dolby Digital”, “DTS Digital Surround” and “MPEG*” in the SETUP menu (→ page 13).

*MPEG: **The Middle East, South Africa, Russia, Australia and N.Z.**

Specifications

Signal system:

U.S.A. and Canada NTSC

Other areas PAL 625/50, PAL525/60, NTSC

Operating temperature range: +5 to +35 °C (+41 to +95 °F)

Operating humidity range: 5 to 90 % RH (no condensation)

Discs played [8 cm (3 ") or 12 cm (5 ")]:

- (1) DVD-Video
- (2) DVD-R (DVD-Video compatible)
- (3) CD-Audio (CD-DA)
- (4) Video CD
- (5) CD-R/CD-RW
(CD-DA, Video-CD, MP3, WMA, JPEG formatted discs)
- (6) MP3/WMA
 - Maximum number of tracks and groups recognizable:
999 tracks and 99 groups
 - Compatible compression rate:
 - MP3: between 32 kbps and 320 kbps
 - WMA: between 48 kbps and 320 kbps
- (7) JPEG
 - Exif Ver 2.1 JPEG Baseline files
 - Maximum number of pictures and groups recognizable:
3000 pictures and 300 groups
 - Picture resolution:
between 320×240 and 6144×4096 pixels
(sub sampling is 4:2:2 or 4:2:0)

Video output:

- Output level: 1 Vp-p (75 Ω)
- Output connector: Pin jack
- Number of connectors: 1 system

Component video output:

U.S.A. and Canada (480P/480I)

Other areas (NTSC: 480P/480I, PAL: 576I)

- Y output level: 1 Vp-p (75 Ω)
- P_B output level: 0.7 Vp-p (75 Ω)
- P_R output level: 0.7 Vp-p (75 Ω)
- Output connector: Pin jack (Y: green, P_B: blue, P_R: red)
- Number of connectors: 1 system

Audio output:

- Output level: 2 Vrms (1 kHz, 0 dB)
- Output connector: Pin jack
- Number of connectors: 2 channel: 1 system

Audio performance:

- (1) Frequency response:
 - DVD (linear audio): 4 Hz–22 kHz (48 kHz sampling)
4 Hz–44 kHz (96 kHz sampling)
 - CD audio: 4 Hz–20 kHz
- (2) S/N ratio:
 - CD audio: 115 dB
- (3) Dynamic range:
 - DVD (linear audio):
 - U.S.A. and Canada** 100 dB
 - Other areas** 102 dB
 - CD audio: 98 dB
- (4) Total harmonic distortion:
 - CD audio: 0.0025 %

Digital audio output:

Coaxial digital output: Pin jack

Pickup:

Wave length: 658 nm/790 nm

Laser power:

U.S.A. and Canada CLASS IIa/CLASS I

Other areas CLASS 2/CLASS 1

Power supply:

U.S.A. and Canada AC 120 V, 60 Hz

Russia, Australia and N.Z. AC 220–240 V, 50 Hz

Other areas AC 220–240 V, 50/60 Hz

Power consumption:

U.S.A. and Canada 10 W

Other areas 12 W

Dimensions:

430 (W)×226 (D)×68 (H) mm

[16 ¹⁵/₁₆" (W)×8 ¹⁴/₁₆" (D)×2 ¹¹/₁₆" (H)]

approx. 2.0 kg (4.4 lb.)

Mass:

Power consumption in standby mode:

U.S.A. and Canada 1 W

Other areas 2 W

Note

Specifications are subject to change without notice. Mass and dimensions are approximate.

Maintenance

Clean this unit with a soft, dry cloth.

- Never use alcohol, paint thinner or benzine to clean this unit.

Language code list

| | | | | | |
|-----------------------|-------------------|------------------------|----------------------|----------------------|------------------|
| Abkhazian: 6566 | Chinese: 9072 | Hausa: 7265 | Lithuanian: 7684 | Romanian: 8279 | Telugu: 8469 |
| Afar: 6565 | Corsican: 6779 | Hebrew: 7387 | Macedonian: 7775 | Russian: 8285 | Thai: 8472 |
| Afrikaans: 6570 | Croatian: 7282 | Hindi: 7273 | Malagasy: 7771 | Samoa: 8377 | Tibetan: 6679 |
| Albanian: 8381 | Czech: 6783 | Hungarian: 7285 | Malay: 7783 | Sanskrit: 8365 | Tigrinya: 8473 |
| Ameharic: 6577 | Danish: 6865 | Icelandic: 7383 | Malayalam: 7776 | Scots Gaelic: 7168 | Tonga: 8479 |
| Arabic: 6582 | Dutch: 7876 | Indonesian: 7378 | Maltese: 7784 | Serbian: 8382 | Turkish: 8482 |
| Armenian: 7289 | English: 6978 | Interlingua: 7365 | Maori: 7773 | Serbo-Croatian: 8372 | Turkmen: 8475 |
| Assamese: 6583 | Esperanto: 6979 | Irish: 7165 | Marathi: 7782 | Shona: 8378 | Twi: 8487 |
| Aymara: 6588 | Estonian: 6984 | Italian: 7384 | Moldavian: 7779 | Sindhi: 8368 | Ukrainian: 8575 |
| Azerbaijani: 6590 | Faroese: 7079 | Japanese: 7465 | Mongolian: 7778 | Singhalese: 8373 | Urdu: 8582 |
| Bashkir: 6665 | Fiji: 7074 | Javanese: 7487 | Nauru: 7865 | Slovak: 8375 | Uzbek: 8590 |
| Basque: 6985 | Finnish: 7073 | Kannada: 7578 | Nepali: 7869 | Slovenian: 8376 | Vietnamese: 8673 |
| Bengali, Bangla: 6678 | French: 7082 | Kashmiri: 7583 | Norwegian: 7879 | Somali: 8379 | Volapük: 8679 |
| Bhutani: 6890 | Frisian: 7089 | Kazakh: 7575 | Oriya: 7982 | Spanish: 6983 | Welsh: 6789 |
| Bihari: 6672 | Galician: 7176 | Kirghiz: 7589 | Pashto, Pushto: 8083 | Sundanese: 8385 | Wolof: 8779 |
| Breton: 6682 | Georgian: 7565 | Korean: 7579 | Persian: 7065 | Swahili: 8387 | Xhosa: 8872 |
| Bulgarian: 6671 | German: 6869 | Kurdish: 7585 | Polish: 8076 | Swedish: 8386 | Yiddish: 7473 |
| Burmese: 7789 | Greek: 6976 | Laotian: 7679 | Portuguese: 8084 | Tagalog: 8476 | Yoruba: 8979 |
| Byelorussian: 6669 | Greenlandic: 7576 | Latin: 7665 | Punjabi: 8065 | Tajik: 8471 | Zulu: 9085 |
| Cambodian: 7577 | Guarani: 7178 | Latvian, Lettish: 7686 | Quechua: 8185 | Tamil: 8465 | |
| Catalan: 6765 | Gujarati: 7185 | Lingala: 7678 | Rhaeto-Romance: 8277 | Tatar: 8484 | |

Troubleshooting guide

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem, see “Product information” on page 18 for assistance.

| Power | | Page |
|---|---|---------|
| No power. | <ul style="list-style-type: none"> Insert the AC power supply cord securely into the household AC outlet. | 4 |
| The unit is automatically switched to the standby mode. | <ul style="list-style-type: none"> The unit automatically switches to standby after approximately 30 minutes in the stop mode if you set “Auto Power Off” in the SETUP menu. Turn the power back to ON. The Sleep timer functioned. | 13 7 |

No operation

| | | |
|--|--|-------------|
| No response when any buttons pressed. | <ul style="list-style-type: none"> The unit may not be operating properly due to lightning, static electricity or some other external factor. Turn the unit off and then back to ON. Alternatively, turn the unit off, disconnect the AC power supply cord, and then reconnect it. Condensation has formed: Wait 1 to 2 hours for it to evaporate. | – – |
| No response when remote control buttons pressed. | <ul style="list-style-type: none"> Check that the batteries are installed correctly. The batteries are depleted: Replace them with new ones. Point the remote control at the remote control sensor and operate. | 4 4 5 |
| No picture or sound. | <ul style="list-style-type: none"> Check the video or audio connection. Check the power or input setting of the connected equipment. | 4, 14 – |
| You have forgotten your ratings password. Reset all the settings to Factory Preset. | <ul style="list-style-type: none"> While stopped, press and hold [◀◀/▶▶] and [■] on the unit and then also press and hold [▲] on the unit until “Initialized” disappears from the television. Turn the unit off and on again. All settings will return to the default values. | – |

Specific operation impossible or incorrect

| | | |
|---|---|---|
| It takes time before play starts. MP3 | <ul style="list-style-type: none"> When an MP3 track includes still picture data, it may happen. Even after the track starts, the correct play time will not be displayed, but this is normal. | – |
| Programmed items are not played. DVD-V | <ul style="list-style-type: none"> Some items will not be played even if you programmed them. | – |
| A menu screen appears during skip or search. VCD | <ul style="list-style-type: none"> This is normal for Video CDs. | – |

Subtitle

| | | |
|--|--|---|
| Subtitle position is wrong. | <ul style="list-style-type: none"> Adjust the position. | 6 |
| No subtitles. | <ul style="list-style-type: none"> Display the subtitles. | 6 |
| The subtitles overlap closed captions recorded on discs. | <ul style="list-style-type: none"> Clear the subtitles. | 6 |

A-B repeat

| | | |
|---------------------------------------|--|---|
| Point B is automatically determined. | <ul style="list-style-type: none"> The end of an item becomes point B when it is reached. | – |
| A-B repeat is automatically canceled. | <ul style="list-style-type: none"> A-B repeat is canceled when you press [QUICK REPLAY]. | – |

Picture incorrect

| | | |
|---|---|---------------|
| Picture distorted. | <ul style="list-style-type: none"> Ensure that the unit is connected directly to the television, and is not connected through a video cassette recorder. | 4 |
| Picture size doesn't fit the screen. | <ul style="list-style-type: none"> Change “TV Aspect” in the SETUP menu. Use the television to change the aspect. If your television does not have that function, change “4:3 Aspect” in the Display menu. Change the Zoom setting. | 12 11 6 |
| SETUP menus or other screen displayed incorrectly or colors appear faded. | <ul style="list-style-type: none"> The unit and television are using different video systems. The Middle East, South Africa, Russia, Australia and N.Z. Use a multi-system or PAL television. Other areas Use a multi-system or NTSC television. | – |
| Menu not displayed correctly. | <ul style="list-style-type: none"> Restore the zoom ratio to × 1.00. Set the subtitle position to 0. Set “4:3 Aspect” in the Display menu to “Normal”. | 6 6 11 |
| Ghosting or horizontal line streaking. | <ul style="list-style-type: none"> This may be caused as a result of the film or video recording quality, or editing method. You may be able to correct this by selecting “480i” from the picture menu. | 11 |

| Progressive video | | Page |
|-------------------------------------|---|--------|
| Pictures not in progressive output. | <ul style="list-style-type: none"> Select "Enable" in "Progressive Out (Component)" in the SETUP menu. Then, select "480P" in the Picture menu. If the unit is connected to the television through VIDEO OUT, output will be interlace. | 11, 12 |
| Closed captions not displayed. | <ul style="list-style-type: none"> When progressive output is on, closed captions will not be displayed. | 11 |

Sound incorrect

| | | |
|---|--|--------|
| Sound distorted. | <ul style="list-style-type: none"> Turn Advanced Surround off. Noise may occur when playing WMA files. | 6 - |
| Piercing noise comes from the speakers. | <ul style="list-style-type: none"> If you have connected a digital amplifier which does not include decoder, be sure to select "PCM" in "Dolby Digital", "DTS Digital Surround" or "MPEG*" in the SETUP menu. | 13 |
| Effects do not work. | <ul style="list-style-type: none"> Dialogue Enhancer and Advanced Surround do not work when the unit is outputting bitstream signals. Dialogue Enhancer and Advanced Surround do not work or have less effect with some discs. | - - |

Recording

| | | |
|---|---|-------------|
| Cannot record to digital recording equipment. (Incorrect sound recorded.) | <ul style="list-style-type: none"> You cannot record WMA/MP3. You cannot record DVDs that have protection preventing digital recording. You cannot record DVDs if the recording equipment cannot handle signals with a sampling frequency of 48 kHz. | - - - |
| | <ul style="list-style-type: none"> Make the following settings: | |
| | <ul style="list-style-type: none"> - Advanced Surround: OFF | 6 |
| | <ul style="list-style-type: none"> - PCM Down Conversion: Yes | 13 |
| | <ul style="list-style-type: none"> - Dolby Digital/DTS Digital Surround/MPEG*: PCM | 13 |

Unit displays

| | | |
|----------------------------------|--|--------|
| "noPLAy" | <ul style="list-style-type: none"> You inserted a disc the unit cannot play; insert one it can. You inserted a blank disc. | 3 - |
| "U11" | <ul style="list-style-type: none"> Disc is dirty: Wipe it clean. | 3 |
| "U15" | <ul style="list-style-type: none"> You inserted a DVD-R that has not been finalized. | 3 |
| "H□□" □□ stands for a number. | <ul style="list-style-type: none"> Trouble may have occurred. The number following "H" depends on the status of the unit. Turn the unit off and then back to ON. Alternatively, turn the unit off, disconnect the AC power supply cord, and then reconnect it. If the service numbers fail to clear, note the service number and contact a qualified service person. | - - |
| "nodISC" | <ul style="list-style-type: none"> You haven't inserted a disc: Insert one. You haven't inserted the disc correctly: Insert it correctly. | - 5 |

Television displays

| | | |
|--|--|--------|
| "⊘" | <ul style="list-style-type: none"> The operation is prohibited by the unit or disc. | - |
| "Cannot display group xx, picture xx" | <ul style="list-style-type: none"> You are trying to display incompatible pictures. | 9 |
| "The progressive out is set to "Disable"" | <ul style="list-style-type: none"> Select "Enable" in "Progressive Out (Component)" in the SETUP menu. | 12 |
| "This disc may not be played in your region" | <ul style="list-style-type: none"> You can only play DVD-Video if their region number is the same or includes the same region number as the unit or if the DVD-Video is marked "ALL". Confirm the region number for the unit on the rear panel. | Cover |
| No on-screen display. | <ul style="list-style-type: none"> Select "On" in "On-Screen Messages" in the SETUP menu. | 13 |
| On-screen display only partially displayed. | <ul style="list-style-type: none"> Press [DISPLAY], and press [◀▶] to highlight the icon at the right end, then press [▲▼] to adjust the position. | 10, 11 |

*MPEG: The Middle East, South Africa, Russia, Australia and N.Z.

Limited Warranty (ONLY FOR U.S.A.)

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus, New Jersey 07094

Panasonic Sales Company, Division of Matsushita Electric
of Puerto Rico, Inc.,
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park, Carolina, Puerto Rico 00985

Panasonic DVD Player Limited Warranty

Limited Warranty Coverage

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("Limited Warranty period"), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

| Product or Part Name | Parts | Labor |
|--|---------------|------------------|
| DVD Player | One (1) Year | Ninety (90) Days |
| Rechargeable Batteries (in exchange for defective item) | Ten (10) Days | Not Applicable |

During the "Labor" Limited Warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. If non-rechargeable batteries are included, they are not warranted. This Limited Warranty only applies to products purchased and serviced in the United States or Puerto Rico. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of original purchase date is required for Limited Warranty service.

Mail-In Service

For assistance in the continental U.S.A. in obtaining repairs please ship the product to:

**Panasonic Services Company
Customer Servicer
Suite B
4900 George McVay Drive
McAllen, TX 78503**

For assistance in Puerto Rico call Panasonic Sales Company (787)-750-4300 or fax (787)-768-2910.

When shipping the unit carefully pack and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone and/or email address where you can be reached.

Customer Services Directory

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and Customer Service inquiries please visit Web Site:

<http://www.panasonic.com>

You can purchase parts, accessories, locate your nearest servicer and more by visiting our Web Site

or E-mail us via web:

http://www.panasonic.com/consumer_electronics/support/customerfeedback.asp

Contact:

1-800-211-PANA (7262),

Monday-Friday 9 am-9 pm; Saturday-Sunday 10 am-7 pm, EST.

For hearing or speech impaired TTY users,
TTY: 1-877-833-8855

Accessory Purchases

1-800-332-5368 (Customer Orders Only)

1-800-237-9080 (Fax Only)

(Monday-Friday 9 am to 8 pm, EST.) Panasonic Services Company

20421 84th Avenue South, Kent, WA 98032

(Accepts Visa, MasterCard, Discover Card, American Express, and Personal Check)

For hearing or speech impaired TTY users,
TTY: 1-866-605-1277

Service in Puerto Rico

**Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/Factory Servicer:
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787) 750-4300 Fax (787) 768-2910**

F0102NY2043

Product Service

- Damage requiring service**—The unit should be serviced by qualified service personnel if:
 - The AC power supply cord or AC adaptor has been damaged; or
 - Objects or liquids have gotten into the unit; or
 - The unit has been exposed to rain; or
 - The unit does not operate normally or exhibits a marked change in performance; or
 - The unit has been dropped or the cabinet damaged.
- Servicing**—Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.
- Replacement parts**—When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other hazards.
- Safety check**—After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

Product information

For product information or assistance with product operation:


In the U.S.A., contact the Panasonic Customer Call Center at 1-800-211-7262, or e-mail consumerproducts@panasonic.com, or the website (<http://www.panasonic.com>).

In Canada, contact the Panasonic Canada Inc. Customer Care Centre at 1-800-561-5505, or visit the website (www.panasonic.ca), or an authorized Servicer closest to you.


In other areas, consult your dealer.

Conexiones

■ Conexión a un televisor

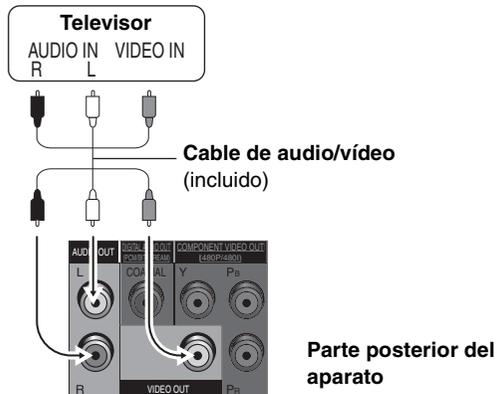

■ Conecte el cable de alimentación de CA el último

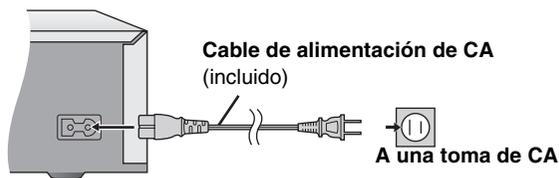

PREPARACIÓN RÁPIDA

Encienda el televisor y seleccione la entrada de vídeo apropiada en el mismo.

- 1 [⏻] Encienda.
- 2 [SETUP] Muestra la pantalla QUICK SETUP.
- 3 [▲ ▼ ◀ ▶] Pulse [▲ ▼] para seleccionar "Español" y pulse [ENTER]. Siga el mensaje y haga los ajustes.
- 4 [ENTER] Pulse para terminar PREPARACIÓN RÁPIDA.
- 5 [SETUP] Pulse para salir.

Reproducción básica

- 1 [⏻] Encienda.
- 2 [▶] Abra la bandeja del disco.
- 3 Introduzca el disco.
- 4 [▶] (PLAY) Inicie la reproducción.



Parada [■]

La posición se memoriza cuando "▷" parpadea en el visualizador.

- Pulse [▶] (PLAY) para proseguir.
- Pulse [■] para borrar la posición.

Pausa [||]

- Pulse [▶] (PLAY) para iniciar la reproducción.

Salto [◀▶]

(Salto de grupo [JPEG] [▲ ▼])

Búsqueda

(durante la reproducción)
[◀▶▶▶]

- Hasta 5 pasos
- Pulse [▶] (PLAY) para iniciar la reproducción.

Cámara lenta

(durante la pausa)
[◀▶▶▶]

- **VCD** Cámara lenta, sentido de avance solamente

Cuadro a cuadro

(durante la pausa)
[◀▶]

- **VCD** Sentido de avance solamente

Selección de elemento en pantalla

[▲ ▼ ◀ ▶]
[ENTER]

Introduzca número

Botones numerados

DVD-V **VCD** **CD**
Ej.: Para seleccionar 12:
[≥10] → [1] → [2]

WMA **MP3** **JPEG**
Ej.: Para seleccionar 123:
[1] → [2] → [3] → [ENTER]

Menú de disco

- [TOP MENU] **DVD-V** Muestra un menú inicial de disco
- [MENU] **DVD-V** Muestra un menú de disco
- [RETURN] **VCD** Muestra un menú inicial de disco

Vuelta a la pantalla anterior

[RETURN]

Visualizador del aparato principal

[FL SELECT]

Visualización de números
↑ ↓
Visualización de tiempo

| | | |
|------------------|--|-----------------------|
| CAUTION | - LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. | FDA 21 CFR / Class II |
| CAUTION | - VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. | IEC60825-1 / Class 3b |
| ATTENTION | - RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU. | |
| ADVARSEL | - SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSTTELSE FOR STRÅLING. | |
| VARO! | - AVATTAESSA OLET ALLTIINA NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN. | |
| VARNING | - SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRakta EJ STRÅLEN. | |
| ADVARSEL | - SYNLIG OG USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN. | |
| VORSICHT | - SICHTBARE UND UNSICHTBARE LASERSTRALUNG, WENN ABDECKUNG GEÖFFNET, NICHT DEM STRAHL AUSSETZEN. | |
| 注意 | - 打开时有可见及不可见激光辐射。避免激光束照射。 | |
| 注意 | - ここを開くと可視及び不可視レーザー光が出ます。 ビームをまたり、触れつけないでください。 | RQLCA0141 |

(Inside of product)



The laser product label has not been attached to products for the U.S.A. and Canada.

Units for the Middle East, South Africa and Asia
THIS UNIT IS INTENDED FOR USE IN TROPICAL CLIMATES.

Units for Australia, N.Z. and Russia
THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

Except for U.S.A. and Canada

The socket outlet shall be installed near the equipment and easily accessible or the mains plug or an appliance coupler shall remain readily operable.



This manual was printed with soy based ink.

For U.S.A.



As an ENERGY STAR® Partner, Panasonic has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

The model number and serial number of this product can be found on either the back or the bottom of the unit. Please note them in the space provided below and keep for future reference.

MODEL NUMBER _____
SERIAL NUMBER _____

User memo:

DATE OF PURCHASE _____
DEALER NAME _____
DEALER ADDRESS _____
TELEPHONE NUMBER _____

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



WMA is a compression format developed by Microsoft Corporation. It achieves the same sound quality as MP3 with a file size that is smaller than that of MP3.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942, 5,956,674, 5,974,380, 5,978,762 and other world-wide patents issued and pending. "DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. All rights reserved.

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, and 4,819,098, licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

For U.S.A.

Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus, New Jersey 07094
<http://www.panasonic.com>

For Canada

Panasonic Canada Inc.
5770 Ambler Drive
Mississauga, Ontario
L4W 2T3
www.panasonic.ca

For others

Matsushita Electric Industrial Co., Ltd.
Web Site: <http://www.panasonic.co.jp/global/>



Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc. ("PSC")
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park, Carolina, Puerto Rico 00985