



Operating Instructions

DVD/CD PLAYER

Model No. **DVD-S52**

Dear customer

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully. Before connecting, operating or adjusting this product, please read the instructions completely. Please keep this manual for future reference.



Region number

The player plays DVD-Video marked with labels containing the region number or "ALL".

| Region | Number |
|---|--------|
| The United Kingdom and Continental Europe | 2 |
| Asia | 3 |
| Australia and N.Z. | 4 |

Example:

The United Kingdom and Continental Europe



Unless otherwise indicated, illustrations in these operating instructions are of the models for the United Kingdom and Continental Europe.

Note

"EB" on the packaging indicates the United Kingdom.

EB E GN GCS GCU

Panasonic®

Table of contents

Getting started

| | |
|---------------------------------------|----------|
| Caution for AC Mains Lead/Accessories | 3 |
| Discs that can be played | 4 |
| STEP 1 Connection | 6 |
| STEP 2 The remote control | 8 |
| STEP 3 QUICK SETUP | 8 |

Operations

| | |
|--|-----------|
| Basic play | 9 |
| Changing the play sequence | 10 |
| All group/Program/Random play | 10 |
| Convenient functions | 11 |
| Displaying current playback condition (Quick OSD)/ | |
| Reviewing titles/programs to play (Advanced Disc Review)/ | |
| Recalling recommended audio/video setting (AV Enhancer)/ | |
| Controlling louder portions of audio (Night Sound Mode)/ | |
| Enjoying heavy bass with the speakers (H.Bass) | 11 |
| Enjoying virtual surround (Advanced Surround)/ | |
| Reproducing more natural audio (Multi Re-master)/ | |
| Repeat play/Quick replay/Skipping 30 seconds forward/ | |
| Changing play speed | 12 |
| Changing subtitles/Changing soundtracks/Starting play from a selected group/ | |
| Zoom/Angle select/Still picture rotation/advance | 13 |

| | |
|--|-----------|
| Using navigation menus | 14 |
| Playing programs/playlists/Playing CD/Playing HighMAT™ discs | 14 |
| Playing data discs | 15 |
| About DivX VOD content | 16 |
| Using On-Screen Menus | 17 |
| Main menus/Other Settings | 17 |
| Changing the player settings | 20 |
| Changing the speaker setting to suit your speakers | 22 |

Reference

| | |
|------------------------------------|-------------------|
| Troubleshooting guide | 23 |
| Maintenance | 25 |
| Specifications | 26 |
| Glossary/Safety precautions | 27 |
| Index | Back cover |

Getting started

Operations

Reference

RQT8519-B

CAUTION!

THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

CAUTION!

- DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
- DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
- DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
- DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

The socket outlet shall be installed near the equipment and easily accessible or the mains plug or an appliance coupler shall remain readily operable.

Asia

THIS UNIT IS INTENDED FOR USE IN TROPICAL CLIMATES.

The United Kingdom, Continental Europe, Australia and N.Z.

THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

SUOMI**VAROITUS!**

LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTA AALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE.

VAROITUS:

TULIPALO- SÄHKÖISKUVAARAN TAI TUOTETTA KOHTAAVAN MUUN VAHINGON VÄHENTÄMISEKSI EI LAITETTA SAA ALTISTAA SATEELLE, KOSTEUEDELLE, VESIPISAROILLE TAI ROISKEELLE, EIKÄ NESTETTÄ SISÄLTÄVIÄ ESINEITÄ, KUTEN ESIMERKIKSI MALJAKOITA, SAA ASETTAA LAITTEEN PÄÄLLE.

VAROITUS!

- ÄLÄ ASENNATA TAI LAITETA TÄTÄ LAITETTA KABINETTITYYPPISEEN KIRJAKAAPPIIN TAI MUUHUN SULJETTUUN TILAAN, JOTTA TUULETUS ONNISTUISI. VARMISTA, ETTÄ VERHO TAI MIKÄÄN MUU MATERIAALI EI HUONONNA TUULETUSTA, JOTTA VÄLTETTÄISIIN YLIKUUMENEMISESTA JOHTUVA SÄHKÖISKU- TAI TULIPALOVAARA.
- ÄLÄ PEITÄ LAITTEEN TUULETUSAUKKOJA SANOMALEHDELLÄ, PÖYTÄLINALLA, VERHOLLA TAI MUULLA VASTAAVALLA ESINEELLÄ.
- ÄLÄ ASETA PALAVAA KYNTTILÄÄ TAI MUUTA AVOTULEN LÄHDETTÄ LAITTEEN PÄÄLLE.
- HÄVITÄ PARISTOT LUONTOA VAHINGOITTAMATTOMALLA TAVALLA.

TÄMÄ LAITE ON TARKOITETTU KÄYTETTÄVÄKSI LEUDOSSA ILMASTOSSA.

Laite tulee asettaa lähelle verkkopistorasiaa ja pistokkeen täytyy olla sellaisessa asennossa, että siihen on helppo tarttua ongelman sattuessa.

NORSK**ADVARSEL!**

DETTE PRODUKTET ANVENDER EN LASER. BETJENING AV KONTROLLER, JUSTERINGER ELLER ANDRE INNGREP ENN DE SOM ER BESKREVET I DENNE BRUKSANVISNING, KAN FØRE TIL FARLIG BESTRÅLING. DEKSLER MÅ IKKE ÅPNES, OG FORSØK ALDRI Å REPARERE APPARATET PÅ EGENHÅND. ALT SERVICE OG REPARASJONSARBEID MÅ UTFØRES AV KVALIFISERT PERSONELL.

ADVARSEL:

FOR Å REDUSERE FAREN FOR BRANN, ELEKTRISK STØT ELLER SKADER PÅ PRODUKTET, MÅ DETTE APPARATET IKKE UTSETTES FOR REGN, FUKTIGHET, VANNDRÅPER ELLER VANNSPRUT. DET MÅ HELLER IKKE PLOSSERES GJENSTANDER FYLT MED VANN, SLIK SOM BLOMSTERVASER, OPPÅ APPARATET.

ADVARSEL!

- APPARATET MÅ IKKE PLOSSERES I EN BOKHYLLE, ET INNEBYGGET KABINETT ELLER ET ANNET LUKKET STED HVOR VENTILASJONSFORHOLDENE ER UTILSTREKKELIGE. SØRG FOR AT GARDINER ELLER LIGNENDE IKKE FORVERRER VENTILASJONSFORHOLDENE, SÅ RISIKO FOR ELEKTRISK SJOKK ELLER BRANN FORÅRSAKET AV OVERHETING UNNGÅS.
- APPARATETS VENTILASJONSÅPNINGER MÅ IKKE DEKKES TIL MED AVISER, BORDDUKER, GARDINER OG LIGNENDE.
- PLOSSER IKKE ÅPEN ILD, SLIK SOM LEVENDE LYS, OPPÅ APPARATET.
- BRUKTE BATTERIER MÅ KASSERES UTEN FARE FOR MILJØET.

DETTE APPARATET ER BEREGNET TIL BRUK UNDER MODERATE KLIMAFORHOLD.

Utstyret bør plasseres i nærheten av AC-stikkkontakten, og støpslet må være lett tilgjengelig hvis det skulle oppstå problemer.

Caution for AC Mains Lead

(For United Kingdom)

("EB" area code model only)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as stated below.

If in any doubt please consult a qualified electrician.

IMPORTANT


The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

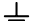WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  OR COLOURED GREEN OR GREEN/YELLOW.

THIS PLUG IS NOT WATERPROOF—KEEP DRY.

Before use


Remove the connector cover.

How to replace the fuse


The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

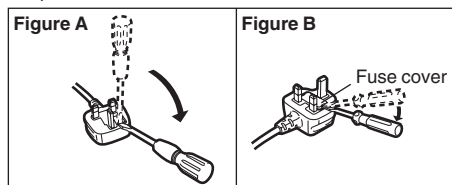

2. Replace the fuse and close or attach the fuse cover.

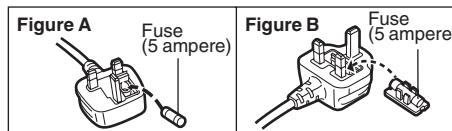

Accessories



Use numbers when asking for replacement parts.
(Product numbers correct as of March 2006. These may be subject to change.)

- | | | | |
|--------------------------|---|------------------------------------|----------------|
| <input type="checkbox"/> | 1 | Remote control | (EUR7631200R) |
| <input type="checkbox"/> | 2 | Remote control batteries | |
| <input type="checkbox"/> | 1 | Audio/video cable | (K2KA6BA00004) |
| <input type="checkbox"/> | 1 | AC mains lead | |
| | | The United Kingdom | (K2CT3CA00004) |
| | | Continental Europe and Asia | (K2CQ2CA00006) |
| | | Australia and N.Z. | (K2CJ2DA00008) |

Note

For use with this unit only. Do not use it with other equipment. Also, do not use cords for other equipment with this unit.

The United Kingdom and Republic of Ireland

■ Sales and Support Information

Customer Care Centre

- For customers within the UK: 08705 357357
- For customers within the Republic of Ireland: 01 289 8333
- Visit our website for product information
E-mail: customer.care@panasonic.co.uk

Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday-Thursday 9:00am–5:30pm, Friday 9:30am–5:30pm (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at www.panasonic.co.uk
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.





Interested in purchasing an extended guarantee?
Please call 0870 240 6284 or visit our website
www.panasonic.co.uk/guarantee.

Caution for AC Mains Lead/Accessories

RQ178519

Discs that can be played

Commercial discs

| Disc Logo | Indicated in these instructions by | Remarks |
|---|------------------------------------|--|
|  | DVD-V | High quality movie and music discs |
|  | DVD-A | High fidelity music discs ^{#1} |
|  | VCD | Music discs with video Including SVCD (Conforming to IEC62107) |
|  | CD | Music discs ^{#2} |




^{#1}Some DVD-Audio discs contain DVD-Video content. To play DVD-Video content, select "Play as DVD-Video" (→ page 19, Other Menu).

^{#2}This unit is compatible with HDCD (→ page 27, Glossary), but does not support the Peak Extend function (a function which expands the dynamic range of high level signals). (During HDCD play, "HDCD" lights on the unit's display.)

Regarding DVD-Audio

Some multi-channel DVD-Audio will prevent down-mixing (→ page 27, Glossary) of all or part of their contents if this is the manufacturer's intention. When playing such discs, or such parts of the disc, unless the number of connected speakers is the same as the disc's channel specification, audio will not be output properly (e.g. part of the audio is missing, multi-channel audio cannot be selected and audio is played in two channels). Refer to the disc's jacket for more information.

Recorded discs (√: Available, X: Not available)

| Disc Logo | Recorded on a DVD recorder, etc. | | Recorded on a personal computer, etc. | | | | | Finalizing ^{#6} |
|---|----------------------------------|---------------------|---------------------------------------|-----|------|-------|------|--------------------------|
| | DVD-VR ^{#2} | DVD-V ^{#4} | WMA | MP3 | JPEG | MPEG4 | DivX | |
|  | √ | — | X | √ | √ | √ | √ | Not necessary |
|  | √ | √ | X | √ | √ | √ | √ | Necessary |
|  | √ ^{#3} | √ | X | X | X | X | X | Necessary |
| +R/+RW — | X | (√) ^{#5} | X | X | X | X | X | Necessary |
| +R DL — | X | (√) ^{#5} | X | X | X | X | X | Necessary |
| CD-R/RW^{#1} — | — | — | √ | √ | √ | √ | √ | Necessary ^{#7} |

• It may not be possible to play the above discs in all cases due to the type of discs, the condition of the recording, the recording method and how the files were created (→ page 5, Tips for making data discs).

^{#1} This unit can play CD-R/RW recorded with CD-DA or Video CD format.

WMA MP3 JPEG This unit also plays HighMAT discs.

^{#2} Discs recorded on DVD recorders or DVD video cameras, etc. using Version 1.1 of the Video Recording Format (a unified video recording standard).

^{#3} Discs recorded on DVD recorders or DVD video cameras using Version 1.2 of the Video Recording Format (a unified video recording standard).

^{#4} Discs recorded on DVD recorders or DVD video cameras using DVD-Video Format.

^{#5} Recorded using a format different from DVD-Video Format, therefore some functions cannot be used.

^{#6} A process that allows play on compatible equipment. To play a disc that is displayed as "Necessary" on this unit, the disc must first be finalized on the device it was recorded on.

^{#7} Closing the session will also work.

■ Tips for making data discs

| Format | Disc | Extension | Reference |
|--------------|--------------------------------|--|--|
| WMA | CD-R/RW | “.WMA” “.wma” | <ul style="list-style-type: none"> Compatible compression rate: between 48 kbps and 320 kbps You cannot play WMA files that are copy protected. This unit is not compatible with Multiple Bit Rate (MBR: a file that contains the same content encoded at several different bit rates). |
| MP3 | DVD-RAM DVD-R/RW CD-R/RW | “.MP3” “.mp3” | <ul style="list-style-type: none"> Sampling frequency: DVD-RAM, DVD-R/RW: 11.02, 12, 22.05, 24, 44.1 and 48 kHz CD-R/RW: 8, 11.02, 12, 16, 22.05, 24, 32, 44.1 and 48 kHz Compatible compression rate: between 32 kbps and 320 kbps This unit is not compatible with ID3 tags. |
| JPEG | DVD-RAM DVD-R/RW CD-R/RW | “.JPG” “.jpg” “.JPEG” “.jpeg” | <ul style="list-style-type: none"> JPEG files taken on a digital camera that conform to DCF Standard Version 1.0 are displayed. <ul style="list-style-type: none"> Files that have been altered, edited or saved with computer picture editing software may not be displayed. This unit cannot display moving pictures, MOTION JPEG and other such formats, still pictures other than JPEG (e.g. TIFF) or play pictures with attached audio. |
| MPEG4 | DVD-RAM DVD-R/RW CD-R/RW | “.ASF” “.asf” | <ul style="list-style-type: none"> You can play MPEG4 data [conforming to SD VIDEO specifications (ASF standard)/MPEG4 (Simple Profile) video system/G.726 audio system] recorded with the Panasonic SD multi cameras or DVD recorders with this unit. The recording date may differ from that of the actual date. |
| DivX | DVD-RAM DVD-R/RW CD-R/RW | “.DIVX” “.divx” “.AVI” “.avi” | <ul style="list-style-type: none"> Plays all versions of DivX video (including DivX® 6) [DivX video system/MP3, Dolby Digital or MPEG audio system] with standard playback of DivX® media files. Functions added with DivX Ultra are not supported. GMC (Global Motion Compensation) is not supported. DivX files greater than 2GB or have no index may not play properly on this unit. This unit supports all resolutions up to maximum of 720 × 480 (NTSC)/720 × 576 (PAL). You can select up to 8 types of audio and subtitles on this unit. |

- If groups were created away from the root like “002 group” in the illustration right, the eighth one onwards is displayed on the same vertical line in the menu screen.
- There may be differences in the display order on the menu screen and computer screen.
- This unit cannot play files recorded using packet write.

Naming folders and files (Files are treated as contents and folders are treated as groups on this unit.)

At the time of recording, prefix folder and file names. This should be with numbers that have an equal number of digits, and should be done in the order you want to play them (this may not work at times).

DVD-RAM

- Discs must conform to UDF 2.0.

DVD-R/RW

- Discs must conform to UDF bridge (UDF 1.02/ISO9660).
- This unit is not compatible with multi-session. The default session only is played.

CD-R/RW

- Discs must conform to ISO9660 level 1 or 2 (except for extended formats).
- This unit is compatible with multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.


■ Discs that cannot be played

Version 1.0 of DVD-RW, DVD-ROM, CD-ROM, CDV, CD-G, SACD, Photo CD, DVD-RAM that cannot be removed from their cartridge, 2.6-GB and 5.2-GB DVD-RAM, and “Chaoji VCD” available on the market including CVD, DVCD and SVCD that do not conform to IEC62107.

■ Handling precautions

- Do not attach labels or stickers to discs (This may cause disc warping, rendering it unusable).
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Do not use scratch-proof protectors or covers.
- Do not use the following discs:
 - Discs with exposed adhesive from removed stickers or labels (rented discs etc).
 - Discs that are badly warped or cracked.
 - Irregularly shaped discs, such as heart shapes.

e.g. **MP3**

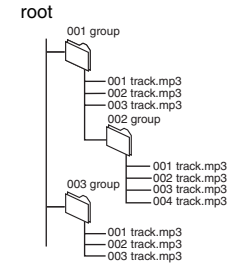

Discs that can be played

STEP 1 Connection

■ Connection to a television

- Do not place the unit on amplifiers or equipment that may become hot. The heat can damage the unit.
- **Do not connect through the video cassette recorder.** Due to copy guard protection, the picture may not display properly.
- Turn off all equipment before connection and read the appropriate operating instructions.
- Connect the terminals of the same colour.

Connection

With VIDEO IN or S VIDEO IN

AUDIO IN
R L VIDEO IN or S VIDEO IN

S video cable*
Audio/video cable (included)

*When using this connection, the audio cable (red and white plugs) should also be connected.

You can connect the audio cable to the 2-channel audio input terminals of an analog amplifier or system component to enjoy stereo sound.

Television

With COMPONENT VIDEO IN

AUDIO IN
R L COMPONENT VIDEO IN

Audio/video cable (included) Not used Video cables

To enjoy progressive video
Connect to a progressive output compatible television.

- ① **The United Kingdom and Continental Europe**
Select "Video/YPbPr" for the component terminals in QUICK SETUP (→ page 8).
- ② Set "Video Output Mode" to "○○○p", then follow the instructions on the menu screen (→ page 18, Picture Menu).

The United Kingdom and Continental Europe
Panasonic televisions with 625 (576)/50i · 50p, 525 (480)/60i · 60p input terminals are progressive compatible.

The United Kingdom and Continental Europe

With SCART (AV) IN

SCART (AV) IN

21-pin SCART cable

AV

- If the television is compatible with S-video, select "S-Video/YPbPr", or compatible with RGB, select "RGB/No Output" for the AV terminals in QUICK SETUP (→ page 8). Also, set "Video Output" to "Off" (→ page 21, "HDMI" tab) when "RGB/No Output" is selected.

■ Connect the AC mains lead last

FOR THE UNITED KINGDOM ONLY
READ THE CAUTION FOR AC MAINS LEAD ON PAGE 3 BEFORE CONNECTION.

AC mains lead (included)

AC IN ~ To household mains socket

Back of the unit


■ Enjoying higher quality audio and video (HDMI connection) (→ Page 27, Glossary)

By connecting to an HDMI compatible high-definition television, video recordings can be converted to, and output as, high-definition video (720p, 1080i). You can also enjoy multi-channel surround sound by connecting to an HDMI compatible amplifier with multi-channel output terminals.

With HDMI compatible television

To enjoy digital high-definition video and high quality audio with a single cable.

- You can enjoy multi-channel surround sound by connecting an amplifier with COAXIAL, OPTICAL or 5.1 ch AUDIO OUT terminal (→ page 8).

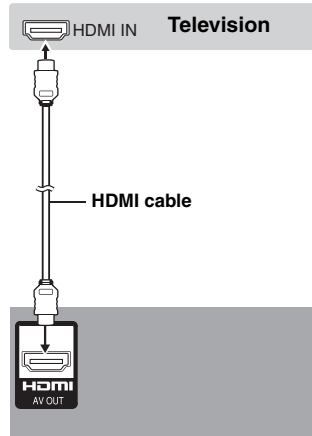


Back of the unit

- Set "Video Output" to "On" and "Audio Output" to "On" (→ page 21, "HDMI" tab).

With HDMI compatible television and amplifier

To enjoy digital multi-channel surround sound in addition to digital high-definition video.

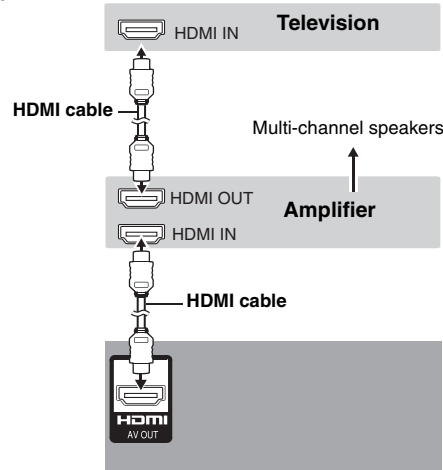


Back of the unit

- Set "Video Output" to "On" and "Audio Output" to "On" (→ page 21, "HDMI" tab).

With HDMI compatible amplifier

You can still enjoy multi-channel surround sound when your television is not HDMI compatible by connecting an HDMI compatible amplifier.

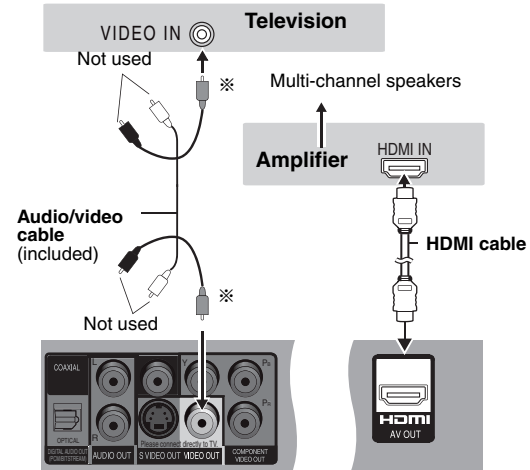

Back of the unit


- Set "Audio Output" to "On". When you connect to a television through the COMPONENT VIDEO terminal only, set "Video Output" to "Off", too (→ page 21, "HDMI" tab).

* You can also use the S VIDEO and COMPONENT VIDEO terminals.

- To enjoy high-definition video, connect to an HDMI compatible high-definition television and set "Video Output Mode" (→ page 18, Picture Menu).
- For stable operation and preventing deterioration of video quality, please purchase an HDMI cable 5 m or less in length with the HDMI logo.
- If the speaker setup cannot be completed on the amplifier, then use the "Speaker Settings" setting (→ page 21, "Audio" tab).
- It is not compatible with the HDMI Control Function (CEC).
- Should you connect equipment that does not support CPPM (→ page 27, Glossary), the audio from the CPPM copy protected DVD-Audio cannot be output from HDMI AV OUT terminal. Connect the audio cable (L, R) of the Audio/Video cable to an HDMI compatible AUDIO IN terminal.

STEP 1 Connection

■ Enjoying multi-channel surround sound with COAXIAL IN or OPTICAL IN

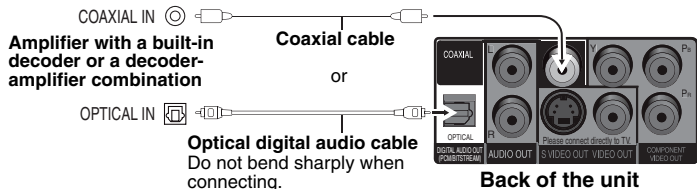


- You cannot use DTS Digital Surround decoders not suited to DVD.
- Even if using this connection, output will be only 2 channels when playing DVD-Audio. To enjoy multi-channel surround sound, connect with 5.1 ch AUDIO OUT terminals (→ right) or HDMI terminals (→ page 7).

Set "Audio Output" to "Off" (→ page 21, "HDMI" tab), and change "PCM Digital Output", "Dolby Digital", "DTS Digital Surround" and "MPEG **Except Asia**" (→ page 21, "Audio" tab).

■ Enjoying multi-channel surround sound with AUDIO IN 5.1ch


To obtain maximum performance of DVD-Audio multi-channel PCM sound, this connection is recommended.

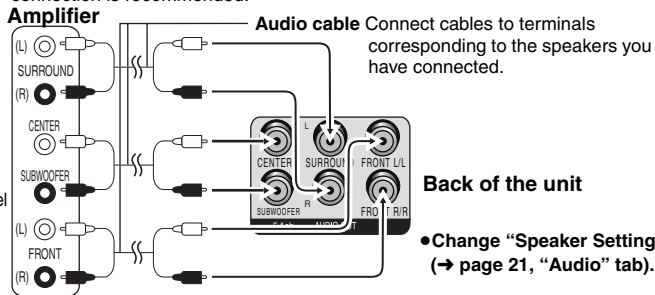

- Change "Speaker Settings" (→ page 21, "Audio" tab).

STEP 2 The remote control

■ Batteries

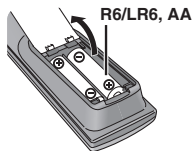

- Insert so the poles (+ and -) match those in the remote control.
 - Do not use rechargeable type batteries.
- Do not:**
- mix old and new batteries.
 - use different types at the same time.
 - heat or expose to flame.
 - take apart or short circuit.
 - attempt to recharge alkaline or manganese batteries.
 - use batteries if the covering has been peeled off.


Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire.

Remove if the remote control is not going to be used for a long period of time. Store in a cool, dark place.

■ Use

Aim at the remote control sensor (→ page 9), avoiding obstacles, at a maximum range of 7 m directly in front of the unit.

STEP 3 QUICK SETUP

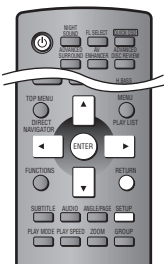

Turn on the television and select the appropriate video input on the television.

| | | | | |
|----------------------------------|--|--|---|---------------------------------------|
| <p>1</p> <p>Power ON.</p> | <p>2</p> <p>Shows QUICK SETUP screen.</p> | <p>3</p> <p>Follow the message and make the settings.</p> | <p>4</p> <p>Press to finish QUICK SETUP.</p> | <p>5</p> <p>Press to exit.</p> |
|----------------------------------|--|--|---|---------------------------------------|

To change these settings later, select "QUICK SETUP" (→ page 21, "Others" tab).

Basic play

1 Power ON.



2 Open the disc tray.




Stop Pause



Remote control sensor

3 Load the disc.

- Load double-sided discs so the label for the side you want to play is facing up.
- DVD-RAM: Remove discs from their cartridges before use.

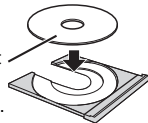

4 Start play.



Skip

- **DVD-VR** Can also skip to the markers.

Stop

The position is memorized when "▷" flashes on the display.

- Press [▶] (PLAY) to resume. (**Resume play**)
- Press [■] to clear the position.
- Even after the unit is turned off, the position is memorized (Normal playback only).

1



Repeat play

- Select "Repeat" (→ page 12, Repeat play) or "A-B Repeat" (→ page 17, Play Menu).

Search (during play)

Slow-motion (during pause)

- Up to 5 steps
- Press [▶] (PLAY) to restart play.
- **VCD** Slow-motion: forward direction only
- **MPEG4 DivX** Slow-motion: Does not work.

Pause

- Press [▶] (PLAY) to restart play.

Standby/on switch (⏻/⏻)

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

Standby/on indicator (⏻)

When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.

- To play **MP3**, **JPEG**, **MPEG4** or **DivX** contents on DVD-RAM that contain both **DVD-VR** and another format (e.g. **JPEG**), select "Play as Data Disc" (→ Page 19, Other Menu).
- "D.MIX" on the display indicates that a soundtrack with three or more channels can be down-mixed to two channels (→ Page 27, Glossary).
- Discs continue to rotate while menus are displayed. Press [■] when you finish to preserve the unit's motor and your television screen.
- Total title number may not be displayed properly on +R/+RW.

If you are experiencing problems, refer to troubleshooting guide (→ page 23–25).

Basic play

Group skip

WMA MP3 JPEG
MPEG4 DivX

 


• Does not work while paused.

Frame-by-frame

(during pause)

DVD-VR DVD-V
VCD

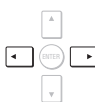

• VCD forward direction only

On-screen item select



Return to previous screen



Enter number



DVD-VR DVD-A DVD-V VCD CD
e.g. To select 12: [≧10] → [1] → [2]

WMA MP3 JPEG MPEG4 DivX
e.g. To select 123: [1] → [2] → [3] → [ENTER]

Disc menu



DVD-A DVD-V
Shows a disc top menu.

DVD-VR
Plays the programs (→ page 14).
WMA MP3 JPEG MPEG4 DivX
Plays data discs (→ page 15).



DVD-V
Shows a disc menu.

DVD-VR
Plays a playlist (→ page 14).
WMA MP3 JPEG MPEG4 DivX
Plays data discs (→ page 15).



VCD with playback control
Shows a disc menu.

Main unit display



Number display
Time display

Information screen



Changing the play sequence

PLAY MODE



All group/Program/Random play

Except DVD-VR

Disable HighMAT disc play to use random and program play. Select "Play as Data Disc" in Other Menu (→ page 19).

■ All group play DVD-A

- 1 While stopped, press [PLAY MODE] several times.
- 2 Press [▶] (PLAY).


All Group Playback

Press PLAY to start

■ Program play (up to 32 items)

- 1 While stopped, press [PLAY MODE] several times.
- 2 Press the numbered buttons to select the items (→ left, Enter number).
Repeat this step to program other items.
- 3 Press [▶] (PLAY).

e.g. DVD-V

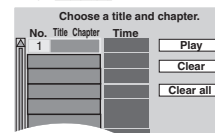

Selecting all the items (on the disc or in the title or group)
Press [ENTER] and [▲ ▼] to select "ALL", then press [ENTER] again to register.

Changing the program

Press [▲ ▼] to select an item.

–To change an item, repeat step 2.

–To clear an item, press [CANCEL] (or select "Clear" and press [ENTER]).

• Press [ANGLE/PAGE] to skip page by page.

 
Clearing the whole program

Select "Clear all" and press [ENTER]. The whole program is also cleared when the unit is turned off or the disc tray is opened.

■ Random play

- 1 While stopped, press [PLAY MODE] several times.
- 2 DVD-A DVD-V WMA MP3 JPEG MPEG4 DivX
Press the numbered buttons to select a group or a title (→ left, Enter number).
- 3 Press [▶] (PLAY).

e.g. DVD-V

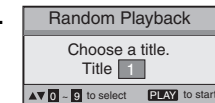

To exit the all group, program or random mode

 
Press [PLAY MODE] several times while stopped.

Convenient functions


QUICK OSD
(Main unit)

Displaying current playback condition (Quick OSD)

Press [QUICK OSD].

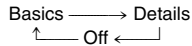

Basics

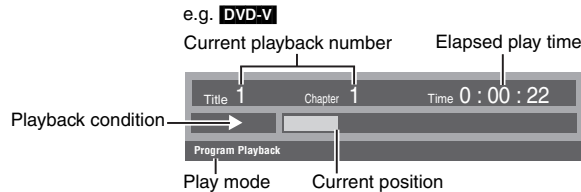

Details

See page 13 for changing soundtracks

See page 13 for changing subtitles

See page 13, Angle select for changing angles

Aspect of current playback title

e.g. DVD-V

- Details-DVD-Video
- Audio 1 --- DTS 3/2.1 ch
- Subtitle ---
- Angle 1/1
- Source Aspect 4:3
- Title Total Time 0:54:28

Total play time of current playback title

- **MPEG4 DivX** "Video" and "Audio" information is not displayed during search.

ADVANCED DISC REVIEW

Reviewing titles/programs to play (Advanced Disc Review)

DVD-VR DVD-V (Except +R/+RW)
(Normal playback only)

1 Press [ADVANCED DISC REVIEW].

Reviews each title/program.

2 Press [▶] (PLAY) when you find a title/program to play.



- You can also review each 10 minutes. Select "Interval Mode" (→ page 20, "Advanced Disc Review" in "Disc" tab).
- This may not work depending on the play position.
- **DVD-VR** Does not work:
 - with parts containing still pictures.
 - when playing a playlist.

AV ENHANCER

Recalling recommended audio/video setting (AV Enhancer)

By pressing just one button the disc type is automatically determined and the best audio and video settings are configured.

Press [AV ENHANCER] to select "Auto", "User1", "User2" or "User3".

- Off: Cancelled
- Auto: The best audio and video settings are configured.
- User1*: Suitable for video (**DVD-V**).
- User2*: Suitable for music.
- User3*: Suitable for video (**DVD-VR**).

*You can change the settings for User1–3 to your preference (→ page 19, "AV Enhancer" in Other Menu).

Functions
AV Enhancer Auto

When AV Enhancer(Auto) is on, you cannot change the individual settings indicated below.

Audio settings:

- Night Sound Mode, H.Bass (→ below),
- Multi Re-master, Advanced Surround (→ page 12),
- Dialogue Enhancer (→ page 18),
- Sound Enhancement (→ page 19)

Video settings:

- Picture Mode (→ page 17)

This may not work depending on the disc's recording.

NIGHT SOUND

Controlling louder portions of audio (Night Sound Mode)

Except **JPEG MPEG4 DivX**

You can enjoy movies and music late at night because the quieter parts of the audio are accentuated.

Press [NIGHT SOUND] to select "On".

Functions
Night Sound Mode On

- Audio output switches to 2 ch.
- This may not work depending on the disc's recording.
- This does not work with **MP3** on DVD-RAM or DVD-R/RW.

H.BASS

Enjoying heavy bass with the speakers (H.Bass)

DVD-V

Press [H.BASS] to select "On".

- This is effective on 5.1 channel DVD video discs. This is also effective on some portions of 2 channel discs as well.
- Audio output switches to 2 ch.
- This may not work depending on the disc's recording.
- If the sound is distorted or there is noise, set to "Off".
- This does not work when Night Sound Mode (→ above) is on.

Functions
H. Bass On

Convenient functions



Enjoying virtual surround (Advanced Surround)

Motion pictures with 2 or more channels

Press [ADVANCED SURROUND] to select "SP 1", "SP 2", "HP 1" or "HP 2".

SP (Speaker) 1 (Natural) SP 2 (Enhanced)
HP (Headphone) 1 (Natural) HP 2 (Enhanced) Off

Functions

Advanced Surround SP 1

- When using discs recorded with surround sound, sound seems to come from speakers on either side of you.
- When using headphones from the connected equipment, select "HP 1" or "HP 2".
- Optimum seating position is 3 to 4 times the distance between the front left and right speakers or the width of the television if using the television's speakers.
- Do not use in combination with surround effects on other equipment.
- Audio output switches to 2 ch.
- This does not work when Night Sound Mode or H.Bass (→ page 11) is on.



Reproducing more natural audio (Multi Re-master)

DVD-VR **DVD-V** (Discs recorded with 48 kHz only)

DVD-A (Discs recorded with 44.1 kHz and 48 kHz only)

VCD **CD**

- During multi-channel output of these discs, this feature reproduces the frequencies lost during recording to give you a sound closer to the original.
- During 2 ch output of these discs, this feature gives you a more natural sound by adding the higher frequency signals not recorded on the disc, for example, playing DVD-Video recorded with 48 kHz at 96 kHz. (→ page 27, "Sampling frequency" in Glossary)

WMA **MP3** (Disc recording is other than 8 kHz, 16 kHz, 32 kHz)

This feature reproduces the higher frequencies lost during recording to give you a sound closer to the original.

Press [MULTI RE-MASTER] to select "1", "2" or "3".

| Setting | DVD-A DVD-V CD (LPCM/PPCM) Type of music | Other discs Effect level |
|---------|--|-----------------------------|
| 1 | High tempo (e.g., pop and rock) | Light |
| 2 | Various tempos (e.g., jazz) | Medium |
| 3 | Low tempo (e.g., classical) | Strong |
| Off | Off | Off |

Functions

Multi Re-master 1

- When connecting with DIGITAL AUDIO OUT terminal, the actual output sampling frequency depends on "PCM Digital Output" setting in "Audio" tab (→ page 21).
- This may not work depending on the disc's recording.
- This does not work when Night Sound Mode, H.Bass (→ page 11) or Advanced Surround (→ above) is on.
- This does not work with **MP3** on DVD-RAM or DVD-R/RW.

FUNCTIONS



Repeat play (Only when the elapsed play time can be displayed)

JPEG: You can use this feature even if the elapsed time is not displayed.)

- 1 Press [FUNCTIONS].
 - 2 Press [▲ ▼] to select "Other Settings" and press [▶].
 - 3 Press [▲ ▼] to select "Play Menu" and press [▶].
 - 4 Press [▲ ▼] to select "Repeat" and press [▶].
 - 5 Press [▲ ▼] to select an item to be repeated and press [ENTER].
- Depending on the disc, the items that can be selected will differ.

QUICK REPLAY



Quick replay (Only when the elapsed play time can be displayed)

DVD-A **DVD-VR** **DVD-V** **WMA** **MP3** **VCD** **CD**

Press [QUICK REPLAY] to skip back a few seconds.

- This may not work depending on the disc's recording.
- This does not work with +R/+RW.



MANUAL SKIP



Skipping 30 seconds forward

DVD-VR **DVD-V** (Except +R/+RW)

Convenient when you want to skip commercials etc.

During play, press [MANUAL SKIP].

- This may not work depending on the play position.
- **DVD-VR** Does not work:
 - with parts containing still pictures.
 - when playing a playlist.

PLAY SPEED



Changing play speed **DVD-VR** **DVD-V**

During play, press [PLAY SPEED] to select "Fast", "Normal" or "Slow".

Fine adjustments

While the menu is displayed
Press [◀ ▶] to increase or decrease the playing speed from X0.6 to X1.4 in 0.1 units.

Functions

Play Speed ◀ x1.4

Normal

✓Fast

Slow

- Press [▶] (PLAY) to return to the normal play.
- After you change the speed
 - Night Sound Mode, H.Bass (→ page 11), Advanced Surround (→ left), Multi Re-master (→ left) and Sound Enhancement (→ page 19) do not work.
 - Audio output switches to 2 ch (Digital output switches to PCM).
 - 96 kHz sampling frequency is converted to 48 kHz.
- This may not work depending on the disc's recording.

SUBTITLE Changing subtitles
Discs with subtitles

DVD-V DivX

Press [SUBTITLE] to select the subtitle language.
To clear/display the subtitles

Press [◀▶] to select "On" or "Off".

- On + R/+RW, a subtitle number may be shown for subtitles that are not displayed.

DVD-VR (with subtitle on/off information)

Press [SUBTITLE] to select "On" or "Off".

- Only On or Off can be selected.
- Subtitle on/off information cannot be recorded using Panasonic DVD Recorders.



AUDIO Changing soundtracks
DVD-A DVD-V DivX (with multiple soundtracks)
DVD-VR VCD

Press [AUDIO] to select the soundtrack.

DVD-VR VCD

You can use this button to select "L", "R" or "LR".

DivX

While the menu is displayed
Press [◀▶] to select "L", "R" or "LR".

DVD-V (Karaoke discs)

While the menu is displayed
Press [◀▶] to select "On" or "Off" of vocals. Read the disc's instructions for details.



Signal type/data

LPCM/PPCM/□□ Digital/DTS/MP3/MPEG: Signal type

KHz (Sampling frequency)/bit/ch (Number of channels)

Example: 3/2 .1ch

- 1: Low frequency effect (not displayed if there is no signal)
- 0: No surround
- 1: Mono surround
- 2: Stereo surround (left/right)
- 1: Center
- 2: Front left+Front right
- 3: Front left+Front right+Center

- DivX It may take some time for play to start if you change the audio on a DivX video disc.

GROUP Starting play from a selected group
DVD-A WMA MP3 JPEG MPEG4 DivX

A folder on WMA/MP3, JPEG, MPEG4 and DivX video discs is treated as a "Group".

1 While stopped, press [GROUP].

2 Press [▲▼] or the numbered buttons to select a group and press [ENTER].

- DVD-A To play all groups (→ page 10, All group play)



ZOOM Zoom
Motion pictures

This feature expands a letterbox picture to fit the screen.
Press [ZOOM] to select the preset aspect ratio or "Auto". (Just Fit Zoom)

DVD-VR DVD-V VCD

Auto → 4:3 Standard → European Vista → 16:9 Standard

↑ Cinemascope2 ← Cinemascope1 ← American Vista ↓

- Depending on the disc, the preset aspect ratio may not be displayed.

MPEG4 DivX

Standard → Original
↑ Full ←

Fine adjustments (Manual Zoom)

Press [◀▶] while the menu is displayed. (Press and hold to alter faster.)

–from ×1.00 to ×1.60 (in 0.01 units), from ×1.60 to ×2.00 (in 0.02 units)

MPEG4 DivX only

–from ×2.00 to ×4.00 (in 0.05 units)

- It may not be possible to zoom up to ×4.00 depending upon the connected television and its settings.



ANGLE/PAGE Angle select DVD-V with multiple angles
Still picture rotation JPEG /advance DVD-A

Press [ANGLE/PAGE] to select the angle or rotate/advance the still picture.


e.g. DVD-V




Convenient functions

RQ18519

Using navigation menus



DIRECT
NAVIGATOR




PLAY LIST

Playing programs/playlists DVD-VR

- Titles appear only if they have been entered.
- You cannot edit playlists and titles.

Playing the programs

- 1 Press [DIRECT NAVIGATOR].
- 2 Press [▲ ▼] or the numbered buttons to select the program.
 - Press [ANGLE/PAGE] to skip page by page.
 - To select a 2-digit number
e.g. 23: [≥10] → [2] → [3]
 - Press [▶] to show the contents of the program.
- 3 Press [ENTER].

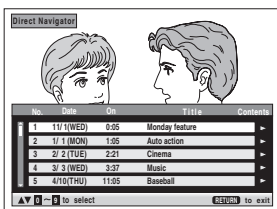



MENU


Playing CD CD

Titles appear with CD text playback.

e.g. CD text

- 1 Press [MENU].
- 2 Press [▲ ▼] to select the track and press [ENTER].

- Press [ANGLE/PAGE] to skip page by page.
- To exit the screen, press [MENU].

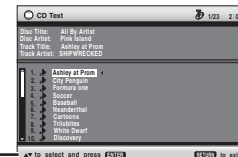

Press [FUNCTIONS] to switch between guide messages and the playback condition indicator.



TOP MENU



MENU

Playing HighMAT™ discs WMA MP3 JPEG

While the menu is displayed
Press [▲ ▼ ◀ ▶] to select items then press [ENTER].



Menu:
Takes you to the next menu which shows playlists or another menu.




Playlist:
Play starts.

- To return to the menu screen, press [TOP MENU] then press [RETURN] several times.
- To change the menu background, press [FUNCTIONS].
The background changes to the one recorded on the disc.
- To display/exit the screen, press [TOP MENU].

Selecting from the list

- 1 Press [MENU].
 - 2 Press [◀] then [▲ ▼] to switch among “Playlist”, “Group” and “Content” lists.
 - 3 Press [▶] then [▲ ▼] to select an item and press [ENTER].
- Press [ANGLE/PAGE] to skip page by page.
 - To exit the screen, press [MENU].

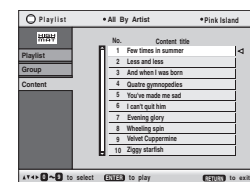



Playing data discs **WMA MP3 JPEG MPEG4 DivX**

Select "Play as Data Disc" (→ page 19, Other Menu) in the following cases:

-To play HighMAT discs without using the HighMAT function


-To play **MP3**, **JPEG**, **MPEG4** or **DivX** on DVD-RAM that contain both **DVD-VR** and another format (e.g. **JPEG**)

Playing items in order (Playback Menu)

While the menu is displayed


Press [▲ ▼] to select "All", "Audio", "Picture" or "Video" and press [ENTER].

- To display/exit the screen, press [TOP MENU].

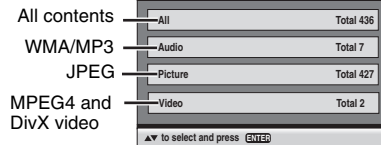

Playing from the selected item (Navigation Menu)

- 1 Press [MENU].
- 2 Press [▲ ▼ ◀ ▶] to select the group and press [ENTER].
- 3 • To play content in the group in order Press [ENTER].
• To start play from the selected content Press [▲ ▼] to select and press [ENTER].

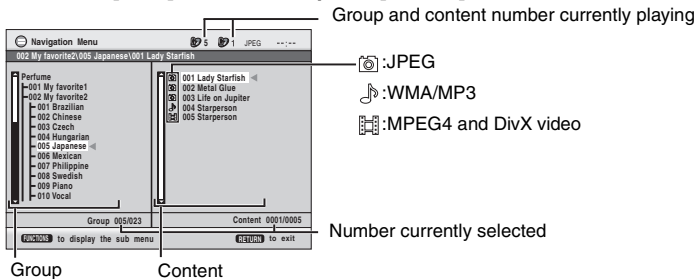

- Press [ANGLE/PAGE] to skip page by page.
- To listen to WMA/MP3 while showing a JPEG image on the screen Select a JPEG first, and then select WMA/MP3. (The opposite order is not effective.)
- To exit the screen, press [MENU].

Using the submenu

- 1 Press [MENU].
- 2 Press [FUNCTIONS].
- 3 Press [▲ ▼] to select an item and press [ENTER].

| | |
|----------------|---|
| Multi | Groups and content |
| List | Content only |
| Tree | Groups only |
| Thumbnail | Thumbnail images JPEG |
| Next group | To the next group |
| Previous group | To the previous group |
| ✓ All | WMA/MP3, JPEG, MPEG4 and DivX video |
| Audio | WMA/MP3 only |
| Picture | JPEG only |
| Video | MPEG4 and DivX video only |
| ✓ Help display | To switch between guide messages and the playback condition indicator |
| Find | To search by content or group title (→ see below) |

Searching by a content or group title

- 1 Press [MENU].
 - Press [◀ ▶] to highlight a group title to search a group, or a content title to search its content.
- 2 Press [FUNCTIONS].
- 3 Press [▲ ▼] to select "Find" and press [ENTER].
- 4 Press [▲ ▼] to select a character and press [ENTER].
 - Repeat to enter another character.
 - Lower case is also searched.
 - Press [◀ ▶] to skip between A, E, I, O and U.
 - Press [◀] to erase a character.
 - Erase the asterisk (*) to search for the titles starting with that character.
- 5 Press [▶] to select "Find" and press [ENTER].
The search result screen appears.
- 6 Press [▲ ▼] to select the content or group and press [ENTER].




About DivX VOD content

DivX Video-on-Demand (VOD) content is encrypted for copyright protection. In order to play DivX VOD content on this unit, you first need to register the unit.

Follow the on line instructions for purchasing DivX VOD content to enter the unit's registration code and register the unit. For more information about DivX VOD, visit www.divx.com/vod.

Display the unit's registration code

(→ page 21, "DivX Registration" in "Others" tab)

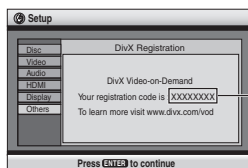

8 alphanumeric characters

- We recommend that you make a note of this code for future reference.
- After playing DivX VOD content for the first time, another registration code is then displayed in "DivX Registration". Do not use this registration code to purchase DivX VOD content. If you use this code to purchase DivX VOD content, and then play the content on this unit, you will no longer be able to play any content that you purchased using the previous code.
- If you purchase DivX VOD content using a registration code different from this unit's code, you will not be able to play this content. ("Authorization Error" is displayed.)

Regarding DivX content that can only be played a set number of times

Some DivX VOD content can only be played a set number of times. When you play this content, the remaining number of plays is displayed. You cannot play this content when the number of remaining plays is zero. ("Rented Movie Expired" or "Rental Expired" is displayed.)

When playing this content

- The number of remaining plays is reduced by one if
 - you press [⏪] or [SETUP].
 - you press [■] (STOP). [Press [⏸] (PAUSE) to stop play.]
 - you press [⏮] (SKIP) or [⏭] (SEARCH) etc. and arrive at another content or the start of the content being played.
- Resume (→ page 9, Stop) and Marker (→ page 17, Play Menu) functions do not work.

Official DivX® Certified product.

Plays all versions of DivX® video (including DivX®6) with standard playback of DivX® media files.

DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

This product is licensed under the MPEG-4 Visual patent portfolio license for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 Visual Standard ("MPEG-4 Video") and/or (ii) decoding MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 Video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

HighMAT™ and the HighMAT logo are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.



Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.





WMA is a compression format developed by Microsoft Corporation. It achieves the same sound quality as MP3 with a file size that is smaller than that of MP3.

HDCD®, HDCD®, High Definition Compatible Digital® and Pacific Microsonics™ are either registered trademarks or trademarks of Pacific Microsonics, Inc. in the United States and/or other countries.

HDCD system manufactured under license from Pacific Microsonics, Inc. This product is covered by one or more of the following: In the USA : 5,479,168, 5,638,074, 5,640,161, 5,808,574, 5,838,274, 5,854,600, 5,864,311, 5,872,531, and in Australia: 669114, with other patents pending.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Using On-Screen Menus

| | | | |
|---|---|---|--|
| <p>1</p> <p style="text-align: center;">FUNCTIONS</p> <p style="text-align: center;"></p> <p>Press.</p> | <p>2</p> <p style="text-align: center;">Select</p> <p style="text-align: center;">Go to the next menu</p> <p style="text-align: center;">Return to the previous menu</p> <p style="text-align: center;">Register</p> <p>Select the menu.</p> | <p>3</p> <p style="text-align: center;">Select</p> <p style="text-align: center;">Register</p> <p style="text-align: center;">Make the settings.</p> | <p>4</p> <p style="text-align: center;">RETURN</p> <p style="text-align: center;"></p> <p>Press to exit.</p> |
|---|---|---|--|

Items shown differ depending on the type of software.

Main menus

| | |
|------------------------------|---|
| Program, Group, Title | To start from a specific item |
| Chapter, Track | • Press [▲ ▼] to select and press [ENTER]. |
| Playlist, Content | • Press and hold [▲ ▼] to alter faster. |
| Time | <p>To skip incrementally or decrementally* (Time Slip for play only)</p> <p>1. Press [ENTER] twice to show Time Slip indicator.</p> <p>2. Press [▲ ▼] to select the time and press [ENTER].</p> <p>• Press and hold [▲ ▼] to alter faster.</p> <p>To start from a specific time* (Time Search)</p> <p>To change remaining/elapsed time display</p> |
| Video | <p>To display pixel number.</p> <p>DivX fps (frame per second) is also displayed.</p> |
| Audio | (→ page 13, Changing soundtracks) |
| Still Picture | To display the current bitrate or sampling frequency |
| Thumbnail | To switch still picture |
| Subtitle | To show thumbnail images |
| Marker (VR) | To recall a marker recorded on DVD recorders |
| Angle | To show subtitle images |
| Rotate Picture | To change slideshow timing (1 Fast ↔ 5 Slow) |
| Slideshow | <p>To turn on/off slideshow</p> <p>To change the slideshow timing (1 Fast ↔ 5 Slow)</p> <p>• When using Slideshow, Skip/Rotate picture may not work correctly depending on the play position.</p> |
| Other Settings | (→ below) |

* Except +R/+RW

Other Settings

| | |
|-------------------|---|
| Play Speed | (→ page 12, Changing play speed) |
|-------------------|---|

■ Play Menu

(Only when the elapsed play time can be displayed, **JPEG** The Repeat and Marker functions can be used.)

| | |
|-----------------------------|---|
| Repeat | (→ page 12, Repeat play) |
| A-B Repeat | <p>To repeat a specified section</p> <p>Press [ENTER] at the starting and ending points.</p> <p>Press [ENTER] again to cancel.</p> <p>• DVD-VR (parts containing still pictures): Does not work.</p> |
| Marker | <p>To mark up to 5 positions to play again</p> <p>Press [ENTER] (The unit is now ready to accept markers.)</p> <p>To mark a position: [ENTER] (at the desired point)</p> <p>To mark another position: [◀▶] to select "*" → [ENTER]</p> <p>To recall a marker: [◀▶] → [ENTER]</p> <p>To erase a marker: [◀▶] → [CANCEL]</p> <p>• This feature doesn't work during program and random play.</p> <p>• Markers you added will clear when you open the disc tray or switch the unit to standby.</p> |
| Advanced Disc Review | (→ page 11) |

■ Picture Menu

| | |
|---------------------|--|
| Picture Mode | <p>Normal: Normal images</p> <p>Cinema1: Mellows images and enhances detail in dark scenes.</p> <p>Cinema2: Sharpens images and enhances detail in dark scenes.</p> <p>Animation: Suitable for animation</p> <p>Dynamic: Enhances the contrast for powerful images.</p> <p>User (Press [ENTER] to select "Picture Adjustment") (→ below)</p> |
| | <p>Picture Adjustment</p> <p>Contrast: Increases the contrast between light and dark parts of the picture (-7 to +7).</p> <p>Brightness: Brightens the picture (0 to +15).</p> <p>Sharpness: Adjusts the sharpness of the edges of the horizontal lines (-7 to +7).</p> <p>Colour: Adjust the shade of the picture's colour (-7 to +7).</p> <p>Gamma: Adjusts the brightness of dark parts (0 to +5).</p> <p>Depth Enhancer: Reduce the rough noise in the background to give a greater feeling of depth (0 to +4).</p> <p>MPEG DNR: Smooths block noise and reduces the smudging that appears around contrasting sections of the picture (0 to +3).</p> |

Using On-Screen Menus

Video Output Mode

With HDMI connection (When "Video Output" is set to "On")
(→ page 21, "HDMI" tab)

Video recordings will be converted to, and output as, high definition video. The picture quality will vary depending on the connected equipment. Choose the picture quality to your preference.

480p/576p (progressive)*

720p (progressive)

1080i (interlace)

- "*" will be displayed next to those video outputs possible with the connected equipment. Selecting an item without "*" can result in the picture being distorted.

Should the picture be distorted, press and hold [CANCEL] until the picture is displayed correctly.

The setting will return to "480p" or "576p".

- Output from the COMPONENT VIDEO OUT terminal will be "480p" or "576p".

With HDMI connection (When "Video Output" is set to "Off")
(→ page 21, "HDMI" tab) or other connections

480i/576i (interlace)*

480p/576p (progressive)*

When you select "480p" or "576p" and a confirmation screen appears, select "Yes" only if connecting to a progressive output compatible television.

If you have chosen "480p", "576p", "720p" or "1080i" (→ above), select the method of conversion to suit the type of material.

- When the tray is opened, the setting will return to Auto or Auto1.

When playing PAL discs, MPEG4 or DivX video contents

Auto: Automatically detects the film and video content, and appropriately converts it.

Video: Select when using Auto, and the content is distorted.

Cinema: Select this if the edges of the film content appear jagged or rough when Auto is selected.

However, if the video content is distorted as shown in the illustration to the right, then select Auto.



When playing NTSC discs

Auto1 (normal): Automatically detects the film and video content, and appropriately converts it.

Auto2: In addition to Auto1, automatically detects film contents with different frame rates and appropriately converts it.

Video: Select when using Auto1 and Auto2, and the content is distorted.

Transfer Mode

Source Select

DivX

When you select "Auto" the constructing method of the DivX contents is automatically distinguished and output. If the picture is distorted, select "I (Interlace)" or "P (Progressive)" depending on which constructing method was used when the contents were recorded to disc.

Auto I (Interlace) P (Progressive)

HD Picture Enhancer

With HDMI connection (When "Video Output" is set to "On")
(→ page 21, "HDMI" tab)

Makes the quality of HDMI video output(720p,1080i) sharp.

Off, 1 (weakest) to 3 (strongest)

HDMI Colour Space

With HDMI connection (When "Video Output" is set to "On")
(→ page 21, "HDMI" tab)

The picture quality will vary depending on the connected equipment. Choose the picture quality to your preference.

Should one of the items below not be possible with the connected equipment it will not be displayed.

RGB YCbCr (4:4:4) YCbCr (4:2:2)

- "RGB Range" (→ page 21, "HDMI" tab) is available when "RGB" is selected.

Audio Menu

Night Sound Mode (→ page 11)

H.Bass (→ page 11)

Advanced Surround (→ page 12)

Dialogue Enhancer

To make the dialogue in movies easier to hear

DVD-V (Dolby Digital, DTS, MPEG **Except Asia**, 3-channel or over, with the dialogue recorded in the center channel)

DivX (Dolby Digital, 3-channel or over, with the dialogue recorded in the center channel)

On ←→ **Off**

Multi Re-master (→ page 12)

* 480i, 480p : When playing NTSC discs

576i, 576p : When playing PAL discs

| | |
|--------------------------|--|
| Sound Enhancement | You can enjoy comfortable, analog-like sound. DVD-VR DVD-V (Discs recorded with 48 kHz only) DVD-A (Discs recorded with 44.1 kHz and 48 kHz only) VCD CD WMA MP3 (Disc recording is other than 8 kHz, 16 kHz or 32 kHz) On \longleftrightarrow Off <ul style="list-style-type: none"> This does not work when Night Sound Mode, H.Bass (\rightarrow page 11), Advanced Surround or Multi Re-master (\rightarrow page 12) is on. This may not work depending on the disc's recording. This does not work with MP3 on DVD-RAM or DVD-R/RW. |
| | Attenuator With 2ch or 5.1ch AUDIO OUT connections (\rightarrow page 6, 8) Switch on if sound is distorted. On \longleftrightarrow Off |

■ Display Menu

| | |
|----------------------------|---|
| Information | On \longleftrightarrow Off |
| Subtitle Position | 0 to -60 (in 2 units) |
| Subtitle Brightness | Auto, 0 to -7 |
| 4:3 Aspect | To select how to show images made for 4:3 aspect screens on a 16:9 aspect television Normal: Laterally stretches images. Auto: The standard setting is "Shrink". However, this automatically changes to "Zoom" with a letterbox picture. Shrink: Images appear in the center of the screen. Zoom: Expands to 4:3 aspect ratio. |
| Just Fit Zoom | (\rightarrow page 13, Zoom) |
| Manual Zoom | (\rightarrow page 13, Zoom) |
| Bit Rate Display | Motion pictures On \longleftrightarrow Off |
| GUI See-through | Off, On, Auto (Switches on automatically when the images appear on the display.) |
| GUI Brightness | -3 to +3 |
| HDMI Status | Indicates various information when connected with HDMI AV OUT terminal. (\rightarrow below, Confirming HDMI information) |
| Quick OSD | (\rightarrow page 11) |

■ Confirming HDMI information


| | |
|---|--|
| •HDMI Status—HDMI is connected. | Connection status |
| HDMI Information | (\rightarrow page 13, Changing soundtracks) |
| Audio Stream PCM/Dolby Digital/DTS | Shows the maximum channel number of the connected equipment. |
| Max Channel 6ch | (\rightarrow page 18, Video Output Mode) |
| Video Format 480p/576p/720p/1080i | (\rightarrow page 18, HDMI Colour Space) |
| Colour Space YCbCr(4:4:4)/YCbCr(4:2:2)/RGB | |

■ Other Menu

| | |
|---|--|
| AV Enhancer | To preset the settings You can preset your favorite video/audio effects onto "User1", "User2" and "User3". Preparation Adjust the settings indicated below to your preference. (When "Auto" is selected, this is not available.) Audio settings: Night Sound Mode/H.Bass (\rightarrow page 11) Advanced Surround/Multi Re-master (\rightarrow page 12) Dialogue Enhancer (\rightarrow page 18, Audio Menu) Sound Enhancement (\rightarrow left) Video settings: Picture Mode (\rightarrow page 17, Picture Menu) |
| | <ol style="list-style-type: none"> Select "Save Settings" and press [ENTER]. Press [\blacktriangle \blacktriangledown] to select the setting location (User1, User2 or User3) and press [ENTER]. Follow the instructions on the menu screen and press [ENTER] last. To recall the settings (\rightarrow page 11) To confirm the settings <ol style="list-style-type: none"> Press [\blacktriangle \blacktriangledown] to select "User1", "User2" or "User3" and press [ENTER]. Select "Save Settings" and press [ENTER] twice. To exit the screen, select "No" and press [ENTER]. |
| Setup | (\rightarrow page 20, Changing the player settings) |
| Play as DVD-Video or Play as DVD-Audio | Select "Play as DVD-Video" to play DVD-V on DVD-Audio. |
| Play as DVD-VR Play as HighMAT or Play as Data Disc | Select "Play as Data Disc" to play MP3 JPEG MPEG4 or DivX on DVD-RAM that contain both DVD-VR and another format (e.g. JPEG) or to play HighMAT discs without using the HighMAT function. |

- All possible outputs are displayed.
- The current output for "Audio Stream", "Video Format" and "Colour Space" will be underlined.
- When "Off" is selected in "Audio Output" (\rightarrow page 21, "HDMI" tab) "--" will be displayed in "Audio Stream" and "Max Channel".

Changing the player settings

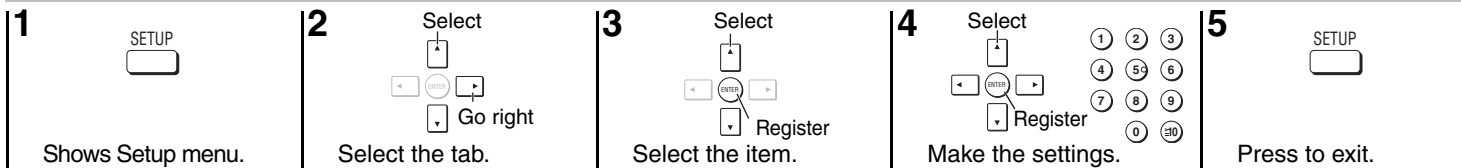

- Referring to pages 20 to 22, change as required.
- The settings remain intact even if you switch the unit to standby.
- Underlined items are the factory preset.

QUICK SETUP enables successive settings of the items in the shaded area.

■ “Disc” tab

| | |
|--|--|
| Audio Choose the audio language. | English (Language options) ^{*1} Original ^{*2} Other**** ^{*3} |
| Subtitle Choose the subtitle language. | Automatic ^{*4} English (Language options) ^{*1} Other**** ^{*3} |
| Menus Choose the language for disc menus. | English (Language options) ^{*1} Other**** ^{*3} • Changing the menu language from QUICK SETUP also changes this setting. |
| Advanced Disc Review Select how to review (→ page 11). | Intro Mode: Reviews each title/program. Interval Mode: Reviews each 10 minutes. |
| Ratings Set a ratings level to limit DVD-Video play. • Follow the on-screen instructions. | Setting ratings (When level 8 is selected) 8 No Limit 1 to 7: To prohibit play of DVD-Video with corresponding ratings recorded on them. 0 Lock All: To prevent play of discs without ratings levels. When setting a ratings level, a password screen is shown. Follow the on-screen instructions. Do not forget your password. A message screen will appear if a DVD-Video exceeding the ratings level is inserted in the unit. Follow the on-screen instructions. |

^{*1} Language options

The United Kingdom and Continental Europe :

French, German, Italian, Spanish, Polish, Swedish and Dutch

Australia and N.Z. :

French, German, Italian, Spanish, Portuguese, Russian and Dutch

Asia : Chinese

^{*2} The original language designated on the disc is selected.

^{*3} Input a code number referring to the language code list (→ page 22).

^{*4} If the language selected for “Audio” is not available, subtitles appear in that language (If available on the disc).

■ “Video” tab

| | |
|--|--|
| TV Aspect Choose the setting to suit your television and preference. | 4:3 Pan&Scan: Regular aspect television (4:3) The sides of the widescreen picture are cut off so it fills the screen (unless prohibited by the disc). 4:3 Letterbox: Regular aspect television (4:3) Widescreen picture is shown in the letterbox style. 16:9: Widescreen television (16:9) |
| TV Type Select to suit the type of television. | Standard (Direct View TV) CRT Projector LCD TV/Projector Projection TV Plasma TV |
| Time Delay When connected with an AV amplifier and Plasma display, adjust if you notice the audio is out of sync with the video. | 0ms 20ms 40ms 60ms 80ms 100ms |
| Video Out (AV/Component) [#] Choose the video signal format to be output from the SCART and COMPONENT VIDEO OUT terminals (→ page 6). | Video/YPbPr S-Video/YPbPr RGB/No Output |
| Still Mode Specify the type of picture shown when paused. | Automatic Field: The picture is not blurred, but picture quality is lower. Frame: Overall quality is high, but the picture may appear blurred. |
| NTSC Disc Output Choose PAL 60 or NTSC output when playing NTSC discs. | PAL60: NTSC discs can be viewed on PAL television. NTSC: Output signal from NTSC discs remains as NTSC. Asia: “NTSC” is the factory preset. |
| Picture/Video Output Choose the video signal format to be output for JPEG, MPEG4 and DivX video. | Automatic: (Except Asia) PAL NTSC/PAL60: Output will depend on “NTSC Disc Output” setting (→ above). Asia: “NTSC/PAL60” is the factory preset. • If picture output is not smooth during playback, change the setting. |

[#] **The United Kingdom and Continental Europe**

■ “Audio” tab

| | |
|--|---|
| PCM Digital Output ^{*1} Check the digital input limitations of the equipment you connect using COAXIAL or OPTICAL terminal and select the maximum sampling frequency of PCM digital output. | Off: When not connected with COAXIAL or OPTICAL terminal Up to 48 kHz: When connected to equipment compatible with 44.1 or 48 kHz Up to 96 kHz: When connected to equipment compatible with 88.2 or 96 kHz Up to 192 kHz: When connected to equipment compatible with 176.4 or 192 kHz ● Signals from copy-protected discs are converted to 48 or 44.1 kHz. ● Some equipment cannot handle sampling frequencies of 88.2 kHz, even if they can handle 96 kHz. Read your equipment's operating instructions for details. |
| Dolby Digital ^{*1} With COAXIAL, OPTICAL or HDMI AV OUT connections (→ page 7, 8) | Bitstream PCM Select “Bitstream” when the equipment can decode the bitstream (digital form of multi-channel data). Otherwise, select “PCM”. (If the bitstream is output to the equipment without a decoder, high levels of noise can be output and may damage your speakers and hearing.) |
| DTS Digital Surround ^{*1} With COAXIAL, OPTICAL or HDMI AV OUT connections (→ page 7, 8) | Bitstream PCM |
| MPEG ^{*1,2} With COAXIAL, OPTICAL or HDMI AV OUT connections (→ page 7, 8) | PCM Bitstream |
| Dynamic Range Compression | Off On: Adjusts for clarity even when the volume is low through compressing the range of the lowest sound level and the highest sound level. Convenient for late night viewing. (Only works with Dolby Digital) |
| Speaker Settings Choose the settings to suit your audio system and the listening environment (→ page 22, Changing the speaker setting to suit your speakers). | Speaker Type Multi-channel: when 3 or more speakers are connected. 2-channel: when 2 speakers are connected. Multi-channel Setting (If you select “Multi-channel”) Speaker presence and size Delay time Channel balance |

^{*1} When audio is output from HDMI AV OUT terminal, and the connected equipment does not support the item selected, the actual output will depend on the performance of this connected equipment.

^{*2} Except **Asia**

■ “HDMI” tab

| | |
|---|---|
| RGB Range Set “HDMI Colour Space” to “RGB” (→ page 18, Picture Menu). | Standard Enhanced: When the black and white images are not distinct. |
| Video Output (This setting is irrelevant when connected through the VIDEO or S VIDEO OUT terminal.) | On: Select this when connected through the HDMI terminal. Video is output from the HDMI terminal. Video is also output from the COMPONENT VIDEO OUT terminal, but only in 480p or 576p (progressive). Off: Select this when connected through the COMPONENT VIDEO OUT terminal. Video is not output from the HDMI terminal, but from the COMPONENT VIDEO OUT terminal according to the setting of the “Video Output Mode” (→ page 18, Picture Menu). Also, select this when connected through the SCART terminal and “RGB/No Output” (→ page 20, “Video” tab) is selected. |
| Audio Output | On: When audio output is from HDMI AV OUT terminal. (Depending on the capabilities of the connected equipment, audio output may differ from the audio settings.) Off: When audio output is not from HDMI AV OUT terminal. (The audio is output using the settings of this unit.) |

■ “Display” tab

| | |
|--|---|
| Menu Language | ^{*1} English Français Deutsch Italiano Español Polski Svenska Nederlands ^{*2} English Français Deutsch Italiano Español Português Русский Nederlands ^{*3} English 中文 |
| On-Screen Messages | On Off |
| Background during Play Select background during JPEG, MPEG4 and DivX video playback. | Black Grey |

■ “Others” tab


| | |
|---|---|
| FL Dimmer Changes the brightness of the unit's display. | Bright Dim Auto: The display is dimmed, but brightens only when you perform some operations. |
| Auto Power Off | On: The unit switches to standby mode after about 30 minutes in the stop mode. Off |
| DivX Registration Displays the unit's registration code. | You need this registration code to purchase and play DivX Video-on-Demand (VOD) content. (→ page 16, About DivX VOD content) |
| QUICK SETUP | Yes No |
| Re-initialise Setting This returns all values in the Setup menus to the default settings. | Yes: The password screen is shown if “Ratings” (→ page 20) is set. Please enter the same password and press [ENTER]. After “INI” on the display disappears, turn the unit off and on again. No |

^{*1} The United Kingdom and Continental Europe ^{*2} Australia and N.Z. ^{*3} Asia

Changing the player settings

Changing the speaker setting to suit your speakers

When connecting to an amplifier to enjoy multi-channel surround sound, use the following settings on this unit if they cannot be set on the amplifier.

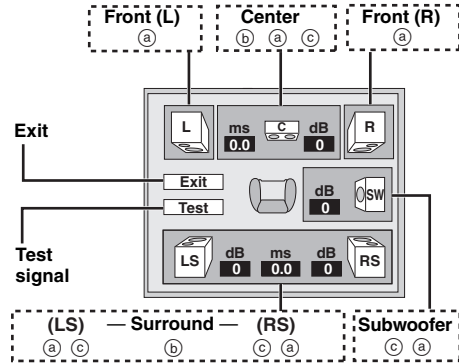

Speaker presence and size (a)

1. Press [▲ ▼ ◀ ▶] to select an item and press [ENTER].
2. Press [▲ ▼] to change the content and press [ENTER].

Icon examples:

Surround speaker (LS)



Large



Small



No

- **Large:** Select when the speaker supports low-frequency (under 100 Hz) reproduction.
- **Small:** Select when the speaker does not support low-frequency reproduction.

If the subwoofer is set to "No", the front speakers will automatically be set to "Large". (In this case, we recommend connecting a speaker that can reproduce bass below 100 Hz.)


Delay time (b)

(Effective when playing multi-channel audio)

If either distance (d) or (i) is less than (e), find the difference in the relevant table and change to the recommended setting.

1. Press [▲ ▼ ◀ ▶] to select an item and press [ENTER].
2. Press [▲ ▼] to change the content and press [ENTER].

⋯: Recommended placement

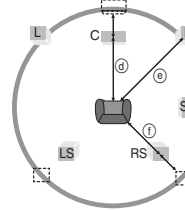

d Center speaker

| Difference | Setting |
|----------------|---------|
| Approx. 34 cm | 1.0 ms |
| Approx. 68 cm | 2.0 ms |
| Approx. 102 cm | 3.0 ms |
| Approx. 136 cm | 4.0 ms |
| Approx. 170 cm | 5.0 ms |

i Surround speakers

| Difference | Setting |
|----------------|---------|
| Approx. 170 cm | 5.0 ms |
| Approx. 340 cm | 10.0 ms |
| Approx. 510 cm | 15.0 ms |

Channel balance (c)

This does not work when connected with HDMI terminals and "Audio Output" (→ page 21, "HDMI" tab) is set to "On".

1. Select "Test" and press [ENTER].

A test signal is output.

Front (L) → Center → Front (R)

↑ Surround (LS) ← Surround (RS) ↓

2. While listening to the test signal, press [▲ ▼] to adjust the volume of the center and surround speakers so they are the same apparent volume as the front speakers (−6 to +6 dB). (The front speakers cannot be adjusted here.)

3. Press [ENTER].

The test signal stops.

- No signal is output for the subwoofer. To adjust its volume, play something, then return to this screen to adjust to suit your taste.

To finish the speaker setting

Press [▲ ▼ ◀ ▶] to select "Exit" and press [ENTER].

Language code list

| | | | |
|-------------------|------|-----------------|------|
| Abkhazian: | 6566 | Lithuanian: | 7684 |
| Ajar: | 6565 | Macedonian: | 7775 |
| Afrikaans: | 6570 | Malagasy: | 7771 |
| Albanian: | 8381 | Malay: | 7783 |
| Ameharic: | 6577 | Malayalam: | 7776 |
| Arabic: | 6582 | Maltese: | 7784 |
| Armenian: | 7289 | Maori: | 7773 |
| Assamese: | 6583 | Marathi: | 7782 |
| Aymara: | 6589 | Moldavian: | 7779 |
| Azerbaijani: | 6590 | Mongolian: | 7778 |
| Bashkir: | 6665 | Nauru: | 7865 |
| Basque: | 6985 | Nepali: | 7869 |
| Bengali; Bangla: | 6678 | Norwegian: | 7879 |
| Bhutan: | 6890 | Oriya: | 7982 |
| Bihari: | 6672 | Pashto, Pushto: | 8083 |
| Breton: | 6682 | Persian: | 7065 |
| Bulgarian: | 6671 | Polish: | 8076 |
| Burmese: | 7789 | Portuguese: | 8084 |
| Byelorussian: | 6669 | Punjabi: | 8065 |
| Cambodian: | 7577 | Quechua: | 8185 |
| Catalan: | 6765 | Rhaeto-Romance: | 8277 |
| Chinese: | 9072 | Romanian: | 8279 |
| Corsican: | 6779 | Russian: | 8285 |
| Croatian: | 7282 | Samoa: | 8377 |
| Czech: | 6783 | Sanskrit: | 8365 |
| Danish: | 6865 | Scots Gaelic: | 7168 |
| Dutch: | 7876 | Serbian: | 8382 |
| English: | 6978 | Serbo-Croatian: | 8372 |
| Esperanto: | 6979 | Shona: | 8378 |
| Estonian: | 6984 | Sindhi: | 8368 |
| Faroese: | 7079 | Sinhalese: | 8373 |
| Fiji: | 7074 | Slovak: | 8375 |
| Finnish: | 7073 | Slovenian: | 8376 |
| French: | 7082 | Somali: | 8379 |
| Frisian: | 7089 | Spanish: | 6983 |
| Galician: | 7176 | Sundanese: | 8385 |
| Georgian: | 7565 | Swahili: | 8387 |
| German: | 6869 | Swedish: | 8386 |
| Greek: | 6976 | Tagalog: | 8476 |
| Greenlandic: | 7576 | Tajik: | 8471 |
| Guarani: | 7178 | Tamil: | 8465 |
| Gujarati: | 7185 | Tatar: | 8484 |
| Hausa: | 7265 | Telugu: | 8469 |
| Hebrew: | 7387 | Thai: | 8472 |
| Hindi: | 7273 | Tibetan: | 6679 |
| Hungarian: | 7285 | Tigrinya: | 8473 |
| Icelandic: | 7383 | Tonga: | 8479 |
| Indonesian: | 7378 | Turkish: | 8482 |
| Interlingua: | 7365 | Turkmen: | 8475 |
| Irish: | 7165 | Twi: | 8487 |
| Italian: | 7384 | Ukrainian: | 8575 |
| Japanese: | 7465 | Urdu: | 8582 |
| Javanese: | 7487 | Uzbek: | 8590 |
| Kannada: | 7578 | Vietnamese: | 8673 |
| Kashmiri: | 7583 | Volapük: | 8679 |
| Kazakh: | 7575 | Welsh: | 6789 |
| Kirghiz: | 7589 | Wolof: | 8779 |
| Korean: | 7579 | Xhosa: | 8872 |
| Kurdish: | 7585 | Yiddish: | 7473 |
| Laotian: | 7679 | Yoruba: | 8979 |
| Latin: | 7665 | Zulu: | 9085 |
| Latvian, Lettish: | 7686 | | |
| Lingala: | 7678 | | |

Troubleshooting guide

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the solutions indicated in the chart do not solve the problem, consult your dealer for instructions. (Reference pages are shown in parentheses.)

Power

| | |
|--|--|
| No power. | <ul style="list-style-type: none"> ● Insert the AC mains lead securely into the household mains socket. (6) |
| The unit is automatically switched to the standby mode. | <ul style="list-style-type: none"> ● When "Auto Power Off" is set to "On", the unit automatically switches to standby after approximately 30 minutes in the stop mode. (21) |

No operation

| | |
|--|--|
| No response when any buttons are pressed. | <ul style="list-style-type: none"> ● This unit cannot play discs other than the ones listed in these operating instructions. (4) ● The unit may not be operating properly due to lightning, static electricity or some other external factor. Turn the unit off and then back to ON. Alternatively, turn the unit off, disconnect the AC mains lead, and then reconnect it. ● Condensation has formed: Wait 1 to 2 hours for it to evaporate. |
| No response when remote control buttons are pressed. | <ul style="list-style-type: none"> ● Check that the batteries are installed correctly. (8) ● The batteries are depleted: Replace them with new ones. (8) ● Point the remote control at the remote control sensor and operate. (9) |
| No picture or sound. | <ul style="list-style-type: none"> ● Check the video or audio connection. (6-8) ● Check the power or input setting of the connected equipment. ● Check that the disc has something recorded on it. |
| You have forgotten your ratings password. Reset all the settings to Factory Preset. | <ul style="list-style-type: none"> ● While stopped, press and hold [QUICK OSD] and [■] on the unit and then also press and hold [▲OPEN/CLOSE] on the unit until "Initialised" disappears from the television. Turn the unit off and on again. All settings will return to the default values. |

Specific operation impossible or incorrect

| | |
|---|---|
| It takes time before play starts. | <ul style="list-style-type: none"> ● Play may take time to begin when an MP3 track has still picture data. Even after the track starts, the correct play time will not be displayed; however, this is normal. ● This is normal on DivX video. |
| The program and random play functions do not work. | <ul style="list-style-type: none"> ● These functions do not work with some DVD-Videos. |
| Menu doesn't appear. [VOD] with playback control | <ul style="list-style-type: none"> ● Press [■] twice and then press [▶] (PLAY). |

| | |
|--|--|
| The on-screen menu shows "2" as a soundtrack option when [AUDIO] is pressed, but the audio does not change. | <ul style="list-style-type: none"> ● This is normal on DVD-Audio. Even if a second soundtrack isn't recorded, two numbers will be shown. |
| Play doesn't start. | <ul style="list-style-type: none"> ● This unit may not play WMA and MPEG4 that contains still picture data. ● If playing DivX VOD content, refer to the homepage where you purchased it. (Example: www.divx.com/vod) ● If a disc contains CD-DA and other formats, proper playback may not be possible. |
| Play restarts from the beginning of the track when soundtrack is changed. | <ul style="list-style-type: none"> ● This is normal on DVD-Audio. |
| Subtitle position is wrong. | <ul style="list-style-type: none"> ● Adjust the position. ("Subtitle Position" in Display Menu) (19) |
| No subtitles. | <ul style="list-style-type: none"> ● Display the subtitles. (13) |
| In A-B Repeat, point B is automatically set. | <ul style="list-style-type: none"> ● The end of an item becomes point B when it is reached. |
| Repeat play is automatically cancelled. | <ul style="list-style-type: none"> ● A-B Repeat is cancelled when you press [QUICK REPLAY]. ● Repeat play may be cancelled when you press [MANUAL SKIP] or [ADVANCED DISC REVIEW]. |

Troubleshooting guide

Picture incorrect

| | |
|---|--|
| <p>Picture distorted.</p> | <ul style="list-style-type: none"> • Ensure that the unit is not connected through a video cassette recorder. (6) • Have you selected an item in "Video Output Mode" (→ page 18, Picture Menu) that is incompatible with the connected equipment? Depending on the current connection status, perform corresponding steps. <ul style="list-style-type: none"> —When connecting to a television that is incompatible with progressive output using the COMPONENT VIDEO OUT terminal: Press and hold [CANCEL] until the picture displays correctly. The settings will return to "480i" or "576i". —When connecting to a television with an HDMI cable: Press and hold [CANCEL] until the picture displays correctly. The settings will return to "480p" or "576p". —When connecting to an amplifier with an HDMI cable, and to a television that is incompatible with progressive output using the COMPONENT VIDEO OUT terminal: <ol style="list-style-type: none"> 1. Disconnect the HDMI (remove the cable/switch off the amplifier). 2. Press and hold [CANCEL] until the picture displays correctly. The settings will return to "480i" or "576i". 3. Set "Video Output" to "Off" in the "HDMI" tab. (21) 4. Connect the HDMI (connect the cable/switch on the amplifier). • DivX Change "Source Select" in Picture Menu. (18) |
| <p>Picture size doesn't fit the screen.</p> | <ul style="list-style-type: none"> • Change "TV Aspect" in "Video" tab. (20) • Use the television to change the aspect. If your television does not have that function, change "4:3 Aspect" in Display Menu. (19) • Change the Zoom setting. (13) |
| <p>Picture stops.</p> | <ul style="list-style-type: none"> • Picture may stop if the DivX files are greater than 2GB. |
| <p>When playing PAL disc, picture distorted.</p> | <ul style="list-style-type: none"> • Set "Transfer Mode" in Picture Menu to "Auto". (18) |
| <p>The television may display incorrectly or colours appear faded.</p> | <ul style="list-style-type: none"> • The unit and television are using different video systems. <ul style="list-style-type: none"> • Asia Use a multi-system or NTSC television. • Others Use a multi-system or PAL television. • The system used on the disc doesn't match your television. <ul style="list-style-type: none"> —PAL discs cannot be correctly viewed on an NTSC television. —This unit can convert NTSC signals to PAL 60 for viewing on a PAL television ("NTSC Disc Output" in "Video" tab). (20) • Connect to a progressive output compatible television to enjoy progressive video. • Picture may not be seen when more than 4 devices are connected with HDMI cables. Reduce the number of connected devices. |
| <p>Menu not displayed correctly.</p> | <ul style="list-style-type: none"> • Restore the zoom ratio to $\times 1.00$. (13) • Set "Subtitle Position" in Display Menu to "0". (19) • Set "4:3 Aspect" in Display Menu to "Normal". (19) |
| <p>Auto zoom function does not work well.</p> | <ul style="list-style-type: none"> • Turn off TV's zoom function. • Use the other preset aspect ratios or manual adjustment. (13) • Zoom function may not work well, especially in dark scenes and may not work depending on the type of disc. |

| | |
|--|---|
| <p>Video is not output from HDMI AV OUT.</p> | <ul style="list-style-type: none"> • Change the HDMI video output settings by using either of the procedures below. <ul style="list-style-type: none"> — Connect the television using VIDEO OUT or S VIDEO OUT terminal, then set "Video Output" to "On" in the "HDMI" tab. (21) — Press and hold [CANCEL] until the picture is displayed. The settings will change to "On". |
| <p>RGB video is not output from the SCART terminal.</p> | <ul style="list-style-type: none"> • When connecting to an amplifier with an HDMI cable, set "Video Output" in the "HDMI" tab to "Off". (21) |

Progressive video

| | |
|--|--|
| <p>There is ghosting when progressive output is on.</p> | <ul style="list-style-type: none"> • This problem is caused by the editing method or material used on DVD-Video, but should be corrected if you use interlace output. Change "Video Output Mode" in Picture Menu to "480i" or "576i". (18) When connecting with HDMI AV OUT terminal, connect with the other terminals and change the settings in the following order: <ol style="list-style-type: none"> 1. Select "Video Output" ("HDMI" tab) to "Off". (21) 2. Select "Video Output Mode" (Picture Menu) to "480i" or "576i". (18) |
| <p>Pictures not in progressive output.</p> | <ul style="list-style-type: none"> • If the unit is connected to the television through VIDEO OUT, S VIDEO OUT or SCART terminal, output will be interlace. |

Sound incorrect

| | |
|---|---|
| <p>Sound distorted.</p> | <ul style="list-style-type: none"> • Select "Off" in "Advanced Surround". (12) • Set "Attenuator" in Audio Menu to "On" if it causes distortion with 2ch or 5.1ch AUDIO OUT terminals. (19) • Noise may occur when playing WMA files. • DVD-A The disc may have restrictions on the method of audio output. With some multi-channel discs, unless the number of connected speakers is the same as the disc's channel specification, audio will not be output properly. Refer to the disc's jacket for more information. • With HDMI AV OUT connections, audio may not be output from other terminals in the way that was set. • Match the speaker settings with the connected equipment. (21) |
| <p>Piercing noise comes from the speakers.</p> | <ul style="list-style-type: none"> • If you have connected a digital amplifier which does not include decoder, be sure to select "PCM" in "Dolby Digital", "DTS Digital Surround" or "MPEG" in "Audio" tab. (21) |
| <p>Effects do not work.</p> | <ul style="list-style-type: none"> • None of the audio effects work when the unit is outputting bitstream signals from the COAXIAL, OPTICAL or HDMI AV OUT terminal. (7, 8) • Some audio effects do not work or have less effect with some discs. • Night Sound Mode, H.Bass, Advanced Surround, Multi Re-master and Sound Enhancement do not work if you have changed the play speed. • With HDMI AV OUT connections, HDCD discs are played as normal CDs. |
| <p>No sound</p> | <ul style="list-style-type: none"> • There may be a pause in sound when you change the play speed. • Audio may not be heard when more than 4 devices are connected with HDMI cables. Reduce the number of connected devices. • DivX Audio may not be output due to how files were created. (5) |

Recording

| | |
|---|---|
| <p>Cannot record to digital recording equipment. (Incorrect sound recorded.)</p> | <ul style="list-style-type: none"> You cannot record WMA/MP3. You cannot record DVDs that have protection preventing digital recording. You cannot record DVDs if the recording equipment cannot handle signals with a sampling frequency of 48 kHz. Make the following settings: <ul style="list-style-type: none"> Advanced Surround: Off (12) PCM Digital Output: Up to 48 kHz (21) Dolby Digital/DTS Digital Surround/MPEG^{#1}: PCM (21) |
|---|---|

Unit displays

| | |
|--|--|
| <p>"noPLAY"</p> | <ul style="list-style-type: none"> You inserted a disc the unit cannot play; insert one it can. (4) You inserted a blank disc. You inserted a disc that has not been finalized. (4) |
| <p>"U11"</p> | <ul style="list-style-type: none"> The disc may be dirty. (right) You inserted a disc that has not been finalized. (4) |
| <p>"H□□" or "F7□□" (□□ stands for a number.)</p> | <ul style="list-style-type: none"> Trouble may have occurred. The number following "H" and "F7" depends on the status of the unit. Turn the unit off and then back to ON. Alternatively, turn the unit off, disconnect the AC mains lead, and then reconnect it. If the service numbers fail to clear, note the service number and contact a qualified service person. |
| <p>"nodISC"</p> | <ul style="list-style-type: none"> You haven't inserted a disc: Insert one. You haven't inserted the disc correctly: Insert it correctly. (9) |
| <p>"U70-1"</p> | <ul style="list-style-type: none"> The connected equipment is not HDMI compatible. |
| <p>"U70-□" (□ stands for a number.) The actual number following "U70-" will depend on the state of this unit.</p> | <ul style="list-style-type: none"> The HDMI connection acts unusually. <ul style="list-style-type: none"> The connected equipment is not HDMI compatible. The HDMI cable is too long. The HDMI cable is damaged. |

Television displays

| | |
|---|--|
| <p>"Ⓢ"</p> | <ul style="list-style-type: none"> The operation is prohibited by the unit or disc. |
| <p>"Cannot play group xx, content xx" "Cannot display group xx, content xx"</p> | <ul style="list-style-type: none"> You are trying to play incompatible group or content. (5) |
| <p>"Group xx, content xx is protected"</p> | <ul style="list-style-type: none"> You are trying to play protected group or content. You cannot play it. |

| | |
|--|--|
| <p>"Cannot play audio" "No audio"</p> | <ul style="list-style-type: none"> Audio has not been recorded, or recorded in a format this unit cannot playback. Only video playback is possible. (5) |
| <p>"Check the disc"</p> | <ul style="list-style-type: none"> This disc may be dirty. (below) |
| <p>"Due to copyright protection, audio cannot be output from HDMI"</p> | <ul style="list-style-type: none"> Should you connect equipment that does not support CPPM (27), the audio from the CPPM copy protected DVD-Audio cannot be output from HDMI AV OUT terminal. Connect the audio cable of the Audio/Video cable (L, R) to a HDMI compatible AUDIO IN terminal. (7) |
| <p>While "HDMI Status" displayed, no items are underlined</p> | <ul style="list-style-type: none"> If you select an item without an "*" in the "Video Output Mode" in Picture Menu, it will not be underlined. (18) |
| <p>"This disc may not be played in your region"</p> | <ul style="list-style-type: none"> You can only play DVD-Video if their region number is the same or includes the same region number as the unit or if the DVD-Video is marked "ALL". Confirm the region number for the unit on the rear panel. (Cover) |
| <p>No on-screen display.</p> | <ul style="list-style-type: none"> Select "On" in "On-Screen Messages" in "Display" tab. (21) |
| <p>"Authorization Error"</p> | <ul style="list-style-type: none"> You are trying to play the DivX VOD content that was purchased with a different registration code. You cannot play the content on this unit. (16) |
| <p>"Rented Movie Expired"^{#2} "Rental Expired"^{#3}</p> | <ul style="list-style-type: none"> The DivX VOD content has zero remaining plays. You cannot play it. (16) |

^{#1}MPEG: **Except Asia**

^{#2}**Except Asia**

^{#3}**Asia**

Maintenance

■ Clean this unit with a soft, dry cloth

- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.
- Cleaning of the lens is generally not necessary although this depends on the operating environment.
- Do not use commercially available lens cleaners as they may cause malfunction.

■ Clean discs

Wipe with a damp cloth and then wipe dry.



Specifications

Signal system: PAL 625/50, PAL525/60, NTSC

Operating temperature range: +5 to +35 °C

Operating humidity range: 5 to 90 % RH (no condensation)

Discs played (8 cm or 12 cm):

- (1) DVD (DVD-Video, DVD-Audio, DivX^{®6,7})
- (2) DVD-RAM (DVD-VR, JPEG^{®4,7}, MP3^{®2,7}, MPEG4^{®5,7}, DivX^{®6,7})
- (3) DVD-R (DVD-Video, DVD-VR, JPEG^{®4,7}, MP3^{®2,7}, MPEG4^{®5,7}, DivX^{®6,7})
- (4) DVD-R DL (DVD-Video, DVD-VR)
- (5) DVD-RW (DVD-Video, DVD-VR, JPEG^{®4,7}, MP3^{®2,7}, MPEG4^{®5,7}, DivX^{®6,7})
- (6) +R/+RW (Video)
- (7) +R DL (Video)
- (8) CD, CD-R/RW [CD-DA, Video-CD, SVCD^{®1}, MP3^{®2,7}, WMA^{®3,7}, JPEG^{®4,7}, MPEG4^{®5,7}, DivX^{®6,7}, HighMAT Level 2 (Audio and Image)]

Video output:

Output level: 1 Vp-p (75 Ω)

Output terminal:

The United Kingdom and Continental Europe

Pin jack (1 system)/AV

Others

Pin jack (1 system)

S-video output:

Y output level: 1 Vp-p (75 Ω)

C output level: NTSC: 0.286 Vp-p (75 Ω)

PAL: 0.300 Vp-p (75 Ω)

Output terminal:

The United Kingdom and Continental Europe

S terminal (1 system)/AV

Others

S terminal (1 system)

Component video output:

(NTSC: 480p/480i, PAL: 576p/576i)

Y output level: 1 Vp-p (75 Ω)

P_s output level: 0.7 Vp-p (75 Ω)

P_r output level: 0.7 Vp-p (75 Ω)

Output terminal: Pin jack (Y: green, P_s: blue, P_r: red)(1 system)

RGB video output: **The United Kingdom and Continental Europe**

R output level: 0.7 Vp-p (75 Ω)

G output level: 0.7 Vp-p (75 Ω)

B output level: 0.7 Vp-p (75 Ω)

Output terminal: AV

Audio output:

Output level: 2 Vrms (1 kHz, 0 dB)

Output terminal:

The United Kingdom and Continental Europe

Pin jack/AV

Others

Pin jack

Number of terminals: 2 channel: 1 system

5.1 channel discrete output (5.1 channel): 1 system

Audio performance:

(1) Frequency response:

•DVD (linear audio): 4 Hz to 22 kHz (48 kHz sampling)

4 Hz to 44 kHz (96 kHz sampling)

4 Hz to 88 kHz (192 kHz sampling)

•DVD-Audio:

4 Hz to 20 kHz

•CD Audio:

(2) S/N ratio:

•CD Audio: 115 dB

(3) Dynamic range:

•DVD (linear audio): 102 dB

•CD Audio: 98 dB

(4) Total harmonic distortion:

•CD Audio: 0.0025 %

Digital audio output:

Optical digital output: Optical terminal

Coaxial digital output: Pin jack

HDMI AV output

19 pin

HDMI Ver.1.2a (EDID Ver.1.3)

Pickup:

Wave length: 662 nm/785 nm

Laser power: CLASS 2/CLASS 3A

NORSK

Pickup:

Bølgelengde: 662 nm/785 nm

Laserstyrke: Ingen farlig stråling sendes ut

Power supply:

The United Kingdom, Australia and N.Z. AC 230 to 240 V, 50 Hz

Continental Europe AC 230 V, 50 Hz

Asia AC 110 to 240 V, 50/60 Hz

Power consumption:

The United Kingdom and Continental Europe 14 W

Others 13 W

Power consumption in standby mode: **approx. 1 W**

Dimensions (W×D×H): 430 mm ×251 mm×43 mm

Mass: 2.2 kg

Note

Specifications are subject to change without notice. Mass and dimensions are approximate.

^{®1}Conforming to IEC62107

^{®2}MPEG-1 Layer 3, MPEG-2 Layer 3

^{®3}Windows Media Audio Ver.9.0 L3

Not compatible with Multiple Bit Rate (MBR)

^{®4}Exif Ver 2.1 JPEG Baseline files

Picture resolution: between 160×120 and 6144×4096 pixels (Sub sampling is 4:0:0,

4:2:0, 4:2:2 or 4:4:4)

Extremely long and slender pictures may not be displayed.

^{®5}MPEG4 data recorded with the Panasonic SD multi cameras or DVD video recorders

Conforming to SD VIDEO specifications (ASF standard)/MPEG4 (Simple Profile)

video system/G.726 audio system

^{®6}Plays all versions of DivX[®] video (including DivX^{®6}) with standard playback of DivX[®]

media files. Certified to the DivX Home Theater Profile.

GMC (Global Motion Compensation) is not supported.

^{®7}The total combined maximum number of recognizable audio, picture and video

contents and groups: 4000 audio, picture and video contents and 400 groups.

Glossary

CPPM (Content Protection for Prerecorded Media)

A copy protection system used for DVD-Audio files. This unit supports CPPM.

DivX

DivX is a popular media technology created by DivX, Inc. DivX media files contain highly compressed video with high visual quality that maintains a relatively small file size.

Down-mixing

This is a process of remixing the multi-channel audio (surround sound) on some discs into two channels. When you want to listen to the audio on a DVD with a 5.1 channel digital surround track through your television speakers, the down-mixed audio will be output.

Some DVD-Audio prevent down-mixing of all or part of their contents. When playing such discs, or such parts of the disc, unless the number of connected speakers is the same as the disc's channel specification, audio will not be output properly.

Film and video

DVD-Videos are recorded using either film or video. This unit can determine which type has been used, then uses the most suitable method of progressive output.

Film: Recorded at 25 frames per second (PAL discs) or 24 frames per second (NTSC discs). (NTSC discs recorded at 30 frames per second as well). Generally appropriate for motion picture films.

Video: Recorded at 25 frames/50 fields per second (PAL discs) or 30 frames/60 fields per second (NTSC discs). Generally appropriate for TV drama programs or animation.

HDCD (High-Definition Compatible Digital)

HDCD-encoded CDs sound better because they are encoded with 20 bits, as compared with 16 bits for all other CDs.

HDMI (High-Definition Multimedia Interface)

HDMI is a next-generation digital interface for consumer electronic products. Unlike conventional connections, it transmits uncompressed digital video and audio signals on a single cable. This unit supports high-definition video output (720p, 1080i) from HDMI AV OUT terminal. To enjoy high-definition video a high definition compatible television is required.

MPEG4

A compression system for use on mobile devices or a network, that allows highly efficient recording at a low bit rate.

Sampling frequency

Sampling is the process of converting the heights of sound wave (analog signal) samples taken at set periods into digits (digital encoding). Sampling frequency is the number of samples taken per second, so larger numbers mean more faithful reproduction of the original sound.

Safety precautions

Placement

Set the unit up on an even surface away from direct sunlight, high temperatures, high humidity, and excessive vibration. These conditions can damage the cabinet and other components, thereby shortening the unit's service life. Do not place heavy items on the unit.

Voltage

Do not use high voltage power sources. This can overload the unit and cause a fire. Do not use a DC power source. Check the source carefully when setting the unit up on a ship or other place where DC is used.

AC mains lead protection

Ensure the AC mains lead is connected correctly and not damaged. Poor connection and lead damage can cause fire or electric shock. Do not pull, bend, or place heavy items on the lead.

Grasp the plug firmly when unplugging the lead. Pulling the AC mains lead can cause electric shock. Do not handle the plug with wet hands. This can cause electric shock.

Foreign matter

Do not let metal objects fall inside the unit. This can cause electric shock or malfunction.

Do not let liquids get into the unit. This can cause electric shock or malfunction. If this occurs, immediately disconnect the unit from the power supply and contact your dealer.

Do not spray insecticides onto or into the unit. They contain flammable gases which can ignite if sprayed into the unit.

Service

Do not attempt to repair this unit by yourself. If sound is interrupted, indicators fail to light, smoke appears, or any other problem that is not covered in these instructions occurs, disconnect the AC mains lead and contact your dealer or an authorized service center. Electric shock or damage to the unit can occur if the unit is repaired, disassembled or reconstructed by unqualified persons.


Extend operating life by disconnecting the unit from the power source if it is not to be used for a long time.

| | | |
|------------------|---|-----------------------|
| CAUTION | - LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. | FDA 21 CFR / Class II |
| CAUTION | - VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. | IEC60825-1 / Class 3b |
| ATTENTION | - RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU. | |
| ADVARSEL | - SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING. | |
| VARO! | - AVATTAESSA OLET ALTIINNA NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTELYLLE. ÄLÄ KATSO SÄTEESEEN. | |
| VARNING | - SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRakta EJ STRÅLEN. | |
| ADVARSEL | - SYNLIG OG USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN. | |
| VORSICHT | - SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN. | |
| 注意 | - 打开时有可见及不可见激光辐射。避免激光束照射。 | |
| 注意 | - ここを開くと可視及び不可視レーザー光が出ます。 ビームを見たり、触れたらしないでください。 | RQLCA0141 |

(Inside of product)
(Produktets innsida)
(Tuotteen sisällä)



 LUOKAN 1 LASERLAITE KLASS 1 LASER APPARAT

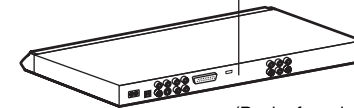

(Back of product)

The illustration shows the models for the United Kingdom and Continental Europe.

Index

| | | | |
|--------------------------------------|--------|--|--------|
| A A-B Repeat | 17 | Q Quick OSD | 11 |
| Advanced Disc Review | 11 | Quick Replay | 12 |
| Advanced Surround | 12 | QUICK SETUP | 8 |
| Advance still picture | 13 | R Random play | 10 |
| All group play | 10 | Re-initialise Setting | 21 |
| Angle select | 13 | Repeat | 12 |
| AV Enhancer | 11 | Resume play | 9 |
| C CD text playback | 14 | Rotate Picture | 13 |
| D Dialogue Enhancer | 18 | S Setup | 20 |
| DIRECT NAVIGATOR | 14 | Sound Enhancement | 19 |
| DivX | 16 | Soundtrack | 13 |
| Dolby Digital | 13, 21 | Subtitle | 13 |
| DTS | 13, 21 | T Time Slip for play only | 17 |
| E Enter number | 10 | Top Menu | 10, 15 |
| F Finalize | 4 | Z Zoom | 13 |
| Functions | 17 | | |
| H H.Bass | 11 | | |
| HighMAT | 14 | | |
| J Just Fit Zoom | 13 | | |
| M Manual skip | 12 | | |
| Manual Zoom | 13 | | |
| Marker | 17 | | |
| Menu | 10, 15 | | |
| MPEG | 13, 21 | | |
| Multi Re-master | 12 | | |
| N Navigation Menu | 15 | | |
| Night Sound Mode | 11 | | |
| O On-Screen Menus | 17 | | |
| P Picture Mode | 17 | | |
| Playlist | 14 | | |
| Play speed | 12 | | |
| Playback Menu | 15 | | |
| Program play | 10 | | |
| Programs | 14 | | |

–If you see this symbol–

Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.