

User Manual for Philips DVD737 upgrade disc

Introduction

This software can be used to upgrade Philips DVD737 DVD-player to the latest status. After you have completed the upgrade procedure, your DVD-player will typically perform better. What improvements are made depends on the upgrade software you're using as well as the software that your DVD-player contained before the upgrade.

Tools Required

You will need the following items:

- a personal computer
- a CD-R/RW drive and writing application
- a blank CD-R or CD-RW disc

How to download the software to your computer

Right mouse button click on the file and click 'Save Target As...' to save the file into your PC.

NOTE: Please do not rename the original filename, 'dvd737.rom'.

How to make an upgrade disc

Write the downloaded file onto a blank CD-R or CD-RW disc, using the following settings:

- File System CD-ROM ISO Level 2
- Mode 1/2/XA
- Character set ISO 9660
- Finalised, single session
- Write speed low

Finalised the disc. (The application may do this automatically.)

NOTE: Packet writing application for drag & drop copying cannot be used for creating an upgrade disc. Use only a dedicated CD writing application allowing 'disc at once' recording. No UDF setting as well.

Before you upgrade

It may be useful to write down the system version information of your DVD-player before you start the upgrade procedure, in case you need to call service.

- 1 Press **SYSTEM MENU** on the remote control
➤ **SETUP MENU** window appears
- 2 Press ■ (stop).
- 3 Followed by ⏪ (previous).
- 4 Followed by ⏩ (next).
- 5 The software version will appear on the left bottom corner of the **SETUP MENU** window.

DVD737 Software upgrade procedure

NOTE: Do not press any button and unplug the mains during upgrade.

- 1 Connect the mains cord to the power plug. Press **STANDBY-ON** button on the front panel or ⏻ **POWER** button on the remote control to activate the player.
- 2 Press ▲ **OPEN/CLOSE** to open the disc tray.
- 3 Insert the upgrade CD-R disc, label side up.
- 4 Press ▲ **OPEN/CLOSE** to close the disc tray.
- 5 First '**READING**' appears on the display, followed by '**UPGRADE**'. This stage of the procedure takes less than 2 minutes.
➤ If the software was successfully downloaded, the display will show '**DONE**' within a few seconds.

NOTE: If the display shows 'FAIL', please refer to Philips Service Center.

- 6 When the upgrade is completed the tray will open automatically.
➤ Remove the disc immediately.
- 7 **Unplug the mains cord from the power plug.**
- 8 Reconnect the mains cord to the power plug.
- 9 Press **STANDBY-ON** button on the front panel or ⏻ **POWER** on remote control to power up the player.
➤ The player functions as normal.