


# Quick Start Guide

DVP 5980K  
DVD Video Player



## What's in the box?

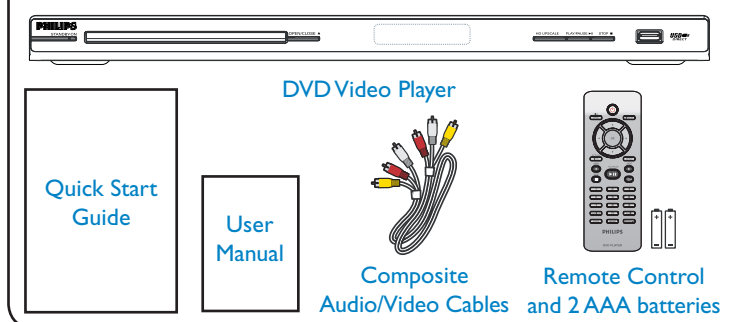




## Types of Video Quality

**Composite Video CVBS**  
(Good Quality)

**Component Video**  
(Better Quality)  
*Cable not supplied*

**HDMI**  
(Best Quality)  
*Cable not supplied*


## I Connect Basic Audio/Video Connections

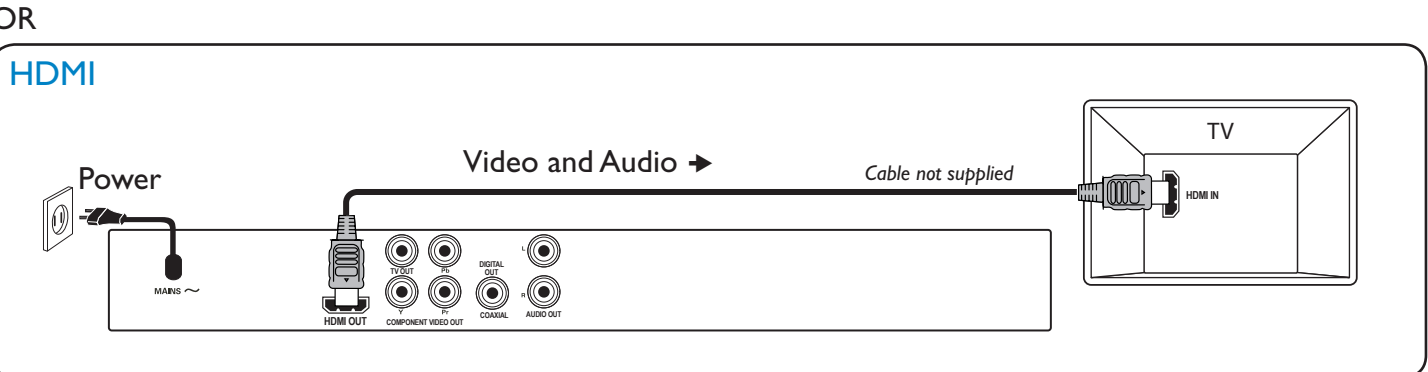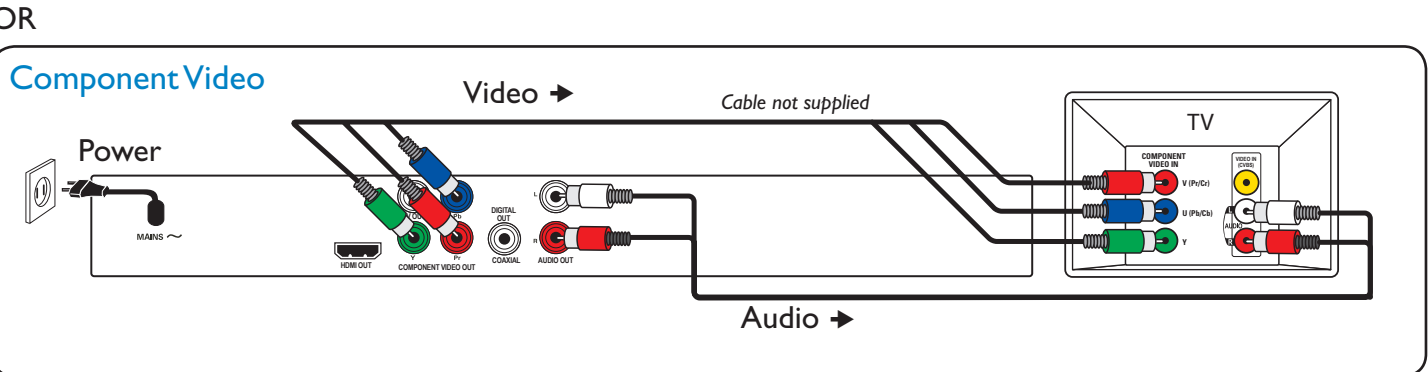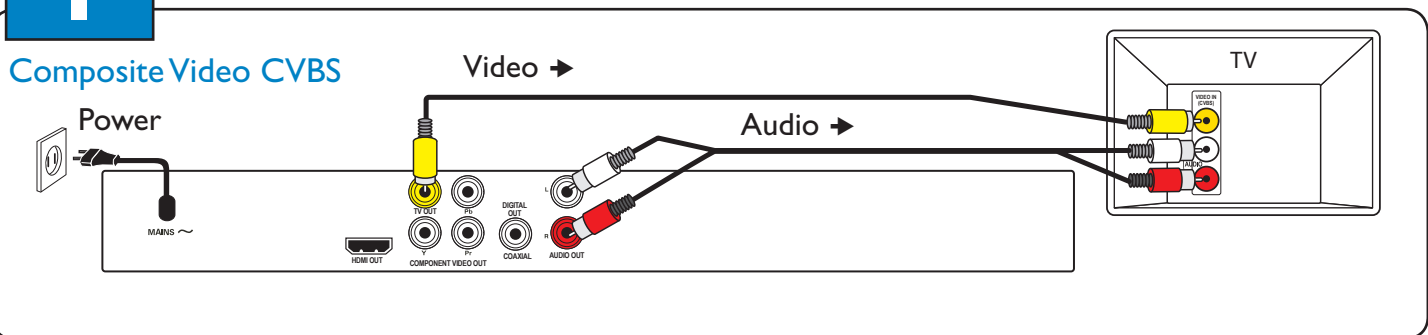

## 2 Set up

### A Finding the viewing channel

- 1 Press **⏻** (STANDBY-ON) on this unit to turn it on.

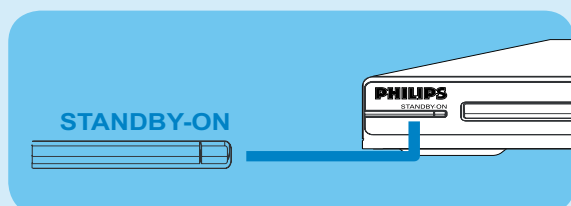


- 2 Turn on the TV. Use the TV's remote control to select the correct viewing channel.

**Note** To search for the correct viewing channel, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, **⏻** button) until you see the Video In channel.

### B Select the display language on the screen

- 1 Press **SETUP**.  
The { General Setup Page } appears.

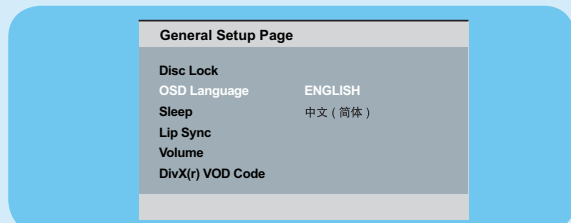

- 2 Press **▼** to select { OSD Language } and press **▶**.
- 3 Use **▲▼** keys to select a language option in the menu and press **OK** to confirm.
- 4 Press **SETUP** to exit.

**Note** The language set here is only for the menus that are shown on the TV while operating this unit, not for the DVD disc menu.

There are various setup options (Audio Setup, Video Setup, Preference Setup) available on this unit. Refer to the user manual for more information.


## 3 Enjoy

### A Start disc playback

- 1 Playback may start automatically when a disc has been loaded in the disc tray.

**Note** If a disc menu appears on the TV, use **▲▼◀▶** keys to navigate in the DVD menu.

- 2 Press **PLAY/PAUSE ▶||** to start playback.
- 3 To stop playback, press **STOP ■**.

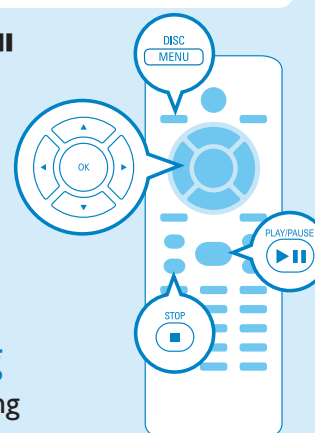

### Troubleshooting

For more troubleshooting tips, see the user manual.

#### No power

- Check if the AC power cord is properly connected.
- Press the STANDBY-ON on the top panel of this unit to turn on the power.

#### No picture

- Check connection to TV and ensure the plugs are firmly in place.

#### No sound or distorted sound

- Check audio connections and make sure that the connected audio device is turned on.
- When both coaxial and HDMI connection are made, check if {HDMI Audio Setup} is set to OFF to ensure sound from AV receiver when {Digital Output - ALL} is selected.
- For HDMI connection, check if your {HDMI Audio Setup} is set to ON. When it is set to ON, {Digital Output} and {LPCM Output} could not be selected.

#### Remote control does not work

- Check the batteries are loaded correctly or replace the batteries with new ones.
- Reduce the distance between the remote control and this unit.
- Point the remote control directly toward the IR sensor.

### Need help?

#### User Manual

For more product information refer to the user manual of the DVD player.

#### Online

Go to [www.philips.com/welcome](http://www.philips.com/welcome)



2007 © Koninklijke Philips N.V.  
All rights reserved.  
[www.philips.com](http://www.philips.com)  
SL/0722/93\_02