

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

HTS3019



---

EN **User manual**

---

DE **Benutzerhandbuch**

---

ES **Manual del usuario**

---

FR **Mode d'emploi**

---

NL **Gebruiksaanwijzing**

---

**PHILIPS**



# Contents

---

<b>1 Important</b>	4
Safety and important notice	4
Trademark notice	5

---

<b>2 Your Home Theatre System</b>	6
Feature highlights	6
Product overview	6

---

<b>3 Connect</b>	9
Place the Home Theatre System	9
Connect video cables	9
Connect speakers and subwoofer	10
Connect radio antenna	11
Connect audio cables/other devices	11
Connect power cord	12

---

<b>4 Get started</b>	13
Insert the remote control batteries	13
Find the correct viewing channel	13
Select menu display language	14
Change speaker settings	14
Select a play source	15

---

<b>5 Play</b>	16
Play a disc	16
Play video	16
Play music	19
Play photo	20
Play from USB device	21
Play from radio	21

---

<b>6 Adjust sound</b>	23
Control the volume	23
Select surround sound	23
Select a preset sound	23

---

<b>7 Adjust settings</b>	24
General setup	24
Audio setup	25
Video setup	26
Preferences	27

---

<b>8 Additional Information</b>	29
Update software	29
Care	29

---

<b>9 Specifications</b>	30
-------------------------	----

---

<b>10 Troubleshooting</b>	32
---------------------------	----

---

<b>11 Glossary</b>	34
--------------------	----

# 1 Important

## Safety and important notice



### Warning

- Risk of overheating! Never install the Home Theatre System in a confined space. Always leave a space of at least 4 inches around the Home Theatre System for ventilation. Ensure curtains or other objects never cover the ventilation slots on the Home Theatre System.
- Never place the Home Theatre System, remote control or batteries near naked flames or other heat sources, including direct sunlight.
- Only use this Home Theatre System indoors. Keep this Home Theatre System away from water, moisture and liquid-filled objects.
- Never place this Home Theatre System on other electrical equipment.
- Keep away from this Home Theatre System during lightning storms.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Visible and invisible laser radiation when open. Avoid exposure to beam.



This product complies with the radio interference requirements of the European Community.

This product complies with the requirements of the following directives and guidelines: 2004/108/EC, 2006/95/EC.

## Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed-out wheeled bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on the separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences for the environment and human health.

## Copyright notice



**Be responsible  
Respect copyrights**

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protected technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

### Mains fuse (UK only)

This Home Theatre System is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the same value as indicated on the plug (example 10A).

- 1 Remove fuse cover and fuse.
- 2 The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.
- 3 Refit the fuse cover.

In order to maintain conformity to the EMC directive, the mains plug on this product must not be detached from the mains cord cable.

## Trademark notice



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories.



DivX, DivX Ultra Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

Official DivX® Ultra Certified product. Plays all versions of DivX® video (including DivX® 6) with enhanced playback of DivX® media files and the DivX® Media Format. Plays DivX® video with menus, subtitles and audio tracks.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



ENERGY STAR and the ENERGY STAR mark are registered U.S. trademarks.



# 2 Your Home Theatre System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## Feature highlights

### Listen to rich uncompressed multi-channel surround sound

This Home Theatre System supports 5.1 channels of uncompressed audio that delivers a real-to-life sound experience as if you are listening to it live.

### USB direct

Simply plug your USB device into the USB socket to play your MP3/WMA/JPEG/DivX files.

### Sync the audio output with the video play

Synchronise audio and video by delaying the audio output if the video signal sent to the TV is slower than the audio streams.

### Screen Fit

View the movie in full screen display on any TV. It is only applicable to DVD and JPEG files.


## Region codes

You can play discs with the following region codes.

DVD region code	Countries
 	Europe
 	Russia

## Product overview

### Remote control

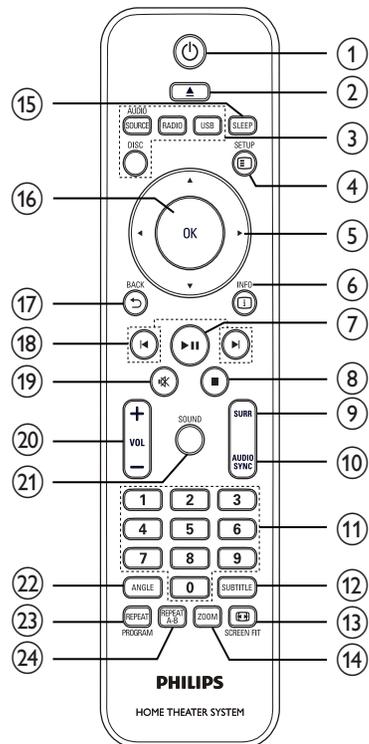

- ① **⏻ (Standby-On)**
  - Turns on the Home Theatre System or switches to standby mode.
- ② **⬆ (Open/Close)**
  - Opens or closes the disc compartment.
- ③ **Source buttons**
  - **AUDIO SOURCE:** Selects an audio input source.
  - **RADIO:** Switches to FM band.
  - **USB:** Switches to the USB source.
  - **DISC:** Switches to the disc source.
- ④ **⌘ SETUP**
  - Accesses or exits the setup menu.
- ⑤ **⬆⬇⬆⬇ (Navigation buttons)**
  - Navigates through the menus.
  - Press left and right for fast backward or forward search.
  - In radio mode, press up and down to tune the radio frequency.
  - In radio mode, press left or right to start auto search.
- ⑥ **⌘ INFO**
  - For discs, displays information about the current status or the disc.
  - For slideshows, displays a thumbnail view of photo files.
- ⑦ **▶⏸ (Play/Pause)**
  - Starts, pauses or resumes disc play.
  - In radio mode, automatically tunes radio stations during first-time setup.
- ⑧ **■ (Stop)**
  - Stops disc play.
  - In radio mode, erases the current preset radio station.
- ⑨ **SURR (Surround Sound)**
  - Switches to supported surround sound or stereo sound.
- ⑩ **AUDIO SYNC**
  - Selects an audio language or channel on a disc.
  - Press and hold to access the setting for audio sync, then press **VOL +/-** to set the audio delay time.
- ⑪ **Numeric buttons**
  - Selects an item to play.
- ⑫ **SUBTITLE**
  - Selects the subtitle language on a disc.
- ⑬ **SCREEN FIT**
  - Fits the picture format to the TV screen (using zoom function: 1.3X and 1.6X).
- ⑭ **ZOOM**
  - Zooms in or out of the picture.
- ⑮ **SLEEP**
  - Sets a delay after which the Home Theatre System switches to standby.
- ⑯ **OK**
  - Confirms an entry or selection.
- ⑰ **↶ BACK**
  - Returns to a previous screen.
  - For DVD, goes to the title menu.
  - For VCD version 2.0 or SVCD with PBC turned on, returns to the menu during playback.
- ⑱ **⏪/⏩ (Previous/Next)**
  - Skips to the previous or next title, chapter or track.
- ⑲ **🔇 (Mute)**
  - Mutes or restores audio output.
- ⑳ **VOL +/-**
  - Increases or decreases volume.
- ㉑ **SOUND**
  - Selects a predefined sound effect.
- ㉒ **ANGLE**
  - Displays video from different camera angles.


### 23 REPEAT / PROGRAM

- Selects or turns off repeat or shuffle mode.
- In radio mode, resets the list of preset stations: press to manually reset; press and hold to automatically reset.

### 24 REPEAT A-B

- Marks the section for repeat play or turns off repeat mode.

### Main unit

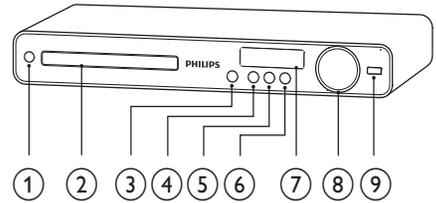

#### 1 (Standby-On)

- Turns on the Home Theatre System or switches to standby mode.

#### 2 Disc compartment

#### 3 (Open/Close)

- Opens or closes the disc compartment.

#### 4 (Play/Pause)

- Starts, pauses or resumes disc play.
- In radio mode, automatically tunes radio stations during first-time setup.

#### 5 (Stop)

- Stops disc play.
- In radio mode, erases the current preset radio station.

#### 6 SOURCE

- Selects a media to play or listen to audio from the connected device.

#### 7 Display panel

#### 8 VOLUME

- Increases or decreases volume.

#### 9 (USB)

- Connects a USB supported device.

# 3 Connect

Make the following connections to use your Home Theatre System.

### Basic connections:

- Video
- Speakers and subwoofer
- Power

### Optional connections:


- Radio antenna
- Audio
  - Audio from TV
  - Audio from digibox/recorder/game console
- Other devices
  - USB device

### Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all the devices are disconnected from the power outlet.

## Place the Home Theatre System

- Place the Home Theatre System where it cannot be pushed, pulled over or knocked down. Do not place it in an enclosed cabinet.
- Make sure that you have full access to the power cord for easy disconnection of the Home Theatre System from the power supply.

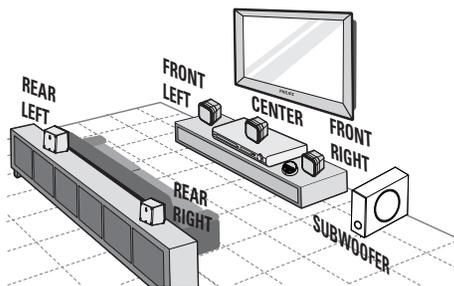

- 1 Place this Home Theatre System near the TV.
- 2 Place the speakers system at normal listening ear-level and directly parallel to the listening area.
- 3 Place the subwoofer in the corner of the room or at least 3 feet away from the TV.

### Tip

- To avoid magnetic interference or unwanted noise, never place this Home Theatre System too close to any radiation devices.

## Connect video cables


Connect this Home Theatre System to TV to view disc play. Select the best video connection that the TV can support.

- Option 1: Connect to the SCART socket (for a standard TV).
- Option 2: Connect to the VIDEO socket (for a standard TV).

### Note

- You must connect this Home Theatre System directly to a TV.

## Option 1: Connect to the SCART socket

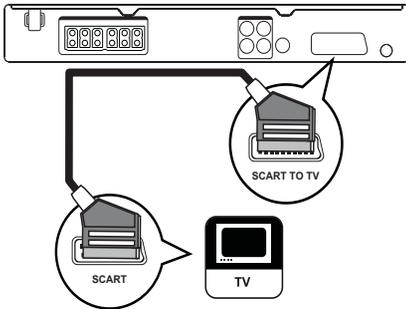


- 1 Connect a scart cable (not supplied) to the **SCART TO TV** socket on this Home Theatre System and the SCART input socket on the TV.

### Note

- Scart connection allows TV's audio output through the speakers. Press **AUDIO SOURCE** repeatedly until 'SCART IN' is displayed on the display panel.
- This type of connection provides good picture quality.

## Option 2: Connect to the Video (CVBS) socket

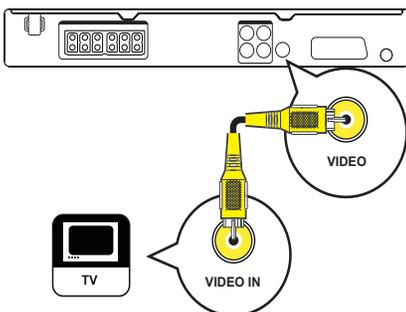


- 1 Connect a composite video cable to the **VIDEO** socket on this Home Theatre System and the VIDEO input socket on the TV.

### Note

- The video input socket on the TV might be labelled as A/V IN, VIDEO IN, COMPOSITE or BASEBAND.
- This type of connection provides standard picture quality.

## Connect speakers and subwoofer

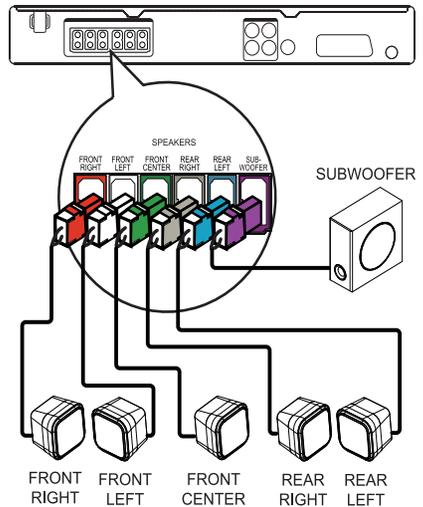


- 1 Connect the speakers and subwoofer to the matching sockets on the Home Theatre System.

### Note

- Ensure that the colours of the plugs and sockets are matched.

## Connect radio antenna

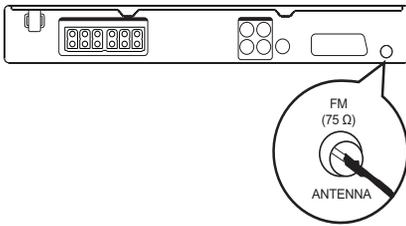

- 1 Connect the FM antenna to the **FM75 Ω** socket on this Home Theatre System (for some models, this cable is already connected).
- 2 Extend the FM antenna and fix its ends to the wall.


### Tip

- For better FM stereo reception, connect to an external FM antenna.

## Connect audio cables/other devices

Route the audio from other devices to this Home Theatre System to enjoy audio play with multi-channel surround capabilities.

### Connect audio to TV

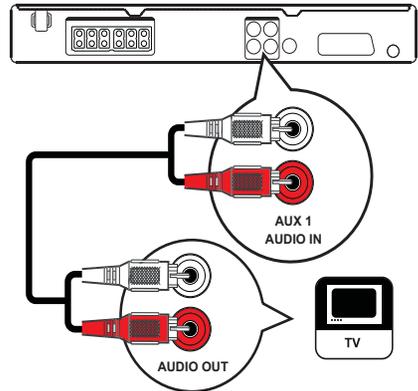


- 1 Connect the audio cables (not supplied) to the **AUDIO IN-AUX1** sockets on the Home Theatre System and the **AUDIO** output sockets on the TV.

### Note

- To listen to the audio output from this connection, press **AUDIO SOURCE** repeatedly until 'AUX1' is displayed on the display panel.

## Connect audio from cable box/ recorder/game console

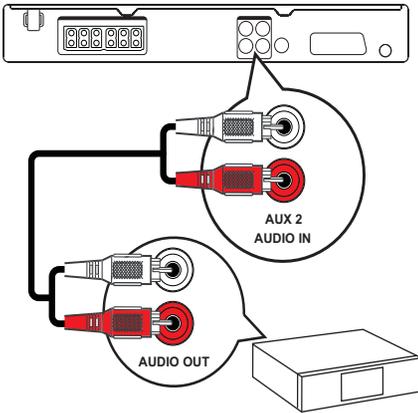


- 1 Connect the audio cables (not supplied) to the **AUDIO IN-AUX2** sockets on the Home Theatre System and the **AUDIO** output sockets on the device.

### Note

- To listen to the audio output from this connection, press **AUDIO SOURCE** repeatedly until 'AUX2' is displayed on the display panel.

## Connect USB device

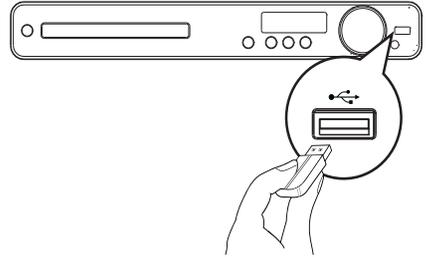

- 1 Connect the USB device to **USB** socket on this Home Theatre System.

### Note

- This Home Theatre System can only play/view MP3, WMA, DivX (Ultra) or JPEG files that are stored on such devices.
- Press **USB** to access the content and play the files.

## Connect power cord


### Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the Home Theatre System.

- 1 Connect the power cord to the socket when all the required connections are made.  
↳ The Home Theatre System is ready to be set up for use.

## 4 Get started

### Insert the remote control batteries

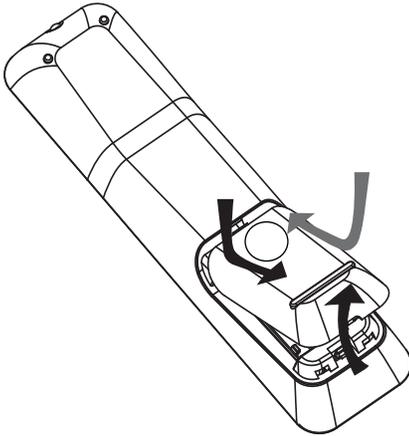

- 1 On the back of the remote control, slide the battery cover to remove it.
- 2 Insert the 2 supplied batteries (AAA). Be sure the + and - ends of the batteries line up with the markings inside the case.
- 3 Slide the cover back into position.




#### Note

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

### Control a play source

- 1 Press **RADIO**, **USB** or **DISC** button to select the source you wish to control.
- 2 Select the desired function (for example **◀▶**).

### Navigate through the menu

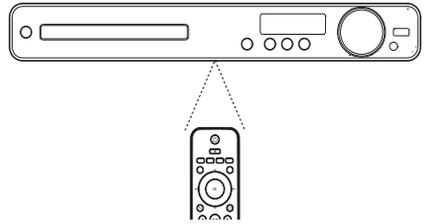

- 1 Point the remote control directly at the remote sensor on the Home Theatre System and select the desired function.
- 2 Press the following buttons on the remote control to navigate through the on-screen menus.

Button	Action
▲▼	Move up or down
◀▶	Move left or right
OK	Confirm a selection
1 2 3	Enter numbers
4 5 6	
7 8 9	
0	

### Find the correct viewing channel

- 1 Press **⏻** to turn on the Home Theatre System.
- 2 Press **DISC** to switch to disc mode.
- 3 Turn on the TV and switch to the correct video-in channel in one of the following ways:
  - Go to the lowest channel on your TV, then press the Channel Down button until you see the Philips screen.
  - Press the **↔ SOURCE** button repeatedly on the remote control of your TV.

## Tip

- The video-in channel is between the lowest and highest channels and may be called FRONT, A/V IN, VIDEO, HDMI etc. See the TV user manual on how to select the correct input on the TV.

## Select menu display language

General Setup	
Disc Lock	English
Display Dim	Français
OSD Language	Deutsch
Screen Saver	Italiano
Sleep Timer	Español
DivX(R) VOD Code	Português
	Nederlands
	Dansk ▼

- 1 Press **DISC**.
- 2 Press **SETUP**.  
↳ **[General Setup]** menu is displayed.
- 3 Press **▶**.
- 4 Press **▲▼** to select **[OSD Language]** in the menu, then press **▶**.
  - The language options are different depending on your country or region. It may not correspond to the illustration shown here.
- 5 Press **▲▼** to select a language, then press **OK**.

## Tip

- You can set the default language for DVD disc menu (see 'Adjust settings' > 'Preferences' > **[Disc Menu]**).

## Change speaker settings

Ideally, the distance between listening position and all the speakers should be the same. If not, change the speaker settings based on their distance from the listening position to obtain the best possible surround sound.

Audio Setup	
Speakers Volume	
Speakers Delay	
Night Mode	

- 1 Press **DISC**.
- 2 Press **SETUP**.
- 3 Press **▼** to select **[Audio Setup]** in the menu, then press **▶**.
  - If the speaker setup option is not accessible, press **■** twice before you try the above steps again.

### To set the speakers level

- 1 Select **[Speakers Volume]** in the menu, then press **▶**.

Speakers Volume Setup	
Front Left	 0dB
Front Right	 0dB
Center	 0dB
Subwoofer	 0dB
Rear Left	 0dB
Rear Right	 0dB

- 2 Press ◀▶ to change the volume level, then press **OK**.
- ↳ The test tone is emitted from the speaker.
  - Repeat the above setting for other speakers until all the speakers' output level sounds equally balance.
  - To exit the menu, press **⏏ SETUP**.

### To set the output delay time (centre and rear speakers only)

- 1 Select [**Speakers Delay**] in the menu, then press ▶.

Speakers Distance Setup		
Center	<input type="text"/>	O.M.S
Rear Left	<input type="text"/>	O.M.S
Rear Right	<input type="text"/>	O.M.S


- 2 Press ◀▶ to set the delay time, then press **OK**.
- Repeat the above setting for other speakers until the sound output from different speakers reach the listening position at the same time.
  - To exit the menu, press **⏏ SETUP**.

#### Tip

- Set a longer delay time if the centre speaker or rear speaker is closer to the listening position than the front speaker.
- Allow 1ms setting for every 1 foot distance between the speaker and the listening position.


## Select a play source

### On the main unit

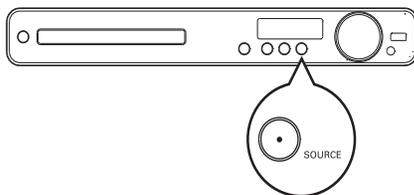

- Press the **SOURCE** button repeatedly to select: **DISC > USB > FM > AUX 1 > AUX 2 > SCART IN > DISC ...**

### On the remote control

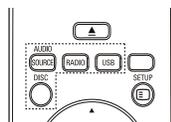

- Press **AUDIO SOURCE** repeatedly to switch to the connected audio source.

Display	Device connected to
SCART IN	SCART TO TV socket
AUX 1	AUDIO IN-AUX 1 sockets
AUX 2	AUDIO IN-AUX 2 sockets

- Press **RADIO** to switch to FM band.
- Press **USB** to switch to USB mode.
- Press **DISC** to switch to disc mode.

# 5 Play

## Play a disc

### ! Caution

- Never place any objects other than discs into the disc compartment.
- Never touch the disc optical lens inside the disc compartment.

- 1 Press **▲** to open the disc compartment.
- 2 Insert a disc with its label facing up.
  - For double-sided discs, load the side to play face up.
- 3 Press **▲** to close the disc compartment and start disc play.
  - To view disc play, turn on the TV to the correct viewing channel for this Home Theatre System.
  - To stop disc play, press **■**.

### ≡ Note

- Check the types of discs supported (see 'Specifications' > 'Playback media').
- If the password entry menu is displayed, enter the password before you can play the locked or restricted disc.
- If you pause or stop a disc for about 15 minutes, the screen saver is activated. To deactivate the screen saver, press **DISC**.
- After you pause or stop a disc and no buttons are pressed within 30 minutes, this Home Theatre System automatically switches to standby mode.

## Play video

### ≡ Note

- For video disc, playback always resumes from the point where it was last stopped. To start play from the beginning, press **◀** while the message is displayed.

## Control video play

- 1 Play a title.
- 2 Use the remote control to control the title.

Button	Action
<b>▶  </b>	Starts, pauses or resumes disc play.
<b>■</b>	Stops disc play.
<b>▶ </b>	Skips to the next title or chapter.
<b>◀ </b>	Skips to the beginning of the current title or chapter. Press twice to jump to the previous title or chapter.
<b>◀◀ / ▶▶</b>	Searches fast-forward (right) or fast-backward (left). Press repeatedly to change the search speed. In pause mode, slow motion backward or forward play.
<b>▲ / ▼</b>	Searches slow-forward (down) or slow-backward (up). Press repeatedly to change the search speed. For VCD, only slow-forward play is possible.

## Change video play

- 1 Play a title.
- 2 Use the remote control to change the video play.

Button	Action
<b>AUDIO SYNC</b>	Selects an audio language or channel on a disc.
<b>SUBTITLE</b>	Selects the subtitle language on a disc.
<b>REPEAT</b>	Selects or turns off repeat or shuffle mode. Repeat options vary depending on the disc type. For VCDs, repeat play is only possible if the PBC mode is turned off.
<b>ZOOM</b>	Zooms in or out of the picture. To pan through the zoomed image, press the <b>Navigation buttons</b> .
<b>INFO</b>	Displays the current status or disc information. You can change the video play options here without interrupting disc play.
<b>SCREEN FIT</b>	Fits the picture format to the TV screen (using zoom factor 1.3X and 1.6X). <ul style="list-style-type: none"> <li>It is only applicable to DVD and JPEG files, not available for DivX movie.</li> </ul>

### Note


- Some operations may not work with some discs. See the information accompanying the disc for details.

- In some menus, press the **Numeric buttons** to input your selection.
- To return to the title menu during play, press **BACK**.

## Access VCD menu or preview menu

The PBC (Playback Control) for VCD is activated by default in the factory. When you load a VCD, the contents menu is displayed.

- Press **▲▼** to select a play option, then press **OK** to start play.
  - If PBC is off, it skips the menu and starts play from the first title.
  - To return to the menu during play, press **BACK** (only possible if the PBC mode is on).
- Press **DISC** to preview the contents of the disc.
  - To exit the menu, press **DISC**.

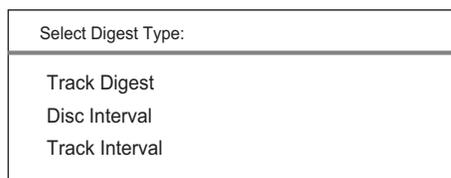

- Select a preview play option, then press **OK**

### [Track Digest]

Plays the first few seconds of each track in a disc.


### [Disc Interval]

Divides the total disc time by six and play the first few seconds of these intervals.

### [Track Interval]

Divides the current track by six and play the first few seconds of these intervals.  
This option is not available in stop mode.

## Access DVD menu

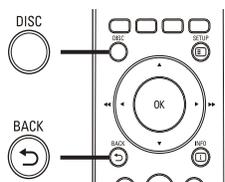


- Press **DISC** to access disc main menu.
- Select a play option, then press **OK**.

## Tip

- You can change the PBC setting (see 'Adjust settings' > 'Preferences' > [PBC]).

## Sync audio output with video play

If the video play is slower than the audio output (sound does not match with the pictures), you can delay the audio output to match the video.

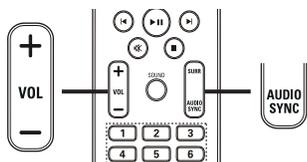

- Press and hold **AUDIO SYNC** until 'AUDIO SYNC XXX' is displayed. 'XXX' denotes the delay time.
- Within five seconds, press **VOL +/-** to set the delay time for audio output.

## Note

- If the volume control is not used within 5 seconds, it resumes normal volume control function.

## Repeat play a specific section

- During play, press **REPEAT A-B** where you want to set as the starting point.
- Press **REPEAT A-B** again to set the ending point.  
↳ Repeat play starts.
- To cancel repeat play, press **REPEAT A-B** again.

## Note

- The marked section for repeat play is only possible within a track/title.


## View video play from different camera angles

- During play, press **ANGLE** repeatedly to display the angle options.  
↳ Play changes to the selected angle.

## Note

- Applicable only to discs containing multi-angle scenes.

## Quick skip play to a specific time

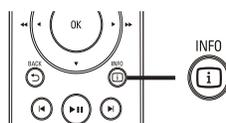

- During play, press **INFO**.  
↳ The disc status menu is displayed.
- Press **▲▼** to view information, then press **OK**.
  - [TT Time]** (title time)
  - [Ch Time]** (chapter time)
  - [Disc Time]** (disc time)
  - [Track Time]** (track time)
- Press the **Numeric buttons** to enter the time where you want to skip to, then press **OK**.

## Note

- The options are different depending on the disc type.

## Play DivX® video

DivX video is a digital media format that retains high quality despite a high rate of compression. You can enjoy DivX video on this DivX® Certified Home Theatre System.

- 1 Insert a disc or USB device that contains the DivX videos.
- 2 Press **DISC** or **USB**.  
↳ A contents menu is displayed.
- 3 Select a title to play, then press **▶||**.
- 4 Use the remote control to control the title.

Button	Action
<b>AUDIO</b>	Selects an audio language or channel.
<b>SYNC</b>	
<b>SUBTITLE</b>	Select DVD or DivX subtitle languages.
■	Stops play. For DivX Ultra video, press this button again to display the contents menu.
<b>ⓘ INFO</b>	Displays DivX Ultra video information.

 
### Note

- You can only play DivX videos that were rented or purchased with the DivX registration code of this Home Theatre System (see 'Adjust settings' > 'General setup' > **[DivX(R) VOD Code]**).
- You can play DivX video files of up to 4GB.
- If the subtitle does not appear correctly, change the character set (see 'Adjust settings' > 'Preferences' > **[DivX Subtitle]**).
- This Home Theatre System can display up to 45 characters in the subtitle.

## Play music

### Control audio track play

- 1 Play a track.
- 2 Use the remote control to control the track.

Button	Action
<b>▶  </b>	Starts, pauses or resumes disc play.
■	Stops disc play.
<b>▶ </b>	Skips to the next track.
<b>◀ </b>	Skips to the beginning of the current track. Press twice to jump to the previous track.
	Selects an item to play.
<b>◀◀ / ▶▶</b>	Searches fast-forward (right) or fast-backward (left). Press repeatedly to change the search speed.
<b>REPEAT</b>	Selects or turns off repeat or shuffle mode.

### Play MP3/WMA music

MP3/WMA is a type of highly compressed audio file (files with .mp3 or .wma extensions).


- 1 Insert a disc or USB that contains the MP3/WMA music.
- 2 Press **DISC** or **USB**.  
↳ A contents menu is displayed.
- 3 Select a folder, then press **OK**.
- 4 Select a track to play, then press **▶||**.
  - To return to the main menu, press **↶ BACK** or press **▲** until 'Previous' folder is selected, then press **OK**.

## Note

- For disc recorded in multiple sessions, only the first session is played.
- This Home Theatre System does not support MP3PRO audio format.
- If any special characters are present in the MP3 track name (ID3) or album name, it might not be displayed correctly on the screen because these characters are not supported.
- Some WMA files are protected by Digital Rights Management and cannot be played on this Home Theatre System.
- Folders/files that exceed the supported limit of this Home Theatre System will not be displayed or played.

## Tip

- You can select the display of data contents, view folders or files (see 'Adjust settings' > 'Preferences' > [MP3/JPEG Display]).

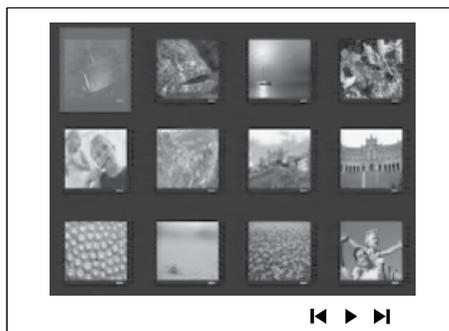

- To go to previous or next screen display, press ◀ / ▶.
- To select a photo, press the **Navigation buttons**.
- To display the selected photo only, press **OK**.

- 4 Press ▶▶ to start slideshow play.
- To return to the menu, press ↩ **BACK**.

## Note

- You may require longer time to display the disc content on the TV due to the large number of songs/photos compiled onto one disc.
- If the JPEG photo is not recorded with an 'exif' type file, the actual thumbnail picture is not shown on the display. It is replaced by a 'blue mountain' thumbnail picture.
- This Home Theatre System can only display digital camera pictures according to the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG and pictures in formats other than JPEG, or sound clips associated with pictures.
- Folders/files that exceed the supported limit of this Home Theatre System are not displayed or played.

## Play photo

### Play photo as slideshow

This Home Theatre System can play JPEG photos (files with .jpeg or .jpg extensions).

- 1 Insert a disc or USB that contains the JPEG photos.
- 2 Press **DISC** or **USB**.
  - ↳ Slideshow begins (for Kodak disc) or a contents menu (for JPEG disc) is displayed.
- 3 Select the folder/album you want to play.
  - To preview the photos in the folder/album, press **INFO**.

### Control photo play

- 1 Play photo slideshow.
- 2 Use the remote control to control the photo.

Button	Action
◀	Skips to the previous photo.
▶	Skips to the next photo.
▲	Rotates the photo clockwise.
▼	Rotates the photo anti-clockwise.
<b>ZOOM</b>	Zooms in or out of the picture. Play pause in zoom mode.
■	Stops play.

## Play musical slideshow


Play MP3/WMA music files and JPEG photo files simultaneously to create musical slideshow. The MP3/WMA and JPEG files must be stored on the same disc or USB device.

- 1 Play MP3/WMA music.
- 2 Navigate to the photo folder/album and press **OK** to start slideshow play.
  - ↳ Slideshow begins and continues till the end of the photo folder or album.
  - ↳ Audio continues to play till the end of the disc.
    - To stop slideshow play, press **■**.
    - To stop music play, press **■** again.

## Play from USB device

This Home Theatre System plays/views MP3, WMA, DivX (Ultra) or JPEG files on the following USB devices:

- flash drive
- memory card reader
- HDD (external power source needed)

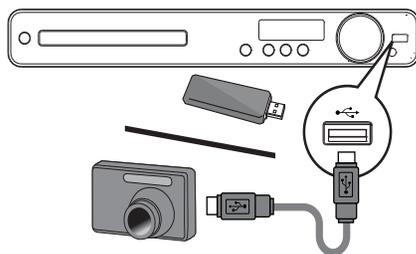


- 1 Connect a USB storage device to the **(USB)** socket.
- 2 Press **USB**.
  - ↳ A contents menu is displayed.
- 3 Select a file to play, then press **▶▶**.
  - ↳ Play starts.
- 4 To stop play, press **■** or remove the USB device.

### Note

- If the device does not fit into the USB socket, connect it through a USB extension cable.
- If you connect a multiple USB card/device reader, only one card/device can be accessed.
- Digital cameras that need PC software or use PTP protocol are not supported.

## Play from radio

Check if the FM antenna has been connected to this Home Theatre System. If not, connect the supplied FM antenna to the **FM75 Ω** socket and fix its ends to the wall.

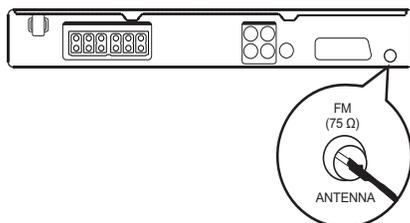

## Tip

- For better FM stereo reception, connect an external FM antenna (not supplied).
- Position the antenna as far away as possible from your TV, VCR or other radiation source to prevent interference.

## First time tuning

When you access radio mode for the first time, follow the instructions to install the radio stations.

- 1 Press **RADIO**.  
↳ 'AUTO INSTALL ... PRESS PLAY' is displayed.
- 2 Press **▶||**.  
↳ All detected radio stations are stored.  
↳ Once complete, it tunes to the first preset radio station.
  - To stop auto tuning, press **■**.

## Note

- This Home Theatre System can store up to a maximum of 40 radio stations.
- If auto installation is not activated or less than 5 radio stations are stored, you will be prompted to install the radio stations again.

## Listen to radio

- 1 Press **RADIO**.
- 2 Use the remote control to control the radio.

Button	Action
<b>◀▶</b>	Selects a preset radio station.
<b>▲▼</b>	Tunes the radio frequency up or down.
<b>■</b>	Press and hold this button to erase the current radio station from the preset list. The preset number for other radio stations remain unchanged.

## Reinstall all the radio stations

- 1 Press **RADIO**.
- 2 Press and hold **PROGRAM** for more than 5 seconds.  
↳ All previously stored radio stations are replaced.

## Note

- Check the radio antenna connection if no stereo signal is detected or less than 5 stations are detected during radio installation.

## Search and store radio stations individually


- 1 Press **RADIO**.
- 2 Press **◀◀ / ▶▶**.  
↳ It starts searching until a radio station is detected.
- 3 Repeat step 2 until you tune to the radio station you wish to store.
  - To finetune the radio frequency, press **▲ / ▼**.
- 4 Press **PROGRAM**.  
↳ The preset station number blinks.  
↳ If no action is carried out within 20 seconds after the above step, it exits the preset mode.
- 5 Press **◀ / ▶** (or the **Numeric buttons**) to select a preset number to store.
- 6 Press **PROGRAM** to confirm.

# 6 Adjust sound

## Control the volume

- 1 Press **VOL +/-** to increase or decrease the volume.
  - To mute, press **MUTE**.
  - To restore the volume, press **MUTE** again or press **VOL +**.

## Select surround sound

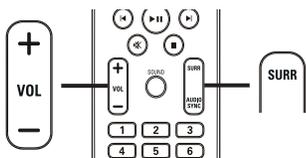


- 1 Press **SURR** repeatedly to select the best surround output that's available on the disc.

Option	Description
<b>5 CH STEREO</b>	Enhances the stereo channel output by duplicating the sound output to the centre and rear speakers. Ideal for party music.
<b>MULTI-CHANNEL / DPLII</b>	Multi-channel surround output: Dolby Digital and Dolby Pro Logic II.
<b>STEREO</b>	Stereo sound

### Note

- "Dolby Prologic II" 5-channel mode is the default surround mode whenever you turn on this Home Theatre System or change to other play source.

## Select a preset sound

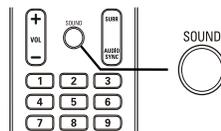

- 1 Press **SOUND** repeatedly to select the sound effect that most suitable for the video or music you play.

Video/Music	Description
<b>ACTION / ROCK</b>	Enhance low and high range for great sounding movie effects and atmosphere. Great for action movies and rock/pop music.
<b>CONCERT/ CLASSIC</b>	Flat and pure sound mode. Ideal for listening to classical music and watching live concert disc.
<b>DRAMA / JAZZ</b>	Clear mid and high range. Recreates the atmosphere of a live club with the artist just in front of you. Good for jazz music and watching dramas.
<b>SPORTS</b>	Moderate mid range and surround effects for clear vocals and the atmosphere of a live sports venue. It is also ideal for video gaming.
<b>NIGHT</b>	Dynamically controlled sound mode suitable for watching movies at night or for nonintrusive background music.

# 7 Adjust settings

You can customise various kinds of settings as you prefer. Refer to the following instructions to navigate through the setup menus.

Symbol	Options
	[General Setup]
	[Audio Setup]
	[Video Setup]
	[Preferences]

## Note

- If the setup option is greyed out, it means the setting cannot be changed in the current state.

## General setup

General Setup	
Disc Lock	
Display Dim	
OSD Language	
Screen Saver	
Sleep Timer	
DivX(R) VOD Code	

1 Press **SETUP**.  
↳ [General Setup] menu is displayed.

2 Press **▶**.

3 Select an option, then press **OK**.

4 Select a setting, then press **OK**.

- To return to the previous menu, press **↶ BACK**.
- To exit the menu, press **SETUP**.

## Note

- See the explanations of the above options in the following pages.

### [Disc Lock]

Sets play restriction for specific discs. Before you start, place the disc in the disc compartment (maximum 40 discs can be locked).

- **[Lock]** – Restricts access to the current disc. Once activated, a password is needed to unlock and play the disc.
- **[Unlock]** – Plays all discs.

## Tip

- You can set or change the password (see 'Adjust settings' > 'Preferences' > **[Password]**).

### [Display Dim]

Changes the brightness level of the display panel on this Home Theatre System.

- **[100%]** – Normal brightness.
- **[70%]** – Medium brightness.
- **[40%]** – Dimmest display.

### [OSD Language]

Selects the default on-screen menu language.

### [Screen Saver]

Turns off or on the screen saver mode. Helps to protect the TV screen from being damaged due to over exposure to a static image for too long.

- **[On]** – Sets the screen saver to appear after 15 minutes of inactivity (for example, in pause or stop mode).
- **[Off]** – Disables screen saver mode.

### [Sleep Timer]

Switches to standby automatically after the preset time.

- **[15 mins]**, **[30 mins]**, **[45 mins]**, **[60 mins]**  
– Selects the count down time before the Home Theatre System switches to standby.
- **[Off]** – Disables sleep timer mode.

### [DivX(R) VOD Code]

Displays the DivX® registration code.



#### Tip

- Enter this Home Theatre System DivX registration code when you rent or purchase a video from [www.divx.com/vod](http://www.divx.com/vod). The DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which it is registered.

### Note

- See the explanations of the above options in the following pages.

### [Speakers Volume]

Sets the volume level of each speaker to get the ideal audio balance.

- 1) To start, press **OK**.
- 2) Select a speaker in the menu, then press **◀▶** to adjust the volume level.
- 3) Press **OK** to confirm and exit.

### Note

- The test tone is emitted from the speaker which you adjust.

### [Speakers Delay]

Sets the delay time for the centre and rear speakers if they are placed closer to the listening position, so that the sound output from all speakers reaches the listening position at the same time.

- 1) To start, press **OK**.
- 2) Select a speaker in the menu, then press **◀▶** to set the delay time.
- 3) Press **OK** to confirm and exit.

### Note

- Allow 1ms setting for every 1 foot distance between the speaker and the listening position.

## Audio setup

Audio Setup	
Speakers Volume	
Speakers Delay	
Night Mode	

- 1 Press **⏏** **SETUP**.  
↳ **[General Setup]** menu is displayed.
- 2 Press **▼** to select **[Audio Setup]**, then press **▶**.
- 3 Select an option, then press **OK**.
- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press **↩** **BACK**.
  - To exit the menu, press **⏏** **SETUP**.

### [Night Mode]

Makes loud sound level softer and soft sound level louder so that you can watch the DVD movies at a low volume, without disturbing others.

- **[On]** – Enjoy quiet viewing at night.
- **[Off]** – Enjoy surround sound with a full dynamic range.

## Note

- Applicable only to Dolby Digital encoded discs.

## Video setup

Video Setup	
TV System	
TV Display	
Picture Setting	

- 1 Press **⏏** **SETUP**.  
↳ **[General Setup]** menu is displayed.
- 2 Press **▼** to select **[Video Setup]**, then press **▶**.
- 3 Select an option, then press **OK**.
- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press **⏪** **BACK**.
  - To exit the menu, press **⏏** **SETUP**.

## Note

- See the explanations of the above options in the following pages.

### [TV System]

Change this setting if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- **[PAL]** – For PAL-system TV.
- **[NTSC]** – For NTSC-system TV.
- **[Multi]** – For TV that is compatible with both PAL and NTSC.

### [TV Display]

Selects one of the following display formats:



4:3 Pan Scan (PS)

4:3 Letter Box (LB)

16:9 (Wide Screen)

- **[4:3 Pan Scan]** – For 4:3 screen TV: full-height display with the trimmed sides.
- **[4:3 Letter Box]** – For 4:3 screen TV: wide-screen display with black bars on the top and bottom of the screen.
- **[16:9 Wide Screen]** – For wide-screen TV: display ratio 16:9.

### [Picture Setting]

Selects a predefined set of picture colour settings or customise the personal setting.

- **[Standard]** – Original colour setting.
- **[Bright]** – Vibrant colour setting.
- **[Soft]** – Warm colour setting.
- **[Personal]** – Customises the colour setting. Set the level of brightness, contrast, sharpness/tint and colour saturation, then press **OK**.

# Preferences

## Note

- Stop disc play before you can access to **[Preferences]**.

Preferences	
Audio	
Subtitle	
Disc Menu	
Parental	
PBC	
MP3/JPEG Display	
Password	
DivX Subtitle	▼

- 1 Press **⏏** **SETUP**.  
↳ **[General Setup]** menu is displayed.
- 2 Press **▼** to select **[Preferences]**, then press **▶**.
- 3 Select an option, then press **OK**.
- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press **⏪** **BACK**.
  - To exit the menu, press **⏏** **SETUP**.

## Note

- See the explanations of the above options in the following pages.

### [Audio]

Selects the default audio language for disc play.

### [Subtitle]

Selects the default subtitle language for disc play.

### [Disc Menu]

Selects the language for disc menu.

## Note

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some discs, the subtitle/audio language can only be changed from the disc menu.
- To select the languages that are not listed in the menu, select **[Others]**. Then check the Language Code list at the back of this user manual and enter the respective 4-digit language code.

### [Parental]

Restricts access to discs that are unsuitable for children. These types of discs must be recorded with ratings.

- 1) Press **OK**.
- 2) Select a rating level, then press **OK**.
- 3) Press the **Numeric buttons** to enter the password.

## Note

- Rated discs above the level you set in **[Parental]** require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select '8'.
- Some discs have ratings printed on them but are not recorded with ratings. This function has no effect on such discs.

## Tip

- You can set or change the password (see 'Preferences' > **[Password]**).

### [PBC]

Turns off or on the content menu of VCDs/SVCDs with PBC (playback control) feature.

- **[On]** - Displays index menu when you load a disc for play.
- **[Off]** - Skips the menu and start play from the first title.

### [MP3/JPEG Display]

Selects to display the folders or display all the files.

- **[View Folders]** – Displays the folders of MP3/WMA files.
- **[View Files]** – Displays all the files.

### [Password]

Sets or changes the password for locked discs and play restricted DVDs.

Change Password	
Old Password	<input type="password"/>
New Password	<input type="password"/>
Confirm Password	<input type="password"/>
<input type="button" value="OK"/>	

- 1) Press the **Numeric buttons** to enter '136900' or the last set password at **[Old Password]** field.
- 2) Enter the new password at **[New Password]** field.
- 3) Enter the new password again at **[Confirm Password]** field.
- 4) Press **OK** to exit the menu.

### Note

- If you forget the password, enter '136900' before you set a new password.

### [DivX Subtitle]

Selects a character set that supports the DivX subtitle.

---

**[Standard]** English, Irish, Danish, Estonian, Finnish, French, German, Italian, Portuguese, Luxembourgish, Norwegian (Bokmål and Nynorsk), Spanish, Swedish, Turkish

---

**[Central Europe]** Polish, Czech, Slovak, Albanian, Hungarian, Slovene, Croatian, Serbian (Latin script), Romanian

---

**[Cyrillic]** Belarusian, Bulgarian, Ukrainian, Macedonian, Russian, Serbian

---

**[Greek]** Greek

---

### Note

- Ensure that the subtitle file has the exact same file name as the movie file. If for example the file name of the movie is 'Movie.avi', then you will need to name the text file 'Movie.sub' or 'Movie.srt'.

### [Version Info.]

Displays the software version of this Home Theatre System.

### Tip

- This information is required when you want to find out if a newest software version is available at the Philips website that you may download and install on this Home Theatre System.

### [Default]

Resets all the settings of this Home Theatre System to factory default, except for **[Disc Lock]**, **[Password]** and **[Parental]** settings.

# 8 Additional Information

## Update software

To check for new updates, compare the current software version of your Home Theatre System with the latest software version (if available) at the Philips website.

Preferences	
Disc Menu ▲	
Parental	
PBC	
MP3/JPEG Display	
Password	
DivX Subtitle	
Version Info.	
Default	

- 1 Press **SETUP**.
- 2 Select **[Preferences] > [Version Info.]**, then press **OK**.
- 3 Write down the version number, then press **SETUP** to exit the menu.
- 4 Go to [www.philips.com/support](http://www.philips.com/support) to check the latest software version available for this Home Theatre System.
- 5 If the latest software version is higher than the software version of this Home Theatre System, download it and store onto a CD-R or USB flash drive.
- 6 Insert the CD-R or USB flash drive to this Home Theatre System.
- 7 Press **DISC** or **USB**, then follow the instruction on the TV to confirm update operation.
  - ↳ Once software update is complete, this Home Theatre System turns off to standby automatically.

### Note

- Do not remove the CD-R or USB when software updating is in progress.

- 8 Disconnect the power cord for a few seconds and connect again to reboot the system.

## Care

### Caution

- Never use solvents such as benzene, thinner, cleaners available commercially or anti-static sprays intended for discs.

### Clean discs

Wipe the disc with a micro fibre cleaning cloth from the centre to the edge in a straight line movement.

### Clean main unit screen

Wipe the screen surface with a micro fibre cleaning cloth.

# 9 Specifications



## Note

- Specification and design are subject to change without notice

## Playback media

- DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture CD, MP3-CD, WMA-CD, DivX-CD, USB flash drive

## Amplifier

- Total output power:
  - Home Theatre mode: 200 W
- Frequency response: 63 Hz~14 kHz /  $\pm 3$  dB
- Signal-to-noise ratio: > -60 dB (A-weighted)
- Input sensitivity:
  - AUX: 500 mV
  - SCART TO TV: 500 mV

## Disc

- Laser Type: Semiconductor
- Disc diameter: 12 cm / 8 cm
- Video decoding: MPEG1/ MPEG2 / DivX / DivX Ultra
- Video DAC: 12 bits, 108 MHz
- Signal system: PAL / NTSC
- Video S/N: 56 dB
- Audio DAC: 24 bits / 96 kHz
- Frequency response:
  - 4 Hz~20 kHz (44.1 kHz)
  - 4 Hz~22 kHz (48 kHz)
  - 4 Hz~44 kHz (96 kHz)
- PCM: IEC 60958
- Dolby Digital: IEC 60958, IEC 61937

## Radio

- Tuning range: FM 87.5~108 MHz (50 kHz)
- 26 dB quieting sensitivity: FM 22 dBf
- IF rejection ratio: FM 50 dB
- Signal-to-noise ratio: FM 30 dB
- Harmonic distortion: FM 3%
- Frequency response: FM 180 Hz~10 kHz /  $\pm 3$  dB
- Stereo separation: FM 26 dB (1 kHz)
- Stereo Threshold: FM 23.5 dB

## USB

- Compatibility: USB 1.1
- Class support: UMS (USB Mass Storage Class)
- File system: FAT12, FAT16, FAT32

## Main Unit

- Power supply: 220~240 V; ~50 Hz
- Power consumption: 50 W
- Standby power consumption: < 1 W
- Dimensions (WxHxD): 360 x 48 x 332 (mm)
- Weight: 2.64 kg

## Speakers

- System: full range satellite
- Speaker impedance: 8 ohm (centre), 4 ohm (Front/Rear)
- Speaker drivers: 3" full range
- Frequency response: 150 Hz - 20 kHz
- Dimensions (WxHxD):
  - Centre: 100 x 100 x 75 (mm)
  - Front/Rear: 100 x 100 x 75 (mm)
- Weight:
  - Centre: 0.38 kg
  - Front/Rear: 0.38 kg/each

## Subwoofer

- Impedance: 8 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Frequency response: 45 Hz ~ 150 Hz
- Dimensions (WxHxD): 122.6 x 309.5 x 369 (mm)
- Weight: 3.54 kg

## Laser specification

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 645 - 665 nm (DVD),  
770 - 800 nm (CD)
- Output power: 6 mW (DVD), 7 mW  
(VCD/CD)
- Beam divergence: 60 degrees.

# 10 Troubleshooting



## Warning

- Risk of electric shock. Never remove the casing of the Home Theatre System.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using the Home Theatre System, check the following points before requesting service. If the problem remains unsolved, register your Home Theatre System and get support at [www.philips.com/welcome](http://www.philips.com/welcome).

If you contact Philips, you will be asked for the model and serial number of your Home Theatre System. The model number and serial number are on the back or bottom of your Home Theatre System. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

## Main unit

**The buttons on this Home Theatre System do not work.**

- Disconnect this Home Theatre System from the power outlet for a few minutes, then connect again.

---

## Picture

**No picture.**

- See TV's manual for correct video input channel selection. Change the TV channel until you see the DVD screen.
- Press **DISC**.
- If you have changed the **[TV Display]** setting, switch back to default mode: 1) Press **▲** to open the disc compartment. 2) Press **◀**. 3) Press **SUBTITLE**.

---

## Sound

**No sound.**

- Ensure that the audio cables are connected and press the correct input source (for example, **AUDIO SOURCE**, **USB**) to select the device you want to play.
- This Home Theatre System does not support DTS surround sound. Ensure that the play source is not DTS audio stream.

**No sound from TV program.**

- Connect an audio cable from the **AUDIO** input on this Home Theatre System to the **AUDIO** output on your TV. Then press **AUDIO SOURCE** repeatedly to select the corresponding audio input source.

**No surround sound effect from the speakers.**

- Press **SURR** to select a correct surround sound setting.
- If the Home Theatre System supports DTS playback, press **AUDIO SYNC** to select other audio track.
- Ensure that the source you are playing is recorded or broadcast in surround sound (Dolby Digital etc.).

---

## Play

### DivX video files cannot be played.

- Ensure that the DivX file is encoded according to the 'Home Theatre Profile' with the DivX encoder.
- Ensure that the DivX video file is complete.

### The aspect ratio of the screen is not aligned with the TV display setting.

- The aspect ratio is fixed on the disc.

### DivX subtitle does not display correctly.

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set: 1) Press **⏏** **SETUP**. 2) Select **[Preferences]**, then press **▶**. 3) Select **[DivX Subtitle]**, then press **OK**. 4) Select the character set that supports the subtitle.

### The contents of the USB flash drive cannot be read.

- The USB flash drive format is not compatible with this Home Theatre System.
- Drive is formatted with different file system which is not supported by this unit (e.g. NTFS).
- Maximum size of memory supported is 160GB.

# 11 Glossary

---

## A

### Aspect ratio

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

---

## D

### DivX Video

DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

### DivX Video-On-Demand

This DivX Certified® device must be registered in order to play DivX Video-on-demand (VOD) content. To generate the registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX video.

### Dolby Digital Pro Logic II

An advanced, matrix decoding technology that expands any two channel audio, such as CDs and stereo encoded videocassettes, video games and TV broadcasts to a five channel full bandwidth (range) playback (Left/Centre/Right/Left Surround/Right Surround), resulting in a surround sound experience.

## J

### JPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognised by their file extension 'jpg' or 'jpeg.'

---

## M

### MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

### MPEG

Motion Picture Experts Group. A collection of compression systems for digital audio and video.

---

## P

### PBC

Playback Control. A system where you navigate through a Video CD/Super VCD with on-screen menus that are recorded onto the disc. You can enjoy interactive playback and search.

### PCM

Pulse Code Modulation. A digital audio encoding system.

---

## W

### WMA

Windows Media™ Audio. Refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded with Windows Media player version 9 or Windows Media player for Windows XP. Files are recognised by their file extension 'wma.'

# Language Code

Abkhazian	6566	Inupiaq	7375	Pushto	8083
Afar	6565	Irish	7165	Russian	8285
Afrikaans	6570	Íslenska	7383	Quechua	8185
Amharic	6577	Italiano	7384	Raeto-Romance	8277
Arabic	6582	Ivrit	7269	Romanian	8279
Armenian	7289	Japanese	7465	Rundi	8278
Assamese	6583	Javanese	7486	Samoan	8377
Avestan	6569	Kalaallisut	7576	Sango	8371
Aymara	6589	Kannada	7578	Sanskrit	8365
Azerhijani	6590	Kashmiri	7583	Sardinian	8367
Bahasa Melayu	7783	Kazakh	7575	Serbian	8382
Bashkir	6665	Kernewek	7587	Shona	8378
Belarusian	6669	Khmer	7577	Shqip	8381
Bengali	6678	Kinyarwanda	8287	Sindhi	8368
Bihari	6672	Kirghiz	7589	Sinhalese	8373
Bislama	6673	Komi	7586	Slovensky	8373
Bokmål, Norwegian	7866	Korean	7579	Slovenian	8376
Bosanski	6683	Kuanyama; Kwanyama	7574	Somali	8379
Brezhoneg	6682	Kurdish	7585	Sotho; Southern	8384
Bulgarian	6671	Lao	7679	South Ndebele	7882
Burmese	7789	Latina	7665	Sundanese	8385
Castellano, Español	6983	Latvian	7686	Suomi	7073
Catalán	6765	Letzeburgesch;	7666	Swahili	8387
Chamorro	6772	Limburgan; Limburger	7673	Swati	8383
Chechen	6769	Lingala	7678	Svenska	8386
Chewa; Chichewa; Nyanja	7889	Lithuanian	7684	Tagalog	8476
中文	9072	Luxembourgish;	7666	Tahitian	8489
Chuang; Zhuang	9065	Macedonian	7775	Tajik	8471
Church Slavic; Slavonic	6785	Malagasy	7771	Tamil	8465
Chuvash	6786	Magyar	7285	Tatar	8484
Corsican	6779	Malayalam	7776	Telugu	8469
esky	6783	Maltese	7784	Thai	8472
Dansk	6865	Manx	7186	Tibetan	6679
Deutsch	6869	Maori	7773	Tigrinya	8473
Dzongkha	6890	Marathi	7782	Tonga (Tonga Islands)	8479
English	6978	Marshallese	7772	Tsonga	8483
Esperanto	6979	Moldavian	7779	Tswana	8478
Estonian	6984	Mongolian	7778	Türkçe	8482
Euskara	6985	Nauru	7865	Turkmen	8475
	6976	Navaho; Navajo	7886	Twi	8487
Faroese	7079	Ndebele, North	7868	Uighur	8571
Français	7082	Ndebele, South	7882	Ukrainian	8575
Frysk	7089	Ndonga	7871	Urdu	8582
Fijian	7074	Nederlands	7876	Uzbek	8590
Gaelic; Scottish Gaelic	7168	Nepali	7869	Vietnamese	8673
Galleghan	7176	Norsk	7879	Volapuk	8679
Georgian	7565	Northern Sami	8369	Walloon	8765
Gikuyu; Kikuyu	7573	North Ndebele	7868	Welsh	6789
Guarani	7178	Norwegian Nynorsk;	7878	Wolof	8779
Gujarati	7185	Occitan; Provençal	7967	Xhosa	8872
Hausa	7265	Old Bulgarian; Old Slavonic	6785	Yiddish	8973
Herero	7290	Oriya	7982	Yoruba	8979
Hindi	7273	Oromo	7977	Zulu	9085
Hiri Motu	7279	Ossetian; Ossetic	7983		
Hrvatski	6779	Pali	8073		
Ido	7379	Panjabi	8065		
Interlingua (International)	7365	Persian	7065		
Interlingue	7365	Polski	8076		
Inuktitut	7385	Português	8084		

## DK

Advarsel: Usynlig laserstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

Bemærk: Netafbryderen er sekundært indkoblet og afbryder ikke strømmen fra nettet. Den indbyggede netdel er derfor tilsluttet til lysnettet så længe netstikket sidder i stikkontakten.

## S

Klass 1 laserapparat

Varning! Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kan användaren utsättas för osynlig laserstråling, som överskrider gränsen för laserklass 1.

Observera! Stömbrytaren är sekundärt kopplad och bryter inte strömmen från nätet. Den inbyggda nätdelen är därför ansluten till elnätet så länge stickproppen sitter i vägguttaget.

## SF

Luokan 1 laserlaitte

Varoitus! Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

Oikeus muutoksiin varataan. Laitte ei saa olla alttiina tippu- ja roiskevedelle.

Huom. Toiminnanvalitsin on kytketty toisiopuolelle, eikä se kytke laitetta irti sähköverkosta. Sisäänrakennettu verkko-osa on kytkettynä sähköverkkoon aina silloin, kun pistoke on pistorasiassa.

## Italia

### DICHIARAZIONE DI CONFORMITA'

Si dichiara che l'apparecchio HTS3020, Philips risponde alle prescrizioni dell'art. 2 comma 1 del D.M. 28 Agosto 1995 n. 548.

Fatto a Eindhoven

Philips Consumer Lifestyle  
Philips, Glaslaan 2 5616 JB Eindhoven,  
The Netherlands

## Norge

Tydeskilt finnes på apparatens underside.

**Observer: Nettbryteren er sekundert innkople. Den innebygde nettdelen er derfor ikke frakople nettet så lenge apparatet er tilsluttet nettkontakten.**

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

