Pioneer

DV-3022KV/DV-3022V DV-2022K/DV-2022

Operating Instructions

© 2011 PIONEER CORPORATION.

J2P02401B SH K00/00

Front panel

DV-3022KV

Pioneer

All rights reserved.



Thank you for buying this Pioneer product. Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

Table of contents <Back page> <Front page> Before you start G Karaoke **2** Part names and functions Playable discs and files Troubleshooting

Onvenient functions G Changing the settings

Additional information

What's in the box

 Remote Control Audio/video cabl

- Audio/video cable
 Power cord (Except South Asian models)
 AAA batteries (R03) x 2
 Operating instructions (This document)

PIONEER CORPORATION

ra, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japar PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936 TEL: 65-6472-7555 PIONEER ELECTRONICS AUSTRALIA PTY. LTD. therton Victoria 3202 Australia TEL: (03) 9586-6300 PIONEER ELECTRONICS DE MEXICO S.A. DE C.V. Rivel.Manuel Avila Camacho 138 10 piso Col.Lomas de Chapultepec, Mexico, D.F. 11000 TEL: 55-9178-4270 K002_B2_En Printed in Thailand

Part names and functions

Note

The illustrations used in this operating instructions are DV-3022KV.

HOME MENU

Audio Settings

Play Mode

Solution Settings
 CD → USB Rec
 Solution
 Solution

The specified section within a single title or track

Repeat Plays titles, chapters, tracks or files repeatedly.

Plays titles, chapters or tracks in random order

Search Mode
 Plays the specified number or time within the title, chapter, track or file.
 The Play Mode function may not work for some discs re

Disc Navigator (see 17 MENU on the right column)

To resume play, press ■ STOP once during playback. you press ► PLAY after that, playback starts from the

To cancel resume play, press STOP again while

Audio Settings (section 6

See section 4 for details.

Initial Settings (section 6)
 CD -> USB Rec (section 4)

nt you last stopped.

playback is stopped

7 44/41/41

Video Adjust (section 6)

Play Mode

• A-B Repeat

Random

Program



STANDBY/ON

- 2 Number buttons (0 to 9)
- Use these to specify and play the title, chapter, track or file. Also use to select items on **MENU** screens, etc.
- **3 TOP MENU** ress to display the top menu of the DVD-Video.
- 4~~~~ Jse these to select items, change settings and move the cursor
- 5 HOME MENU
- ay/hide HOME MENU
- 8 ► PLAY

6 STOP

DVD Player Safety cautions



lightning flash with arrowhead bol, within an equilateral triang bol, within an equilateral triangle, is ided to alert the user to the presence insulated "dangerous voltage" within product's enclosure that may be of ric shock to persons

ne & STANDBY/ON switch on this unit will not

etely shut off all power from the AC outlet. Since the

er cord serves as the main disconnect device for the

it, you will need to unplug if from the AC outlet to shut wan all power. Therefore, make sure the unit has been stalled so that the power cord can be easily unplugged om the AC outlet in case of an accident. To avoid fire

azard, the power cord should also be unplugged from th

C outlet when left unused for a long period of time (for

event a fire hazard, do not place any naked flame

carefully. The unitage of the available power supply differs according to country or region. Be sure that the power supply voltage of the area where this unit will be used meets the required voltage (e.g., 230 V or 120 V) written

a in for the first time, read the following section

<u>ب</u> VOLUME

ess to return to the beginning of the currently playing

title, chapter, track or file. Press twice to move back to

Press to stop playback temporarily. Press again to

the beginning of the previous title, chapter, track or file.

" **E**

56

sources (such as a lighted candle) on the equipme

mple, when on vacation).

WARNING

WARNING

on the rear panel.



CAUTION TO PREVENT THE RISK OF ELECTRIC icient magnitude to constitute a risk of QUALIFIED SERVICE PERSONNEL.

D3-4-2-2-2a* A1 Er

D3-4-2-1-7a A1 En

D3-4-2-1-4* A1 En

nation point within an equilateral triangle is intended to aler the user to the presence of important SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO instructions in the literature accompanying the appliance. D3-4-2-1-1_A1_Er

> If the AC plug of this unit does not match the AC outlet you want to use, the plug must be removed and appropriate one fitted. Replacement and mounting of n AC plug on the power supply cord of this unit hould be performed only by qualified service ersonnel. If connected to an AC outlet, the cut-of personnel. In connected to an AC outlet, the curron plug can cause severe electrical shock. Make sure it i properly disposed of after removal. The equipment should be disconnected by removing the mains plug from the wall socket when left unused for a long period of time (for example, when on acation) D3-4-2-2-1a_A1_En

POWER-CORD CAUTION

8

Ô

a

s to return to the previous screen

ss during playback to fast-forward

frame-by-frame. Press and hold in the pause mode to play back

Press in the pause mode to move forward

of the next title, chapter, track or file,

<Only for the front panel>

² MIC (DV-3022KV/DV-2022K)

3 VOLUME (DV-3022KV/DV-2022K)

5 HDMI indicator (DV-3022KV/DV-3022V)

19 RETURN

21 ►► NEXT

22 ANGLE

23 DISPLAY

1 Disc tray

(section 5)

4 Front panel display

ights when the dev erminal is recogniz

6 ▲ OPEN/CLOSE

7 USB port (type A)

slowly (forward).

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power our hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

S002*_A1_En

s product is for general household purposes. Any ure due to use for other than household purpose such as long-term use for business purposes in a taurant or use in a car or ship) and which requir pair will be charged for even during the warranty K041_A1_En

Operating Environment

+5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH na vents not blocked Do not install this unit in a poorly ventilated area, or in ocations exposed to high humidity or direct sunlight (or strong artificial light) D3-4-2-1-7c*_A1_En

VENTILATION CAUTION

ng this unit, make sure to leave space around the unit for ventilation to improve heat radiation (at least 10 cm at top, 10 cm at rear, and 10 cm at each side).

WARNING

WARNING

dripping, splashing, rain or moisture.

Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product, and to protect it from overheating. To prevent fire hazard, the openings should never be blocked or covered with items (such as ne oths, curtains) or by operating the equipment on thick carpet or a bed D3-4-2-1-7b*_A1_En

Coaxial digital o Additional information USB port

Notes

This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to The specifications and design of this product are subject to change without notice. This product includes FontAvenue® fonts licensed by NFC Corporation. FontAvenue is a registered trade D3-4-2-1-3 A1 En of NEC Corp

Specifications

Power requirements. AC 110 V to 240 V, 50 Hz/60 Hz

Component video output (Y, CB/PB, CR/PR)

HDMI output (Only for DV-3022KV/DV-3022V)

360 mm (W) x 42 mm (H) x 207 mm (D)

. . 360 mm (W) x 42 mm (H) x 200 mm (D)

mption (standby)

Power consumption

DV-2022K/DV-2022

DV-3022KV/DV-3022V.

DV-3022KV/DV-3022V

DV-2022K/DV-2022 .

DV-3022KV/DV-2022K

DV-3022V/DV-2022

Weight ...

External dim

Video output

Output level.

Output terminal

Output termina

Audio output level

Frequency response

Digital audio output

Output terminal .

CB/PB, CR/PR Output level .

Audio output (stereo L/R)

CAUTION s product is a class 1 laser product cla nder the Safety of laser products. IEC 60825-1:200 CLASS 1 LASER PRODUCT D58-5-2-2a_A1_Er

B Playable discs and files

HD DVDs

AVCHD
 AVCREC

SACDs

• CD-G

DVD-Audio discs
 DVD-RAM discs

Discs recorded with packet writing

About region numbers

Programs that can be recorded only once (already) recorded on a DVD-R/-RW/-R DI

All DVD-Video discs carry a region mark (number) on the case. The mark (number) denotes the region(s) of the world in which the disc is compatible. Your DVD player

also has a region mark (number), which you can find on

In you try to play a use, or an incompatible region, **"Incompatible disc region number Can't play disc"** will be displayed on the screen and you will not be able to play ithe disc. Discs marked "ALL" can be played in any player. The diagram below shows the various DVD regions of

If you try to play a disc of an incompatible regio

DVD-Video discs DVD-R/-RW/-R DL and DVD-Vide DVD+R/+RW/+R DL discs recorded in the Video mode VD-R/-RW/-R DL discs recorded in the DVD VR R mode Video CD Video CDs (including Super VCDs) Audio CDe CD-R/-RW/-ROM discs containing mu CD(R/RW) ecorded in the CD-DA format PEG files recorded on DVD-R/-RW/-R DL liscs, CD-R/-RW/-ROM discs JPEG)ivX video files recorded on DVD-R/-RW/-R DL discs, CD-R/-RW/-ROM discs WMA files recorded on DVD-R/-RW/-R DL WMA

FUJICOLOR-CD

• Only the discs that have been finalized can be played

 angle can be changed during playback.
 Press and hold during the audio CD playback to repeat the disc/track.
 Each time you press and hold, the repeat mode changes between the disc repeat and track repeat

sed time, amount remaining, etc., is displayed.

On DVD-Video discs containing multiple angles, the

RW

- This label indicates playback compatibility with DVD-RW discs recorded in VR format (Video Recording format). However, for discs recorded with a record-only-once encrypted program, playback can only be achieved using
- a CPRM compatible device.

- lead-in to lead-out.
- recording unit, consisting of a complete set of data from



the world.

the rear panel



Regarding copy protected CDs

form to the specific This player is designed to conform to the specifications of the audio CD format. This player does not support the playback or function of discs that do not conform to these cifications

Playing discs created on computers or BD/DVD recorders

- The player may not be able to play discs recorded using computer. Record discs in a format playable on this
- ver. For details, contact the dealer
- The player nor because, contract the beater. The player may not be able to play discs recorded using a computer or a BD/DVD recorder, if burn quality is not good due to characteristics of the disc, scratches, dirt on the disc, dirt on the recorder's lens, etc.

Discs that cannot be played **Playable discs** Blu-ray discs



MP3 files recorded on DVD-R/-RW/-R DL MP3 iscs, CD-R/-RW/-ROM discs

Press during playback to skips ahead to the beginning

KODAK Picture CD

- is a trademark of DVD Format/Logo Licensing
 - Corp is a trademark of FUJIFILM Corporation.

Notes

- Notes
 This player does not support multisession discs or multiborder recording.
 Multisession/multiborder recording is a method in which data is recorded on a single disc in two or more sessions/borders. A "session" or "border" is one

ress **STOP** once during playback. If

- Press during playback to fast-reverse.
 Press in the pause mode to move backward frame-by-frame. • Press and hold in the pause mode to play back
- slowly (reverse)

ess to start playback

AUDIO For discs or files including multiple audio streams/ channels, the audio stream/channel can be changed during playback. 12 SUBTITLE

9 I I PREV

ID II PAUSE

- On DVD-Video or DivX discs containing subtitles in multiple languages, the subtitle can be changed during
- KARAOKE (DV-3022KV/DV-2022K) Press to display the Karaoke Se Key/Echo (section 5)
- Karaoke Rec (section 5)
- Karaoke Score (section 5) To open and close the disc tray, use

 OPEN/CLOSE or
- the front nanel OPEN/CLOSE (DV-3022V/DV-2022)
- 12 ZOOM

Press to display MENU screen or Disc Navigator.
 Select the title, chapter, track or file from the Disc Navigator to play back.

lement the selected item or enter a

ress to zoom on the image.

17 MENU

18 FNTFR

DVD/USB (section 4) Press to switch between DVD and USB modes. CLEAR

ress to cancel the selected item.

setting that you have changed

1 Before you start

Loading the batteries in the remote control

Open the rear lid and insert the batteries

WARNING

11 W

10 W

0.8 W

..1.2 kg

.. 5 % to 85 9

(no condensation)

.1 Vp-p (75 Ω)

Vn-n (75 O)

.19-pin

. 0.7 Vp-p (75 Ω) . . RCA terminal

RCA termina

...4 Hz to 44 kHz

RCA terminal

A type

... 200 mVrms (1 kHz, -20 dB)

RCA term

Do not use or store batteries in direct sunlight or other excessively hot place, such as inside a car or near a heater. This can cause batteries to leak, overheat, explode or catch fire. It can also reduce the life or performance of batteries.

Notes

- en inserting the batteries, make sure not to damage the springs on the battery's (⊖) terminals.
- Do not use any batteries other than the ones specified Also, do not use a new battery together with an old one Also, do not use a new battery together with all oil one. When loading the batteries into the remote control, set them in the proper direction, as indicated by the polarity marks $(\oplus \text{ and } \ominus)$.
- Do not heat batteries, disassemble them, or throw them into flames or water. Batteries may have different voltages, even if they are
- the same size and shape. Do not use different types of batteries together. To prevent leakage of battery fluid, remove the batteries
- if you do not plan to use the remote control for a long period of time (1 month or more). If the fluid should leak, wipe it carefully off the inside of the case, then insert new batteries. If a battery should leak and the fluid should get on your skin, flush it off with large quantities
- of wate When disposing of used batteries, please comply with governmental regulations or environmental public institution's rules that apply in your country/area.

Connections

 Only DV-3022KV and DV-3022V have HDMI OUT Player's rear panel



DV-3022KV for South and Central America is supplied with an HDMI cable

Playable files

- Only discs recorded in ISO9660 Level 1, Level 2 and Joliet Files protected by DRM (Digital Rights Management)
- cannot be played. Files other than the ones below (WMV, MPEG4-AAC, etc.) are not guaranteed to play.

Supported video file formats

once and that are

- DivX DivX is a media technology created by DivX, Inc. DivX edia files contain image data. DivX files may also include such advanced playback
- functions as menu screens and selection of multiple subtitle languages/audio tracks.



- DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.
- Displaying external subtitle files The font sets listed below are available for external subtitle files. You can see the proper font set on-screer by setting the Subtitle Language in section 6 to match
- the subtitle file. This player supports the following language groups

This player supports the following language groups.		
Group 1	Afrikaans (af), Basque (eu), Catalan (ca), Danish (da), Dutch (ni), English (en), Faroese (b), Finnish (f), French (f), German (da), Icelandic (is), Irish (ga), Italian (ft), Norwegian (no), Portuguese (pt), Rhaeto-Romanic (rm), Scottish (gd), Spanish (es), Swedish (sv)	
Group 2	Albanian (sq), Croatian (hr), Czech (cs), Hungarian (hu), Polish (pl), Romanian (ro), Slovak (sk), Slovenian (sl)	
Group 3	Bulgarian (bg), Byelorussian (be), Macedonian (mk), Russian (ru), Serbian (sr), Ukrainian (uk)	
Group 4	Hebrew (iw), Yiddish (ji)	
Group 5	Turkish (tr)	

- Some external subtitle files may be displayed incorrectly or not at all.
- For external subtitle files the following subtitle format filename extensions are supported (please note that these files are not shown within the disc navigation
- menu): srt, sub, ssa, smi menu): srt, sub, ssa, smi The filename of the movie file has to be repeated at the beginning of the filename for the external subtitle file. The number of external subtitle files which can be
- switched for the same movie file is limited to a maximum of 10

- Be sure to turn off the power and unplug the power cord om the power outlet whenever making or changing
- Connect the power cord after all the connections
- Notes for DV-3022KV/DV-3022V Signals can be transferred to an HDMI-compatible TV without loss of picture or sound quality using an HDMI cable
- Follow the TV instructions after the connections, then set Follow the TV instructions after the connections, the HDMI Resolution (section 6). This player's interface is designed according to the High-Definition Multimedia Interface specifications. When an HDMI-compatible device is connected, the resolution is displayed on the front panel display.
- The resolution of the video signals output from the
- I he resolution of the video signals output from the HDMI OUT terminal can be changed manually. Change the HDMI Resolution setting (section 6). Settings for two units can be stored in the memory. This player is designed for connecting to HDMI-compatible devices. It may not operate properly if connected to DVI devices.

Playable audio signals through the HDMI OUT terminal (DV-3022KV/ DV-3022V)

- 44.1 kHz to 96 kHz, 16-bit/20-bit/24-bit 2-channel linear PCM audio (including 2-channel down Dolby Digital 5.1-channel audio
- DTS 5.1-channel audio
- MPEG audio

Connecting using commercially available cables

The player can be connected to an AV amplifier, etc., using commercially available digital audio cables and component video cables.

Supported image file formats

JPEG

- Resolution: Up to 3 072 x 2 048 pixels
- · This player supports base line JPFG This player supports Exif Ver.2.2.
- This player does not support progressive JPEG.
- Supported audio file formats
- This player does not support VBR (Variable Bit Rate) and lossless encoding.

Windows Media[™] Audio (WMA)

- Sampling frequencies: 32 kHz, 44.1 kHz and 48 kHz Bit rate: Up to 192 kbps
- Bit rate: Up to 192 kbps
 This player supports files encoded using Windows Media Player Ver. 7/7.1, Windows Media Player for Windows XP and Windows Media Player 9 Series.
 Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States
- and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distri license from Microsoft Licensing, Inc.
- MPEG-1 Audio Laver 3 (MP3) ies: 32 kHz 44 1 kHz and 48 kHz

Playable file extensions

Video files .divx .av

 Files not containing DivX video signals cannot be played even if they have the extension ".av

Image files

.jpg .jpeg Audio files .wma .mp;

Convenient functions

Playing in the desired order (Programmed Play)

DVD-Video Video CD (CD(R/RW) DivX[®] WMA MP3

1 Display the Play Mode screen. m HOME MENU screet ect Play Mode fro

- 2 Select Program. lect, then press ENTER or >
- 3 Select Create/Edit. Use A/V to select, then press ENTER. • The Create/Edit screen differs according to the disc or file.

4 Select the title, chapter, track or file.

- Use ///// /> to select, then press ENTER. To add to a program, first select the place in the To add to a program, first select the place in the program (the program step), next select the title chapter, track or file then press **ENTER** (files are
- added at the end of program). Press RETURN to return to the previous screen. If you return to the previous screen when inputting it, the settings you have programmed are cleare To delete a step, highlight it and press CLEAR

5 Start playback.

- To play the program, select Playback Start from the program screen, then press ENTER.
 To resume normal playback, select Playback Stop from the program screen, then press ENTER. The
- program remains in the memory. To cancel the entire program, select Program Delete from the program screen, then press ENTER.

Notes

- Programs can be played repeatedly. Select Program Repeat from Repeat on the Play Mode screen during programmed playback. Programs cannot be played in random order (random
- play is not possible during programmed play)
- 3 Start copying. Use < / > to select Yes, then press ENTER. The file copying process will appear on the copying process will appear o

Playing files on USB

JPEG DivX® WMA MP3

IISR device is connected in section 7

caused by connection to this player.

Press DVD/USB. USb is displayed on the front panel display.

The Disc Navigator appears automatically.

Copying files on to USB

Files stored on the discs can be copied on to the USB

Press III STOP to stop playback if the file is being

1 Display the Disc Navigator screen.

Use $\bigwedge / \bigvee / \bigwedge / \bigvee$ to select, then press >.

JPEG DivX[®] WMA MP3

1 Switch to USB mode.

3 Start playback.

CLOSE

devices

device through the playe

nlaved

2 Select the file

2 Connect the USB device.

The player may not recognize the USB device, play files or supply power to the USB device. For details, see When

a USB device is connected in section 7. Pioneer does not support that all files recorded on all USB devices will play or that power will be supplied to the USB device. Also note that Pioneer will accept no

Connect the USB device to the USB port on the front anel (section 2).

Use $\sqrt{\sqrt{2}}/\sqrt{2}$ to select the file, then press ENTER. • Turn the power off before removing the LISP device

To return to DVD mode, press DVD/USB or A OPEN/

onsibility whatsoever for loss of files on USB devices

devices

Notes

- Do not operate any buttons during the file copying process
- A folder named "PIONEER" is automatically created on the USB device
- The copied files are stored in this folder.

Recording audio CD tracks on to USB devices (Except Australian models)

CD(B/BW)

- The tracks can be recorded from the audio CD on to the **1** Adjust the microphone volume to USB device through the player If recording fails, refer to When a USB device is connected in section 7
- 1 Load the audio CD. Press STOP to stop playback if it starts
- 2 Display the HOME MENU screen HOME MENU.
- Select CD -> USB Rec. Use $\wedge/\vee/\langle/\rangle$ to select, then press ENTER.
- 4 Select Select Track. Jse 🔨 / 🗸 to select, then press ENTER or 🖒
- 5 Select the type of recording. Use ∧/∨ to select, then press ENTER or >. Types of recording
 Individual: Select 11 track at a time.
 Select All: Select all the tracks.
 All Char Deselect all the tracks. All Clear: Deselect all the tracks.
- 6 Select Bitrate (transfer rate). Use $\wedge/\vee/\langle/\rangle$ to select, then press ENTER. • Select 128kbps, 192kbps or 320kbps.
- 7 Start recording. Use ∧/∨/⟨/⟩ to select Start, then press ENTER.

When connected to an HDMI-

S Restore HDMI Resolution to the default setting

IS With some cables, 1 080p video signals cannot be

compatible device

Picture is not displayed.

output

(DV-3022KV/DV-3022V)

(720x480p/720x576p) (section 6).

Multichannel audio signals are not output.

Set Control to On on the player (section 6).

Turn on the player to use the function

The player turns on or off automatically.

IS The control function does not work with devices of

 $^{\rm I\!G\!S\!}$ When the Disc Navigator is selected using the Flat

Screen TV's remote controller and the player is turned off, the message **CEC200** will be displayed. This is not

It and the player may turn on together with the TV connected to HDMI OUT terminal. If you do not want them to turn on at the same time, set Control to Off (section 6).

The input of the connected TV or AV system is switched

amplifier, etc.) connected to the HDMI OUT terminal

may be automatically switched to the player when

(HOME MENU, etc.) is displayed. If you do not want the connected TV and AV system (AV receiver or amplifier,

etc.) affected by the player's operation, set Control to

IST The input of the TV and AV system (AV receiver or

other brands. Even when connected to a Pioneer product compatible with the **Control** function, some of the functions may not work.

Set HDMI Out to Auto (section 6).

Control function does not work.

The message CEC200 appears.

to the player's automatically.

a malfunction

Off (section 6).

IS Use a High Speed HDMI® cable.

Notes

- e audio signals are converted into MP3 format fo CD -> USB Rec can only be selected when the audio CD
- When re cording is completed, a folder nam "PIONEER" is automatically created on the USB device The recorded tracks are stored in this folder.

5 Karaoke (DV-3022KV/DV-2022K)

ted TV. etc. VOLUME

Additional information

Using karaoke use the ka t the player to the TV o AV amplifier, etc., using analog cables.

2 Connect the microphone

damage to the speakers.

minimum.

Be sure to adjust the volume to the minimum before

connecting the microphone, otherwise it may result in

Turn VOLUME on the front nanel counterclockwise

Connect the microphone to the **MIC** terminal on the front panel. (section 2)

on the front panel only adjusts the volume of the

Use \wedge/\vee to select, then press ENTER or \rangle .

Use ∧ (KEY # (high)/ KEY ♭ (low) or < />
(ECHO - or ECHO +) to adjust within 5 seconds.
• The key can be adjusted up or down by five units

sound may be distorted if the microphone volume is

If there is howling, move the microphone away from the

Setting the TV system

can be played are limited.

AUTO→NTSC
 NTSC→PAL

PAL→AUTO

oes of cs/files

DVD VR

WMA MP3 JPEG

damag

The factory default setting is AUTO.

While the player is in the standby mode...

Use the buttons on the front name

Format

NTSC

PAL

Cautions on use

Place of installation

being used with the player.

Avoid the following types of places:

Places exposed to direct sunlight
 Humid or poorly ventilated places

Places exposed to vibrations

Extremely hot places

When moving the player

If the picture of the disc being played is distorted, switch the TV system to the one used in your country or region.
When the TV system is switched, the types of discs that

Press ⁽⁾ STANDBY/ON while pressing ►.

The power turns on and the TV system switches as

NTSC

NTSC

NTSC

When moving the player, check first that there is no disc loaded and that the disc tray is closed. Then press \diamond **STANDBY/ON** on the player (or \diamond **STANDBY/ON** on th remote control), wait for the **OFF** indicator on the front

panel display to turn off, then unplug the power cord

Moving the player with a disc inside it could result in

Choose a stable place near the TV or stereo system

Places in which there is much dust or cigarette smoke

Places exposed to soot, steam or heat (kitchens, etc.)

being used with the player. Do not place the player on top of a TV or color monitor. Also install it away from cassette decks and other devices easily affected by magnetic forces.

Player setting
NTSC PAL

PAL

PAL

PAL

ΔΠΤΟ

PAL

NTSC o

NTSC

kers. Also try lowering the volume and echo level

3 Load the disc and start playback.

4 Adjust the microphone volume.

Turn VOLUME on the front panel clock MAX).

To adjust the key or echo... 1 Display the Karaoke Settings screen. Press KARAOKE.

2 Select Key/Echo.

Notes

too high

3 Adjust the echo or key

Extra functions for karaoke

Scoring your karaoke

DVD-Video CD

- 1 Display the Karaoke Settings screen.
- 2 Select Karaoke Score. Use \wedge/\vee to select, then press ENTER or >
- 3 Activate karaoke scoring.

Notes

- ncel scoring, select Off on the Karaoke Score Karaoke scoring can be activated before or during
- playback

Recording your karaoke tracks on to USB devices

You can record your karaoke tracks on to the USB device through the playe ♦ Notes

- Use this function after adjusting the microphone volume and the echo level using the operations on the left column 1 Display the Karaoke Settings screen
- during the playback. Press KARAOKE while the Video CD is played
- 2 Select Karaoke Rec. Use A/V to select, then press ENTER or >

Do not place objects on the player.

Do not obstruct the ventilation holes

sing, leading to da

Do not expose to heat.

not using it.

If this hap

be damaged.

Do not place any objects on top of the player

Do not use the player on shaggy rugs, beds, sofas, etc., or wrapped in cloth, etc. Doing so will prevent the heat from

Do not place the player on top of an amplifier or other component that generates heat. When placing it in a rack, to avoid the heat given off by the amplifier or other audio

component, place it on a shelf below the amplifier

Turn off the player's power when

Depending on signal conditions, striped patterns may

appear on a TV screen and noise may enter the sound of

adio broadcasts when the player's power is on. If this

If the player is moved suddenly from a cold place into a warm room (in winter, for example) or if the temperature in the room in which the player is installed rises suddenly due to a heater, etc., water droplets (condensation) may due to a heater due to a heater

properly and playback is not possible. Let the player stand

pom temperature for 1 or 2 hours with the power turner

ar room temperature for for 2 nours with the power turned on (the time depends on the extent of condensation). The water droplets will dissipate and playback will become possible. Condensation can also occur in the summer if the player is exposed to the direct wind from an air-conditioner.

· Unplug the power cord from the power outlet when

cleaning the player.
Clean the player using a soft cloth. For tough dirt, apply some neutral detergent diluted in 5 to 6 parts water to a soft cloth, wring out thoroughly, wipe off the dirt, then wipe again with a soft, dry cloth.
Alcohol, thinner, benzene, insecticides, etc., could cause the print or paint to peel off. Also, leaving rubber or vinyl and using incentent with the playm feature pare pied of

products in contact with the player for long periods of

When using chemical-impregnated wipes, etc., read the cautions included with the wipes carefully.

installed in a rack with a glass door

Do not press ▲ OPEN/CLOSE on the remote control to ope the disc tray while the glass door is closed. The door will hamper the movement of the disc tray, and the unit could

ens, move the player to a different place.

form inside (on operating parts and the lens). When

condensation is present, the player will not operate

ens, turn the player's power off

About condensation

Cleaning the product

ing the player.

ime could mar the cabinet.

Caution for when the unit is

3 Start Karaoke recording.

Vase As soon as you select Yes, then press ENTER. AS soon as you select Yes, the track has been playing starts playback from the beginning and provide a total or the beginning a total or the beginning and provide a total or the beginning and provide a total or the beginning a total or rding starts.

When recording is completed, a folder name "KARAOKE" is automatically created on the USB device. The recorded tracks are stored in this folde Dialog (High/Medium/Low/Off)
Change this setting if the sound of the dialogs is too low. About Sound Retriever function Vhen audio data is removed during the compression process, sound quality often degrades. The Sound Retriever function automatically enhances compressed audio and

restores CD quality sound. Video Adjust parameters

Audio Settings parameters

extension ".wma" or ".mp3"

Audio DRC (High/Medium/Low/Off)

Soft)

Sound Retriever (High/Low/Off) • The sound of a WMA or MP3 file is played with high

The effect depends on the file. Try different settings, and choose the one providing the good effect.

Select according to the genre of music to be listened to.

This setting only affects Dolby Digital sound. The effect depends on the volume of the connected units Try different settings, and choose the one providing the

loud sounds weaker and weak sounds

Equalizer (Off/Rock/Pop/Live/Dance/Techno/Classic/

sound quality. This is only valid for files with the

Sharpness (Fine/Standard/Soft)

Adjusts the picture's sharpness

strongest effect.

- Brightness (-20 to +20) he picture's brightness
- Contrast (-16 to +16)
- Adjusts the ratio of the brightness of the brightest and darkest portions of the picture. Gamma (-3 to +3)
- Adjusts the look of the dark portions of the picture Hue (green 9 to red 9)
- Adjusts the balance between green and red
- Chroma Level (-9 to +9) Adjusts the density of the colors. This setting is effective
- for sources with many colors, such as carto Brightness, Contrast, Gamma, Hue and Chroma Level are set to 0 upon purchase.

Initial Settings parameters

The player's detailed settings can be changed here.
Initial Settings cannot be selected during playback.

Digital Audio Out settings

Cleaning the lens

About copyrights

mbly are prohibited

Handling discs

Cleaning discs

se dirty cleaning cloths.

isture with a dry cloth.

before using rented discs.

damage the lens.

Storing

HDMI Out (DV-3022KV/DV-3022V) Select the audio signals to be output from the HDMI OUT terminal (LPCM (2CH)/Auto/Off) according to the nocted HDML o

The player's lens should not become dirty in normal use

but if for some reason it should malfunction due to dust or dirt, consult your nearest Pioneer authorized service center. Although lens cleaners for players are commerci

available, we advise against using them since some may

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and

Always place discs in their cases and store them

Always place discs in their cases and store them vertically, avoiding places hot, humid, exposed to direct sunlight and extremely cold.
Be sure to read the cautions included with the disc.

Discs may not play if there are fingerprints or dust on them. In this case, use a cleaning cloth, etc., to gently wipe the disc from the inside towards the outside. Do not

Do not use benzene, thinner or other volatile chemicals.

Also do not use record spray or antistatic agents.
For tough dirt, apply some water to a soft cloth, wring out thoroughly, wipe off the dirt, then wipe off the

Do not use damaged (cracked or warped) discs.
Do not let the signal surface of discs get scratched or

Do not place two discs in the disc tray, one on top of the

Do not attach pieces of paper or stickers to discs. Doing

so could warp discs, making it impossible to play them. Also note that rental discs often have labels attached to

haped, he

Water droplets (condensation) may form on the surface of

discs if they are moved from a cold place (particularly in

there is condensation on them. Carefully wipe the wate

blets off the surface of the disc before loading it

winter) into a warm room. Discs may not play normally if

Specially shaped discs (hear

could damage the player

be played on this player. Do not attempt to play such discs, as they

onal. etc.) canno

them, and the label's glue may have oozed out. Check

that there is no glue around the edges of such labels

About specially shaped discs

About condensation on discs

- 7 Troubleshooting
- Incorrect operation is often mistaken for trouble or malfunction. If there is something wrong with this playe check the symptoms below the trouble lie in another com
- Sometimes the trouble lie in another component connected to this player. Inspect the component and electrical appliances being used. If the trouble cannot be rectified after checking the items below, ask your nearest Pioneer authorized service center or your dealer to carry out repair work.
- The player may not operate properly due to static electricity or other external influences. In such cases, normal operation may be restored by unplugging the power cord then plugging it back in.

Difference in volume between DVD and CD

The volume may sound different due to differences in how the signals are recorded on the disc.

Disc cannot be played or disc tray opens automatically.

If the disc is dirty wine the dirt off the disc (section 8)

- Set the disc with the printed side facing up.
- Es Check the disc's region number, and if the number is compatible for playback on the player (section 3). Only the discs with the appropriate region number or with the appropriate region number or "ALL" can be played.

The power turns off automatically.

- If Auto Power Off is set to On, the power turns automatically if no operation has done for over 30 minutes (section 6).
- Picture is stretched, or aspect ratio cannot be changed

Refer to the TV's operating instructions and set the TV's

aspect ratio properly. Set TV Screen properly (section 6)

Picture is disturbed or dark during playback.

- 🕼 When the player and the TV are connected via a video deck. "analog copy protect function" may cause the picture being played on the video deck not to display operly. Connect the player and TV directly.
- Set the TV system properly. The factory default setting is AUTO. If the picture is distorted, switch the TV em to the one used in your country or region (NTSC or PAL) (section 8).

96 kHz/88.2 kHz digital audio signals are not output n the COAXIAL DIGITAL AUDIO OUT terr

IST Set 96 kHz PCM Out to 96kHz > 48kHz IST The 96 kHz/88.2 kHz digital audio signals of copyright

cted discs cannot be output.

Folder or file names are not recognized.

IS This player can recognize up to 299 folders on one disc and 648 files within one folder. Depending on the folder structure, however, the player may not be able to ze certain folders or files

Folder or file names are not displayed or properly

S Only 1-byte alphar older and file names including characters other tha 1-byte alphanur meric characters may be displayed for example as F 007 or FL 001, and the characters may be garbled.

Much time is required to play JPEG files.

IS The player may take longer to display large files.

Black bars are displayed when playing JPEG files.

Black bars may be displayed along the top and bottom or sides when JPEG files with different aspect ratios are played

IST Turn the power off, then disconnect and reconnect the

IS This player does not support USB hubs. Connect the

🕼 This player supports portable flash memory and digital

S Only the FAT16 and FAT32 file systems are supported

IS If the USB device is equipped with an AC adapter use

Some USB devices may not be recognized properly.

the USB device with the AC adapter con

Copyright-protected files cannot be played

IS It may not be able to play some files.

IS Files stored on a computer cannot be played.

Folder or file names are not displayed or properly

IS The maximum displayable number of characters for the

folder and file names on the **Disc Navigator** is 14.

Folder or file names are not displayed in alphabetical

The order of the folder and file names displayed on the

Much time is required to recognized the USB device.

IS It may take longer to load data when a large capacity USB device is connected (this could take several

Disc Navigator is dependant on the time and date when the folders or files were created on the USB device.

file systems (exFAT, NTFS, etc.) are not

This player only supports USB mass storage class

When a USB device is connected

USB device is not recognized.

USB device directly.

File cannot be played.

displayed.

udio playback devices.

USB device

6 Changing the settings

Digital Out

- er to output digital audio signals (**On**) from the COAXIAL DIGITAL AUDIO OUT terminals or not (Off)
- Dolby Digital Out
- r to output Dolby Digital audio signals (*Dolby Digital*) or to convert them into linear PCI signals (*Dolby Digital*) according to the
- cted unit DTS Out
- t whether to output DTS audio signals (DTS) or not (Off), according to the connected unit
- 96 kHz PCM Out
- Select whether to output 96 kHz audio signals (9 to convert them into linear PCM signals (96kHz 48kHz), according to the connected unit. per to output 96 kHz audio signals (**96kHz**) or
- MPFG Out
- Select whether to output MPEG audio signals (MPEG) or to convert them into linear PCM signals (MPEG > PCM), according to the connected unit.

Video Output settings

TV Screen

- Change the picture's display format (4:3 (Letter Box)/4:3 (Pan & Scan)/16:9 (Wide)/16:9 (Compressed)), acco
- 16.9 (Wide) . 4.3 (Letter Box) 16:9(Compressed) can only be set on DV-3022KV and DV-3022V.
- Component Out

 Change the output format of the video signals output from the COMPONENT VIDEO OUT terminals (Progressive/Interlace).
- HDMI Resolution (DV-3022KV/DV-3022V)
- hange the resolution of the video signals output from HDMI OUT terminals (720x480i/720x576i/720x480p) 720x576p/1280x720p/1920x1080i/1920x1080p HDMI Color (DV-3022KV/DV-3022V)
- Change the video signals output from th terminal (Full range RGB/RGB/Compon ut from the HDMI OUT
- Deep Color (DV-3022KV/DV-3022V) Select Auto when the c
- ected TV or monitor is mpatible with Deep Color (Auto/Off

Language settings

Audio Language

- Change the language when listening to the sound of DVD-Video discs (English/available languages/Other Language).
- Subtitle Language
- Change the language of the subtitles displayed for DVD-Video discs (*English*/available languages/Other Language
- DVD Menu Lang.
- Change the language used for the menu displays of DVD-Video discs (w/Subtitle Lang./available languages/ Other Language

Subtitle Display

· Select whether to display subtitles (On) or not (Off)

Display settings

- Change the language of the operation messages (Play, Stop, etc.) displayed on the TV screen (English/avai
- Angle Indicator Select whether to display the angle mark on the TV screen (On) or not (Off)
- On Screen Display
- Select whether to display operation messages (Play, Stop, etc.) on the TV screen (On) or not (Off)

Options settings

Control (DV-3022KV/DV-3022V) Select whether to operate the player using the remote control of the AV component connected using an HDMI cable (*On*) or not (Off).

- Parental Lock

 Restrict DVD-Video viewing (Password/Level Change) Country Code).
- DivX VOD
- Display the registration code required for playing DivX VOD files (Activate/Deactivate). Auto Power Off
- Select whether to turn the power off automatically (*On*) or not (**Off**). When set to *On*, the power automatically turns off if no operation is performed for 30 minutes or

Restoring all the settings to the defaults

While the player is in the standby mode

Press ⇔ STANDBY/ON while pressing ■.

About trademarks



 HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries

Language Code Table

Land

Bas

Bisla Beng Tibet Breto Cata

iguage coue	lable
guage names (codes)	
nese (ja), 1001	Bhutani (dz), 0426
ish (en), 0514	Esperanto (eo), 0515
ch (fr), 0618	Estonian (et), 0520
nan (de), 0405	Basque (eu), 0521
n (it), 0920	Persian (fa), 0601
iish (es), 0519	Finnish (fi), 0609
ese (zh), 2608	Fiji (fj), 0610
h (nl), 1412	Faroese (fo), 0615
uguese (pt), 1620	Frisian (fy), 0625
dish (sv), 1922	Irish (ga), 0701
ian (ru), 1821	Scots-Gaelic (gd), 0704
an (ko), 1115	Galician (gl), 0712
k (el), 0512	Guarani (gn), 0714
(aa), 0101	Gujarati (gu), 0721
azian (ab), 0102	Hausa (ha), 0801
aans (af), 0106	Hindi (hi), 0809
aric (am), 0113	Croatian (hr), 0818
ic (ar), 0118	Hungarian (hu), 0821
mese (as), 0119	Armenian (hy), 0825
ara (ay), 0125	Interlingua (ia), 0901
baijani (az), 0126	Interlingue (ie), 0905
kir (ba), 0201	Inupiak (ik), 0911
orussian (be), 0205	Indonesian (in), 0914
arian (bg), 0207	Icelandic (is), 0919
ri (bh), 0208	Hebrew (iw), 0923
ma (bi), 0209	Yiddish (ji), 1009
jali (bn), 0214	Javanese (jw), 1023
an (bo), 0215	Georgian (ka), 1101
on (br), 0218	Kazakh (kk), 1111
lan (ca), 0301	Greenlandic (kl), 1112
ican (co), 0315	Cambodian (km), 1113
h (cs), 0319	Kannada (kn), 1114
h (cy), 0325	Kashmiri (ks), 1119
ch (da) 0401	Kurdish (ku) 1121

Country/Area Code Table

Country/Area name, Input codes and Country/Area code ntina. 0118. a den. 1905. s United Kingdom, 0702, gb taly, 0920, it ndia, 0914, in Spain, 0519, es Thailand, 2008, th Taiwan, 2023, tw lonesia, **0904**, id stralia, **0121**, au stria, **0120**, at therlands, **1412**, nl China, 0314, cn Chile, 0312, cl Denmark, 0411 Canada, 0301, ca Japan, 1016, jp Republic o pore. 1907.



 Manufactured under license from Dolby Laboratorie Dolby and the double-D symbol are trademarks of Dolby

Kirghiz (ky), 1125

Latin (la), **1201** Lingala (ln), **1214** Laothian (lo), **1215**

Lithuanian (It), **1220** Latvian (Iv), **1222**

Malagasy (mg), 1307 Maori (mi), 1309 Macedonian (mk), 13

Malay (ms), 1319 Maltese (mt), 1320 Burmese (my), 1325

براه. Burmes. Nauru (na), . Nopali (ne), **140** Norwegian (no), **141** Occitan (oc), **1503** "romo (om), **1513** (or), **1518** "م), **16**

Polish (pl), 1612

Rhaeto-Romance Kirundi (rn), **1814**

Sindhi (sd), 1904 Sangho (sg), 1907

j k) 1311

n (ml), **1312** n (mn), **1314**

(mo), 1315 r), 1318

se (my), 13---(na), 1401 li (ne), 1405 (no), 1415

Pashto, Pushto (ps), 1619 Quechua (qu), 1721

n). **181**3

Sinnalese (si), 1909
Slovak (sk), 1911
Slovenian (sl), 1912
Samoan (sm), 1913
Shona (sn), 1914
Somali (so), 1915
Albanian (sq), 1917
Serbian (sr), 1918
Siswati (ss), 1919
Sesotho (st), 1920
Sundanese (su), 1921
Swahili (sw), 1923
Tamil (ta), 2001
Telugu (te), 2005
Tajik (tg), 2007
Thai (th), 2008
Tigrinya (ti), 2009
Turkmen (tk), 2011
Tagalog (tl), 2012
Setswana (tn), 2014
Tonga (to), 2015
Turkish (tr), 2018
Tsonga (ts), 2019
Tatar (tt), 2020
Twi (tw), 2023
Ukrainian (uk), 2111
Urdu (ur), 2118
Uzbek (uz), 2126
Vietnamese (vi), 2209
Volapūk (vo), 2215
Wolof (wo), 2315
Xhosa (xh), 2408
Yoruba (yo), 2515
Zulu (zu), 2621

Norway, **1415**, no Pakistan, **1611**, pk Philippines, 1608, p Finland, 0609, fi Mexico, 1324, mx Brazil, **0218**, br France, **0618**, f gium, **0205**, I agal, **1620**, I