It is important to read this instruction book prior to using your new product for the first time.

If your product operates on batteries

adhere to the following precautions: A.Any battery may leak electrolyte if mixed

with a different battery type, if inserted

at the same time.

B. Any battery may leak electrolyte or explode

to charge a battery not intended to

if disposed of in fire or an attempt is made

be recharged. C. Discard leaky batteries immediately. Leaking

personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state/provincial

One external AM

loop antenna

should be placed on the apparatus.

tray is empty.

Moving the unit from a cold place to a

The humidity of the room should not exceed 75%. If you have to use the unit outdoors, do not expose it to rain or

splashing water. The apparatus should not

be exposed to dripping or splashing and no objects filled with liquids, such as vases,

warm one can cause condensation on some

condensation disappear on its own before

Before moving the unit, make sure the disc

components inside the unit. Let

Speakers

batteries can cause skin burns or other

D. Battery shall not be exposed to excessive

heat such as sunshine, fire or the like

and local regulations.

incorrectly, or if all batteries are not replaced

Important Safety Instructions

Apparatus shall not be exposed to dripping or splashing and no objects filled with

liquids, such as vases, shall be placed on

product for ventilation. Do not place product

in or on a bed, rug, in a bookcase or cabinet

the apparatus. Always leave sufficient space around the

· Do not place lighted candles, cigarettes,

Connect power cord only to AC power source as marked on the product.

· Care should be taken so that objects do not

Do not attempt to disassemble the cabinet This product does not contain customer

Connections and Setup

Accessories provided

•

Things to consider before you

· Ensure that the mains supply in your house complies with that indicated on the identification

sticker located on the back of your unit

 Install your unit horizontally, away from any source of hear (fireplace) or appliances creating strong magnetic or electric fields.

The components of this unit are sensitive to

heat. The maximum ambient temperature should not exceed 35°C/95°F.

Leave enough space around the unit to allow adequate ventilation: 10 cm/4 inches on either

side and above the top, and 5 cm/2 inches at

If possible, place surround speakers to either side

viewers. This helps to minimize localization effects.

Aim surround speakers straight across the room, not

down at viewers, to help create a more open, spacious surround sound field.

Alternative Surround Placement

If rear wall mounting is the only choice, aim the speakers at each other (A), towards, the front (B) or towards the sidewalls (C, D). Experiment with placement until sounds seem to surround you,

(A), or to the sides or rear of the viewing area,

rather than come from behind you.

No adiacent walls

such as on end tables (B).

install rear speakers 2-3 ft. al

Connections and Setup

Better surround placement

of the listening area, not behind it.

Left and right

front speakers

Video Cable

cigars, etc. on the product.

fall into the product.

Remote control and

One Pig-Tail

connect

Height

2 AAA batteries

serviceable components

Additional safety information

RTD315W

and used in accordance with the to radio communications

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does causeharmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interferebce by one or more of the following measures:

- · Reorient or relocate the receiving
- equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the
- Consult the dealer or an experienced radio/TV technician for help

WARNING: Changes or modifications to this responsible for compliance could void the user's authority to operate the equipment.




different one. Do not attempt to bypass this Removing the power plug is the only way to

This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, this player cannot play the disc. The Region number for this DVD player is Region 1.


- Where the mains plug or an appliance coupler is used as a disconnect device, the disconnect
- · Other important use and cleaning information at

Connecting the antennas

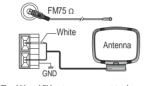

The AM and FM antennas connect to the AM and FM terminals on the system's back panel. They must be hooked up in order to

- Uncoil the AM Antenna wire.
- 3. Make sure the white wire on the AM loop
- antenna is inserted into the AM loop terminal and the other wire is inserted nto the ground loop terminal

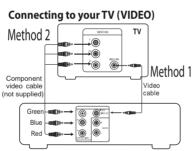

Method 1

- omposite video jack (yellow)
 The basic video jack is color-coded yellow
- Video cable (vellow) is supplied for the
- connection for good picture quality. Connect the video OUT jack on the receive to the IN jack on your TV so the video content goes from the receiver to the

To adjust each speaker volume level for optimun 1) Press the LEVEL button on the remote control to select FL

(front Left speaker (2) Press the VOL+/VOL- buttons to adjust the value up or down

(3) Repeat step (1) and (2) for the other speakers FR. SL. SR. CT. SW. Speaker gains may be set to levels of up to +10, actual maximum levels may also depend on your

Test tone/Channel balance


Channel balance

Your receiver is equipped with a test signal generator to help you balance the audio level for each channel. See Audio Setup under The Setup Menu section for more details on how to access this feature.

Level adjustment and surround cha level expectation

Even though you may adjust the surround channels to be as loud as the others on the test signal, you might find that surround channels seems guieter for actual TV and Movie aimed upwards; they can go right on the floor, or preferably, a few feet off the floor such content. This is because producers use surround for subtle atmospherics and ambience, and only rarely for special effects.

Overview of Controls: Front panel controls

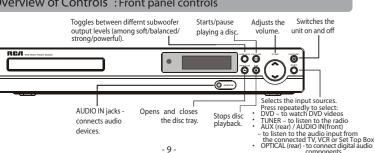

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiates radio frequency energy and, if not installed instructions, may cause harmful interference

- · Increase the separation between the
- receiver is connected.


unit not expressly approved by the party



This Home Theater has earned the ENERGY STAR.

Connections and Setup


- device shall remain readily operable.
- the end of the manual

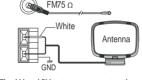

receive clear reception

AM Loop Antenna

- 2. Press down on the Antennas tab to open
- the terminal.

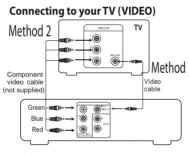

green, blue and red.

Component video jacks (Pr, Pb, Y)

Method 2

Ventilation

ventilation. See diagram.

10 cm

of manufacture.

For your safety

polarized (one blade is

The AC power plug is

wider than the other)

and only fits into AC

power outlets one way.

If the plug won't go into

the outlet completely

turn the plug over and

try to insert it the other

safety feature.

Note:

- 2 -

If it still won't fit, contact a qualified

completely remove power from your

product. Make sure the power plug remains

electrician to change the outlet, or use a

ou must adequately ventilate the product.

Make sure there is adequate space around


the unit to provide proper air flow for

) cm

This product complies with DHHS Rules 21

CFR Subchapter J. Applicable at the date

- The component video jacks are color-coded
- Additional component video cables (not supplied) are required to provide best picture uality. They are usually color-coded green, blue and red.
- · Connect the component video OUT jacks on the receiver to the component video IN jacks on your TV so the video content goes from the receiver to the screen.

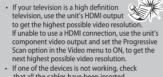


that all the cables have been inserted properly into the jacks.

If your component has only one input for audio (mono), connect it to the left (white L/Mono) audio jack on the TV and don't connect the right audio part of the cable.

Connecting to your TV (via HDMI input)

HDMI stands for High Definition Multimedia Interface. HDMI transfers digital audio and uncompressed digital video on a single cable.
Press the HDMI button on the remote control to change output signals as follows: 480p, 720p,

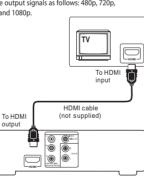

Overview of Controls

(q) 2 3 5 6 8 9 0 \wedge (OK) SLOW **(19)** •...•

RGЛ

Remote functions in DVD/CD mode

ON•OFF – Switches the unit on and off DVD - Selects the DVD mode

NER – Selects the TUNER and selects between FM/AM

AUDIO/AUX – Selects and toggles between the FRONT AUDIO IN mode

and REAR AUX IN mode (for listening to audio input from nected TV, VCR or Set Top Box OPTICAL – Selects OPTICAL IN at rear for digital audio connection. 0-9 - Number entry.

CLEAR – Quits the current setting manually from the TV screen without saving change

INFO - Accesses the Info menu

TITLE - Accesses the title menu of DVD discs

DISC MENU – Accesses the disc menu during playback

 \wedge V < > – To navigate through the menus. The left and right arrows also tune the radio frequency in the tuner mode MUTE - Mutes and restores the sound.

SETUP - Enters Setup menu

RETURN - In DVD mode, returns to the

CH +/ → , CH -/ ← - Directly accesses the next or previous chapter

(DVD) or track (CD). Selects programmed stations in TUNER mode REV - Starts reverse accelerated play

PLAY - Starts playing a disc

FWD - Starts forward accelerated play SLOW - Select SLOW motion function

STOP - Stops playback.

- 10 -

PAUSE - Freezes frame, accesses frame advance

AUDIO - Accesses the audio function ANGLE - Accesses the camera angle function for DVD disc

ZOOM - Accesses the Zoom function

SUBTITLE – Selects the subtitle languages or tunrs subtitle off (if available) HDMI – Changes video output signals (480p, 720p, 1080i or 1080p)

SUBWOOFER - Selects among subwoofer output levels (soft/balance/strong/powerful).

FCC Information



DO NOT EXPOSE TO RAIN OR MOISTURE NE PAS EXPOSER À LA PLUIE NI À L HUMIDITÉ

WARNING:SHOCK HAZARD-DO NOT OPEN AVIS:RISQUE DE CHOC ÉLECTRIQUENE PAS OUVRIR

THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

> THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

- 3 -

Service information

This product should be serviced only by those specially trained in appropriate servicing techniques.

Main plug is used as the disconnect device, it shall remain operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.

Caution

Invisible laser radiation when open. Avoid exposure to beam. Class 1 laser product. This system must be opened only by qualified technicians to prevent accidents caused by

DVD copy protection In accordance with the DVD standard, your DVD player is equipped with a Copy

Protection system, which can be switched on and off by the DVD disc itself, in order to make any recording of the relevant DVD disc onto a videotape of very poor picture quality, or even impossible. This product ncorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright

protection technology must be authorized Macrovision Corporation, and is intended for home use only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly


Connections and Setup

· Refer to the owner's manual of the connected TV as well

 When using HDMI cable, do not connect to other analog video outputs.

Connecting AUDIO from external sources such as TV (Aux-In) Using AUX IN Connect the ALIX IN jacks on rear of the unit to the ALIDIO


OUT jacks on VCR, TV, Set Top Box or other component.
Press either SOURCE on the main unit or AUDIO/AUX on the remote control to toggle select AUX IN mode.

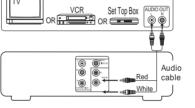

Using AUDIO IN jacks

Connect the Ø3.5mm AUDIO IN jacks on the front panel of the unit to the headphone output on portable players.

Connecting the speakers

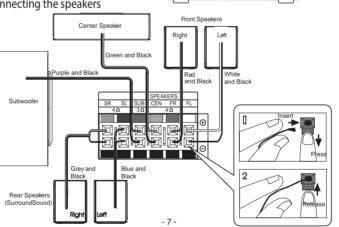

Overview of Controls

$RANDOM-Turns\ on/off\ random\ playback\ on\ CD\ disc.$

REPEAT – Accesses the repeat function.

- Toggles channels for different channel LEVEL level settings. Adjusts the value using

SURROUND - Changes the Surround sound setting. In DVD mode, press the button to select between Dolby Digital 5.1CHANNEL and STEREO modes (Dolby Pro Logic is available if the input is Dolby 2ch). In the AUX IN/ AUDIO IN mode (analog input), press een 5 1CHANNEL

mode

TUNER - Selects the TUNER and switch between

MUTE - Mutes and Restores the sound.

TUNER +/- - Tunes down and up the radio frequencies

Using remote control to navigate

through the on-screen menus

Use \land V <> on the remote to move through on-screen

that is highlighted.

Insert 2 "AAA"("UM-4"/"R03")


AUDIO / AUX on the remote control to toggle to


 Ø3.5mm to Ø3.5mm audio cables (not included) To listen to the audio input from the connected component, press SOURCE on the main unit or

> Suggest using Ø3.5mm 10 AUDIO IN jack for mp3 player and rear AUX IN jacks for equipment such as a TV,

Digital Optical Input

Dolby Digital (e.g. TV or Set Top Box) or standard PCM (CD) format digital signals Use a fiber optical cable for this digital audio connection (cable not included).

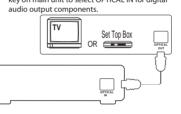

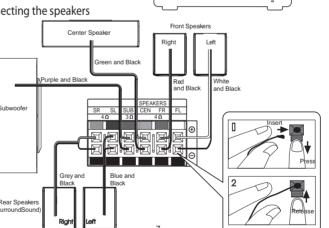

Compatible discs

Compatible formats

Regional coding

1. Turn on your television set.

Loading disc

Playback

· CD, CD-R, CD-RW

DVD, JPEG

CD

DVD, DVD-R,DVD-RW, DVD+R, DVD+RW

Your unit has been designed to process

regional management information stored on

is 1. Discs that have a different regionnal code

DVD discs. The regional code for your unit

Operating the DVD receiver

2. Press ON•OFF on the remote or ON/

STANDBY located on the unit's front

panel. Press DVD on the remote control

1. Press ≜ on the front panel to open the disc

2. Place a disc onto the disc tray with the

3. Press ≜ again to close the disc tray.

witch the unit and the TV set on.

option to begin playback

2. Press STOP to stop playback

Accelerated play

normal playback.

Frame advance

1. After loading a disc, playback starts

While the disc is playing, press REV. or

and direction of the accelerated play.

Press PLAY to resume normal playback.

for freeze frame. Press PLAY to resume

FWD one or more times to vary the speed

While the disc is playing, press PAUSE once

1. Press PAUSE twice. "Step" is displayed.

2. Each time you press PAUSE button, the

picture advances one frame. 3. Press PLAY to resume normal playback.

automatically, or the disc menu appears

If the disc menu appears, select the Play

VOL +/-

the button to select between 5.1CHANN and STEREO modes. (Refer to details on "Sound Enhancement Systems")

Remote control functions in tuner

VOL+/- - Adjusts the sound volume

MEMORY - Stores a station CH+/- - Selects programmed stations


AUDIO - Selects between Stereo and Mono mode


Use $\wedge V \leq 1$ and OK on the remote control to navigate through the on-screen displays (the DVD player's menu the Info Display that appears during playback, or a disc's

right, press >). The arrow buttons are used to highlight an option. Once highlighted, press OK to select the option

menus in the direction of the arrow button (e.g., to move

VCR, Satellite or Cable Box. Connect components capable of outputting

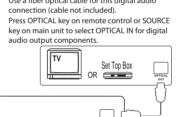

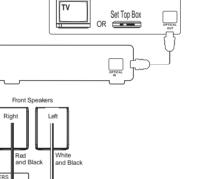

4. Subwoofer Note: Center speakers provided with this unit are magnetically shielded to protect your TV set. It is not recommend to place the front, surround speakers and

Playing Discs - Basic Functions

2. Each time the SLOW button is pressed, the speed of slow-motion playback changes in

PLAY ← SFX1/7← SFX1/6 3. Press PLAY to resume normal playback.

While the disc is playing, press the CH+/-button to go immediately to the next or previous chapter, or to the next or

previous track

Changing chapter/track

then returns to normal playback.


- 2. Move from one area to another (pan)
- get to the ZOOM OFF option.

Types of menus · Disc menu — The appearance and

contents of this menu varies according to the type of disc you have inserted. It is separate from the Setup menu.

switch the Info menu on or off. TT 1/10 CH 1/16 ① 00:13:07 Setup menu — Press SETUP to access

CAUTION This product utilizes a laser, Use of controls or adjustments or perfor of procedures other than those specified herein may result in hazardous radiation exposure. Do not

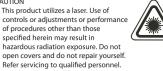

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. No objects filled with liquids, such as vases, should be placed on the apparatus.

is Class B digital apparatus complie th Canadian ICES-003. et appareil numérique de la classe B est onforme à la norme NMB-003

WARNING

reduce the risk of fire or electric shock, do not expose this product to rain or moisture. N objects filled with liquids, such a vases, should be ced on the apparatus

• Do not defeat the safety purpose of the polarized or

grounding-type plug. A polarized plug has two blades

Important Safety Instructions

CLASS 1 LASER PRODUCT APPAREIL À LASER DE CLASSE

PRODUCTO LASER DE CLASE 1

Please read and save for future reference

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

Important Information

Important battery information

Do not mix different types of batteries or

observe the polarities indicated inside the

battery compartment. Replace only with

the type of batteries specified. Do not dispose of them in a fire or recharge the

If you are not using the remote control for

a long period of time, remove

the batteries.

Please respect the environment

and prevailing regulations. Before you dispose of batteries or accumulators, ask your dealer

whether they are subject to

special recycling and if they will accept them for disposal.

new and old batteries. Do not use rechargeable batteries.
In order to avoid any risk of explosion

- Read these instructions
- Keep these instructionsHeed all warnings. · Follow all instructions

specified by the manufacture

- Do not use this apparatus near water Do not block any ventilation openings Install in accordance with the
- manufacturer's instructions.

 Do not install near any heat sources such as radiators, heat registers, stoves, or other
- apparatus (including amplifiers) that Only use attachments/accessor



with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for electrician for replacement of the obsolete outlet.

- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus
- · Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus
- Unplug this apparatus during lightning storms
- Refer all servicing to qualified service personnel Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture,
 does not operate normally, or has been dropped

Front speaker placement

For best results, follow the speaker placement

Align the center speaker evenly with (A) or

slightly behind (B) (the left and right speakers),

Connections and Setup Speaker wires are color-coded to match the terminals. Connect the speaker wire from the back of

each speaker to the corresponding color terminal at the back of the unit. Press down the tab to open the terminal and insert the wire. Release the tab to lock wire in the terminal.

Note: When connecting the speakers, make sure the polarities ("+" speaker wire to "+" on the receiver.


or example, red wire to red terminal on the receiver) of speaker wires and terminals match. If the cords are reverse

the sound will be distorted. Do not let the speaker wires touch each other, it will damage the Home Theater's amplifer.

Alignment

but not ahead of them.

Positioning speakers

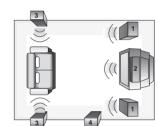

1. Left, Right (Front Speakers)

2. Center In surround mode, the center speaker carries most of the dialog as well as music and

It should be set between the left and right

Front speakers carry primarily music and

3. Surround (Rear Speakers) The surround speakers' overall sound balance should be as close as possible to the front speakers. Proper placement is vital to establish an evenly distributed sound field.

subwoofer is designed to reproduc powerful low bass effects (explosions, the rumble of spaceships, etc.).

on top (A) or beneath (B) the TV set.

Place the left and right speakers to form a

45-degree angle with your favorite viewing

position to duplicate the soundtrack mixer's

The three front speakers should be as close as

possible to the same height. This often requires placing the center speaker directly

subwoofer near the TV set.

Basic playback operations

sound effects.

effects.

speakers

Variable slow motion . Press SLOW button on the remote in play mode.

the following sequence: SF X1/2 \rightarrow SF X1/3 \rightarrow SF X1/4 \rightarrow SF X1/5

1. While a disc is playing, press ZOOM until you reach the zoom size you want. The ZOOM button toggles through x2, x3, x4 and then zooms out to x1/2, x1/3 and x1/4,

using the arrow buttons. 3. To turn ZOOM off, press ZOOM unitil you

Info menu — The unit's Info menu appears at the top of the screen while the disc is playing. Press INFO on the remote to

this menu.



 When you press STOP, the unit stores the point where playback was interrupted. If you press PLAY again, playback resumes from this point To stop playback completely or to start again from the beginning, press STOP twice. If the unit is left in STOP mode for more than 5 minutes user interaction, the unit switches off

automatically.

The Info Menu Press INFO on the remote while a disc is playing to display the info menu. The first banner shows title, chapter, and time display information. 2. Press INFO again for audio language, subtitles, and

camera angle. 3. Press INFO a third time for play mode, bookmark and 4. Use the right/left arrow buttons on the remote to

5. Use the up/down buttons to scroll through the options

INVALID KEY will be displayed if the function you

TT 1/10 CH 1/16 ② 00:13:07

CD Info Display

- 12 -

Time display Play mode PLAYMODE S BOOKMARK

))1/3ENG □□5.1CH □1/2 ENG □10FF PLAYMODE BOOKMARK SLEEP

DVD Info Display

combination to avoid injury from tip-over.

or when unused for long periods of time.




Note: Many discs only have

To access the Time Display, press INFO on the remote. Press the up/down buttons repeatedly to display: DVD: Chapter Time Elapsed, Chapter Time Remain, Title Time Elapsed and Title

Audio CD: Track Time Elapsed, Track Time Remain, Disc Time Elapsed, Disc

To directly access a location on the disc title or chapter, press INFO once and press OK, highlight the Time Display icon using the arrow buttons, then enter a time with the number buttons (hh:mm:ss) and

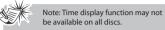

Audio (DVD)

Some discs have several audio tracks used for different languages or different audio formats.

To change the language or audio format during playback:

. Press the INFO button twice. 2. Use the left/right arrow buttons to select the

Audio icon, or press the AUDIO button on the remote control. 3. Choose a language or an audio format with the

This option is only available if the disc offers dialog languages or audio formats. When you change the dialog language using the Info menu, it only changes the dialog

Subtitles (DVD)

in the Language Setup menu.

Subtitles are turned off by default. Turn on Subtitles as follows: 1. While the disc is playing, press INFO twice

language of the disc being played. When

you eject the disc or switch off the unit, the

language will revert to the one you selected

- then select the Subtitles icon using the left/right arrow buttons.
- 2. Select a language using the up/down arrow buttons.
 3. To turn subtitles off, select the Off option or press SUBTITLE on the remote

When you change the language of the subtitles using the Info menu, it only applies to the disc currently being played. When you eject the disc and switch off the unit, the subtitles will default to the subtitle language you selected in the Languages menu.

This function may not be available

Camera angle (DVD)

The Info Menu

Some discs offer different camera angles for

specific scenes. To change the camera angle, press the
 ANGLE button on the remote or press the INFO button twice and select the Camera

angle icon with the left/right buttons. 2. Choose the angle with the up/down

If the disc was recorded using a single camera angle, this function is not available.

Play mode (all discs except JPEG)

- 1. While the disc is playing, press the INFO button twice for CD and three times
- 2. Select the Play Mode icon using the left/ right arrow buttons.
- 3. Use the up/down arrow buttons to select
- DVD play modes: standard, program, A-B repeat, title repeat, chapter repeat.

 Program play mode is only available if a program list has been created (see below). Repeat mode is only available with discs that display elapsed time and remaining time. To repeat a sequence between points A and B, choose the A-B repeat option, and then follow the instructions for entering the two points.
- Audio CD play modes: standard, introscan, random, program, repeat A-B, repeat disc,
- 4. To stop repeat playback, select the Play Mode icon and use the up/down arrow buttons to choose the Standard option


The Info Menu

To stop program play, press STOP or select Standard from the Play Mode option in the INFO display.

If you want to cancel the list, repeat steps 1 and 2 to select CLEAR and press OK.

Sleep

- 1. Press INFO twice for CD and three times for DVD. Select Sleep icon with the
- left/right arrow buttons the OK button: Off, 30, 60, 90 or 120 minutes.

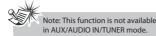

- 5. Continue entering tracks until you have
- completed your list. 6. Highlight the Play option at the bottom of the screen and press OK or press PLAY to start playback. The program list will play

in the order you programmed it.

Creating a Program List for

CDs and DVD discs)

create a program list.

Program Play Mode (Audio

To use program play mode, you must first

. To create a program list, press the INFO

2. Press OK, The Program screen is displayed.

3. The first spot in the list is highlighted. Use

enter a track number. As for DVD discs: T stands for Title while C stands for Chapter.

the number buttons on the remote to

As for Audio CDs: T stands for Track.

4. Use the arrow buttons to move to the

next spot in the list. Enter the next

button twice for CD and three times for DVD

Highlight the Play Mode option and press the up arrow to select the Program option.

Introscan (CD)

each track on a CD.

1. Press the INFO button twice, then select the Playmode icon with the left/right

This option plays the first ten seconds of

- 2. Press the up/down arrow buttons to select the INTRO option and press OK to start
- IntroScan. 3. Press STOP to stop Introscan, and press

Bookmark (DVD and audio CD)

- 1. Press INFO twice for CD and three times for DVD. Select the Bookmark icor with the left/right buttons, and press OK. A menu is displayed with five bookmarks.

 2. The first bookmark space is highlighted.
- Press OK to set the bookmark. The book mark is saved and is indicated by the number 1. You can set up to five bookmarks on a disc.
- 3. To start playback from a bookmark, press the PLAY button on the remote
- 4. To delete a bookmark, highlight it and press CLEAR



Night Mode

Channel Delay

Center Delay

• Rear Delay

default distance.

the distance

The Setup Menu

Note: This function is only available with the available with discs whose elapsed time or remaining time appears in

You can use this function to control the

different sound levels via dynamic compression.

improves the quality of the sound track at a

low volume, and guiets the loudest sounds. You can

Basic settings have been preset for the speakers included with your unit. However, to

suit the acoustic conditions in your listening room and to make the sound more effective,

you may need to delay the signal coming from

1. Highlight a distance option using the up/

2. Press the right arrow button to move to the

3. Press the up/down arrow buttons to adjust

come from the speaker you select. Use the VOL

Press OK button to exit this function.

button to adjust the level to your desired setting.

choose between Quiet, Moderate or Off.

Additional Information

Troubleshooting

- 15 -

Radio

The unit has a built-in tuner that allows for

1. Connect the FM antenna and the AM loop

antenna at the back of the unit. Rotate the AM loop for better reception.

3. Tune a station by pressing TUNER+/-

repeatedly until the desired station is

found. Alternatively, you can press and hold the same buttons down for about

one second to activate the automatic

automatically tune frequencies until it

4. Repeat step 3 to tune to another

Storing radio stations

5. Press TUNER to toggle between FM $\,$

The unit can store up to 30 radio stations in

station yourself or the unit can store all

available radio stations automatically in

1. Press TUNER to enter the Tuner mode

start automatic preset programming.

3. Radio frequencies will be browsed and

auto preset programming function

1. Tune to a radio station (see "Manual

then press MEMORY to store it.

Retrieving preset stations

1. Press TUNER to enter the Tuner mode.

2. Press CH +/- to search up or down for the preset stations or directly press the

Press MEMORY. While the Program Preset number is still flashing, input your desired

preset number using the numeric buttons

its memory. You can enter every single radio

Automatic preset programming

2. Press and hold TUNER for two seconds to

radio stations stored automatically. When

all the available radio stations are stored or all 30 memory locations are full, the

search function. In this mode the unit will

FM radio function. The AM loop antenna

allows for AM radio function.

Manual tuning

2. Press TUNER.

finds a station

radio station.

ascending order.

Manual preset

tuning" for details).

and AM.

The unit does not switch on.

numeric buttons.

- · Make sure it is plugged in. Press the ON•OFF button on the remote
- control or the ON/STANDBY button on the front of the unit

The device switches off spontaneously

- The deivces switches off automatically when it is in STOP mode for more than 30 minutes without any user intervention Switch it on again.
 It might be impossible to read the disc.
- Insert the disc with the printed side facing up.
- Check that the disc can actually be played
- by this device.
- Check that the disc's regional code matches the unit's regional code. This
- unit's regional code is 1.
- Clean the disc.
- There is no picture.
- Check you have switched on the TV set.Check the connections Select the AV input assigned to the unit
- on the TV. Replace the HDMI cable with a better one
- Bad HDMI cable can cause data lost. Press HDMI key on remote handset several
- times to toggle among different HD OUTPUT.

The picture is of poor quality (with snow

· Check the connections

There is no sound or the sound is of

- poor quality.Check the connections
- Make sure the speakers are connected.
- Make sure the MUTE function is not on.

oonse: 2kHz +/-3dB, 400Hz ref.

No surround sound. Check the speaker configuration in the

Usable Sensitivity: 3000uV/m @ S/N 20dB

Frequency Response: 15kHz +/-3dB, 1kHz ref.

Setup menu (See Positioning speaker or Audio Setup).

RMS Output Power: Dolby Digital Mode with 10% Total Harmonic Distortion Rear Channels: 40 Watts/channel (1kH, 4Ω) Front and Center Channel: 40 Watts per channel (1kHz, 4Ω) Subwoofer Channel: 50 Watts (100Hz, 3Ω)

mode: 250 Watts Muting Attenuation: 70 dB

1KHz ref. Subwoofer Frequency Respons

20Hz – 200Hz/-3dB, 100Hz ref. Signal to Noise Ratio: 70 dB (Dolby Digital)

Signal to Noise: 62dB(stereo) / 65dB(mono) IF Rejection: 70dB Dimensions (H x W x D mm):

Unit: 66 x 430 x 240 Front Speakers: 110 x 81 x 90 Center Speaker: 82 x 185 x 92 Rear Speakers: 110 x 81 x 90 Subwoofer: 310 x 155 x 291

AM Tuner Section:

Signal to Noise: 38dB

IF Rejection: 35dB

FM Tuner Section:

Quietina: 24dB

Limited Warranty (U.S.)

AVC MULTIMEDIA ("AVC") makes the following limited warranty. This limited warranty extend to the original consumer purchaser and is limited to non-commercial use of the product

One Year Parts & Labor Warranty

AVC products purchased in the United States are warranted to be free from defects in materials or workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at AVC'ssole discretion

vice labor to repair a manufacturing defect at its designated Service Center. To obtain warranty vice in the Untied States, you must first call our Customer Support Center at 1-800-506-5746 or 1-877-252-6873, during the hours listed in the box on the right. The determination of service will be made by AVC Customer Support. PLEASE DONOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION. New or remanufactured replacements for defective parts or products will be used for repairs by AVC at its designated Service Center for one year from the effective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs.

When you send the product to the AVC service facility you must use the original carton box and packing material or an equivalent as designated by AVC

AUDIO IN/ AUX IN



Radio

- - Refer to "Connecting to external audio

sources " for details on connecting the auxiliary components to the unit.

not receive audio on all speakers.

JPEG Files

- up and close the disc tray. The folders on the disc will be listed in numerical order on the left side of the screen. When you highlight a folder, then press OK button. The list of songs or

pictures in the folder are listed in numerical

- order on the right side of the screen.
- the up/down arrow buttons to select a file. Press OK or PLAY to start playback.
- in the same folder. You can set the amount of time a picture remains on the screen in the General Setup Menu.

Additional Information

Lean't find my file in the file listing. · Make sure the filename is valid

- The remote control does not work or
- · Check that batteries are inserted or
- change them. · Aim the remote control at the unit. The
- infrared beam must not be blocked or interrupted.
- Check that the remote control is configured to control the device you are trying to operate with it.
- The subtitles do not appear
- · Check that the DVD disc provides subtitles Refer to the section on how to display
- subtitles. The disc menu language is not the
- · The disc menu language has not been set
- The language of your choice is not
- Precautions
- · If your unit has been stored in a cool place
- for any length of time, during a journey for example, wait for about 2 hours
- before using it. The openings located on the top and
- bottom are for ventilation and must not be obstructed.
- · During thunderstorms, we recommend
- that you isolate the unit from the electrical supply so that it is not damaged
- by electrical or electromagnetic surges. · This unit is designed for continuous use Switching off the unit to standby mode
- supply. To completely isolate the equipment, remove the plug from the mains jack as some components remain
- connected to the electrical supply. If you notice any burning or smoke
- any risk of electrocution. · Do not attempt to look inside the unit
- through the disk tray opening or any
- disconnect the unit immediately to avoid
- does not disconnect it from the mains being played.
 - humidity or high temperatures. Do not use aerosol cleaners, benzene, anti-static liquids or any other solvent for cleaning discs. When cleaning, wipe gently with a soft damp (water only) cloth from

interference during playback.

the centre to the edge, avoiding circular

motions, which could cause scratches and

1) You must retain the original sale receipt to provide proof of purchase.

3) Warranties extend only to defects in material or workmanship, and do not extend to any product

products or parts thereof which have had the serial number removed or changed.

Out of Warranty

please contact our Customer Support Center at 1-800-506-5746, 1-877-252-6873 or www.RCAav.com

Important: You are responsible for any transportation, shipping or insurance relative to the return of product to our Product Returns Center.

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above With the exception of any warranties implied by state law as hereby limited, the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall AVC

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of the change of the chanof these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of AVC arising under the warranty or under any statute, or law of the United States or any state thereof, is hereby limited to one year from the date of purchase. This limitation

This warranty gives you specific legal rights and you may also have other rights, which may vary, from state to state. Some states do not allow limitation on how long an implied warranty lasts, wher an action may be brought, or the exclusion or limitation of incidental or consequential damages, so

www.RCAav.com

Type of set ... Serial no. Invoice no. . Date purchased

811-315W91W051

- 22 -

TV, VCR or Set Top Box can be connected to AUX input jacks at the back of the unit or AUDIO IN at the front panel so that sound from the auxiliary

Time display

JPEG Files

6. During the slide show you can use the

up arrow button to rotate the image

vertically, the down arrow button to

left/right button to rotate the picture, the

rotate the image horizontally. Use the ZOOM button to magnify the picture. Use

the CH- button to go back to the previous

picture or the CH+ button to go to the

interrupt the slide show and display the

next one, and the STOP button to

7. When the unit has played all the files, the

are displayed again.

8. Press STOP to end playback

slide show stops and the disc's contents

The time taken for the contents of the

disc to be displayed varies according to the size and number of jpeg files on the

disc. If nothing is displayed after a few minutes, the file sizes may be too large.

Reduce the files' resolution and write

Before inserting a disc, make sure it is compatible with the unit.

another disc.

which does not correspond to the start of a

The Setup Menu

- 13 -

There are four options in the main setup menu: General Setup, Language Setup, Audio Setup and Video Setup.

Press SETUP to bring up the main menu. Select one of the menu icons across the top of the screen using the left/right arrow buttons. The menu's options are displayed on the left side of the screen. Press the right arrow button to move to the option's choices on the right. Press SETUP if you want to exit setup.

General Setup

Progressive Function provides high quality pictures with less flickering. Progressive Scan if you used the Component Video jacks of the unit to connect a TV or monitor compatible with a progressive scan signal.

Select P-Scan YPbPr and press OK to activate Progressive Scan.

4:3 PS: reproduces a 4:3 picture without distortion 4:3 LB: gives best reproduction of pictures recorded in this format (i.e. with horizontal

HDMI Setup

1080i and 1080p. TV Type Depending on the format of the DVD disc,

bands at the top and bottom of the screen)

This lets you select the resolution of the player's output according to the connected Supported HD JPEG mode: 480p, 720p,

you can choose the picture format (aspect ratio) best suited to the format of your

or in 16:9.

• 16:9 (widescreen): reproduces 16:9 format Press the up/down arrow buttons or AUDIO - 17 - films in full on a 16x9 screen. on the remote control to select audio language.

Additional Information

Compatible Formats

ı with DVD or CD standards. This unit may not play some recordings or files due to differences in recording formats, software used and disc types

Digital video discs - 12 cm, single or

DVDs are high density optical discs on

double sided, single or dual layer

In order to ensure playback, discs must

which high quality picture and audio are recorded by means of digital signals. DVD-R,DVD-RW, DVD+R, DVD+RW Most DVD-R and DVD+R (one recording only), DVD-RW and DVD+RW discs (rewritable), depending on the DVD writer and discs used. Recordings using DVD-R and DVD-RW discs must be made in Video DVD mode. Recordings using DVD+RW discs must

be made in accordance with the specifications for DVD+RW discs with a 4.7 GB capacity.

Audio CDs (12 cm).

CD-R, CD-RW

DVD-Video

CD-RW discs (rewritable). CD-Rs written during a multisession recording can be played, provided that the session has ended before the disc is played

(depending on the write software)

Most CD-R (one recording only) and

However, depending on the condition of the CD-writer, computer and the disc used, you may find that not all discs will play. When playing a CD-R disc, it is normal for the unit to take up to 60 seconds to recognize the disc before starting to play.

If the disc is not recognized after a period of

Do not use its full capacity.CD-Rs should be preferably used instead

of CD-RWs (rewritable CDs) as, in certain

cases. CD-RW playback may be faulty.

Use reliable, good-quality CD write

Close all other applications on the

computer to ensure reliable CD-R

disc recording.

- 21 -

120 seconds, remove the disc, and insert it again

CD-R and CD-RW with JPEG files. Certain JPEG files, including progressive JPEG files

characters including (. , /, \setminus , =, +). The total number of files on a disc should be less than 400.

The total number of files and folders on the disc

Files without the ".jpg" extension will not be able

to be read by the unit -- even though the files are

Make sure that files have the ".jpg" extension.

shown as JPEG images on your computer.

should be less than 650.

cannot be read by this unit. When composing your title, use 10 characters or

This receiver is equipped with several built-in

from Dolby Laboratories double-D symbol are trademarks of Dolby

Dolby Prologic The Pro Logic mode uses the built-in circuit to steer the Left, Center, Right and Mono Surround channel audio signals and uses all five speakers to

The Dolby Digital mode lets you enjoy full digital surround from software processed in the Dolby Digital format. Dolby Digital provides better sound quality and a more powerful presence than conventional Dolby Surround, This unit is equipped with Dolby Digital 5.1-channel so that you can enjoy enhanced full digital surround sound. Different from Dolby Pro Logic in that only four channels (Front Left, Front Right, Centre and Rear) are used, the new system provides stereo separation of the rear speakers (Rear-Right, Rear-Left). Adding the to the 5 channels the subwoofer channel for bass sounds (counted as 0.1 channel) results in 5.1 channels (or 6 Channels) that bring you the most sophisticated Dolby Digital sound

Amplifier Section:

Frequency Response: 200Hz – 20KHz/3dB,

The customer is responsible for all transportation charges to the service facility. Packaging and Shipping Instruction

Tips

- When a strong FM stereo broadcast is tuned, ST is displayed. component comes into the unit and out through the speakers.
 - Connecting auxiliary components

Selecting AUDIO IN/AUX IN mode

(or AUDIO IN mode)

If the AUX IN (or AUDIO IN) audio signal is mono, you may

JPEG files are image files. Make sure that they have a resolution of less than

2 megapixels. 1. Open the disc tray. 2. Place the disc with the printed side facing

3. Select a folder using the up/down arrow buttons on the remote, then press the left arrow button to move to the picture icons at the bottom of the screen. Use the left/right arrow buttons to select picture mode.

- 16 -

not be used for industrial purposes Total or partial copying of recordings protected by copyright legislation, without the explicit permission of the holder of the rights, contravenes current legislation

· Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides. Using solvents, abrasive or alcohol-based

checked by an authorized servicer or service center.

- · Handle your discs with care. Hold the disc
- · Insert the disc with the label facing up (for a single-sided disc).
- always wiping from the centre to the edge.

· Place the disc properly into the tray in the

- Always put discs back in their cases after use and store in a vertical position
- the holder. Do not play cracked, chipped or warped discs nor try to repair them with adhesive
- places exposed to direct sunlight, high

other opening. You may be electrocuted or exposed to laser radiation.

Your Responsibility

2) These warranties are effective only if the product is purchased and operated in the U.S.A. or or parts which have been lost or discarded, or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified without authorization of AVC, or to

Hours: Monday-Thursday: 9am-7pm, Friday: 9am-5pm, Saturday: 9am-NOON Eastern time

be liable for consequential or incidental damages.

the above provisions may not apply to you. For more information on other products and services, please visit our web site at

Important: Also keep your "Bill of Sale" as proof of purchase. ... Product name..

FOR SERVICE AND REPAIR, PLEASE VISIT www.RCAav.com

Subtitles Select the subtitle language using up/down arrow buttons and press OK.

and use the left/right arrow buttons to highlight the Subtitle icon. Press the up/down arrow buttons or the SUBTITLE button on the remote to select a subtitle language. Disc Menu To change the language of the disc menus,

To change the language of the subtitles during playback, press INFO twice for DVD

If the selected language is not available on a disc, the disc's language will be used

1. Select the Audio Setup icon in the main menu using the left/right arrow buttons.



the language of your choice and press OK **Player Menu** Select the language of player menus and press

Additional Information

JPEG files

Sound Enhancement Systems

DOLBY. "Dolby", "Pro Logic", and the Laboratories

You can use this mode with any stereo program source (such as VCR/TV) to enjoy multi-channel

Technical Specifications:

buttons and press OK. if the disc is programmed with that language.

If the language chosen is available, it is

Audio Setup You can adapt your unit to other equipment and access specific functions with the Audio

sound enhancement systems.

amount of time a picture is displayed in a slide show. The choices are 5 seconds, 10 seconds, or Additional Information

The Slide Time option lets you select the

Total RMS Output Power, Dolby Digital

During a period of one year from the effective warranty date, AVC will provide, when needed.

- 23 -

When you manually tune into a weak FM station, press AUDIO on remote control to switch from Stereo to Mono mode. This will reduce the background noise.

of interference, so try to position the

nna for better reception and a

antenna away from the

more efficient search.

A weak signal can affect the

"Automatic preset programming function's efficiency. Adjust the

If there is any interference, change the antenna's position until ideal sound reception is obtained. TV and other electronic devices could be the cause

Press either SOURCE on the main unit or AUDIO/AUX on the remote control to select AUX IN or AUDIO IN mode

Sound output in AUX-IN mode

You may change the surround setting by pressing SURROUND to select between 5.1CHANNEL and

Playing JPEG files

4. Press the up arrow button to move to the file list on the right side of the screen. Use

5. The unit starts the slide show with the JPEG file you have selected, then displays all the JPEG files in the same folder, then all the JPEG files in the subfolders located

Copying or downloading music files for sale or any other business purpose constitutes or could constitute a violation of copyright law.

products risks damaging the unit. · If an object or liquid enters inside the unit, unplug it immediately and have it

Handling and caring for discs with your fingers at the edges or through

allotted holder. Use a soft cloth to clean discs if necessary

Do not close the tray with two discs in it or with a disc not sitting correctly in

tape or glue. Do not write on a disc. · Do not move the unit when a disc is · Do not scratch discs or store them in

Limited Warranty

In the event your product requires repair after the limited warranty period has expired,

does not apply to implied warranties arising under state law.

Specifications and external appearance are subject to change without notice. printed in China

The Setup Menu

IMPORTANT!

Language Setup

Default This option allows you to return the unit's settings to the original factory settings. Any changes you have made to the unit's settings will be reverted back to the original settings

Once Progressive Scan has been activated, an

mage will only be visible on a progressive scan

TV or monitor. If you choose this option and you

don't have a progressive scan TV or monitor, you

may get a picture with incorrect color or no color

With this menu, you can set the language for unit menus, dialog, subtitles and the disc If you chose "English" during initial set-up, any menus generated by the disc are in English, and so is the language of the dialogs (if this language is available on the disc). 2

 Select the Language Setup icon in the main menu using the left/right 2. Select one of the options using the up/ 3. Press the right arrow button to move to the

4. Use the up/down arrow buttons to highlight

Select the dialog language using up/down

arrow buttons and press OK. To change the Audio language during playback, press INFO twice for DVD and use the left/right arrow buttons to highlight the Audio icon

or less, no spaces, and avoid the use of special

select the language using the up/down arrow some of the speakers. Channel delay compensates for center or surround speakers The language you select will only be displayed that are closer to the listening position than the front speakers.

automatically selected when you **Test Tone** display the subtitles or press SUBTITLE on the remote control. Otherwise, the This function is used to test and adjust the volume level (gain) for each individual speaker channel. subtitle language indicated on the disc Use Λ/V to select the speaker channel you wish to test and adjust. You'll hear a test tone

1. Select the Video icon in the main menu using the left/right arrow buttons. 2. Select a menu option using the up/down arrow buttons and press OK.

Video Setup

play both stereo and Dolby Pro Logic program source, such as TV and VCR.