




### Complete Home Theater System with 5 DVD/CD Changer and Digital Tuner

This Quick Set Up Guide will help you get your new Emerson Home Theater System connected, positioned, and operating so you can begin enjoying movies and music as quickly as possible.

All of the initial default settings have been pre-set for the system to be operated in North America. No further adjustments are required at this time.

The diagrams below show the important controls on the front panel and remote control that you will use to perform the operations in this Quick Set Up Guide.

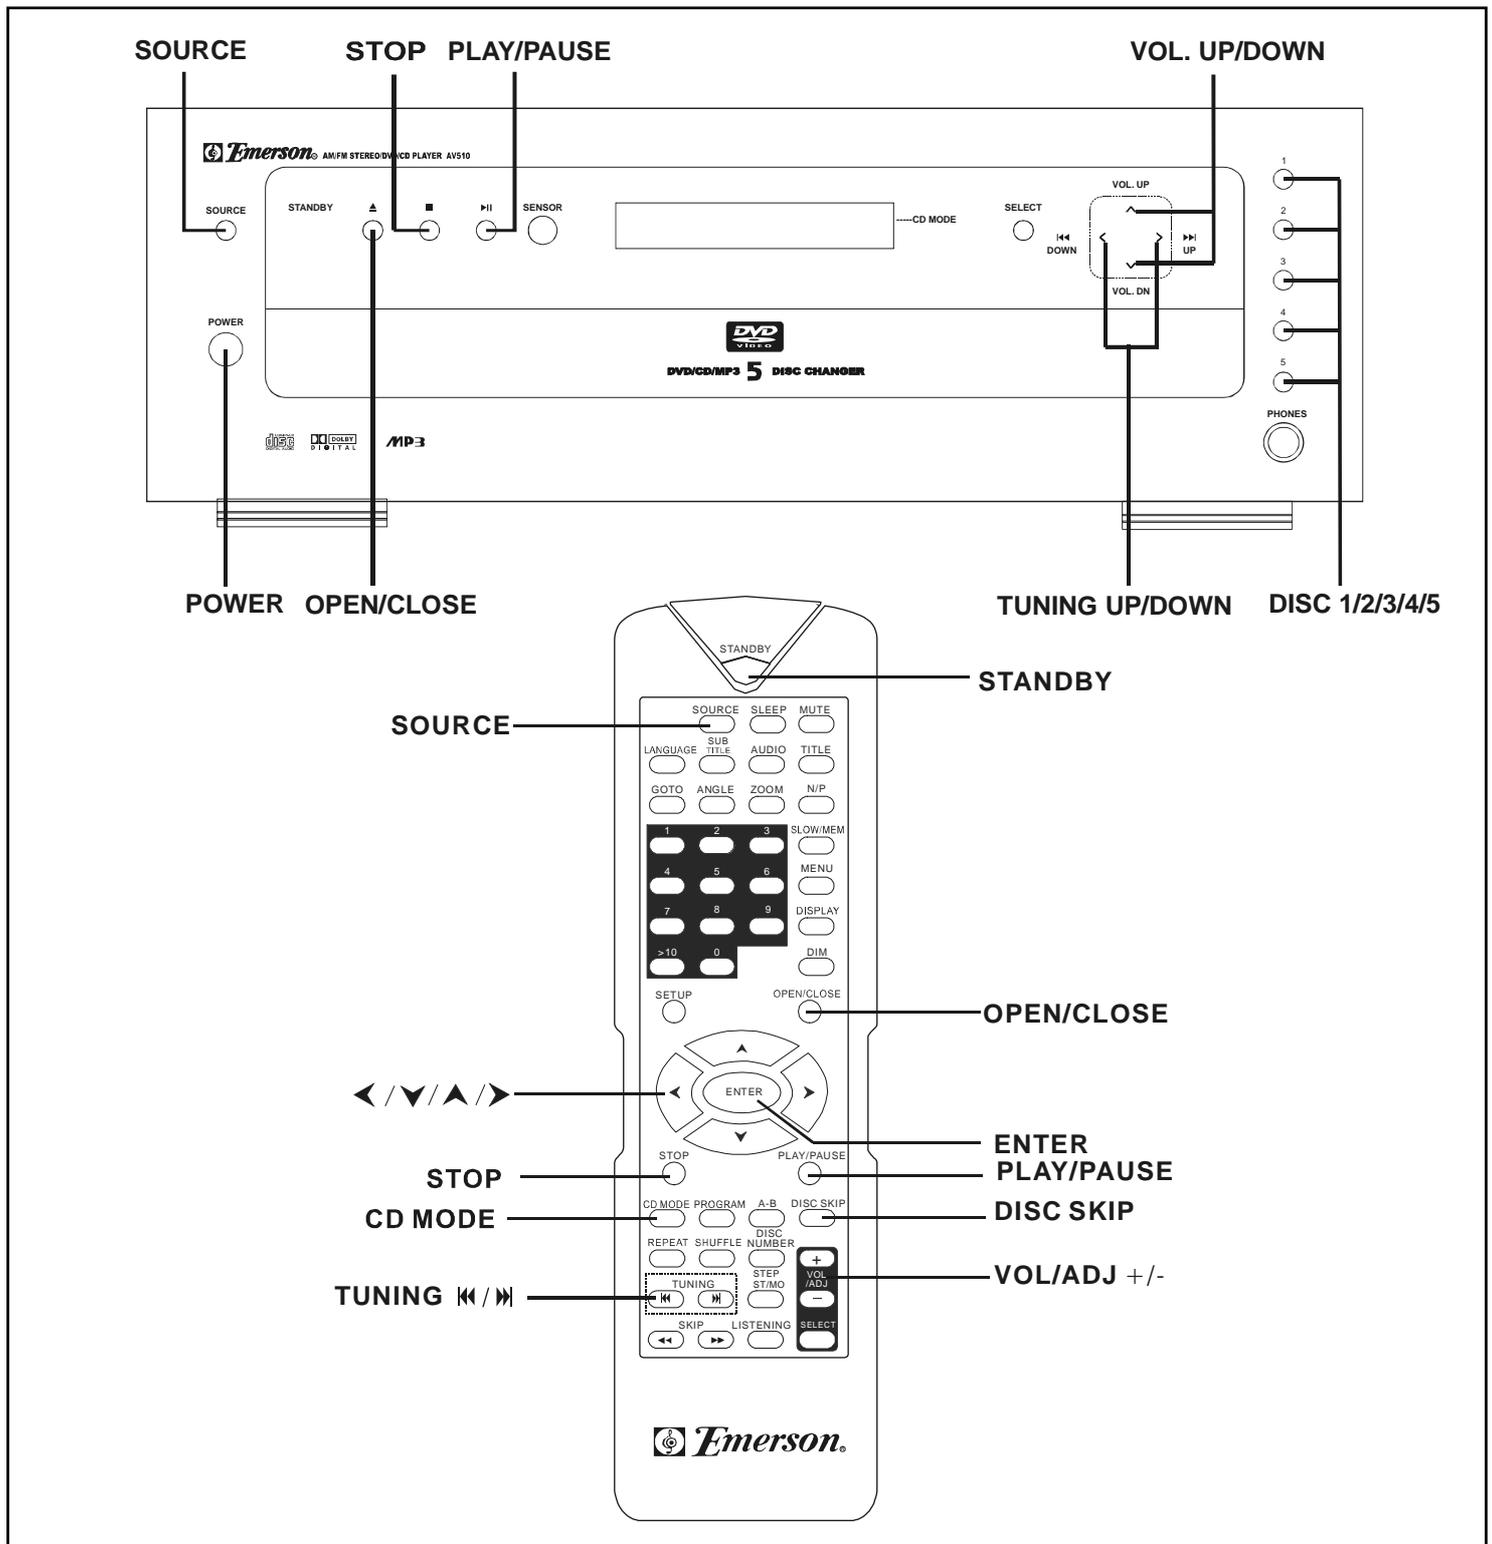

# BASIC SETUP AND CONNECTIONS

1.) Carefully remove the system from the display carton and confirm that you have the following items:

- Main Unit x 1.
- Satellite Speakers with cables x 5.
- Subwoofer with cable x 1.
- Remote Control x 1.
- Remote Batteries x 2.
- Video Cable x 1.
- AM and FM Antennas.
- Owner's Manual.

**Save the carton and all packing materials.**

2.) Install the batteries in the remote control.


3.) Place the main unit in the desired location but do not connect the AC power cord at this time.

4.) Refer to the following connection diagram.

- Connect all 6 speakers to the color coded terminals on the back of the main unit. The cables and terminals are color coded for your convenience.
- Connect your TV to the back of the main unit using the supplied video cable (yellow plugs on each end).
- Connect the AM and FM antennas to the back of the main unit.
- Connect the power cord of the main unit to a 120V 60Hz AC household outlet. The red STANDBY indicator turns 'On' to confirm the unit has been in Standby state.

## Note:


To suit your convenience, we suggest the unit be kept in Standby mode. If the system will not be used for an extended period such as a two week vacation, etc - then you'd better unplug the power cord from the AC household outlet.

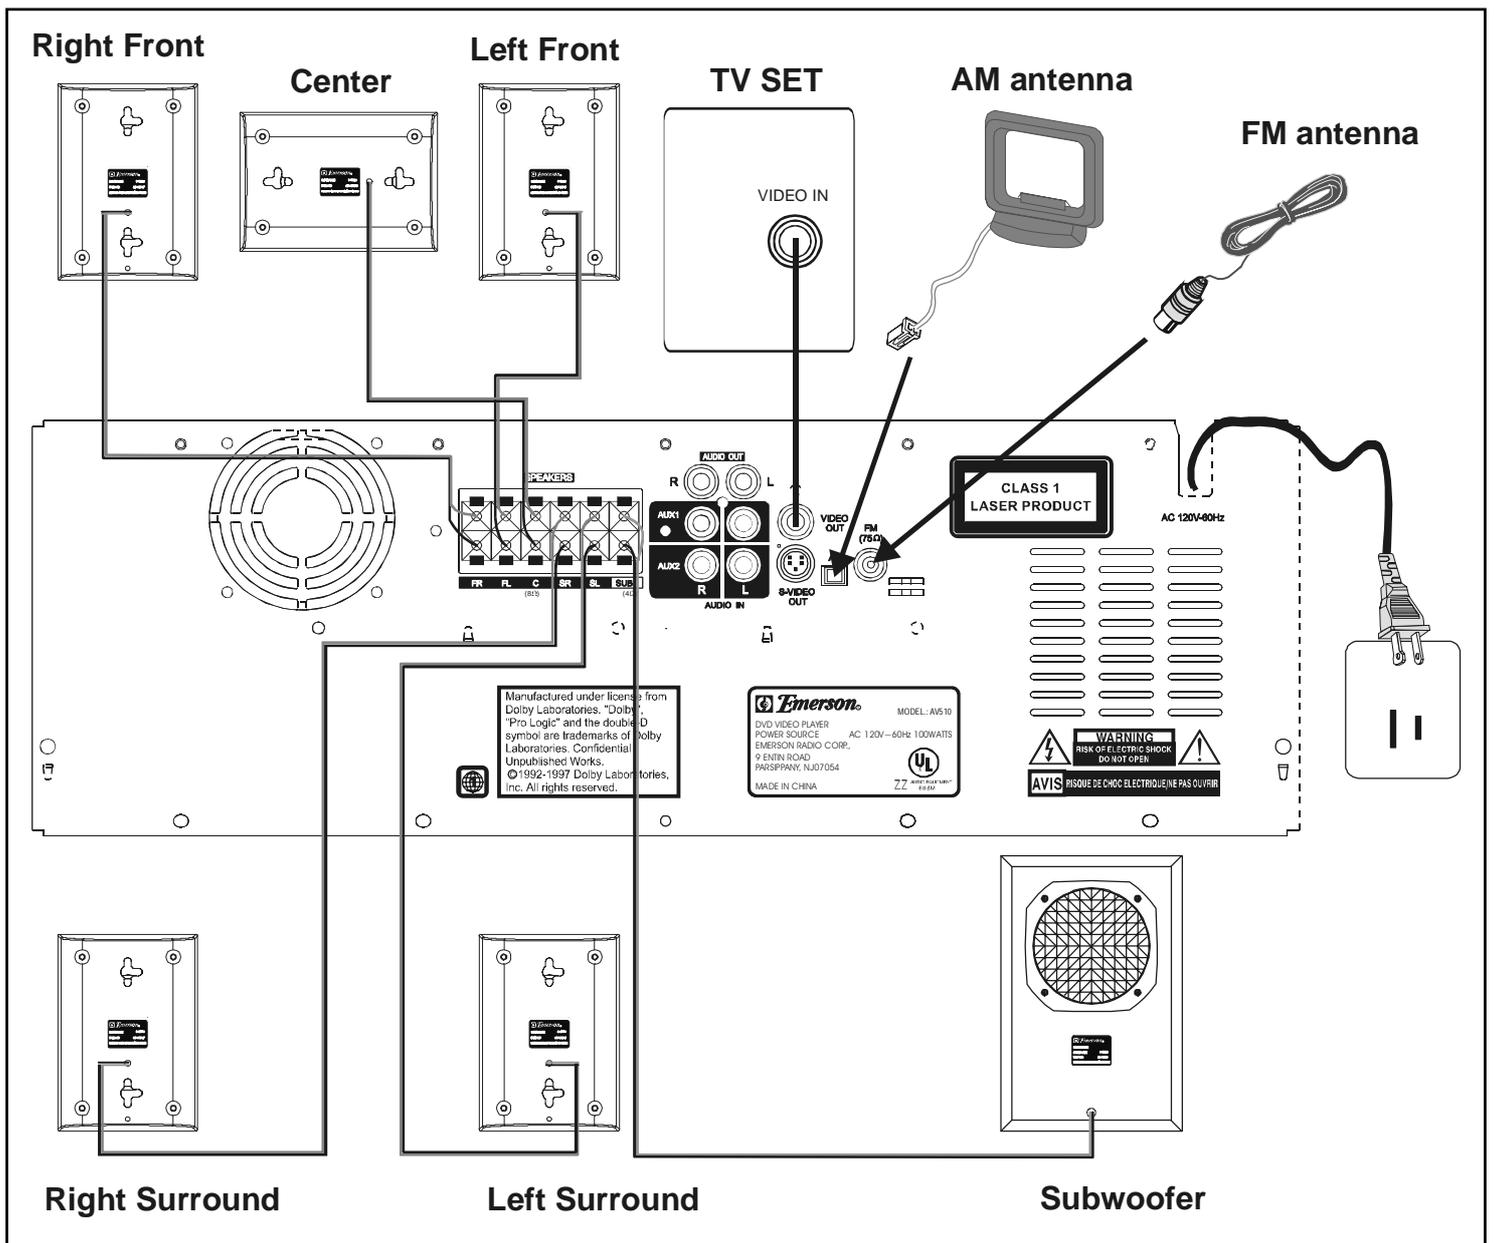

## POSITIONING THE SPEAKERS

Refer to the following speaker positioning diagram. All 5 satellites should be approximately the same distance from your listening position.

- Place center speaker either directly above or below your TV screen.
- Place front left and right speakers to the left and right of TV at approximately same height as center speaker.
- Place surround left and right speakers either in line with, or behind your listening position, at ear level, or slightly above, when seated.
- Place subwoofer on floor in front of room, either next to TV or in corner, facing your listening position.

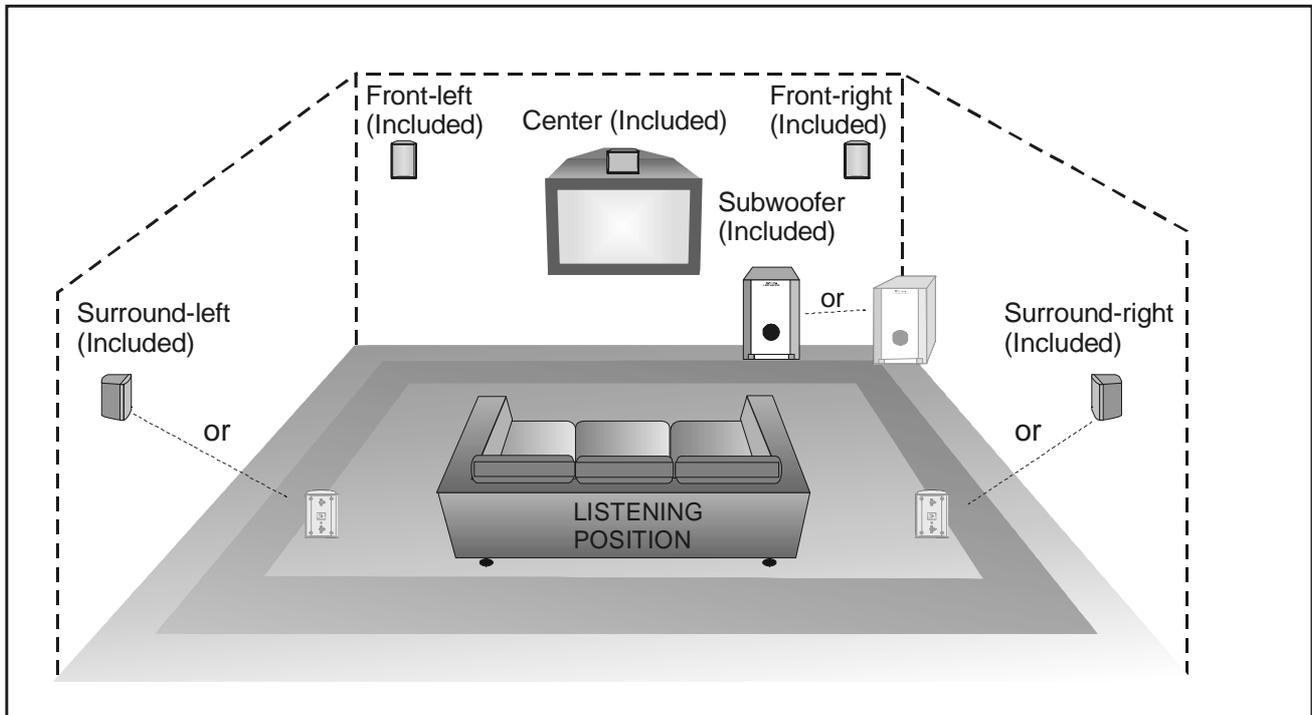

## DVD PLAYBACK

- 1.) Turn on your TV. If necessary press the Source or Video button on your TV's front panel or TV remote control to select the external source connected to your TV's Video In jack. (If necessary refer to your TV's instruction manual.)
- 2.) Press the **STANDBY** button on the AV510 remote control. The Emerson DVD logo screen should appear on your TV.
- 3.) Press the **OPEN/CLOSE** button on the AV510 remote control or front panel. Drawer opens.
- 4.) When the tray opens fully you will be able to load up to 2 DVD discs in the exposed pockets. Place up to 2 discs in the pockets with printed label sides facing up. If necessary, press the **DISC SKIP** button on the remote control to rotate the tray and load up to 3 additional discs if desired.  
**IMPORTANT:** Make sure that the CD MODE indicator does not appear in the display. If this indicator appears the system is in 'CD only playback mode', and it will not read DVD discs. In this case press **STOP** button, then the **CD MODE** button on the remote control to cancel CD Mode function. The CD MODE indicator will disappear.
- 5.) Press the **OPEN/CLOSE** button to close the drawer. The player will search for the first disc in the tray. It will read the first disc that it finds and, depending on the way the disc is formatted, will either begin playback immediately or display the disc menu screen. You may then press the **PLAY/PAUSE** or **ENTER** buttons to begin playback, or select other disc menu options. If you loaded multiple discs in the tray you may press the **DISC SKIP** button on the remote or one of the 5 Direct Disc Access buttons on the front panel to select a different disc for playback.
- 6.) If disc has Dolby Digital or Dolby Pro Logic soundtrack, you will hear sound from all 5 satellites plus subwoofer. If disc has stereo soundtrack you may only hear sound from front left and right speakers plus subwoofer.
- 7.) Press **VOL/ADJ** (Adjust Volume) "+" or "-" buttons to adjust volume level.
- 8.) When finished watching press **STOP** and/or **OPEN/CLOSE** buttons. Remove disc or discs, press **STANDBY** button to turn off AV510. The STANDBY indicator turns 'On'. Also turn off your TV.

## IMPORTANT INFORMATION ABOUT INDIVIDUAL DVD DISC MENUS

---

There is no universal standard for the audio default setting of individual DVD movie discs. Some DVD movie discs have both Dolby Digital and DTS audio soundtracks in addition to Dolby Pro Logic and normal stereo. Some discs will automatically begin playback after they are inserted in the player and the drawer is closed. On other discs a "DISC MENU" will appear and playback will not begin until you press the **PLAY/PAUSE** or **ENTER** buttons. The "Disc Menu" also allows you select the type of audio output and the languages for the soundtrack and subtitles. It may also allow you to jump to a specific scene or chapter, and play some special features if included on the disc.

The producer of the disc decides which default setting to use. For example the disc producer may decide to use "2 channel stereo" as the default audio setting on a particular movie disc. If you do not change the default setting on the Disc Menu the soundtrack will be heard in stereo, only from the front left and right speakers and the subwoofer.

The producer of the disc may decide to use a different language as the default setting for the audio soundtrack and the subtitles, especially if it is a foreign film. They may also decide to use subtitles "ON" as their default setting in the Disc Menu. If you prefer to hear the soundtrack in English and cancel the subtitles you must use the Navigation buttons (◀/▶/▲/▼) and **ENTER** button on the remote control to select the appropriate options in the Disc Menu.

**If you begin playing the disc and find that the settings are not what you expected ( for example, the subtitles are "On" or not all speakers are operating ), press the MENU button on the remote control to "return" to the Disc Menu. Then use the Navigation buttons ( ◀ / ▶ / ▲ / ▼ ) and the ENTER button to select the desired settings and resume playback.**

For additional information about individual Disc Menus please refer to Owner's Manual.

## CD PLAYBACK

---

**Note:** It is not necessary to turn on your TV to listen to audio CDs.

- 1.) Press **STANDBY** button on AV510 remote. The front panel display comes "On".
- 2.) Press **OPEN/CLOSE** button on AV510 front panel or remote control. Drawer opens.
- 3.) When the tray opens fully you will be able to load up to 2 CD discs in the exposed pockets. Place up to 2 discs in the pockets with printed label sides facing up. If necessary, press the **DISC SKIP** button on the remote control to rotate the tray and load up to 3 additional discs if desired.
- 4.) Press the **OPEN/CLOSE** button to close the drawer. The player will search for the first disc in the tray. It will read the first disc that it finds and the front panel display will show the total tracks and playing time of the disc in the play position.
- 5.) Press the **PLAY/PAUSE** button to begin playback. If you loaded multiple discs in the tray you may press the **DISC SKIP** button on the remote or one of the 5 Direct Disc Access buttons on the front panel to select a different disc for playback.
- 6.) Press **VOL/ADJ** (Adjust Volume) "+" or "-" buttons to adjust volume level.
- 7.) When finished listening press **STOP** and/or **OPEN/CLOSE** button. Remove disc or discs, press **STANDBY** button to turn off AV510.

## LISTENING TO RADIO

---

- 1.) Press **STANDBY** button on AV510 remote control to turn the system "On".
- 2.) Press **SOURCE** button on the remote control repeatedly to select TUNER function. Press **SOURCE** button again to switch between AM and FM bands.
- 3.) Press **TUNING** ◀◀ or ▶▶ buttons on the remote control until desired radio station frequency appears on the front panel display.
- 4.) Press **VOL/ADJ** (Adjust Volume) "+" or "-" buttons to adjust volume. (**Note:** If station is broadcasting in stereo the sound will only be heard from the front left and right speakers and the subwoofer.)
- 5.) When finished listening press the **STANDBY** button to turn the system "Off".