




DR-MV79B
DVD VIDEO RECORDER
Basic Operation


**QUICK
 START
 GUIDE**

Need Help? Please call the JVC Customer Service
TOLL FREE CUSTOMER CARE HOTLINE: 1(800)252-5722
<http://www.jvc.com>

Included Accessories

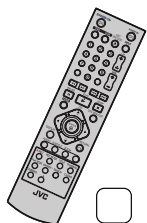

Remote control

 

"AAA" battery x 2
 (For remote control)




Video cable



Audio cable

Basic Connection : AV (RCA) Cable


INSTRUCTIONS
 →pg. 9

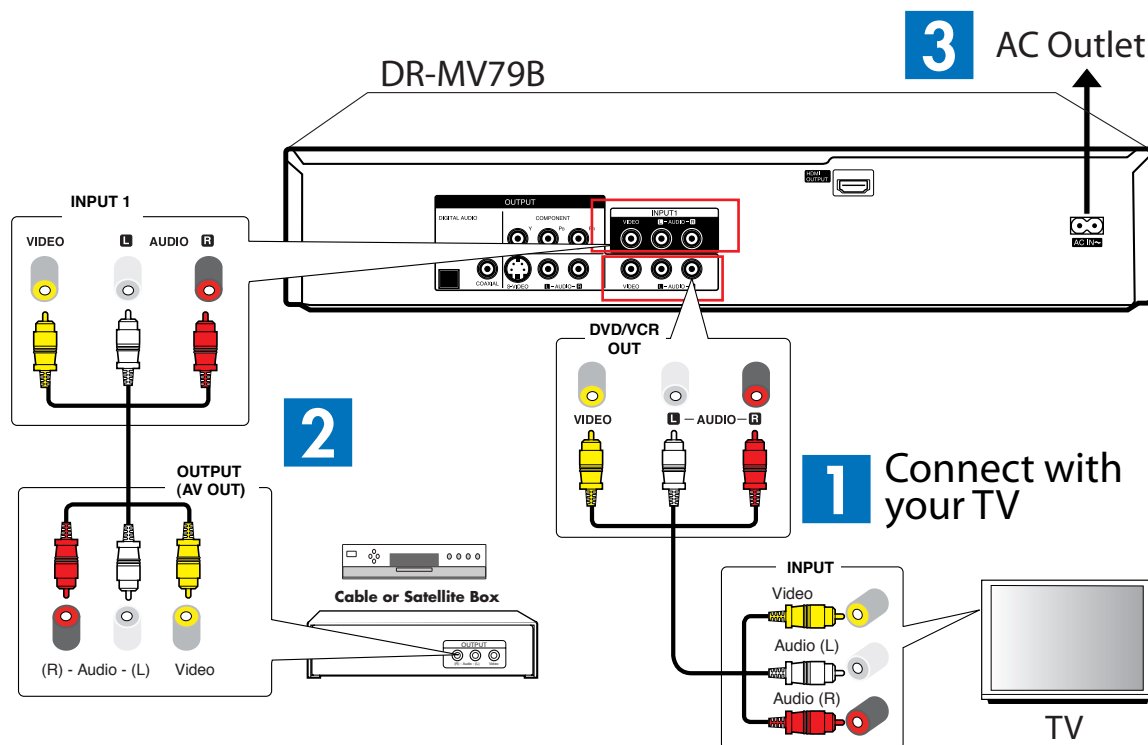

Initial Setup Wizard

INSTRUCTIONS

→ pg. 13

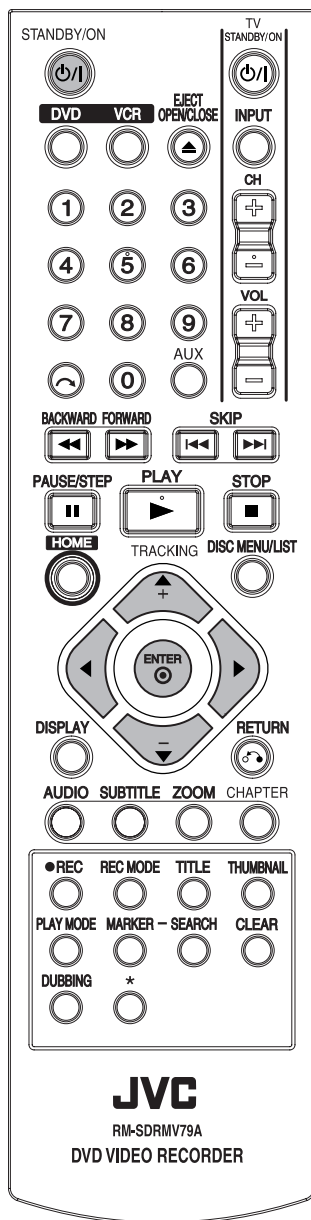

Press "STANDBY/ON"

 
1

STANDBY/ON



Select Language

2





Press "ENTER"

3




Set the "Date, Year and Time"

 4

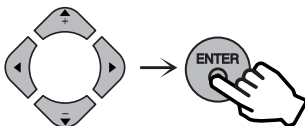

 Moves the cursor to the previous or next column.




Changes the setting at the current cursor position.

Press "ENTER"

Finish

5

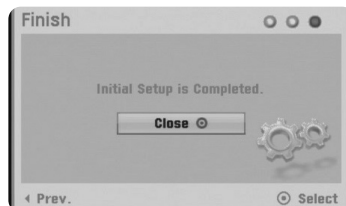

BASIC PLAYBACK

INSTRUCTIONS
→ pg. 19

DVD

Select "DVD"

1




Start Playback

2



Stop Playback

3

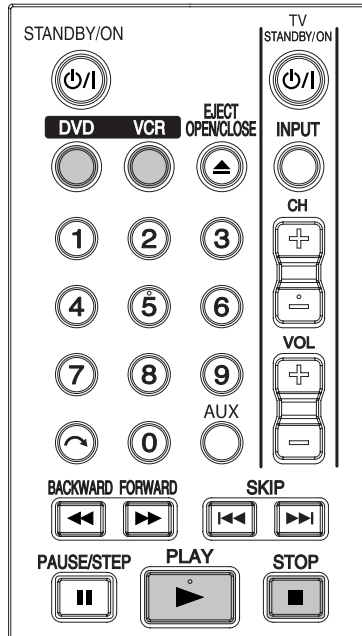

VHS

 
Select "VCR"

1



Start Playback

2



Stop Playback

3



 
Playable Discs: DVD-Video, DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-RAM, CD-R, CD-RW, Video CD, Audio CD

BASIC RECORDING (One-Touch Recording)

INSTRUCTIONS → pg. 29

Select "DVD or VCR"

1



Select Input
(AV1, AV2 or DV IN)

2




Select Mode

3



DVD: XP, SP, LP or EP
VCR: SP or SLP

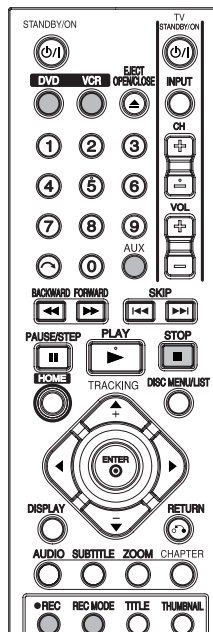


Start Recording

4



Stop Recording

 5



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 17)

Recordable Discs: DVD-R, DVD+R, DVD-RW, DVD+RW, DVD-RAM

TIMER RECORDING (Manual Timer Programming)

INSTRUCTIONS

→ pg. 31


Select "HOME"

1



Select "Timer Record"

2

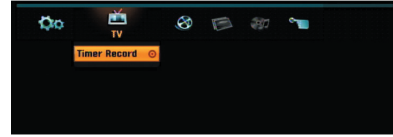


Press "ENTER"

3




Select "NEW" and Press "ENTER"

4

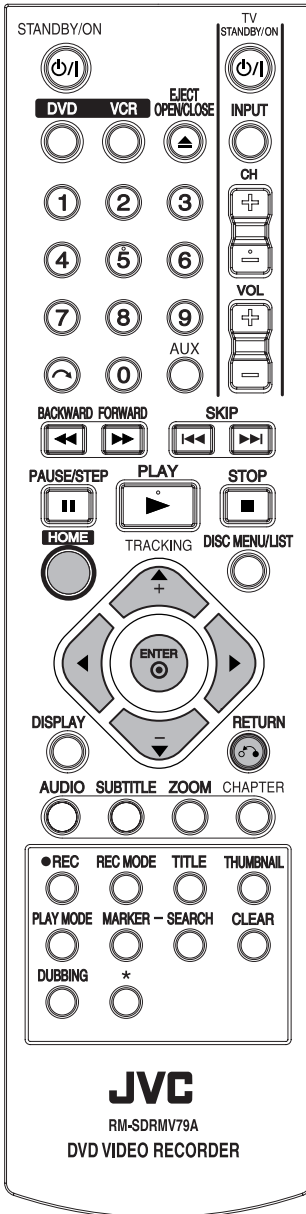

5

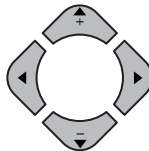

Enter the necessary information for your timer recording(s).



Moves the cursor left/right.




Changes the setting at the current cursor position.



Press "ENTER" to check on the Timer Record List

6

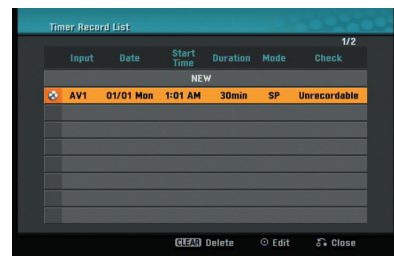

Press "RETURN" Finish

7



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 17)

Timer-Link Recording

INSTRUCTIONS



→ pg. 30

Timer Link

Note: Timer-Link works by using the timer function of most Cable/Satellite Boxes. Please check whether your current box has a "Timer" function.



Note: Timer-Link doesn't work, if Cable/Satellite Box keeps a "Screen Saver" in "Power Off".
Timer-Link works only with "Input 1" connector.

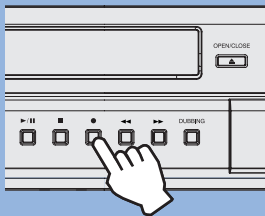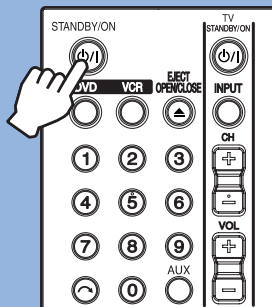



Note: If the Timer-Link "On", "●" indicator blinks on the JVC deck's display window.




1 Set Up Timer of Cable/Satellite Box

2 Power Off Cable/Satellite Box

Select "DVD or VCR"

3  or 

Select Mode


4 

5 Power Off DR-MV79B

6 Hold "● (REC)" Button for 3 seconds

1. When your Cable/Satellite Box is powered on by the timer function, DR-MV79B is also powered on and starts to record (It takes about 1 seconds) automatically.
2. When your Cable/Satellite Box is powered off using the timer function, DR-MV79B also stops recording (It takes about 3 seconds) and then powers off automatically.

Timer-Link mode: Deactivate

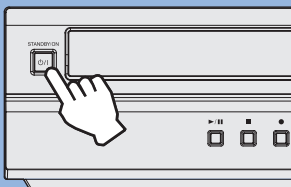

This operation makes "Timer-Link" been off after finishing Timer-Link record. If you keep "Timer-Link" on, you don't need this step.

7 Power On DR-MV79B

Dubbing from VCR to DVD

INSTRUCTIONS


→ pg. 32




You can copy the contents of a VHS tape to a DVD using the **DUBBING** button. This allows you to archive your old VHS tapes to DVD.

Preparation : Press VCR button to set the VCR mode.


- 1** Insert Blank Disc and Cassette

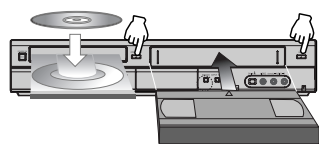


- 2** Find the place on the VHS tape from which you want to start dubbing.

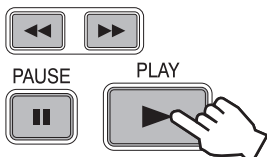

- 3** Access the Dubbing menu screen.

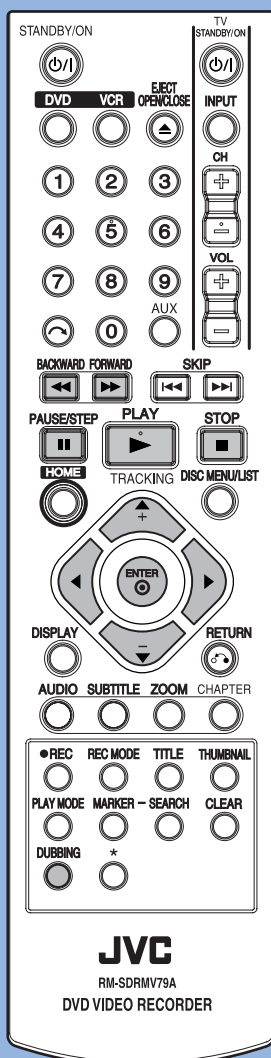


- 4** Select the desired Record Mode.

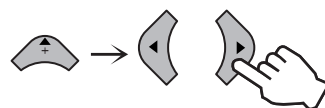 

Select XP, SP, LP or EP

- 5** Select [Dubbing].

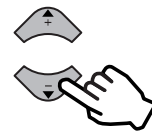

- 6** Start Dubbing.



- 7** Stop Dubbing.



Note:

To playback the recorded disc with other DVD players, it is necessary to finalize the disc. (INSTRUCTIONS → pg. 17)