



1.9 GHZ CDMA PCS | 800 MHZ CDMA/AMPS (TRI-MODE)

VX4700



Unite in Style.

VX4700



PTT Key

Volume Up/Down

Speaker Phone

Speaker Phone Key

External Caller-ID Display

Driving Mode/Voice Command/Voice Memo Key

Charging Port
(Charging time: up to 3.5 hours)

Navigation Key
Scrolls through menus and displays the next or previous message, entry or item

Ear Piece

Confirmation Key

Left Soft Key

Right Soft Key

Schedule

Speaker Phone Key

Mobile Web

Get It Now®

Send Key

Messages

Clear Key

END/PWR Key
Powers the phone on or off, ends a call or returns you to the main menu

Voice Mail

Manner Mode

Lock Mode

Microphone

PUSH TO TALK FEATURES

USING PUSH TO TALK

Making a PTT (Alert) Call

1. From the main screen, press the **PTT Key**.
2. Use the Navigation Key to highlight a name from the contacts list and push **Left Soft Key** for **Alert**.
3. Press and release the **PTT Key** to alert. The receiver will hear the incoming alert tone and the sender will hear the outgoing alert tone.
4. If the other party answers, the listening screen is shown and the other party gains floor control. The receiver hears the voice of the other party.

Making a PTT (Barge) Call

The call is connected without the incoming call screen. The voice of the caller is immediately heard.

1. From the main screen, press the **PTT Key**.
2. Use the Navigation Key to highlight a name from the contacts list.
3. Press and hold the **PTT Key**. The receiver will hear the incoming barge tone and the sender will hear the PTT talk tone and can begin speaking.
4. Release the **PTT Key**. The receiver will hear the callers voice followed by the floor available tone.

Making a PTT (Group) Call

 
 
 
Using this function, you can make a multiparty call with all the members of a PTT Group.

1. From the main screen, press the **PTT Key**.
2. Use the Navigation Key to highlight a group from the contacts list.
3. Press and hold the **PTT Key**. Speak after the ok to talk tone and the talking screen is shown.
4. Release the **PTT Key**.

Receiving a PTT (Alert) Call

When you receive a PTT alert call, the incoming alert tone and call screen appears.

1. Press **Left Soft Key** for **Answer** or **Right Soft Key** for **Ignore**.
2. If you do not answer within 20 seconds, the PTT call is automatically disconnected.

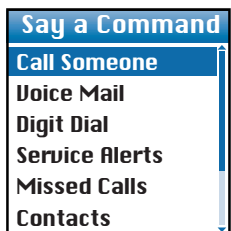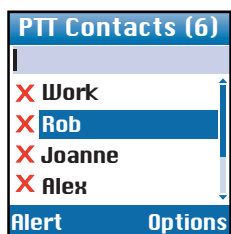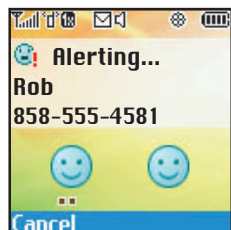

VOICE COMMAND FEATURES

Activating Speaker Phone

1. From the main screen, press the **Speaker Phone Key** and “**Speaker On**” will appear on the screen.
2. To deactivate, press the key again and “**Speaker Off**” will appear on the screen.

Using Voice Commands

1. From the main screen, press the **Voice Command Key** on the side of the phone.
2. You will be asked to “Please Say a Command.” Clearly speak a command from the list: **Call Someone**, **Voice Mail**, **Digit Dial**, **Service Alerts**, **Missed Calls**, **Contacts**, **Driving**, **Announce**, **Time and Date** or **Phone Status**.
 - Call Someone:** to call a contact from your phone book.
 - Voice Mail:** to call your voice mail.
 - Digit Dial:** to dial a phone number by speaking the digits.
 - Service Alerts:** to check missed calls, voice mails or new messages.
 - Missed Calls:** to check your missed calls.
 - Contacts:** to read, create or erase a contact.
 - Driving:** to activate Driving Mode.
 - Announce:** to turn on audio confirmation of menu navigation.
 - Time and Date:** to hear the current time and date.
 - Phone Status:** to hear status on battery usage, signal strength, service mode, GPS location and roaming.

 
CONNECTIVITY FEATURES

DOWNLOADING GET IT NOW® CONTENT

The new VX4700 by LG can store downloaded content from Get It Now®, a technology and service that allows you to download and use applications, games, ringtones and more on your phone.

Downloading New Content From Get It Now®

1. From main screen, press the **Get It Now®** icon (right) on the Navigation Key.
2. Press **OK** and select the shopping cart icon.
3. Select a category from the **Get It Now®** catalog and press **OK**.

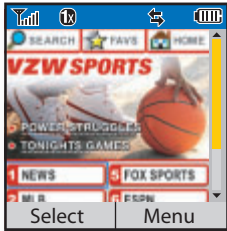

ACCESSING THE WEB

1. From the main screen, press the **Web** icon (left) on the Navigation Key.
2. Once the web browser is launched, you will see the Home Page.
3. You can end a browser session by pressing **END** at any time.

MESSAGING

 
Allows you to send a text message with or without graphics and sounds to an e-mail address or phone number.

Sending a SMS or EMS Message

1. From the **Messages (3)** menu, select **New Message (2)**.
2. Press **Left Soft Key** for **Contacts** to enter a recipient from the **Contacts (1)**, **Recent Calls (2)** or **Recent Addresses (3)** menu, or use the key pad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
3. Select **Message** and press **OK**.
4. Enter the message (up to 160 characters) using the keypad and press **OK**.
5. To add an attachment press **Right Soft Key** for **Options** and select from **Insert Quick-Text (1)**, **Insert Object (2)**, **Format Text (3)**, **Save Quick-Text (4)** or **Insert Signature (5)** and press **OK**.
6. Press **Left Soft Key** for **Send**.

Shortcut: From the main screen, press the **Messages** icon (down) on the Navigation Key to quickly access the Messages menu.

Note: The ability to send text messages or EMS text messages are subject to network service availability.

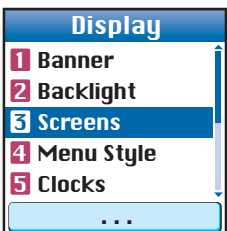

CUSTOMIZABLE FEATURES

Changing the Wallpaper Image

1. From the **Settings (9)** menu, select **Display (2)**.
2. Select **Screens (3)**.
3. Select **Wallpaper (1)**.
4. Press left or right on the Navigation Key to select the desired image from **Default**, **Downloaded** or **EMS** and press **OK**.

Changing the Call Ringer

1. From the **Settings (9)** menu, select **Sounds (1)**.
2. Select **Ringers (1)**.
3. Select either **Caller ID (1)**, **No Caller ID (2)**, or **Restricted Calls (3)**.
4. Choose from the list of available default ringers and press **OK**.

OTHER NOTABLE SETTINGS



Manner Mode

Use Manner Mode in a public place to disable the ringer and activate Vibrate Mode.

1. From the main screen, activate Manner Mode by pressing the ***Manner Mode Key** (for 3 seconds) - the phone will vibrate when activated.
2. When set, “-Manner Mode- activated” will appear on the screen.
3. To release Manner Mode, press the key until “-Normal Mode- activated” is displayed.

PERSONAL INFORMATION TOOLS

THE SCHEDULER

The Tools menu allows you to view the calendar, schedule an event, program your handset's alarm clock and view and compose memos on the notepad.



Scheduling an Event

 
1. From the **Tools (8)** menu, select **Schedule (1)**.
2. Highlight the event date using your Navigation Key and press **Left Soft Key for Add**.
3. You may set the appropriate start and end times, content, voice memo, recurrence (if any) or alarm & ringer by scrolling to the corresponding field, and entering the desired information and pressing **OK**.
4. Press **Left Soft Key for Save**.

Making a Call From Recent Calls

1. Press the **SEND Key** to view your most recent 30 dialed, received and missed calls.
2. Place a call by selecting the desired entry and press **SEND** to connect.

CONTACTS

The internal phone book is capable of storing up to 499 contacts with up to 5 numbers and 3 e-mail addresses per entry.

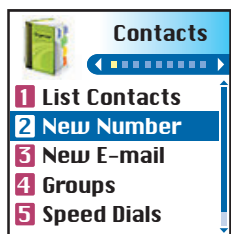


Adding a New Contact Entry

1. From the **Contacts (1)** menu, select **New Number (2)**.
2. Enter the telephone number and press **OK**.
3. Select a label (**Home, Home2, Office, Office2, Mobile, Mobile2, Pager, Fax, Fax2** or **None**) and press **OK**.
4. Enter a name for the entry and press **OK**.
5. To set a speed dial, highlight **Speed Dial** and press **OK**, or press **Left Soft Key for Done**.
6. Add more phone numbers, e-mail addresses or press **Left Soft Key for Done**.

One-Touch Speed Dialing

 Enables you to dial 98 of your most frequently used numbers. These numbers are stored in your phone book in memory locations 2 through 99. For locations 2 through 9, you can use one-touch dialing and for locations 10 through 99, you can use two-touch dialing. Press and hold the corresponding key(s) to the memory location to be dialed or press a digit, then press **SEND**.

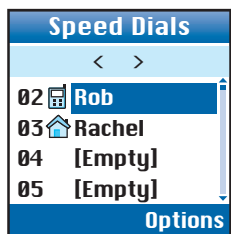

1. From the **Contacts (1)** menu, select **Speed Dials (5)**.
2. Select or enter a slot number and press **OK**.
3. Select a name from the list using the Navigation Key and press **OK**.
4. Select the desired number and press **OK**.



Contacts (1)

1. List Contacts
2. New Number
3. New E-mail
4. Groups
5. Speed Dials
6. My VCard



Recent Calls (2)

1. Dialed Calls
2. Received Calls
3. Missed Calls
4. Erase Calls
 1. Dialed Calls
 2. Received Calls
 3. Missed Calls
 4. All Calls
5. Call Timer
 1. Last Call
 2. Home Calls
 3. Roam Calls
 4. All Calls
6. KB Counter
 1. Received
 2. Transmitted
 3. Total



Messages (3)

1. Voice Mail
2. New Message
3. Inbox
4. Outbox
5. Saved
6. Msg Settings
 1. Auto Save
 2. Auto Erase
 3. Callback #
 4. Signature
 5. Voice Mail #

6. Auto View
7. Entry Mode
8. Quick-Text
9. Auto Play

7. Erase All

1. Inbox
2. Outbox
3. Saved
4. All



Push to Talk (4)

1. PTT Contacts
2. New PTT Contact
3. New PTT Group
4. Recent PTT
5. PTT Settings
 1. PTT On/Off
 2. Speaker On/Off



Get It Now® (5)

1. Get It Now
2. Get Information



Mobile Web (6)

1. Start Browser
2. Web Messages
3. Web Alerts



Media (7)

1. Images
2. Sounds
3. Msg Objects
 1. Small Pictures
 2. Large Pictures
 3. My Pictures
 4. Sounds
 5. My Melodies
 6. Animations
 7. My Animations



Tools (8)

1. Schedule
2. Alarm Clock
 1. Alarm 1
 2. Alarm 2
 3. Alarm 3
 4. Quick Alarm
3. Voice Memo
4. My Shortcut
5. Notepad
6. Ez Tip Calc
7. Calculator
8. World Clock



Settings (9)

1. Sounds
 1. Ringers
 2. DTMF Tone
 3. Volume
 4. Message Alerts
 5. Service Alerts
 6. Power On/Off Tone
 7. DTMF Length
2. Display
 1. Banner
 2. Backlight
 3. Screens
 4. Menu Style
 5. Clocks
 6. Theme Colors
 7. Contrast
 8. Fonts
 9. Language
 0. Power Saver
 - *. Status Light
3. System
 1. Select System
 2. Set NAM
 3. Auto NAM
 4. Serving System
4. Security
 1. Lock Phone
 2. Restrict Calls
 3. Emergency #s
 4. Change Lock
 5. Erase Contacts
 6. Reset Default
5. Call Setup
 1. Auto Retry
 2. Answer Call
 3. Auto Answer
 4. One-Touch Dial
 5. Voice Privacy
 6. Auto Volume
 7. TTY Mode
6. Data Settings
 1. Data/Fax
 2. PC Connection
7. Voice Services
 1. Voice Commands
 2. Sound Modes
 3. Announce Alerts
 4. Best Match
 5. Train Words
 6. Help
8. Location
9. Phone Info
 1. My Phone Number
 2. S/W Version
 3. Icon Glossary
 4. Shortcut Help

